

Onyx Serial Dongle Guide

Before using the Dongle

- Ensure the Xeos Bluetooth app is installed on your mobile device. The latest version of the app can be downloaded from the QR Link
(<https://manuals.xeostech.com/bluetoothapp/>)
 - The file is downloaded as an .apk to install manually on an Android device
 - Allow “**Unknown Sources**” under Settings > Security to install raw .apk files.




Setup

- Connect the target Onyx to the Bluetooth Dongle.
- With the batteries installed in the pack, connect the battery pack to the Bluetooth Dongle.
- Press the **BLUETOOTH CONNECT** button on the side of the Bluetooth Dongle.



Bluetooth Connection

- Open the Xeos App. The Bluetooth Dongle will advertise its name for connection.
 - If there are multiple dongles powered, match the MAC address displayed to the label on the dongle to ensure connection to the intended device.

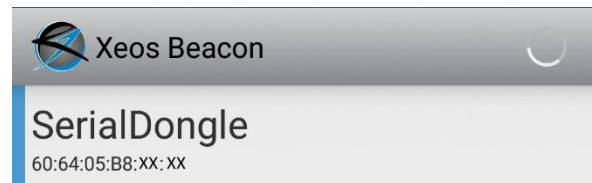

Disconnecting

- Returning to the main menu on the app will disconnect the mobile device from the dongle.
- Press the **BLUETOOTH CONNECT** button at any point where the Onyx has been reset or replaced with another Onyx (Firmware upgrade completion, resetting via command or physical disconnection).

