

Rover Quickstart Guide



Read this entire document before taking any action

Before using the Rover

- Ensure the IMEI of your device is activated through your chosen Iridium provider and intended message recipients are added to its account ahead of deployment.

Power-Up

Battery Installation

The Rover automatically turns on once all batteries are installed. The device must be turned off via magnet or battery removal.

Magnet

- Swipe the magnet **slowly** along the “**SWIPE ON/OFF HERE**” label horizontally until the flashing **GREEN LED** on the top of the device remains solid. The green LED will flash again while the device completes power-up.

Confirm Transmission

- Turn the device on and place it outside in view of as much of the sky as possible.
- The unit will transmit a power-up message, and transmit one GPS fix every 10 minutes at default settings within 5 minutes of power-up for one hour.
- Confirm that these messages are being received by your email and/or XeosOnline.

Operation

- When deploying the unit, power it up by swiping the magnet.
- Once the unit is confirmed to be on, it is ready to be deployed.
- Turn the Rover **OFF** using the same magnet method as turning **ON**, with the **RED LED** in place of the green.

