 
 
 


DIP Switch

Pulse Duration


	1 Second
	2 Seconds
	3 Seconds
	4 Seconds

Settings

Reed Switch On		Reed Switch Off
Accelerometer On		Accelerometer Off
Fresh Water		Salt Water
Water Sensor On		Water Sensor Off

 
 
 
Rotary Switch

Delay multiplier between transmissions

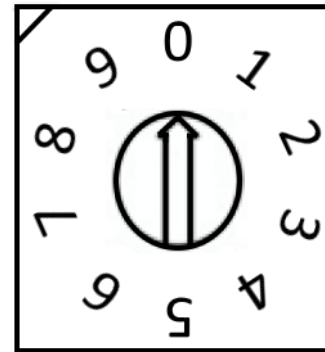

Position	Delay (s)
1	1
2	2
3	3
4	4
5	5
6	6
7	10
8	15
9	20
0	30

Channel Frequency

	154.585 MHz
	159.480 MHz
	160.725 MHz
	160.785 MHz