




TO SPHERE

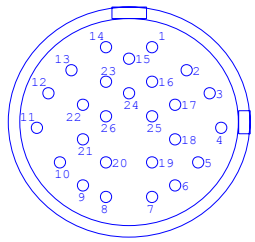


MHD-26-BCR
MALE PINS
FACE VIEW
of
bulkhead
connector

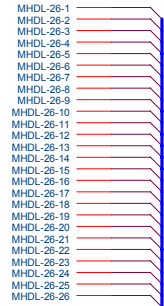


TO SPHERE

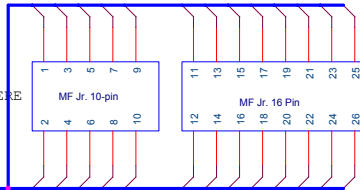


TO SPHERE

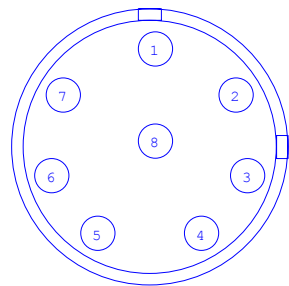

MHD-8-BCR
MALE PINS
FACE VIEW of bulkhead
connector

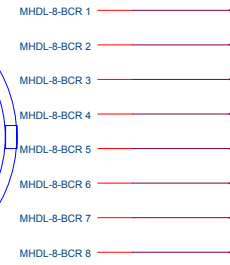

BATT +

 


BATT -




SHORE POWER
TETHER

DORN FITTING Size "2"
Insert Size "A"



To Tether
To Tether
To Tether

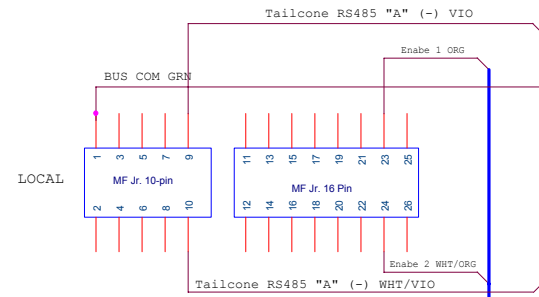

ON/OFF
PASSTHRU

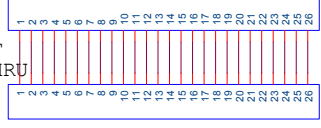


TO FORM
JBOX

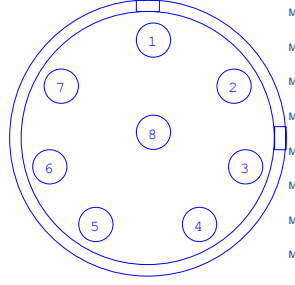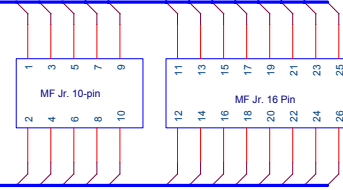


MHD-8-BCR
MALE PINS
FACE VIEW of bulkhead
connector

TO JBOX

 
+15 V




GND

 


+12 V

 


GND

 

+5 V

 

GND

 


ENABLE LINE
TETHER



DORN FITTING Size "2"
Insert Size "A"

To Enable
To Enable

TO JBOX

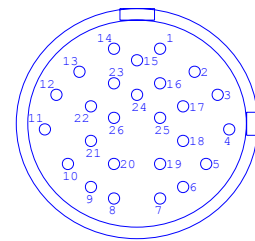

MHD-26-BCR
MALE PINS
FACE VIEW
of
bulkhead
connector

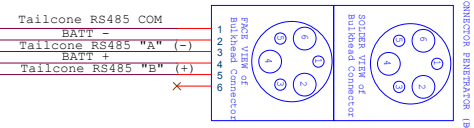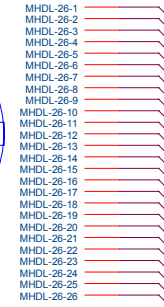

AFT JUNCTION BOX