 






MBARI-ISUS Operation Manual

Document Number: SAT-DN-0272
Revision B, March 2005







Operation Manual for MBARI-ISUS v.2 Document Number SAT-DN-0272

Prepared by: Satlantic Incorporated
Richmond Terminal, Pier 9
3481 North Marginal Road
Halifax, Nova Scotia
Canada
B3K 5X8
Tel (902) 492-4780
Fax (902) 492-4781

Copyright © 2005 by Satlantic

This document contains information proprietary to Satlantic or to a third party to which Satlantic may have legal obligation to protect such information from unauthorized disclosure, use or duplication. Any disclosure, use or duplication of this document, in whole or in part, or of any of the information contained herein for any purpose other than the specific purpose for which it was disclosed is expressly prohibited, except as Satlantic may otherwise agree to in writing.

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	TABLE OF CONTENTS

A. OVERVIEW	A-1
PURPOSE	A-1
BACKGROUND	A-2
FEATURES	A-2
SPECIFICATIONS	A-3
Performance	A-3
Optics	A-3
Electrical Characteristics	A-3
Physical Characteristics	A-3
PRINCIPLE OF OPERATION	A-4
CALIBRATION	A-5
OPERATIONAL SUMMARY	A-5
MAJOR COMPONENTS	A-6
Instrument Body	A-6
Connector End Cap	A-8
Connectors	A-8
Non-isolated Input Power Port	A-8
Auxiliary Non-Isolated Power, USB and Non-Isolated Telemetry	A-9
Isolated Power and Telemetry Port	A-9
Isolated Analog Output	A-10
Sacrificial Anode	A-10
Power Supply	A-11
Probe End Cap	A-11
Probe	A-12
Standard Probe Guard	A-12
Biofouling Guard	A-13
How the Biofouling Guard Works	A-13
B. SAFETY & HAZARDS	B-1
PERSONAL SAFETY	B-1
INSTRUMENTS	B-1
CABLE	B-1
CONNECTIONS	B-2
TROUBLESHOOTING	B-2
RECOVERY	B-2
C. START UP	C-1
PREPARATION	C-1
CONNECT THE CABLES	C-2
TELEMETRY ACQUISITION USING SATVIEW	C-3
TELEMETRY ACQUISITION WITH A SEABIRD CTD	C-4
DEPLOYMENT EXAMPLE	C-5
D. OPERATION	D-1
OPERATING MODES	D-1
Continuous	D-1
Fixed Time	D-1
Scheduled	D-1
Benchtop	D-3
FRAME OUTPUT MODES	D-3
COMMUNICATING WITH THE ISUS	D-6
How to reach the root menu	D-6
MENUS	D-6
Configuration Menu	D-6
Baudrate	D-7
Deployment Counter	D-7

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	TABLE OF CONTENTS

Setup Menu	D-7
Output Setup Menu	D-8
Status Messages	D-8
Frame Output Mode	D-8
Output of Dark and Light Frames	D-8
Logging of Frames to File	D-8
Log File in Scheduled Mode	D-8
Nitrate and Auxiliary DAC Range	D-8
Deployment Setup Menu	D-9
ISUS Deployment Mode	D-9
Initial Delay in CONTINUOUS Mode	D-9
Fixed Operational Time	D-9
Spectrometer Setup Menu	D-9
Integration Period	D-9
Collection Rate	D-9
Spectrometer Coefficients	D-9
Seawater Dark Samples	D-9
Lamp Setup Menu	D-10
Power-On Warm-up Period	D-10
Reference Diode	D-10
File Menu	D-10
List commands	D-11
Output commands	D-11
Upload commands	D-11
Download commands	D-12
Erase commands	D-12
Info Menu	D-12
Build Info	D-12
Disk Info	D-13
Clock Info	D-13
Pixel to Wavelength	D-13
Fitting parameters	D-13
Lamp On Time (Odometer)	D-13
DAC menu	D-13
USB / SCI Toggle Menu	D-13
USING THE MENUS	D-14
Checking instrument values	D-14
Setting up for Scheduled Deployment	D-14
Setting up for Continuous Deployment	D-14
A NOTE ABOUT POWER REMOVAL	D-15
E. RECOVERY	E-1
F. MAINTENANCE	F-1
PREVENTATIVE MAINTENANCE	F-1
Cleaning the Probe	F-1
Assembling the Biofouling Guard	F-2
Procedure	F-4
TROUBLESHOOTING USING A TERMINAL EMULATOR	F-8
TROUBLESHOOTING FOR HARDWARE PROBLEMS	F-9
Check Connections	F-9
Check the Supply Voltage	F-9
Check Cable Continuity	F-10
G. WARRANTY	G-1
WARRANTY PERIOD	G-1
RESTRICTIONS	G-1
PROVISIONS	G-1

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	TABLE OF CONTENTS

RETURNS	G-1
LIABILITY	G-1
H. CONTACT INFORMATION	H-1
LOCATION	H-1
BUSINESS HOURS	H-1
I. APPENDIX: A SCHEDULE FILE EXAMPLE.....	I-1
J. APPENDIX: INTERFACING THE ISUS TO A SEABIRD CTD PROFILER	J-1
K. APPENDIX: INSTALLING USB VIRTUAL COM PORT DRIVERS.....	K-1
L. APPENDIX: USING WINDOWS® HYPERTERMINAL.....	L-1

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	TABLE OF FIGURES

Figure A-1: The MBARI-ISUS with Rechargeable Battery Pack	A-1
Figure A-2: Primary UV Absorbing Species in Seawater	A-4
Figure A-3: Seawater Sample Illumination	A-5
Figure A-4: The MBARI-ISUS Anodized Aluminum Body.....	A-7
Figure A-5: Connector End Cap View.....	A-8
Figure A-6: MCBH2M Bulkhead.....	A-8
Figure A-7: MCBH8M Bulkhead.....	A-9
Figure A-8: MCBH6M Bulkhead.....	A-9
Figure A-9: MCBH4F Bulkhead	A-10
Figure A-10: Probe Endcap	A-11
Figure A-11: Probe Guards.....	A-12
Figure A-12: Reflection Probe.....	A-12
Figure A-13: Standard Probe Guard Attached.....	A-13
Figure A-14: Biofouling Guard Attached	A-13
Figure C-1: SatView real-time display.	C-3
Figure C-2: SeaBird SeaSave screen capture.....	C-4
Figure C-3: CTD, ISUS, and Battery Pack.....	C-5
Figure F-1: Biofouling Guard Components	F-2
Figure F-2: Biofouling Guard Exploded Assembly.....	F-3
Figure F-3: Overlap the cloth over a groove	F-4
Figure F-4: Insert a plastic shim	F-4
Figure F-5: Start positioning the copper screen.....	F-5
Figure F-6: Slide the copper screen in place	F-5
Figure F-7: Attach the end cap	F-6
Figure F-8: Check for scribe marks	F-6
Figure F-9: Mounting the guard	F-7
Figure F-10: The ISUS with Biofouling Guard	F-7
Figure L-1 - Add/Remove Programs.....	L-2
Figure L-2 - HyperTerminal Connection Description	L-3
Figure L-3 - HyperTerminal Connect To dialog box.....	L-3
Figure L-4 – Serial Port Properties dialog box.....	L-4
Figure L-5 – Connection Properties dialog box	L-5
Figure L-6 – ASCII Setup dialog box	L-6

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	A. OVERVIEW

A. OVERVIEW

Purpose

The MBARI In Situ Ultraviolet Spectrophotometer (MBARI-ISUS, commonly referred to as ISUS) uses ultraviolet absorption spectroscopy to measure in situ dissolved chemical species. This sensor is a chemical-free, solid-state instrument that offers easy, accurate, real-time, and continuous nitrate concentration measurements. The MBARI-ISUS provides researchers with data essential to the study of physical, chemical, and biological processes in the ocean.

This manual describes the second-generation hardware of the MBARI-ISUS instrument, also referred to as MBARI-ISUS v2. It uses an enhanced processor, has a new user interface and allows for more flexible scheduling. The power consumption of the instrument has been significantly reduced. The data rate of the instrument has been increased. The bulkhead connectors have been changed as well.



Figure A-1: The MBARI-ISUS with Rechargeable Battery Pack

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	A. OVERVIEW

Background

The MBARI-ISUS was developed by Dr. Kenneth Johnson and Luke Coletti, of the Monterey Bay Aquarium Research Institute (MBARI). For a detailed description of the MBARI prototype system see their paper (Johnson, K., L. Coletti (2002), In situ ultraviolet spectrometry for high resolution and long-term monitoring of nitrate, bromide and bisulfide in the ocean, *Deep-Sea Research I*, **49**, 1291-1305). Satlantic and MBARI collaborated to make the instrument commercially available to researchers around the globe. Satlantic has made significant advances in both system hardware and computational software to provide customers with the state-of-the-art in situ spectroscopic analysis.

Using advanced UV absorption techniques, the MBARI-ISUS calculates NO_3^- from the seawater absorption spectrum, without the need for chemical manipulation.

The MBARI-ISUS has the stability, sensitivity, and endurance to operate for extended periods of time with low maintenance. It has been successfully deployed in a variety of marine environments and operational modes, including:

- **Profiling systems** – High-resolution nitrate profiles allow insight into nutrient structures.
- **Fixed platform/moorings** – the flexible sampling schedule and internal data storage capacity allow easy integration into a monitoring program.
- **Towed vehicles** – the data is collected by the vehicle's data acquisition system or logged internally

Features

The features of MBARI-ISUS include:

- Real-time Nitrate measurements
- Analog output port for easy integration with CTD and other sensors
- Low power, compact size
- Fast sample frequency
- High data precision and accuracy
- Deep operation
- Spectral analysis software

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	A. OVERVIEW

Specifications¹

Performance

Precision:	$\pm 0.05 \mu\text{M}$
Accuracy:	$\pm 2 \mu\text{M}$
Detection range:	0.5 to 200 μM

Optics

Path length:	1 cm
Wavelength range:	200–400 nm
Lamp type:	Deuterium
Lamp lifetime:	1000 hours to 50% intensity at 240 nm

Electrical Characteristics

Input Voltage:	6–18 VDC (Non-isolated power input port) 18–72 VDC (Isolated power input port) 6–18 VDC (Auxiliary non-isolated power input port)
Current requirement:	0.55 Amp @ 12 VDC (nominal)
Power consumption:	6.5 Watts (nominal)
Data storage:	256 MB (can be customized)
Sample rate:	1 Hz (typical)
Telemetry options:	Analog output 0–4.096 VDC RS-232/RS-422 serial output User selectable baud rates (default 38400 bps) USB data download option

Physical Characteristics

Anodized Aluminum pressure case

Depth rating:	1000 meters
Length:	19.10 inches (485.1 mm) – housing only 22.85 inches (580.4 mm) – including anode and standard probe guard 23.95 inches (608.3 mm) – including anode and biofouling guard
Diameter:	4.5 inches (114.3 mm)
Weight:	With standard probe guard: 11.3 lbs in air (5.15 kg), 0.1 lbs in water (0.05 kg) With biofouling guard: 11.6 lbs in air (5.25 kg), 0.2 lbs in water (0.1 Kg)
Operating temperature range:	0° to 35° C

¹ Specifications may change without notice.

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	A. OVERVIEW

Principle of Operation

The MBARI-ISUS uses the UV (200-400nm) absorption characteristics of various chemical species to provide in situ measurements of their concentrations in solution. The system consists of four key components: a stable UV light source, a UV spectrometer, a fiber optic sampling probe and a processing computer. All components are housed within a single pressure case. A plastic guard covers and protects the sampling probe in profiling applications. An optional antifouling probe guard covers the sampling probe and provides interference from fouling organisms in moored applications. The precision calibration of the MBARI-ISUS uses standard sample solutions over a range of salinity conditions. The system is solid state and requires no user adjustments or chemicals to operate. Once powered up, the system begins to compute nitrate concentrations of solutions in the sample probe automatically.

Many dissolved inorganic compounds, including nitrate, nitrite, bisulfide, and bromide, absorb light at UV wavelengths.

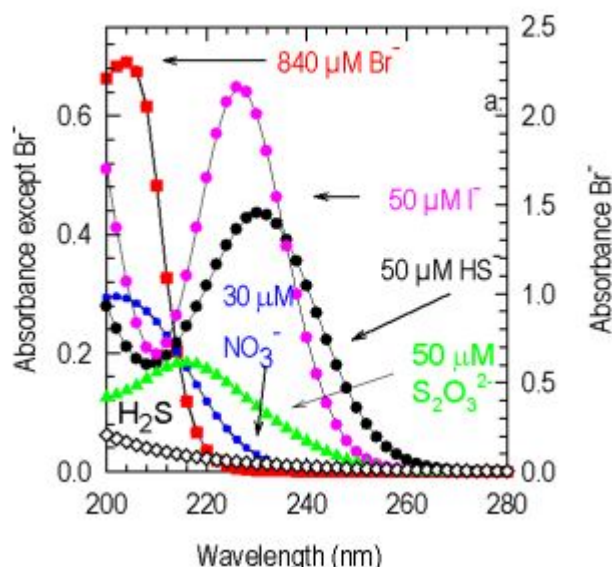


Figure A-2: Primary UV Absorbing Species in Seawater

Nitrate is one of the main nutrients required for growth of phytoplankton. Understanding the distribution of nitrate in the oceans is essential to understanding biological processes.

The MBARI-ISUS is designed to be a self-contained nitrate monitoring system that does not require 'wet chemistry' (i.e. reagents) to determine nitrate concentration. Eliminating wet chemistry results in a less complex, more reliable, and easier to use system.

The standard method for measuring nitrate in the past was to collect samples at sea, freeze them and bring them back to a lab, using a system called an autoanalyser. The autoanalyser mixes chemicals with the sample to generate a coloured solution that can be quantitatively measured. Systems that use this

 Operation Manual	SYSTEM
	SECTION

MBARI-ISUS

A. OVERVIEW

technique in situ are complex because they require mixing limited shelf life reagents and loading these into the instruments.

The MBARI-ISUS is based on absorption characteristics of inorganic compounds in the UV portion of the spectrum from 200-400nm. By illuminating a sample of seawater with UV light onto an UV spectrometer, the absorption spectra can be measured. The calibration process of the system creates a library of absorption spectra for the main absorbing species in this region of the spectrum. An optimization process adjusts the concentrations of the calibrated species spectra until the computed spectrum matches the measured one.

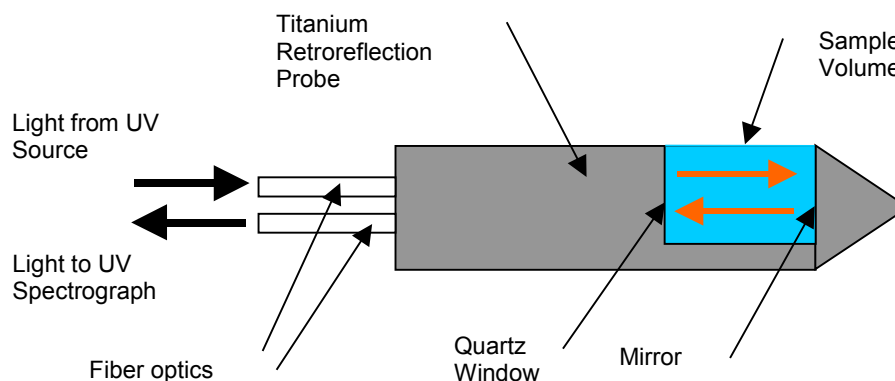


Figure A-3: Seawater Sample Illumination

Calibration

Calibration parameters for the nitrate calculations are loaded onto the instrument. The parameters are obtained at Satlantic by measuring absorption spectra of samples in the range of 0-40 μM nitrate, 0-35 psu salinity and 0-20 C temperature. These measurements fully characterize the instrument for the range of field applications. Contact Satlantic for calibrations outside of this measurement range.

Operational Summary

The MBARI-ISUS is equipped with multiple interfaces for easy adaptation to individual applications. It provides user data in the following formats:

- analog outputs for easy interfacing to CTD systems (see Satlantic Tech Note – Interfacing the MBARI-ISUS to a SeaBird CTD profiler),
- digital telemetry (compressed concentration only formats, full spectral output in either ASCII or BINARY format)
- digital output stored on an internal 256 MB flash card.

Details on the data formats can be found in Section D OPERATION. The MBARI-ISUS may be powered from a battery pack (rechargeable or high capacity replaceable cells) or from other external power sources.

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	A. OVERVIEW

Major Components

The major components of the MBARI-ISUS are the instrument body, the connector end cap, the probe end cap, and the external power source. A computer with a free RS-232 serial port (or a free USB port with a USB to RS-232 converter) is required for configuration and to offload data.

Additionally, it is possible to switch the ISUS instrument from RS-232 connection to USB connection. This feature is useful for downloading large volumes of data.

Please note that in this manual, the term RS-232 implies EIA-232.

Instrument Body

The MBARI-ISUS housing is a standard Satlantic pressure case design, consisting of a corrosion-resistant anodized aluminum tube with two anodized aluminum end caps. A 2" long zinc sacrificial anode provides further protection against galvanic corrosion.

See Figure A-4: The MBARI-ISUS Anodized Aluminum Body

 Operation Manual	SYSTEM
	SECTION

MBARI-ISUS

A. OVERVIEW

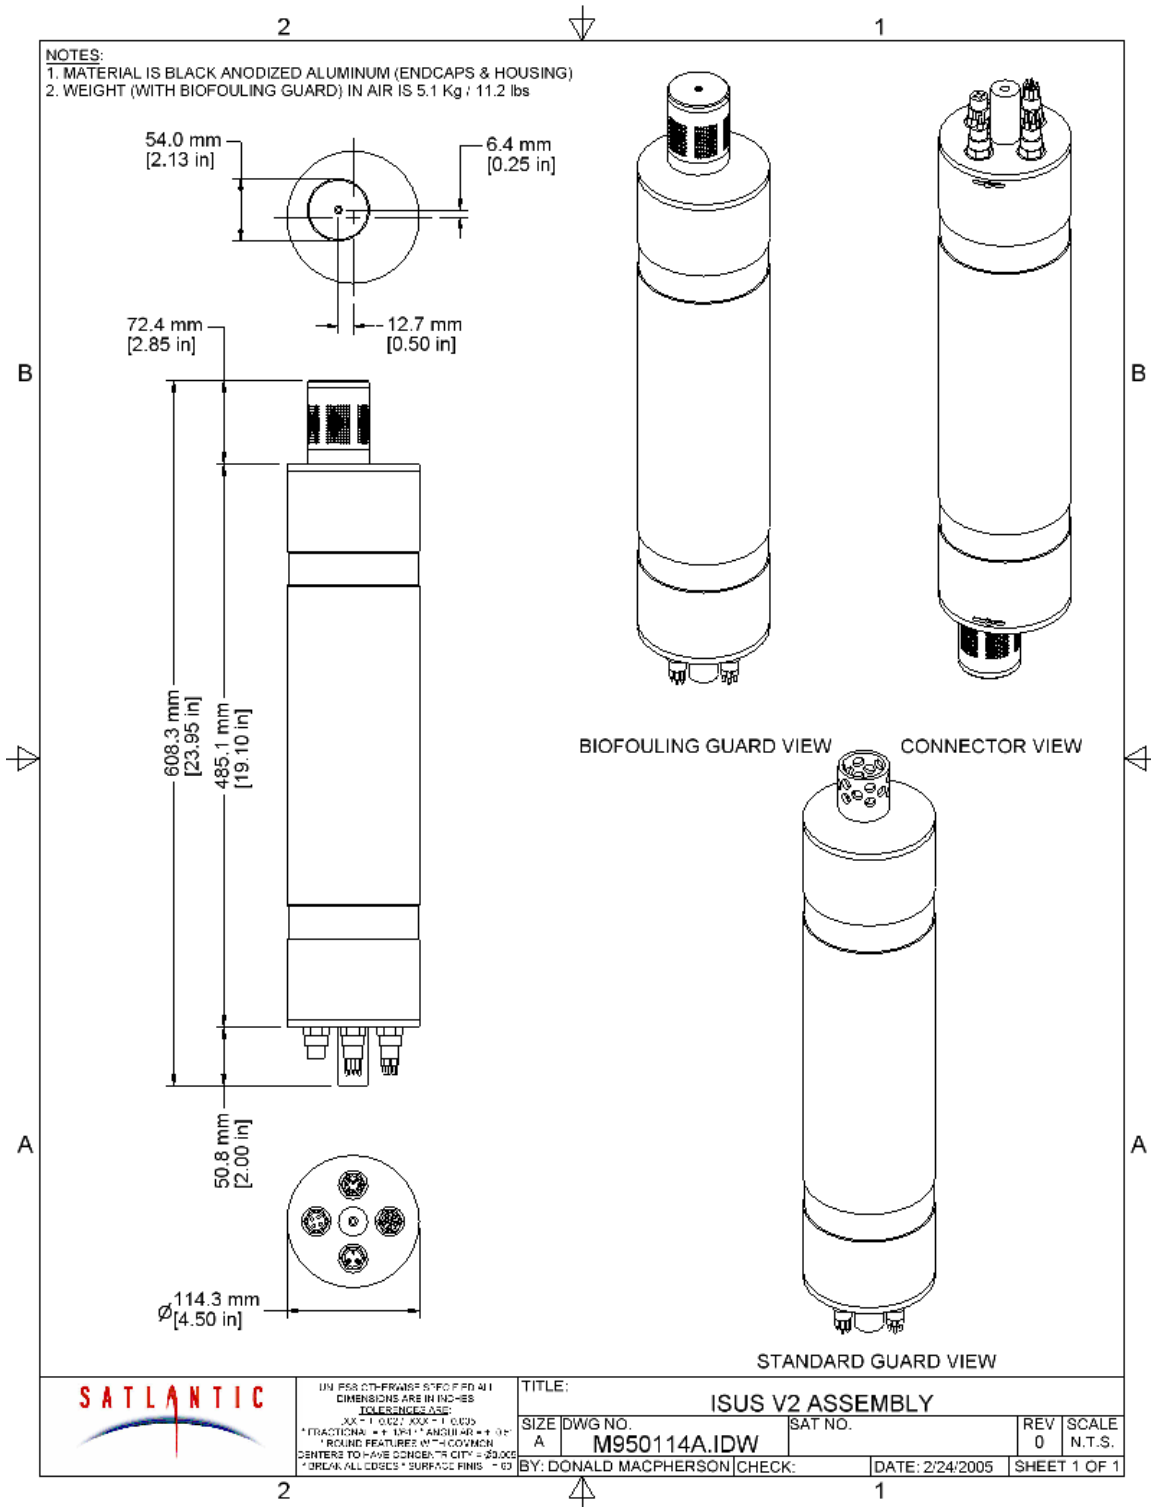


Figure A-4: The MBARI-ISUS Anodized Aluminum Body

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	A. OVERVIEW

Connector End Cap

The bottom end cap contains a zinc sacrificial anode and 4 bulkhead connectors; each bulkhead is a different “port” on the instrument. The pin-out and function of each configuration is described in the following sections. Normally, all of the connectors are Subconn series. Please consult Satlantic if you require a custom interface.


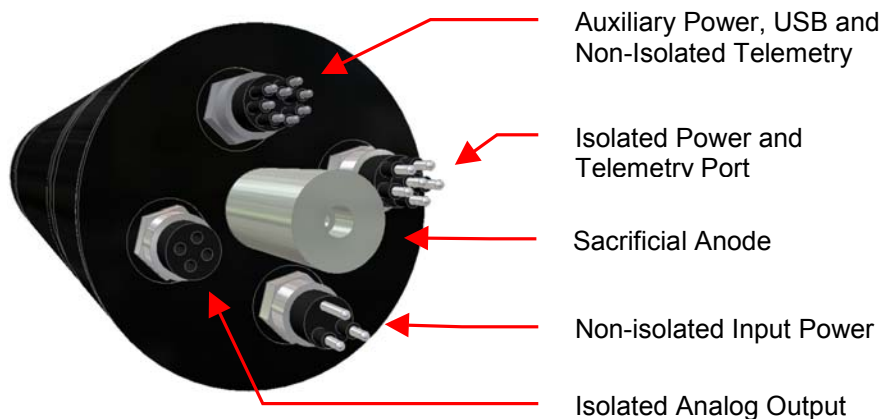


Figure A-5: Connector End Cap View

Connectors

Non-isolated Input Power Port

This connector is used to provide power to the instrument, typically from a battery pack or a bench top power supply for laboratory use.

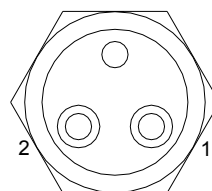

MALE FACE VIEW


Figure A-6: MCBH2M Bulkhead

Pin	Name	Description
1	VBATT+	Input Power, 6–18 VDC
2	VBATT–/GND	Power common

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	A. OVERVIEW

Auxiliary Non-Isolated Power, USB and Non-Isolated Telemetry

This port provides USB and auxiliary bi-directional non-isolated RS-232 communications with the instrument. It can also be used to supply power. Note that in the standard ISUS configuration, the non-isolated RS-232 is not used.

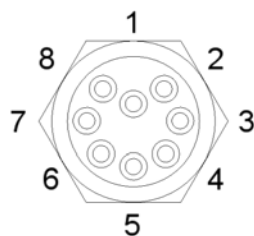


MALE FACE VIEW

Figure A-7: MCBH8M Bulkhead

Pin	Name	Description
1	VAUX	Input Power, 6–18 VDC
2	VAUX-/GND	Power common
3	USB–	
4	USB+	
5	TXD_AUX	Aux RS-232 from ISUS to computer
6	RXD_AUX	Aux RS-232 from computer to ISUS
7	V_USB	USB device power supply
8	N/C	Not internally connected

Isolated Power and Telemetry Port

This port allows the use of isolated power and telemetry. Isolation eliminates ground current paths that can interfere with normal instrument operation and cause corrosion. The higher input voltage is useful when operating the instrument over long power supply cables.

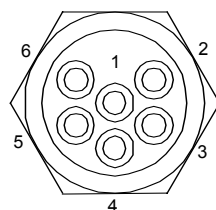

MALE FACE VIEW


Figure A-8: MCBH6M Bulkhead

Pin	Name	Description
1	VSHORE+	Isolated input power, 18–72 VDC
2	GNDISO	Isolated ground
3	TA	RS-422+
4	TB	RS-422–
5	TXD_ISO	Isolated RS-232 from ISUS to computer
6	RXD_ISO	Isolated RS-232 from computer to ISUS

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	A. OVERVIEW

Isolated Analog Output

This port is used to output an analog representation of the calculated nitrate concentration and auxiliary values. CTDs or other data loggers can record these voltages. The voltages are isolated and generated from precision 16-bit DACs (Digital-To-Analog Converters).

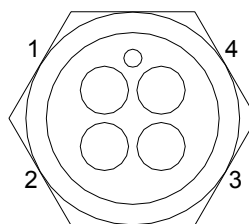

FEMALE FACE VIEW

Figure A-9: MCBH4F Bulkhead

Pin	Name	Description
1	NITRATE+	Analog voltage representing the calculated nitrate concentration (0-4.096 V)
2	NITRATE-	Analog common
3	AUXILIARY+	Analog voltage representing the calculated auxiliary fitting value (0-4.096 V)
4	AUXILIARY-	Analog common

Sacrificial Anode

The sacrificial anode is constructed from zinc and is 2" long and is 1" in diameter. It is mounted to the connector endcap using a 2" long 10-32 316 Stainless Steel screw. Its purpose is to help protect the aluminum housing from galvanic corrosion.

Galvanic corrosion is a common problem in marine environments. It occurs when dissimilar metals are brought into electrical contact in the presence of an electrolyte, such as seawater. One of the metals will become the anode and corrode faster than it would if the other were not present, depending on the metals' location in the galvanic series of metals. As zinc is less noble than aluminum, it acts as the anode in the galvanic couple formed with the aluminum and is corroded first (hence the term 'sacrificial'), helping to protect the aluminum housing against corrosion.

See Figure A-5: Connector End Cap

Satlantic recommends replacing the zinc anode when approximately 40-50% of the anode has corroded away.

 Operation Manual	SYSTEM
	SECTION

MBARI-ISUS

A. OVERVIEW

Power Supply

The MBARI-ISUS has a flexible power supply system that allows it to be powered from a number of sources, depending on the application. Normally, a 12 V battery pack is used, and a rechargeable battery pack specifically designed for use with the instrument is available from Satlantic.

Power can be supplied on 3 of the 4 bulkhead connectors. They are connected internally using diodes, preventing the possibility of shorting supplies. If power is available on more than one bulkhead, the one with the highest voltage will supply the ISUS.

The ISUS normally draws 0.55 A at 12 V while operating. Previous versions of the ISUS required a significant current surge when enabling the UV-lamp. However, this surge is virtually eliminated in the new design. A minimum supply of 1 A at 12 V is adequate to turn on the ISUS.

The instrument will detect a situation of insufficient power, and commence a safe shutdown procedure. If this procedure is entered during the initial stages of the operation, the power supply was probably too weak. It is recommended to disconnect the instrument, and restart using a stronger power supply.

Probe End Cap

The top or probe end cap consists of a reflection probe held in place by the probe retaining nut. The retaining nut is threaded on the outside, allowing a probe guard or biofouling guard to be easily installed

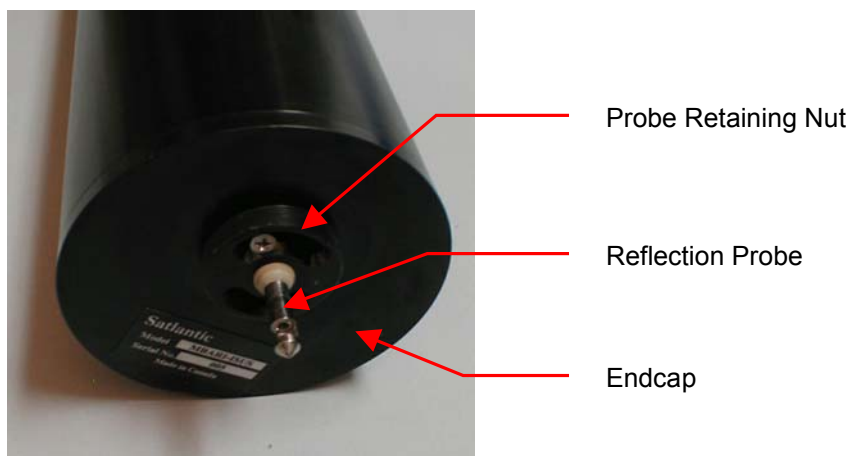


Figure A-10: Probe Endcap

 Operation Manual	SYSTEM
	SECTION
	MBARI-ISUS
	A. OVERVIEW

The probe is protected from damage by either the *standard probe guard* or the *biofouling guard*.



Figure A-11: Probe Guards

Probe

The probe is a custom, high-quality reflection probe design, and is constructed from titanium and PEEK plastic in order to reduce the possibility of corrosion. An acetal probe guard is threaded over the probe to protect it from impact. An optional biofouling guard is also available. You may remove the guard to clean the probe – refer to the *Maintenance* section for details. **Never remove the screws holding the probe retaining nut in place!** You may damage the probe and risk flooding the instrument!

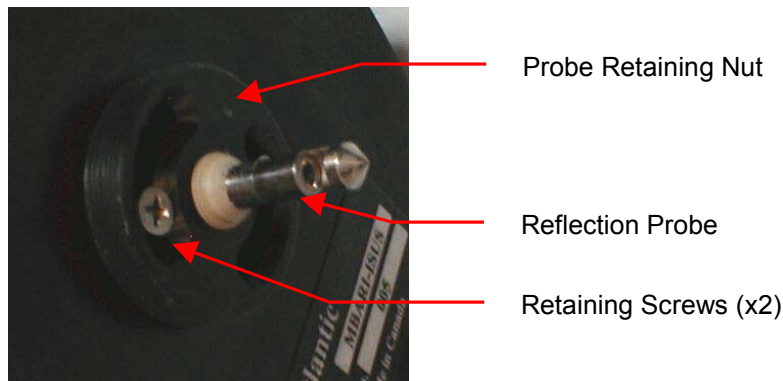


Figure A-12: Reflection Probe

The probe should be carefully cleaned before and after each deployment. Refer to the *Maintenance* section for details.

Standard Probe Guard

The standard probe guard is normally used in profiling applications. This guard is a simple acetal plastic tube with several large holes drilled in it to allow water to easily pass over the probe, while protecting the probe from impacts. The probe guard is threaded on one end to allow it to be attached to the probe retaining nut. The guard is 1.75" (44.5mm) long and 1.75" (44.5 mm) in diameter.

 Operation Manual	SYSTEM
	SECTION
	MBARI-ISUS
	A. OVERVIEW

hulls, and moorings. Unfortunately, ocean sensor optical detectors (such as the MBARI-ISUS probe) are also prone to biofouling, and various methods, particularly toxic coatings, have been used in an attempt to prevent it. However, less environmentally dangerous methods are preferred.

Copper (and copper-based alloys, such as copper-nickel) has long been known to provide good resistance against biofouling. This characteristic has been used to advantage in a number of commercial products, and it has even been used as a cladding on ship hulls. The MBARI-ISUS takes advantage of this characteristic by mounting a copper screen around the probe. The copper prevents marine growth from occurring on the guard and the filter cloth beneath it, while also filtering out particulate matter. Immediately beneath the copper is a layer of Nitex™ filter cloth with 100 µm hole size², which blocks particles and marine organisms. The filter is passive, with sample water naturally flushing through the cloth.

² Other sizes are available from 5 µm up to 1000 µm and can easily be changed by the user

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	B. SAFETY & HAZARDS

B. SAFETY & HAZARDS

Personal Safety

WARNING!

If you suspect that the ISUS has flooded, use **EXTREME CAUTION** around the instrument. The ISUS can operate at depths of up to 1000 meters. If the instrument leaked at depth it might remain highly pressurized when recovered and cause the end cap to be launched from the pressure case with extreme force if the plastic restraining screw and locking cord are removed.

An indication for flooding is that the instrument stops operating or a short-circuit in the instrument. If you suspect a flood, check the instrument for signs of pressurization. In a pressurized instrument the gap between the end caps and pressure case may be extended. Place the instrument in a safe location and contact Satlantic for further instructions.

If the instrument cannot be safely stored away, the following steps can be taken: To relieve the instrument pressure, stand to the side of the instrument with the connector end cap pointing in a safe direction. Relieve the pressure by **VERY** slowly removing the plastic restraining screw, then **VERY** slowly removing the locking cord. Be extremely careful, as the end cap may be forced out of the housing with extreme force and at high velocity.

- The operators should always remain aware of the cable. Any cable or line released from a ship can be dangerous. Keep a safe distance from the cable coil on deck when the instruments are being used.

Instruments

- Do not leave instruments in direct sunlight.. Direct sunlight can easily increase the internal temperature of the instrument beyond its maximum rating.
- Do not leave an in-water instrument unattended. Boat drift can entangle the cable and cause damage or instrument loss.

Cable

- To prevent damage to the conductors within the Kevlar™ strength member (if present), ensure that the cables are not pinched or bent to a radius of less than 18 cm.

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	B. SAFETY & HAZARDS

Connections

- Handle electrical terminations carefully, as they are not designed to withstand strain. Disconnect the cables from the components by pulling on the connector heads and not the cables. Do not twist the connector while pulling, as this will damage the connector pins.
- Do not use petroleum-based lubricants on Subconn® connectors. Connectors should be free of dirt and lightly lubricated before mating. Satlantic recommends using DC-111 silicone grease (made by Dow-Corning®) on the male pins prior to connection.

Troubleshooting

- While checking voltages with a multimeter, use extreme care to avoid shorting the probe leads. A shorted power supply or battery can output many amperes of current, potentially harming the user, starting fires, or damaging equipment.

Recovery

- Remember never to grab the electrical portion of the instrument cable during recovery. This can cause damage to the bulkhead connector and the underwater splice.
- Be sure to rinse seawater from the instrument with fresh water prior to storage. Corrosion resulting from failure to do so is not covered under warranty.

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	C. START UP

C. START UP

Preparation

Your MBARI-ISUS is a simple instrument to setup and operate. The instrument can be configured to operate in CONTINUOUS, SCHEDULED, BENCHTOP or FIXEDTIME modes, as outlined in the Operation section. Generally, requirements for operation are the same for both of these modes.

You will need the following items:

- DC power source: Either 6–18 VDC (12–15V preferred) or 18-72 VDC with a minimum 0.55 A current.
- Computer with a free serial communications port for telemetry acquisition or later data download.
- Data acquisition and processing software compliant with the Satlantic Data Format Standard (SatView and SatCon normally provided)
- The instruments telemetry definition file (provided)

If you are not using your instrument in an embedded system, or you do not have your own data acquisition software, you may use the software provided by Satlantic. Two applications³, *SatView* and *SatCon*, are available to you for any PC running Windows®⁴ 95/98/NT/2000/XP. Both applications are compliant with the Satlantic Data Format Standard. *SatView* is a data acquisition and real-time display application. *SatCon* is a post processing application for telemetry logged with *SatView*.

The ISUS normally logs data internally as well, so a data acquisition device is not required. However, Satlantic's *SatView* software allows you to view the data in real time, while *SatCon* enables you to easily separate light and dark frames. ISUS specific viewing and processing software is provided in the *ISUSView* and *ISUSPro* software packages.

Also note that it is not necessary to use the software mentioned above to log the instrument telemetry. A properly configured terminal emulator can serve this purpose. In any case, there are a few standard communications settings needed for any computer application communicating with the instrument. All serial transmissions use 1 start bit, 8 data bits, 1 stop bit, and no parity. No flow control of any kind is used. Make sure that your software is configured with the baud rate specified for your instrument. Initially, the telemetry baud rate is 38400 bps.

In preparation for assembly, the MBARI-ISUS components should be checked against the packing list to ensure that all required items are included. The dummy connectors should be removed and stored so that they can be replaced after the instrument is recovered. The instrument packing should be retained and reused to prevent instrument damage during transport.

³ For more information on these applications, refer to the user's manuals distributed with the software.

⁴ Windows is a registered trademark of Microsoft Corporation.

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	C. START UP

Additionally, lubrication for the male pins prior to connection is required. We recommend DC-111 silicone grease (made by Dow-Corning). Do not use a petroleum base lubricant.

Connect the Cables

When connecting the cables, proper alignment on the connector pins is critical to avoid damage. Connectors should be inspected to ensure they are free of dirt and then lightly lubricated before connecting. Visually ensure that the pins on the male connectors are properly aligned with (and partially seated into) the sockets on their female counterparts before pushing them together. Finally, ensure that the locking sleeve is securely fastened after connection.

Connect the instrument body, the computer and the battery to the deck unit, as follows.

1. Mount the ISUS to its deployment frame.
2. Mount the battery pack, if present, to the deployment frame.
3. Connect the configuration cable to the ISUS and a spare PC serial port.
4. Start a terminal emulator with the proper settings on the PC, and connect to the port.
5. Connect the power source to the ISUS.

Once the ISUS has been connected and power has been applied, an initialization sequence will begin to ready the device for normal operation. The ISUS will output status messages as it goes through the initialization steps. These will be displayed in the terminal emulator and are also logged instrument internally for later reference.

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	C. START UP

Telemetry Acquisition Using SatView

If you are using the instrument with real-time telemetry, it is possible to monitor the data in Satlantic's SatView software.

To view the ISUS data in SatView, go to the "Setup Menu" on the Toolbar, and select "Add instrument". Browse to find the appropriate .SIP file (included on the instrument CD) and load it into the "From Instrument Package" box. Once the .SIP file is loaded, go to the main SatView window and set the COM port. For further instructions on how to use SatView, please refer to the SatView user manual.

Below is an example of a data acquisition. The top left window is the connection interface, and at the top right auxiliary data (nitrate concentration, temperatures, power stability) are shown. At the bottom, the numerical values and a graph of the UV-spectrum are displayed.

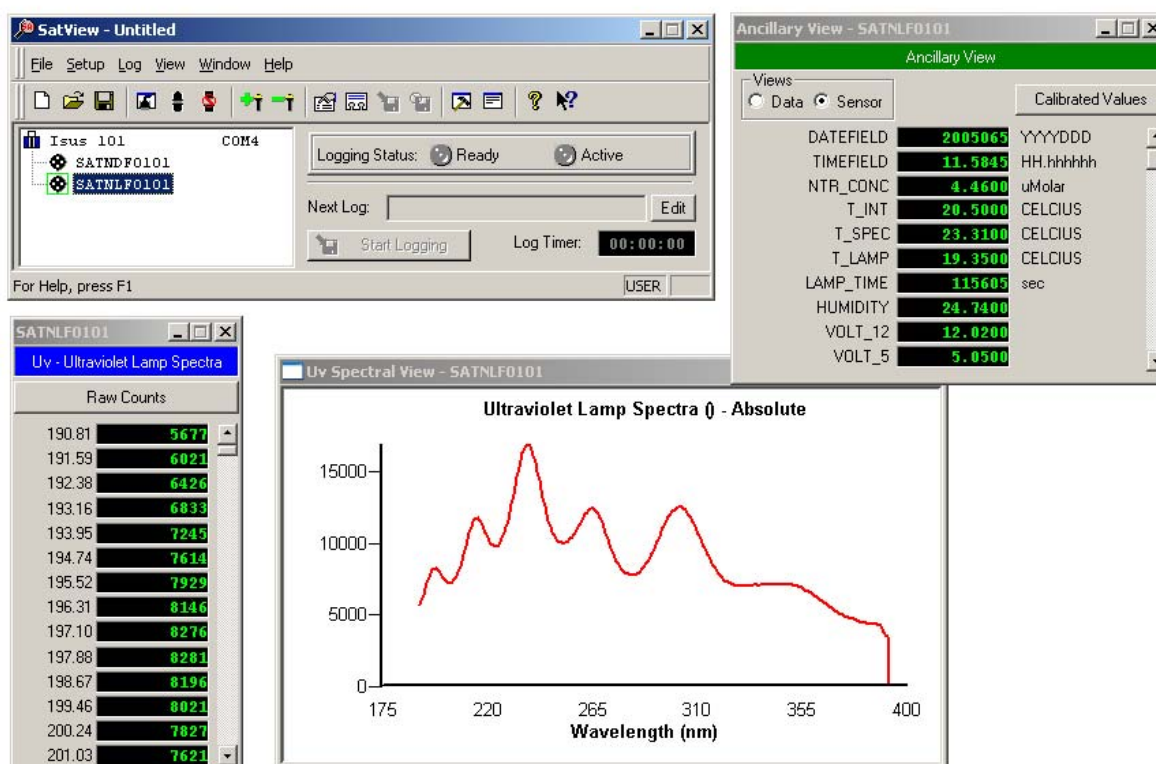


Figure C-1: SatView real-time display.

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	C. START UP

Telemetry Acquisition with a Seabird CTD

The MBARI-ISUS has been extensively tested with the SeaBird series of CTD profilers. It is easy to integrate the analog output of the MBARI-ISUS with one of the CTDs ancillary inputs. For complete details, please refer Appendix J entitled “Interfacing the ISUS to a SeaBird CTD Profiler”.

Below is a screen shot from SeaBird’s SeaSave software, highlighting the detailed vertical resolution available when the MBARI-ISUS is used in its profiling mode.

In the screen capture, the bright green trace is the analog nitrate concentration signal to the CTD. Two up and down casts are shown. Here, the nitrate concentration was centered on approximately 12 μ Molar. Notice the detail in the nitrate concentration profile. This test was performed in Halifax harbour, in Nova Scotia, Canada, on February 3, 2003.

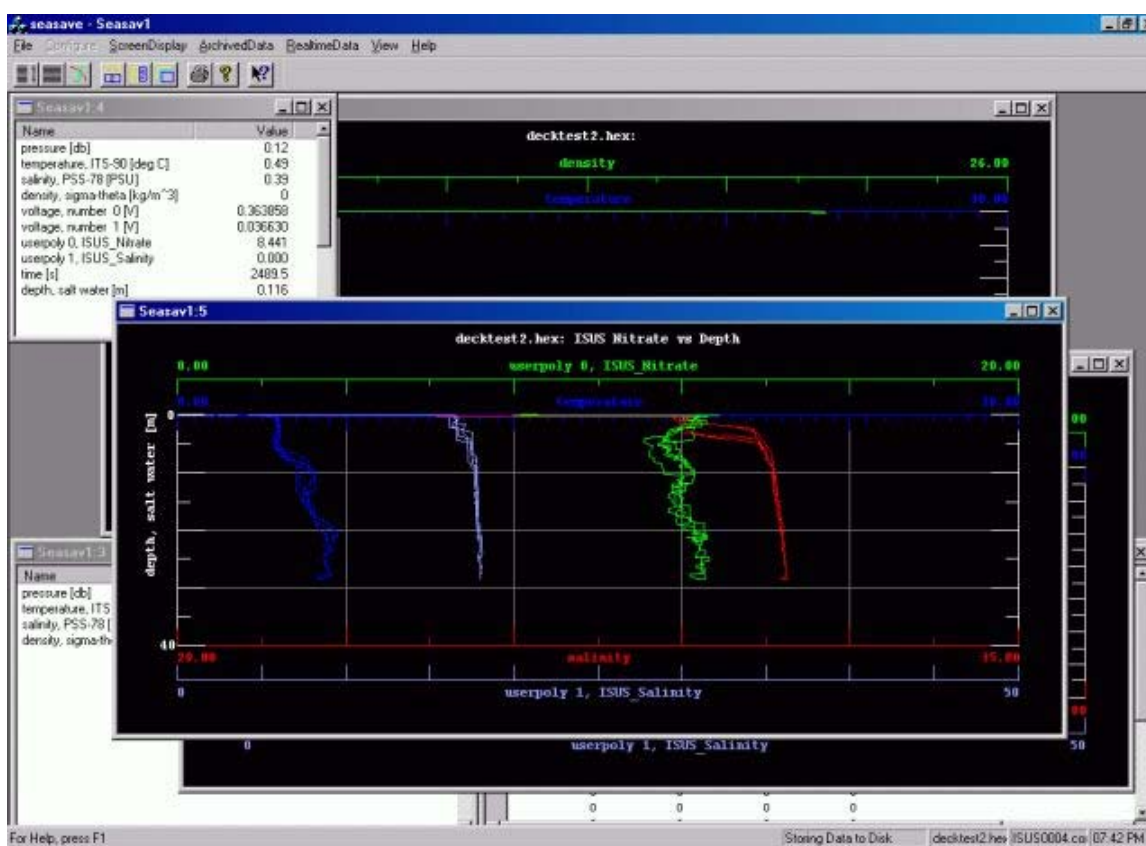


Figure C-2: SeaBird SeaSave screen capture

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	C. START UP

Deployment Example

The MBARI-ISUS and a battery pack were mounted to the CTD's lowering frame, as shown below. The frame was then simply lowered over the side of the boat, by hand.



Figure C-3: CTD, ISUS, and Battery Pack

The advantage of this approach is that it allows the user to obtain real-time data in a visible format, including depth, temperature, salinity, and nitrate concentration. It is easy to identify structures such as thermoclines, haloclines, fresh-water surface layers, and so on, and their relationship with the nitrate concentration.

 Operation Manual	SYSTEM
	SECTION
	MBARI-ISUS
	D. OPERATION

D. OPERATION

Operating Modes

The ISUS has been designed with several user-selectable operating modes: CONTINUOUS, SCHEDULED, BENCHTOP and FIXEDTIME. Future ISUS units may include additional operating modes not described here.

The operating mode is retained in the ISUS's non-volatile memory. At power-up, the operating mode is checked and the necessary initialization actions are performed. If the user changes the operating mode, power will have to be removed and then reapplied (after approximately 1 minute, in order to discharge the instrument internal power protection charge). The operating mode can be changed from the setup menu (explained below).

Continuous

In continuous or "profiling" mode the instrument begins acquiring data after a configurable number of seconds (initially 10) and stops when power is removed.

Each acquisition cycle starts a new log file on the ISUS internal flash-disk with the name DIVE`nnn`.DAT, where 'nnn' is incremented with each cycle; 'nnn' is referred to as the deployment counter and is saved in non-volatile memory. Thus, each profile is logged to a separate file.

When connected via a terminal emulator, the user will see a per-second counter before the start of the acquisition. The 'G' (go) command bypasses the start-up delay, the 'M' command provides access to menus for configuration, setup and data download. After exiting the menu the instrument will return to the start-up counter. After the instrument has started acquiring data, the 'S' (stop) command (multiple key presses may be necessary) will return the instrument into the start-up loop.

Fixed Time

Fixed time mode is almost identical to continuous mode. The only exception is that the instrument stops acquiring data after a user configurable period and enters the menu.

Scheduled

Scheduled mode is typically used in moored applications. The ISUS can be scheduled to periodically wake up, measure, and record data. Between events, the instrument enters a very low-power sleep state to conserve power.

The schedule is defined in the SCHEDULE.TXT file, which has to be uploaded onto the instrument prior to deployment. Initially, the instrument is scheduled to power the instrument once every 60 minutes, and acquires 20 seconds worth of data every time.

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	D. OPERATION

The scheduling file contains three types of command lines, for example:

```
16:30:00 Power      +ISUS
16:30:45 Acquire 30  ISUS
16:31:20 Power      -ISUS
```

The file follows Satlantic's schedule file format, which can be used to schedule multiple instruments. Here, only one instrument (ISUS) is scheduled. Each acquisition event must contain the three above commands, i. e. powering up the ISUS (indicated by the '+' in the first command), acquiring data over a period of time (here 30 seconds), and finally powering off the instrument (indicated by the '-' in the last command). A detailed description of the schedule file is provided in the appendix in section I.

More generally, the scheduling event follows a simple three state model: the instrument is either OFF, ON, or ACQUIRING. Initially, the instrument is in the OFF state. The instrument transitions from one state into another state are triggered by the above commands.

	OFF	ON	ACQUIRING
Power +	Switch to ON	Ignore	Ignore
Power -	Ignore	Switch to OFF	Switch to OFF
Acquire	Ignore	Switch to Acquiring	Increment acquisition period
After #Sec	Ignore	Ignore	Switch to ON

When operating an MBARI-ISUS instrument, some additional considerations apply. First of all, there is a slightly variable time lag between the 'Power-On' command, and the readiness of the instrument. Thus, sufficient time should be given, normally 25 seconds are enough. Secondly, the instrument lamp needs some time to stabilize. To ensure data is acquired with the same lamp stability status, all acquisitions should begin at the same time relative to the 'Power-On' time of the instrument. Also, during warm-up the lamp changes its spectral characteristics; therefore the acquisition duration should also be kept fixed to maintain identical operating conditions.

Should there be an overlap e. g. of the 'Power-On' sequence into the acquisition period, the acquisition will simply begin later and terminate when the scheduled start time plus duration is reached. In case the acquisition period extends beyond the 'Power-Off' point, the later event will overwrite the acquisition request, terminate the acquisition and power off the instrument. Powering off the instrument overwrites all other actions, mainly to ensure the instrument will not remain powered over arbitrary periods of time.

The data acquired during each scheduling event are logged depending on user specification (a) incrementally to a single file SPECTRA.DAT, (b) to a daily file SCHyyddd.DAT (yy and ddd indicating year and day of the acquisition) or (c) to one file per event DIVEnnn.DAT (to a maximum of 999 files)

While in low-power sleep and when connected to a terminal emulator, the instrument will wake up upon any key press. There will be a 10 second window during which it is possible to enter the menu with the 'M' command, otherwise the instrument will go back to sleep to wait for the next scheduled event.

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	D. OPERATION

After a scheduling deployment, the message and error log files should be consulted. Problems occurring during operation are recorded in these files. (Refer to the File Menu Section for details.)

Benchtop

Benchtop mode is basically identical to scheduled mode. The only difference is that the instrument assumes that the power supply will be steady, and thus waive some precautionary measures. When operating in Benchtop mode, the instrument acquisition must be interrupted and the instrument in the UI-Menu before power can be disconnected.

Frame Output Modes

The frame format for the ISUS, as with all Satlantic instrumentation, follows the *Satlantic Data Format Standard*⁵. This standard defines how Satlantic frames are composed and interpreted. For every sample taken, the instrument will compose one frame of data, save this frame to flash disk and transmit it via serial telemetry. The information contained in the frame will depend on the *frame output mode* of the instrument. The instrument's *telemetry definition file* (also called *calibration file*) defines the format of the frame.

Three frame output modes are available in the ISUS: *Concentration ASCII*, *Full ASCII* (default) and *Full BINARY*. Full mode provides all available information to the user, at the expense of increased frame and log file size. Concentration mode provides a greatly reduced frame, containing only a timestamp, the nitrate concentration and auxiliary fitting results as calculated by the ISUS. The frame format for each mode is given in the table below. Please note that either frame output mode may be used regardless of the operation mode of the instrument.

For ASCII frames, separate fields are comma-delimited. The frame size may vary, but a maximum size of each field is given. Satlantic's data logging software (SatView) supports such variable length frames, and as such the size of each field may change without affecting the calibration file. If integrating the ISUS with foreign data-logging devices, it will be necessary to rely on the comma delimiters to distinguish data fields.

In BINARY frames, separate fields are of a fixed length, and therefore do not require delimiters. This and the BINARY inherent compact representation of data leads to a reduction of the frame size by a factor of nearly 3. BINARY frames have to be converted to ASCII (e.g using SatCon) data for further processing.

In the following table, all fields occurring in ISUS frames are listed, and their meaning is explained. The format of the fields and their size are given, first for ASCII frames, then for BINARY frames. The occurring formats are ASCII Integer (AI), ASCII Float (AF), ASCII String (AS), Binary Signed Integer (BS), Binary Unsigned Integer (BU), Binary Float (BF) and Binary double precision float (BD). Binary fields have fixed sizes, ASCII fields may have fixed or variable sizes. Please refer to the Satlantic Data Format Standard for more details on these data types.

⁵ For more information on Satlantic telemetry format, refer to the *Instrument File Standard* document available from Satlantic

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	D. OPERATION

Field Name	Format	Description
INSTRUMENT	AS 10 AS 10	The frame header or synchronization string starts with "SAT" for a Satlantic instrument, followed by three characters identifying the frame type. The last four characters are the instrument serial number.
DATE	AS 7 BS 4	The date field denotes the date at the time of the sample, using the year and Julian day. The format is YYYYDDD.
TIME	AF 9 BD 8	The time field gives the GMT/UTC time of the sample in decimal hours of the day.
NTR CONC	AF 4..7 BF 4	The Nitrate concentration as calculated by the ISUS is reported in $\mu\text{Mol/L}$; in ASCII frames to 2 decimal places.
AUX_CONC	AF 4..7 BF 4	The auxiliary fitting result of the ISUS is reported.
RMS ERROR	AF 8..10 BF 4	The Root Mean Square Error of the ISUS' concentration calculation is given, in ASCII frames to 6 decimal places.
The above fields are present in all frames, the following fields only in full frames.		
T_INT	AF 5 BF 4	The temperature inside the ISUS housing is given in degrees Celsius; in ASCII frames to 2 decimal places.
T_SPEC	AF 5 BF 4	The temperature of the spectrometer is given in degrees Celsius; in ASCII frames to 2 decimal places.
T_LAMP	AF 5 BF 4	The temperature of the lamp is given in degrees Celsius; in ASCII frames to 2 decimal places.
LAMP_TIME	AI 1..6 BU 4	The lamp on-time of the current data acquisition in seconds.
HUMIDITY	AF 4..5 BF 4	The humidity inside the instrument, given in percent. Increasing values of humidity indicate a slow leak.
VOLT_12	AF 5 BF 4	The voltage of the lamp power supply.
VOLT_5	AF 5 BF 4	The voltage of the internal analog power supply.
VOLT_MAIN	AF 5 BF 4	The voltage of the main internal supply.
REF AVG	AF 7 BF 4	The average Reference Channel measurement during the sample time, in ASCII mode to 2 decimal places.
REF STD	AF 6 BF 4	The variance of the Reference Channel measurements, in ASCII mode to 2 decimal places.
SW DARK	AF 8 BF 4	An AF formatted field representing the Sea-Water Dark calculation (to 2 decimal places), in spectrometer counts.
SPEC AVG	AF 8 BF 4	An AF formatted field representing the average value of all spectrometer channels, to 2 decimal places.
CHANNEL (λ_1)	AI 3..5 BU 2	The counts of the first channel (wavelength λ_1) of the spectrometer.
...	...	...
CHANNEL (λ_n)	AI 3..5 BU 2	The counts of the n-th channel (wavelength λ_n) of the spectrometer.
...	...	...
CHANNEL (λ_{256})	AI 3..5 BU 2	The counts of the last (256-th) channel (wavelength λ_{256}) of the spectrometer.
CHECK SUM	BU 1	Binary frames only: A check sum validates binary frames. Satlantic's software rejects invalid frames.
TERMINATOR	AS 2 AS 2	This field marks the end of the frame by a carriage return/line feed pair (0D _{hex} and 0A _{hex}).

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	D. OPERATION

Depending on the frame type, the sizes of the frames (for ASCII frames including the delimiters) are:

ASCII Concentration Frame	57 bytes (maximum)
ASCII Full Frame	1675 bytes (maximum)
Binary Full Frame	595 bytes (fixed)

For a flash disk size of 256 MB, this translates to approximately 4,500,000 ASCII Concentration frames, 155,000 ASCII Full frames, or 440,000 Binary Full frames. With an acquisition rate of one frame per second, an acquisition period of 52 days (ASCII Concentration frame), 43.5 hours (ASCII Full frame) or 122 hours (Binary Full frame) can be stored on the flash disk. Larger disk sizes are available upon request.

The instrument is normally configured to periodically generate dark spectra to correct for thermal noise. This is achieved by closing an on-board shutter over the UV light source before sampling. To distinguish between *Light* and *Dark* frames, the instrument uses different frame headers. This allows any telemetry acquisition system to distinguish between sensor readings taken with the shutter opened and closed.

The different frames are distinguished by their header string: following the three letter 'SAT' identifier is a three letter frame identifier: The first letter is for ISUS frames always a 'N', indicating that the ISUS is an **N**itrate measuring instrument. The second letter indicates the shutter state of that frame ('L' for **L**ight frame, 'D' for **D**ark frame) and the third letter indicates the frame type ('C' for ASCII **C**oncentration Frame, 'F' for ASCII **F**ull Frame, and 'B' for **B**inary Full Frame).

Frame Header	Explanation of frame header
SATNLC	SATlantic Nitrate Light Concentration frame
SATNDC	SATlantic Nitrate Dark Concentration frame
SATNLF	SATlantic Nitrate Light Full ASCII frame
SATNDF	SATlantic Nitrate Dark Full ASCII frame
SATNLB	SATlantic Nitrate Light full Binary frame
SATNDB	SATlantic Nitrate Dark full Binary frame

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	D. OPERATION

Communicating with the ISUS

The ISUS menu is accessed via its serial communication interface (SCI). Thus, the instrument must be connected to a power supply and via its isolated telemetry port (6-pin) to a computer capable of emulating a serial terminal connection. The HyperTerm software is a frequently used terminal emulator, but other programs work equally well. For a guide on how to use HyperTerm, please refer to the guide in the appendix.

The ISUS always uses 8 data bits, no parity, no flow control, and one stop bit for its communication. The data rate can be adjusted by the user, and is initially set to 38 400 baud.

How to reach the root menu

When turned on, the instrument will first send messages over its serial communication port. Then it waits for the operator to sent an interrupt ('M'-key) for entering the root menu.

If no interrupt is received (the normal mode of operation), data acquisition will begin (CONTINUOUS mode) or operation may be suspended to resume up at a later time (SCHEDULED mode). The 'S'-key interrupts CONTINUOUS mode, and a further 'M' key will bring the instrument into the menu. An arbitrary key interrupts suspension in SCHEDULED mode, after which the 'M'-key key will bring the instrument into the root menu.

Menus

The root menu gives access to the configuration, setup, file, info and USB menus.

In any menu, simply type H<Enter> to display the list of available commands. To exit the current menu, press Q<Enter>. The menu interface does not distinguish between upper and lower case letters.

Each menu has a distinct prompt indicating which menu you are currently in. For instance, the prompt for the main menu is ISUS>.

The menus serve a number of purposes: to view and optionally modify a current instrument setting, or to move data to or from the instrument.

Configuration Menu

The Configuration Menu provides access to basic instrument settings. It is identified by the ISUS_CONFIG> prompt. Commands are

```
[S]how Configuration
[B]audrate
[D]eployment Counter
```

A typical configuration is:

```
Instrument type:   ISUS
Serial No.:       101
Baudrate:         38400
Deployment Cntr:   16
```

 Operation Manual	SYSTEM
	SECTION
	MBARI-ISUS D. OPERATION

Only the baud rate and the deployment counter can be modified.

Baudrate

The data rate for the telemetry channel may be one of 9600, 19200 or 38400 bps. To operate at a new baud rate, it is necessary to remove power from the instrument, and restart it.

Deployment Counter

The deployment counter determines the next file name to use for internal logging of data: DIVEnnn.DAT, where nnn is the deployment counter. If a file by that name already exists, the data will be appended. The counter is incremented from deployment to deployment, and will be reset to 1 upon reaching a maximum value of 999. It is possible to set the counter to any value in the 1 ... 999 range.

Setup Menu

The Setup Menu provides access to operational parameters. It is identified by the ISUS_SETUP> prompt.

When viewing a setup parameter, a typical response is

```
ISUS deployment mode (SCHEDULED, CONTINUOUS, . . .)
OpMode = CONTINUOUS
Note: Change takes only effect after restart
Modify? [N] ?
```

The first line gives the name of the selected parameter and the possible values it may take. The second line specifies the current setting, and a third line may provide additional information. To modify the parameter, press Y<Enter>, otherwise press <Enter> or N<Enter>.

When modifying a parameter, the possible values are listed:

```
Enter 0 for SCHEDULED
Enter 1 for CONTINUOUS
Enter 2 for FIXEDTIME
Enter 3 for BENCHTOP
Enter number to assign new value [1] ?
```

After selecting a value (e.g. 0), the instrument will respond with

```
ISUS deployment mode.
Using now OpMode = SCHEDULED
```

The operational parameters are accessible via four sub-menus:

```
[O]utput Setup
[D]eployment Setup
[S]pectrometer Setup
[L]amp Setup
D[A]C Setup
```

These menus are explained in details in the following sections.

 Operation Manual	SYSTEM
	SECTION
	MBARI-ISUS
	D. OPERATION

Output Setup Menu

The Output Setup Menu provides access to telemetry and file output parameters. It is identified by the `ISUS_SETUP_OUTPUT>` prompt.

Status Messages

Normally the instrument generates messages during its operation, as to inform the user of what is going on. It may be desirable to reduce the amount of output generated. Potential error messages are not suppressed when status messages are disabled.

Frame Output Mode

The results of each nitrate measurement are collected in individual frames. Options are a short (concentration) frame, a full frame in ASCII format, or a full frame in binary format. The instrument default is to generate full ASCII frames.

For the purpose of post-processing the measurement data, a full frame is essential. Obvious disadvantages of full frames are the increased requirements in terms of disk space and data transfer. (See the above section “Frame Output Modes” for details.)

Output of Dark and Light Frames

For troubleshooting purposes, it may be desirable to only record light or dark frames. This parameter should not be changed in the normal course of operation.

Logging of Frames to File

The instrument normally logs all frames that are transmitted also to its local flash-disk. If the user is certain not to require any post-processing or permanent storage of data, logging of data can be disabled. In this case, the data rate may increase slightly, due to reduced processing requirements. Also, there is no need to be concerned about possible disk-full problems. **There is no way to recover data without data logging.**

Log File in Scheduled Mode

When in scheduled mode, internally logged data are stored either in one single file, in one daily file, or in one file per scheduled event. Normally, one single file is the most useful option; with restrictive download capacities, daily files may be more useful; separate files may be useful for some types of post-processing.

Nitrate and Auxiliary DAC Range

The ISUS instrument generates analog output for the measured nitrate and auxiliary fitting data (see the paragraph on Isolated Analog Output). The minimum and maximum values of the data range correspond to the minimum and maximum output voltages. The selected range should correspond to the expected measurement range. Selecting a too narrow range may cause loss of information, a too wide range may cause reduced resolution. For a detailed description, see J Appendix: Interfacing the ISUS to a Seabird CTD Profiler.

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	D. OPERATION

Deployment Setup Menu

The Deployment Setup Menu provides access to the deployment setting. It is identified by the ISUS_SETUP_DEPLOY> prompt.

ISUS Deployment Mode

Deployment or operational mode is one of SCHEDULED, CONTINUOUS, BENCHTOP, or FIXEDTIME. (See section "Operating Modes" for details.)

Initial Delay in CONTINUOUS Mode

When in CONTINUOUS or FIXEDTIME mode, the instrument enters a countdown loop before starting to acquire data. This loop allows the user to enter the menu interface.

Fixed Operational Time

When in FIXEDTIME mode, the instrument operates for a fixed time, and then enters the menu interface.

Spectrometer Setup Menu

The Spectrometer Setup Menu provides access to spectrometer settings. It is identified by the ISUS_SETUP_SPEC> prompt.

Integration Period

Selecting this command allows the user to set the spectrometer integration time, in milliseconds. The normal setting is between 700 and 850 ms. **This value should not be changed, as it requires a re-calibration of the instrument.**

Collection Rate

A complete acquisition cycle consists in taking a fixed number of dark samples followed by another fixed number of light samples. Normally, 1 dark sample and 10 light samples are taken. Dark values should be taken regularly, because they compensate the thermal electronic noise of the instrument. If more than one dark reading is taken, an average value is calculated.

Spectrometer Coefficients

The spectrometer polynomial coefficients permit calculation of the wavelength of each spectrometer channel. These values cannot be changed.

Seawater Dark Samples

The instrument has a lamp shutter to generate dark sample readings. In case of a shutter failure in a **saltwater environment only**, it is possible to estimate dark values by using spectral values in the very short wavelength range instead. Saltwater has the property to completely absorb UV in the very short wavelength range. This option is provided in order to permit data acquisition during a partial instrument failure. **This setting should only be changed after consultation with a Satlantic representative.**

 Operation Manual	SYSTEM
	SECTION
	MBARI-ISUS
	D. OPERATION

Lamp Setup Menu

The Lamp Setup Menu provides access to fiberlite lamp settings. It is identified by the `ISUS_SETUP_LAMP>` prompt.

Power-On Warm-up Period

The lamp ignites best after reaching a minimum temperature. The warm-up period is initially set to 5 seconds. When the lamp ages and the instrument generates log messages about problems to turn on the lamp, a warm-up period of 10 to 15 seconds may become necessary. Normally, this setting should not be changed. **This setting should only be adjusted after consultation with a Satlantic representative.**

Reference Diode

The reference diode serves as an indicator for lamp output.

When turning on the lamp, a minimum required intensity (initially set to 4000 counts) is required for the lamp to be considered 'on'. Otherwise, the instrument considers the lamp to be 'off', and tries to re-ignite the lamp. For an aging lamp that loses its intensity, it may be necessary to reduce the number of counts. The value should never be changed to too low a value, as the instrument may operate with the lamp turned off. After changing the reference count value, the instrument should be thoroughly tested to confirm it operates properly.

During instrument operation, the reference diode serves as an average performance monitor for the lamp. In order to achieve stable data, a number of samples are averaged during each data acquisition. The user may change this value.

These settings should only be adjusted after consultation with a Satlantic representative.

File Menu

The File Menu allows to list and view files on the instruments flash disk, and to upload new files, or download or erase existing files. The menu is identified by the `ISUS_FILE>` prompt.

The available commands are two letter commands, where the first letter indicates the type of action to be taken, and the second letter indicates the type of file(s) to apply the command to. Available command letters are

- L List file(s)
- O Output file(s)
- U Upload file(s)
- D Download file(s)
- E Erase file(s)

Available files to apply the commands to are

- P Program file, i. e the firmware operating the ISUS instrument
- C Coefficient file (both extinction and wavelength)
- E Extinction coefficient file(s), also called calibration file(s)
- W Wavelength coefficient file

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	D. OPERATION

S	Schedule file
L	Log file for messages and error logs
D	Data file of the recorded frames
AD	All Data files

Not all combinations of commands and applicable files are available or meaningful.

For file selections that are applicable to single files, the user will be prompted to choose a specific file. The instrument firmware automatically generates and expects certain file name conventions. The File Menu restricts the user to specify only file names following these conventions.

For example, extinction coefficient files are always of the form ISUSnnn\$.CAL, where nnn is the instrument serial number, and \$ is a versioning letter to distinguish different instances of the extinction coefficients. Thus, when uploading a new extinction coefficient file onto the instrument, the user is only requested to specify the version letter. In this way, errors due to a misnaming of files are eliminated.

Similarly, data log files generated by the instrument are of the form DIVEnnn.DAT, SCHED.DAT, or SCHyyddd.DAT (see under "Operating Modes" for details). Thus, the user is only able to select files named in this scheme for download.

List commands

The list commands will give a listing of the files of the specified type that are on flash disk. Available commands are LP (list program file), LC (list coefficient file(s)), LL (list message and error log files), and LD (list data files).

Output commands

The output command causes a selected file to be printed to the screen. It is possible to output coefficient files (OE, OW), the schedule file (OS), log files (OL) and data files (OD). For large data files, completion of output may take a long time. It is usually better to download a data file and view it locally.

Upload commands

There is rarely the need to load new files onto the instrument. If an instrument runs in scheduled mode, it is always necessary to upload the SCHEDULE.TXT file (US). Otherwise, if after an extended operation a re-calibration of the instrument becomes advisable, it is possible to upload a revised extinction coefficient file (UE). Also, in the future Satlantic may release an updated version of the instrument firmware, which the user can then upload onto the instrument (UP).

File transfers to the instrument employ the XMODEM protocol. Thus, after initiating an upload command, the host computer must transmit the desired file using that protocol. The HyperTerm terminal emulator (see Appendix: Using Windows® HyperTerminal) has built-in commands ("Send File") for this purpose.

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	D. OPERATION

Download commands

It is possible to download extinction coefficient (DE), log files (DL) and data files (DD, DAD). Downloading coefficient and log files is usually only necessary for trouble shooting. In some instances, Satlantic personnel may ask for the instrument message or error log to better identify the instrument status. In normal operation, downloading of data files is the most common action. It is possible to download a single file (DD) or to download all data files (DAD).

After a file has been downloaded, and a successful transfer has been confirmed, it may be useful to erase the file on flash disk, to make space for future data acquisitions. It is, however, impossible to retrieve a once erased file.

File transfers from the instrument employ the XMODEM or YMODEM protocol. The first step in every download operation is to choose the file to download. The second step is to choose the protocol. If the serial connection can handle a high baud rate and the file has a large size, it is advisable to increase the transfer rate. The change of the transfer rate in the ISUS instrument must be matched by a change in the terminal emulators transfer rate. For HyperTerm (see section L Appendix: Using Windows® HyperTerminal), the connection has to be disconnected before changing the baud rate and reconnecting. The instrument waits after changing its baud rate for 30 seconds before initiating the file transfer. At that time, the connecting computer must initiate a "Receive File" command using the selected transfer protocol. After the transfer has completed, the instrument will alert the user that it will switch back to the original baud rate.

For an even faster download, the USB connection can be used (see below).

Erase commands

It is possible to erase extinction coefficient (EE), message and error log files (EL), and data files (ED, EAD). Erasing extinction coefficient files is only useful when a new extinction coefficient file is to be uploaded. Message and error log files should be monitored and cleared periodically.

Erasing data files is more important. Data files can become quite large. Depending on the size of the flash disk and the output settings, a continuous operation of approximately 50 hours may cause the flash disk to fill. Thus, for operations of higher duration, instruments with an increased flash disk size should be used; alternatively, binary frame output is more compact.

Warning: Erased files cannot be retrieved!

Info Menu

The Info Menu provides information about the state of the instrument. It is identified by the ISUS_INFO> prompt.

Build Info

The currently installed version of the instrument firmware (i.e. the program currently running) is displayed.

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	D. OPERATION

Disk Info

The currently installed operating system version and disk usage are displayed.

Clock Info

The current system time is given. The instrument does know about time zones; all times are considered to be UTC (GMT) times. It is possible to set the clock at this menu point.

Pixel to Wavelength

For a selected spectrometer channel, the wavelength is printed.

Fitting parameters

It is possible to view the currently used fitting range. This range cannot be modified. It is part of the instrument calibration, and contained in the extinction coefficient file, which resides on the instrument flash disk.

Furthermore, it is possible to view all extinction coefficients currently used, and to reload them from flash disk.

Lamp On Time (Odometer)

The instrument maintains a lamp use timer. The lamp is rated at a lifetime of approximately 1000 hours, and the user may consider replacing an old lamp prior to a lengthy deployment. **Do not clear this timer!**

DAC menu

The ISUS instrument generates analog output of the measured nitrate and auxiliary fitting data (see the paragraph on Isolated Analog Output). The output voltage is a linear transformation of the measured data, and the linear relationship can be determined by utilizing the DAC menu functions. For a detailed description, see J Appendix: Interfacing the ISUS to a Seabird CTD Profiler.

USB / SCI Toggle Menu

The USB/SCI Menu allows switching between SCI and USB connection of the telemetry output. It is identified by the `ISUS_USB/SCI>` prompt.

SCI is the normal method of connection. USB is provided for faster download of data files. The ISUS interface does not change when switching between the two communication methods. It is, however, necessary to switch the physical connection from RS-232 to USB and to install a Virtual COM Port (VCP) driver on your computer. (See the appendix for a detailed description of the VCP driver installation.) Then, the USB connection appears like a regular serial connection in the terminal emulator.

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	D. OPERATION

Using the Menus

Checking instrument values

When turned on, the instrument will first send messages over its serial communication port. Then it waits for the operator to send an interrupt ('M'-key) for entering the menu. If no interrupt is received (the normal mode of operation), data acquisition will begin (CONTINUOUS mode) or operation may be suspended to resume up at a later time (SCHEDULED mode). The 'S'-key interrupts CONTINUOUS mode, and a following 'M' key will bring the instrument into the menu. An arbitrary key interrupts suspension in SCHEDULED mode, after which again the 'M'-key key will bring the instrument into the menu.

From here, the 'I'-key will bring the instrument into the `ISUS_INFO>` menu, which provides access various instrument status functions.

Setting up for Scheduled Deployment

In order to set up the ISUS into SCHEDULED operation mode, the operator must first enter the menu system (see section *How to reach the root menu*).

To switch into SCHEDULED mode, the operator must enter the *Setup Menu*, and in it the *Deployment Setup Menu*. The Operational Mode must be changed to SCHEDULED, and on the next power-up, the instrument will be in SCHEDULED mode. Leave the `ISUS_SETUP_DEPLOY>` menu using the 'Q' command, and then the `ISUS_SETUP>` menu, also using the 'Q' command. Confirm that the settings should be stored to be ready at next power-up. You should now be in the `ISUS>` root menu.

Now confirm the current schedule, as specified in the on-board `SCHEDULE.TXT` file. For this purpose, use the 'F' command to enter the `ISUS_FILE>` menu. The 'OS' (Output Schedule) command will print the current schedule to the terminal window. In order to change the current schedule, use the 'US' (Upload Schedule) command to load another `SCHEDULE.TXT` file onto the instrument. The format of the schedule file is defined in "I Appendix: A Schedule File Example".

In order to enter SCHEDULED mode, remove power from the instrument, wait 1 minute, return power, and monitor the instrument output. One of the initial output messages contains its current operational mode, and should be SCHEDULED. Shortly thereafter, a message detailing the next scheduled event will be displayed.

It is recommended to test a new schedule over a 24-hour period prior to any deployment.

Setting up for Continuous Deployment

Initially, an ISUS instrument will operate in CONTINUOUS mode. After changing the operating mode to some other setting, the operator must first enter the menu system (see section *How to reach the root menu*) in order to set it back to CONTINUOUS mode.

To switch into CONTINUOUS mode, the operator must enter the *Setup Menu*, and in it the *Deployment Setup Menu*. The Operational Mode must be changed to CONTINUOUS, and on the next power-up, the instrument will be in CONTINUOUS

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	D. OPERATION

mode. Leave the `ISUS_SETUP_DEPLOY>` menu using the 'Q' command, and then the `ISUS_SETUP>` menu, also using the 'Q' command. Confirm that the settings should be stored to be ready at next power-up. You should now be in the `ISUS>` root menu.

A Note About Power Removal

Most data loggers that utilize flash disks for data storage require a shutdown procedure to ensure that the log files are not corrupted or the instrument rendered unusable when power is removed. The ISUS has a design that helps prevent this from occurring, so that it is actually safe to simply remove power without following a shutdown procedure. A non-battery based power backup circuit is used, which provides power to the controller long enough for the flash log files to be safely closed. This can easily be observed when power is removed from the system by the displayed message:

Bad input power detected!

This message is displayed after all open files have been closed.

If possible, it is advisable to be cautious and stop logging before removing power. Simply entering the Root Menu before removing power is a safe procedure. **If the instrument is operating in Benchtop mode, this procedure is required.**

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	E. RECOVERY

E. RECOVERY

To recover the MBARI-ISUS, terminate data logging by issuing the stop command (the 'S' key) when it continuous mode. This is done over RS-232 port. Then simply remove the power connection, disconnect all cables, and replace all dummy connectors. When disconnecting a cable from the instrument, unscrew the locking sleeve, grasp firmly on the connector head and pull off the cable. **Do not twist or pull on the cable directly as this may damage the connectors or the cable. Always disconnect the power supply first.**

Always rinse the instrument with fresh water prior to storage in order to prevent corrosion. If seawater is allowed to remain in contact with the instrument in storage, particularly around bolts or other contacts of dissimilar metals, corrosion will occur. To not properly rinse the instrument before storage is considered misuse and warranty claims cannot be made under such circumstances.

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	F. MAINTENANCE

F. MAINTENANCE

Preventative Maintenance

The MBARI-ISUS requires little maintenance. Protecting it from impacts, rinsing it with fresh water after each use, careful cleaning of the probe and properly storing the instrument with the dummy connectors in place when not in use will prolong the life of the instrument.

If the instrument is not working properly the following troubleshooting techniques can be followed. If these are not successful, contact Satlantic for more information.

Cleaning the Probe

In order to limit the possibility of damaging the probe, we suggest leaving the probe guard in place and simply use a Q-tip applicator through the guard holes to clean the probe. However, if you feel it is necessary to remove the probe guard, you may simply unscrew the guard by hand (with a counter-clockwise rotation). **Never remove the probe retaining nut** – this is held in place with 2 to 4 countersunk screws. Doing so will likely damage the probe internally and flood the instrument!

To clean the probe, use the following procedure:

1. Acceptable cleaning agents include methanol or isopropyl alcohol using standard cleaning methods commonly used on soft coated optics. De-ionized water may be used, however it may leave spots that can affect transmission and absorption.
2. Do not soak the Q-tip or lens tissue with the cleaning agent. It will leave pools of liquid that will not dry properly. Just dampen the applicator with the agent.
3. The applicator should be moved over the probe in one direction and then discarded, or rotated to a different position so that contaminants are not rubbed across the surface.
4. Ensure that all probe surfaces are cleaned.
5. The probes should be rinsed with water or methanol before they are stored, or if they will not be used for a period of time.

The probes will have a small amount of carry over, so it may be necessary to rinse them off before moving to the next sample if no contamination is desired.

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	F. MAINTENANCE

Assembling the Biofouling Guard

This section outlines the steps involved in assembling the biofouling guard. Normally, you will only have to disassemble and reassemble the guard when the Nitex™ filter cloth is replaced (before each mooring deployment).

The following figure shows the items necessary to assemble the biofouling guard:

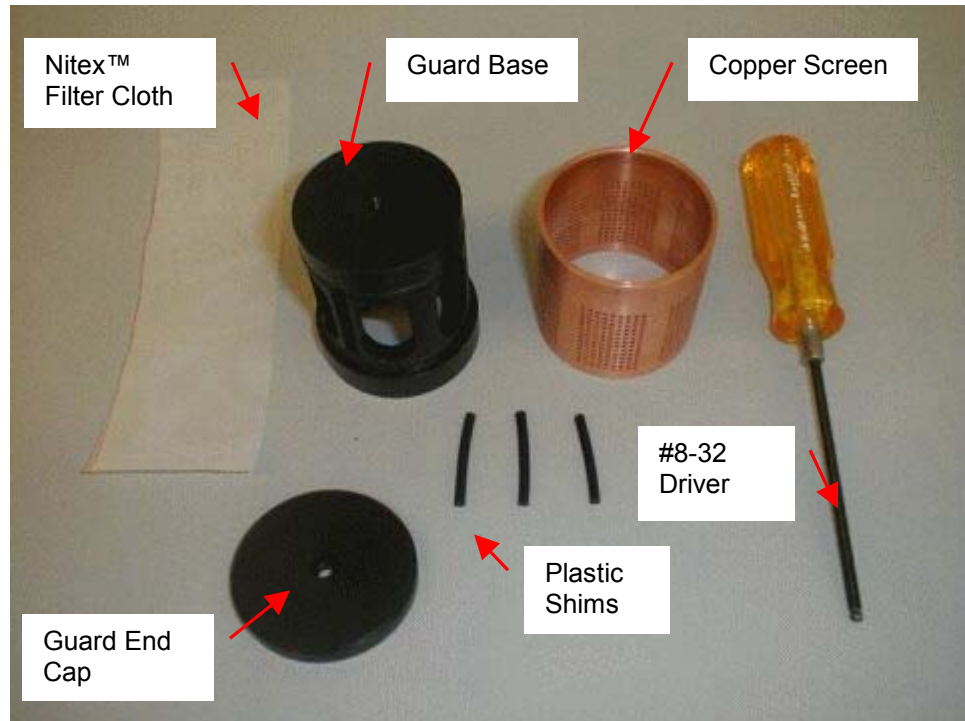


Figure F-1: Biofouling Guard Components

There are two 43x3 mm o-rings mounted on the guard base that help to hold the filter cloth against the copper screen. These o-rings only need to be replaced if they are damaged.

Assembling the guard is a delicate procedure and may take some time to complete. Be careful not to damage the probe when mounting it to the MBARI-ISUS.

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	F. MAINTENANCE

The following figure details the components of the biofouling guard, and shows how to assemble them.

Parts List		
ITEM	TITLE	QTY
1	8-32 x 1/4" SHCS	1
2	SCREEN RETAINER	1
3	BIOFOULING SCREEN	1
4	100 MICRON NITEX	1
5	43 x 3mm METRIC ORING	2
6	ISUS PROBE BIOFOULING GUARD	1
7	4-40 x 1/4" SHCS	1
8	2-130 BUNA ORING	1

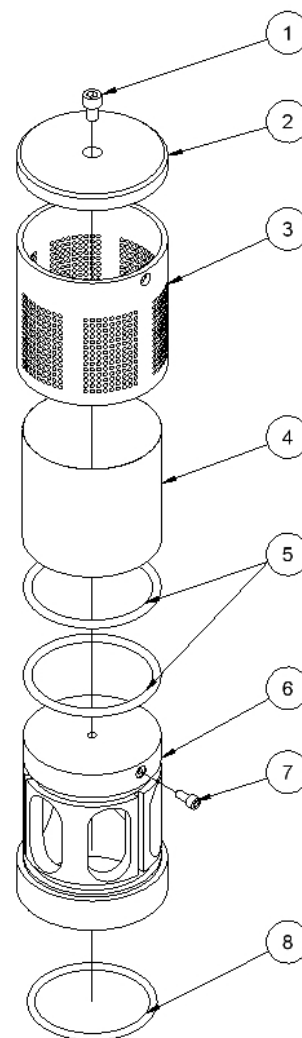


Figure F-2: Biofouling Guard Exploded Assembly

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	F. MAINTENANCE

Procedure

1. Ensure that the two 43x3 mm o-rings are installed. They are located at the top and the bottom of the biofouling guard base.
2. Wrap the Nitex™ filter cloth screen around the base. Ensure that the screen overlaps itself over any one of the three vertical shim grooves.



Figure F-3: Overlap the cloth over a groove

3. Wedge a plastic shim into the groove in the base where the filter cloth overlaps.



Figure F-4: Insert a plastic shim

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	F. MAINTENANCE

4. While holding the plastic shim in place, begin to slide the copper screen over the filter cloth as shown. The shim should be beneath a solid portion of the copper screen (no holes). Try to align the scribe marks on the base and copper screen. **Important: Ensure that the cloth does not wrinkle significantly as the copper is positioned.** This may take several attempts, as it is a relatively delicate procedure.



Figure F-5: Start positioning the copper screen

5. Insert the other two plastic shims into the remaining grooves.
6. Carefully slide the copper screen entirely over the Nitex™ and plastic shims. This will be a tight fit. Again, ensure that the cloth does not wrinkle as the copper slides into place. The shims serve to pull the cloth tight over the windows (holes) cut in to the guard base and ensures that the water cannot bypass the cloth.

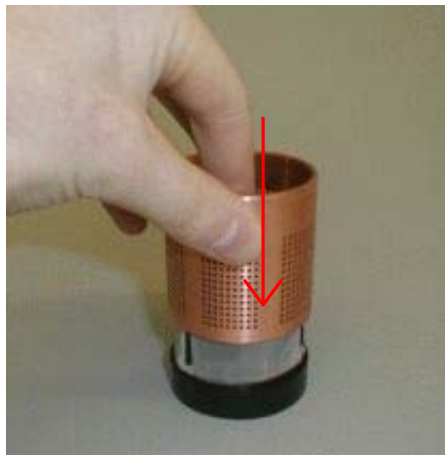


Figure F-6: Slide the copper screen in place

7. Check to make sure that the cloth is properly positioned under the copper screen by looking inside from the bottom of the guard. The cloth should be stretched tight across the base holes. If the copper screen is correctly positioned the solid vertical sections of the copper screen (no machined

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	F. MAINTENANCE

holes) portions will be directly over the plastic shims and should not be visible through the cloth.

8. Attach the end cap using the 1/4" long 8-32 nylon screw.

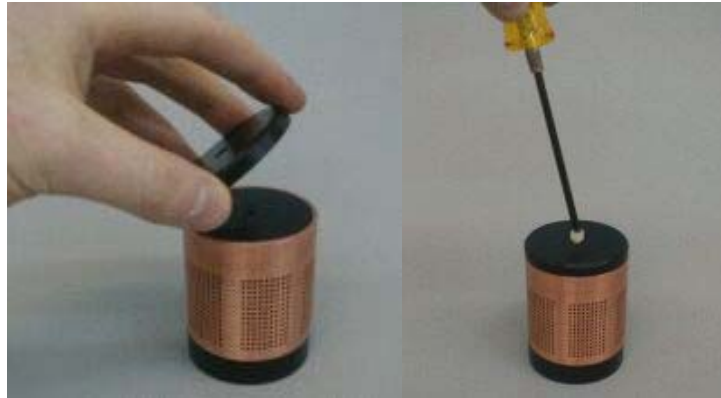


Figure F-7: Attach the end cap

9. The completed biofouling guard is now ready to be installed on the MBARI-ISUS. Check to ensure that the scribe marks on the copper screen and base are aligned.

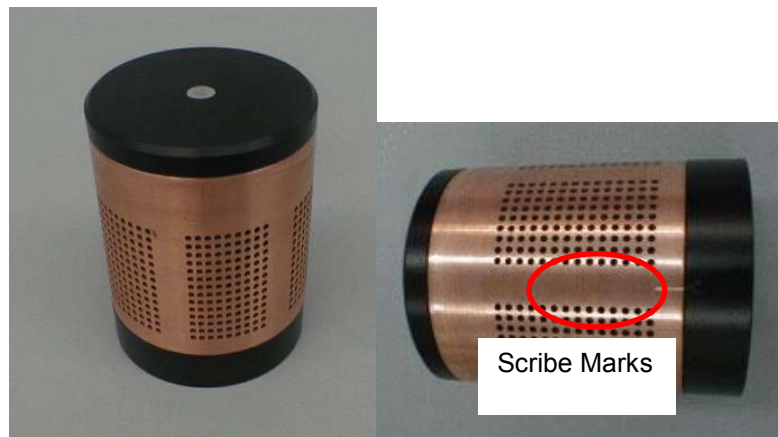


Figure F-8: Check for scribe marks

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	F. MAINTENANCE

10. To mount the guard to the MBARI-ISUS, simply thread it on to the probe retaining nut and tighten by hand. Only hold on to the guard base, as shown. If you try to mount the guard while holding on to the copper, the copper will rotate on the base. Ensure that the scribe marks still line up, otherwise water flow through the filter cloth may be affected!



Figure F-9: Mounting the guard



Figure F-10: The ISUS with Biofouling Guard

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	F. MAINTENANCE

Troubleshooting using a Terminal Emulator

If you are experiencing problems receiving data with your data acquisition software, there may be a problem with the instrument, its configuration, or its physical setup. You can confirm if the instrument is transmitting telemetry using a terminal emulator.

To do this, first complete the assembly procedure described in section C START UP. Connect the instrument to a computer running a terminal emulation program. For this test, you may use either the RS-232 interface directly, or the RS-422 interface through an appropriate level converter. You can therefore use the same physical configuration you would use in the field. However, if at a later point you need to gain access to the instruments menu system, you will need to use the RS-232 interface directly.

Once the instrument is powered up and is in normal operation with free-running telemetry, you should see a regular stream of data being output to the display. However, you should be able to periodically pick out the instruments frame header or synchronization string. This series of characters appears at the beginning of every frame of telemetry, as defined in your instruments calibration file. If you do not see the frame header, but you do see random characters, check that the baud rate of the terminal emulator is the same as for the instrument. If you so not see anything at all, make sure that no other application is using the serial port of the computer. If this checks out, there may be a hardware problem.

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	F. MAINTENANCE

Troubleshooting for Hardware Problems

If a telemetry check using a terminal emulator failed to show any telemetry, you should check the physical connections of your instrument and supporting equipment.

To perform hardware checks, a multimeter with DC voltage measurement, resistance measurement, and continuity check capability is required.

WARNING! While checking voltages, extreme care should be used so as not to short the probe leads. A shorted power supply or battery can output many amperes of current, potentially harming the user, starting fires, or damaging equipment.

Check Connections

The cable connections of the system should be checked for continuity and correctness. Make sure that all Subconn[®] connectors are free of dirt and lightly lubricated before mating. Do not use petroleum-based lubricants. Satlantic recommends using a light coating of DC-111 silicone grease (made by Dow Corning[®]) on the male pins prior to connection. Also, ensure that the connections are complete and, if applicable, the locking sleeves are secure.

- Check that the power cable is properly connected to the power supply and the instrument.
- Check that all instrument interconnect cables are in place and properly connected.
- Check that the RS-232 cable is connected to the correct PC communications port.

Check the Supply Voltage

To check voltages, a multimeter with DC voltage measurement is required.

Procedure:

1. Set the multimeter to measure a DC voltage.
2. If using a battery as the power source, measure the voltage directly at the battery terminals with the multimeter. A new or fully charged 12 V battery usually measures in the 13 - 15 V range. If the voltage is low (under 11 V) then recharge or replace the battery. If using a DC power supply, set the output voltage in the range from 10 - 20 V, and check the voltage with the multimeter.
3. Connect the power supply cable to the power source.
4. **Being extremely careful not to short the probe leads**, measure the voltage between the pins on the supply cable. It should read approximately the same as the measurement taken in step 2. If the voltages are not the same, recheck the power supply cable connections. If the voltages are still not the same, the cable is likely broken and will need repair. A wire break can be confirmed with a *continuity check*.

	SYSTEM
	MBARI-ISUS
	SECTION
	F. MAINTENANCE

5. If the voltage is within tolerance, connect the power supply cable to the ISUS.
6. Again, measure the voltage at the power supply terminals. The voltage should remain approximately the same as before, although there may be a small voltage drop when using a battery (battery voltage drops under load). If there is a significant voltage drop, disconnect the power immediately and check for shorts in the cable.

Check Cable Continuity

Often, system problems can be traced to cable breaks or shorts. Usually, these cable failures are a result of improper handling or storage. Cable continuity can be checked as outlined below. **Make sure all cables are completely disconnected before performing this test.**

Procedure:

1. Set the multimeter to measure continuity. The resistance measurement setting can also be used.
2. Check for continuity by measuring from pin 1 on one end of the cable to pin 1 on the other end. The meter should confirm that the connection is continuous by either giving an audible signal or measuring a low resistance. If there is not continuity, there is a break in the cable, which will require repair.
3. Repeat step 2 for all pins in the cable.
4. Check for shorts from pin 1 to all other pins by keeping one probe lead on pin 1 and touching the other probe lead to each of the other pins in the same connector in turn. Repeat this for all pins on the cable to make sure that all the pins are isolated from each other. The meter should read this as open or measure a very high resistance. If any of the pins are not isolated, there is a short in the cable, which will require repair.

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	G. WARRANTY

G. WARRANTY

Warranty Period

The MBARI-ISUS is under one-year parts and labor warranty from date of purchase.

Restrictions

Warranty does not apply to products that are deemed by Satlantic to be damaged by misuse, abuse, accident, or modifications by the customer. The warranty is considered void if any optical or mechanical housing is opened. In addition, the warranty is void if the warranty seal is removed, broken or otherwise damaged.

Provisions

During the one year from date of purchase warranty period, Satlantic will replace or repair, as deemed necessary, components that are defective, except as noted above, without charge to the customer.

Returns

To return products to Satlantic, whether under warranty or not, contact the Satlantic Customer Support Department and request a Returned Material Authorization (RMA) number and provide shipping details. All claims under warranty must be made promptly after occurrence of circumstances giving rise thereto and must be received by Satlantic within the applicable warranty period. Such claims should state clearly the product serial number, date of purchase (and proof thereof) and a full description of the circumstances giving rise to the claim. All replacement parts and/or products covered under the warranty period become the property of Satlantic Inc.

Liability

If your MBARI-ISUS should be defective or fail to be in good working order the customer's sole remedy shall be repair or replacement as stated above. In no event will Satlantic Inc. be liable for any damages, including loss of profits, loss of savings or other incidental or consequential damages arising from the use or inability to use the MBARI-ISUS or components thereof.

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	H. CONTACT INFORMATION

H. CONTACT INFORMATION

If you have any problems, questions, suggestions, or comments about the instrument or manual, please contact us.

Location

Satlantic Inc.

3481 North Marginal Road
Halifax, Nova Scotia
B3K 5X8 Canada

PHONE: (902) 492-4780

FAX: (902) 492-4781.

Email: Technical Support: support@satlantic.com

General Inquiries: info@satlantic.com

Web: <http://www.satlantic.com>

Business Hours

Satlantic is normally open for business between the hours of 9:00 AM and 5:00 PM Atlantic Standard Time. The Atlantic Standard Time zone is one hour ahead of the Eastern Standard Time zone. Normally, in the winter, AST is UTC-4, but it changes to UTC-3 during the daylight saving time period in the summer. Daylight saving time is in effect from 2:00 AM on the first Sunday in April until 2:00 AM on the last Sunday in October.

Satlantic is not open for business during Canada's statutory holidays, which are as follows:

New Year's Day	January 1st
Good Friday	The Friday before Easter Sunday (Easter Sunday is the first Sunday after the full moon on or following March 21 st , or one week later if the full moon falls on Sunday)
Victoria Day	The first Monday before May 25 th
Canada Day	July 1 st
Halifax Natal Day	The first Monday in August
Labor Day	The first Monday in September
Thanksgiving Day	The second Monday in October
Remembrance Day	November 11 th
Christmas Day	December 25 th
Boxing Day	December 26 th

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	I. SCHEDULE FILE EXAMPLE

I. Appendix: A Schedule File Example

Schedule files define a daily schedule. All events must be in chronological order. The instrument will go through the schedule file line by line, comparing its last event time to the time of the event in that line. As soon as an event time later than the previous event is encountered, the instrument will stop reading the schedule file and prepare to execute that event at the requested time. This preparation usually means that the instrument will enter a low power suspension mode, and wake up at the requested time.

Care has been taken in the design of the scheduled operation to not miss any event in case an action requires more time then the time gap to the following event. For example, it usually takes 25 seconds for the ISUS to power up. If there is then an acquisition request too close to the power up event (as shown in the example),

```
00:06:30 POWER      +ISUS
00:06:35 ACQUIRE 120 ISUS
00:08:35 POWER      -ISUS
```

the next event, which was scheduled for 00:06:35 will start late, and be cut short because the power down event at 00:08:35 will overwrite the requested data acquisition of 120 seconds.

Schedule files may contain comment lines starting with the '#'-sign. Empty lines and lines containing only space characters are ignored. The parsing of schedule files is not very robust, so incorrectly formatted files may cause unexpected behavior. Therefore, it is recommended to test a new schedule by acquiring data in scheduled mode for a 24 hour period prior to deployment.

Below an example of a schedule file is given. An instrument set up with this schedule would acquire data every four hours for a period of 20 seconds.

```
#
# This is an ISUS schedule file
# for data acquisition taking place
# every 4 hours.
#

00:06:30 POWER      +ISUS
00:07:15 ACQUIRE 20 ISUS
00:07:37 POWER      -ISUS

04:06:30 POWER      +ISUS
04:07:15 ACQUIRE 20 ISUS
04:07:37 POWER      -ISUS

08:06:30 POWER      +ISUS
08:07:15 ACQUIRE 20 ISUS
08:07:37 POWER      -ISUS

12:06:30 POWER      +ISUS
12:07:15 ACQUIRE 20 ISUS
12:07:37 POWER      -ISUS

16:06:30 POWER      +ISUS
16:07:15 ACQUIRE 20 ISUS
16:07:37 POWER      -ISUS

20:06:30 POWER      +ISUS
20:07:15 ACQUIRE 20 ISUS
20:07:37 POWER      -ISUS
```

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	J. INTERFACING TO A SEABIRD CTD

J. Appendix: Interfacing the ISUS to a Seabird CTD Profiler

The purpose of this document is to describe a generic procedure for interfacing the ISUS to a Sea-Bird CTD profiler (such as the SBE 9, SBE 19, or SBE 25). Testing has been done at Satlantic with the SBE 19, but the same general procedure should work for any of the listed series of profilers.

Important Note: This document refers to ISUS units v2 and later. For earlier instrument versions, please refer to the original document or simply replace the nitrate and auxiliary minimum values to "0" in the coefficient determination calculations.

Background

Along with its serial telemetry, the ISUS generates an analog voltage representation of the calculated nitrate and auxiliary values. These voltages are generated from a precision 16-bit digital-to-analog converter (DAC) and will lie in the range of 0 to 4.096 Volts. These voltages can be recorded by the CTD profiler, allowing the data to be merged with the CTD data.

This application note assumes that the user has some familiarity with their CTD system and has knowledge of Sea-Bird's SeaTerm and SeaSave software, and that the latest version of these software packages are installed on your logging computer.

Setup

Physical Setup

You will need a PC with two spare comm. ports to configure the ISUS and CTD profiler.

1. Ensure that the ISUS and CTD power is off.
2. Connect the ISUS/CTD interface cable to the ISUS and CTD profiler. On ISUS SN001 and SN002, the ISUS connector will be a MCBH4F; future ISUS units will have an MCBH6F. The CTD connector will depend on your CTD system, but it is usually an AG-306-HP. Here, we assume the single-ended input is used.
3. Connect the CTD to a spare comm. port on your computer.

ISUS Setup

1. Connect the configuration cable to the ISUS 3-pin connector.
2. Connect the DB9 to a spare port on your PC.
3. Using a terminal emulator (such as HyperTerminal) set up the port for a baudrate of 38400 bps, with no flow control, 8 data bits, 1 stop bit, and no parity.
4. Turn on the ISUS power. Allow the ISUS to go through its initialization; when the startup countdown begins, press the 'M' key to enter the configuration menu.


Before proceeding, you will need to set up the CTD profiler.

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	J. INTERFACING TO A SEABIRD CTD

CTD Setup


The ISUS outputs two analog voltages to represent nitrate concentration and auxiliary fitting value. This requires that the CTD be configured to measure external voltages.

1. Connect to the CTD using Sea-Bird's *SeaTerm* program
2. When communication with the CTD has been established, configure the CTD to sample external voltages. With the SBE19, the **SV2** command is used, but this will depend on your CTD and other auxiliary instruments that are connected.
3. Turn off the CTD.
4. Exit the *SeaTerm* program.
5. Start the *SeaSave* program. Our testing has been done using *SeaSave v 5.26F*
6. From the **Configure** menu, select **New Instrument Configuration -> Create New Instrument Configuration**. If you already have a configuration file for your system you can select **Modify Selected Instrument Configuration**. The following steps assume a SBE 19 is being used, but the steps will be similar for all CTDs.

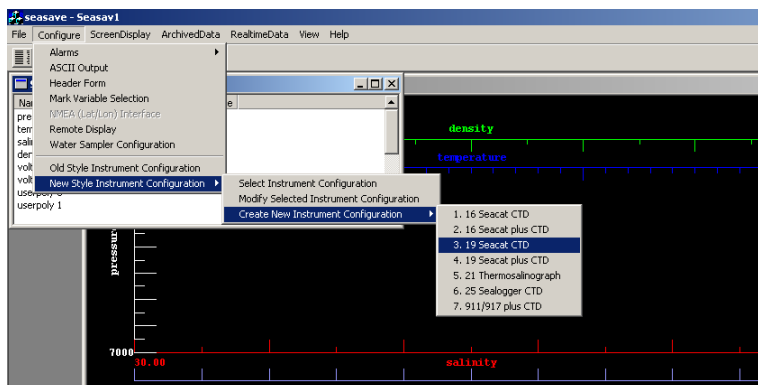


7. Select your CTD from the list. A window will open that allows you to edit the various configuration settings.
8. Select the pressure sensor type from the drop down list.
9. Set the external voltage channels to 2.
10. Select the CTD firmware version
11. Set the number of 0.5 second intervals – this depends on the CTD settings.
12. Double click on the *Temperature* field in the Sensor list. Enter (or verify) the calibration coefficients, then click ok.
13. Double click on the *Conductivity* field and enter (or verify) the calibration coefficients. Click OK.
14. Double click on the *Pressure* field and again enter the calibration coefficients.
15. Do not enter any information in the *User Polynomial* and *User Polynomial 2* fields—we still have to determine these coefficients. The display will be similar to that shown below:


 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	J. INTERFACING TO A SEABIRD CTD

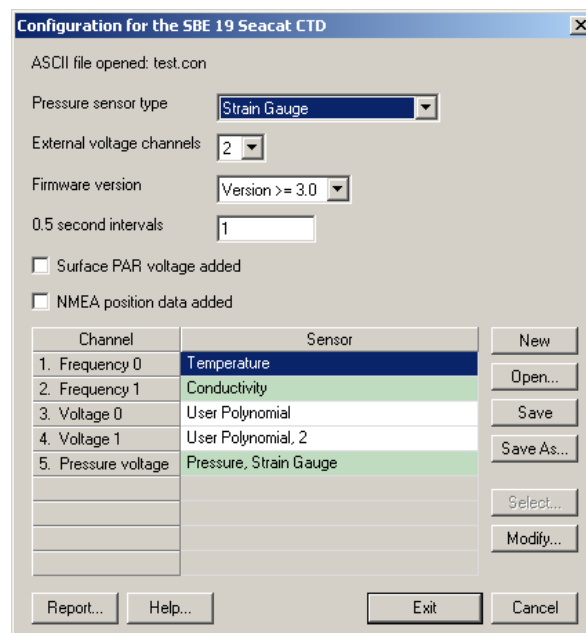

16. Click **“Save As”** and enter a name for this configuration file, such as “ISUS.con”. Exit the configuration window.
17. From the main SeaSave window, click **ScreenDisplay -> Add New Display Window -> Fixed Display**.

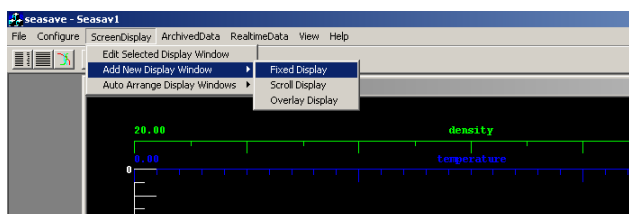


18. Right-click this window, then select Setup. The **Display Setup** dialog box will be displayed.

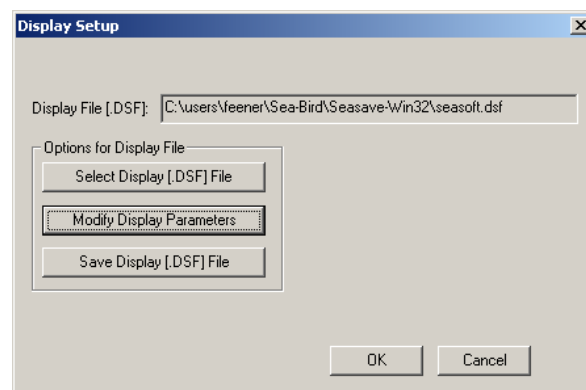

19. Click the **Modify Display Parameters** button. The **Fixed Display Variables** set up window will be displayed.


 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	J. INTERFACING TO A SEABIRD CTD

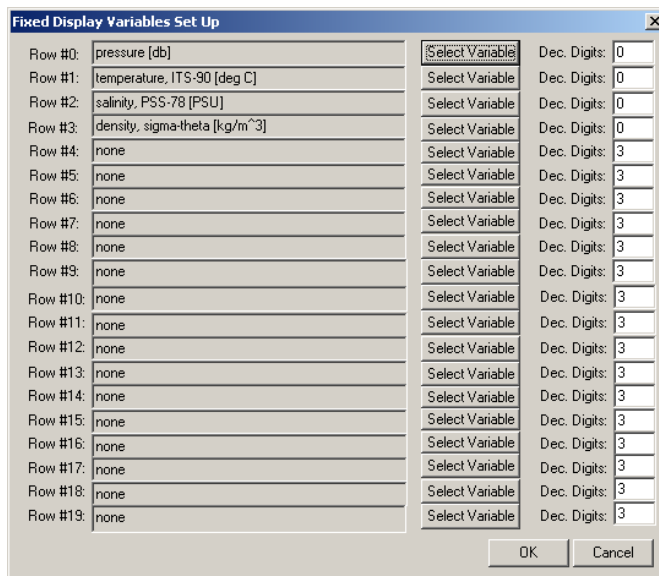

The dialog box 'Fixed Display Variables Set Up' contains a table with 20 rows. The first four rows are pre-filled with variables: pressure [db], temperature, ITS-90 [deg C], salinity, PSS-78 [PSU], density, sigma-theta [kg/m^3], and the remaining 16 rows are set to 'none'. Each row has a 'Select Variable' button and a 'Dec. Digits' input field. The 'Dec. Digits' for the first four rows is 0, and for the remaining 16 rows, it is 3.

Row #	Variable	Dec. Digits
Row #0:	pressure [db]	0
Row #1:	temperature, ITS-90 [deg C]	0
Row #2:	salinity, PSS-78 [PSU]	0
Row #3:	density, sigma-theta [kg/m^3]	0
Row #4:	none	3
Row #5:	none	3
Row #6:	none	3
Row #7:	none	3
Row #8:	none	3
Row #9:	none	3
Row #10:	none	3
Row #11:	none	3
Row #12:	none	3
Row #13:	none	3
Row #14:	none	3
Row #15:	none	3
Row #16:	none	3
Row #17:	none	3
Row #18:	none	3
Row #19:	none	3


20. Set up the default variables as desired.
21. Add the nitrate concentration voltage to an unused row by clicking the **Select Variable** button. From the drop-down list, select *voltage 0*. Display 6 decimal places. This is the nitrate voltage as measured by the CTD.

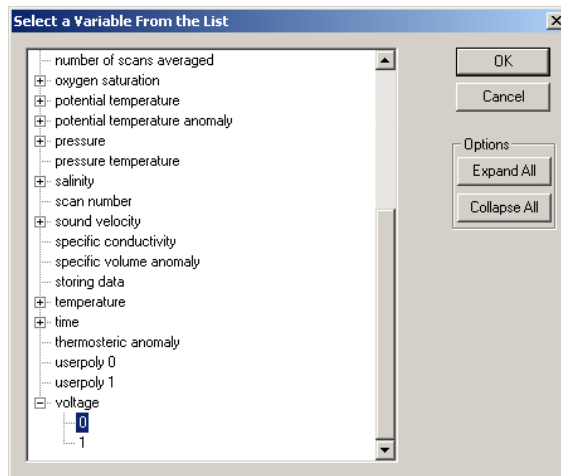

The dialog box 'Select a Variable From the List' shows a list of variables. The 'voltage' category is expanded, showing 'voltage 0' and 'voltage 1'. The 'voltage 0' option is selected. There are 'OK', 'Cancel', 'Expand All', and 'Collapse All' buttons.

22. On another unused row, click **Select Variable**. From the drop down list, select *voltage 1*. Display 6 decimal places. This is the auxiliary voltage as measured by the CTD.
23. On the next unused row, click **Select Variable**. Select *userpoly 0*. Display 3 decimal places. This will eventually display the calculated nitrate concentration
24. On the next unused row, click **Select Variable**. Select *userpoly 1*. Display 3 decimal places. This will eventually display the calculated auxiliary value.
25. On the next unused row, click **Select Variable**. Select *time->seconds*. One decimal place is sufficient. Your window should look similar to the following:


 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	J. INTERFACING TO A SEABIRD CTD

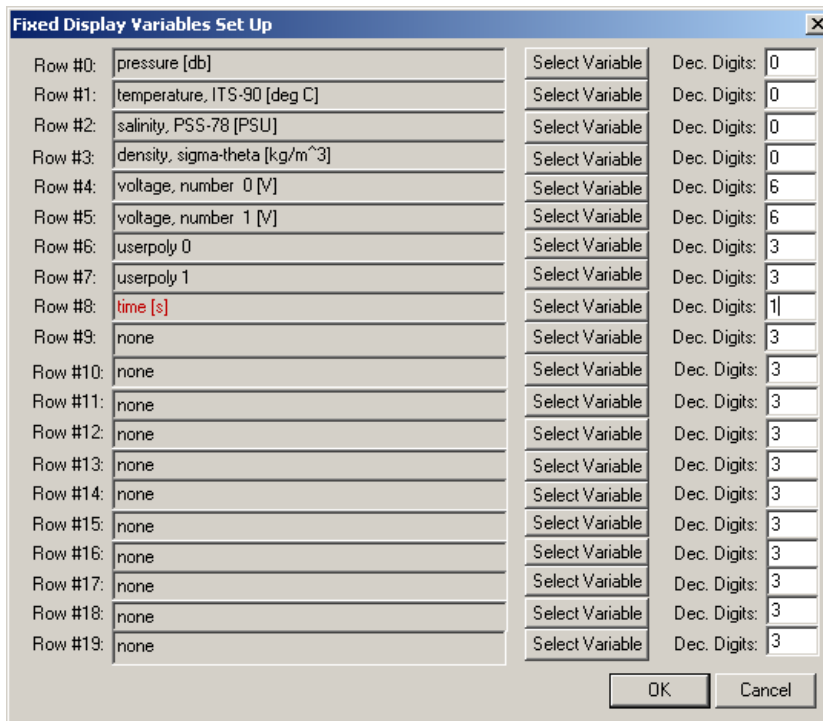

The dialog box titled "Fixed Display Variables Set Up" contains a table with 20 rows. Each row has a "Row #", a variable name, a "Select Variable" button, and a "Dec. Digits" input field. The variables are: pressure [db], temperature, ITS-90 [deg C], salinity, PSS-78 [PSU], density, sigma-theta [kg/m^3], voltage, number 0 [V], voltage, number 1 [V], userpoly 0, userpoly 1, time [s] (highlighted in red), and then 10 rows of "none". The "Dec. Digits" values are: 0, 0, 0, 0, 6, 6, 3, 3, 1, 3, and then 10 times 3. At the bottom are "OK" and "Cancel" buttons.

Row #	Variable	Select Variable	Dec. Digits
Row #0:	pressure [db]	Select Variable	0
Row #1:	temperature, ITS-90 [deg C]	Select Variable	0
Row #2:	salinity, PSS-78 [PSU]	Select Variable	0
Row #3:	density, sigma-theta [kg/m^3]	Select Variable	0
Row #4:	voltage, number 0 [V]	Select Variable	6
Row #5:	voltage, number 1 [V]	Select Variable	6
Row #6:	userpoly 0	Select Variable	3
Row #7:	userpoly 1	Select Variable	3
Row #8:	time [s]	Select Variable	1
Row #9:	none	Select Variable	3
Row #10:	none	Select Variable	3
Row #11:	none	Select Variable	3
Row #12:	none	Select Variable	3
Row #13:	none	Select Variable	3
Row #14:	none	Select Variable	3
Row #15:	none	Select Variable	3
Row #16:	none	Select Variable	3
Row #17:	none	Select Variable	3
Row #18:	none	Select Variable	3
Row #19:	none	Select Variable	3

26. Click OK to close the **Fixed Display Variables** set up window.
27. From the **Display Setup** window, click the **Save Display [.DSF] File** button. Give it a name such as "ISUS.DSF"
28. In the main **SeaSave** window, place and size the fixed display window as desired.
29. From the main window, click RealTimeData -> Start Acquisition. The following dialog box will be displayed:

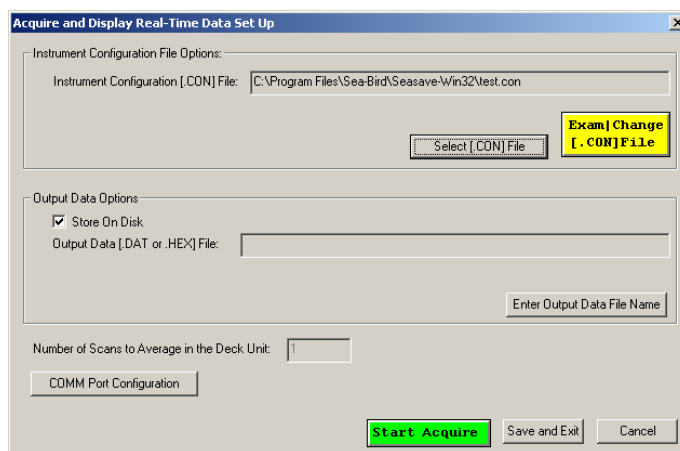

The dialog box titled "Acquire and Display Real-Time Data Set Up" has three sections. The first section, "Instrument Configuration File Options:", has a text field for "Instrument Configuration [.CON] File:" containing "C:\Program Files\Sea-Bird\Seasave-Win32\test.con", a "Select [.CON] File" button, and a yellow "Exam| Change [.CON] File" button. The second section, "Output Data Options:", has a checked "Store On Disk" checkbox, a text field for "Output Data [.DAT or .HEX] File:", and an "Enter Output Data File Name" button. The third section has a "Number of Scans to Average in the Deck Unit:" text field with the value "1" and a "COMM Port Configuration" button. At the bottom are "Start Acquire" (green), "Save and Exit", and "Cancel" buttons.

30. Select the proper .CON file (ISUS.con in our example).
31. Uncheck the **Store on Disk** box – you don't need to log this example
32. Click the **COMM Port Configuration** button. Configure it to reflect the CTD profiler settings.

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	J. INTERFACING TO A SEABIRD CTD

33. Press the **Start Acquire** button.
34. Turn on the CTD's magnetic switch. After a few seconds, you should see data from the CTD being updated in the display window.

You now need to perform an ISUS/CTD calibration. Keep the CTD running.

ISUS/CTD Calibration

The following procedure will allow you to calibrate the ISUS with your CTD. This is a linear 2-point voltage calibration.

1. From the ISUS> menu, press the 'I' key followed by Enter. This will take you to the ISUS_INFO> menu.
2. Press 'A <Enter>' to reach the ISUS_DAC> menu.
3. At the ISUS_DAC> prompt, press 'L <Enter>' to generate the minimal output voltage at both DACs (normally 2000 counts). This ensures a small positive offset voltage.
4. Refer to the Seasave program.
Record the voltage displayed for "voltage, number 0". Call this voltage V_{0L} . This number should be just over 0V. For our system, it is 0.036630 V.
Record the voltage displayed for "voltage, number 1". Call this voltage V_{1L} . This number should be just over 0V. For our system, it is 0.036630 V
5. At the ISUS_DAC> prompt, press 'M <Enter>' to generate the maximal output voltage at both DACs (normally 64000 counts).
6. Refer to the SeaSave program.
Record the voltage displayed for "voltage, number 0". Call this voltage V_{0M} . This number should be less than 4V. For our system, it is 3.908425 V.
Record the voltage displayed for "voltage, number 1". Call this voltage V_{1M} . This number should be less than 4V. For our system, it is 3.912088 V.
7. Now, we have to calculate the A0 and A1 coefficients for SeaSave using the linear $\text{Concentration} = A1 \text{ V} + A0$ relation. For nitrate (voltage 0), the A1 and A0 coefficients are given by

$$A1_{\text{NO}_3^-} = (\text{NO}_3^-_{\text{max}} - \text{NO}_3^-_{\text{min}}) / (V_{0M} - V_{0L})$$

$$A0_{\text{NO}_3^-} = \text{NO}_3^-_{\text{min}} - A1_{\text{NO}_3^-} * V_{0L}$$

$\text{NO}_3^-_{\text{max}}$ is the maximum allowed nitrate concentration; the default value is 100 μM . $\text{NO}_3^-_{\text{min}}$ is the minimum allowed nitrate concentration; the default value is $-5 \mu\text{M}$ to allow for small negative offsets in the nitrate calculation.

The above values give $A1_{\text{NO}_3} = 27.093572$ and $A0_{\text{NO}_3} = -5.992438$

Similarly, for auxiliary (voltage 1), the A1 and A0 coefficients are given by

$$A1_{\text{Auxiliary}} = (\text{AUXILIARY}_{\text{max}} - \text{AUXILIARY}_{\text{min}}) / (V_{1M} - V_{1L})$$

$$A0_{\text{Auxiliary}} = \text{AUXILIARY}_{\text{min}} - A1_{\text{Auxiliary}} * V_{1L}$$


$\text{AUXILIARY}_{\text{max}}$ is the maximum allowed auxiliary value; the default value is 50. $\text{AUXILIARY}_{\text{min}}$ is the minimum allowed auxiliary value; the default value is -5 to allow for small negative offsets in the fitting calculation.

The above values give $A1_{\text{Auxiliary}} = 14.191871$ and $A0_{\text{Auxiliary}} = -5.519848$.

The exact values for a specific instrument may vary slightly.

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	J. INTERFACING TO A SEABIRD CTD

1. Now that we have our coefficients, we need to enter them in our SeaSave program. In SeaSave, click **RealTimeData -> Stop Acquisition**.
2. Turn off the CTD's magnetic switch
3. From the **Configure** menu, select **New Style Instrument Configuration -> Modify Selected Instrument Configuration**.

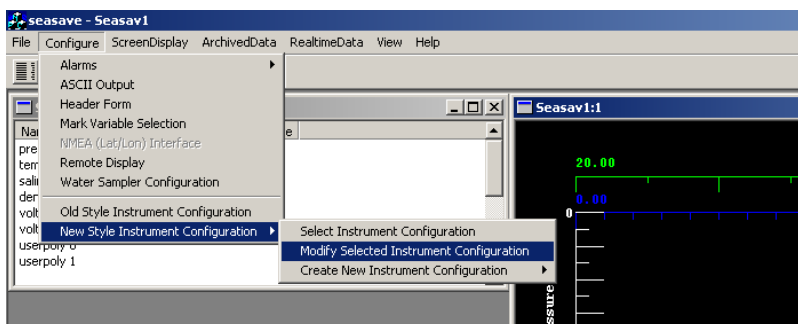

4. From the configuration dialog box, double click the *User Polynomial* field. Enter the calculated A0 and A1 coefficients for the nitrate voltage. Fill in the serial number and date fields as well.
5. From the configuration dialog box, double click the *User Polynomial, 2* field. Enter the calculated A0 and A1 coefficients for the auxiliary fitting voltage. Fill in the serial number and date fields as well.
6. Click save. The calibration coefficients will be stored to the .con file.
7. Restart the CTD by clicking **RealTimeData -> Start Acquisition**. Turn on the magnetic switch. After a few seconds, the data in the display window will be updated.
8. Observe the userpoly 0 (nitrate) and userpoly 1 (auxiliary) fields.
9. Confirm a valid calibration by generating minimum ('L' command), midscale ('C' command), and maximum ('M' command) DAC output from within the ISUS_DAC> menu. The readings for these outputs should be -5, 47.5 and 100 μM NO₃ and -5, 22.5 and 50, respectively:
At the ISUS_DAC> prompt, press 'L <Enter>'.
SeaSave should read of about -5 μM and an auxiliary value of -5.
At the ISUS_DAC> prompt, press 'C <Enter>'.
SeaSave should read of about 47.5 μM and an auxiliary value of 22.5.
At the ISUS_DAC> prompt, press 'M <Enter>'.
SeaSave should read of about 100 μM and an auxiliary value of 50.
10. The CTD and ISUS are now calibrated. Stop the acquisition in SeaSave, and turn off the magnetic switch. Ensure you have saved the configurations, then exit SeaSave
11. Remove the ISUS power.

The next time you start SeaSave, simply load the ISUS configuration file by selecting **Configure -> New Style Instrument Configuration -> Select Instrument Configuration**, then select the ISUS.con file.

Set up the various displays as you see fit. You can now display a plot of nitrate concentration against CTD depth by simply adding userpoly 0 to the plot. Experiment to create a plot that suits you.

 Operation Manual	SYSTEM
	MBARI-ISUS
	SECTION
	K. USB VPC INSTALLATION

K. Appendix: Installing USB Virtual COM Port Drivers

To communicate with the ISUS using the USB port, VCP (Virtual COM Port) drivers must be installed on the computer that will be connected to the ISUS. These drivers allow a USB port to emulate a standard serial port so that terminal emulators such as Windows HyperTerminal may be used. The drivers are included on the compact disc provided with your ISUS system. Drivers are included for Microsoft Windows XP, Windows 2000, and Windows 98, and must be installed before connecting the ISUS to the computer's USB port.

The CD accompanying the instrument contains a folder "USB required files" containing two .zip files. The first file, P8002104.zip, is WHQL Certified for Windows XP, released on 7-22-2002. However, a more recent release dated 10-03-2004 is available in the r9052154.zip file, and is the version used by Satlantic during testing on a PC running Windows XP SP2. You may wish to check with the USB component manufacturers for more recent releases at <http://www.dlpdesign.com> or <http://www.ftdichip.com>. If you encounter problems during installation, or for a more detailed installation procedure, refer to the appropriate installation guide provided in the file folder. The appropriate device is the FT245BM.

To install the VCP drivers on your PC, use the following procedure:

1. Unzip the desired file onto your hard drive. Choose an easy-to-find location (e.g. C:\Program Files\Satlantic\USBDrivers) to make future updates easy.
2. Connect the ISUS to a spare USB port on your PC. Note that the ISUS USB hardware is powered from the PC's USB port, so a separate power source for the ISUS is not required.
3. The Windows Found New Hardware wizard should start automatically. When it asks to connect to Windows Update to search for software, select "No, not this time". Click next to continue.
4. Select "Install from a list or specific location" and click next to continue.
5. Instruct Windows to "Search for the best driver in these locations"; uncheck the "Search removable media box" and select "Include this location in the search"; browse to the folder where you've unzipped the drivers and click next to continue.
6. If you are using the non-WHQL certified drivers, you should see a warning message; click on "Continue Anyway" to proceed. Windows will then copy the required driver files; you should see "USB Serial Converter" in the installation window.
7. Click finish when the installation is completed. Keep the USB port connected to the ISUS.
8. The COM port emulation driver must be installed next, and should be initiated automatically by the PC with the Windows Found New Hardware Wizard; repeat steps 3 to 7.
9. When the installation is complete, open the Device Manager (located in "Control Panel\System", then select the "Hardware" tab and then click the "Device Manager" button).

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	K. USB VPC INSTALLATION

10. Select “View->Devices by Type”. The ISUS should appear as an additional COM port with the label “USB Serial Port” and an indication of the COM port number it is associated with (e.g. COM5). Depending on the terminal emulator you intend to use, you may have to change the COM port number association to a value that can be accessed by the program. For example, some emulators can only access 4 COM ports, so the COM5 above would have to be changed to a lower, unused value. To change the association, double-click on the USB Serial Port in the Device Manager, select the “Port Settings” tab, and click the “Advanced” button. A drop down list allows the port number to be selected.

The USB VCP Drivers should now be successfully installed, and you may remove the USB connection.

 Operation Manual	SYSTEM
	SECTION
	MBARI-ISUS
	L. USING HYPERTERM

L. Appendix: Using Windows® HyperTerminal

Most Satlantic instruments use serial communications for interfacing with the outside world. This type of interface is simple to operate and convenient for applications such as these. Although the instrument's telemetry interface is used mainly for broadcasting telemetry, it can also be used to establish a human user interface to configure and test the instrument. A Terminal emulation program is needed to use this interface, or to directly monitor instrument telemetry. These programs have many common uses such as communicating with bulletin board services, remotely logging on to other computers on a network, or communicating directly with your modem. You can also use it for direct communications with a serial port, which is ideal for communicating with Satlantic instruments.

There are many types of terminal emulation programs. Most of these are suitable for this application, so you are free to use whatever terminal emulator you are comfortable with. If you are unfamiliar with terminal emulators, this tutorial will help you get started with the emulator program that is distributed with Windows® called *HyperTerminal*.

Installation of HyperTerm

The first step in using HyperTerminal is to make sure it is installed. One way of starting the application is to use the **Start** button on your desktop. Select "**Run...**" and type "hypترم" in the space provided. If the program cannot be found, it has probably not been installed. You can also check for a HyperTerminal installation by selecting **Start -> Programs -> Accessories**. If a **HyperTerminal** folder is visible in the **Accessories** folder, HyperTerminal is already installed.

If HyperTerminal is not installed, it is an easy matter to install it now. In Windows 95/98, open the Control Panel by selecting **Start -> Control Panel**. Open the **Add/Remove Programs** control. When you have setup these dialog boxes as shown below, press the OK button in each one. Windows will now install HyperTerminal on your computer. You may need your Windows Setup Disks/CD for this to complete. Just follow the on-screen instructions.

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	L. USING HYPERTERM

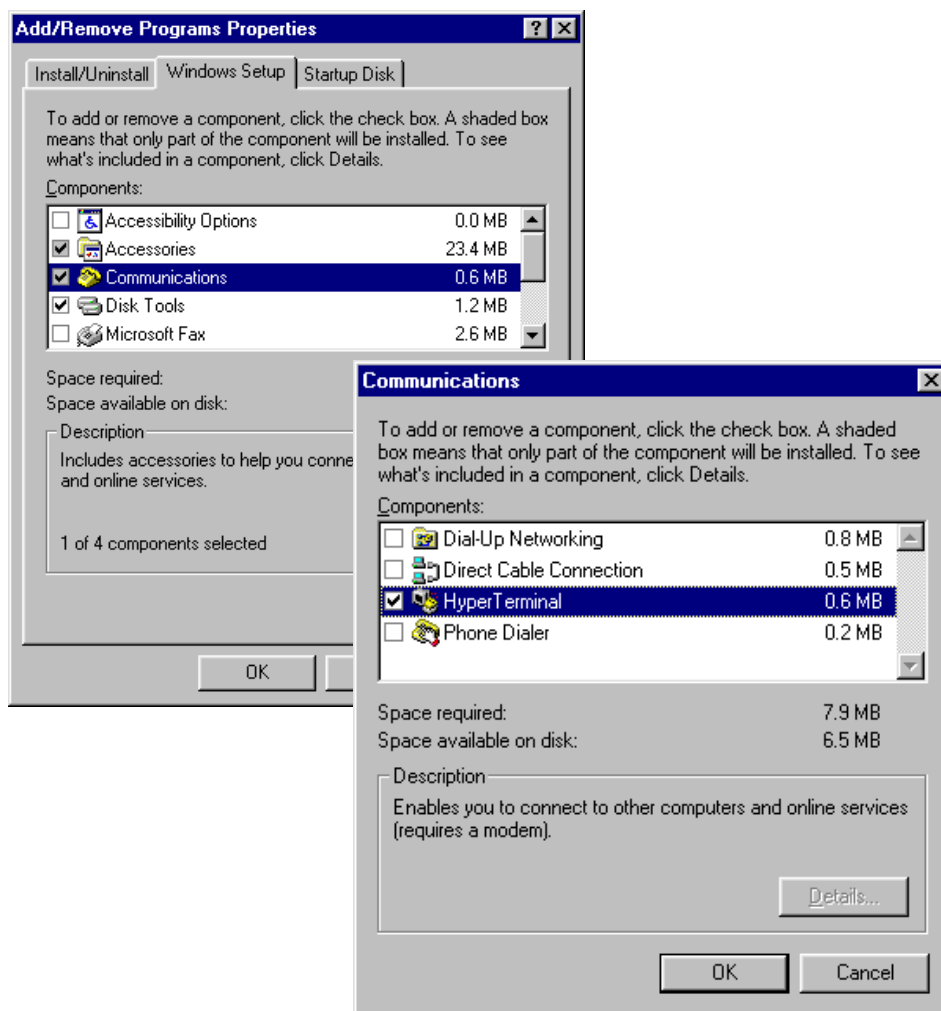


Figure L-1 - Add/Remove Programs

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	L. USING HYPERTERM

Starting a session

When starting HyperTerminal for a new connection, the program will ask for connection information to be saved for the next session.

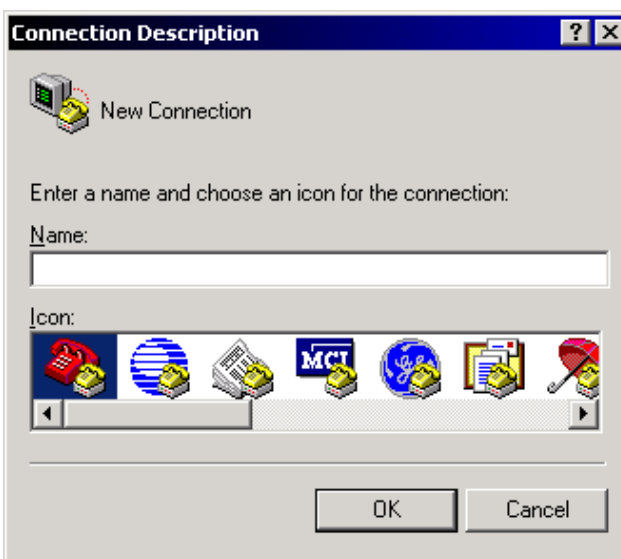


Figure L-2 - HyperTerminal Connection Description

Enter a name for the new connection in the space provided. The name should reflect the nature of the connection. In this case, a good name would be "COM1 Direct", depending on the serial port used. Pressing the OK button then should invoke the "Connect To" dialog box:



Figure L-3 - HyperTerminal Connect To dialog box

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	L. USING HYPERTERM

As the connection does not involve a modem, only the “Connect using:” dropdown box is needed. Select the desired serial port.

After pressing the OK button, HyperTerminal will open a communications properties dialog box for the selected serial port.

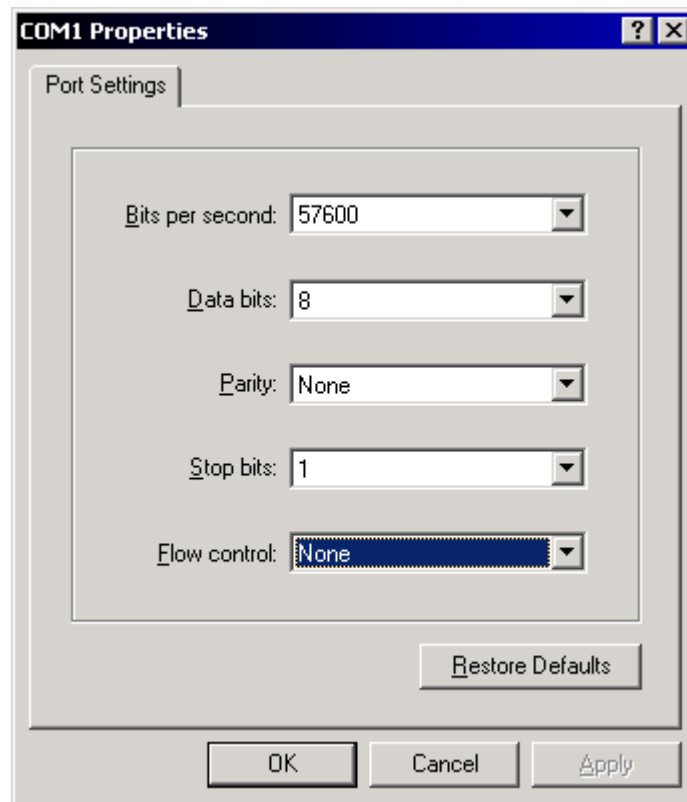


Figure L-4 – Serial Port Properties dialog box

The parameters of this dialog box must match the specifications of the instrument’s telemetry interface. The ISUS normally communicates at 38400 bits per second, and it uses 8 data bits, no parity, 1 stop bit, and no flow control. These settings can be modified at a later time.

Pressing OK will cause HyperTerm to connect to the selected port using the settings provided.

 Operation Manual	SYSTEM
	SECTION

MBARI-ISUS

L. USING HYPERTERM

Before using the connection, it may be useful to adjust the emulation settings (the behavior) of the terminal window. In order to do so, it is necessary to first disconnect HyperTerm from the serial port, using the **Disconnect** selection under the **Call** menu. The connection can be re-established via the **Connect** command in the **Call** menu.

HyperTerminal's settings are available via the **File** menu, under **Properties**. The "Settings" tab provides access as shown below.

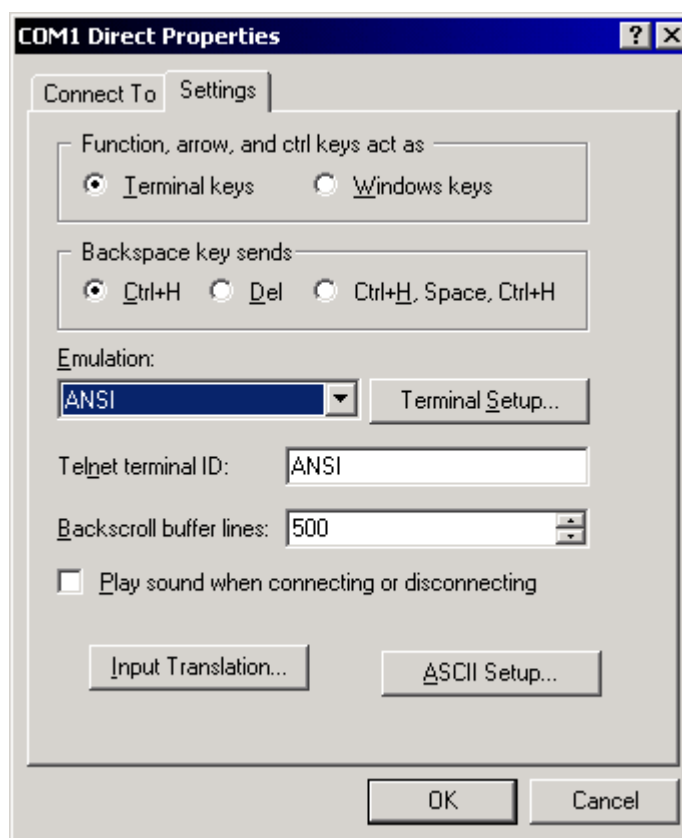


Figure L-5 – Connection Properties dialog box

In the "Emulation:" dropdown box, ANSI should be the connection's terminal emulation mode. The other settings of the dialog box should be set as shown.

 Operation Manual	SYSTEM	MBARI-ISUS
	SECTION	L. USING HYPERTERM

Additionally, the “ASCII Setup” must be adjusted, as shown in the figure below.

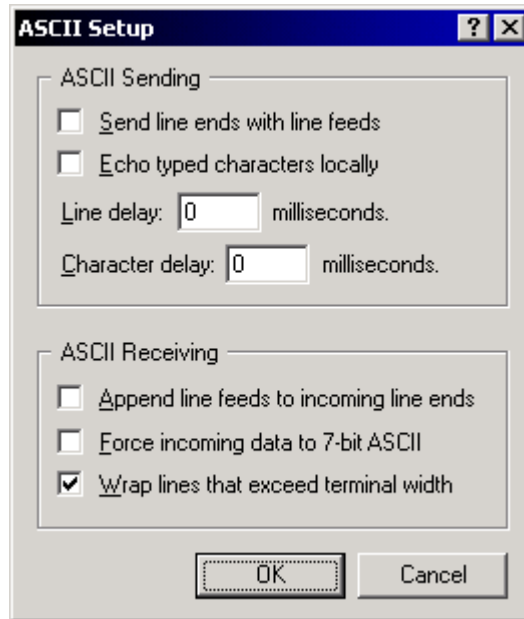


Figure L-6 – ASCII Setup dialog box

These settings are important in maintaining proper character I/O with the instrument. HyperTerminal is now set up to communicate with the instrument.

This lengthy setup procedure must only be executed once. When exiting HyperTerm, the program will save all connection information in a HyperTerminal file (*.ht) in the application’s directory. Opening this file at a later time will cause HyperTerm to establish a connection with identical settings.

Re-connecting via the **Call** menus **Connect** command will open the connection in a terminal window, displaying any data sent by the instrument. Any key pressed on the keyboard will be sent to the instrument.