



i2820 Series
Intel[®] Atom[™] All-In-One
Pico ITX CPU Board
User's Manual



Disclaimers

This manual has been carefully checked and believed to contain accurate information. iGoLogic, Inc. assumes no responsibility for any infringements of patents or any third party's rights, and any liability arising from such use.

IGOLOGIC does not warrant or assume any legal liability or responsibility for the accuracy, completeness or usefulness of any information in this document. IGOLOGIC does not make any commitment to update the information in this manual.

IGOLOGIC reserves the right to change or revise this document and/or product at any time without notice.

No part of this document may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of iGoLogic, Inc.

Caution

If you replace wrong batteries, it causes the danger of explosion. It is recommended by the manufacturer that you follow the manufacturer's instructions to only replace the same or equivalent type of battery, and dispose of used ones.

**©Copyright 2009 iGoLogic, Inc.
All Rights Reserved
January, Version A2**

ESD Precautions

Computer boards have integrated circuits sensitive to static electricity. To prevent chipsets from electrostatic discharge damage, please take care of the following jobs with precautions:

- Do not remove boards or integrated circuits from their anti-static packaging until you are ready to install them.
- Before holding the board or integrated circuit, touch an unpainted portion of the system unit chassis for a few seconds. It discharges static electricity from your body.
- Wear a wrist-grounding strap, available from most electronic component stores, when handling boards and components.

Trademarks Acknowledgments

IGOLOGIC is a trademark of iGoLogic, Inc.

Windows[®] is a trademark of Microsoft Corporation.

Phoenix & AWARD are trademarks of Phoenix Technology Ltd.

IBM, PC/AT, PS/2, VGA are trademarks of International Business Machines Corporation.

Intel[®] and Pentium[®] are trademarks of Intel Corporation.

Winbond is a trademark of Winbond Electronics Corp.

Other brand names and trademarks are the properties and registered brands of their respective owners.

Table of Contents


Disclaimers.....	ii
ESD Precautions	iii
CHAPTER 1 INTRODUCTION	1
1.1 Specifications	2
1.2 Utilities Supported	4
CHAPTER 2 JUMPERS AND CONNECTORS	5
2.1 Board Dimensions and Fixing Holes	5
2.2 Board Layout	7
2.3 Jumper Settings	9
2.3.1 Flat Panel Connector Voltage Selection Jumper (JP 1)	9
2.3.2 AUTO BUTTON Mode Selection Jumper (JP3)	10
2.3.3 CompactFlash™ Power Selection Jumper (JP4)	10
2.3.4 CMOS Clear Jumpers (JP5)	11
2.4 Connectors	12
2.4.1 VGA Connector (CN1)	13
2.4.2 DC POWER JACK Connector (CN2)	14
2.4.3 DC POWER Connector (CN3) (Optional)	14
2.4.4 LPC Interface Connector (CN4)	14
2.4.5 LVDS Flat Panel Connector (CN5)	15
2.4.6 Serial ATA Power Connector (CN6)	16
2.4.7 Flat Panel Bezel Connector (CN7)	16
2.4.8 Digital I/O Connector (CN8)	17
2.4.9 LVDS Backlight Connector (CN9)	18
2.4.10 Thru Front I/O Connector 1 (CN10)	19
2.4.11 Thru Front I/O Connector 2 (CN11)	19
2.4.12 SMBUS Connector (CN12)	20
2.4.13 CPLD JTAG Interface Connector (JP2)	20
2.4.14 Ethernet Connector (LAN1)	20
2.4.15 Serial ATA Power Connector (SATA1)	21
2.4.16 DDRII SODIMM Connector (SCN1)	21
2.4.17 CompactFlash™ Socket (SCN2)	22
CHAPTER 3 HARDWARE DESCRIPTION	25
3.1 Microprocessors	25
3.2 BIOS	25
3.3 System Memory	25
3.4 I/O Port Address Map	26
3.4 I/O Port Address Map	26
3.5 Interrupt Controller	27
CHAPTER 4 PHOENIX-AWARD BIOS UTILITY	29
4.1 Entering Setup	29
4.2 Control Keys.....	30
4.3 Getting Help	30
4.4 The Main Menu	31
4.5 Standard CMOS Setup Menu	32

4.6	Advanced BIOS Features	34
4.7	Advanced Chipset Features	37
4.8	Integrated Peripherals	39
4.9	Power Management Setup	42
4.10	PnP/PCI Configuration Setup	45
4.11	PC Health Status	47
4.12	Frequency/Voltage Control	48
4.13	Load Optimized Defaults	49
4.14	Set Supervisor/User Password	50
4.15	Save & Exit Setup	51
4.16	Exit Without Saving	52
CHAPTER 5 INSTALLATION OF DRIVERS		54
5.1	Installing Chipset Driver	54
5.2	Installing VGA Driver	57
5.3	Installing LAN Driver	61
5.4	Installing Audio Driver	63
APPENDIX A WATCHDOG TIMER		66
APPENDIX B DIGITAL I/O		68

MEMO

CHAPTER 1

INTRODUCTION

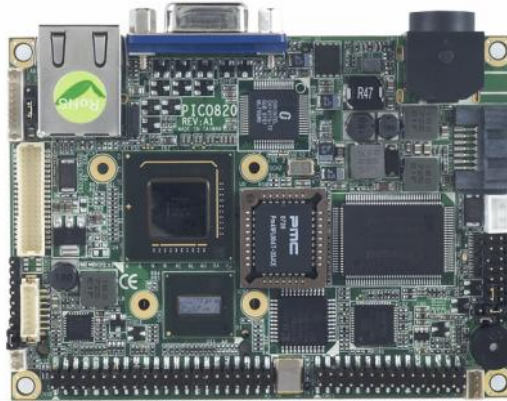

The **i2820** is a Pico-ITX board with support for Intel[®] ATOM[™] processor Z500 Series, and integrates chipset Intel[®] System Controller Hub US15W that deliver outstanding system performance through high-bandwidth interfaces, multiple I/O functions for interactive applications and various embedded computing solutions. The board has one 200-pin unbuffered SODIMM sockets for DDR2 400/533 MHz SO-DIMM memory, maximum memory capacity up to 2GB. It also features Gigabit/Fast Ethernet, one serial ATA port, four USB 2.0 high speed compliant, built-in high definition audio codec that can achieve the best stability and reliability for industrial applications. It provides you with unique embedded features, such as two serial ports (2x RS-232) and Pico-ITX form factor that applies an extensive array of PC peripherals. The board can be enhanced by its built-in watchdog timer, a special industrial feature not commonly seen on other motherboards.

1.1 Specifications

- **CPU**
 - Intel® ATOM™ processor Z500 Series
- **System Chipset**
 - Intel® System Controller Hub US15W
- **BIOS**
 - Phoenix-Award BIOS, Y2K compliant
 - 8Mbit FWH Flash, DMI, Plug and Play
 - SmartView for multiple LCD type selection, display mode option and application extension features
 - "Load Optimized Default" to backup customized Setting in the BIOS flash chip to prevent from CMOS battery fail
- **System Memory**
 - One x 200-pin unbuffered DDR2 SODIMM socket
 - Maximum to 2GB DDR2 400/533 MHz memory
- **Onboard Multi I/O**
 - Controller: Winbond W83627HG
 - Serial Ports: two ports for RS-232
- **CompactFlash™ Socket**
 - One CompactFlash™ Type II low profile slot
- **USB Interface**
 - Four USB ports with fuse protection and complies with USB Spec. Rev. 2.0
- **Display**
 - One 2 x 20 LVDS connector, one 7-pin wafer connector for inverter control
 - One D-sub 15-pin slim type connector
- **Watchdog Timer**
 - 1~255 seconds; up to 255 levels

- **Ethernet**
 - One port with RTL8111B for Gigabit/Fast Ethernet
 - One RJ-45 connector
- **Audio**
 - HD Audio compliant (with Speaker/line-out & MIC-in) via ALC888
 - Supports multi-channel audio stream, 32-bit sample depth, and sample rate up to 192KHz
 - Lin-in/Line-out/MIC-in
- **Power Management**
 - ACPI (Advanced Configuration and Power Interface)
- **Form Factor**
 - Pico-ITX form factor



NOTE *All specifications and images are subject to change without notice.*


1.2 Utilities Supported

- Chipset Driver
- Ethernet Driver
- Graphic Drivers
- Audio Drivers

CHAPTER 2

JUMPERS AND CONNECTORS


2.1 Board Dimensions and Fixing Holes

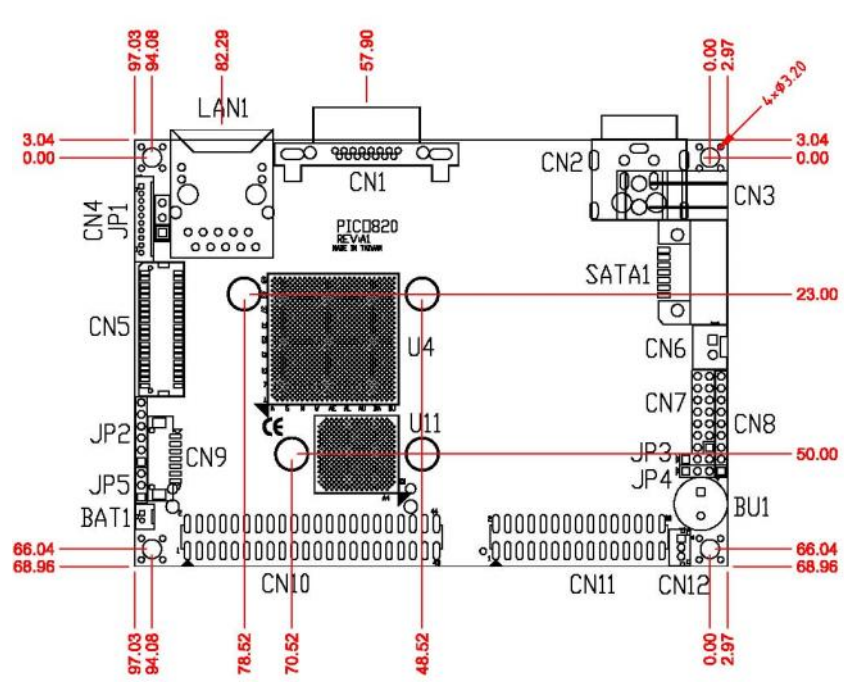

Component Side



NOTE The height of Component Side is 18mm.

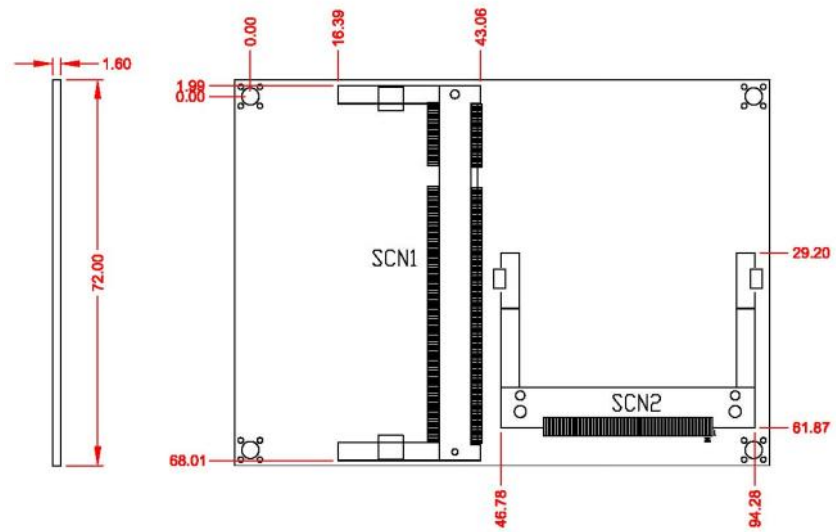



Solder Side



NOTE The height of Solder Side is 9mm.

2.2 Board Layout

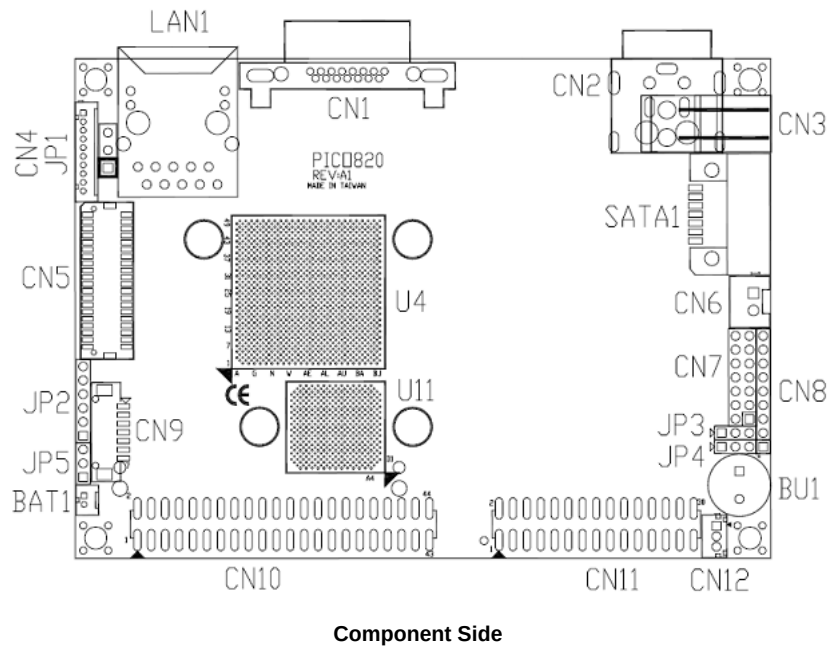

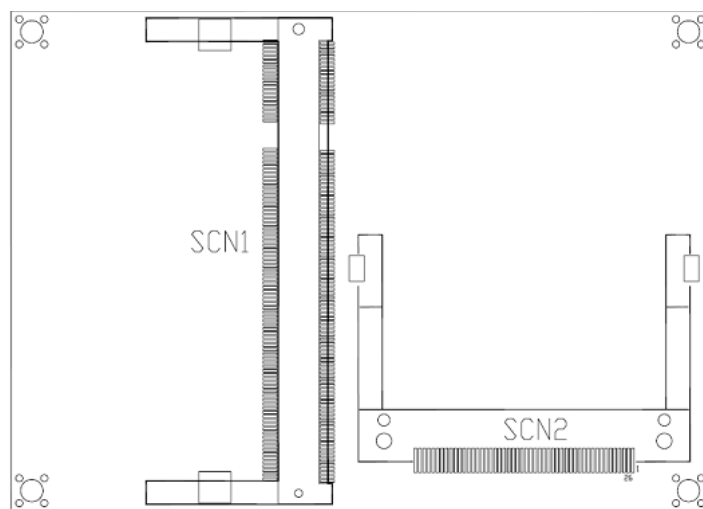

Solder Side

2.3 Jumper Settings

Proper jumper settings configure the **i2820** to meet your application purpose. We are herewith listing a summary table of all jumpers and default settings for onboard devices, respectively.

Jumper	Default Setting	Jumper Setting
JP1	Flat Panel Power Selection: Optional or Default : 3.3V	Short 1-2
JP3	AUTO BUTTON Mode Selection Optional or Default : OFF	Short 2-3
JP4	CompactFlash Voltage Selection Optional or Default : 3.3V	Short 1-2
JP5	Clear CMOS Setting: Normal	Short 1-2

2.3.1 Flat Panel Connector Voltage Selection Jumper (JP1)

The board supports +3.3V or +5V flat panel displays. Configure the jumper **JP1** to the appropriate voltage of the flat panel (CN5).

Description	Function	Jumper Setting
Flat Panel Connector (CN5) Voltage Selection	3.3V (Default)	
	5V	

2.3.2 AUTO BUTTON Mode Selection Jumper (JP3)

The jumper selects the AUTO BUTTON Mode.

Description	Function	Jumper Setting
AUTO BUTTON Mode Selection	ON	
	OFF (Default)	

2.3.3 CompactFlash™ Power Selection Jumper (JP4)

This jumper is to select the voltage for CompactFlash™ interface.

Description	Function	Jumper Setting
CompactFlash™ Power Select	3.3V (Default)	
	5V	

2.3.4 CMOS Clear Jumpers (JP5)

You may need to use this jumper is to clear the CMOS memory if incorrect settings in the Setup Utility.

Description	Function	Jumper Setting
CMOS Clear	Normal (Default)	
	Clear CMOS	

2.4 Connectors


Connectors connect the board with other parts of the system. Loose or improper connection might cause problems. Make sure all connectors are properly and firmly connected. Here is a summary table shows you all connectors on the **i2820** Series.

Connectors	Label
VGA Connector	CN1
DC Power Jack Connector	CN2
DC Power Connector(Optional)	CN3
LPC Interface Connector	CN4
LVDS Connector	CN5
Serial ATA Power Connector	CN6
Flat Panel Bezel Connector	CN7
DIO Port Connector	CN8
Inverter Connector	CN9
Thru Front I/O Connector 1	CN10
Thru Front I/O Connector 2	CN11
SMBUS Connector	CN12
CPLD JTAG Interface Connector	JP2
LAN Connector	LAN1
Serial ATA Connector	SATA1
DDRII SODIMM Connector	SCN1
Compact Flash Connector	SCN2

2.4.1 VGA Connector (CN1)


CN1 is a standard 15-pin DB15 connector commonly for the CRT VGA display.

Pin	Signal
1	Red
2	Green
3	Blue
4	N.C
5	Ground (GND)
6	AnalogGround (AGND)
7	AnalogGround (AGND)
8	AnalogGround (AGND)
9	N.C
10	Ground (GND)
11	N.C
12	DDC DATA
13	Horizontal Sync
14	Vertical Sync
15	DDC CLK

 


2.4.2 DC POWER JACK Connector (CN2)

The **CN2** is a DC Power JACK connector for DC 5V input.

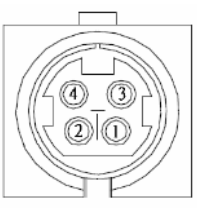Pin	Signal	
1	GND	
2	GND	
3	+5V	
4	+5V	


2.4.3 DC POWER Connector (CN3) (Optional)

 The **CN3 (co-lay with CN2)** is a 3.96mm wafer DC Power connector for DC 5V input.

Pin	Signal	
1	+5V	
2	GND	

2.4.4 LPC Interface Connector (CN4)

 
The **CN4** is a LPC Interface Connector.

Pin	Signal	Pin	Signal	
1	LPC_PCLK	2	BUF_RST#	
3	LPC_FRAME#	4	LPC_AD0	
5	LPC_AD1	6	LPC_AD2	
7	LPC_AD3	8	+3.3V	
9	GND	10	GND	

2.4.5 LVDS Flat Panel Connector (CN5)


The LVDS connector on the i2820 is a 40-pin connector. It is strongly recommended to use the matching JST SHDR-40V-S-B connector.

Pin	Signal	Pin	Signal
1	VCCM	2	VCCM
3	VCCM	4	VCCM
5	VCCM	6	VCCM
7	N.C.	8	N.C.
9	GND	10	GND
11	N.C.	12	N.C.
13	N.C.	14	N.C.
15	GND	16	GND
17	N.C.	18	N.C.
19	N.C.	20	N.C.
21	GND	22	GND
23	Channel A D0-	24	N.C.
25	Channel A D0+	26	N.C.
27	GND	28	GND
29	Channel A D1-	30	Channel A D3-
31	Channel A D1+	32	Channel A D3+
33	GND	34	GND
35	Channel A D2-	36	Channel A CLK-
37	Channel A D2+	38	Channel A CLK+
39	GND	40	GND

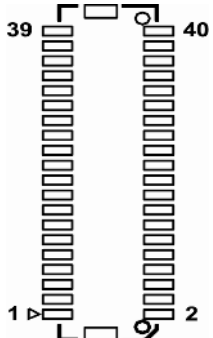


2.4.6 Serial ATA Power Connector (CN6)

 The **CN6** is a 2.5mm wafer connector for Serial ATA Power.

Pin	Signal	
1	+5V	
2	GND	

2.4.7 Flat Panel Bezel Connector (CN7)

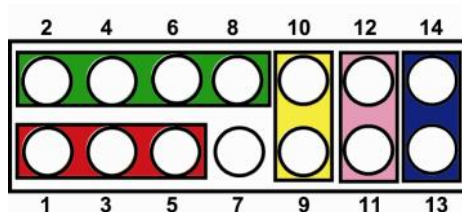

■ Power LED

This 3-pin connector denoted as Pin 1 and Pin 5 connects the system power LED indicator to such a switch on the case. Pin 1 is assigned as +, and Pin 5 as -. The Power LED lights up when the system is powered ON.

■ External Speaker and Internal Buzzer Connector

Pin 2, 4, 6 and 8 can be connected to the case-mounted speaker unit or internal buzzer. While connecting the CPU card to an internal buzzer, please short pins 2-4; while connecting to an external speaker, you need to set pins 2-4 to Open and connect the speaker cable to pin 8 (+) and pin 2 (-).

■ ATX Power On/Off Button

This 2-pin connector denoted as Pin 9 and 10 connects the front panel's ATX power button to the CPU card, which allows users to control ATX power supply to be power on/off.

■ System Reset Switch

 
Pin 11 and 12 can be connected to the case-mounted reset switch that reboots your computer instead of turning OFF the power switch. It is a better way to reboot your system for a longer life of the system's power supply.

■ HDD Activity LED

This connection is linked to hard drive activity LED on the control panel. LED flashes when HDD is being accessed. Pin 13 and 14 connect the hard disk drive to the front panel HDD LED, Pin 13 assigned as -, and Pin 14 as +.

2.4.8 Digital I/O Connector (CN8)

The board is equipped an 8-channel digital I/O connector **CN8** that meets requirements for a system customary automation control. The digital I/O can be configured to control cash drawers, sense warning signals from an Uninterrupted Power System (UPS), or perform store security control. The digital I/O is controlled via software programming.


Pin	Signal	Pin	Signal	
1	Digital Input 0	2	Digital Input 1	
3	Digital Input 2	4	Digital Input 3	
5	GND	6	Digital Output 0	
7	Digital Output 1	8	Digital Output 2	
9	Digital Output 3			

W83627HG-AW GPIO PIN Number	128 (GP110)	127 (GP11)	126 (GP12)	125 (GP13)
GPIO	Bit 0	Bit 1	Bit 2	Bit 3
CN8	PIN 1	PIN 2	PIN 3	PIN 4
PIN Define	Digital Input 0	Digital Input 1	Digital Input 2	Digital Input 3

W83627HG-AW GPIO PIN Number	124 (GP14)	123 (GP15)	122 (GP16)	121 (GP17)
GPIO	Bit 4	Bit 5	Bit 6	Bit 7
CN8	PIN 6	PIN 7	PIN 8	PIN 9
PIN Define	Digital Output 0	Digital Output 1	Digital Output 2	Digital Output 3

2.4.9 LVDS Backlight Connector (CN9)

The **CN9** is DF13-7S-1.25C 7-pin connectors for inverter that we strongly recommend you to use the matching DF13-7S-1.25C connector.

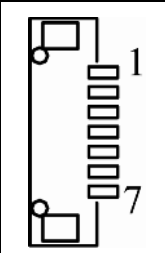Pin	Signal	
1	+5V	
2	+5V	
3	ENABLE +5V	
4	ENABLE +3.3V	
5	BKLTCTL	
6	GND	
7	GND	

2.4.10 Thru Front I/O Connector 1 (CN10)


Pin	Signal	Pin	Signal	Pin	Signal
1	+5V SBY	2	+5V SBY	3	USB D0-
4	USB D1-	5	USB D0+	6	USB D1+
7	GND	8	GND	9	GND
10	GND	11	+5V SBY	12	+5V SBY
13	USB D2-	14	USB D3-	15	USB D2+
16	USB D3+	17	GND	18	GND
19	GND	20	GND	21	KB_VCC
22	K/B Data	23	K/B CLK	24	GND
25	KB_VCC	26	KB_VCC	27	M/S Data
28	M/S CLK	29	GND	30	N.C.
31	SDIO_VCC3	32	GND	33	SD_WP#
34	SD_D0	35	SD_CD#	36	SD_D1
37	SD_CMD#	38	SD_D2	39	SD_CLK
40	SD_D3	41	SD_LED	42	GND
43	+5V	44	SPDIF(Optional)		

2.4.11 Thru Front I/O Connector 2 (CN11)

Pin	Signal	Pin	Signal	Pin	Signal
1	DCD1	2	DSR1	3	RXD1
4	RTS1	5	TXD1	6	CTS1
7	DSR1	8	RI1	9	GND
10	N.C.	11	DCD2	12	DSR2
13	RXD2	14	RTS2	15	TXD2
16	CTS2	17	DSR2	18	RI2
19	GND	20	N.C.	21	MIC_IN
22	GND	23	LINE_IN_L	24	GND
25	LINE_IN_R	26	GND	27	AUDIO_OUT_L
28	GND	29	AUDIO_OUT_R	30	GND

2.4.12 SMBUS Connector (CN12)

 Connector **CN12** is for SMBUS interface support.

Pin	Signal	
1	CLOCK	
2	DATA	
3	GND	


2.4.13 CPLD JTAG Interface Connector (JP2)

The **JP2** is a 2.0mm Pin header connector for CPLD Interface Connector.

Pin	Signal	
1	+3.3V SBY	
2	GND	
3	TCK	
4	TDO	
5	TDI	


2.4.14 Ethernet Connector (LAN1)

The RJ-45 connector is for Ethernet. To connect the board to a 100/10 Base-T hub, just plug one end of the cable into **LAN1**, and connect the other end (phone jack) to a 1000/100/10-Base-T hub.

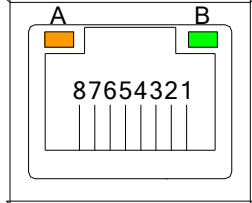
Pin	Signal	
1	MDI0+	
2	MDI0-	
3	MDI1+	
4	MDI1-	
5	MDI2+	
6	MDI2-	
7	MDI3+	
8	MDI3-	
A	Active LED (Yellow)	
B	100 LAN LED (Green)/ 1000 LAN LED (Orange)	

2.4.15 Serial ATA Power Connector (SATA1)

The SATA connector SATA1 is for high-speed SATA interface ports, and IT can be connected to hard disk devices.

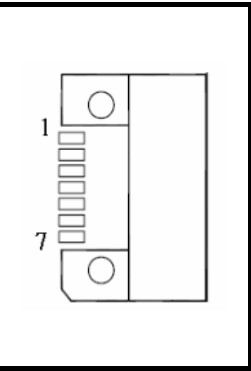Pin	Signal	
1	GND	
2	SATA_TX+	
3	SATA_TX-	
4	GND	
5	SATA_RX-	
6	SATA_RX+	
7	GND	

2.4.16 DDRII SODIMM Connector (SCN1)

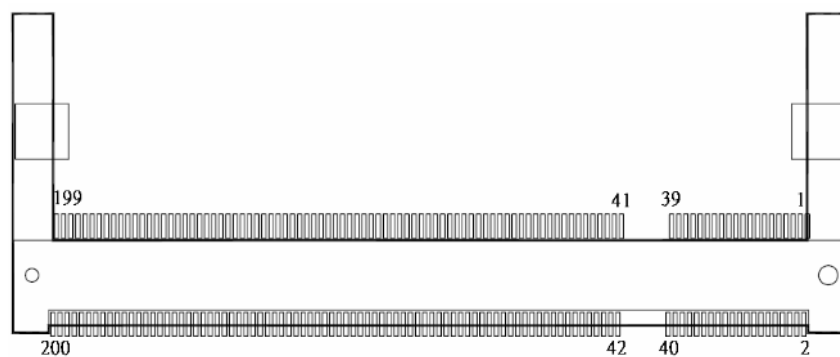

2.4.17 CompactFlash™ Socket (SCN2)

The board is equipped with a CompactFlash™ disk type-II socket on the solder side that supports the IDE interface CompactFlash™ disk card with DMA mode supported. The socket is especially designed to avoid any incorrect installation of the CompactFlash™ disk card.

When installing or removing the CompactFlash™ disk card, please make sure that the system power is off. The CompactFlash™ disk card is defaulted as the C: or D: disk drive in your PC system .

Pin	Signal	Pin	Signal
1	GND	26	CD1-
2	Data 3	27	Data 11
3	Data 4	28	Data 12
4	Data 5	29	Data 13
5	Data 6	30	Data 14
6	Data 7	31	Data 15
7	CS0#	32	CS1#
8	Address 10	33	VS1#
9	ATASEL	34	IORD#
10	Address 9	35	IOWR#
11	Address 8	36	WE#
12	Address 7	37	INTR
13	VCC	38	VCC
14	Address 6	39	CSEL#
15	Address 5	40	VS2#
16	Address 4	41	RESET#
17	Address 3	42	IORDY#
18	Address 2	43	DMAREQ
19	Address 1	44	DMAACK-
20	Address 0	45	DASP#
21	Data 0	46	PDIAG#
22	Data 1	47	Data 8
23	Data 2	48	Data 9

Pin	Signal	Pin	Signal
24	IOCS16#	49	Data 10
25	CD2#	50	GND

MEMO

CHAPTER 3

HARDWARE DESCRIPTION

3.1 Microprocessors

The **i2820** Series supports Intel[®] ATOM[™] processor Z500 Series, which make your system operated under Windows 2000/XP, and Linux environment. The system performance depends on the microprocessor. Make sure all correct settings are arranged for your installed microprocessor to prevent the CPU from damages.

3.2 BIOS

The **i2820** Series uses Award Plug and Play BIOS with a single 8Mbit FWH Flash, DMI, Plug and Play.

3.3 System Memory

The **i2820** Series industrial CPU card supports one 200-pin unbuffered DDR2 SODIMM socket for a maximum memory of 1GB DDR2 SDRAMs. The memory module can come in sizes of 64MB, 128MB, 256MB, 512MB, 1GB and 2GB. The Device density supports 512 Mb and 1024-Mb with the width of x16.

3.4 I/O Port Address Map

The Intel® ATOM™ processor Z500 Series can communicate via I/O ports. There are total 1KB port addresses available for assignment to other devices via I/O expansion cards.

Address	Devices
000-01F	DMA controller #1
020-02D 024-025 028-029 02C-02D	Interrupt controller #1
02E-02F	Forwarded to LPC(LPC Super I/O 2)
030-031 034-035 038-039 03C-03D	Interrupt controller #2
040-043 050-053	Timer/Counter (8254)
04E-04F	Forwarded to LPC(LPC Super I/O 1)
060-06F	Forwarded to LPC(Microcontroller for Keyboard Controller)
070-077	Real time clock, NMI
080-091	DMA page register
092	Processor I/F(Reset Generator)
093-09F	DMA page register
0A0-0BF	Interrupt controller #2
0C0-0DF	DMA controller #2
0F0	Processor I/F
0F8-0FF	Math processor
170-177	Forward to SATA(SATA Controller)
1F0-1F7	Forward to SATA(SATA Controller)
250-25F	HR I/O
300-31F	Prototype card
376	Forward to SATA(SATA Controller)
378-37F	Parallel Port (LPT)
380-38F	SDLC #2
3A0-3AF	SDLC #1

Address	Devices
3B0-3BF	MDA video card
3C0-3CF	EGA card
3D0-3DF	CGA card
3F6	Forward to SATA (SATA Controller)
3F8-3FF	Serial port #1 (COM1)
3E8-3EF	Serial port #3 (COM3)
2F8-2FF	Serial port #2 (COM2)
2E8-2EF	Serial port #4 (COM4)

3.5 Interrupt Controller

The **i2820 Series** is a 100% PC compatible control board. It consists of 16 interrupt request lines, and four out of them can be programmable. The mapping list of the 16 interrupt request lines is shown as the following table.

IRQ	Parity check error
IRQ0	System timer output
IRQ1	Keyboard
IRQ2	Interrupt rerouting from IRQ8 through IRQ15
IRQ3	Serial port #2
IRQ4	Serial port #1
IRQ5	PCI Device Share
IRQ7	—
IRQ8	Real time clock
IRQ9	ACPI Controller
IRQ10	—
IRQ11	—
IRQ12	PS/2 Mouse
IRQ13	Math coprocessor
IRQ14	Primary IDE channel
IRQ15	—

MEMO

CHAPTER 4

PHOENIX-AWARD BIOS UTILITY

The Phoenix-Award BIOS provides users with a built-in Setup program to modify basic system configuration. All configured parameters are stored in a battery-backed-up RAM (CMOS RAM) to save the Setup information whenever the power is turned off.

4.1 Entering Setup

There are two ways to enter the Setup program. You may either turn ON the computer and press immediately, or press the and/or <Ctrl>, <Alt>, and <Esc> keys simultaneously when the following message appears at the bottom of the screen during POST (Power on Self Test).

TO ENTER SETUP PRESS DEL KEY

If the message disappears before you respond and you still want to enter Setup, please restart the system to try it again. Turning the system power OFF and ON, pressing the "RESET" button on the system case or simultaneously pressing <Ctrl>, <Alt>, and keys can restart the system. If you do not press keys at the right time and the system doesn't boot, an error message will pop out to prompt you the following information:

PRESS <F1> TO CONTINUE, <CTRL-ALT-ESC> OR TO ENTER SETUP

4.2 Control Keys


Up arrow	Move cursor to the previous item
Down arrow	Move cursor to the next item
Left arrow	Move cursor to the item on the left hand
Right arrow	Move to the item in the right hand
Esc key	Main Menu -- Quit and delete changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
PgUp/“+” key	Increase the numeric value or make changes
PgDn/“-” key	Decrease the numeric value or make changes
F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu
(Shift) F2 key	Change color from total 16 colors. F2 to select color forward, (Shift) F2 to select color backward
F3 key	Reserved
F4 key	Reserved
F5 key	Restore the previous CMOS value from CMOS, only for Option Page Setup Menu
F6 key	Load the default CMOS value from BIOS default table, only for Option Page Setup Menu
F7 key	Load the Setup default, only for Option Page Setup Menu
F8 key	Reserved
F9 key	Reserved
F10 key	Save all the CMOS changes, only for Main Menu

4.3 Getting Help

- **Main Menu**
The online description of the highlighted setup function is displayed at the bottom of the screen.
- **Status Page Setup Menu/Option Page Setup Menu**
Press <F1> to pop out a small Help window that provides the description of using appropriate keys and possible selections for highlighted items. Press <F1> or <Esc> to exit the Help Window.

4.4 The Main Menu

Once you enter the Award BIOS CMOS Setup Utility, the Main Menu appears on the screen. In the Main Menu, there are several Setup functions and a couple of Exit options for your selection. Use arrow keys to select the Setup Page you intend to configure then press <Enter> to accept or enter its sub-menu.

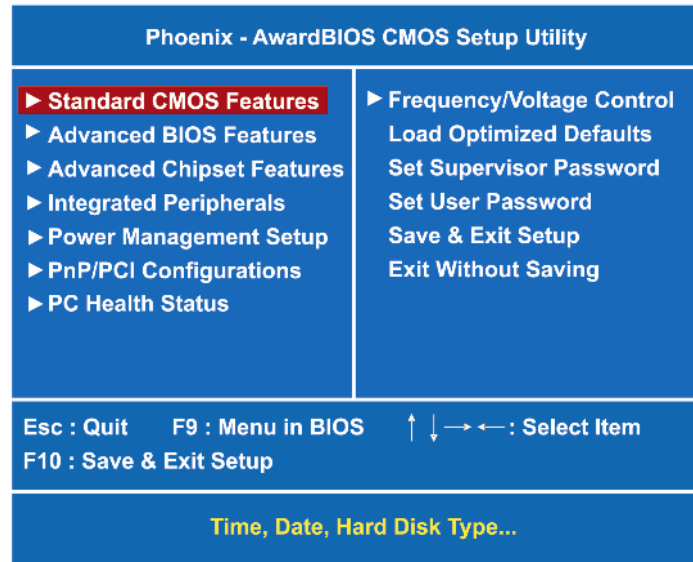

NOTE If your computer can not boot after making and saving system changes with Setup, the Award BIOS will reset your system to the CMOS default settings via its built-in override feature.

It is strongly recommended that you should avoid changing the chipset's defaults. Both Award and your system manufacturer have carefully set up these defaults that provide the best performance and reliability.

4.5 Standard CMOS Setup Menu

The Standard CMOS Setup Menu displays basic information about your system. Use arrow keys to highlight each item, and use <PgUp> or <PgDn> key to select the value you want in each item.

Phoenix - AwardBIOS CMOS Setup Utility		
Standard CMOS Features		
Date (mm:dd:yy)	Thu, Jan 6 2009	Item Help Menu Level ► Change the day, month, year and century.
Time (hh:mm:ss)	9 : 14 : 5	
► IDE Channel 0 Master		
► IDE Channel 0 Slave		
Video	[EGA/VGA]	
Halt On	[All Errors]	
Base Memory	640K	
Extended Memory	64512K	
Total Memory	65536K	

↑ ↓ → ← : Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
 F5: Previous Values F7: Optimized Defaults

- Date**

The date format is <day>, <date> <month> <year>. Press <F3> to show the calendar.

day	It is determined by the BIOS and read only, from Sunday to Saturday.
date	It can be keyed with the numerical/ function key, from 1 to 31.
month	It is from January to December.
year	It shows the current year of BIOS.

- Time**

This item shows current time of your system with the format <hour> <minute> <second>. The time is calculated based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00.

- **IDE Primary Master/Primary Slave**

These items identify the types of each IDE channel installed in the computer. There are 45 predefined types (Type 1 to Type 45) and 2 user's definable types (Type User) for Enhanced IDE BIOS. Press <PgUp>/<+> or <PgDn>/<-> to select a numbered hard disk type, or directly type the number and press <Enter>. Please be noted your drive's specifications must match the drive table. The hard disk will not work properly if you enter improper information. If your hard disk drive type does not match or is not listed, you can use Type User to manually define your own drive type.

If selecting Type User, you will be asked to enter related information in the following items. Directly key in the information and press <Enter>. This information should be provided in the documentation from your hard disk vendor or the system manufacturer.

If the HDD interface controller supports ESDI, select "Type 1".

If the HDD interface controller supports SCSI, select "None".

If the HDD interface controller supports CD-ROM, select "None".

CYLS.	number of cylinders	LANDZONE	landing zone
HEADS	number of heads	SECTORS	number of sectors
PRECOMP	write precomp	MODE	HDD access mode

If there is no hard disk drive installed, select NONE and press <Enter>.

- **Video**

Select the display adapter type for your system.

- **Halt On**


This item determines whether the system will halt or not, if an error is detected while powering up.

No errors	The system booting will halt on any errors detected. (default)
All errors	Whenever BIOS detects a non-fatal error, the system will stop and you will be prompted.
All, But Keyboard	The system booting will not stop for a keyboard error; it will stop for other errors.
All, But Diskette	The system booting will not stop for a disk error; it will stop for other errors.
All, But Disk/Key	The system booting will not stop for a keyboard or disk error; it will stop for other errors.

Press <Esc> to return to the Main Menu page.


4.6 Advanced BIOS Features

This section allows you to configure and improve your system , to set up some system features according to your preference.

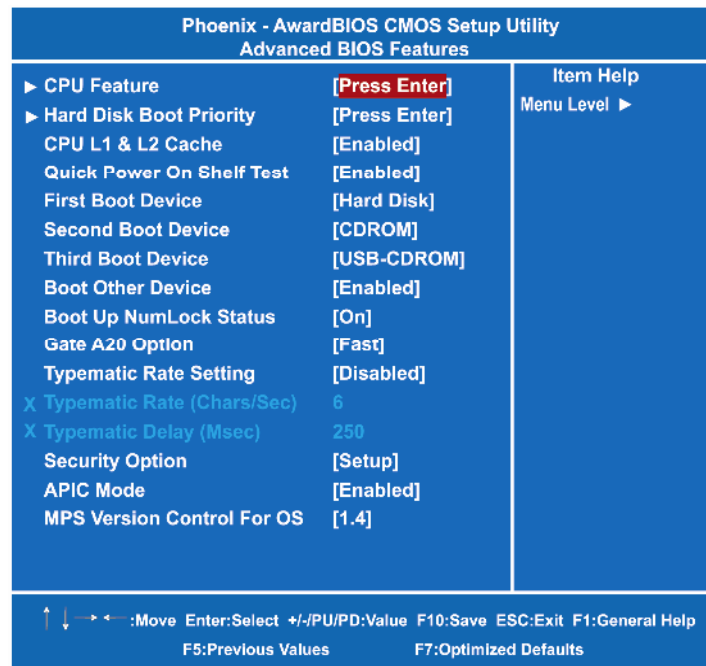


- **CPU Feature**

Scroll to this item and press <Enter> to view the CPU Feature sub menu.

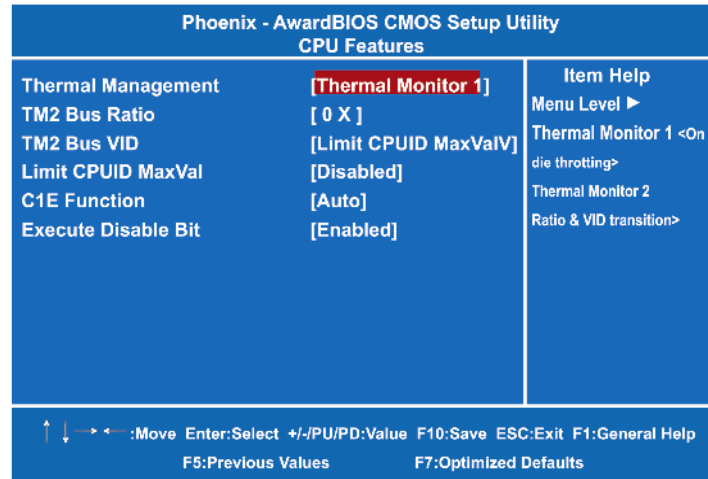

- **Hard Disk Boot Priority**

Scroll to this item and press <Enter> to view the sub menu to decide the disk boot priority.

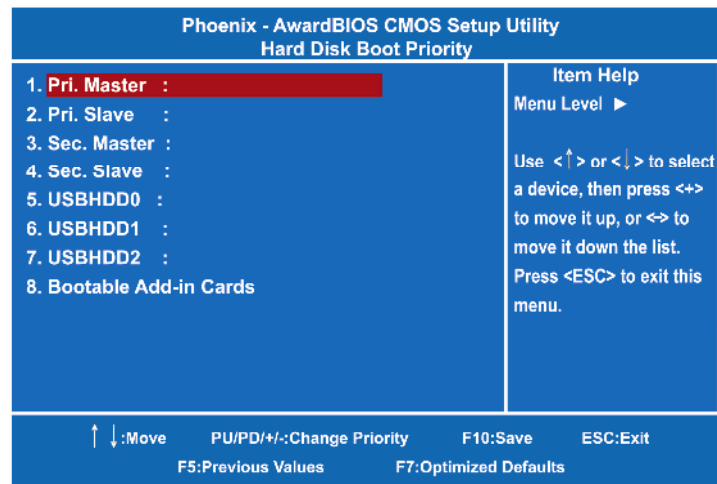

- **Quick Power On Self Test**

This option speeds up Power on Self Test (POST) after you turn on the system power. If set as Enabled, BIOS will shorten or skip some check items during POST. The default setting is "Enabled".

Enabled	Enable Quick POST
Disabled	Normal POST

- **First/Second/Third Boot Device**

These items let you select the 1st, 2nd, and 3rd devices that the system will search for during its boot-up sequence. There is a wide range of options for your selection.

- **Boot Other Device**

This item allows the user to enable/disable the boot device not listed on the First/Second/Third boot devices option above. The default setting is "Enabled".

- **Boot Up NumLock Status**

Set the the Num Lock status when the system is powered on. The default value is "On".

- **Security Option**

This item allows you to limit access to the system and Setup, or just to Setup. The default value is "Setup".

System	If a wrong password is entered at the prompt, the system will not boot, the access to Setup will be denied, either .
Setup	If a wrong password is entered at the prompt, the system will boot, but the access to Setup will be denied.



NOTE To disable the security, select **PASSWORD SETTING** at Main Menu and then you will be asked to enter a password. Do not type anything, just press <Enter> and it will disable the security. Once the security is disabled, the system will boot and you can enter Setup freely.

- **APIC Mode**

Use this item to enable or disable APIC (Advanced Programmable Interrupt Controller) mode that provides symmetric multi-processing (SMP) for systems.


- **MPS Version Control For OS**

This item specifies the version of the Multiprocessor Specification (MPS). Version 1.4 has extended configuration tables to improve support for multiple PCI bus configurations and provide future expandability.

Press <Esc> to return to the Main Menu page.

4.7 Advanced Chipset Features

This section contains completely optimized chipset's features on the board that you are strongly recommended to leave all items on this page at their default values unless you are very familiar with the technical specifications of your system hardware.

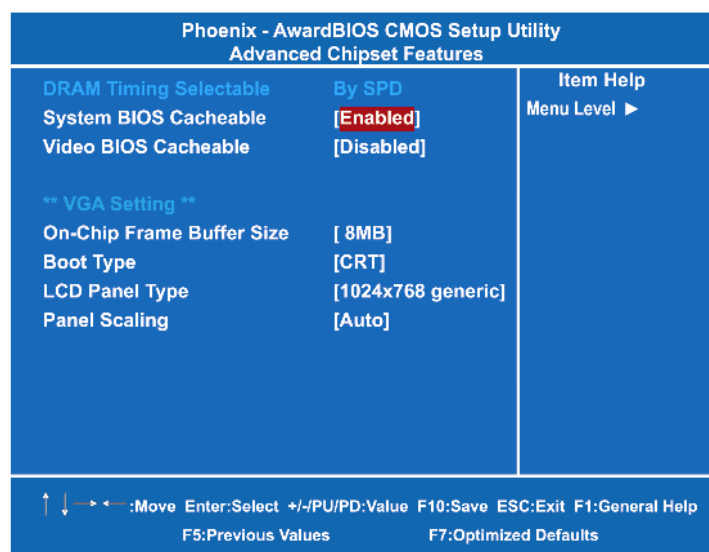

- **DRAM Timing Selectable**

Use this item to increase the timing of the memory. This is related to the cooling of memory.

- **System BIOS Cacheable**

Selecting Enabled allows caching of the system BIOS ROM at F0000h-FFFFFh, resulting in better system performance. However, if any program writes to this memory area, a system error may result. The default value is "Disabled".

- **Video BIOS Cacheable**

This item allows you to change the Video BIOS location from ROM to RAM. Video Shadow will increase the video speed.

***** VGA Setting *****

- **On-Chip Frame Buffer Size**

Use this item to set the VGA frame buffer size.

- **Boot Type**

This item is to select Display Device that the screen will be shown.


- **Panel Scaling**

This item shows the setting of panel scaling and operates the scaling function that the panel output can fit the screen resolution connected to the output port.

Press <Esc> to return to the Main Menu page.


4.8 Integrated Peripherals

This section allows you to configure your OnChip IDE Device, SuperIO Device and Onboard Device.

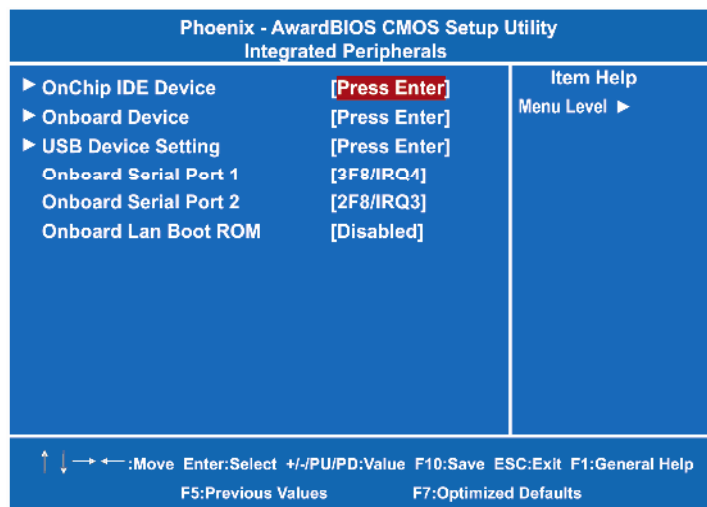

- **OnChip IDE Device**

Scroll to this item and press <Enter> to view the sub menu OnChip IDE Device.

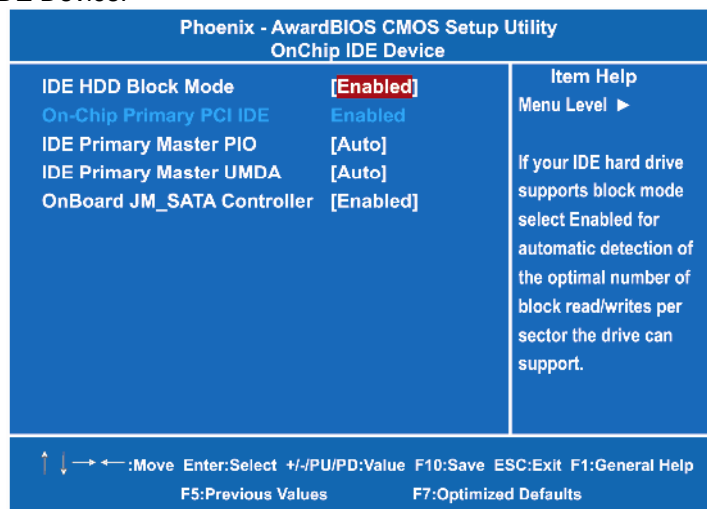


➤ **IDE HDD Block Mode**

Block mode is also called block transfer, multiple commands, or multiple sectors read/write. If your IDE hard drive supports block mode (most new drives do), select Enabled for automatic detection of the optimal number of block read/writes per sector the drive can support.

Press <Esc> to return to the Integrated Peripherals page.

● **Onboard Device**

Scroll to this item and press <Enter> to view the sub menu Onboard Device.

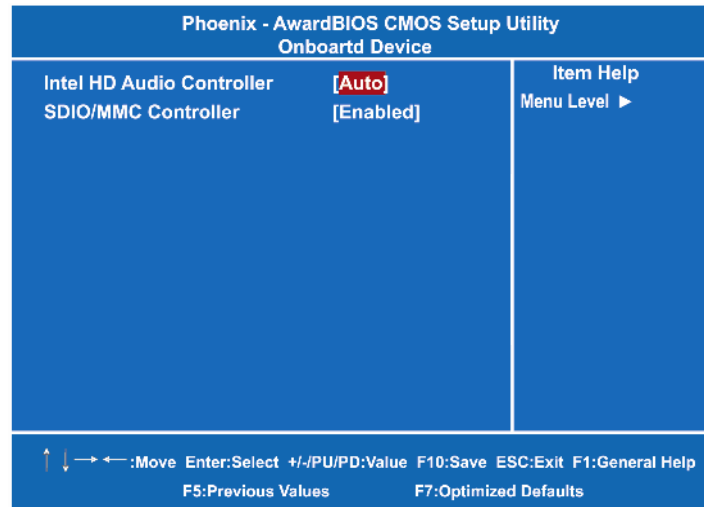


➤ **Intel HD Audio Controller**

Use this item to enable an Intel HD Audio controller for interfacing the device with a LAN.

Press <Esc> to return to the Integrated Peripherals page.

- **USB Device Setting**

Scroll to this item and press <Enter> to view the sub menu USB Device Setting.

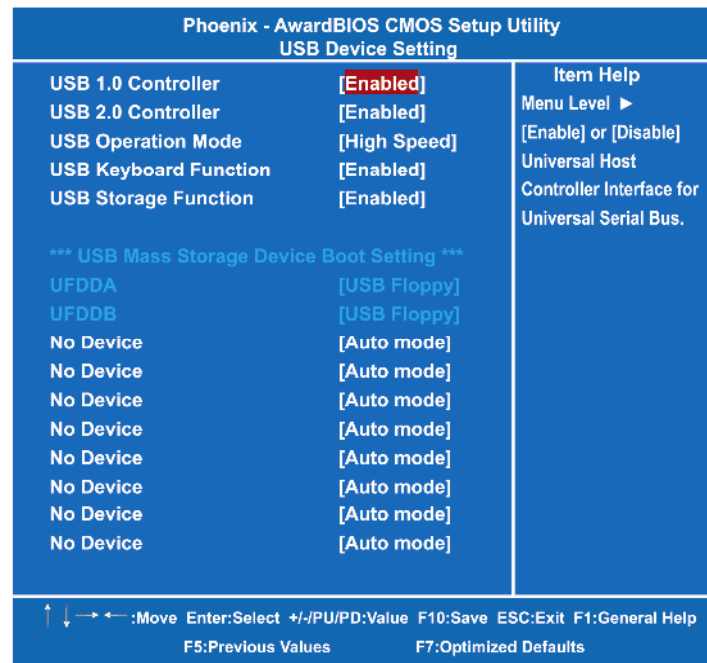

- **Onboard Serial Port 1/2**

Select an address and corresponding interrupt for the serial port. There are several options for your selection.

- **Onboard Lan Boot ROM**

Use this item to enable or disable the Boot ROM function of the onboard LAN chip when the system boots up.

4.9 Power Management Setup

The Power Management Setup allows you to save energy of your system effectively. It will shut down the hard disk and turn OFF video display after a period of inactivity.

Phoenix - AwardBIOS CMOS Setup Utility Power Management Setup		
ACPI Function	Enabled	Item Help Menu Level ►
ACPI Suspend Type	S1(POS)	
Power Management	[Min Saving]	
Video Off Method	[DPMS]	
Video Off In Suspend	[Yes]	
Suspend Type	[Stop Grant]	
Suspend Mode	Disabled	
HDD Power Down	Disabled	
Soft-Off by PWR-BTTN	[Instant-Off]	
CPU THRM-Throttling	[50.0%]	
Date <of Month> Alarm	[0]	
Time <hh:mm:ss> Alarm	0 : 0 : 0	

↑ ↓ → ← : Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F7: Optimized Defaults

- ACPI Function**
 This item allows you to enable/disable the Advanced Configuration and Power Management (ACPI). The function is always “*Enabled*”.
- ACPI Suspend Type**
 This item specifies the power saving modes for ACPI function. If your operating system supports ACPI, such as Windows 98SE, Windows ME and Windows 2000, you can choose to enter the Standby mode in S1 (POS) or S3 (STR) fashion through the setting of this field. Options are:
 - [S1(POS)] The S1 sleep mode is a low power state. In this state, no system context is lost (CPU or chipset) and hardware maintains all system contexts.
 - [S3(STR)] The S3 sleep mode is a lower power state where the information of system configuration and open applications/files is saved to main memory that remains powered while most other hardware components turn off to

save energy. The information stored in memory will be used to restore the system when a “wake up” event occurs.

- **Power Management**

This option allows you to select the type (or degree) of power saving for Doze, Standby, and Suspend modes. The table below describes each power management mode:

Max Saving	It is maximum power savings, only available for SL CPUs. The inactivity period is 1 minute in each mode.
User Define	It sets each mode. Select time -out periods in the PM Timers section.
Min Saving	It is minimum power savings. The inactivity period is 1 hour in each mode (except the hard drive).
Disabled	Default value

- **Video Off Method**

This setting determines the manner in which the monitor is blanked.

V/H SYNC+Blank	Turns OFF vertical and horizontal synchronization ports and writes blanks to the video buffer
DPMS	Select this option if your monitor supports the Display Power Management Signaling (DPMS) standard of the Video Electronics Standards Association (VESA). Use the software supplied for your video subsystem to select video power management values.
Blank Screen	System only writes blanks to the video buffer.

- **Video Off In Suspend**

This item defines if the video is powered down when the system is put into suspend mode.

- **Suspend Type**

If this item is set to the default Stop Grant, the CPU will go into Idle Mode during power saving mode.

- **Suspend Mode**

After the selected period of system inactivity (1 minute to 1 hour), all devices except the CPU shut off. The default value is “Disabled”.

Disabled	System will never enter SUSPEND mode
1/2/4/6/8/10/ 20/30/40 Min/1 Hr	Defines the continuous idle time before the system entering SUSPEND mode. If any item defined in (J) is enabled & active, SUSPEND timer will be reloaded

- **HDD Power Down**

If HDD activity is not detected for the length of time specified in this field, the hard disk drive will be powered down while all other devices remain active.

- **Soft-Off by PWR-BTTN**


This option only works with systems using an ATX power supply. It also allows the user to define which type of soft power OFF sequence the system will follow. The default value is "Instant -Off".

Instant-Off	This option follows the conventional manner systems perform when power is turned OFF. Instant -Off is a soft power OFF sequence requiring only the switching of the power supply button to OFF
Delay 4 Sec.	Upon turning OFF system from the power switch, this option will delay the complete system power OFF sequence by approximately 4 seconds. Within this delay period, system will temporarily enter into Suspend Mode enabling you to restart the system at once.

Press <Esc> to return to the Main Menu page .

4.10 PnP/PCI Configuration Setup

This section describes the configuration of PCI (Personal Computer Interconnect) bus system, which allows I/O devices to operate at speeds close to the CPU speed while communicating with other important components. This section covers very technical items that only experienced users could change default settings.

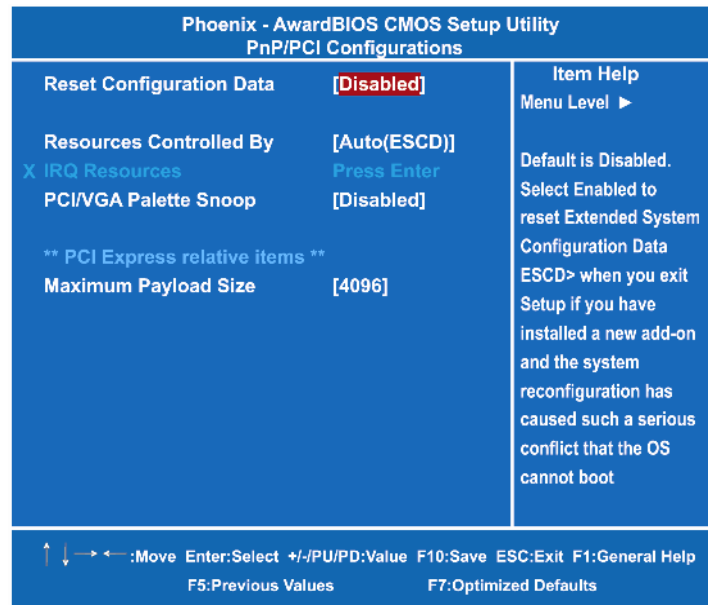

- Reset Configuration Data**
 Normally, you leave this item Disabled. Select Enabled to reset Extended System Configuration Data (ESCD) when you exit Setup or if installing a new add-on cause the system reconfiguration a serious conflict that the operating system can not boot. Options: Enabled, Disabled.
- Resources Controlled By**
 The Award Plug and Play BIOS can automatically configure all boot and Plug and Play-compatible devices. If you select Auto, all interrupt request (IRQ), DMA assignment, and Used DMA fields disappear, as the BIOS automatically assigns them. The default value is "Manual".

- **IRQ Resources**

When resources are controlled manually, assign each system interrupt to one of the following types in accordance with the type of devices using the interrupt:

1. Legacy ISA Devices compliant with the original PC AT bus specification, requiring a specific interrupt (such as IRQ4 for serial port 1).
2. PCI/ISA PnP Devices compliant with the Plug and Play standard, whether designed for PCI or ISA bus architecture.

The default value is *"PCI/ISA PnP"*.

- **PCI/VGA Palette Snoop**

Some non-standard VGA display cards may not show colors properly. This item allows you to set whether MPEG ISA/VESA VGA Cards can work with PCI/VGA or not. When enabled, a PCI/VGA can work with a MPEG ISA/VESA VGA card ; when disabled, a PCI/VGA cannot work with a MPEG ISA/VESA Card.

**** PCI Express relative items ****


- **Maximum Payload Size**

When using DDR SDRAM and Buffer size selection, another consideration in designing a payload memory is the size of the buffer for data storage. Maximum Payload Size defines the maximum TLP (Transaction Layer Packet) data payload size for the device.

Press <Esc> to return to the Main Menu page .

4.11 PC Health Status

This section supports hardware monitoring that lets you monitor those parameters for critical voltages, temperatures and fan speed of the board.

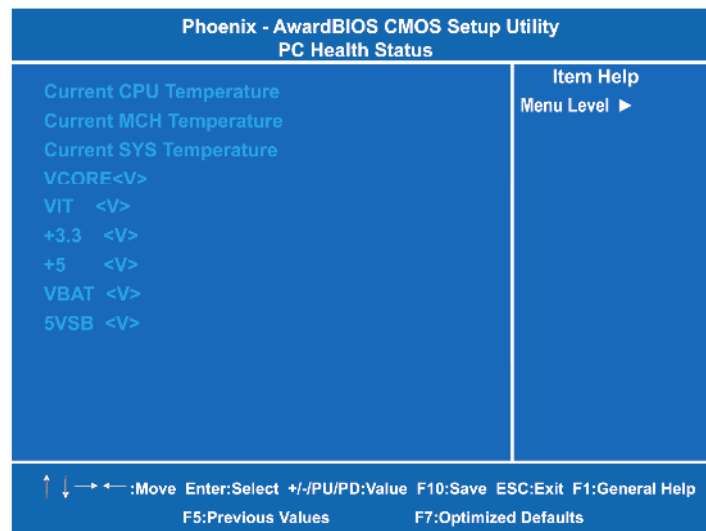

- **System Component Characteristics**


These items provide you with information about the system's current operating status. You can't change these items.

1. Current CPU Temperature
2. Current MCH Temperature
3. Current System Temperature
4. VCORE/VIT/VBAT/5VSB

Press <Esc> to return to the Main Menu page.

4.12 Frequency/Voltage Control

This section is to control the CPU frequency and Supply Voltage, DIMM OverVoltage and AGP voltage.

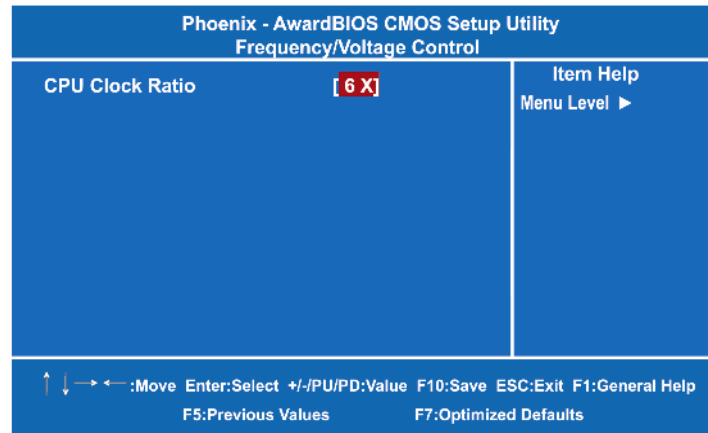


- **CPU Clock Ratio**
Use this item to select the CPU's frequency.

Press <Esc> to return to the Main Menu page.

4.13 Load Optimized Defaults

This option allows you to load your system configuration with default values. These default settings are optimized to enable high performance features.

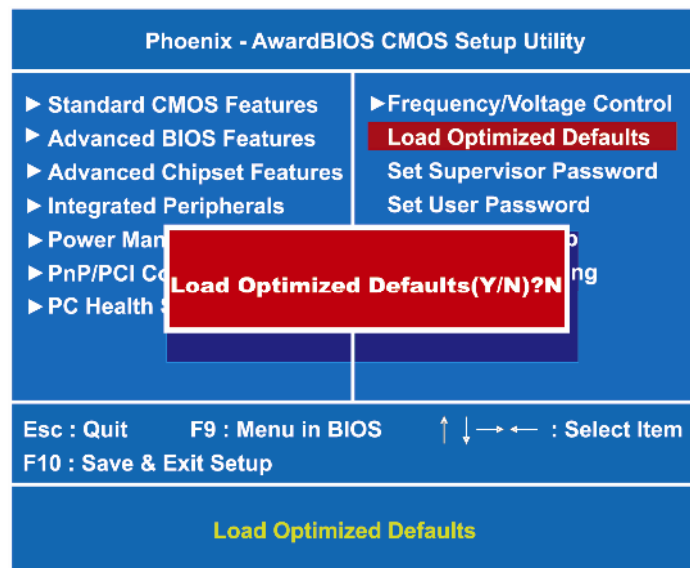

To load CMOS SRAM with SETUP default values, please enter “Y”. If not, please enter “N”.

4.14 Set Supervisor/User Password

You can set a supervisor or user password, or both of them. The differences between them are:

1. **Supervisor password:** You can enter and change the options on the setup menu.
2. **User password:** You can just enter, but have no right to change the options on the setup menu.

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

ENTER PASSWORD

Type a maximum eight-character password, and press <Enter>. This typed password will clear previously entered password from the CMOS memory. You will be asked to confirm this password. Type this password again and press <Enter>. You may also press <Esc> to abort this selection and not enter a password.

To disable the password, just press <Enter> when you are prompted to enter a password. A message will confirm the password is getting disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

PASSWORD DISABLED


When a password is enabled, you have to type it every time you enter the Setup. It prevents any unauthorized persons from changing your system configuration.

Additionally, when a password is enabled, you can also require the BIOS to request a password every time the system reboots. This would prevent unauthorized use of your computer.

You decide when the password is required for the BIOS Features Setup Menu and its Security option. If the Security option is set to "System", the password is required during booting up and entry into the Setup; if it is set as "Setup", a prompt will only appear before entering the Setup.


4.15 Save & Exit Setup

This section allows you to determine whether or not to accept your modifications. Type “Y” to quit the setup utility and save all changes into the CMOS memory. Type “N” to bring you back to the Setup utility.

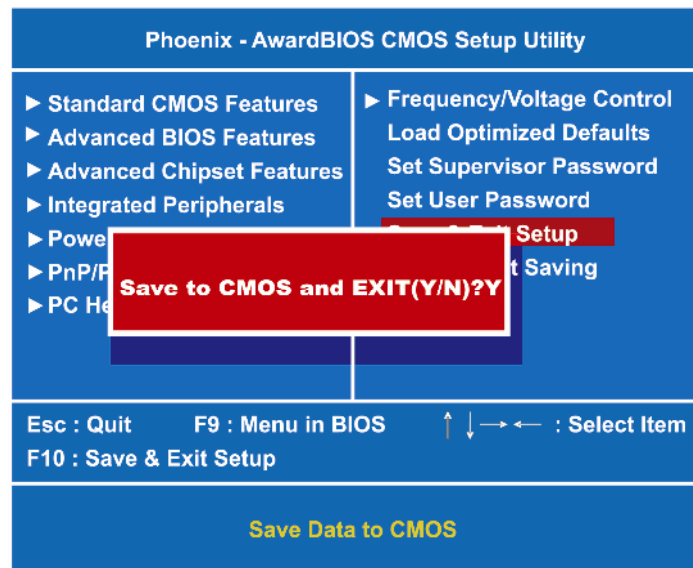

4.16 Exit Without Saving

Select this option to exit the Setup utility without saving changes you have made in this session. Type “Y”, and it will quit the Setup utility without saving your modifications. Type “N” to return to the Setup utility.

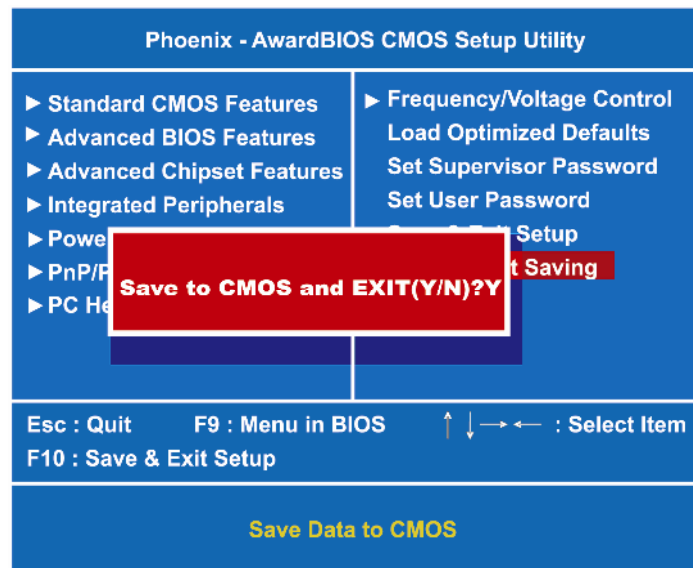

CHAPTER 5

INSTALLATION OF DRIVERS

The device drivers are located on the Product Information CD-ROM that comes with the i2820 Series package. The auto-run function of drivers will guide you to install the utilities and device drivers under a Windows system. You can follow the onscreen instructions to install these devices:

- Chipset
- VGA
- LAN
- Audio

5.1 Installing Chipset Driver


1. Run the SETUP.EXE program from the driver directory in your driver CD. Click "Next" to next step.



2. An Intel® License Agreement appears to show you the important information. Click "Yes" to next step.



3. Please wait while running the following setup operations.

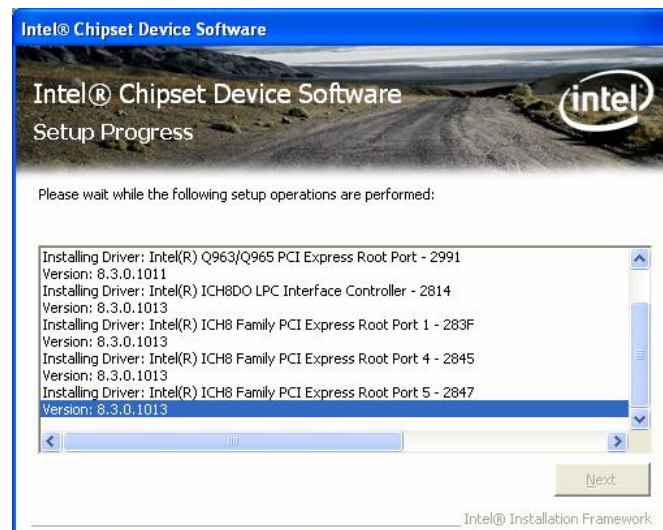

(3-1)



(3-2)


4. Click "Finish" to complete the setup process.




5. You will be asked to reboot your computer when the installation is completed. Please click “Yes, I want to restart my computer now” if you don't need to install any other drivers. Otherwise, please click “No, I will restart my computer later”, and go on next step.

5.2 Installing VGA Driver


1. Run the SETUP.EXE program from the driver directory in your driver CD. Click “Next” to next step.

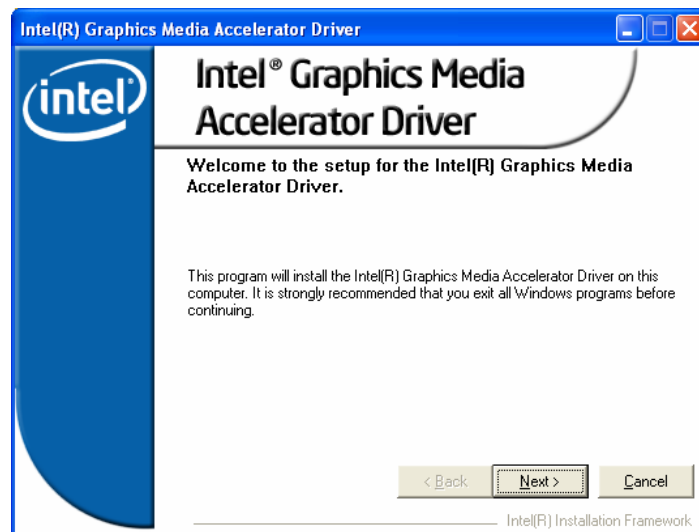


2. An Intel® License Agreement appears to show you the important information. Click “Yes” to next step.

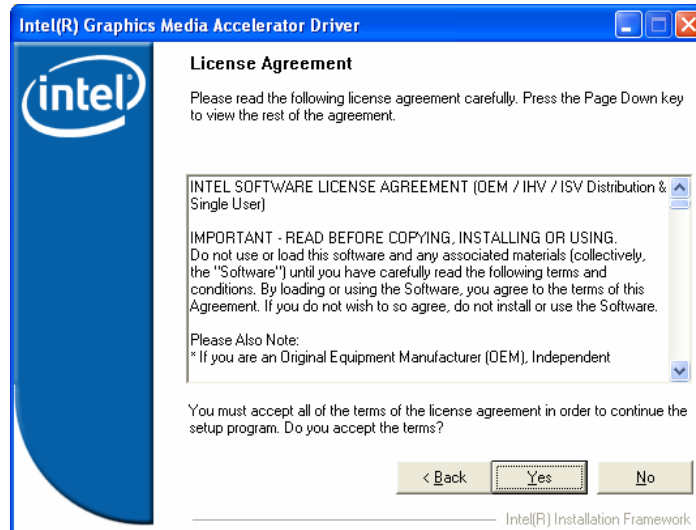


3. The message of Readme File Information appears to show you the system requirements and installation information. Please click “Next”.

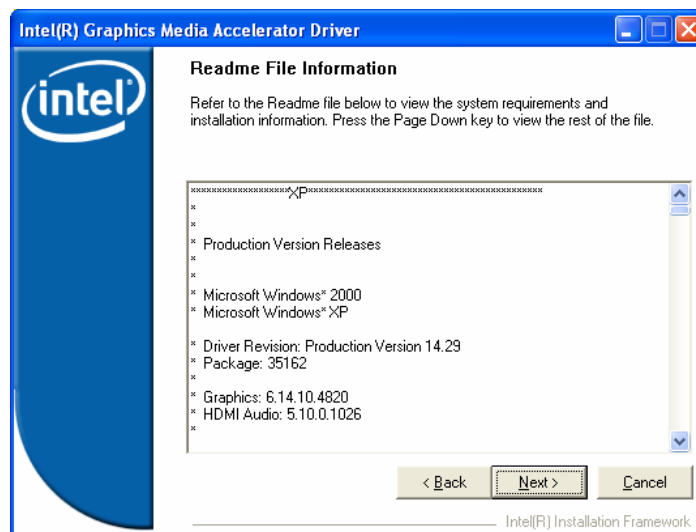


4. Please wait while running the following setup operations.

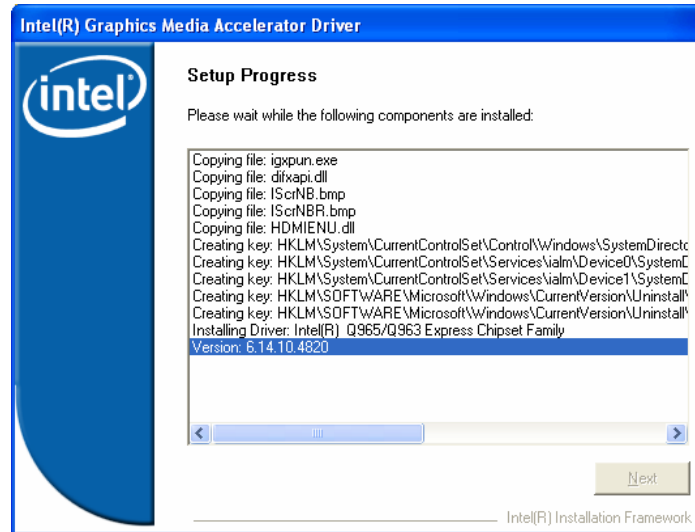

5. When this message appears, please click "Next".

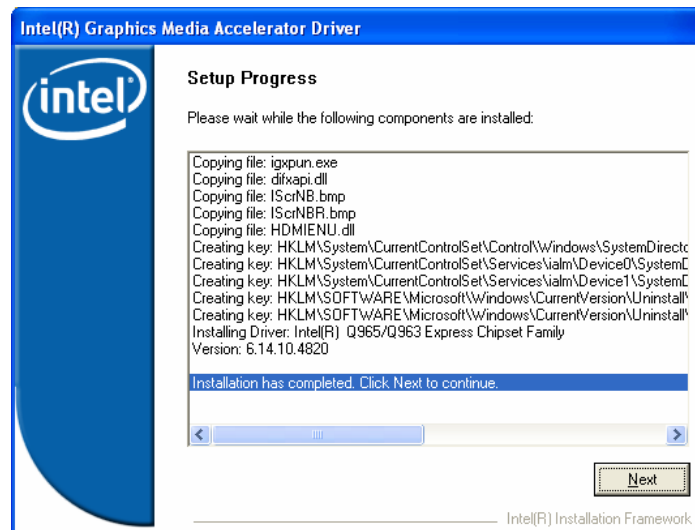


6. You will be asked to reboot your computer when the installation is completed. Please click “Yes, I want to restart my computer now” if you don’t need to install any other drivers. Otherwise, please click “No, I will restart my computer later”, and click “Finish” to complete the installation.

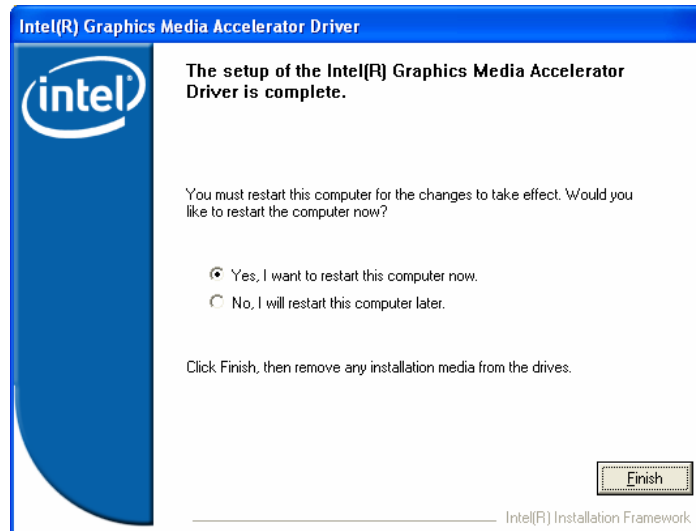


5.3 Installing LAN Driver


1. Run the InstallShield Wizard for Ethernet from the driver directory in your driver CD. Click “Next” to next step.

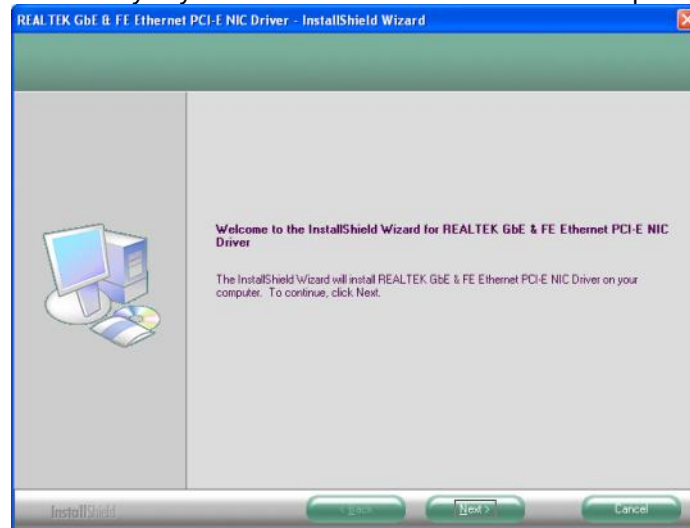


2. Click “Install” to start the installation.

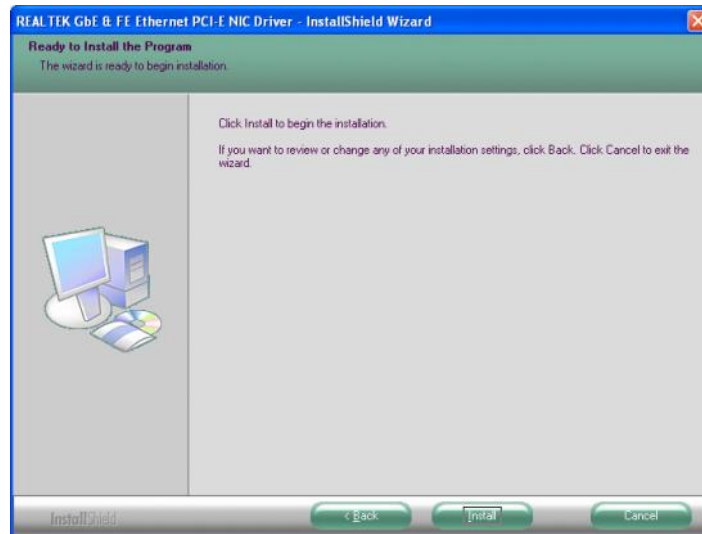

3. Please wait while running the following installation operation.

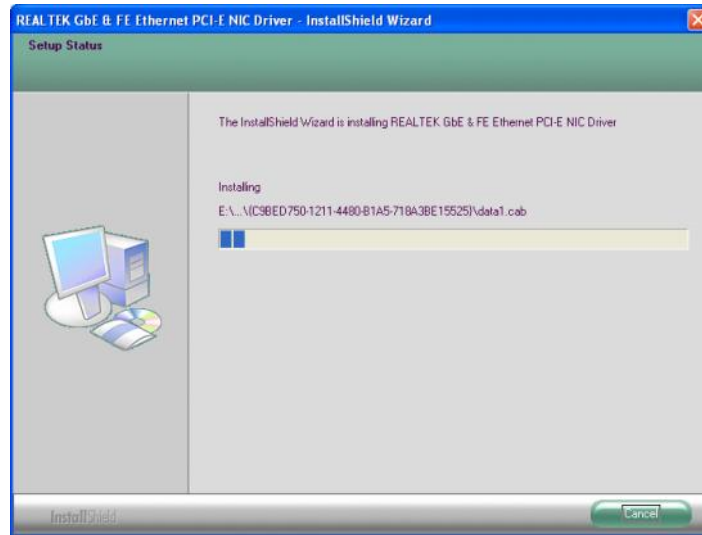

4. Click "Finish" to complete the installation.

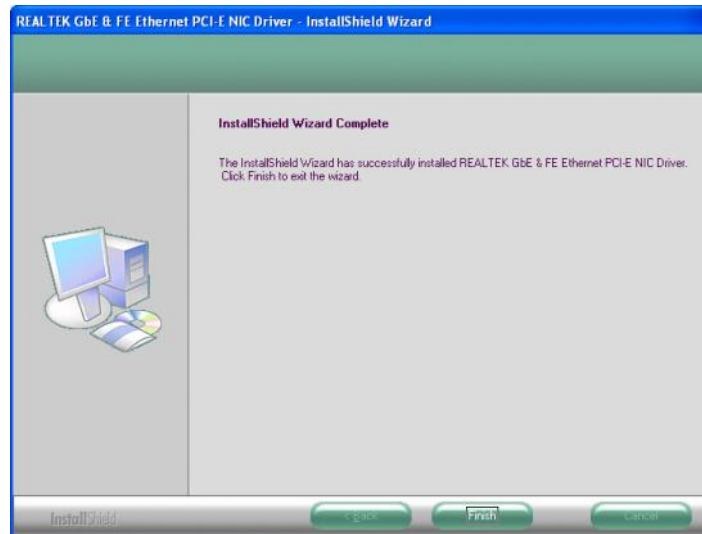


5.4 Installing Audio Driver

1. Run the InstallShield Wizard for Audio from the driver directory in your driver CD. Click “Next” to next step.



2. Please wait while running the following installation operation.

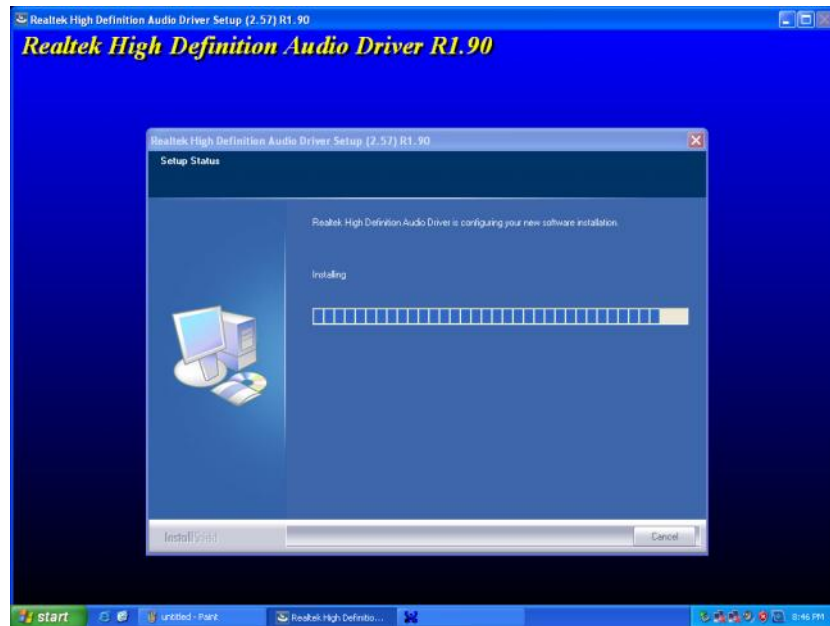

3. You will be asked to reboot your computer when the installation is completed. Please click “Yes, I want to restart my computer now” if you don’t need to install any other drivers. Otherwise, please click “No, I will restart my computer later”, and click “Finish” to complete the installation.



APPENDIX A

WATCHDOG TIMER

Watchdog Timer Setting (From Super I/O W83627HG-AW)

After the system stops working for a while, it can be auto -reset by the Watchdog Timer. The integrated Watchdog Timer can be set up in the system reset mode by program.

Using the Watchdog Function

Start

↓

Un-Lock WDT:

O 2E 87 ; Un-lock super I/O
O 2E 87 ; Un-lock super I/O

↓

Select Logic device:

O 2E 07
O 2F 08

↓

Activate WDT:

O 2E 30
O 2F 01

↓

Set Second or Minute :

O 2E F5
O 2F N N=00 or 08 (See below table)

↓

Set base timer :

O 2E F6
O 2F M=00,01,02,...FF(Hex) ,Value=0 to 255

↓

; IF to disable WDT:

O 2E 30
O 2F 00 ; Can be disable at any time

- Timeout Value Range
 - 1 to 255
 - Minute / Second
- Program Sample

Watchdog Timer can be set to system reset after 5 -second timeout.

2E, 87	
2E, 87	
2E, 07	
2F, 08	Logical Device 8
2E, 30	Activate
2F, 01	
2E, F5	
2F, N	Set Minute or Second N=08 (Min),00(Sec)
2E, F6	
2F, M	Set Value M = 00 ~ FF

APPENDIX B

DIGITAL I/O

Digital I/O Software Programming

- GPI program sample:

O 2E 87	Un-Lock Super I/O
O 2E 87	Un-Lock Super I/O
O 2E 07	Select Logic device
O 2F 07	
O 2E F1	Read Data
I 2F XX	XX is input Data;if no input source,the value is 0F
Q	Quit debug

- GPO program sample:

O 2E 87	Un-Lock Super I/O
O 2E 87	Un-Lock Super I/O
O 2E 07	Select Logic device
O 2F 07	
O 2E F1	Output Data
I 2F XX	XF=0F,1F,2F,...FF (X is Out put Data)
Q	Quit debug

MEMO