


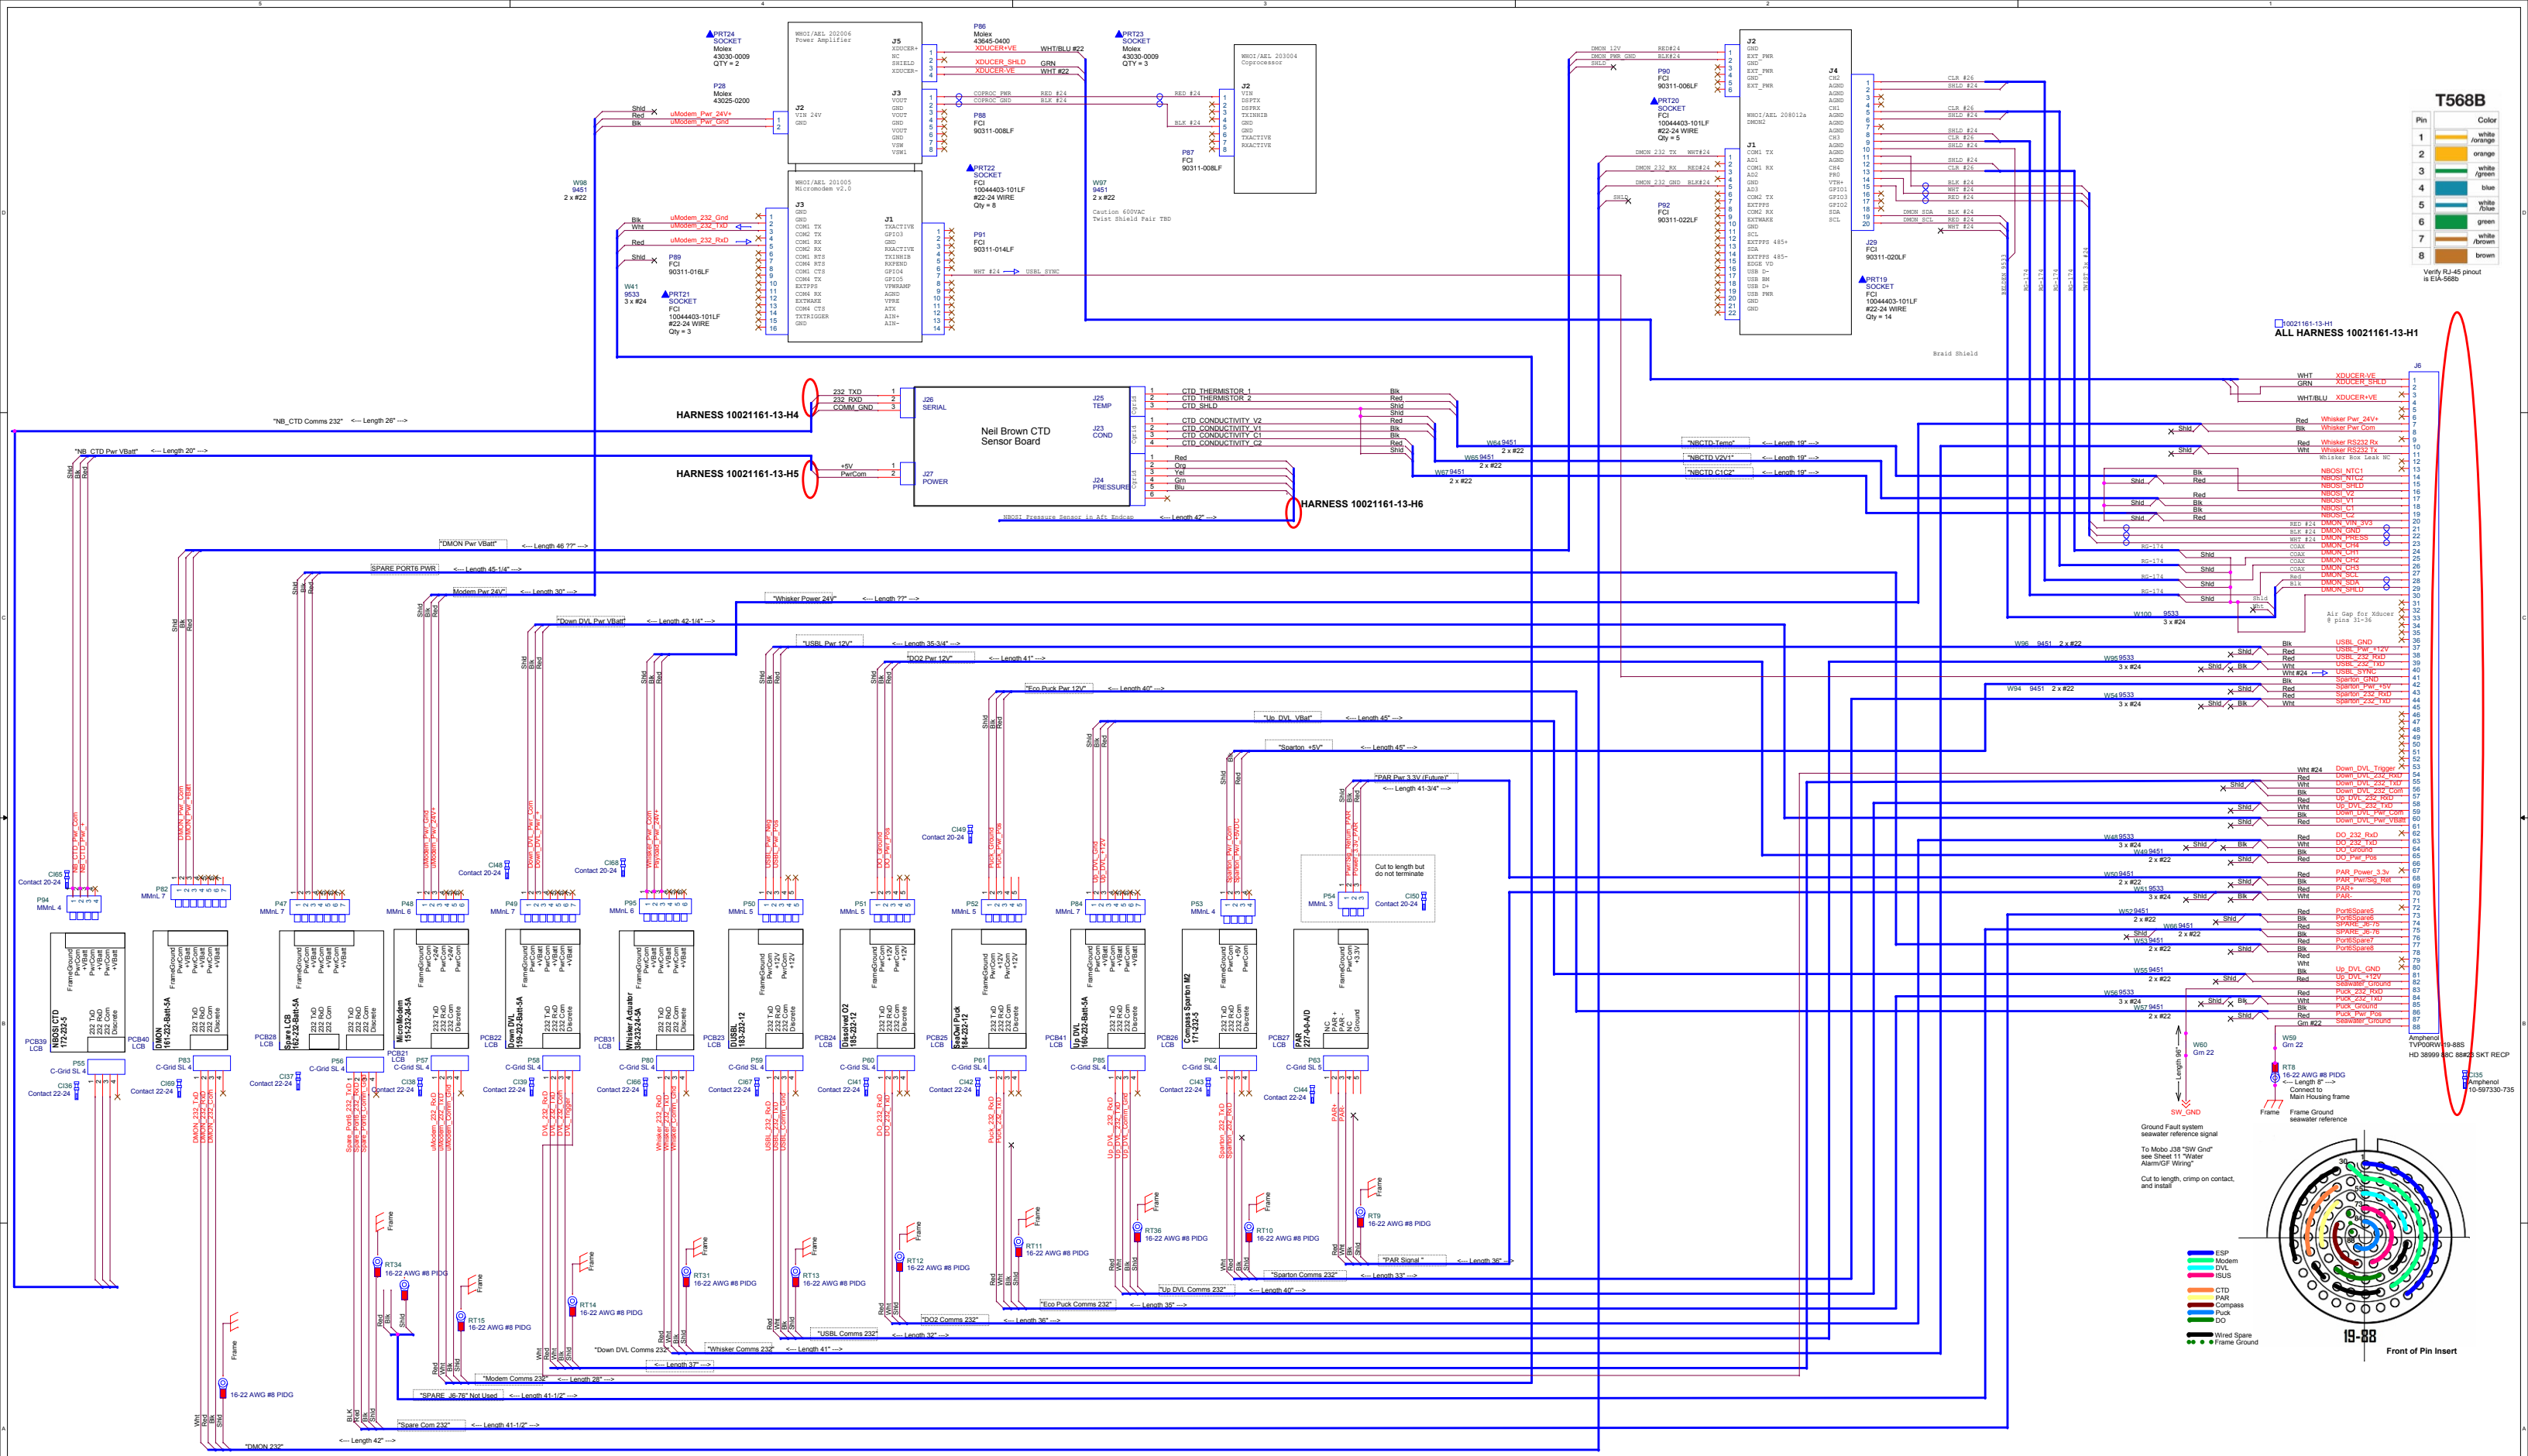

NOTE: Board position on drawing does not correspond to board position in vehicle. See vehicle/mission specific config doc, e.g. "DHS LRAUV Configuration.doc", for board and slot assignments.