

MARS NPC Analog Input Mode Configuration

Set J5 jumpers 1 - 5 to in, in, out, out, out to run board in single ended mode.

Set J5 jumpers 1 - 5 to out, out, in, in, in to run board in differential mode.

