

Plan to remove AUV if it cannot remove itself

1. Check to ensure docking probe is not inserted
 - If it is, remove quick release pin and pull probe out of AUV
2. Sit on top of tube and push/pull lifting eye towards cone
3. Let AUV float to surface

