




Type 6 Seal Instruction Manual

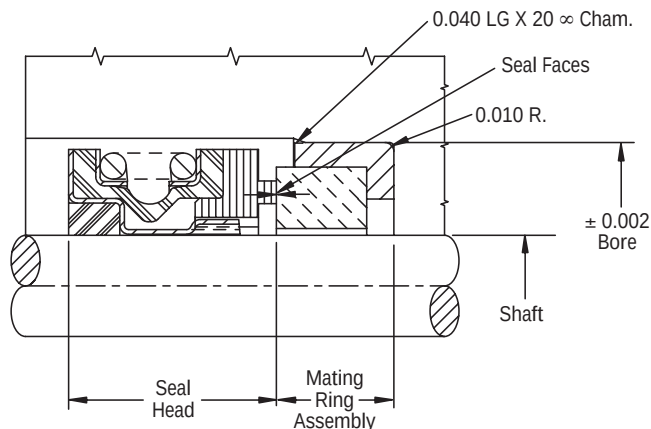

See the seal layout and the Type-6 bulletin for critical dimensional and tolerance data BEFORE starting assembly.

The seal working height will be established by properly locating the seal head on the shaft, unless the seal is equipped with an optional retaining collar.

Installation Instructions

1. Ensure that the sealing faces are clean, lint free gloves are recommended for handling the seal.
2. Inspect the pump housing and shaft for any sharp edges or tool marks. These must be removed to prevent damaging the seal and possible leakage. A lead in chamfer of 0.040 x 20° is recommended to help start the seal.
3. Inspect the seal head for any defects, ensure that the sealing face is CLEAN.
4. Lightly lubricate the shaft where the seal head must pass over during installation with a suitable rubber lubricant. We recommended using P-80 as the rubber lubricant.
5. Lubricate the drive ring of the seal head and install the seal head to the proper location on the shaft. THE DRIVE RING WILL ADHERE TO THE SHAFT ALMOST IMMEDIATELY. Attempting to move the seal head after it is set in position may cause damage and possible leakage.
6. Using the installation tool, insert the seal head into the housing and inspect the seal face to ensure that it is clean and not damaged.
7. Inspect the mating ring bore for any sharp edges or tool marks. These must be removed to prevent damage to the mating ring or cause seal leakage. A lead in chamfer of 0.040 x 20° is recommended to help start the mating ring assembly.
8. Inspect the mating ring assembly for any defects.
9. Apply a light coating of a suitable lubricant to the rubber cup and bore prior to installing the mating ring. We recommend using P-80 as the rubber lubricant.
10. Press the mating ring into the bore evenly, keeping the seal face CLEAN.
11. Complete the pump assembly.



Europe
Slough, UK

Tel: 44-1753-224000
Fax: 44-1753-224224

Latin America
São Paulo, Brazil

Tel: 55-11-3371-2500
Fax: 55-11-3371-2599

Middle East, Africa, Asia
Dubai, United Arab Emirates

Tel: 971-4-3438940
Fax: 971-4-3438970

North America
Morton Grove, Illinois USA

1-800-SEALING
Tel: 1-847-967-2400
Fax: 1-847-967-3915

smiths

A part of Smiths Group plc

For your nearest John Crane facility, please contact one of the locations above.

If the products featured will be used in a potentially dangerous and/or hazardous process, your John Crane representative should be consulted prior to their selection and use. In the interest of continuous development, John Crane Companies reserve the right to alter designs and specifications without prior notice. It is dangerous to smoke while handling products made from PTFE. Old and new PTFE products must not be incinerated.

©2002 John Crane Inc. Print 7/02

www.johncrane.com

ISO-Certified QS 9000