

 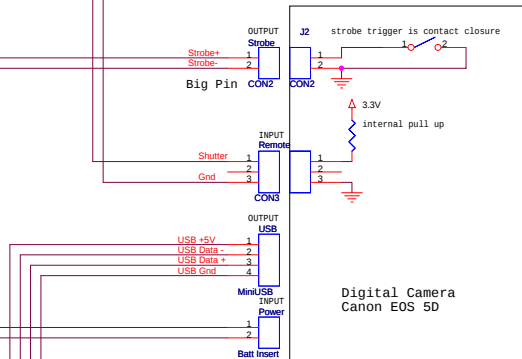


To Controller
Can

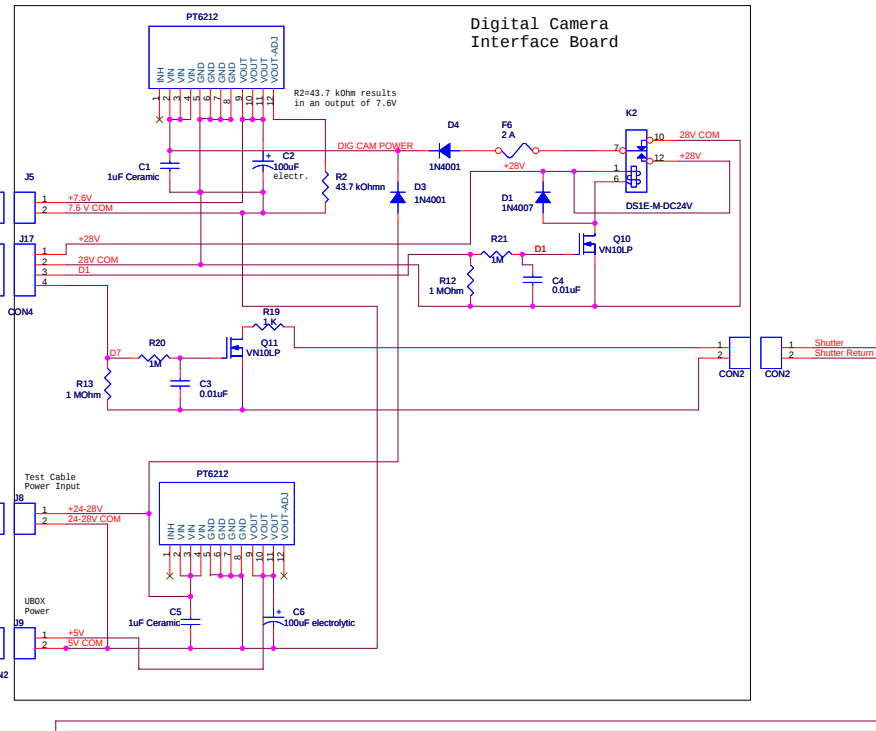

To Communication/
Deck Cable



Cable face
Strobe Connector
Male center pin



Note on Digital Camera:
Digital camera is always off
except when taking a picture.
The D1 signal will activate the relay which
feeds +28V to the
7.6V regulator which powers
the camera, a second signal (D7) is needed
to trigger the camera.

