
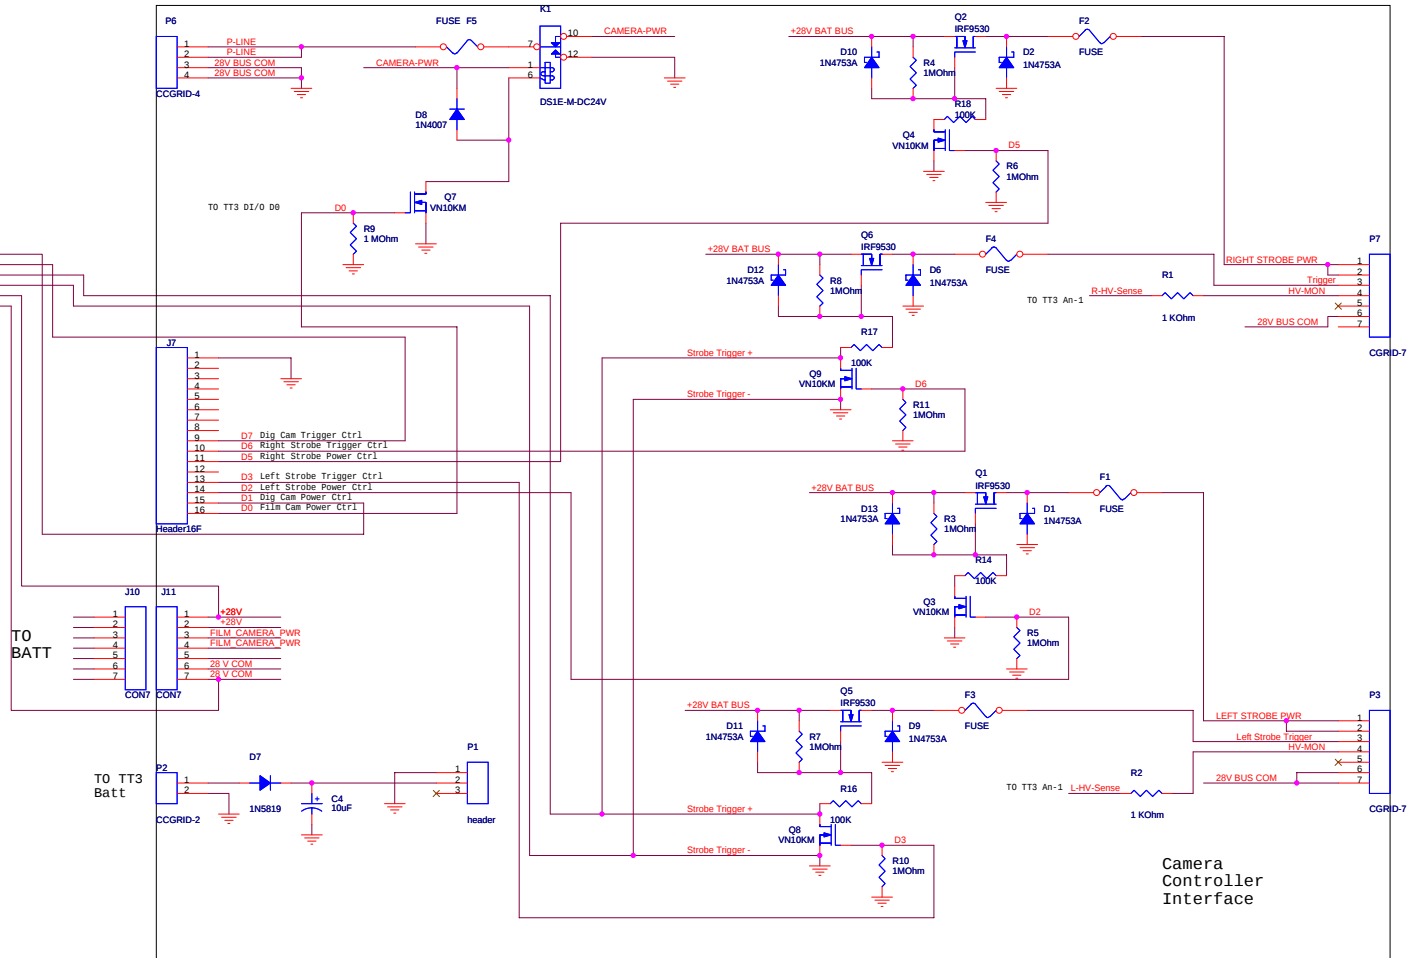


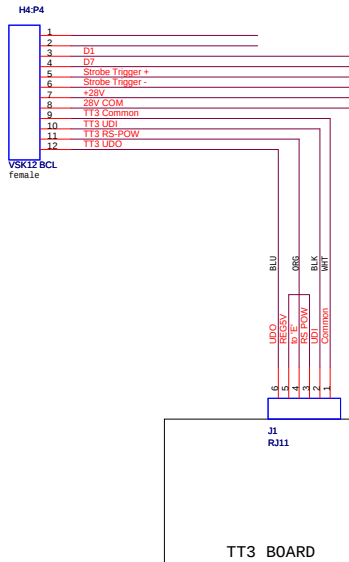

Note on Film Camera:  
Camera is always powered at +28v  
Except for when taking a picture, a  
active low signal will trigger the shutter  
to open for up to 200 msec, when the power  
is reapplied the motor turns the film 1 frame.

Note on Digital Camera:  
Digital camera is always off  
except when taking a picture.  
The 28V is switched on (D0) by a relay  
which feeds the 7.6V regulator which powers  
the camera, a second signalc(D7) is needed  
to trigger the camera.

Rev 1.0.1 : pin 3 and 5 on  
RJ11 for TT3 serial comms  
must be connected

|                                                    |                     |              |
|----------------------------------------------------|---------------------|--------------|
| Title                                              |                     |              |
| H4: Interface Cable Port on Film Camera Controller |                     |              |
| Size                                               | Document Number     | Rev          |
| C                                                  | <Doc>               | 1.0.1        |
| Date:                                              | Monday, May 15 2006 | Sheet 1 of 1 |