

Checking the Total Integrity of an LF System

Application Report

March 2001



SCBA021

Checking the Total Integrity of an LF System

Application Report



Literature Number: SCBA021
March 2001



Contents

Preface	5
1 System Overview	7
1.1 Background Information	7
1.2 Modifying the Transponder	7
1.3 How it Works.....	7
1.4 Testing the Modified Transponder	8
1.5 Positioning the Modified Transponder.....	8
1.6 Connecting to the I/O	8
1.7 Software Commands.....	10
Appendix A S2510 Reader I/O	11
Appendix B S2000 Reader I/O	12

List of Figures

1	Transponder Windings	7
2	Modified Transponder Potted in Box	8
3	Circuit Illustration.....	9
A-1	S2510 Open Collector Outputs	11
B-1	S2000 Open Collector Outputs	12

List of Tables

1	Logic Table for the Test Transponder Connection.....	10
A-1	S2510 Open Collector Outputs	11
B-1	S2000 Open Collector Outputs	12

Read This First

J.A. Goulbourne

Edition One – March 2001

This is the first edition of this Technical Application Report, about **Checking the Total Integrity of an LF System**.

It contains a description of how to incorporate an Integrity Checking System for use with the following products:

S2000 and S2510 readers.

About this Manual

This application note is written for the use of TI-RFid™ Customers who are engineers experienced with TI-RFid and Radio Frequency Identification Devices (RFID).

Conventions

Certain conventions are used in order to display important information in this manual, these conventions are:

WARNING

A warning is used where care must be taken or a certain procedure must be followed, in order to prevent injury or harm to your health.

CAUTION

This indicates information on conditions, which must be met, or a procedure, which must be followed, which if not heeded could cause permanent damage to the system.

Note: Indicates conditions, which must be met, or procedures, which must be followed, to ensure proper functioning of any hardware or software.

Note: Information:
Information which makes setting up, or procedures, that makes the use of the equipment or software easier, but is not detrimental to its operation.

Checking the Total Integrity of an LF System

ABSTRACT

After a Low Frequency RFID system has been installed and commissioned it is often difficult to automatically check that the total system is functioning correctly. This Application Note describes a method whereby the system integrity can be checked at any time, using the I/O capabilities of the Reader. Thus increasing operator confidence and making life easier for the support engineer to fault find.

The fact that no transponder ID numbers are being sent to the controlling process could be due to a number of issues. Firstly that there are no transponders (transponders) present; or secondly there is a malfunction in the RF module in the reader; or thirdly the antenna is damaged, in all these cases transponders could pass through the antenna system unnoticed.

By placing a modified transponder next to the systems antenna and using a spare I/O port on the reader the transponder can be switched on or off. When the transponder is switched ON this effectively creates a faraday cage around it and the systems antenna does not read from it. When the transponder is switched OFF then the transponder acts normally and the system would read it.

1 System Overview

1.1 Background Information

Texas Instruments LF transponders have a property called 'Signal Capture'. That is, if a transponder has a 6dB stronger signal than another, the system will lock-on to that transponder and will ignore all other weaker signals. (This is similar to the way your FM car radio changes to the strongest local radio station as your journey progresses). This property is used for the system integrity check, by having a modified transponder next to the antenna, which can be turned ON and OFF.

When the transponder is turned ON, it becomes the strongest signal and is immediately read and the ID reported to the controlling process but when turned OFF, is not recognized by the system, which continues to operate in the normal way. The reader's own outputs are used to carry out switch the transponder off and on.

1.2 Modifying the Transponder

The transponder has to be modified to enable it to be switched OFF and ON.

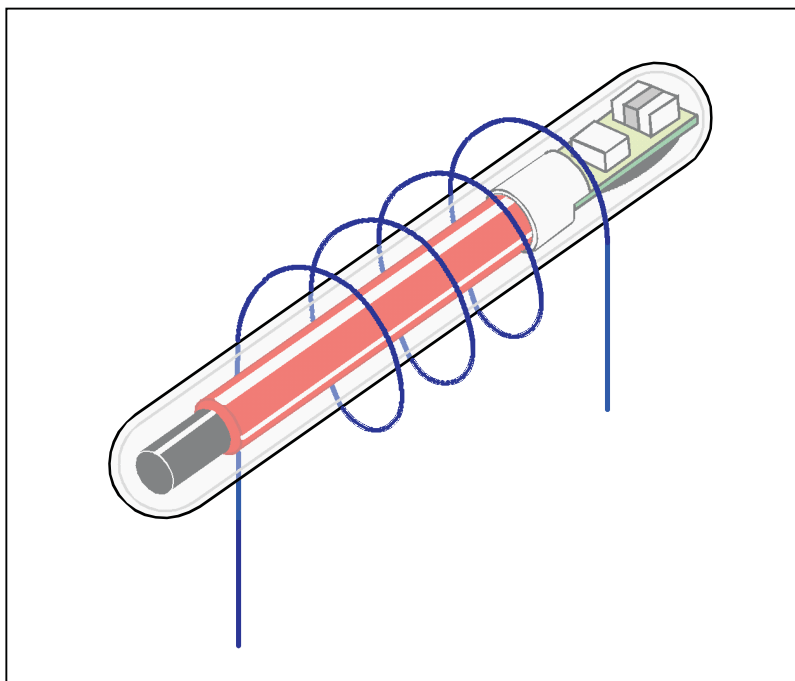


Figure 1. Transponder Windings

It is necessary to make 3 loose windings of light wire (0.5 mm /20 AWG) around the transponder antenna. In practice the transponder would be inserted into a plastic sleeve that gives the necessary 5mm (3/16") spacing around it.

1.3 How it Works

The ends of the wire turns are soldered to screened twisted pair cable, which is connected to a spare I/O port on the Reader. When the cable ends are connected together, the shorted loops create a Faraday cage around the transponder and the transponder will not operate but if the ends are not connected, the transponder will function as normal.

1.4 Testing the Modified Transponder

A hand held reader or the system antenna can be used to test this modification. Place the transponder next to the antenna with the cables ends open circuit and the transponder should be read. Next short circuit the cable ends and the transponder should not be read.

If this does not work then the transponder's antenna could be de-tuned by one of the following:

- If the wire gauge used is heavier than that indicated above.
- If the turns of wire are too close together
- If the wire is wound too tightly.

Check out the modifications to see if one of the above is the cause and correct it in turn and then re-test.

1.5 Positioning the Modified Transponder

The complete transponder, plastic sleeve and winding should be potted in a plastic box for attachment close to the antenna. Inside the potting box, the light wire used for the shorting turns, should be connected to a shielded twisted pair cable long enough to reach the reader I/O connector.

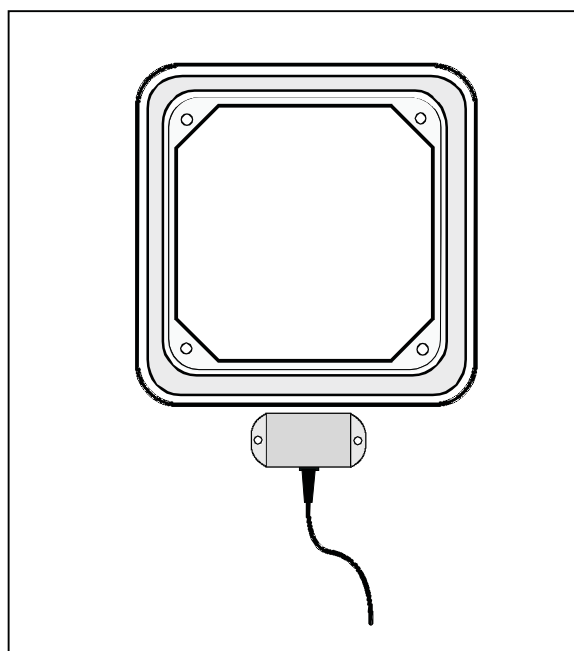


Figure 2. Modified Transponder Potted in Box

1.6 Connecting to the I/O

The reader's open collector outputs are used to make and break the circuit. Appendix A details the Open Collector Outputs for the S2510, whilst Appendix B shows the Open Collector Outputs of the S2000 reader.

The open collector outputs can directly drive a low current 5V relay and the shorting loops around the transponder are connected across the normally closed relay outputs as shown in [Figure 3](#).

Pin 1 of the connector is 5V and OC0 is pin 2. These connect as shown to the relay, which in this case is an OMRON G6N-2-Y and is shown looking at its pins from the bottom.

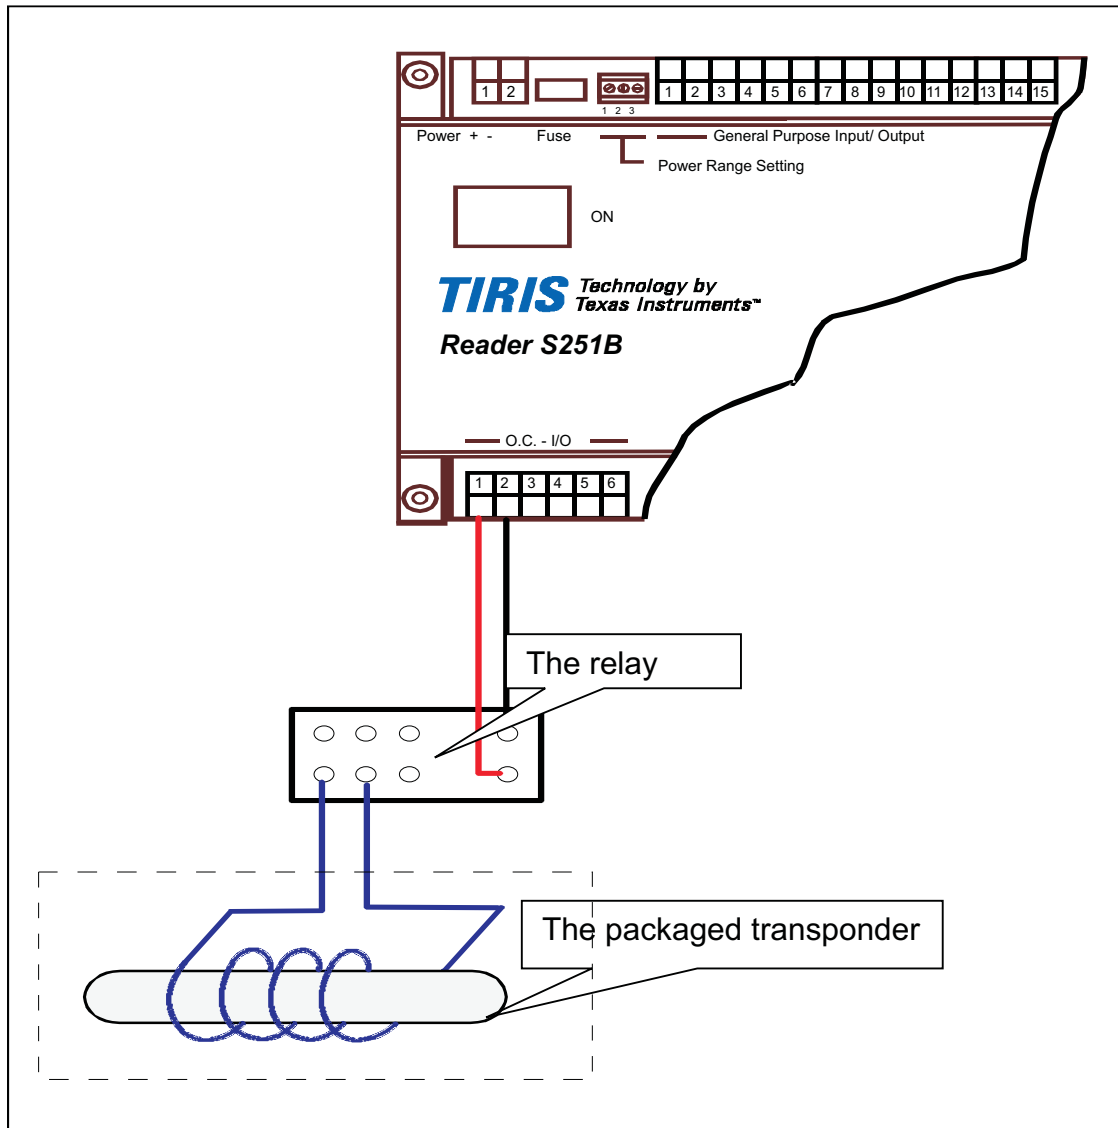


Figure 3. Circuit Illustration

1.7 Software Commands

At power up the Reader's I/O is normally switched OFF (Low). Connecting the transponder to the normally closed contacts (NC) of the relay, at power-up the transponder will be disabled and will not be read. To activate the transponder, the open collector output OC0 needs to be activated (turned ON) using the ASCII Protocol "H" command. While commands are available to check the status of OC0 and turn it OFF or ON, the simplest approach is to invert or toggle both open collector outputs with the command: 'HO0400'. So if both outputs are OFF, they will be ON after the command has been actioned and vice versa.

Table 1. Logic Table for the Test Transponder Connection

READER COMMAND	I/O	RELAY CONTACTS		TEST TRANSPONDER	COMMENT
		NO	NC		
Power Up	Low	Open	Closed	OFF	Test transponder ID not read.
HO0400	High	Closed	Open	ON	Test transponder ID read.

Thus, if at any time the total system integrity needs checking – sending the appropriate command will activate the relay and enable the transponder. If the system is functioning correctly, the controlling process will immediately receive the number of the modified transponder.

Information:

Note: If a Read/Write transponder is used, you can program a special number into the transponder indicating it is the test transponder and not one used in the application.

Appendix A S2510 Reader I/O

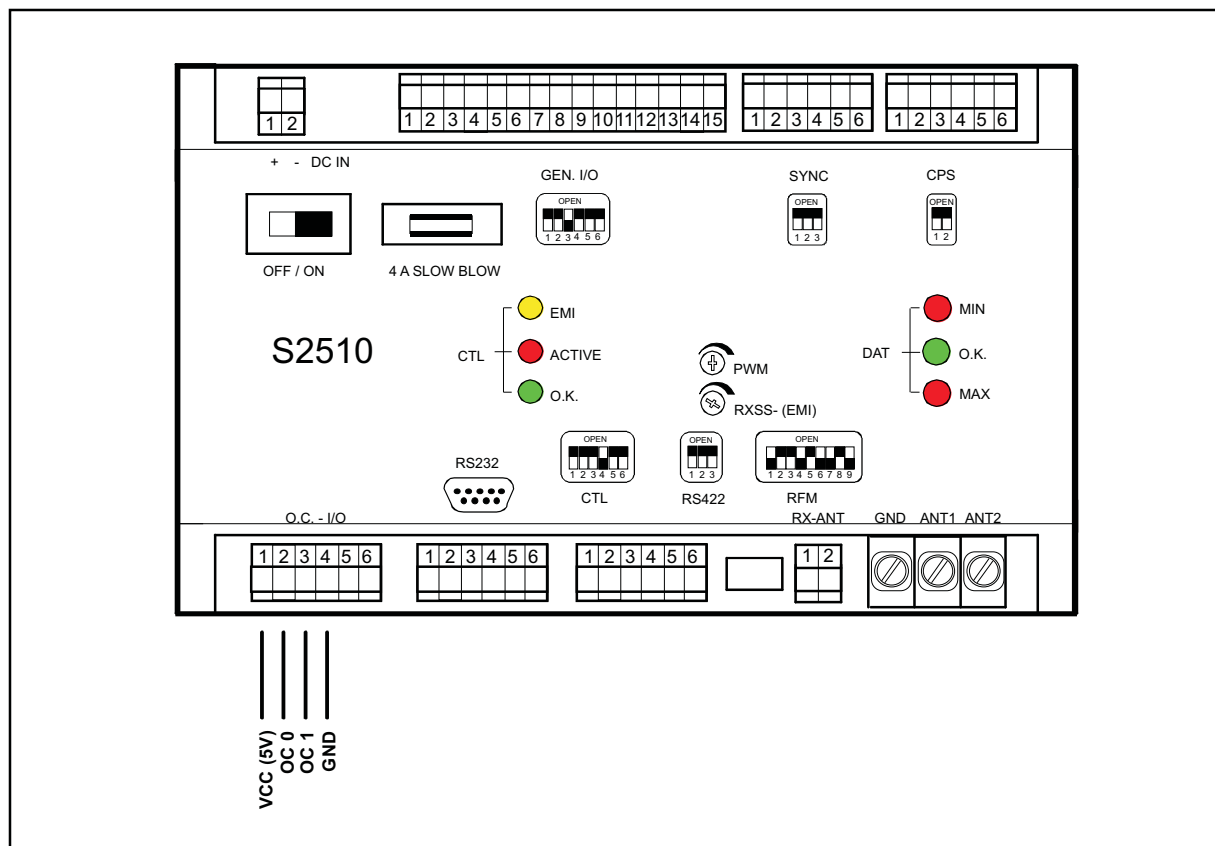


Figure A-1. S2510 Open Collector Outputs

Table A-1. S2510 Open Collector Outputs

		MIN	TYP	MAX
V_{OL}	Low Level Output Voltage ($I_{OL} = 500\text{mA}$)			1.3V
V_{OH}	High Level Output Voltage			80V
I_{OL}	Low Level Output Current			500mA

Appendix B S2000 Reader I/O

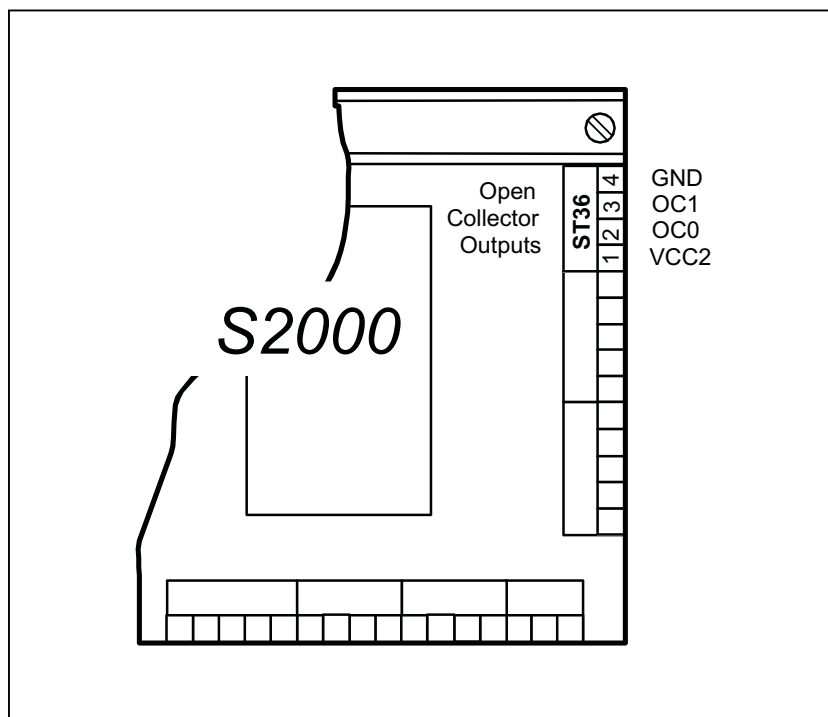


Figure B-1. S2000 Open Collector Outputs

Table B-1. S2000 Open Collector Outputs

		MIN	TYP	MAX
V_{OL}	Low Level Output Voltage ($I_{OL} = 500\text{mA}$)			1.3V
V_{OH}	High Level Output Voltage			80V
I_{OL}	Low Level Output Current			500mA

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

Products		Applications	
Amplifiers	amplifier.ti.com	Audio	www.ti.com/audio
Data Converters	dataconverter.ti.com	Automotive	www.ti.com/automotive
DSP	dsp.ti.com	Broadband	www.ti.com/broadband
Interface	interface.ti.com	Digital Control	www.ti.com/digitalcontrol
Logic	logic.ti.com	Military	www.ti.com/military
Power Mgmt	power.ti.com	Optical Networking	www.ti.com/opticalnetwork
Microcontrollers	microcontroller.ti.com	Security	www.ti.com/security
Low Power Wireless	www.ti.com/lpw	Telephony	www.ti.com/telephony
		Video & Imaging	www.ti.com/video
		Wireless	www.ti.com/wireless

Mailing Address: Texas Instruments
Post Office Box 655303 Dallas, Texas 75265

Copyright © 2006, Texas Instruments Incorporated