

Z Cam Sync Cable Introduction

How to synchronize with E1

It is possible to synchronize multiple cameras through I/O port on E1.

A sync cable is needed for each camera to realize the synchronization.

For the Sync Cable, you can choose:


1. Develop on your own. We provide our open SDK at: <https://github.com/imaginevision>
2. Purchase from us.

How do Z Cam Sync Cable work

Z Cam Sync Cable uses Mater-Slave mechanism to synchronize multiple cameras.

This means that there will be one master sync cable and several slave cables in order to synchronize the cameras.

You can control the master camera through the camera body or Z Camera APP to control all the cameras.

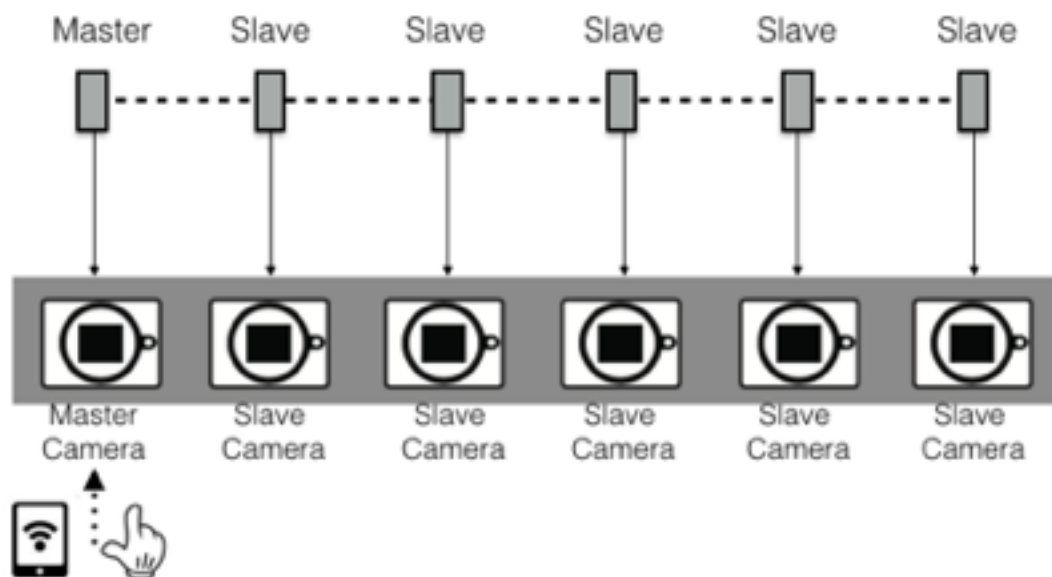

How to use Z Cam Sync Cable

Please power on the cameras **AFTER** you connect the sync cable to the cameras.

1. Set your camera and connect sync cable to E1 through I/O port



2. Power on the cameras.
3. Please press the MODE button of all cameras one time to enable the sync cable first. Then change to the mode of all cameras you want .
4. Control the master camera (the camera connect with master sync cable) to control multiple camera. (only control shutter sync)