

Note 1: On Littelfuse GFI PGR-2601 the datasheets and package use symbol for fault state relay condition 13-14 is normally closed, open on fault 15-16 is normally open, closed on fault

Note 2: The diode across the power lines should be mounted with as short leads as possible

SET CONFIG DIP SWITCHES TO LATCHING and FAIL SAFE

ALL RELAYS CLOSED WHEN ENERGIZED
FAULT CONDITION DENERGIZES RELAYS

400 VDC OUT To Umbilical

400 VDC IN From Power Supply

SW GND For External Seawater Gnd Connections

E-STOP

110 VAC

Ethernet

Serial Port

Shaeve Counter

Amphenol Bulkhead Female Face View

 Monterey Bay Aquarium Research Institute 1700 Sandhill Road, Moss Landing, CA 95039			
Title	Part Number	Project	Rev
MINIKROY-GFI drawer	<Part Number>	<Project>	<Rev>
Engineer	Size/Document Number	Part Number	Project File
A. Sherman	C -<doc>	<Part Number>	<Project File>
Designer	Date	Yender, Mark R. 2015	Sheet 1 of 1
Reviser			

