

Please use the following instructions to install the Ranger 2 software v6.04.06.7642.

Note: Please ensure all software programs are exited and any anti-virus and or firewall programs are temporarily stopped prior to starting the procedure.

Ranger 2 software v6.04.06.7642 is stored on the Sonardyne FTP. Send an email to support@sonardyne.com to request the FTP access instructions.

The logon details are:

Username: S00017285

Password: GBC2wqKk7om9

The software will need to be stored on the Ranger 2 PC.

You may need to check the current security key (dongle) programming. If you have any concerns, please send an email to support@sonardyne.com

1. If you are using either Micro or Mini Ranger 2 systems the procedure includes deleting any current job information so please note any important system information (port set-up, offsets etc).
2. Uninstall the currently installed Ranger 2 software.

NOTE: Only complete steps 3 and 4 if you are using Micro or Mini Ranger 2 systems. If you are using Ranger 2 USBL, DP or Survey system proceed to step 5.

3. Delete the current SingleJob folder in location:
C:\Users\Public\Documents\Sonardyne\Ranger2\Jobs
4. Delete the ApplicationSettings.xml and JobInfo.XML files stored in folder:
C:\ProgramData\Sonardyne\Ranger2\System\Config
5. Confirm the Ranger 2 security key dongle is installed.
6. Review the release notes.
7. Use the attached TB23-001 to mount the 8251-015-A33.iso.
8. Run the setup.exe as an administrator.

