

Wave Glider® SV3 Interface Control Description

**Communications and Control
Interfaces for Payload Integration**

**Revision A
December 2013
Part Number 04921**



Wave Glider® SV3 Interface Control Description: Communications and Control Interfaces for Payload Integration

Copyright © 2013 Liquid Robotics, Inc.

Confidential computer software. Valid license from Liquid Robotics, Inc. required for possession, use or copying. Consistent with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under vendor's standard commercial license.

Liquid Robotics®, LRI, Wave Glider®, Wave Glider Management System, WGMS, and SHARC® are worldwide trademarks of Liquid Robotics, Incorporated. Other products and company names mentioned herein may be the trademarks of their respective owners.

The Wave Glider mechanism is patented under US Patent Number 7,371,136 and other patents pending. All aspects of the Wave Glider product have been developed at private expense by Liquid Robotics, Inc.

The information contained herein is subject to change without notice. The only warranties for Liquid Robotics, Inc. products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. Liquid Robotics, Inc. shall not be liable for technical or editorial errors or omissions contained herein.

Document Part Number	Revision	Publication Date	Changes
04921	A	December 2013	This is the initial release of this document.

Table of Contents

About this Document	xv
1. Overview	1
Wave Glider Major Components	1
Payload Integration	3
2. Mechanical Specifications	4
Float Assembly	4
Recovery Buoy and Release Mechanism	6
Float Overall Dimensions	8
Command and Control Unit (CCU)	8
CCU Weight and Dimensions	9
Float Payload Bays	10
Solar Panels	10
Solar Panel Specifications	11
Shading and Shade Compensation	11
Float to Glider Umbilical	12
Glider Recovery Mechanism	16
Motion Isolator	17
Glider	20
Glider Dimensions and Payload Attachment Points	23
Thruster Module	24
Towfish Options	26
Gateway Towfish	26
Turbidity Towfish	27
Towfish Tether	28
Custom Towfish	30
3. Electrical Specifications	32
Physical Connectivity	32
CCU Electrical	33
G1, G2, G3 - General Purpose Expansion Ports	35
S1, S2, S3, S4 - Sensor Connections	35
HV - High Voltage Connection	35
U1 - Umbilical	35
D1 - Debug Port	35
O1 - System Connection	35
O2 - System Connection	35
Power Key	35
Power Key Indicator Light	36
Payload Connectivity	36
Payload Communication Connectivity	36
Payload Power Connectivity	37
GPS and PPS Connectivity	38
Adaptable Modular Power System (AMPS)	39
CCU Standard Electrical Connections	42
CCU Expansion Ports	42
CCU Sensor Ports	48
CCU High Voltage Connector	50
CCU System Connections	52
Thruster Module Electrical Connections	63
Overview	63
Thruster Module Umbilical Connector	65
Thruster Module Expansion Port Connector	67

Wave Glider® SV3 Interface
Control Description

Unused Connections	68
Batteries	68
Battery System Power	68
Battery Charge Level	69
Battery Discharge Characteristics	69
Battery Power Input	70
External Battery Charging	70
LRI Multi-Function Debug/Charging Cable	70
LRI Battery Charger	70
Charging the Batteries	71
APU Electrical Connections	72
A1, A2 - APU Expansion Port Connectors	75
4. CCU Remote Communications and Control	77
CCU Communications Functions	77
Telemetry and Polling	77
Command Processing	78
Command and Message Responses	78
CCU Communications Channels	79
Iridium Relay Link	79
CCU Communications Security	80
CCU Communications Components	80
Communication Relays	81
Standard Modems	82
Iridium Network Servers and Satellites	82
CCU Communication Data Types	83
Telemetry	83
Commands	83
Responses	83
Communication Packets	83
Relay Data Packets	85
Addresses	86
Vehicle Unique ID	86
Transaction ID	86
Communication Data Formats	86
Little-Endian Byte Format	87
Waypoint Values	87
Heading Values	87
Distance Values	87
Time Values	87
Heading Values	88
Distance Values	88
Temperature Values	88
File Names	88
GPS	88
Navigation	89
Navigation Modes	89
5. Commands	91
Command Data Packet Format	91
Command Summary	92
Commands for SV2 and SV3 Vehicles	92
Commands for SV3 Vehicles Only	95
6. Vehicle Responses	96
ACK/NAK Protocol	96
ACK/NAK Packet Format	96

Wave Glider® SV3 Interface
Control Description

ACK Data Type Numbers	97
NAK Data Type Numbers	97
Unsolicited Response Type Numbers	98
Relay Messages	98
ACK Response Data	98
ACK - Status with Waypoint Read-Back (0X10)	98
ACK - Status Return (0x11)	100
ACK - Vehicle Identification Data (0x12)	101
ACK - No Payload Response (0x13)	103
ACK - Power Controller Status (0x14)	104
ACK - Rudder Control Data (0x15)	105
ACK - Read File Block (0x1B)	106
ACK - Detailed File List Data (0x1C)	107
ACK - Unique ID (0x1E)	108
ACK - File at Destination (0x1F)	108
ACK - File List Data (0x31)	109
ACK - Simple (0x13)	110
ACK - Console Data (0x3D)	110
ACK - File List Item (0x33)	110
ACK - Secure On (0xA5)	110
NAK Response Data	111
NAK - Invalid Command (0x22)	111
NAK - Invalid Data (0x22)	111
NAK - File Error (0x24)	111
NAK - Security Failure (0x25)	112
NAK - Console Data (0x26)	112
NAK - With Description (0x27)	113
Restricted ACK Responses	113
Special ACK Data Types	113
ACK - Debug Buffer (0x16)	113
ACK - Sub Heading Buffer (0x17)	113
ACK - PID Integral Cache (0x18)	114
ACK - PID Operating Parameters (0x19)	114
Unsolicited Messages	114
New File Available (0x60)	114
Send Console Output to Client (0x1D)	115
Relay-Only Message	115
Relay Status (0x70)	115
Vehicle File System Responses	116
New File Available	116
Read File Block ACK	117
File ACK	117
File NAK	118
File At Destination ACK	119
Vehicle Crypto Responses	119
Secure On ACK	119
7. Vehicle Telemetry	121
Telemetry Packet Format	121
Telemetry Types	121
Telemetry Buffering	122
Encrypted Output Packet 0xA6	122
NAL Tracker Telemetry 0x03	123
Shout Tracker Telemetry 0x05	124
Standard Telemetry Data 0x06	125

Wave Glider® SV3 Interface
Control Description

Alarm Bytes	127
Float Status Byte	128
Telemetry - Power Controller Status 0x7	128
DB3.5 Power Control Status 0x08	129
Twist Status 0x09	132
Mobile WGMS Heartbeat 0x10	133
Mobile WGMS Sync Packet 0x11	134
Relay Status 0x70	134
System Information 0x71	135
System Information Records	135
System Information Types	135
Partition State Record (Type 1)	136
Single Payload Packet 0x80	136
Weather Station Packet (Type 1)	137
Payload Status Packet (Type 2)	137
Payload Enhanced Pressure Weather Station Report Type 5	138
Payload AISyG Status Packet (Type 16)	139
Payload AISyG Static Record (Type 17)	139
Payload AISyG Position Report (Type 18)	140
Sensor Sample Record (Unparsed)	141
Fluorometer (C3) Data Type 96	141
Compressed CTD Data Type 112	142
Compressed CTD Data	142
Compressed CTD With Oxygen Sensor Data	142
Payload ECO Puck Sensor Data Type 123	143
Payload CStar Sensor Data Type 124	144
Payload Benthos Modem Data Type 125	145
Payload Datawell MOSE Sensor Data Type 126	146
Payload VEMCO VR2C Data Type 127	147
Payload ADCP Data Type 128	147
Payload Aquatracka Data Type 130	148
Payload WHOI Micro Modem Type 131	149
Harmony Payload Type 132	149
Cefas OrbComm Payload Type 134	150
Turbidity Payload Type 135	151
Sonardyne Tsunami Sensor Payload Type 138	151
Marine Magnetism Magnetometer Type 140	152
Payload CO2 Sensor Type 144	152
Payload Thermistor Array Data Type 192	153
Multi-Payload Packet 0x81	153
Payload Packet 0x91	153
Sensor Sample Records	154
8. CCU Payload Communications	155
Sensor Port Payload Communications Protocol	155
Communication Method	155
Protocol Message Format	158
Addresses	161
Other Considerations	162
Payload Message Types	163
Payload Message Packet Descriptions	164
Message Protocol Use Cases	175
9. Payload Development Mechanical and Electrical Considerations	180
Float Payload Considerations	180
Weight	180

Wave Glider® SV3 Interface
Control Description

Center-of-Gravity	181
Sail Area Considerations	182
Deck Mounting Considerations	182
Towing Considerations	183
Payload Power Considerations	183
Power Requirements - Evaluating Payload Integration Feasibility	184
Power Requirements - Evaluating Wave Glider Mission Feasibility	184
Sustainable Payload Power	184
Adapting Wave Glider SV2 Payloads for use on the Wave Glider SV3	186
Mechanical Considerations	186
Electrical Considerations	187
Modular Payload Dry Boxes	188
Weight of Modular Payload Dry Boxes	190
1-MPU Payload Dry Box	191
3-MPU Payload Dry Box	193
Auxiliary Power Unit (APU)	194
3-MPU Payload Development Kit	195
Glider Payload Considerations	197
Drag	197
Glider Ballast	198
Wing-Payload Interference	199
Balance and Flotation	200
Poor Sail Area Locations	201
Acceptable Sail Area Locations	201
Trailing Wires	202
Towfish Payload Considerations	203
10. Payload Development - Hardware Environment	204
AMPS Modules	204
Power Domain Controller (PDC) Module	204
Battery Charger Module	205
Solar Panel Input Module	207
High Voltage Output Module	208
Buck-Boost Regulated Output Module	209
Bridge Module	210
Iridium and GPS Module (IGM)	212
Expansion Switch Module (ESM)	212
Sensor Management Computer (SMC)	212
Overview	212
Console Port	213
Full RS-232 Ports (UART0 and UART1)	214
Configurable UART Ports (UART2/3, UART4/5, and UART6/7)	214
GPS/PPS Port	215
Power Ports	216
CAN Port	216
USB Ports (not USB OTG)	217
USB OTG Port	217
Ethernet Port	217
SD Card Expansion Port	218
SPI Expansion Port	219
McBSP Expansion Port	220
I2C Ports	221
11. Payload Development - Software Environment	222
12. Communication Channels for Payload Development and Testing	223
13. Troubleshooting	224

Wave Glider® SV3 Interface
Control Description

Overview	224
Iridium Interface	224
General Checks	224
Re-Booting	224
Contacting Liquid Robotics	225
Problems and Responses	225
No Iridium Connection	225
No GPS Reception.	225
Power Key Light Does Not Blink	225
No Float Payload Power From CCU	226
No Glider Payload or Towfish Payload Power From CCU	226
No CCU-to-Payload RS-232 Communications	226
Float Continuously Re-Boots	226
Glider Continuously Re-Boots	227
Interpreting CCU Alarms	227
Sub Leak Alarm (Byte 0 bit 0)	227
Float Leak Alarm (Byte 0 bit 1)	228
Sub-to-Float Comms Alarm (Byte 0 bit 2)	228
Payload Alarm (Byte 0 bit 3)	228
Float Battery Low Alarm (Byte 0 bit 4)	228
Umbilical Fault Alarm (Byte 0 bit 5)	228
GPS Not Functioning (Byte 0 bit 7)	229
Sub Reboot Alarm (Byte 1 bit 1)	229
Float-to-Sub Comms Error (Byte 1 bit 2)	229
Float Temperature Threshold Exceeded (Byte 1 bit 4)	229
Float Pressure Threshold Exceeded (Byte 1 bit 5)	229
EPROM Error (Byte 1 bit 6)	230
Float Reboot Alarm (Byte 1 bit 7)	230
Contacting Liquid Robotics, Inc.	230
A. Command Descriptions	231
Commands for SV2 and SV3 Vehicles	231
No Command (0x0000)	231
Set Default Communication Channel (0x000A)	231
Read Unique ID (0x000E)	232
Set Unique ID (0x000F)	232
Hold Current Position (0x0001)	232
Hold Station at Waypoint (0x0002)	233
Follow Sequential Waypoint Course (0x0003)	233
Rudder Right/Left/Center (0x0004, 0x0005, 0x0006)	234
Follow Fixed Heading (0x0008)	234
Set Rudder Position (0x1006)	234
Twist Umbilical (0x1007)	235
Toggle Marker Light (0x2000)	235
Visible Light Off/On (0x2001, 0x2002)	235
IR Light Off/On (0x2003, 0x2004)	236
XBee Comm Off/On (0x2005, 0x2006)	236
Retrieve Status (0x4001)	236
Set Status (0x4002)	237
Retrieve Identification (0x4003)	238
Retrieve Power Status (0x5001)	238
Retrieve Rudder Control (0x5002)	239
Set Rudder Control (0x5003)	239
Set Parameters (0x6000)	240
Retrieve Debug Buffer (0x7000)	247

Wave Glider® SV3 Interface
Control Description

Retrieve Sub Heading Buffer (0x7001)	247
Retrieve PID Integral Cache (0x7002)	247
Retrieve PID Operating Params (0x7003)	248
New Waypoint (0x8000)	248
New Waypoint with Attributes (0x8001)	249
Read Waypoint (0x8003)	249
Follow Course and Loop (0x8101)	250
Follow Course With Options (0x8102)	250
Add MMSI to Watch List (0x8200)	251
Initialize File Write (0x9000)	251
Write File Block (0x9001)	253
Delete File (0x9002)	254
Read File Request (0x9003)	254
Get Detailed File List (0x9004)	255
Select Program (0x9005)	256
Write Console Input to Vehicle (0x9006)	257
Read File Transaction Closed (0x9007)	258
Get File List (0x9008)	258
Write Console Script (0x9100)	259
Write Console Binary (0x9101)	260
Float Reboot (0xA000)	260
Reserved (0xA51E)	260
Secure On (0xA500)	261
Secure Authenticate (0xA501)	261
Secure Register Client (0xA502)	261
Secure Off (0xA504)	262
Secure Enable Partition (0xA505)	262
Retrieve Log File (0xB001)	262
Commands for SV3 Vehicles Only	263
SV3-Only Commands: Syntax and Descriptions	263
B. Relay Header Data	273
Iridium Vehicle-to-Remote Applications Data Packets	273
Mobile Originated Lat/Long Data	274
Relay Vehicle-to-Remote Applications Packets	274
Virtual Relay Vehicle-to-Remote Applications Packets	276
Iridium Remote Applications-to-Vehicle Data Packets	277
Relay Remote Applications-to-Vehicle Packets	278
Virtual Relay Remote Applications-to-Vehicle Packets	279
C. CRC-16 Calculation	280
D. PIB and PM Slot Configuration Commands for SV2 Payloads Adapted to SV3 Vehicles	281
Overview	281
Issuing PIB and PM Slot Configuration Commands	281
PIB PM Slot Configuration Commands	283
Reading the PIB Configuration	284
PIB boardID	285
PIB setDly	285
PIB ID	285
PM Slot Commands	286
Empty ID	286
Power On	286
Power Off	286
Power AutoRun (mode)	287
Power Status	287

Power ID	287

List of Figures

1.1. Wave Glider System (Float, Umbilical, and Glider)	2
1.2. Optional Towfish	2
2.1. Float Assembly Exploded View	4
2.2. Float Integral Features	5
2.3. Float Overall Dimensions (mm)	8
2.4. CCU	8
2.5. CCU Dimensions (mm)	9
2.6. Float Payload Bay Dimensions (inches)	10
2.7. Standard Solar Panels	10
2.8. Umbilical Assembly Overview	13
2.9. Umbilical-to-Float Connection	14
2.10. Umbilical-to-Glider Connection	15
2.11. Glider Recovery Mechanism	16
2.12. Glider Recovery Mechanism Locked Onto Recovery Hooks	17
2.13. Motion Isolator - Top View	17
2.14. Motion Isolator Extended, Cut-Away View	18
2.15. Motion Isolator Compressed, Cut-Away View	19
2.16. Glider	20
2.17. Glider with Thruddeur Turned - Side View	21
2.18. Glider with Thruddeur Turned - Top View	22
2.19. Glider Payload With Custom Fairing	22
2.20. Glider Payload With Custom Fairing - Translucent	23
2.21. Glider Overall Dimensions - mm [inch]	23
2.22. Glider Attachment Points mm [inch]	24
2.23. Thruddeur Module	24
2.24. Thruddeur Attachment Exploded View	25
2.25. Thruddeur Attached to Glider with Fairings Installed	26
2.26. Gateway Towfish	27
2.27. Turbidity Towfish	28
2.28. Turbidity Towfish Dimensions (mm)	28
2.29. Towfish with Tether 3D	29
2.30. Towfish with Tether Side View	29
2.31. Towfish Tether Dimensions (M)	29
2.32. 4" Modular Towfish	30
2.33. 4" Modular Towfish Dimensions - mm [inch]	31
2.34. Large Payload Towfish	31
3.1. Wave Glider CCU Connection Diagram	32
3.2. CCU Electrical Connections	34
3.3. CCU Electrical Block Diagram	34
3.4. Payload Communications Diagram	37
3.5. Payload Power Diagram	38
3.6. GPS and PPS Diagram	39
3.7. AMPS Power Bus	41
3.8. O1 Octopus Cable	53
3.9. O2 Octopus Cable	54
3.10. Octopus Cable Assemblies Mounted to Bulkhead	55
3.11. Thruddeur Module Electrical Connections	63
3.12. Thruddeur Module Electrical Block Diagram	64
3.13. Battery Charge Level Relative to Voltage	69
3.14. Battery Discharge Time vs. Current Draw	69
3.15. LRI Multi-Function Debug/Charging Cable	70

Wave Glider® SV3 Interface
Control Description

3.16. LRI Battery Charger	71
3.17. Auxiliary Power Unit (APU) Electrical Connections	72
3.18. APU Internal Battery Pack	73
3.19. APU Electrical Diagram	73
4.1. Wave Glider Remote Communications	77
4.2. Vehicle to Remote Applications Iridium Communications	79
4.3. CCU Communications Components	81
4.4. Level 3 Relay Data Packet Format	84
4.5. Level 3 Encrypted Relay Data Packet Format	84
4.6. Level 2 Payload Data Packet Format	85
4.7. Level 3, Level 2, and Level 1 Data Packets	86
4.8. GPS Satellite Constellation	89
5.1. Command Packet Format	91
6.1. ACK/NAK Response Packet Format	96
7.1. Level 2 Telemetry Data Packet	121
8.1. Payload Data Packet Format	157
8.2. Message Packet Format	159
9.1. Float Max Forward Center-of-Gravity	181
9.2. Float Max Aft Center-of-Gravity	181
9.3. Possible Sail Area Problems	182
9.4. Deck Mounted Payloads	183
9.5. Towing a Payload Behind Float	183
9.6. Solar Power Relative To Time and Location	185
9.7. SV2 Forward Payload Dry Box - SV3 Mounting Kit (LRI Part Number 04731)	186
9.8. SV2 Aft Payload Dry Box - SV3 Mounting Kit (LRI Part Number 04732)	187
9.9. SV2 Short Aft Payload Dry Box - SV3 Mounting Kit (LRI Part Number 05224)	187
9.10. 3-MPU Assembly	189
9.11. 1-MPU	191
9.12. 1-MPU Interior Dimensions (mm)	191
9.13. 1-MPU Attachment Points (mm)	192
9.14. 3-MPU	193
9.15. 3-MPU Interior Dimensions (mm)	194
9.16. 3-MPU Attachment Points (mm)	194
9.17. Auxiliary Power Unit (APU) Dry Box	195
9.18. 3-MPU Payload Development Kit Connectors	196
9.19. 3-MPU Payload Development Kit Electronics	196
9.20. 3-MPU Payload Development Kit Electronics Block Diagram	197
9.21. Glider Moving Up	197
9.22. Glider Moving Down	198
9.23. Poor Payload Design/Location	198
9.24. Glider Ballast	199
9.25. Glider Nose Assembly with Ballast	199
9.26. Wing-Payload Interference Area	200
9.27. Checking Glider Underwater Balance	200
9.28. Excessive Forward Payload Sail Area	201
9.29. Excessive Aft Payload Sail Area	201
9.30. Acceptable Payload Sail Area Location	201
9.31. Poor Trailing Wire Location (Tow Point)	202
9.32. Poor Trailing Wire Location (Tow Point)	202
9.33. Acceptable Trailing Wire Location (Tow Point)	203
10.1. AMPS Power Domain Controller Module (PDC)	205
10.2. PDC Electrical Diagram	205
10.3. Battery Charger Module	207
10.4. Battery Charger Module Electrical Diagram	207

Wave Glider® SV3 Interface
Control Description

10.5. Solar Panel Input Module	208
10.6. Solar Panel Input Module Electrical Diagram	208
10.7. High Voltage Module	209
10.8. Buck Boost Output Regulator	210
10.9. Bridge Module	211
10.10. Bridge Module Electrical Diagram	211
10.11. SMC Connector Locations	212
10.12. Console Port Connection	213
10.13. GPS/PPS Connections to a PIB	216
D.1. Vehical Command Form	283

List of Tables

2.1. SV3 Solar Panel Specifications	11
2.2. Solar Panel Shading Considerations	11
3.1. Color and Label Conventions for Wave Glider Connection Diagram	33
3.2. Expansion Port Signals	43
3.3. Pins 1 and 8	49
3.4. Pins 2 and 7	50
3.5. Pins 3, 4, 5, and 6	50
3.6. Pins 1 and 6	51
3.7. Pins 2, 3, 4, and 5	51
3.8. Thrudder Module Umbilical Connector and Expansion Port Signals	64
3.9. LRI Battery Charger Specifications	71
3.10. APU Expansion Port Signals	73
4.1. Navigation Modes	90
5.1. Command Summary	92
7.1. Telemetry Types	121
9.1. Weight of Float and Standard Accessories	180
9.2. Maximum Payload Weight	181
9.3. Weight of Modular Payload Dry Boxes	190
13.1. CCU Alarms	227
A.1. Write Console Script Binary Command Structure	263
A.2. amps	264
A.3. camera	264
A.4. commsManager	265
A.5. ffn	265
A.6. morse	267
A.7. pwrCtl	267
A.8. ship	268
A.9. surfer	268
A.10. telemetry06Reporter	269
A.11. untwist	269
A.12. wap	269
A.13. waterSpeed	270
A.14. xp	270
A.15. xp1	270
A.16. xp2	270
A.17. xp3	271
A.18. genericAlarmReporter	271
A.19. internet	271
A.20. thruster	272
A.21. weatherReporter	272

About this Document

This document is a reference to Wave Glider SV3 mechanical, electrical, communications, and software interfaces commonly encountered in payload development projects.

- Chapters 1-8 define the interfaces for payload development.
- Chapter 9 provides guidance on some key payload development parameters.
- Chapters 10 and 11 contain information on Liquid Robotics payload development hardware and software designed to streamline the payload development process.
- Chapter 12 explains how the WiFi communications link is used for testing during the payload development process.



Note

This document does not contain information on the Wave Glider Management System (WGMS) - a Liquid Robotics remote Wave Glider navigation and communications application. For information on WGMS, see the *Wave Glider Users Guide* and the *Wave Glider Management System™ System Administration Guide*.

The term "remote application" is used in this document to refer to all remote Wave Glider navigation and communications applications, including WGMS.

Chapter 1. Overview

The Wave Glider® is an autonomous ocean-going platform for deploying custom ocean-to-surface sensor systems. This chapter describes the major components of the Wave Glider SV3 system and the key parameters impacting payload integration feasibility.

Wave Glider Major Components

The Wave Glider system has seven major components:

- **Float** —The Float is the component that rides on the surface of the water. It contains the batteries, control and communications electronics, and optional payloads. Three solar panels on the Float deck maintain the battery charge. The Float deck typically has additional sensing and communications devices installed. A buoy with a retrieval line can be released from the back of the float to simplify recovery. For more information see:
 - [“Float Assembly” \(page 4\)](#)
- **Umbilical** —The Umbilical is a high-strength streamlined connector between the Float and the Glider. The Umbilical provides electrical power to the Glider and also contains wiring for data communications between the Float and Glider. For more information see:
 - [“Float to Glider Umbilical” \(page 12\)](#)
- **Glider** —The Glider (also called the “Sub”) is always submerged well below the Float during operation. It provides the propulsion and steering for the Wave Glider system. The Glider can also be used as a platform to mount underwater sensing equipment or to attach a Towfish. Power and communications wiring connections on the Glider Thrudder module can accommodate these sub-surface payloads. For more information see:
 - [“Glider” \(page 20\)](#)
- **Towfish (optional)** —Towfish are streamlined, buoyancy neutral, sub-sea extensions of the Wave Glider system that provide mounting points, power and communications channels for a wide variety of underwater payloads. For more information see:
 - [“Towfish Options” \(page 26\)](#)
- **Electrical System** —Command and Control Unit (CCU) including electrical and payload communications hardware, standard power and communications connections, solar panels and batteries. For more information see:
 - [Chapter 3: *Electrical Specifications*](#)
 - [Chapter 10: *Payload Development - Hardware Environment*](#)
- **Communications** —Communication methods, commands, protocols, and relays. For more information see:
 - [Chapter 4: *CCU Remote Communications and Control*](#)
 - [Chapter 5: *Commands*](#)
 - [Chapter 6: *Vehicle Responses*](#)
 - [Chapter 7: *Vehicle Telemetry*](#)

- **Software** —Developing payload-specific applications that run on a System Management Computer (SMC). For more information see:
 - [Chapter 11: Payload Development - Software Environment](#)

Figure 1.1. Wave Glider System (Float, Umbilical, and Glider)



Figure 1.2. Optional Towfish



Payload Integration

There are a few key parameters that are most likely to determine the feasibility of a payload integration project. Liquid Robotics recommends evaluating a payload integration project with respect to the following key parameters first:

- **Total weight of the payload**
- **Sizes of payload components**
- **Payload mounting requirements**
- **Payload power consumption**

For more information see [Chapter 9: Payload Development Mechanical and Electrical Considerations](#). If a payload integration project can be adapted within these key parameters, its feasibility is very likely. The other Wave Glider payload integration parameters are typically easier to comply with.


Chapter 2. Mechanical Specifications

This chapter provides mechanical specifications on the Float, CCU, Umbilical, Glider and Towfish options. The drawings in this chapter show dimensions in millimeters and [inches].

Float Assembly

The Float assembly is illustrated in [Figure 2.1](#).

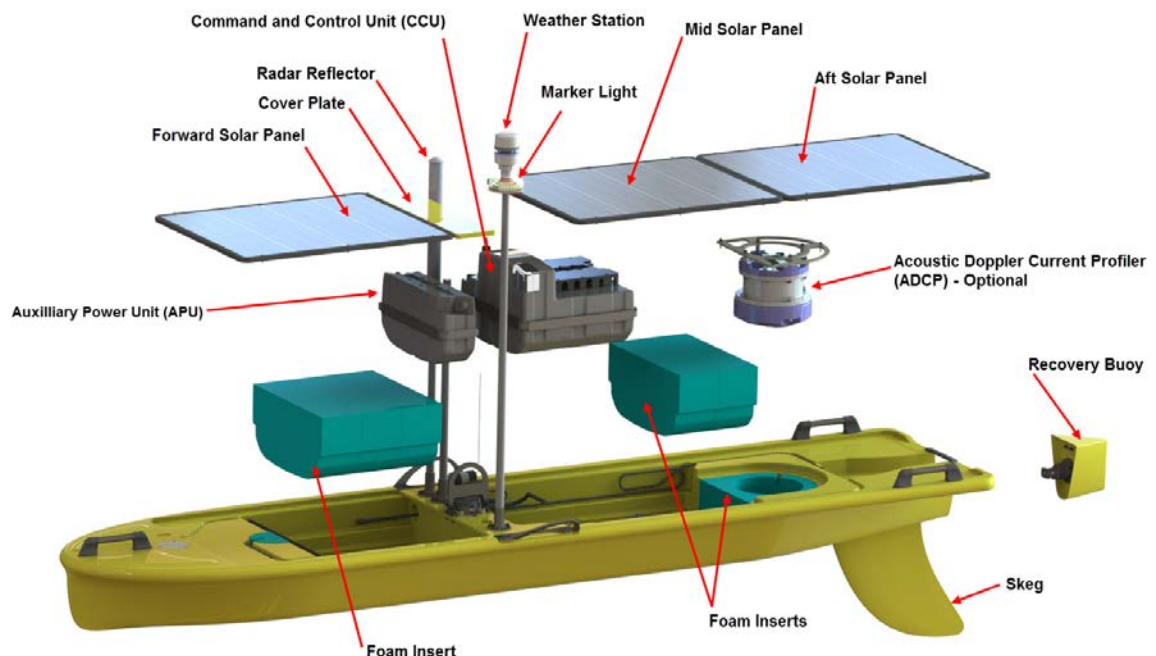Figure 2.1. Float Assembly Exploded View




- **Command and Control Unit (CCU)** - Contains the Vehicle Management Computer, standard electronics, and standard batteries. See [“Command and Control Unit \(CCU\)”](#) (page 8) for more information.
- **Auxiliary Power Unit (APU)** - Contains a supplemental battery pack with the same specifications as the battery pack included in the CCU. See [“Auxiliary Power Unit \(APU\)”](#) (page 194) for more information.
- **Forward, Mid, and Aft Solar Panels** - Three identical photovoltaic panels used to charge the on-board batteries.
- **Optional Acoustic Doppler Current Profiler (ADCP)** - An ADCP is used in a wide range of Wave Glider configurations. The Wave Glider Float includes an Aft Payload Bay Extension designed to accommodate an ADCP.
- **Weather Station** - Provides dynamic weather data for the Wave Glider location.
- **Marker Light** - Can be turned on and off manually from WGMS, or other Remote Applications, to improve Wave Glider visibility in low-light conditions.

- **Radar Reflector** - When the Radar Reflector is turned on it enhances the probability that the Wave Glider will appear on Radar.
- **Cover Plate** - Covers the Modular Payload Unit (MPU) between the Forward Solar Panel and the Mast Plate. In the illustration above, an Auxilliary Power Unit (APU) is located in the MPU directly beneath the Cover Plate. See [Figure 2.2](#) for information on MPUs.
- **Recovery Buoy** - Used to recover the Wave Glider. See “[Recovery Buoy and Release Mechanism](#)” ([page 6](#)) for more information.
- **Skeg** - Stabilizes the Float in yaw.
- **Foam Inserts** - Cut into 1 MPU size sections to fill unused payload bay space. There is also a foam insert designed to fill space around an ADCP when installed in the Aft Payload Bay Extension.

The Float has some integral features that should be noted:

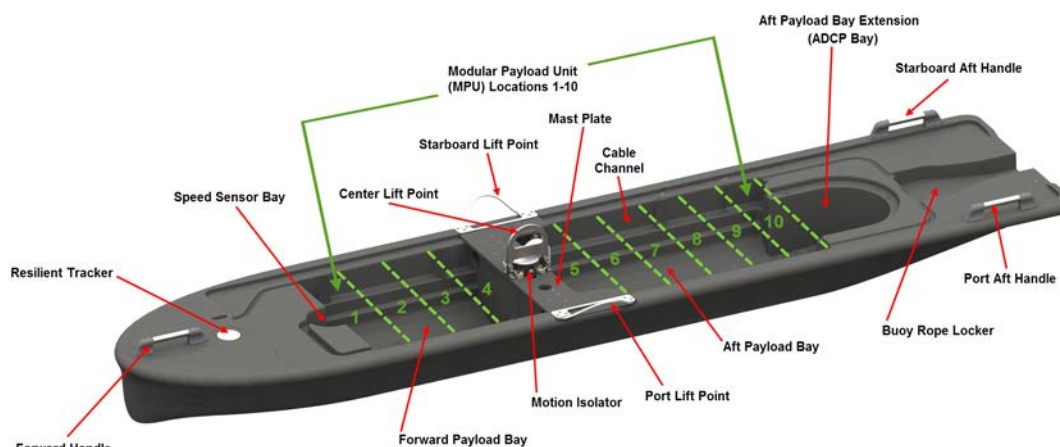Figure 2.2. Float Integral Features



- **Forward Handle** - For lifting or guiding the Float in water or when it is on a wheeled stand. Not for hoisting the Wave Glider system (Float + Umbilical + Glider) out of the water. This handle is not load rated.
- **Resilient Tracker** - Provides a secondary source of GPS location information transmitted over the Iridium network, in addition to the tracker included in the CCU Dry Box.
- **Speed Sensor Bay** - Designed to accommodate a speed sensor that is included with the Wave Glider SV3.
- **Modular Payload Unit (MPU) Locations** - An MPU is equal to the size of the smallest modular payload dry box that LRI offers, known as a 1-MPU. The Wave Glider Float payload bays accommodate a total of 10 MPUs, 4 in the Forward Payload Bay and 6 in the Aft Payload Bay. The CCU is a 3-MPU that typically occupies MPU locations 5, 6 and 7 directly aft of the Mast Plate. See “[Modular Payload Dry Boxes](#)” ([page 188](#)) for more information.
- **Forward Payload Bay** - Located between the Speed Sensor Bay and the Mast Plate. Able to accommodate 4 MPUs.

- **Port, Starboard, and Center Lift Points** - For lifting (hoisting) the Wave Glider system (Float, Umbilical, and Glider) out of the water.
- **Motion Isolator** - Provides a shock absorbing Umbilical-to-Glider attachment.
- **Mast Plate** - Includes several threaded titanium mounting points for masts or sensors.
- **Aft Payload Bay** - Located between the Mast Plate and the Aft Payload Bay Extension. Able to accommodate 6 MPUs.
- **Aft Payload Bay Extension** - Designed to accommodate an optional Acoustic Doppler Current Profiler (ADCP) - can be used for other payloads, if an ADCP is not installed.
- **Cable Channel** - A cavity for running cables along the sides of the Forward and Aft Payload Bays.
- **Buoy Rope Locker** - Provides storage for the rope attached to the Recovery Buoy. See [“Recovery Buoy and Release Mechanism” \(page 6\)](#) for more information.
- **Port and Starboard Aft Handles** - For lifting or guiding the Float in water or when it is on a wheeled stand. Not for hoisting the Wave Glider system (Float + Umbilical + Glider) out of the water. These handles are not load rated.

Recovery Buoy and Release Mechanism

To facilitate recovery of the Wave Glider system, a buoy with 30 ft of floating, non-fouling line attached to it can be deployed from the aft end of the Float. The line is stored in a Line Locker below the aft solar panel.

Two spring loaded latches retain the buoy by clasping a latch plate that extends from the buoy. When the release command is issued, a linear actuator forces a piston to open the latches and continue extending to push on the latch plate, until the buoy is released from the Float. The pushing force from the linear actuator will overcome any potential bio fouling.

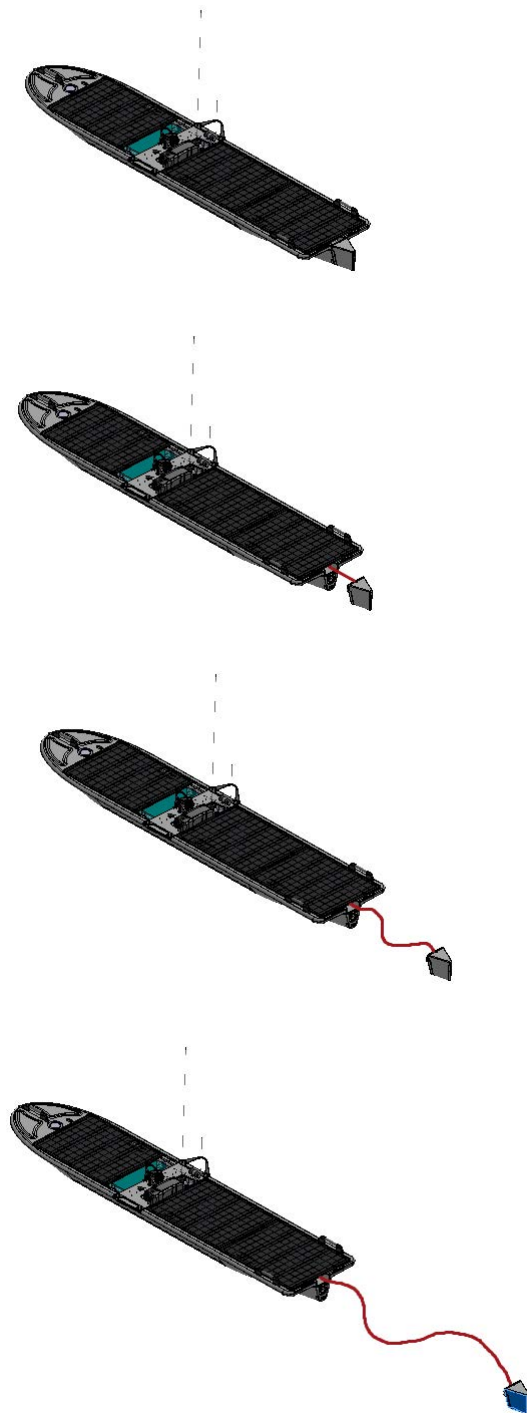
When the buoy is released, drag on the buoy from water resistance will pull the line out of the line locker. A grappling hook can be used to capture the bright white line trailing the float so it can be properly attached to a hoist. The line is securely fastened to the aft end of the float and is rated to hoist the full weight of the Wave Glider system with payloads.



Important

The Recovery Buoy **line** is load rated for hoisting the full weight of the Wave Glider system with payloads (Float + Umbilical + Glider). The Recovery Buoy, and the hardware where the line attaches to the Recovery Buoy, will not support the weight of the Wave Glider system. Do not attempt to lift the Wave Glider system by the Recovery Buoy.


Buoy Release Sequence:



The Recovery Buoy can be manually reloaded into the Wave Glider Float in the field without tools. Also, if necessary, the Recovery Buoy can be manually released from the Float by inserting a 6" screw driver or similar object into a hole in the Recovery Buoy and pressing to release the latch.

Float Overall Dimensions

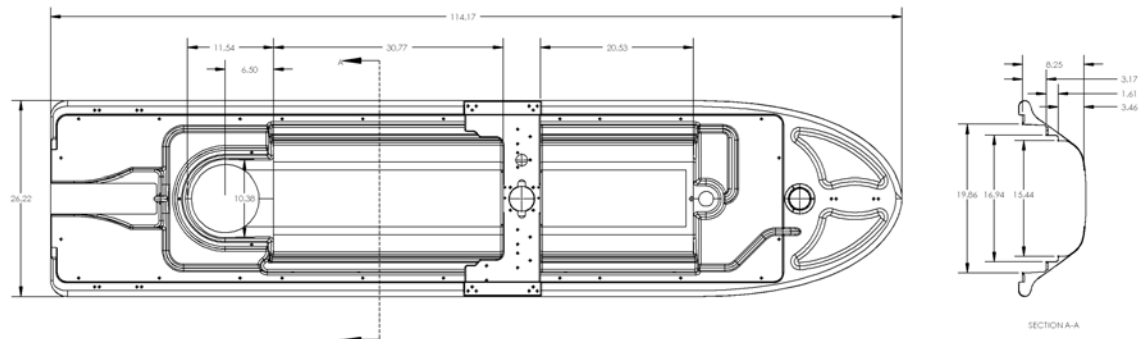
Figure 2.3. Float Overall Dimensions (mm)



Command and Control Unit (CCU)

The CCU is a factory sealed module that is mounted in the Float at the forward end of the aft payload bay, with its raised Radome tight to the mast plate. It contains the computing, control and communications electronics, and the batteries that store energy from the solar panels. Additional electronics can be added to optional LRI Modular Payload Dry Boxes that typically interface with the CCU. For more information see [“Modular Payload Dry Boxes”](#) (page 188). **The CCU contains no customer-accessible components.**

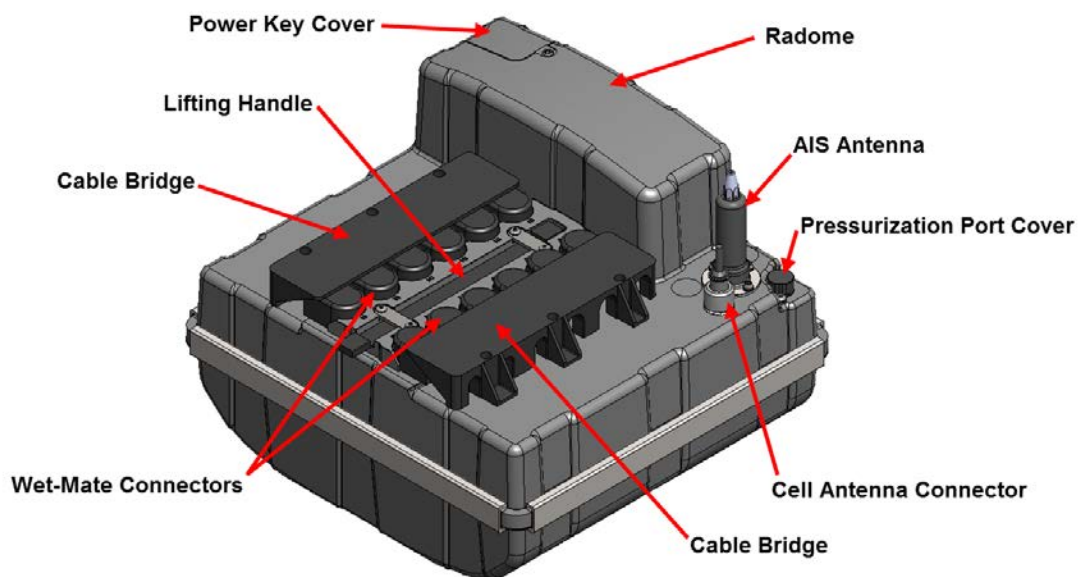Figure 2.4. CCU



The main external components of the CCU are:

- **Power Key Cover** - Removable cover that protects the Power Key which is the main power on/off switch for the Wave Glider electrical system. See [“Power Key” \(page 35\)](#) for more information.
- **Radome** - GPS, Iridium, 2.4 GHz WiFi and 5 GHz WiFi antennas are contained in the Radome.
- **AIS Antenna** - Receives Automatic Identification System reports from class A and class B vessels in the vicinity of the Wave Glider. These reports provide vessel ID, position, heading and other standard AIS data.
- **Pressurization Port Cover** - Protective cover for the dry box pressurization valve.
- **Cell Antenna Connector** - For connecting a cell antenna to be used with the cell modem in the CCU.
- **Wet-Mate Electrical Connections** - Twelve watertight electrical connectors for on-board devices, payloads, and debugging. For more information on the CCU connectors and pin outs, see [“CCU Electrical” \(page 33\)](#) and [“CCU Standard Electrical Connections” \(page 42\)](#).
- **Cable Bridge** - Keeps wet-mate connectors in firmly in place.
- **Lifting Handle** - Nylon strap for lifting the CCU out of the payload bay.


For information on CCU power consumption, see [“Batteries” \(page 68\)](#).

For information on CCU Communications Channels, see [Chapter 4: CCU Remote Communications and Control](#).

CCU Weight and Dimensions

The CCU assembly weighs 17.0 Kg (37.5 lb). The dimensions of the CCU are shown in [Figure 2.5](#).

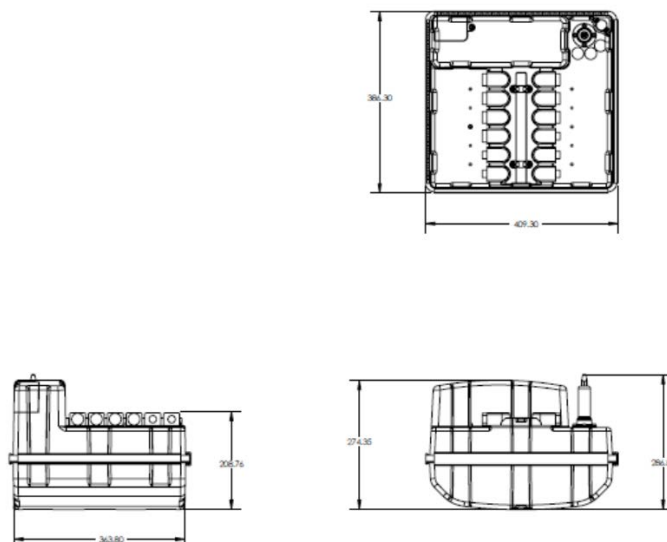Figure 2.5. CCU Dimensions (mm)




Float Payload Bays

The Wave Glider SV3 Float payload bays vary in length in the forward to aft dimension, but they have uniform dimensions from side to side. This design supports the use of the LRI Modular Payload Dry Boxes that are available in lengths of one Modular Payload Unit and three Modular Payload Units. A Modular Payload Unit (MPU) is equal to the space that an LRI 1-MPU Payload Dry Box takes up in the payload bay (133 mm in the forward to aft dimension). The SV3 Forward Payload Bay has a capacity of 4 MPUs. The SV3 Aft Payload Bay has a capacity of 6 MPUs. For example, an LRI 3-MPU payload dry box takes up 3-MPUs of space in an SV3 payload bay. The Float CCU takes up 3-MPUs, and an Auxiliary Power Unit (APU) takes up 1-MPU. See [Figure 2.2](#) and “[Modular Payload Dry Boxes](#)” (page 188) for more information.

The Aft Payload Bay Extension (ADCP Bay) extends from the aft end of the Aft Payload Bay. This bay was designed to house a Teledyne RD Instruments acoustic doppler current profiling sensor (ADCP), however, it is available for other uses if an ADCP is not installed.

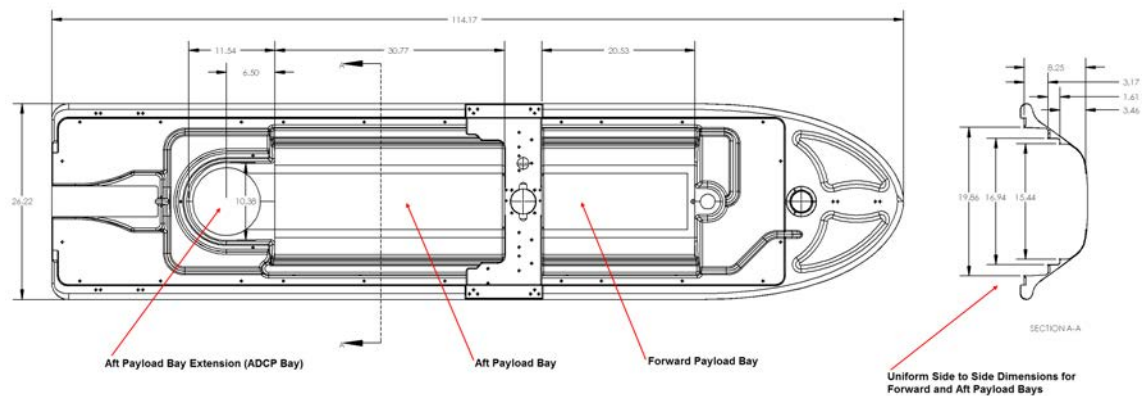
Figure 2.6. Float Payload Bay Dimensions (inches)



Solar Panels

This section describes the features of the standard Wave Glider solar panels.

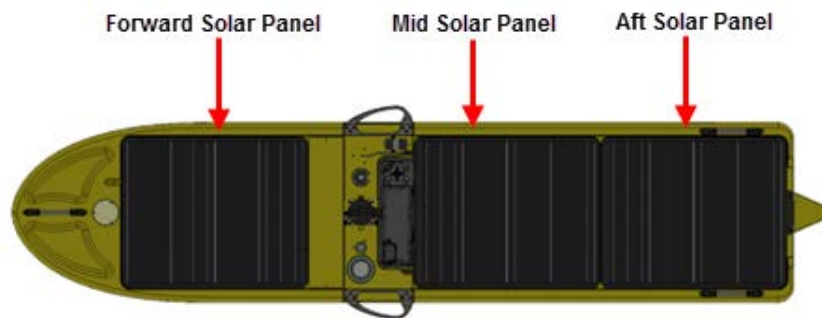Figure 2.7. Standard Solar Panels



Solar Panel Specifications

Table 2.1. SV3 Solar Panel Specifications

Panel Power	52 W
Panels per Vehicle	3
Vehicle Power	156 W
Construction	Fiberglass and foam laminate with hard points
Top Sheet	Glass

Shading and Shade Compensation

The design of the solar panels provides connections for bypass diodes that allow the use of half of a panel to provide power when a single cell is shaded. If one or more cells in each half of a panel is shaded, the panel provides zero output. The dividing line between the two halves of each panel is located half way between the forward and aft ends of the panel.

Shading in general comes from environmental conditions such as cloud cover, and from system components mounted on the vehicle. Shading from environmental conditions is typically temporary and is beyond our control. To optimize total power input, all sensors would have to be mounted below the solar panels to prevent shading. Since this is typically not practical, the following recommendations should be followed to minimize shading.

- If a tall object such as a mast is required, attempt to design it to be narrower than a single cell. This will not eliminate shading, but it reduces the shading impact.
- If an object is wide, attempt to design it to be as short as possible. With this design, shading is not a problem during the middle of the day.
- To maximize power input when there are shading elements on a vehicle, move to a course that is predominately North-South so the shadows fall off the sides of the vehicle for most of the day. In the East-West navigational direction, one of the panels may always suffer from shading.

Table 2.2. Solar Panel Shading Considerations


Minimal Shading Potential	Typical Shading Potential
	

Float to Glider Umbilical

The Umbilical (also referred to as the "Tether") is a flexible cable that connects the Float to the submerged Glider. It is 3.8 meters long and streamlined to reduce drag.

The Umbilical contains high-strength reinforcement cables designed to support the weight of the Glider and the tension the Glider exerts as it responds to wave motion. The Umbilical also contains electrical wiring for power, Thrudder control, auxiliary propulsion, and payload communications. The pin-out for the Umbilical connector to the CCU and the Umbilical connector to the Thrudder Module provide details on the wiring contained in the Umbilical. For more information see ["U1 - Umbilical Connector" \(page 46\)](#) and ["Thrudder Module Umbilical Connector" \(page 65\)](#).

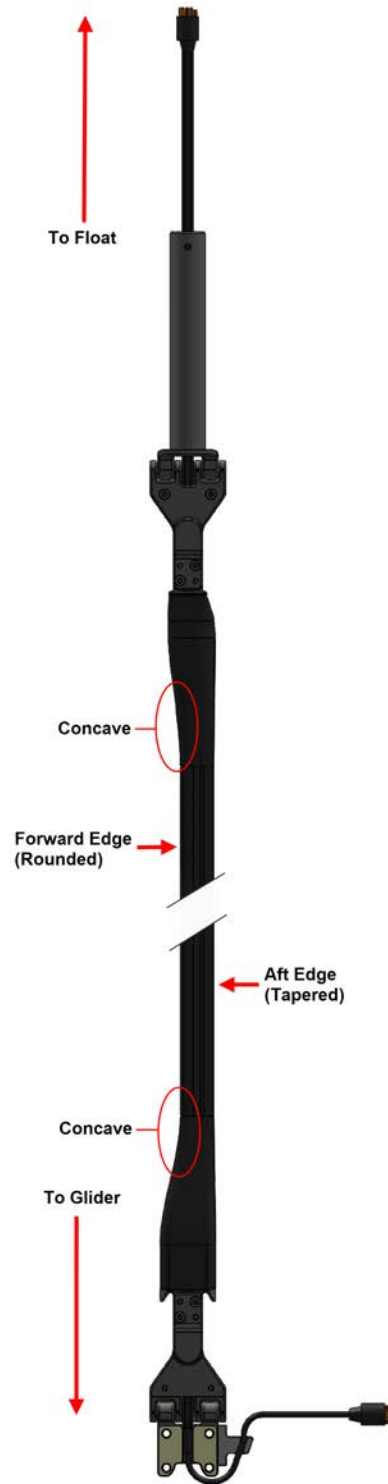
Figure 2.8. Umbilical Assembly Overview



- **Forward Edge** - For streamlining, the forward edge is rounded. Note that the forward edge is also slightly concave at each end.

- **Aft Edge** - For streamlining, the aft edge is tapered.

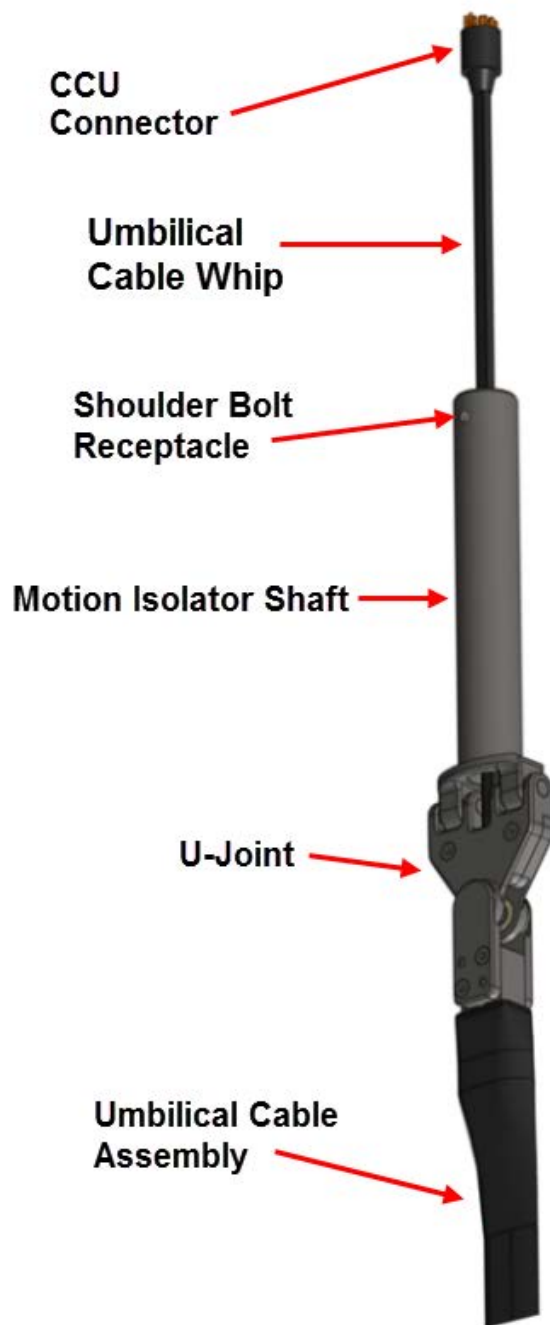Figure 2.9. Umbilical-to-Float Connection



- **Float CCU Connector** - Watertight power and communications connection between the CCU and the Umbilical.

- **Umbilical Cable Whip** - An extension of the Umbilical power and communications cable that extends from the Motion Isolator assembly to the CCU when the Umbilical is attached to the Float.
- **Shoulder Bolt Receptacle** - Where the Shoulder Bolt passes through the Motion Isolator Shaft locking it into the Motion Isolator assembly.
- **Motion Isolator Shaft** - Provides an attachment between the Float and the Umbilical when inserted into the Motion Isolator and secured with the Shoulder Bolt.
- **U-Joint** - Provides two axis of rotation to prevent stress on the Umbilical.
- **Umbilical Cable Assembly** - Attaches the Float to the Glider while providing power and communications connectivity.

Figure 2.10. Umbilical-to-Glider Connection



- **Umbilical Cable Assembly** - Attaches the Float to the Glider while providing power and communications connectivity.
- **Recovery Hooks** - Provide a positive locking feature for the Glider Recovery Mechanism.
- **U-Joint** - Provides two axis of rotation to prevent stress on the Umbilical.

- **Umbilical Cable Whip** - An extension of the Umbilical power and communications cable that extends to the Thrudder Module when the Umbilical is attached to the Glider.
- **Thrudder Electrical Connector** - Watertight power and communications connection between the Umbilical and the Thrudder Module.
- **Glider Clamp Plate** - The mechanical connection to the Glider - attaches to the Glider frame with 4 bolts.

Glider Recovery Mechanism

The Glider Recovery Mechanism is used to hoist the Glider out of the water. A line is attached to the ring on the Glider Recovery Mechanism, then the Glider Recovery Mechanism is slid over the Umbilical and dropped so it locks onto the Recovery Hooks at the bottom of the Umbilical. For detailed Glider Recovery instructions see the Liquid Robotics Launch and Recovery Procedures for the Wave Glider SV3.

Figure 2.11. Glider Recovery Mechanism




Figure 2.12. Glider Recovery Mechanism Locked Onto Recovery Hooks



Motion Isolator

The Motion Isolator provides a shock absorbing Umbilical-to-Glider attachment. The Motion Isolator assembly is located directly under the Center Lift Point on the Mast Plate of the Float.

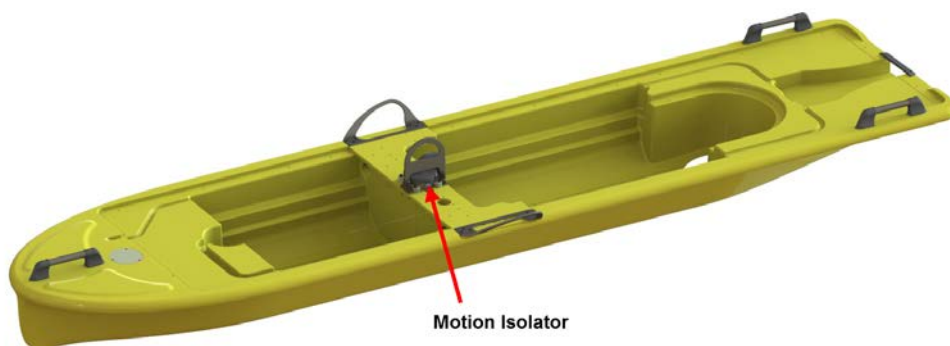Figure 2.13. Motion Isolator - Top View



The Motion Isolator Shaft on the Umbilical assembly inserts into the Motion Isolator assembly and is locked in place with a Shoulder Bolt that passes through the Motion Isolator Shaft. The spring in the Motion Isolator assembly absorbs shock in rough water and high seas. The Umbilical Cable Whip passes through the protective Shroud and continues on to the CCU.

Figure 2.14. Motion Isolator Extended, Cut-Away View


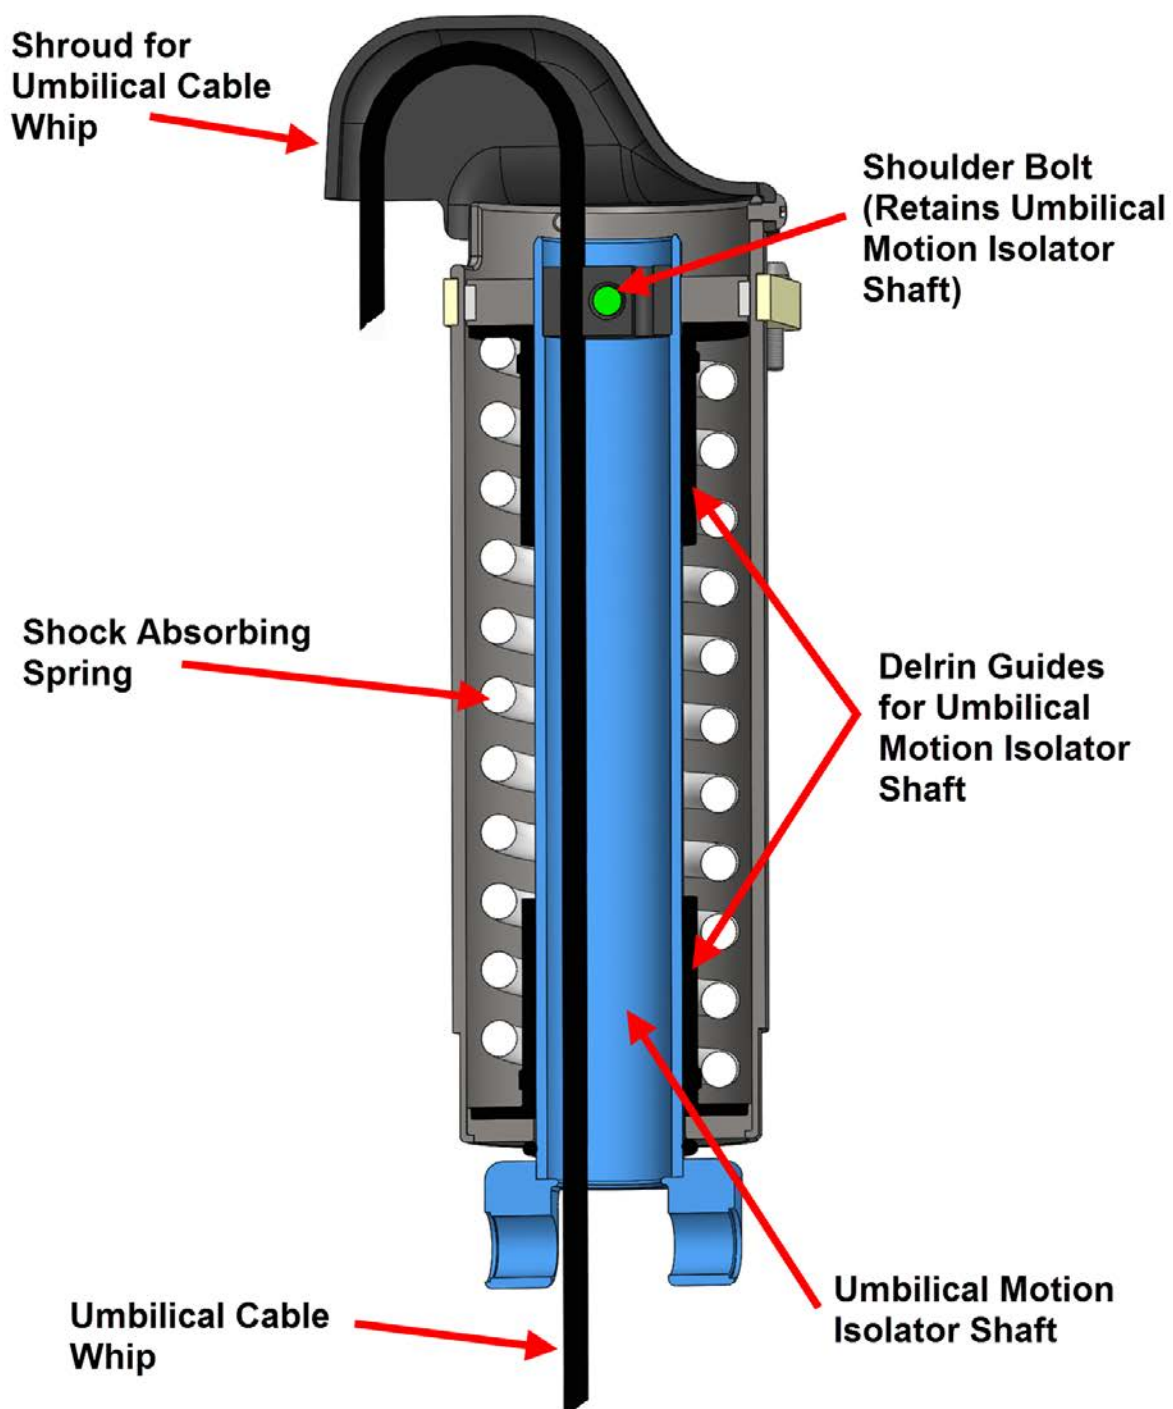



Figure 2.15. Motion Isolator Compressed, Cut-Away View

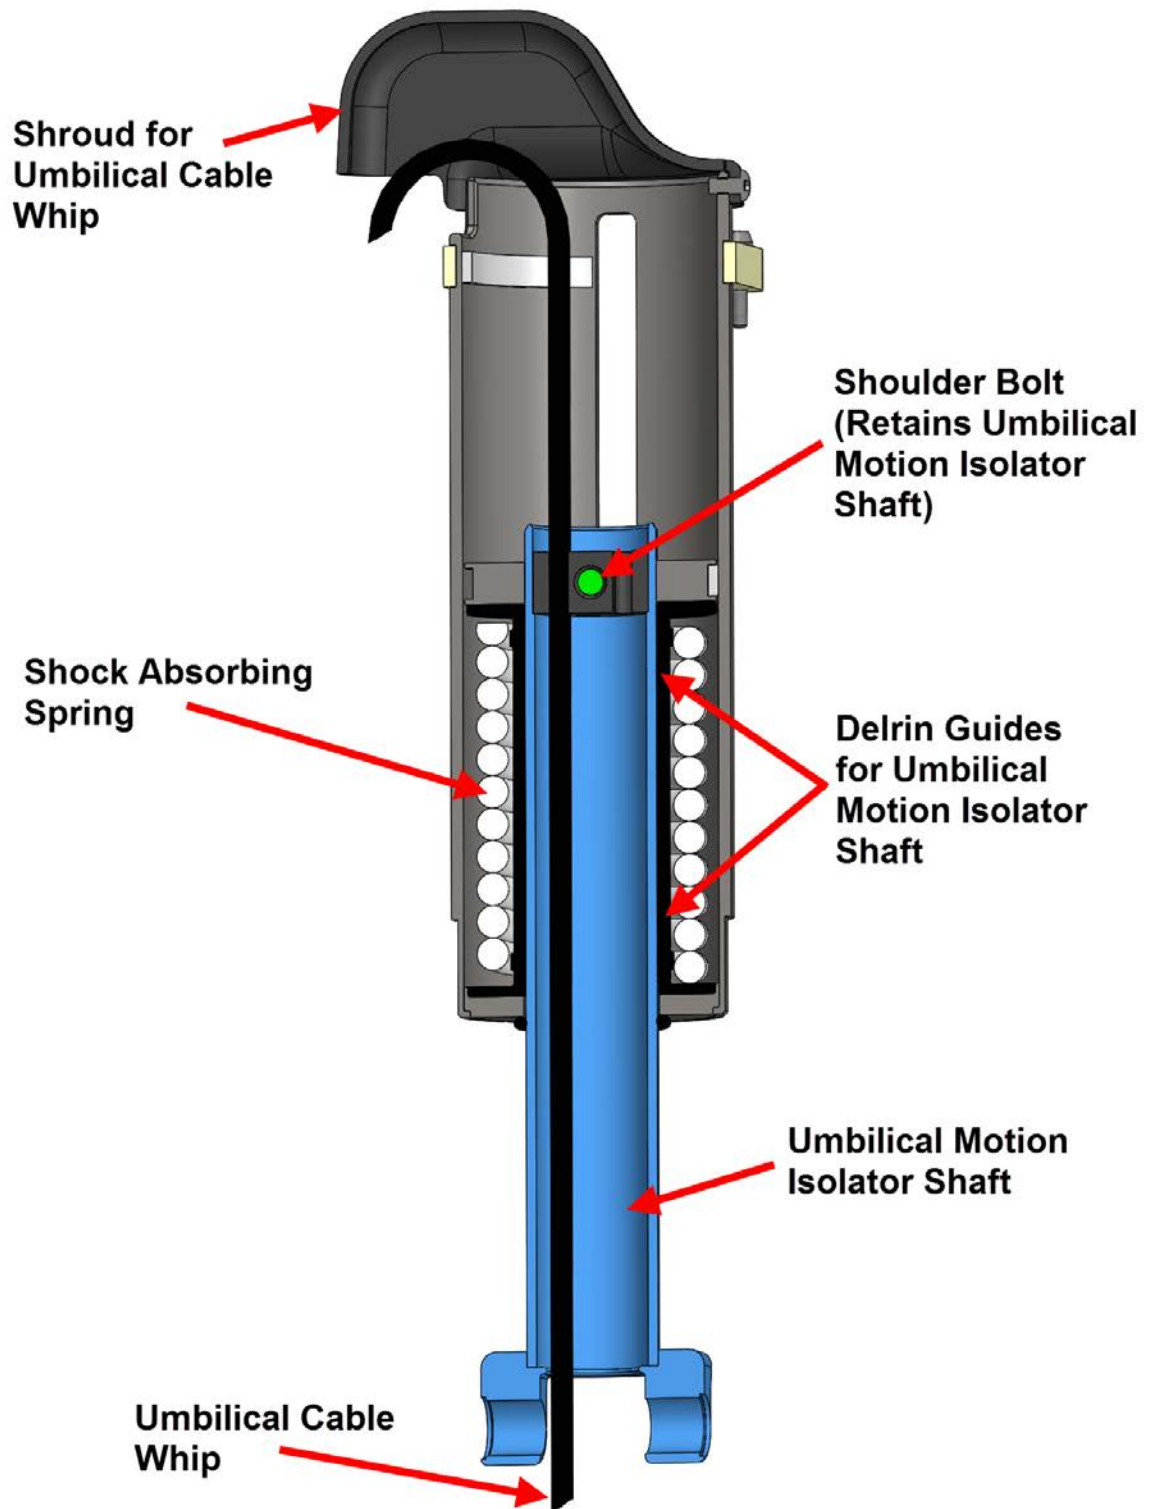

Glider

The Glider, converts wave motion into forward thrust. The attached Thrudder Module steers the Wave Glider system and also provides supplemental thrust on demand with a motorized propeller. The Glider can be used to carry some underwater payloads, although use of a Tow Fish for these payloads is recommended. See [“Towfish Options” \(page 26\)](#) for more information.

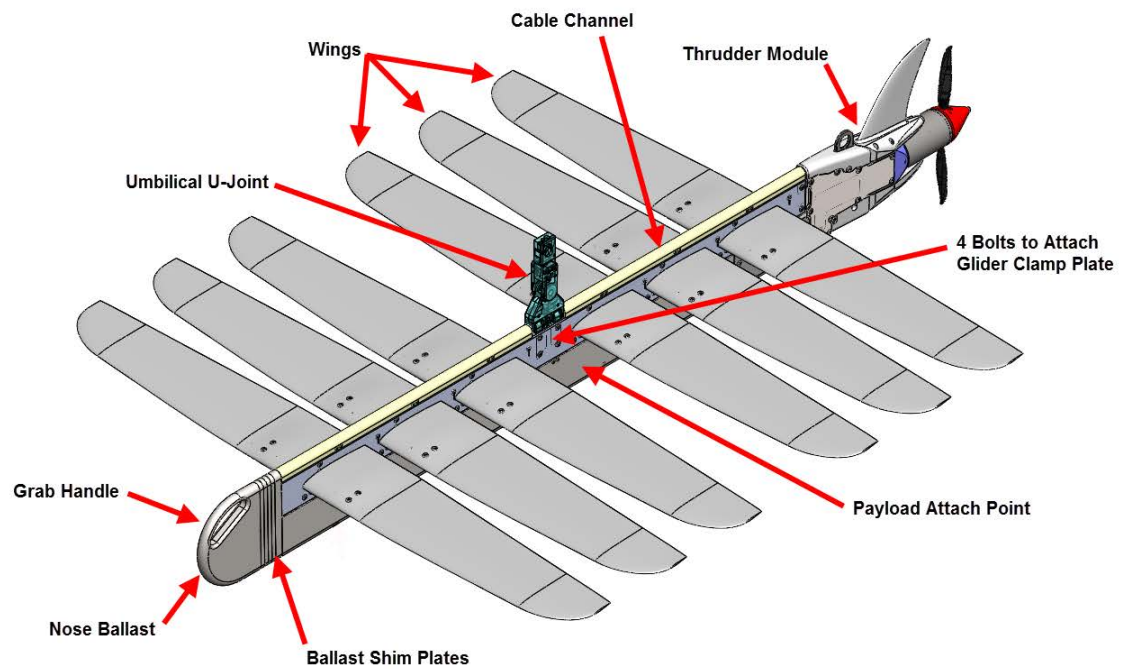Figure 2.16. Glider



- **Grab Handle** - Used for launch and retrieval.
- **Nose Ballast** - Forward-located ballast that also serves as a Grab Handle for the Glider.
- **Ballast Shim Plates** - Can be added or removed to compensate for payload mounting that impacts the Glider center-of-gravity. Consult with LRI before attempting to mount a payload on the Glider or adjusting the Ballast Shim Plates.
- **Umbilical U-Joint** - Provides two axis of rotation to prevent stress on the Umbilical.
- **Wings** - Six pairs of wings provide thrust. Each left-right pair of Wings rotates independently from the other five wing pairs, but the two wings in each left-right pair are attached and rotate in unison.
- **Cable Channel** - A fiberglass shroud provides a narrow protected channel along the top of the Glider frame. The Umbilical Cable Whip runs through the Cable Channel to get to the water-tight connector on the Thruder Module.

- **Thrudder Module** - Factory sealed. Contains the servo motor and mechanism for pivoting the Fin and the auxiliary Thruster to steer the Wave Glider. It also contains a compass. The Thrudder Module has 3 water-tight electrical connectors for the Umbilical Cable Whip, a Glider or Towfish payload, and a connector for a remote compass.
- **Glider Clamp Plate Attachment Bolts** - 4 bolts that attach the Umbilical assembly to the Glider.
- **Payload Attach Point** - 2 bolt holes for attaching a payload. There is an adjacent electrical channel for snaking a power and communications line between the payload and the payload connector on the Thrudder Module. See [“Glider Dimensions and Payload Attachment Points” \(page 23\)](#) for more information.

Figure 2.17. Glider with Thrudder Turned - Side View


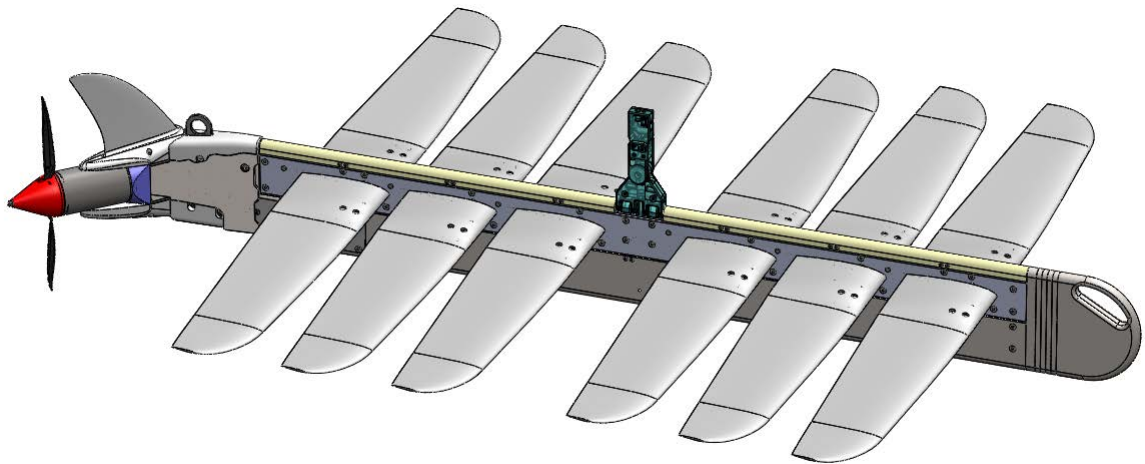


Figure 2.18. Glider with Thrudder Turned - Top View

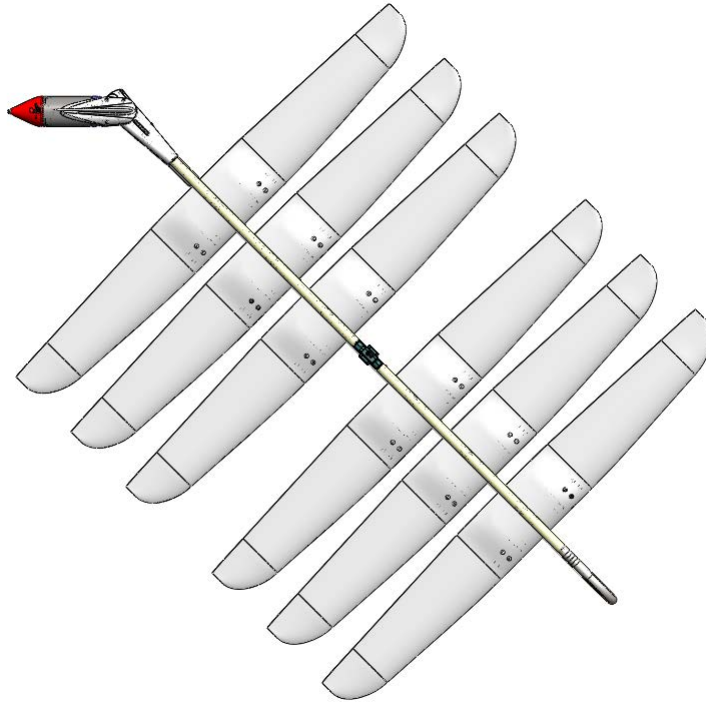

When the Glider is carrying payloads, streamlined fairings can be fabricated to cover the payload. An example is shown in the figures below. The actual shape of the cover can vary depending on the type, shape and volume of the payload.

Figure 2.19. Glider Payload With Custom Fairing


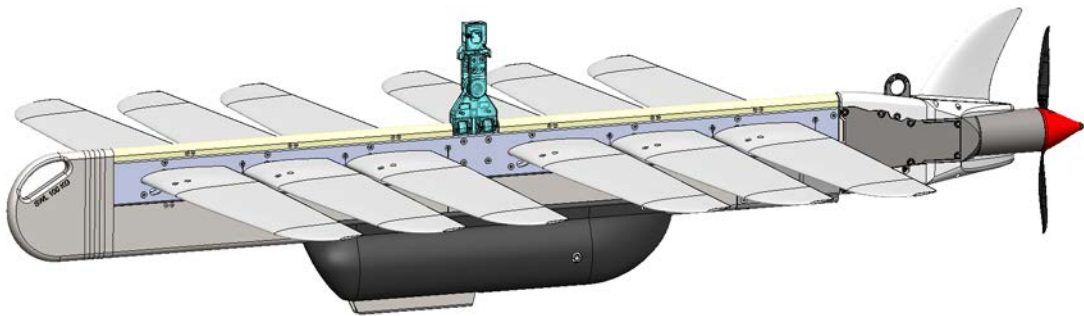


Figure 2.20. Glider Payload With Custom Fairing - Translucent

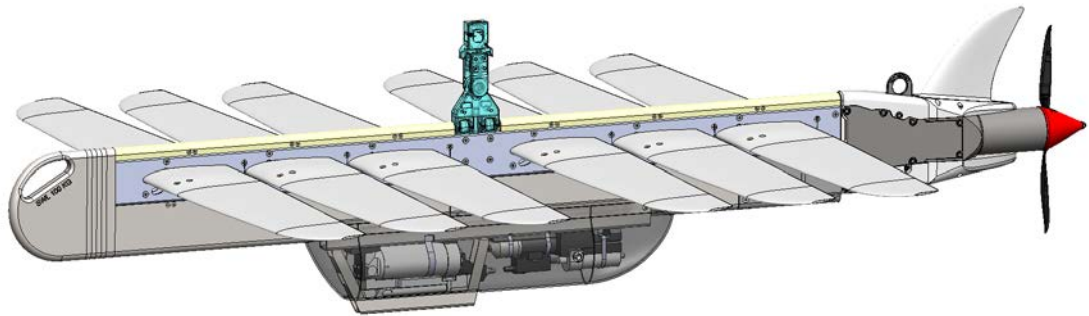


See “Glider Payload Considerations” (page 197) for additional design considerations for Glider payloads.

Glider Dimensions and Payload Attachment Points

The Glider assembly overall dimensions and attachment points are detailed in the following drawings.

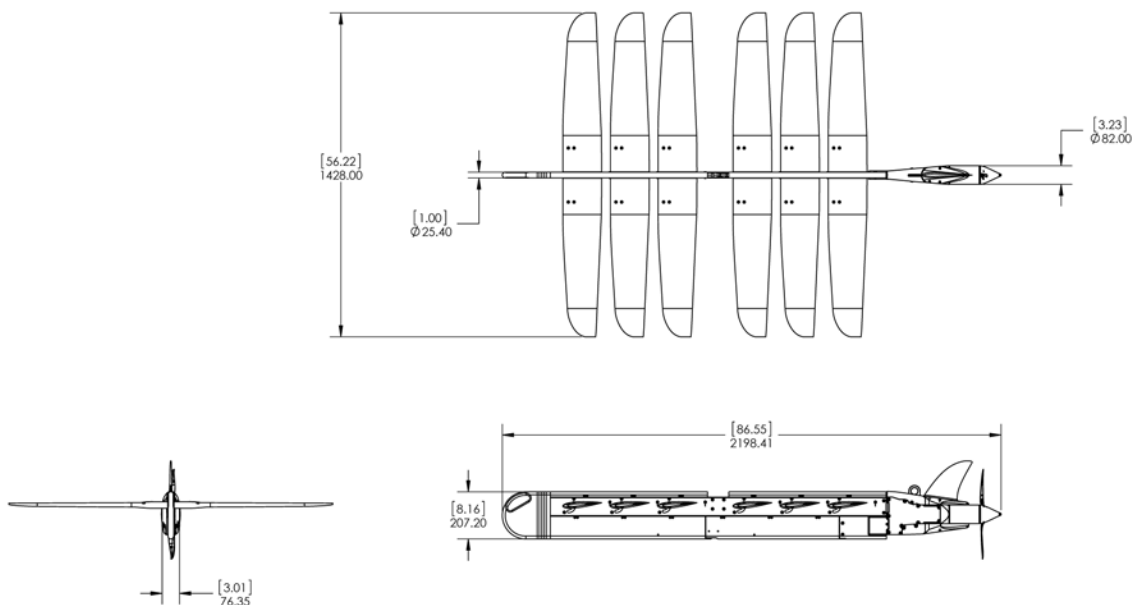
Figure 2.21. Glider Overall Dimensions - mm [inch]



The attachment points consist of 4 threaded holes through the Glider Frame. There is also an opening in the Glider Frame where cables can be routed through the Glider Frame to the Expansion Port on the Thrudder assembly. Typically these attachment points are used for a

towing bracket where a Towfish tether is attached or for a Glider-mounted payload and the fairings that cover it.

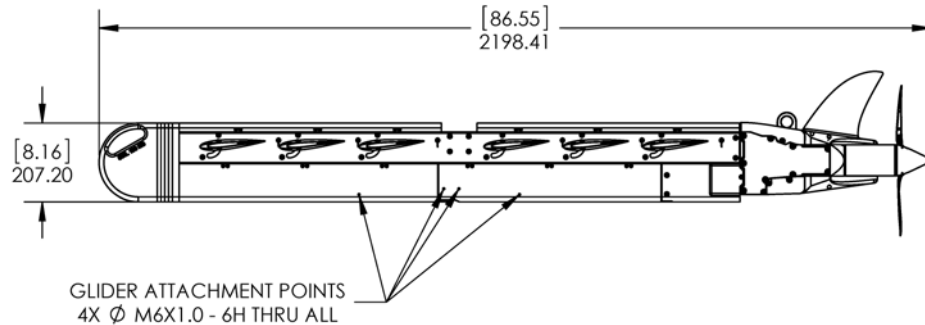
Figure 2.22. Glider Attachment Points mm [inch]



Thrudder Module

The Thrudder Module is the core component in compass based navigation, a control point for Glider and Towfish payloads, and a source of auxiliary propulsion when needed. The Thrudder Module is attached to the Glider frame with two bolts. The Fin and motorized propeller are attached to the pivoting Motor Coupling to steer the Glider.

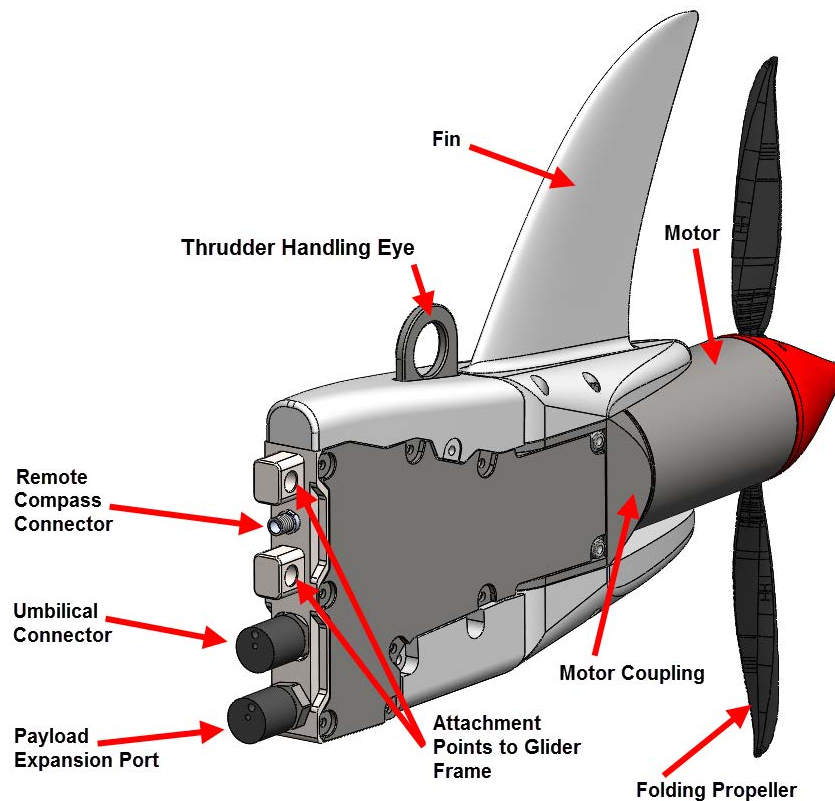Figure 2.23. Thrudder Module



- **Thrudder Handling Eye** - A marine operations safety feature for stabilizing the Glider assembly with a boat hook to keep it from rotating when it is hoisted out of the water. Can also be used to hoist the Thrudder Module, but it cannot be used for hoisting the Glider assembly.
- **Fin** -
- **Motor Coupling** -
- **Motor** -
- **Folding Propeller** -
- **Attachment Points to Glider Frame** -
- **Umbilical Connector** -
- **Payload Expansion Port** -
- **Compass Connector** -

There are also two fairings that enclose and protect cables and electrical connections to the Umbilical, the Payload Expansion Port and the Thrudder Module internal compass. See [“Thrudder Module Electrical Connections”](#) (page 63) for more information.

Figure 2.24. Thrudder Attachment Exploded View


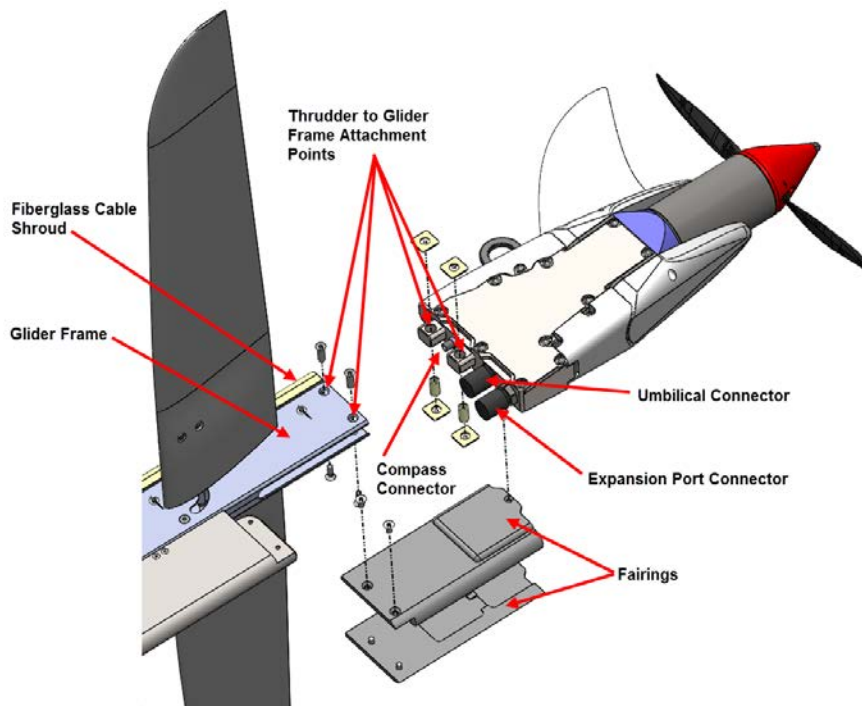


Figure 2.25. Thrudder Attached to Glider with Fairings Installed

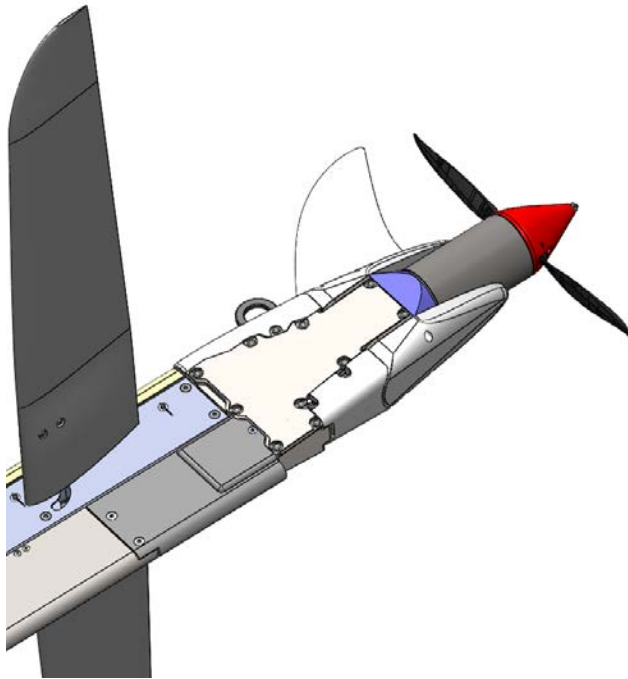

Towfish Options

A Towfish is tethered to the Glider providing a satellite communication gateway for on-demand data transmissions between sub-sea or towfish-mounted sensors, and data gathering on-shore. LRI Towfish support both flooded and dry payloads and can be equipped with electronics to manage multiple sensors on the same Towfish. This section provides an overview of the Wave Glider Towfish options. For more information on Towfish sensor integration parameters, contact Liquid Robotics.

There are two standard Towfish options for the Wave Glider:

- **Gateway** For information on the Gateway Towfish see [“Gateway Towfish” \(page 26\)](#).
- **Turbidity Towfish** For information on the Turbidity Towfish see [“Turbidity Towfish” \(page 27\)](#).

Gateway Towfish

The Gateway Towfish is a sub-sea extension of the Wave Glider system that provides a dynamically isolated location to mount an acoustic transducer and accompanying electronics for communication with sub-sea sensors. It is a streamlined, buoyancy neutral vessel that is tethered to the Thrudder Module on the Glider. The Gateway Towfish communicates over a shock-absorbing tether, transmitting acoustic data through the Thrudder Module to a payload on the Wave Glider Float. From the payload on the Float, data can be transmitted through the CCU and over the Iridium Satellite network to shore.

Figure 2.26. Gateway Towfish

The Gateway Towfish is designed to carry an acoustic transducer and a modem, with related electronics located in a payload dry box on the Float. Its payload bay can accept a 4.5" diameter transducer weighing up to 7 lbs. and it is designed to accept the Benthos modem or the WHOI micro-modem, with up to 3.5 lbs of total modem weight. Once the contents of the payload are installed, the Towfish must be adjusted to neutral buoyancy and level trim.

Power requirements depend on the sensor and modem that will be used. A high voltage board (located in a Float payload dry box) may be required to power the electronics in the Towfish. Power available to the payload is dependent on Thrudder Module power limitations, as well as over-all Wave Glider system power limitations.

The Gateway Towfish has been proven in high sea states and has been successful in deep water off shore missions.

Turbidity Towfish

The Turbidity Towfish is a sub-sea extension of the Wave Glider system that provides a simple, cylindrical payload bay with modular nose and tail assemblies. The Turbidity Towfish is tethered to the Thrudder Module on the Glider.

The length of the payload bay can be adjusted based on the length of the fiberglass tube that forms the Turbidity Towfish body. The Turbidity Towfish bay is flooded, but can also carry dry payloads inside an optional sealed enclosure. Inlet and outlet scoops as well as other types of through-wall fittings can easily be integrated into the Turbidity Towfish.

The number of payloads the Turbidity Towfish can support depends on the weight, physical dimensions, and power requirements of the payloads. Power available to the payloads is dependent on Thrudder Module power limitations, as well as over-all Wave Glider system power limitations.

Once the contents of the payloads are installed, the Towfish must be adjusted to neutral buoyancy and level trim.

Figure 2.27. Turbidity Towfish


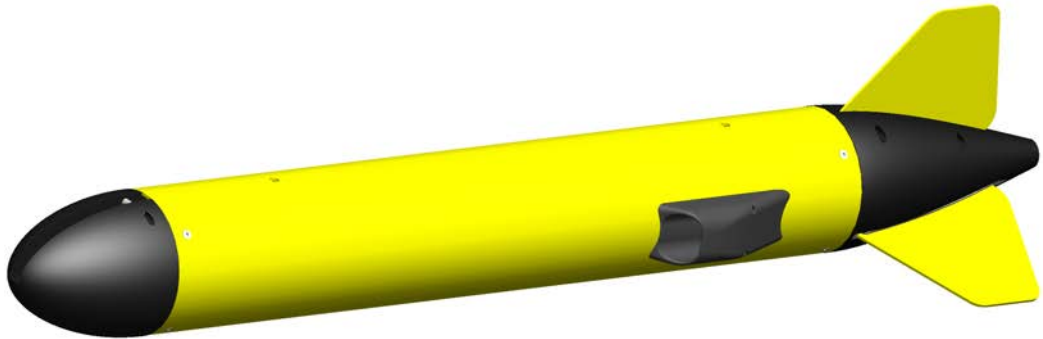


Figure 2.28. Turbidity Towfish Dimensions (mm)

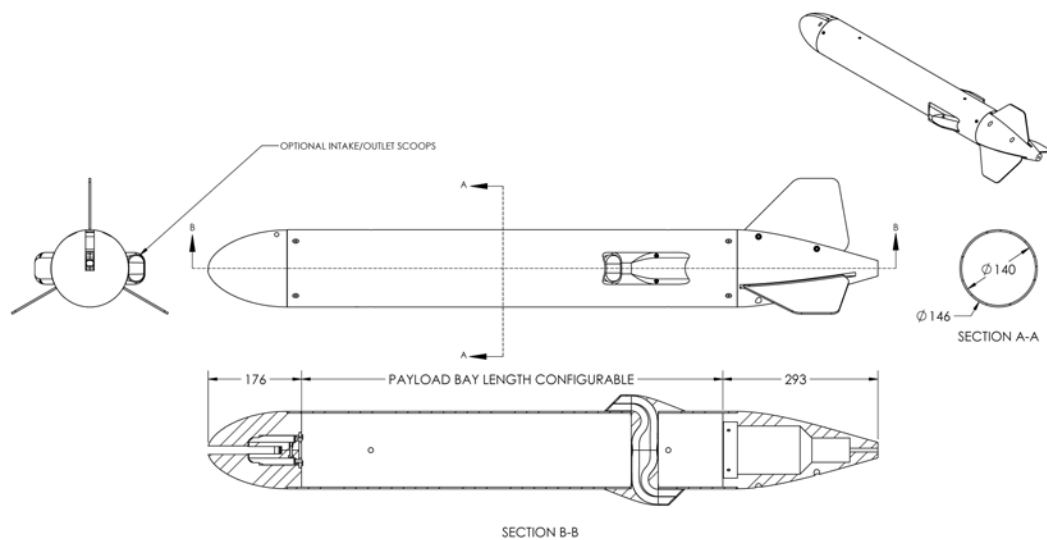

Towfish Tether

The same 5.75 meter long tether is used to connect the Gateway or Metoc Towfish to the Glider. It is designed with attached floats and weights to absorb shock, protecting the towfish from the surging action of the Glider. The speed of the Wave Glider is reduced by 3 to 5% when a properly configured Towfish is attached.


Figure 2.29. Towfish with Tether 3D



Figure 2.30. Towfish with Tether Side View



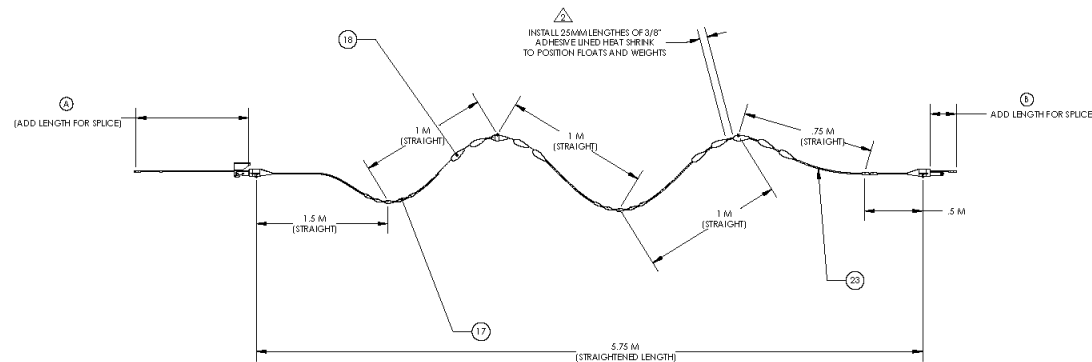Figure 2.31. Towfish Tether Dimensions (M)





Note

If you are planning shallow water operations, be aware that the Towfish flies approximately 1 to 2 meters below the sub.

Custom Towfish

If a standard LRI Towfish cannot be adapted to your application, LRI may be able to develop a custom Towfish to meet your needs. The following Modular Towfish and Large Payload Towfish are examples of custom Towfish LRI has developed in the past.

Modular Towfish

The 4-inch Modular Towfish is sub-sea extension of the Wave Glider system that provides mounting points, power and communications channels for a wide variety of underwater payloads. It is a streamlined, buoyancy neutral vessel that is tethered to the Thrudder Module on the Glider.

The 4" Modular Towfish can carry multiple payloads, each with dedicated electrical power and communications provided by the on-board Sensor Management Computer that is connected to the Float CCU through the Thrudder Module and a Float payload dry box.


The number of payloads the 4" Modular Towfish can support depends on the weight, physical dimensions, and power requirements of the payloads. Power available to the payloads is dependent on Thrudder Module power limitations, as well as over-all Wave Glider system power limitations.

Once the contents of the payloads are installed, the Towfish must be adjusted to neutral buoyancy and level trim.

Figure 2.32. 4" Modular Towfish



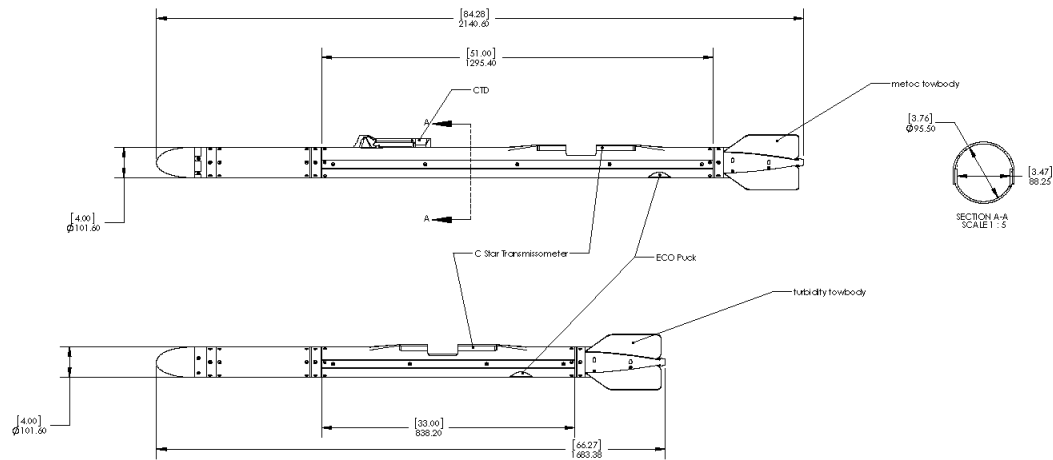
Figure 2.33. 4" Modular Towfish Dimensions - mm [inch]



Large Payload Towfish

An example of a streamlined custom Towfish for carrying large payloads is shown in [Figure 2.34](#). Once the contents of the payloads are installed, the Towfish is adjusted to neutral buoyancy and level trim.

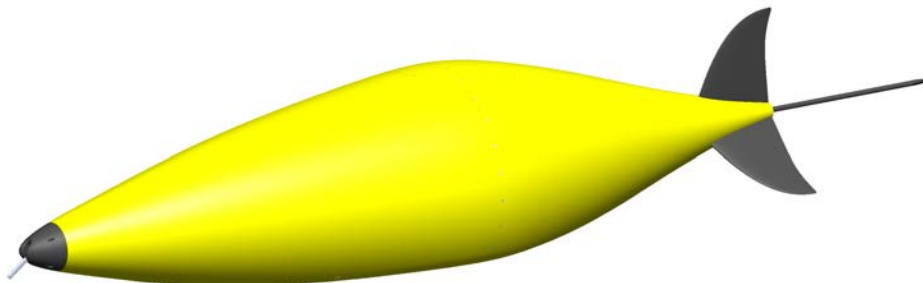Figure 2.34. Large Payload Towfish



Chapter 3. Electrical Specifications

This chapter provides information on CCU and payload physical connectivity, including all standard electrical connections, and the Wave Glider SV3 Adaptable Modular Power System (AMPS).

Physical Connectivity

Figure 3.1 illustrates a Wave Glider system with several Float and Glider payloads connected. This is an example of what is possible; it should not be considered a limiting factor in the overall design and implementation of a Wave Glider system. The connections between Wave Glider components shown in the diagram are described in greater detail, including pin-outs, later in this chapter.

Figure 3.1. Wave Glider CCU Connection Diagram

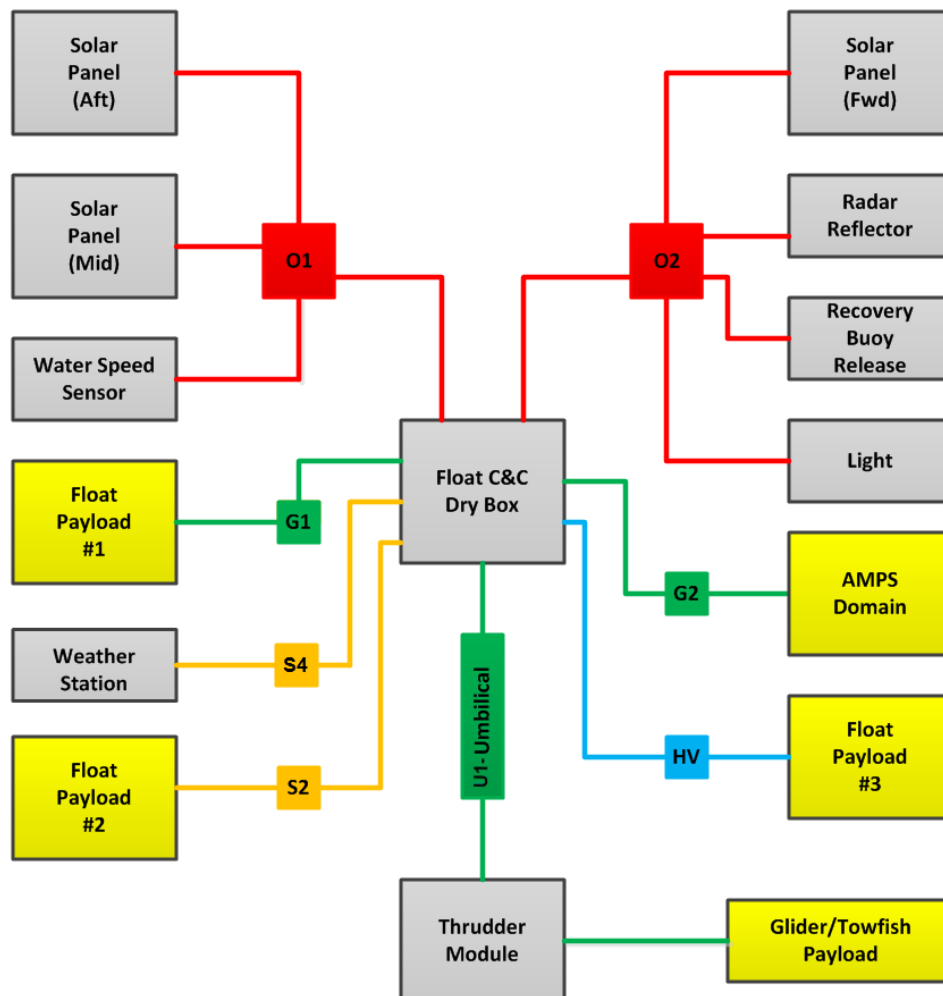


Table 3.1. Color and Label Conventions for Wave Glider Connection Diagram

Objects in Drawing	Description
Grey Boxes	These are standard Wave Glider system components.
Yellow Boxes	These are payloads.
Green Lines	These are 12-pin General Expansion Port, Umbilical, and Thudder Module Payload connections.
Tan Lines	These are 8-pin Sensor connections.
Blue Line	This is an 6-pin High Voltage Port connection.
Red Lines	These are 16-pin O1 and O2 Octopus Cable connections that branch out to a variety of standard Wave Glider components.

CCU Electrical

The CCU is the central hub for communications and power. This section describes the electrical interfaces to the CCU.

The CCU contains:

- Vehicle Management Computer (VMC)
- CCU AMPS Power Domain
- Iridium 9603 SBD Modem
- Primary GPS Module - UBLOX NEO-6Q
- Secondary GPS Module - integral to the CPU Module
- WiFi (2.4 & 5.0 Ghz)
- Radome - Contains Iridium Antenna, Primary and Backup GPS Antennas, 2.4 Ghz and 5.0 Ghz WiFi Antennas.
- GSM Cell Modem
- Water Speed Sensor Interface Electronics
- Expansion Switch Matrix
- 8 Port Managed Ethernet Switch
- AIS Receiver
- Ten 89 watthour Li-Ion Batteries
- 9 Axis Accelerometer
- Compass

For more information on the CCU, see [“Command and Control Unit \(CCU\)”](#) (page 8).

G1, G2, G3 - General Purpose Expansion Ports

The 12-pin General Purpose Expansion Port connectors provide power, switched 10/100 Ethernet and communications channels to payloads and other AMPS domains. For more information see [“G1, G2, G3 - General Purpose Expansion Port Connectors”](#) (page 45).

S1, S2, S3, S4 - Sensor Connections

The 8-pin Sensor connections provide compatibility for Wave Glider SV2 payloads to be used on Wave Glider SV3 vehicles. For more information see [“S1, S2, S3, S4 - Sensor Connectors”](#) (page 48).

HV - High Voltage Connection

The 6-pin High Voltage connection provides 10/100 Ethernet communications and up to 48V power for high voltage sensors, for example the ADCP. For more information see [“HV - High Voltage Connector”](#) (page 51).

U1 - Umbilical

The 12-pin Umbilical connector is the power and communications connection between the Float and the Glider. The Umbilical transfers power from the Float to the Thrudder Module, and from there to Glider and Towfish payloads. The Umbilical also transfers data between the CCU and Float Payloads, Glider Payloads, the Thrudder Module and a Towfish. For more information see [“U1 - Umbilical Connector”](#) (page 46).

D1 - Debug Port

The 12-pin Debug Port is reserved for Wave Glider system troubleshooting and battery charging using an AC adapter. For more information see [“D1 - Debug Port Connector”](#) (page 47).

O1 - System Connection

The 16-pin O1 System connection uses a 16-pin "Octopus" cable to connect two solar panels and a water speed sensor to the CCU. For more information see [“O1 - System Connector”](#) (page 55).

O2 - System Connection

The 16-pin O2 System connection uses a 16-pin "Octopus" cable to connect a solar panel, a radar reflector, a recovery buoy release mechanism, and a marker light to the CCU. For more information see [“O2 - System Connector”](#) (page 59).

Power Key

The power key turns the system on and off. It plugs into a 3 prong male electrical connector and is held in place with a threaded retaining nut. The system is powered on when the key

is inserted. When the power key is removed, the system shuts down. When the system is shutdown, the batteries are individually disconnected and the solar panels and auxiliary power inputs are disconnected from the system.

Power Key Indicator Light

There is an LED indicator light in the handle of the power key.

- If the power key is inserted, but the light remains off, no power is available. If your batteries are charged and this condition persists, contact the LRI Support Organization for assistance.
- If the power key is inserted, power is available, and no software updates are required, the light will begin blinking at a rate of 1 second on/1 second off for 10 seconds and then start blinking at a rate of 0.2 seconds on/2.8 seconds off. The light will continue to blink at this rate as long as the PDC for the CCU is running.
- If the power key is inserted, power is available, and a software update is required, the light will begin blinking at a rate of 1 second on/1 second off for 10 seconds and then start blinking at a higher variable rate during the software update. When the software update is completed the light will blink at a rate of 0.2 seconds on/2.8 seconds off, continuously, as long as the PDC for the CCU is running.
- If the power key is inserted and the light remains blinking at a rate of 1 second on/1 second off indefinitely, there is a problem. Contact the LRI Support Organization for assistance.


Payload Connectivity

This section describes the physical connections between the Payload Dry Boxes and the Float CCU.

Payload Communication Connectivity

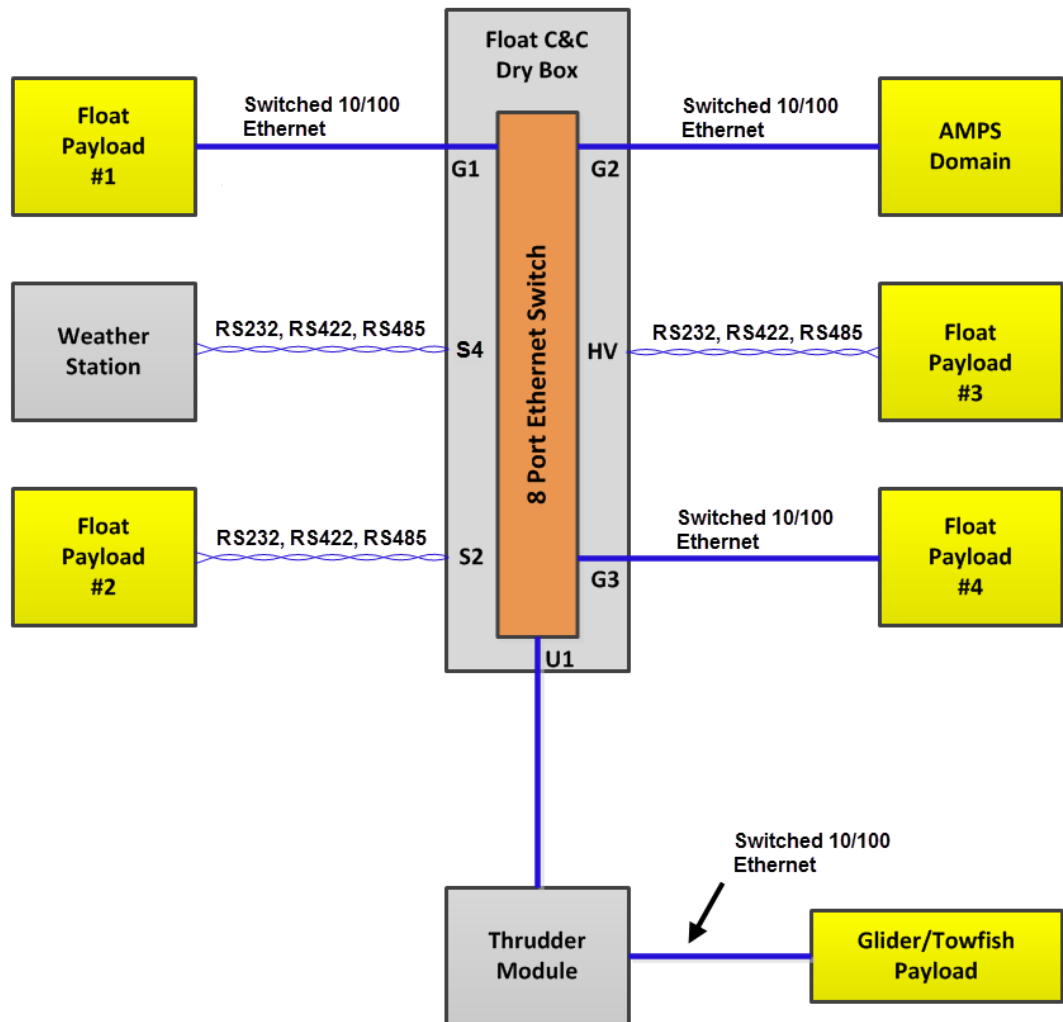Figure 3.4 shows the communication paths available to Wave Glider payloads.

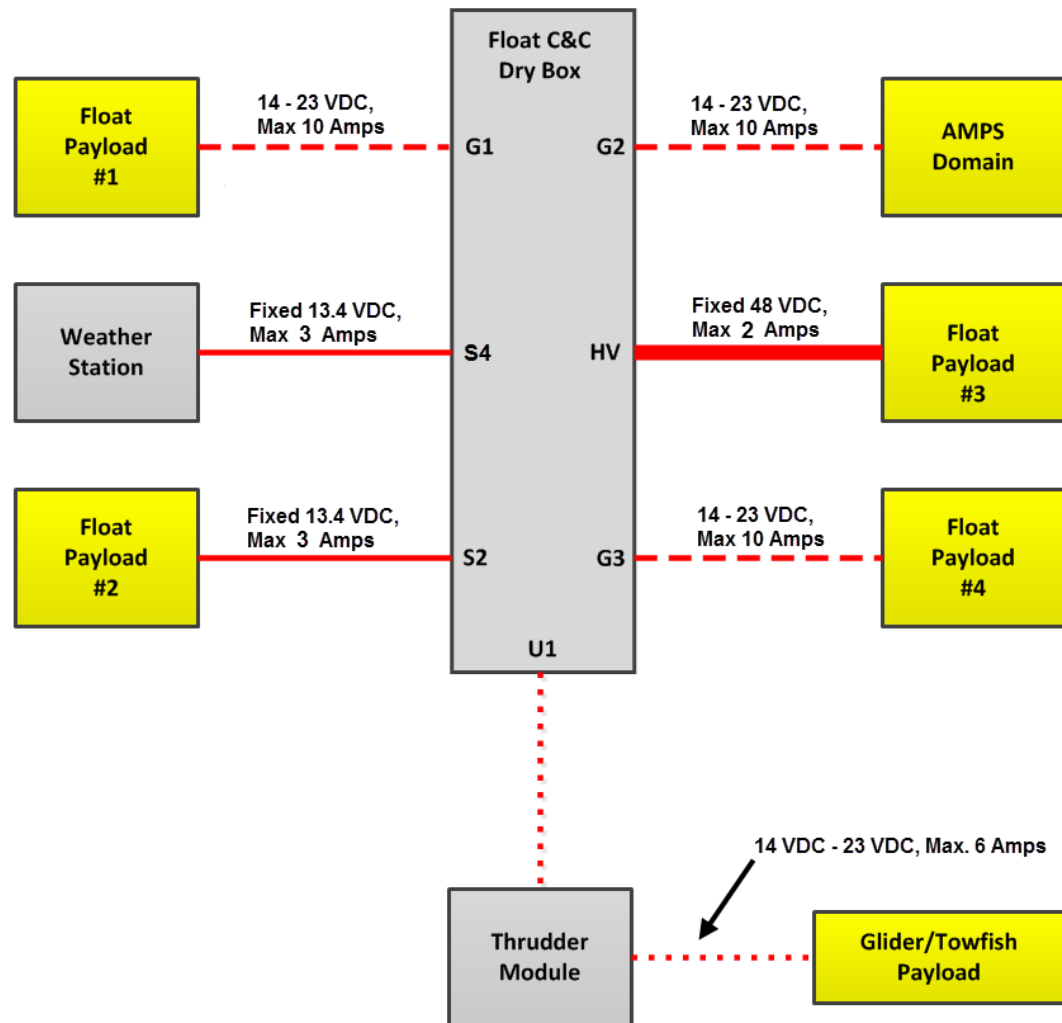
- Payloads connected to the CCU Sensor ports (S1, S2, S3, S4) or the CCU High Voltage port (HV) can communicate directly with the CCU using RS232, RS422, or RS485 serial communications. Through the CCU, they can also communicate with other payloads, or with remote applications over the Iridium Network. Payloads that include a modem can communicate directly with remote applications.
- Payloads connected to the CCU General Purpose Expansion ports (G1, G2, G3) use switched 10/100 Ethernet communications. All communications sent or received by payloads connected to G ports pass through an Ethernet switch that can be configured to allow payload-to-payload communications or direct communications between payloads and the CCU. Payloads that include a modem can communicate directly with remote applications.
- Towfish or Glider payloads use switched 10/100 Ethernet communications available through the CCU Umbilical "U1" port (by way of the Thrudder module payload connector). All communications sent or received by Towfish or Glider payloads pass through the same Ethernet switch that is used by the "G" ports. The Ethernet switch can be configured to allow payload-to-payload communications or direct communications between payloads and the CCU.

Figure 3.4. Payload Communications Diagram

Payload Power Connectivity


Figure 3.5 shows power availability for Wave Glider payloads. Each of the payload connections to the CCU includes pins dedicated to powering a payload.

- Payloads connected to the CCU Sensor ports (S1, S2, S3, S4) receive a fixed 13.4 VDC power supply limited to a maximum of 3 Amps.
- Payloads connected to the CCU General Purpose Expansion ports (G1, G2, G3) receive a variable power supply ranging from 14 to 23 VDC limited to a maximum of 10 Amps.
- Payloads connected to the CCU High Voltage port (HV) receive a fixed 48 VDC power supply limited to a maximum of 2 Amps.
- Towfish or Glider payloads receive a variable power supply through the CCU Umbilical "U1" port (by way of the Thrudder module payload connector) ranging from 14 to 23 VDC and limited to a maximum of 6 Amps.

Figure 3.5. Payload Power Diagram

GPS and PPS Connectivity

Figure 3.6 shows GPS and PPS data availability for Wave Glider payloads. GPS and PPS data is provided through all of the CCU and Thrudder Module payload ports. For payloads connected to the G1, G2, G3, or Thrudder Module payload ports, a switch matrix makes GPS/PPS optional. If one of these payload connections is not configured (switched) to include GPS/PPS, the two lines in the connecting cable that support GPS/PPS can be used for other purposes. For more information on expansion port options see “G1, G2, G3 - General Purpose Expansion Port Connectors” (page 45) or “U1 - Umbilical Connector” (page 46).

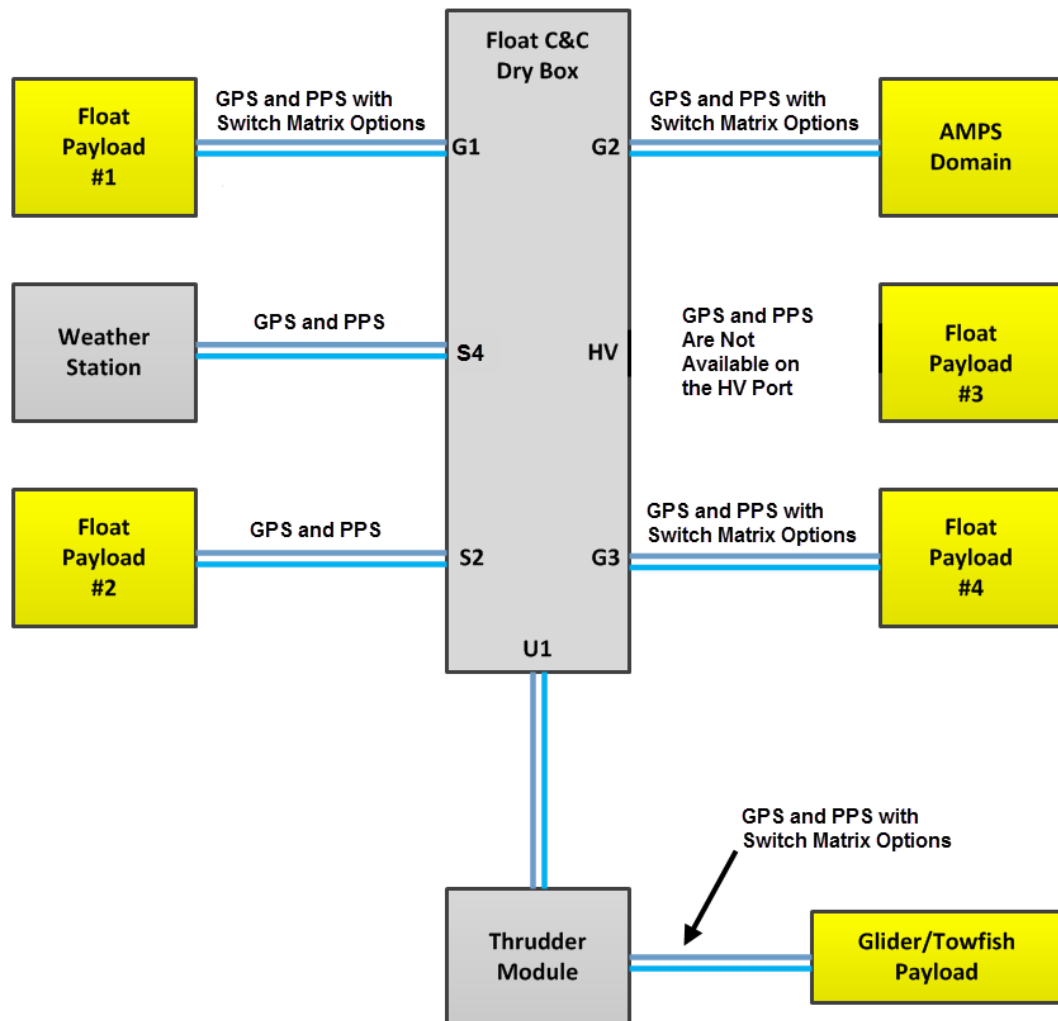Figure 3.6. GPS and PPS Diagram

Adaptable Modular Power System (AMPS)

The Adaptable Modular Power System (AMPS) enables extremely efficient power management for a wide range of possible Wave Glider configurations. By generating data on individual power producers and power consumers in prioritized power domains, AMPS facilitates optimal mission specific power management. AMPS is defined by a 3-wire power distribution system that includes hierarchical communications capability for monitoring and control.

AMPS extensibility supports:

- Scaling the number of power domains.
- Scaling power generation inputs.
- Scaling power storage capacity.

AMPS scaling is achieved through the CCU Expansion Ports. The CCU Expansion Ports are Host Expansion Ports. A Host Expansion Port is defined by having a fully isolated AMPS interface that includes electronic isolation for VPRODS, VCONS, and CAN (AMPS power and communications).

A Guest Expansion Port is defined by having a partially isolated AMPS interface where VPROD and VCONS (AMPS power lines) are fully isolated, but the CAN interface (AMPS communication network) is not isolated and is always available.

AMPS is extended by connecting a Guest Expansion Port on an AMPS domain to:

- A Host expansion port on the CCU.
- A Host expansion port on an AMPS domain that is already extended from the CCU.

When a Guest Expansion Port on an AMPS domain, for example a payload or an LRI Auxiliary Power Unit (APU), is connected to a Host Expansion port on the CCU or on another AMPS domain, a communication channel between the newly added AMPS domain and the CCU becomes active allowing you to configure and manage the newly added AMPS domain from a remote application (for example, WGMS). If you attempt to extend AMPS by connecting a Host Expansion Port on the newly added AMPS domain to a Host Expansion Port on the CCU (or on another AMPS domain), the newly added AMPS domain will remain isolated and non-operational. Any payload that includes an AMPS domain (AMPS backplane and modules) must include a Guest Expansion Port, and will not support further expansion of AMPS unless it also has a Host Expansion Port.

The AMPS configuration on a Wave Glider vehicle includes one or more power domains. Each power domain has a set of reusable, factory installed [AMPS Modules](#) that plug into the passive AMPS backplane, including a Power Domain Controller (PDC) module that is directed by the vehicle management computer in the CCU. There are AMPS modules for a variety of power management functions:

- [“Power Domain Controller \(PDC\) Module” \(page 204\)](#)
- [“Battery Charger Module” \(page 205\)](#)
- [“Solar Panel Input Module” \(page 207\)](#)
- [“High Voltage Output Module” \(page 208\)](#)
- [“Buck-Boost Regulated Output Module” \(page 209\)](#)
- [“Bridge Module” \(page 210\)](#)
- [“Iridium and GPS Module \(IGM\)” \(page 212\)](#)


A Controller Area Network (CAN) supports communications between the CCU and the PDC in each AMPS domain. AMPS provides an intelligent interface between Wave Glider power producers and power consumers, switching them on or off to regulate power based on input to the CCU from local or remote applications.

AMPS also provides data buses and power buses:

- AMPS data buses allow the PDC to send commands and receive power management data from all other AMPS modules in an AMPS domain.
- The AMPS power buses consists of a common ground circuit and two power circuits each capable of carrying up to 20A peak (240W at 12V). The two power circuits are referred to as

Voltage Producer (VPROD) and Voltage Consumer (VCONS). VPROD receives all power input from the solar panels through the Solar Input modules then charges the batteries and feeds VCONS through the Battery Charger modules. VCONS receives power from the batteries through the Battery Charger modules. VCONS powers payloads through Power Consumer modules, and it also powers the VMC through the Host Power Supply module. VCONS can also feed VPROD through a Battery to Battery module.

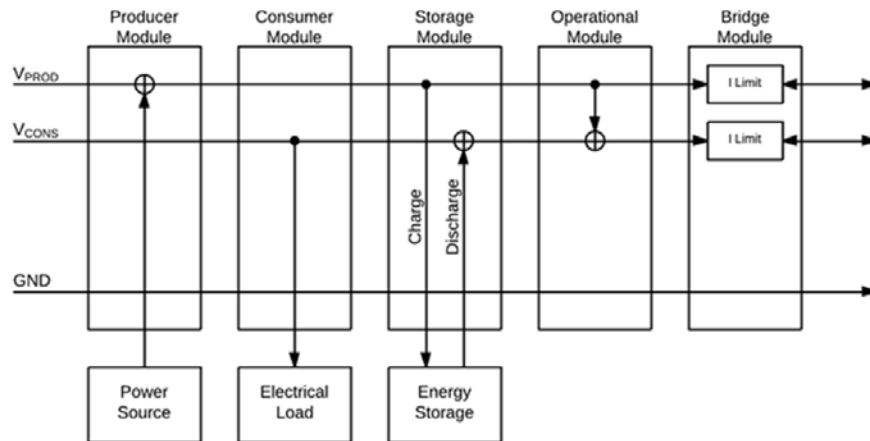Figure 3.7. AMPS Power Bus



CCU Standard Electrical Connections

The Wave Glider SV3 CCU has 4 types of electrical connections:

- Five 12 Pin “CCU Expansion Ports” (page 42)
- Four 8 Pin “CCU Sensor Ports” (page 48)
- One 6 Pin “CCU High Voltage Connector” (page 50)
- Two 16 Pin “CCU System Connections” (page 52)

The following sections describe the connectors and pin-out for each connection to the CCU and for all connections to the Octopus cables.

CCU Expansion Ports

The 12 pin U1, D1, G1, G2, and G3 connections to the CCU are Host Expansion Ports. Expansion ports are the means for extending the SV3 power system (AMPS) and the means for providing high speed Ethernet communications to payloads. Expansion ports also provide a pair of programmable "SPARE" wires that can be used for communications or GPS services.

A Host Expansion Port is defined by having a fully isolated AMPS interface that includes electronic isolation for the VPRODS, VCONS, and CAN (AMPS power and communications lines).

A Guest Expansion Port is defined by having a partially isolated AMPS interface where the VPROD and VCONS (AMPS power lines) are fully isolated, but the CAN interface (AMPS communications) is not isolated and is always available.

AMPS is extended by connecting a Guest Expansion Port on an AMPS domain to:

- A Host Expansion Port on the CCU.
- A Host Expansion Port on an AMPS domain that is already extended from the CCU.

When a Guest Expansion Port on an AMPS domain, for example a payload or an LRI Auxiliary Power Unit (APU), is connected to a Host Expansion port on the CCU or on another AMPS domain, a communication channel between the newly added AMPS domain and the CCU becomes active allowing you to configure and manage the newly added AMPS domain from a remote application (for example, WGMS). If you attempt to extend AMPS by connecting a Host Expansion Port on the newly added AMPS domain to a Host Expansion Port on the CCU (or on another AMPS domain), the newly added AMPS domain will remain isolated and non-operational. Any payload that includes an AMPS domain (AMPS backplane and modules) must include a Guest Expansion Port, and will not support further expansion of AMPS unless it also has a Host Expansion Port.

In addition to being Host Expansion Ports, the G1, G2 and G3 connections to the CCU are General Purpose Expansion Ports that are available for payloads or Auxiliary Power Units.

The U1 umbilical connection to the CCU is a Host Expansion Port dedicated to the Umbilical and the Thrudder Module Umbilical connection is a Guest Expansion Port. The Thrudder Module Payload Expansion Port is a Host Expansion Port that allows AMPS to expand to

Glider or Towfish payloads. See [“Thrudder Module Electrical Connections” \(page 63\)](#) for more information.

The D1 Debug Port is a CCU Expansion Port, but the SPARE lines are hard wired to the Vehicle Management Computer (VMC) serial console port to facilitate debugging. The D1 connection to the CCU should be used for debugging and external battery charging only. For more information on external charging procedures using the LRI Multi-Function Debug/Charging cable see [“External Battery Charging” \(page 70\)](#).

[Table 3.2](#) provides information on each of the CCU Expansion Port pins listed in the Pin Out tables for the U1, D1, G1, G2, and G3 connectors.

Table 3.2. Expansion Port Signals


Signal Type	Description
GND and Shield	To prevent ground loops, the GND and Shield are grounded in one place. The shield is grounded on expansion ports with CAN signals originating from an AMPS bridge module.
VPROD	VPROD is the high current carrying bus that transports power from power producers, for example, a solar panel. VPROD can vary from 0 to 25 volts at 10 amps. NOTE: The Umbilical does not contain a wire for Pin 2, the VPROD, because there is no underwater power producer in the SV3 Wave Glider system.
VCONS	VCONS is the high current carrying bus that transports power to power consumers, for example, sensors. VCONS can vary from 14 to 25 volts at 10 amps (provided there is energy stored in the batteries).
CANH and CANL	These are the Controller Area Network (CAN) bus connections: • CAN bus H (AMPS Bridge CANH_PRI) • CAN bus L (AMPS Bridge CANL_PRI) They are terminated on the host system VMC, the Power Domain Controller (PDC), and Bridges. The CAN bus is not available for sensor integration, it is only for use between the VMC and the various AMPS domains.
TX+, TX-, RX+, RX-	These are the Ethernet connections. They terminate at an 8-port OEM Ethernet switch in the CCU (Sixnet ET-8MS-OEM): • 5 Ethernet switch ports are allocated to the U1, D1, G1, G2, and G3 Expansion Ports on the CCU. • 1 Ethernet switch port is allocated for the cellular network modem. • 1 Ethernet switch port is allocated to the VMC. • 1 Ethernet switch port is a spare.
SPARE1 and SPARE2	The SPARE signals for the U1, G1, G2, and G3 ports are programmable. By turning the expansion port relay on, SPARE signals can be connected to any other expansion port that has its relay turned on. Otherwise, SPARE1 is connected to GPS PPS and SPARE2 is connected to GPS DATA, similar

Signal Type	Description														
	to a sensor port (S1, S2, S3, S4). The signals are distributed at RS232 levels. SPARE1 and SPARE2 on the Debug Port connector (D1) connect to Vehicle Management Computer console in the CCU.														
G1-G3 Options	<table><tr><th>Spare1</th><th>Spare2</th></tr><tr><td>Option 1</td><td>GPS NMEA</td></tr><tr><td>Option 2</td><td>PPS</td></tr><tr><td>Option 3</td><td>VMC_RX*</td></tr><tr><td>Option 4</td><td>VMC_TX*</td></tr><tr><td>Umbilical Spare1</td><td>Umbilical Spare2</td></tr><tr><td>No Connect</td><td>No Connect</td></tr></table>	Spare1	Spare2	Option 1	GPS NMEA	Option 2	PPS	Option 3	VMC_RX*	Option 4	VMC_TX*	Umbilical Spare1	Umbilical Spare2	No Connect	No Connect
Spare1	Spare2														
Option 1	GPS NMEA														
Option 2	PPS														
Option 3	VMC_RX*														
Option 4	VMC_TX*														
Umbilical Spare1	Umbilical Spare2														
No Connect	No Connect														
Umb Options	<table><tr><th>Spare1</th><th>Spare2</th></tr><tr><td>Option 1</td><td>GPS NMEA</td></tr><tr><td>Option 2</td><td>PPS</td></tr><tr><td>Option 3</td><td>VMC_RX</td></tr><tr><td>Option 4</td><td>VMC_TX</td></tr><tr><td>G* Spare1</td><td>G* Spare2</td></tr><tr><td>No Connect</td><td>No Connect</td></tr></table>	Spare1	Spare2	Option 1	GPS NMEA	Option 2	PPS	Option 3	VMC_RX	Option 4	VMC_TX	G* Spare1	G* Spare2	No Connect	No Connect
Spare1	Spare2														
Option 1	GPS NMEA														
Option 2	PPS														
Option 3	VMC_RX														
Option 4	VMC_TX														
G* Spare1	G* Spare2														
No Connect	No Connect														
Debug Port	<table><tr><th>Spare1</th><th>Spare2</th></tr><tr><td>Only Option</td><td>VMC_console_RX</td></tr><tr><td></td><td>VMC_console_TX</td></tr></table>	Spare1	Spare2	Only Option	VMC_console_RX		VMC_console_TX								
Spare1	Spare2														
Only Option	VMC_console_RX														
	VMC_console_TX														

* Not available at time of publication.

G1, G2, G3 - General Purpose Expansion Port Connectors

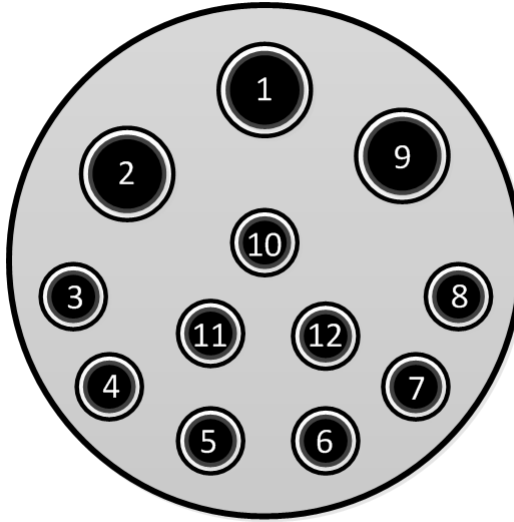The G1, G2, and G3 General Purpose Expansion Port connections to the CCU support AMPS power management logic and also provide Ethernet switching capability for flexible payload-to-payload and payload-to-CCU communications management. They are designed to support payloads with multiple sensors or devices that require communications channels with other payloads and also with the CCU. This is in contrast to the S1, S2, S3, and S4 sensor connections to the CCU that are intended for stand-alone sensors running on a 13.4 volt power supply, with direct communications connections to the CCU.



Female Face View

General Purpose Expansion Port Pin Out

Pin	Signal	Description
1	GND	System ground plane
2	VPROD	AMPS Bridge VPROD
3	CANH	AMPS Bridge CANH_PRI
4	CANL	AMPS Bridge CANL_PRI
5	TX+	Ethernet Switch
6	TX-	Ethernet Switch
7	RX+	Ethernet Switch
8	RX-	Ethernet Switch
9	VCONS	AMPS Bridge VCONS
10	Shield	System ground plane
11	SPARE1	Programmable - See SPARE1 in Table 3.2 .
12	SPARE2	Programmable - See SPARE2 in Table 3.2 .



Note

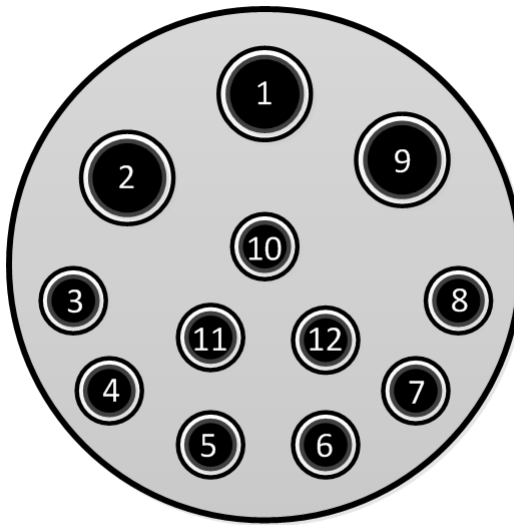
See [Table 3.2](#) for additional information on each of the pins listed in the General Purpose Expansion Port Pin Out table.

General Purpose Expansion Port Mating Connector

The CCU General Purpose Expansion Port connectors mate with a wet mate-able 12 pin, male, whip assembly. These connectors are custom manufactured for LRI by Teledyne.

U1 - Umbilical Connector

The Umbilical connection provides power and communications to the Glider and connectivity between the CCU, the Thrudder Module and subsurface payloads. The Umbilical connection is electrically the same as a General Purpose Expansion Port, but it is a dedicated connector for the Umbilical, however the Umbilical does include a conductor for a high current power producer line (VPROD).



Female Face View

Umbilical Connector Pin Out

Pin	Signal	Description
1	GND	System ground plane
2	VPROD	AMPS Bridge VPROD
3	CANH	AMPS Bridge CANH_PRI
4	CANL	AMPS Bridge CANL_PRI
5	TX+	Ethernet Switch
6	TX-	Ethernet Switch
7	RX+	Ethernet Switch

Pin	Signal	Description
8	RX–	Ethernet Switch
9	VCONS	AMPS Bridge VCONS
10	Shield	System ground plane
11	SPARE1	Interconnect Matrix
12	SPARE2	Interconnect Matrix



Note

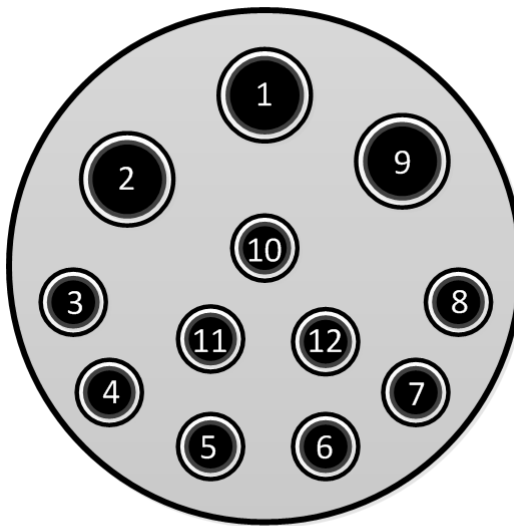
See [Table 3.2](#) for additional information on each of the pins listed in the Umbilical Connector Pin Out table.

Umbilical Mating Connector

The CCU Umbilical connector mates with a wet mate-able, 12 pin, male whip assembly. These connectors are custom manufactured for LRI by Teledyne.

D1 - Debug Port Connector

The Debug Port Connector is the primary maintenance port for the CCU. It is identical to a General Purpose sensor port except that the SPARE1 and SPARE2 lines are dedicated to providing access to the VMC's serial console port. This connector is also used for an external battery charger, although an external battery charger can be plugged into any CCU Expansion Port. For more information see [“External Battery Charging”](#) (page 70).



Female Face View

Debug Port Pin Out

Pin	Signal	Description
1	GND	System ground plane

Pin	Signal	Description
2	VPROD	AMPS Bridge VPROD
3	CANH	AMPS Bridge CANH_PRI
4	CANL	AMPS Bridge CANL_PRI
5	TX+	Ethernet Switch
6	TX–	Ethernet Switch
7	RX+	Ethernet Switch
8	RX–	Ethernet Switch
9	VCONS	AMPS Bridge VCONS
10	Shield	System ground plane
11	SPARE1	VMC Console
12	SPARE2	VMC Console



Note

See [Table 3.2](#) for additional information on each of the pins listed in the Debug Port Pin Out table. The Umbilical and General Purpose Expansion Port connectors (U1, G1, G2, G3) connect to the interconnect matrix, but the SPARE1 and SPARE2 pins on the Debug Port connector (D1) connect to Vehicle Management Computer console in the CCU.

Debug Port Mating Connector

The CCU Debug Port connector mates with a wet mate-able 12 pin, male, whip assembly. These connectors are custom manufactured for LRI by Teledyne.

CCU Sensor Ports

The 8 pin S1, S2, S3, and S4 Sensor Port connections to the CCU are intended for individual serially connected sensors. They can also be used to adapt Wave Glider SV2 payloads for use with the Wave Glider SV3 system. The default use for the CCU S4 Sensor Port is for the standard Wave Glider SV3 Weather Station.

S1, S2, S3, S4 - Sensor Connectors

The S1, S2, S3, and S4 sensor connections to the CCU are typically used for stand-alone sensors or legacy Wave Glider SV2 payloads running on a 13.4 volt power supply that communicate directly with the CCU. The SV3 "S" ports and the SV2 "Payload Ports" use the same 8 pin connectors, but they are NOT identical. The difference is that there are no Aux lines on the SV3 "S" ports. Instead the SV3 S ports support RS-232, RS-422, and RS-485. This is the same multi-protocol signal capability provided by the LRI System Management Computer (SMC) that is typically used to manage Wave Glider integrated payloads.



Female Face View

S1, S2, S3, S4 Sensor Connector Pin Out

Pin	Signal	Description
1	PPS	VMC PPS
2	13.4V	AMPS BBR Output
3	TX	VMC UART/MAX3060E Driver
4	RX	VMC UART/MAX3060E Driver
5	RTS	VMC UART/MAX3060E Driver
6	CTS	VMC UART/MAX3060E Driver
7	GND	System Ground
8	GPS	VMC GPS

The following tables provide information on each of the S Port pins listed in the Pin Out table for the S1, S2, S3, and S4 connectors.

Table 3.3. Pins 1 and 8

Signal Type	Description
PPS and GPS	The PPS signal is a 100ms pulse - once per second, with positive polarity RS-232 pulses. The GPS data output is a 9600 baud, RS-232 NMEA format

Signal Type	Description
	serial connection with GGA, ZDA, VTG, GLL, GST, and, RMC messages reported once every second. The order of the messages is not fixed.

Table 3.4. Pins 2 and 7

Signal Type	Description
13.4V Power and GND	The power pin provides a regulated 13.4 volts at up to 3.0A continuous draw. The port will handle surges of up to 3.5A. Any transient current draw greater than 3.5A for more than 160ms will constitute a fault and cause the output to shut off to protect itself. When sizing the load, care must be taken in sizing the total input capacitance seen by the power switch. If the capacitance is excessively large, the switch sees the output as being shorted, which causes a fault and the power will turn off to protect itself. The maximum allowable input capacitance for each payload port is ~50,000uF. If the equipment's transients are larger than 3.5A or the input capacitance is greater than 50,000uF, additional circuitry is required to buffer the power output. This can take the form of an NTC inrush limiter, local batteries, super capacitors, etc.

Table 3.5. Pins 3, 4, 5, and 6

Mode	Pin 3	Pin 4	Pin 5	Pin 6
RS-232	VMC_TX +	VMC_RX -	RTS	CTS
RS-422	VMC_TX -	VMC_RX +	VMC_TX +	VMC_RX -
RS-485	RS-485 -	N/A	RS-485 +	N/A


S1, S2, S3, S4 Sensor Mating Connector

The CCU S1, S2, S3, and S4 Sensor connectors are designed to mate to a wet mate-able connector from Teledyne or SubConn. The mating connector should be an 8 pin, male, whip type assembly. An example part number from SubConn is PNARA MCIL8M, which is the penetrator assembly used on the LRI Forward and Aft Payload Dry Boxes for the Wave Glider SV2 Float.

CCU High Voltage Connector

The 6-pin High Voltage connection to the CCU supports 10/100 Ethernet communications and can provide up to 48 V of power.

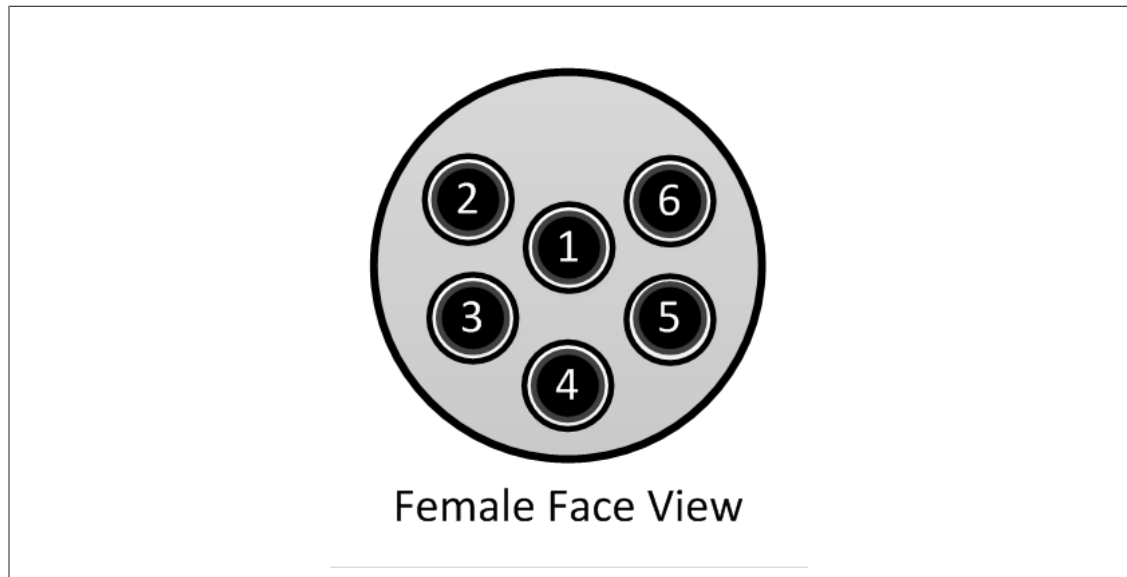HV - High Voltage Connector



High Voltage Connector Pin Out

Cable Pin	Board Connector Pin	Signal	Description
1	2	48V	AMPS HV Output
2	3	TX	VMC UART/ MAX3060E Driver
3	4	RX	VMC UART/ MAX3060E Driver
4	5	RTS	VMC UART/ MAX3060E Driver
5	6	CTS	VMC UART/ MAX3060E Driver
6	7	GND	System Ground

The following tables provide information on each of the HV Port pins listed in the High Voltage connector pin out table.

Table 3.6. Pins 1 and 6

Signal Type	Description
48V Power and GND	The power pin provides a regulated 48V output that is limited at 2.0A.

Table 3.7. Pins 2, 3, 4, and 5

Mode	Pin 3	Pin 4	Pin 5	Pin 6
RS-232	VMC_TX +	VMC_RX -	RTS	CTS

Mode	Pin 3	Pin 4	Pin 5	Pin 6
RS-422	VMC_TX -	VMC_RX +	VMC_TX +	VMC_RX -
RS-485	RS-485 -	N/A	RS-485 +	N/A

High Voltage Mating Connector

The CCU High Voltage connector mates to a wet mate-able connector from Teledyne or SubConn. The mating connector must be a 6 pin, male, whip type assembly. An example part number from SubConn is MCIL6M, which is a whip assembly.

CCU System Connections

The CCU System Connections, O1 and O2, mate to two cable assemblies known as "Octopus Cables." Each Octopus Cable assembly includes a watertight junction box that mounts on the forward bulkhead of the aft payload bay on the Float. The Octopus Cables reduce wiring clutter and simplify the connections between the CCU and 7 standard Wave Glider SV3 devices.

Figure 3.8. O1 Octopus Cable



Figure 3.9. O2 Octopus Cable

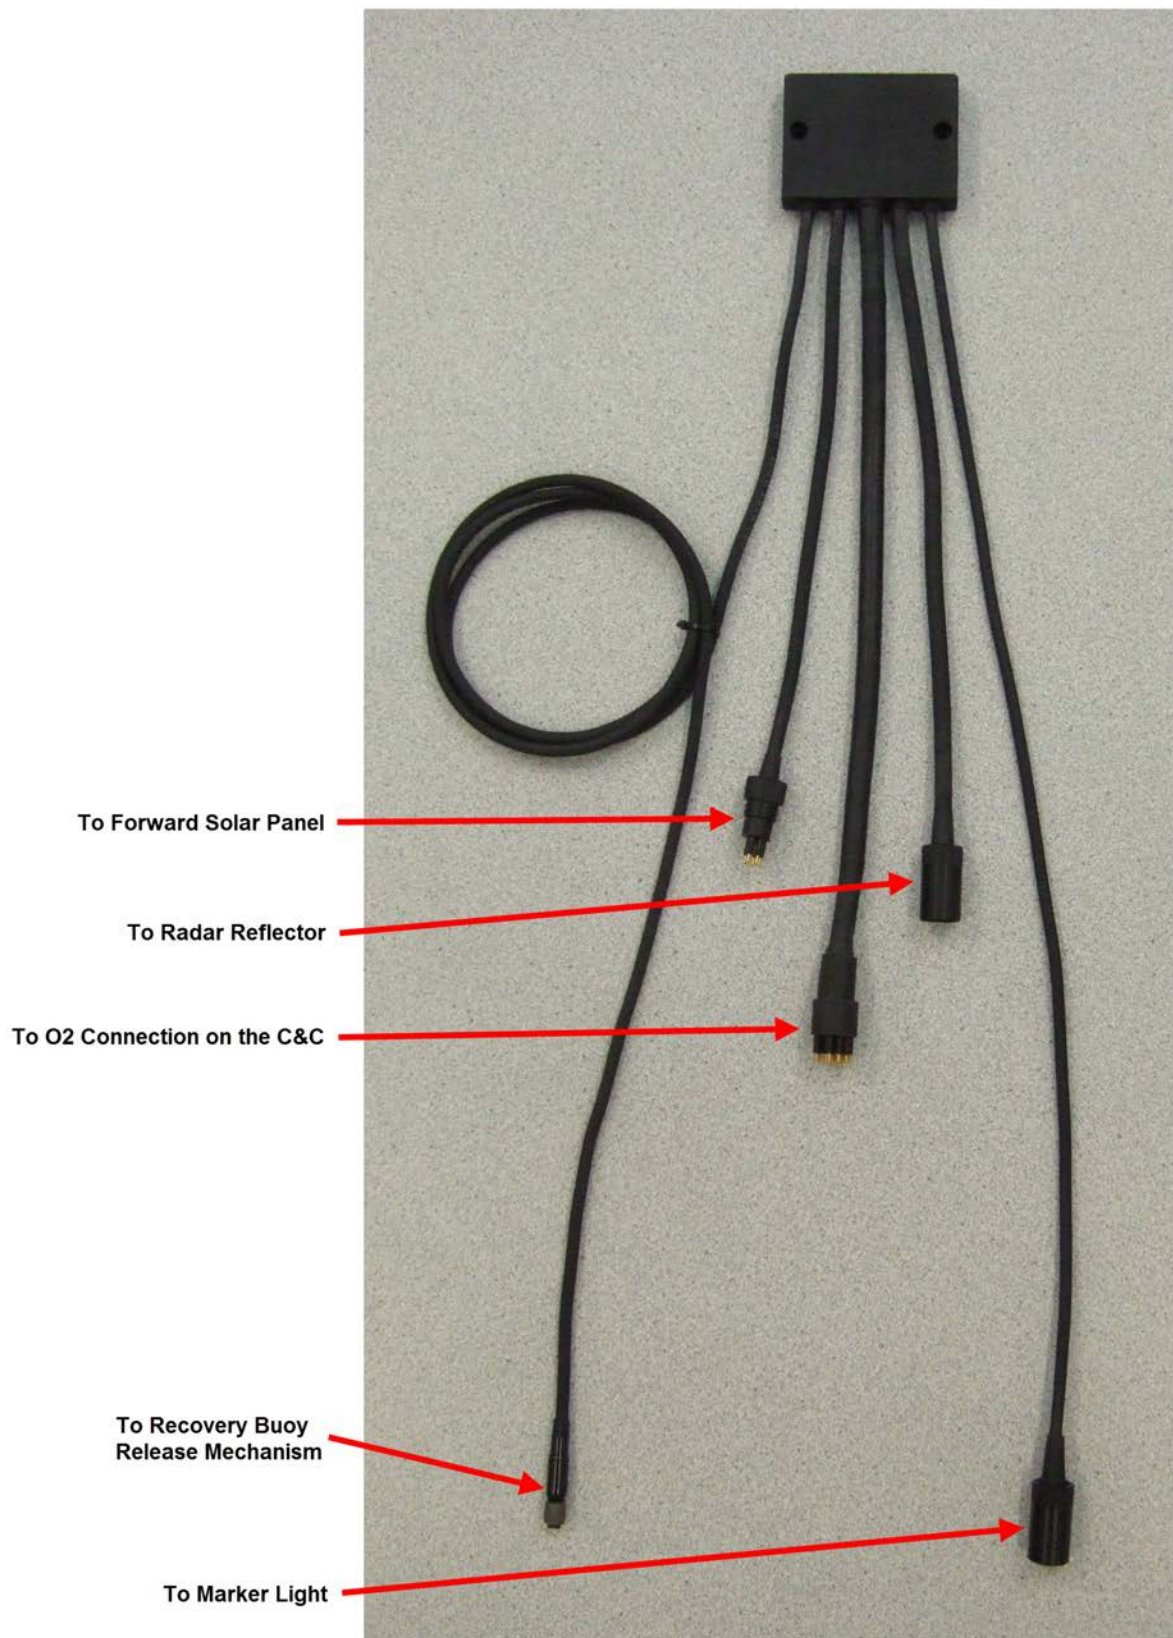


Figure 3.10. Octopus Cable Assemblies Mounted to Bulkhead



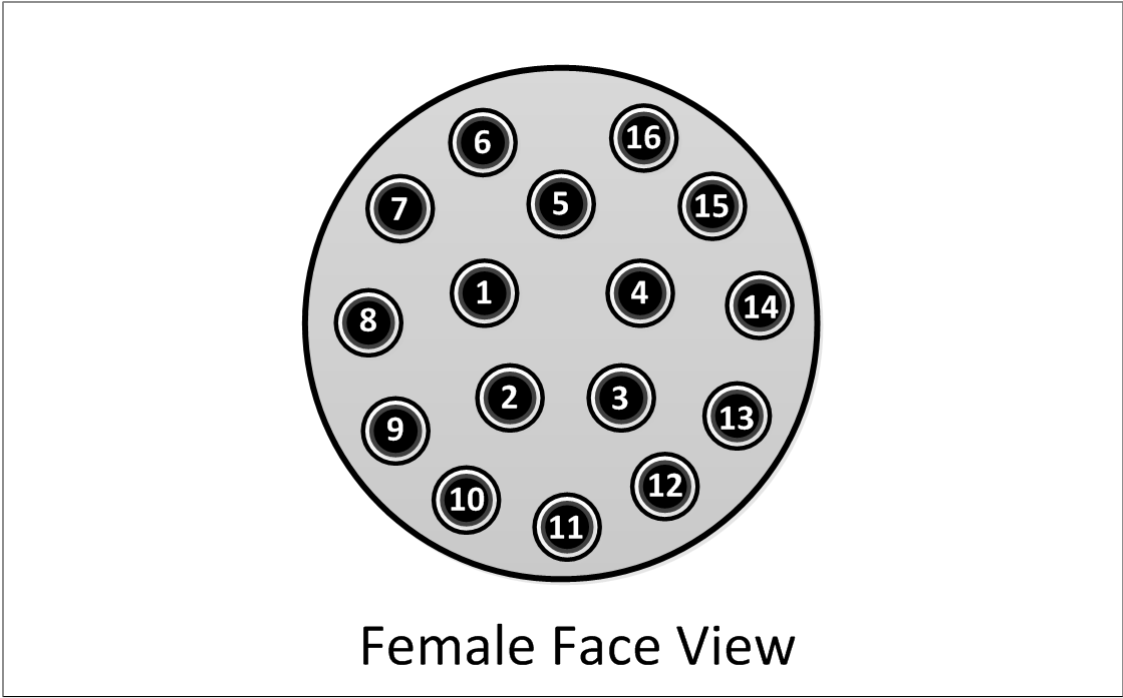
There are four types of watertight connectors used on the Octopus cables.

- 8-pin Water Speed and 8-pin Radar Reflector connectors.
- 5-pin Solar Panel connectors.
- 3-pin Buoy Release connector.
- 2-pin Marker Light connector.

O1- System Connector

The O1-System connector is where the custom LRI O1 Octopus cable connects to the CCU. The O1 Octopus cable includes an integral junction box that breaks-out to three smaller cables that connect to:


- Mid Solar Panel
- Aft Solar Panel
- Water Speed Sensor



O1-System Connector Pin Out

Pin	Signal	Description
1	SOL1+	AMPS Solar Input
2	SOL1C	AMPS Solar Input
3	SOL1–	System Ground
4	SOL2+	AMPS Solar Input
5	SOL2C	AMPS Solar Input
6	SOL2–	System Ground
7	FORE_XD+	Fore Speed Sensor Module Input
8	FORE_XD-	Fore Speed Sensor Module Input
9	NC	NC
10	AFT_XD+	Aft Speed Sensor Module Input
11	AFT_XD-	Aft Speed Sensor Module Input
12	Shield	System Ground
13	TEMP+	Temperature Sensor Input
14	TEMP-	Temperature Sensor Input
15	KEYA	1k resistor between KEYA and KEYB
16	KEYB	

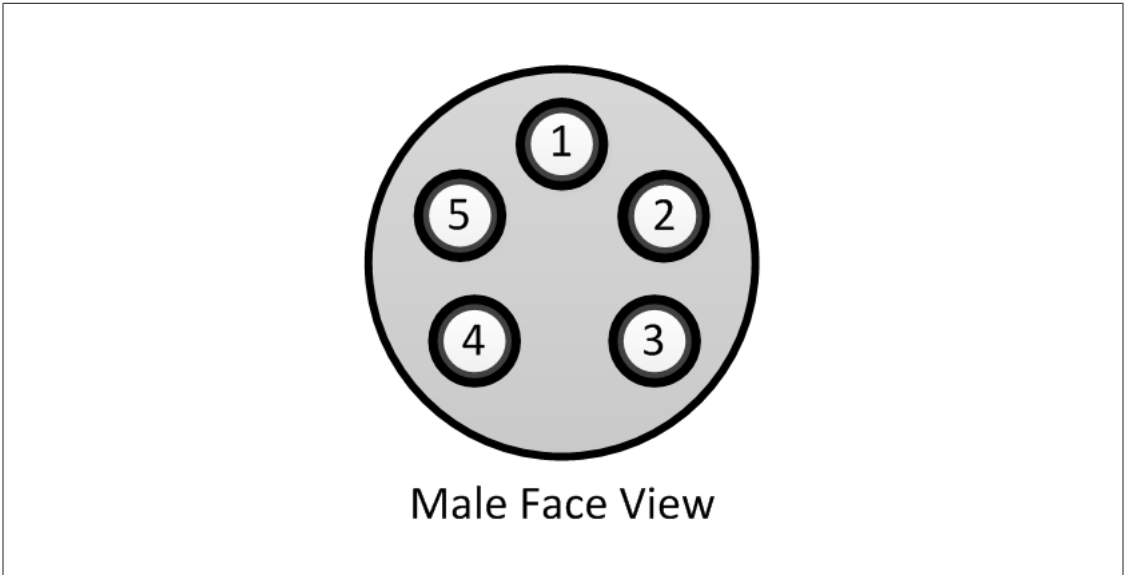
Mid Solar Panel Connector (Solar 1)



Mid Solar Panel Connector Pin Out

Pin	Connection #	Description
1	SYSCON1-1	SOLAR3_V+
2	SYSCON1-3	SOLAR3_V-
3	SYSCON1-2	SOLAR3_CT
4		N/C
5		N/C

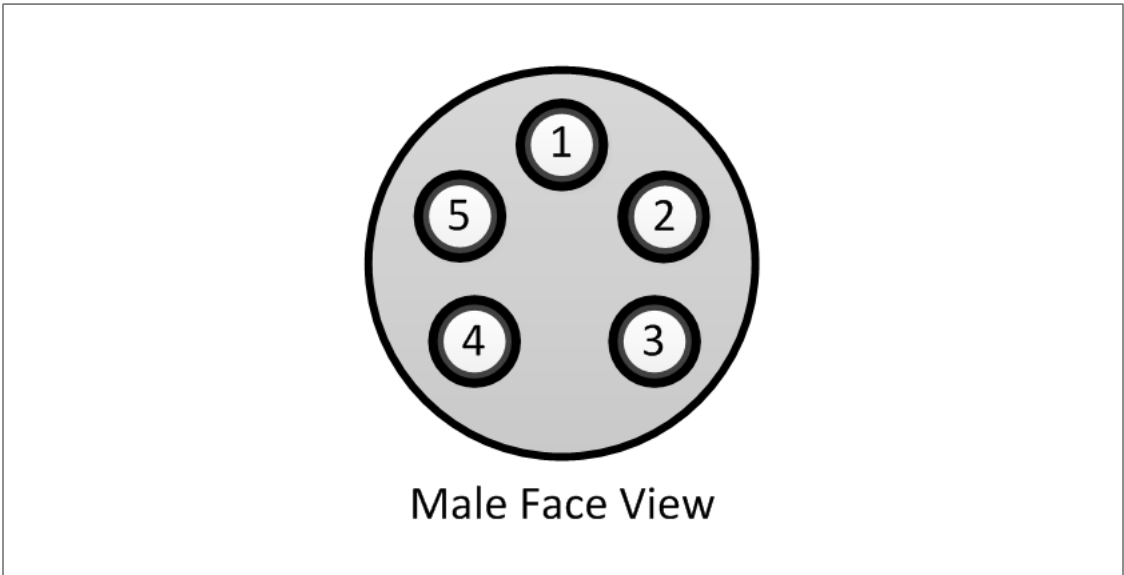
Aft Solar Panel Connector (Solar 2)



Aft Solar Panel Connector Pin Out

Pin	Connection #	Description
1	SYSCON1-4	SOLAR3_V+
2	SYSCON1-6	SOLAR3_V-
3	SYSCON1-5	SOLAR3_CT
4		N/C
5		N/C

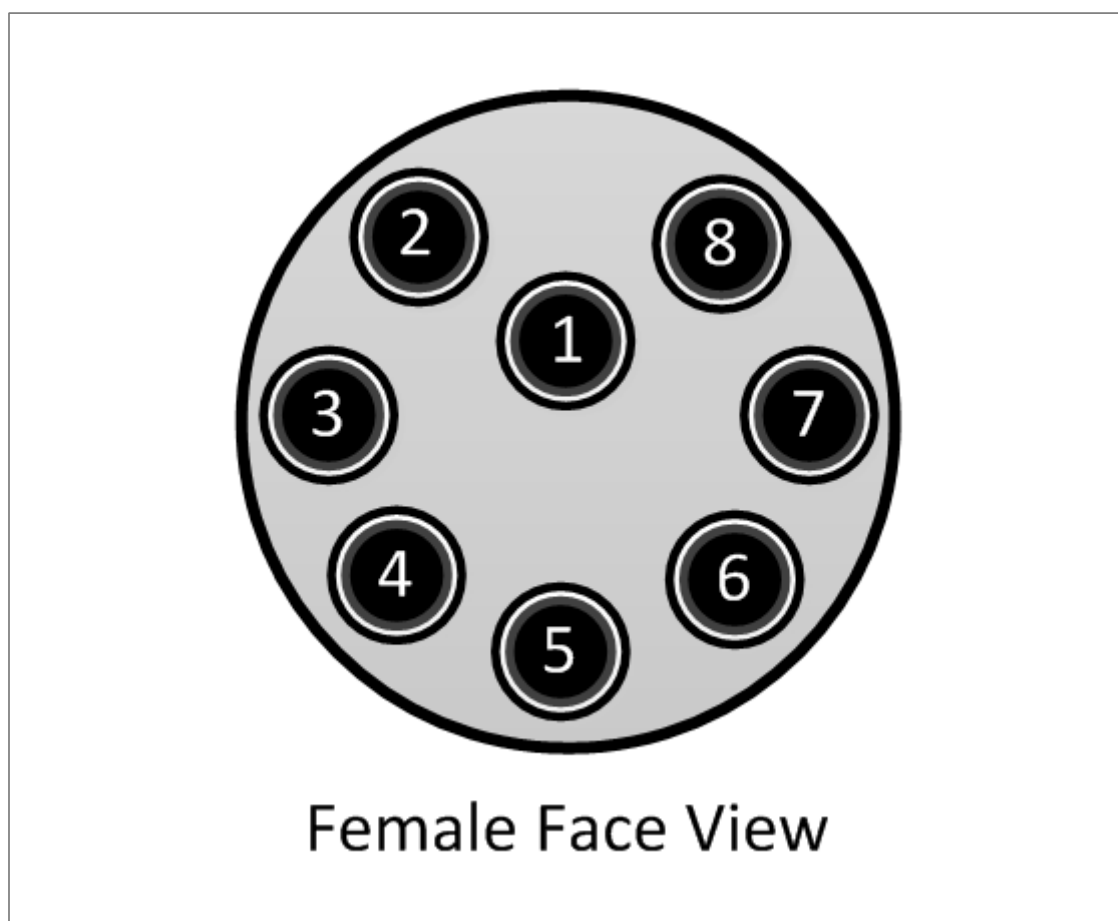Water Speed Connector



Water Speed Connector Pin Out


Pin	Connection #	Description
1	SYSCON1-13	TEMP+
2		N/C
3	SYSCON1-7	FORE_XD+
4	SYSCON1-8	FORE_XD-

Pin	Connection #	Description
5	SYSCON1-10	AFT_XD+
6	SYSCON1-11	AFT_XD-
7	SYSCON1-12	SHIELD
8	SYSCON1-14	TEMP-

O2 - System Connector

The O2-System connector is where the custom LRI O2 Octopus cable connects to the CCU. The O2 Octopus cable includes an integral junction box that breaks-out to four smaller cables that connect to:

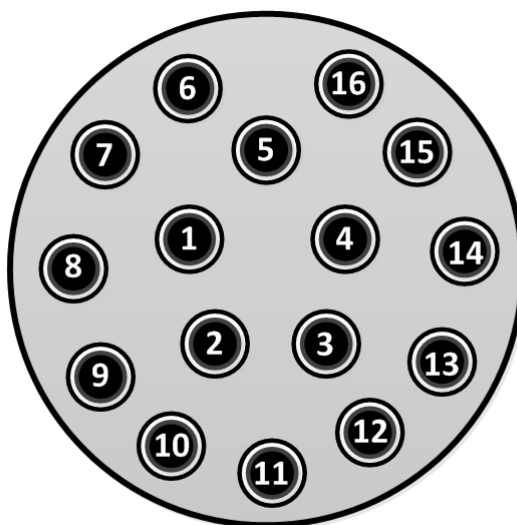- Light
- Radar Reflector
- Forward Solar Panel
- Buoy Release Mechanism




Female Face View

O2-System Connector Pin Out

Pin	Signal	Description
1	SOL3+	AMPS Solar Input
2	SOL3C	AMPS Solar Input
3	SOL3-	System Ground
4	SOL4+	AMPS Solar Input

Pin	Signal	Description
5	SOL4C	AMPS Solar Input
6	SOL4–	System Ground
7	RADAR_PWR	AMPS HVP (unswitched)
8	RADAR_GND	System Ground
9	LIGHT_PWR	AMPS BBR Output
10	LIGHT_GND	System Ground
11	RECOVER_PWR	AMPS HVP (unswitched)
12	RECOVER_GND	System Ground
13	SYS_SPARE1	50 PIN ICB to BACKPLANE Connector
14	SYS_SPARE2	50 PIN ICB to BACKPLANE Connector
15	KEYA	2k resistor between KEYA and KEYB
16	KEYB	

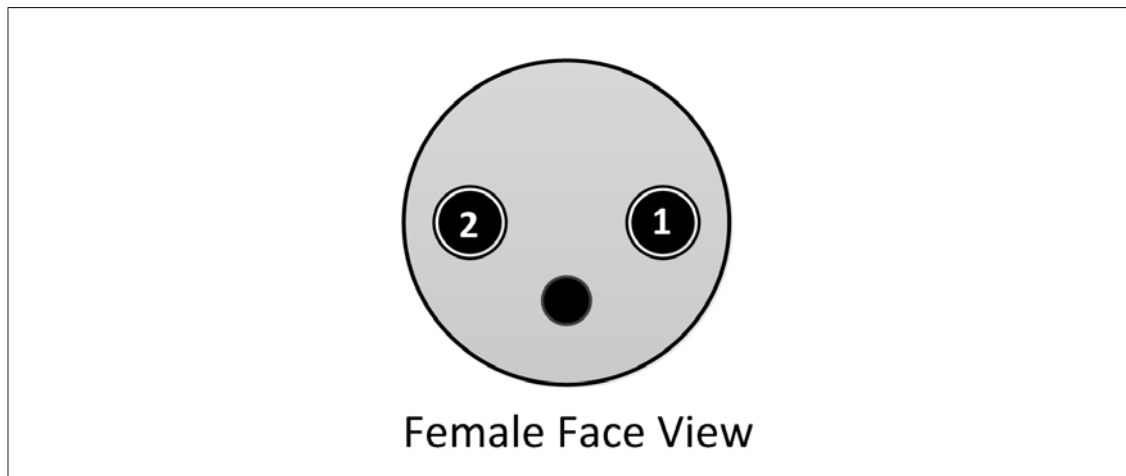Light Connector



Light Connector Pin Out

Pin	Connection #	Description
1	SYSCON2-9	LIGHT_PWR
2	SYSCON2-10	LIGHT_GND

Radar Reflector Connector




Female Face View

Radar Reflector Connector Pin Out

Pin	Connection #	Description
1	SYSCON1-13	TEMP+
2		N/C
3	SYSCON1-7	FORE_XD+
4	SYSCON1-8	FORE_XD-
5	SYSCON1-10	AFT_XD+
6	SYSCON1-11	AFT_XD-
7	SYSCON1-12	SHIELD
8	SYSCON1-14	TEMP-

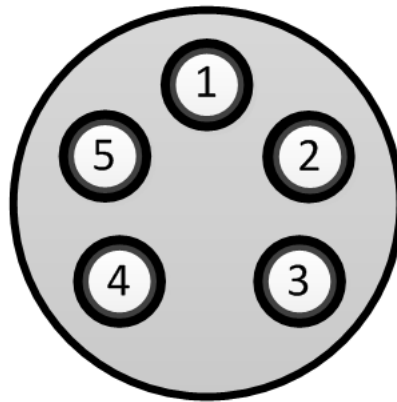Forward Solar Panel Connector (Solar 3)




Male Face View

Forward Solar Panel Connector Pin Out

Pin	Connection #	Description
1	SYSCON2-1	SOLAR3_V+
2	SYSCON2-3	SOLAR3_V-
3	SYSCON2-2	SOLAR3_CT
4		N/C
5		N/C

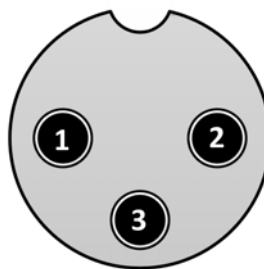Buoy Release Connector



Female Face View

Buoy Release Connector Pin Out

Pin	Connection #	Description
1	SYSCON2-11	RELEASE_PWR
2	SYSCON2-12	RELEASE_GND
3		N/C

Thruder Module Electrical Connections

Overview

This section describes power and communications interfaces to the Wave Glider Thruder Module. The Thruder Module is the core component in compass based navigation, a control point for Glider and Towfish payloads, and a source of auxiliary propulsion when needed.

The Umbilical Connector interfaces through the Umbilical with the CCU.

The Payload Expansion Port is typically used to provide power and communications connectivity between Glider or Towfish payloads and the CCU.

The Compass Connector provides compass data from the Thruder internal compass.

Figure 3.11. Thruder Module Electrical Connections

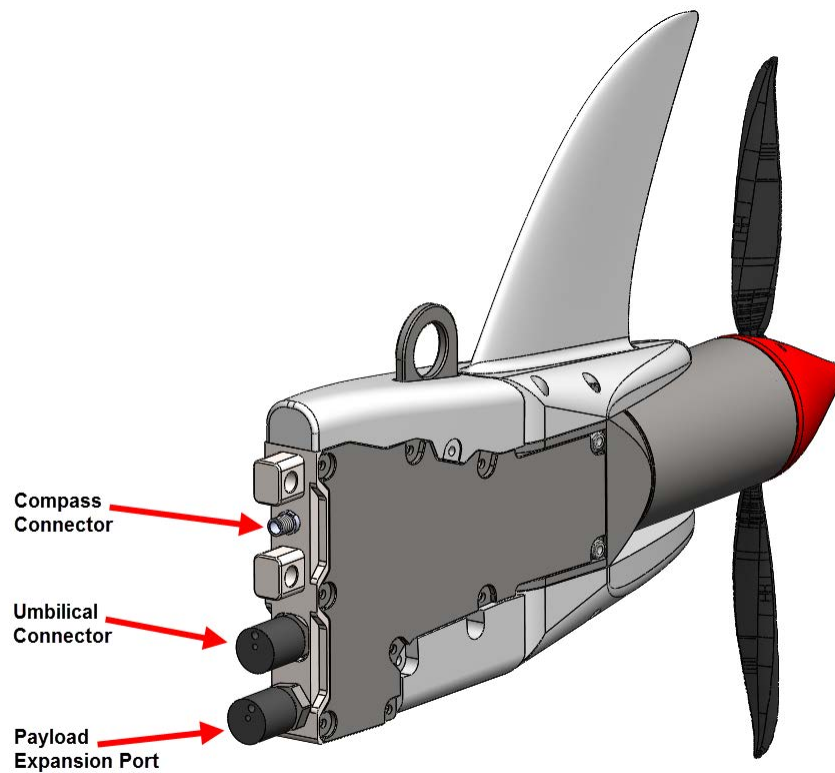


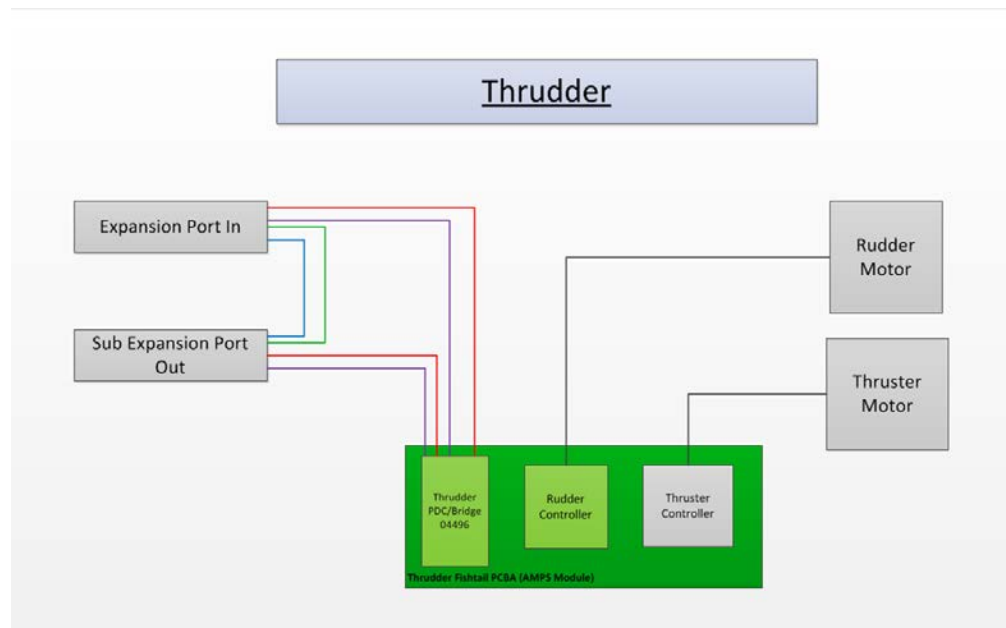
Figure 3.12. Thrudder Module Electrical Block Diagram

Table 3.8 provides information on each of the Thrudder Module Umbilical Connector and Expansion Port pins listed in the Pin Out tables for the Thrudder connectors.

Table 3.8. Thrudder Module Umbilical Connector and Expansion Port Signals

Signal Type	Description
GND and Shield	To prevent ground loops, the GND and Shield are grounded in one place. The shield is grounded on expansion ports with CAN signals originating from an AMPS bridge module.
VPROD	VPROD is the high current carrying bus that transports power from power producers, for example, a solar panel. VPROD can vary from 0 to 25 volts at 10 amps. NOTE: The Umbilical does not contain a wire for Pin 2, the VPROD, because there is no underwater power producer in the SV3 Wave Glider system
VCONS	VCONS is the high current carrying bus that transports power to power consumers, for example, sensors. VCONS can vary from 14 to 25 volts at 10 amps (provided there is energy stored in the batteries).
CANH and CANL	These are the Controller Area Network (CAN) bus connections: • CAN bus H (AMPS Bridge CANH_PRI) • CAN bus L (AMPS Bridge CANL_PRI) They are terminated on the host system VMC, the Power Domain Controller (PDC), and Bridges. The CAN bus is not available for sensor integration, it is only for use between the VMC and the various AMPS domains.

Signal Type	Description																																				
TX+, TX-, RX+, RX-	These are the Ethernet connections - they pass through the Thrudder Umbilical Connector to the Thrudder Payload Expansion Port connector. They terminate at an 8-port OEM Ethernet switch in the CCU (Sixnet ET-8MS-OEM): • 5 Ethernet switch ports are allocated to the U1, D1, G1, G2, and G3 Expansion Ports on the CCU. • 1 Ethernet switch port is allocated for the cellular network modem. • 1 Ethernet switch port is allocated to the VMC. • 1 Ethernet switch port is a spare.																																				
SPARE1 and SPARE2	The SPARE signals for the Thrudder Module Umbilical connector and Expansion port are programmable - they pass through the Thrudder Umbilical Connector to the Thrudder Payload Expansion Port connector. By turning the expansion port relay on, SPARE signals can be connected to any other expansion port that has it's relay turned on. Otherwise, SPARE1 is connected to GPS PPS and SPARE2 is connected to GPS DATA, similar to a sensor port (S1, S2, S3, S4). The signals are distributed at RS232 levels. SPARE1 and SPARE2 on the Debug Port connector (D1) connect to Vehicle Management Computer console in the CCU. <table><tr><th>G1-G3 Options</th><th>Spare1</th><th>Spare2</th></tr><tr><td>Option 1</td><td>GPS NMEA</td><td>PPS</td></tr><tr><td>Option 2</td><td>VMC_RX*</td><td>VMC_TX*</td></tr><tr><td>Option 3</td><td>Umbilical Spare1</td><td>Umbilical Spare2</td></tr><tr><td>Option 4</td><td>No Connect</td><td>No Connect</td></tr></table> <table><tr><th>Payload Exp Port Options</th><th>Spare1</th><th>Spare2</th></tr><tr><td>Option 1</td><td>GPS NMEA</td><td>PPS</td></tr><tr><td>Option 2</td><td>VMC_RX</td><td>VMC_TX</td></tr><tr><td>Option 3</td><td>G* Spare1</td><td>G* Spare2</td></tr><tr><td>Option 4</td><td>No Connect</td><td>No Connect</td></tr></table> <table><tr><th>Debug Port</th><th>Spare1</th><th>Spare2</th></tr><tr><td>Only Option</td><td>VMC_console_RX</td><td>VMC_console_TX</td></tr></table> * Not available at time of publication.	G1-G3 Options	Spare1	Spare2	Option 1	GPS NMEA	PPS	Option 2	VMC_RX*	VMC_TX*	Option 3	Umbilical Spare1	Umbilical Spare2	Option 4	No Connect	No Connect	Payload Exp Port Options	Spare1	Spare2	Option 1	GPS NMEA	PPS	Option 2	VMC_RX	VMC_TX	Option 3	G* Spare1	G* Spare2	Option 4	No Connect	No Connect	Debug Port	Spare1	Spare2	Only Option	VMC_console_RX	VMC_console_TX
G1-G3 Options	Spare1	Spare2																																			
Option 1	GPS NMEA	PPS																																			
Option 2	VMC_RX*	VMC_TX*																																			
Option 3	Umbilical Spare1	Umbilical Spare2																																			
Option 4	No Connect	No Connect																																			
Payload Exp Port Options	Spare1	Spare2																																			
Option 1	GPS NMEA	PPS																																			
Option 2	VMC_RX	VMC_TX																																			
Option 3	G* Spare1	G* Spare2																																			
Option 4	No Connect	No Connect																																			
Debug Port	Spare1	Spare2																																			
Only Option	VMC_console_RX	VMC_console_TX																																			

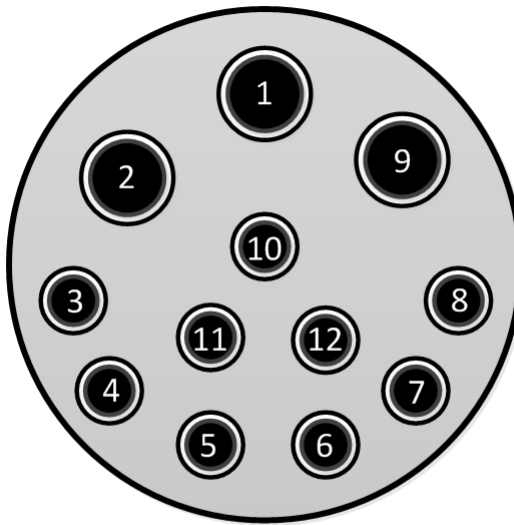
Thrudder Module Umbilical Connector

The Thrudder Module Umbilical connection provides power and communications to the Thrudder Module.



Note

The Umbilical does not contain a wire for Pin 2, the VPROD, because there is no power producer in the Glider.



Female Face View

Thrudder Module Umbilical Connector Pin Out

Pin	Signal	Description
2	This pin is not used and there is no conductor associated with it.	This pin is not used and there is no conductor associated with it.
9	VCONS	AMPS Bridge VCONS
1	GND	System ground plane
3	CANH	AMPS Bridge CANH_PRI
4	CANL	AMPS Bridge CANL_PRI
5	TX+	Ethernet Switch
6	TX-	Ethernet Switch
7	RX+	Ethernet Switch
8	RX-	Ethernet Switch
11	SPARE1	Programmable - See SPARE1 in Table 3.8 .
12	SPARE2	Programmable - See SPARE2 in Table 3.8 .
10	Shield	System ground plane



Note

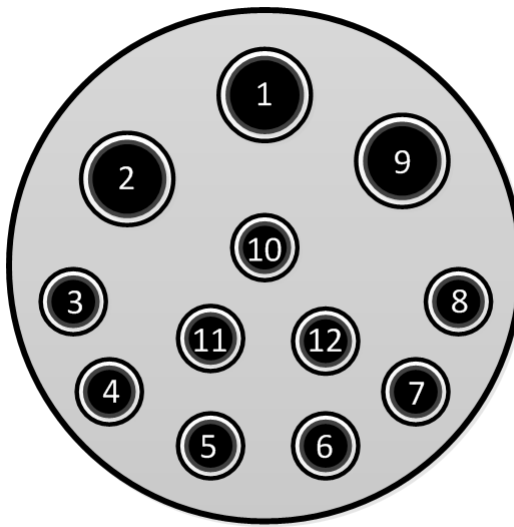
See [Table 3.8](#) for additional information on each of the pins listed in the Thrudder Module Umbilical Connector Pin Out table.

Umbilical Mating Connector to the Thrudder Module

The Thrudder Module Umbilical port is designed to mate to the 12 pin male wet mate-able Thrudder electrical connector at the end of the Umbilical Cable Whip.

Thrudder Module Expansion Port Connector

The Thrudder Module Expansion Port connector provides power and communications connections to the CCU for Glider and Towfish payloads. The Thrudder Module Expansion Port connector is limited. There are no dedicated GPS, PPS or data path connections. If GPS, PPS or data path connections are required, they must be provided using the auxiliary lines.



Female Face View

Thrudder Module Expansion Port Pin Out

Pin	Signal	Description
1	GND	System ground plane
2	This pin is not used and there is no conductor associated with it.	This pin is not used and there is no conductor associated with it.
3	CANH	AMPS Bridge CANH_PRI
4	CANL	AMPS Bridge CANL_PRI
5	TX+	Ethernet Switch
6	TX-	Ethernet Switch
7	RX+	Ethernet Switch
8	RX-	Ethernet Switch
9	VCONS	AMPS Bridge VCONS

Pin	Signal	Description
10	Shield	System ground plane
11	SPARE1	Interconnect Matrix
12	SPARE2	Interconnect Matrix



Note

See [Table 3.8](#) for additional information on each of the pins listed in the Thrudder Module Expansion Port Pin Out table.

Thrudder Module Expansion Port Mating Connector

The Thrudder Module Expansion Port is designed to mate to a 12 pin male wet mate-able connector.

Unused Connections

Unused connections must have dummy plugs installed on them. If a connection is left open, it is susceptible to corrosion and leakage. Dummy plugs should be installed when testing on a bench to protect the connectors from mechanical damage.

Batteries

The CCU contains a battery pack that supplies power to the core system and payloads as needed to supplement input from the solar panels. The CCU battery pack consists of ten 89 watthour Lithium Ion batteries capable of storing up to 890 watthours of energy. Optional Auxiliary Power Units (APUs) and stand-alone battery packs (for payload integration) are also available. An APU is a self-contained AMPS power domain. A stand-alone battery pack can be integrated into a payload power domain. Each APU or stand-alone battery pack also contains ten 89 watthour Lithium Ion batteries capable of storing up to 890 watthours of energy. AMPS allows energy sharing between the core electronics and the various payloads connected to the system.

Battery System Power

Each fully-charged Wave Glider CCU or APU Lithium-Ion battery pack has the following characteristics:

Battery Max Voltage	16.6 Volts
Maximum Continuous Current	20 Amps
Energy Capacity (fully charged) [theoretical maximum]	890 Watt-hours



Note


The Maximum Continuous Current available to any payload depends on its connection to the system and if the payload has an integral battery pack. See the specifications for

General Purpose Expansion Ports, Sensor Ports, and the High Voltage Port in “CCU Standard Electrical Connections” (page 42) for more information.

Battery Charge Level

The figure below shows how the battery voltage indicates the charge level. Note the characteristic rapid drop-off near full discharge.

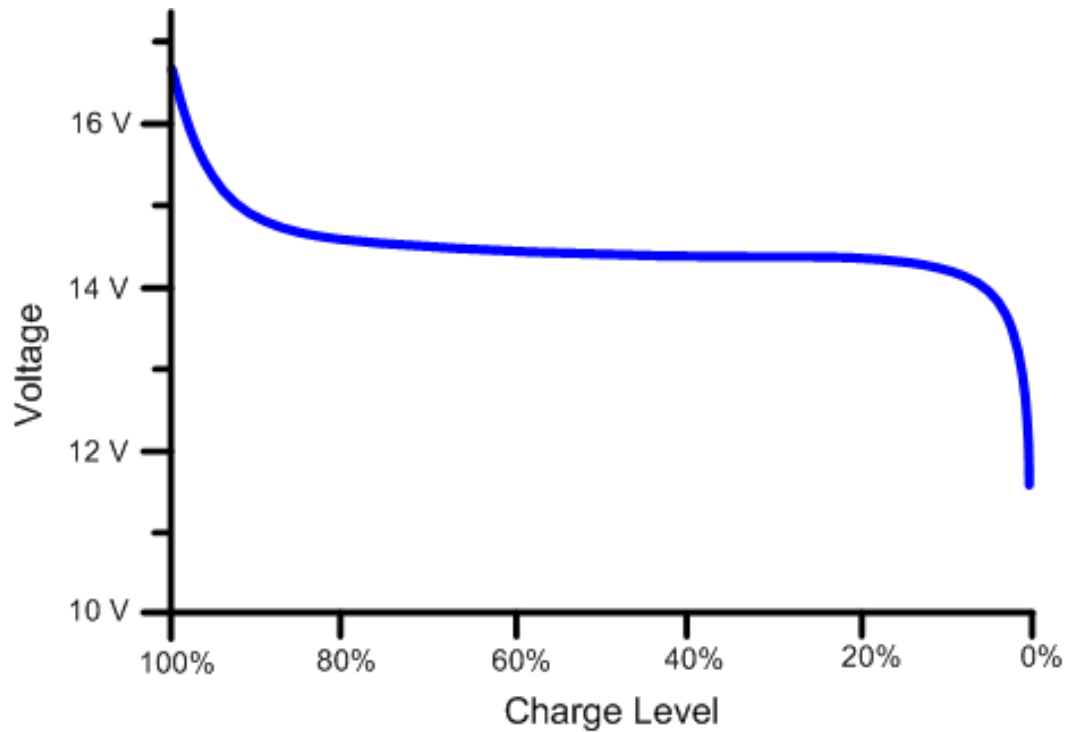
Figure 3.13. Battery Charge Level Relative to Voltage



Battery Discharge Characteristics

Assuming the batteries are fully charged, but there is no input from the solar panels, the discharge time will depend upon the Wave Glide current draw as follows:

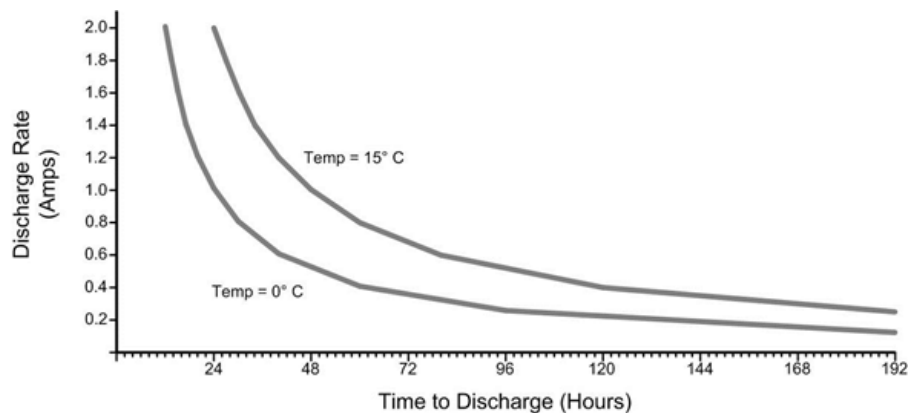Figure 3.14. Battery Discharge Time vs. Current Draw



Battery Power Input

The Float CCU is expecting a solar panel or similar type power source to provide energy to recharge the batteries. To minimize losses, the main path to charge the batteries is unregulated. For this reason, the power input to the batteries must fall within the ranges specified in “Solar Panel Specifications” (page 11). There is a built-in boost regulator to accommodate solar panel shade compensation, but the charging efficiency typically drops by 20-30% by using this stage. The shade compensation circuit is always active and the Float CCU is continuously checking to see if it is needed. An algorithm periodically checks to see whether unregulated or boosted voltage modes provide more power to the system and then leaves the most efficient mode in place until the next time it checks the voltage mode.

There is also an auxiliary charging input available through the CCU Debug Port (D1). For more information see “External Battery Charging” (page 70).


External Battery Charging

A multi-function cable and an external battery charger are included with each SV3 vehicle.

LRI Multi-Function Debug/Charging Cable

The LRI Multi-Function Debug/Charging Cable connects to the CCU Debug Port (D1) and is used for external battery charging and for debugging Wave Glider systems.

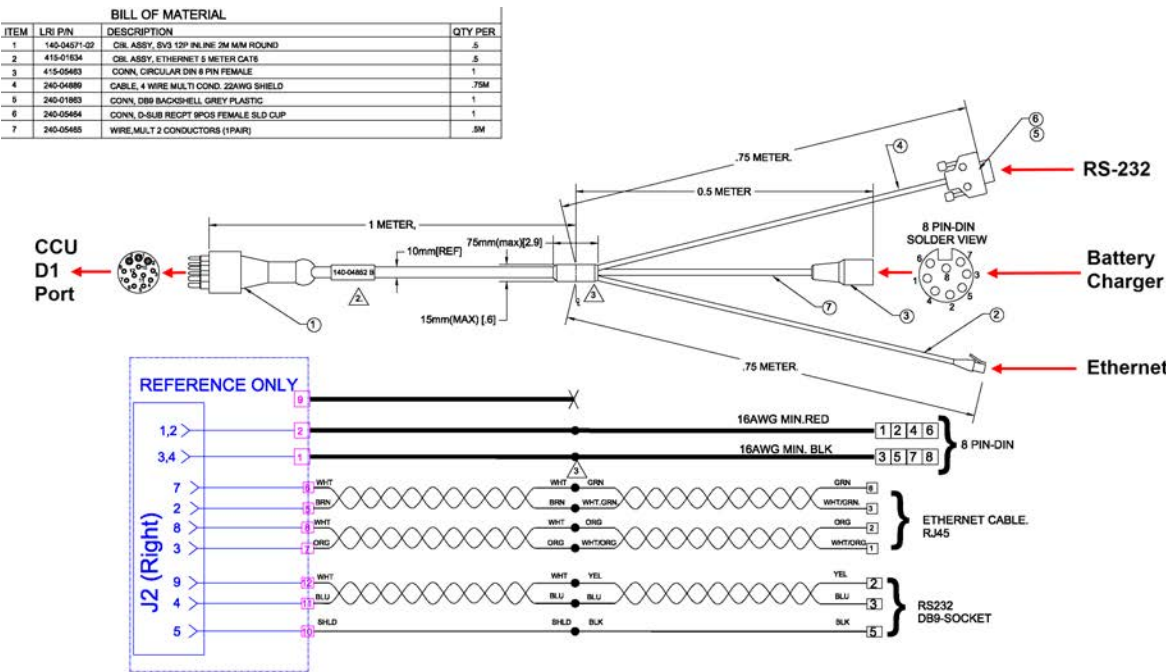Figure 3.15. LRI Multi-Function Debug/Charging Cable



LRI Battery Charger

Table 3.9 provides the basic specifications for the external battery charger included with each Wave Glider vehicle. To avoid damage to the Wave Glider system, consult with Liquid Robotics, before attempting to substitute a different battery charger.

Table 3.9. LRI Battery Charger Specifications

Part Number	Output Voltage	Output Current	Peak Current (1)	Total Regulation (2)	Typical Efficiency (3)
LRI P/N 04583	18.0V	5.6A	6.7A	±5%	89%
(1) Maximum peak load (120W) lasting 500ms with a maximum 10% duty cycle.					
(2) Includes initial setting, line regulation, load regulation, and thermal drift.					
(3) Typical at 115VAC (including output cable).					

Figure 3.16. LRI Battery Charger

Charging the Batteries

To charge the batteries on a Wave Glider with a single Multi-Function Debug/Charging Cable and a single Battery Charger:

1. Connect the round 12 pin male connector on the Multi-Function Debug/Charging Cable to the D1 port on the Wave Glider CCU.
2. Connect the round 8 pin male connector on the battery charger to the round 8 pin female connector on the Multi-Function Debug/Charging Cable.
3. Connect the Battery Charger power line to a 120 VAC electrical outlet.

It does not matter if the Wave Glider system is powered-on, or powered-off, when you connect the Battery Charger, but the Power Key on the Wave Glider CCU must be inserted (powered-on) for battery charging to occur.

To charge the batteries on a Wave Glider with up to 4 Multi-Function Debug/Charging Cables and 4 Battery Chargers:

1. Connect the round 12 pin male connector on each Multi-Function Debug/Charging Cable to the D1, G1, G2, and G3 ports on the Wave Glider CCU.
2. Connect the round 8 pin male connector on each battery charger to a round 8 pin female connector on each Multi-Function Debug/Charging Cable.
3. Connect the Battery Charger power lines to 120 VAC electrical outlets.

It does not matter if the Wave Glider system is powered-on, or powered-off, when you connect the Battery Chargers, but the Power Key on the Wave Glider CCU must be inserted (powered-on) for battery charging to occur.

Warning

A maximum of 4 LRI specified External Battery Chargers can be used simultaneously to charge the batteries on a single Wave Glider vehicle using LRI Multi-Function Debug/Charging Cables.

APU Electrical Connections

Auxiliary Power Units (APUs) provide optional energy storage capacity. Adding an APU to a Wave Glider configuration doubles the power storage capacity of the Wave Glider system. Each APU includes a battery pack that consists of ten 89 watthour Lithium Ion batteries capable of storing up to 890 watthours of energy. This is the same battery pack that is included in the CCU.

Figure 3.17. Auxiliary Power Unit (APU) Electrical Connections



The 12 pin connections (A1 and A2) on each APU are referred to as APU Expansion Ports. The A2 connector is a Host Expansion Port and the A1 connector located next to the Power Key is a Guest Expansion Port. The differences between Host and Guest Expansion Ports are explained in [“CCU Expansion Ports”](#) (page 42).

APUs must connect to CCU General Purpose Expansion Ports. Two APUs can be daisy-chained together with the first APU in the chain connected directly to a CCU General Purpose Expansion Port. Alternatively, single APUs can be connected to different CCU General Purpose Expansion Ports.

Each APU includes a 1 meter long connecting cable and a "dummy" plug. To connect a single APU to a CCU General Purpose Expansion Port, use the 1 meter cable to connect APU Expansion Port A1 (Guest Expansion Port) to a CCU General Purpose Expansion Port (Host Expansion Port), then connect a "dummy" plug to APU Expansion Port A2.

To daisy chain two APUs, use the 1 meter cable to connect APU Expansion Port A1 (Guest Expansion Port) to a CCU General Purpose Expansion Port (Host Expansion Port), then use another 1 meter cable to connect the A2 port of the first APU in the chain to the A1 port of the second APU in the chain. Connect a "dummy" plug to the A2 port of the second APU in the chain. It is important for APU connections to follow this pattern, otherwise they will not function.

Figure 3.18. APU Internal Battery Pack



Figure 3.19. APU Electrical Diagram

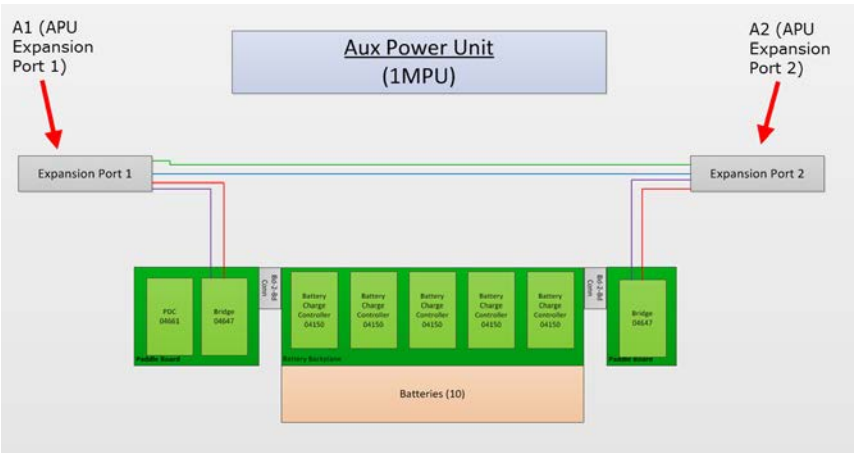



Table 3.10. APU Expansion Port Signals

Signal Type	Description
GND and Shield	To prevent ground loops, the GND and Shield are grounded in one place. The shield is grounded on expansion ports with CAN signals originating from an AMPS bridge module.
VPROD	VPROD is the high current carrying bus that transports power from power producers, for example, a solar panel. VPROD can vary from 0 to 25 volts at 10 amps.

Signal Type	Description															
	NOTE: The Umbilical does not contain a wire for Pin 2, the VPROD, because there is no underwater power producer in the SV3 Wave Glider system.															
VCONS	VCONS is the high current carrying bus that transports power to power consumers, for example, sensors. VCONS can vary from 14 to 25 volts at 10 amps (provided there is energy stored in the batteries).															
CANH and CANL	These are the Controller Area Network (CAN) bus connections: • CAN bus H (AMPS Bridge CANH_PRI) • CAN bus L (AMPS Bridge CANL_PRI) They are terminated on the host system VMC, the Power Domain Controller (PDC), and Bridges. The CAN bus is not available for sensor integration, it is only for use between the VMC and the various AMPS domains.															
TX+, TX-, RX+, RX-	These are the Ethernet connections. They terminate at an 8-port OEM Ethernet switch in the CCU (Sixnet ET-8MS-OEM): • 1 Ethernet switch port in the CCU is allocated to the A2 Expansion Port on the APU when the A1 Expansion Port on that APU is connected to a Host Expansion Port.															
SPARE1 and SPARE2	The SPARE signals for the APU A2 Expansion Port is connected by the interconnect matrix in the CCU when the APU A1 Expansion Port is connected to a Host Expansion Port. By turning the expansion port relay on, SPARE signals can be connected to any other expansion port that has its relay turned on. Otherwise, SPARE1 is connected to GPS PPS and SPARE2 is connected to GPS DATA, similar to a sensor port (S1, S2, S3, S4). The signals are distributed at RS232 levels. SPARE1 and SPARE2 on the Debug Port connector (D1) connect to Vehicle Management Computer console in the CCU. <table><tr><th>A2 APU Expansion Port</th><th>Spare1</th><th>Spare2</th></tr><tr><td>Option 1</td><td>GPS NMEA</td><td>PPS</td></tr><tr><td>Option 2</td><td>VMC_RX*</td><td>VMC_TX*</td></tr><tr><td>Option 3</td><td>Umbilical Spare1</td><td>Umbilical Spare2</td></tr><tr><td>Option 4</td><td>No Connect</td><td>No Connect</td></tr></table>	A2 APU Expansion Port	Spare1	Spare2	Option 1	GPS NMEA	PPS	Option 2	VMC_RX*	VMC_TX*	Option 3	Umbilical Spare1	Umbilical Spare2	Option 4	No Connect	No Connect
A2 APU Expansion Port	Spare1	Spare2														
Option 1	GPS NMEA	PPS														
Option 2	VMC_RX*	VMC_TX*														
Option 3	Umbilical Spare1	Umbilical Spare2														
Option 4	No Connect	No Connect														
	* Not available at time of publication.															

A1, A2 - APU Expansion Port Connectors

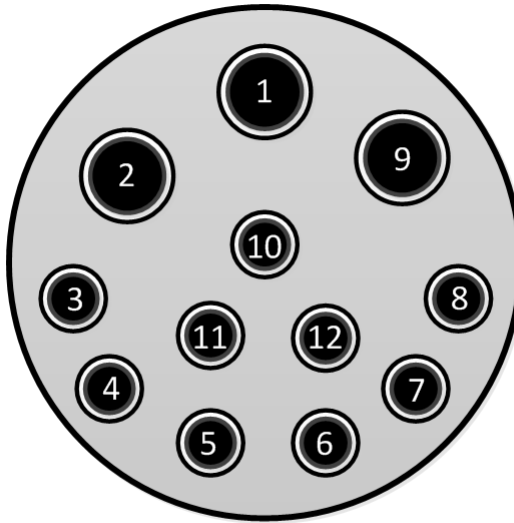The A1 and A2 APU Expansion Port connections support AMPS power management logic and also provide Ethernet switching capability for flexible payload-to-payload and payload-to-CCU communications management. A1 is a Guest expansion port and A2 is a Host expansion port.



Female Face View

APU Expansion Port Pin Out

Pin	Signal	Description
1	GND	System ground plane
2	VPROD	AMPS Bridge VPROD
3	CANH	AMPS Bridge CANH_PRI
4	CANL	AMPS Bridge CANL_PRI
5	TX+	Ethernet Switch
6	TX-	Ethernet Switch
7	RX+	Ethernet Switch
8	RX-	Ethernet Switch
9	VCONS	AMPS Bridge VCONS
10	Shield	System ground plane
11	SPARE1	Interconnect Matrix
12	SPARE2	Interconnect Matrix



Note

See [Table 3.10](#) for additional information on each of the pins listed in the General Purpose Expansion Port Pin Out table.


APU Expansion Port Mating Connectors

The APU Expansion Port connectors mate with the wet mate-able 12 pin connectors on the 1 meter cable assembly provided with each APU. To protect unused connector contacts, a "dummy" plug must be installed in the A2 connector on a stand-alone APU, or in the A2 connector on the last APU in a daisy-chain. A "dummy" plug is included with each APU.

Chapter 4. CCU Remote Communications and Control

Wave Glider vehicle command, telemetry and polling communications are managed by a computer contained in the Command & Control Unit (referred to as the "CCU"). The CCU handles communications between the Wave Glider and remote applications.

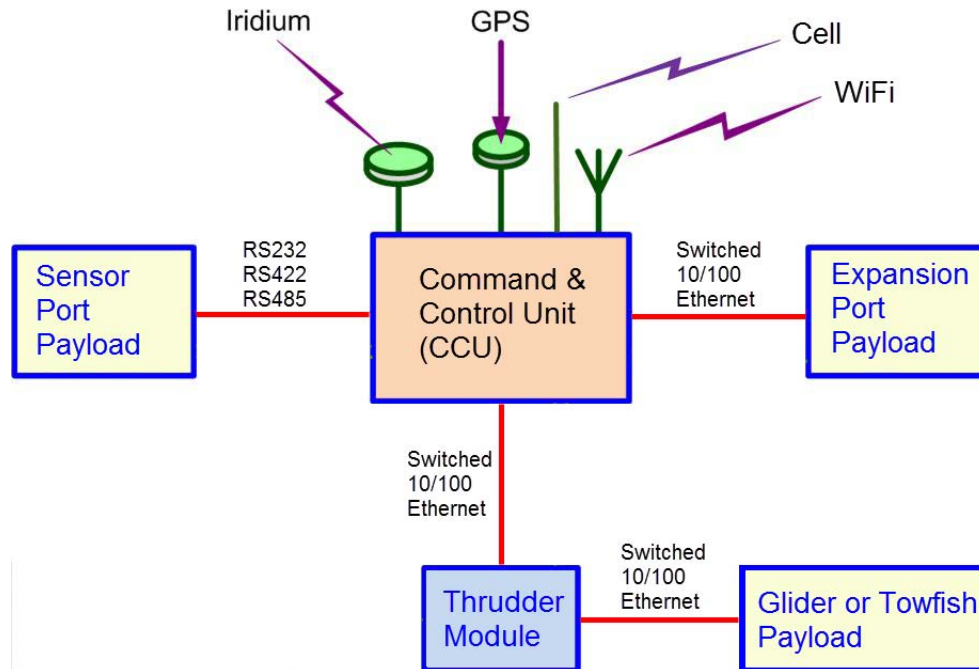Figure 4.1. Wave Glider Remote Communications



This chapter includes information on:

- CCU Communication Functions
- CCU Communication Methods
- CCU Communication Data Types

CCU Communications Functions

This section provides an overview of the following CCU communications functions:

- Telemetry and Polling
- Command Processing
- Command and Message Responses

Telemetry and Polling

All communications with the CCU are initiated by the CCU. The CCU initiates communications when it transmits telemetry and polling to remote applications.

The CCU automatically sends telemetry data over specified communications channels at regular, user-configurable, intervals. Telemetry data includes the position and general status of the vehicle, as well as any alarms. There are different telemetry data types, and each type can be sent out on a different schedule. For more information see [Chapter 7: Vehicle Telemetry](#).

The CCU also sends periodic polling messages to the payloads at regular, user-configurable intervals to check the status of the payload. Payloads must respond and can also indicate availability of data or commands for the CCU.

Command Processing

Commands issued from remote applications are queued. When the CCU initiates any communication with the remote application to the remote application (for example, telemetry, polling data, mailbox check, ACKs), the CCU downloads and executes queued commands.

There are more than 50 Wave Glider commands. Wave Glider commands typically fall into one of the following functional categories:

- Make some change to the vehicle (for example, move rudder, turn a light on).
- Set system parameters (for example, telemetry rates).
- Request vehicle systems status (for example, battery level).
- Communicate with a payload.
- Define a course (for example, set/delete course Waypoints).
- Follow a course (for example, hold position, follow a set of Waypoints).

For more information see [Chapter 5: Commands](#).

Command and Message Responses

When a command or payload message is received by the CCU, it will respond in one of two ways:

- Acknowledge (ACK) responses that let the requesting system know that the command or message was received and understood. The ACK response may also contain requested status information.
- Not-Acknowledge (NAK) responses that indicate the command or message was received but is in error, and could not be processed. The NAK response also indicates the general nature of the error.

If there is an additional command queued, it is downloaded to the vehicle, executed, and an ACK or NAK response is transmitted to remote applications. This process continues until there are no more commands in the queue.

If the communication channel is interrupted there may be multiple CCU data packets queued-up on the vehicle. When communication resumes, remote applications will see multiple incoming data packets. All communications are asynchronous, delayed, and in no consistent order. Any software designed for real-time processing of vehicle responses needs to consider this characteristic of communications with the CCU.

For more information see [Chapter 6: Vehicle Responses](#).

CCU Communications Channels


The standard CCU communications channels are:

- “Iridium Relay Link” (page 79)
- Cellular communications
- WiFi

Iridium Relay Link

The Iridium satellite network is an “always on” system with 100% global coverage. It is the primary communications link for the Wave Glider. The Wave Glider is typically linked to remote applications through an Internet connection to the Iridium satellite system. This is the standard means of controlling and monitoring the vehicle.

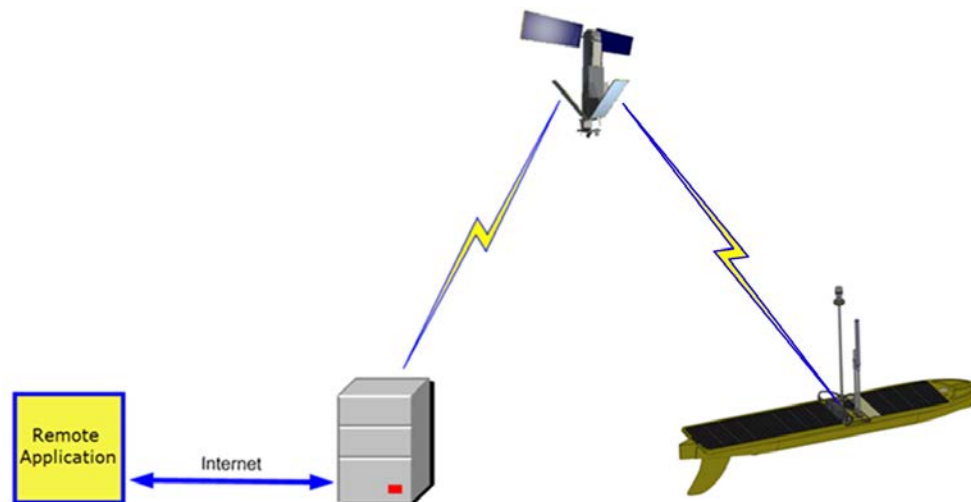Figure 4.2. Vehicle to Remote Applications Iridium Communications



A Wave Glider’s Iridium modem sends and receives data over the Iridium satellite network using Iridium Short Burst Data (SBD) packet sessions. Iridium satellites exchange data with Iridium network servers in the Iridium data center. Iridium network servers use TCP/IP to exchange data with remote applications using the Liquid Robotics Iridium Relay.

Communication sessions are initiated by the Wave Glider CCU. The CCU periodically sends telemetry data packets to remote applications over the Iridium link. The time span between telemetry messages is user-configurable. Command data packets from remote applications are sent to the Iridium network servers, where they are queued until the Wave Glider initiates a communication session. After telemetry data is sent from the vehicle CCU to remote applications, any commands sent from remote applications are downloaded to the vehicle CCU.

When a command data packet has been processed by the CCU, it responds to all connected remote applications with an ACK (acknowledge) data packet containing the requested data. If the command requests some action by the vehicle (for example, moving the rudder), that action is also executed.

If the command data packet sent to the Wave Glider CCU is in some way incorrect, the vehicle responds with a NAK (not-acknowledged) data packet that indicates the nature of the error.



Note

When a command is issued from a remote application over Iridium, there is a delay before the command is implemented on the Wave Glider. The duration of the delay depends on how frequently the Wave Glider CCU sends telemetry data, as well as the amount of telemetry data being transmitted. Iridium command data is queued until the Wave Glider CCU initiates a communication session. Iridium command data is not processed by the CCU until vehicle-initiated communications (telemetry intervals or ACK/NAK responses) are completed.

Short-Burst Data

The Iridium "Short-Burst-Data" (SBD) protocol is used for Iridium (Direct IP). SBD allows for economical transmission of relatively small data packets. Iridium refers to messages from the modem as "mobile-originated" (MO) and messages to the modem as "mobile-terminated" (MT).

The Iridium Short-Burst-Data format supports packets of limited size, depending on the modem used and the direction of the packet:

- Iridium 9601/2/3 modems can send messages (MO) of up to 340 bytes and receive messages (MT) of up to 270 bytes.
- Iridium 9522B and 9523 modems can send messages (MO) of up to 1960 bytes and receive message (MT) of up to 1890 bytes.

Iridium Message Buffering

Iridium service may occasionally be interrupted for up to several minutes. In this case, the CCU electronics will buffer any responses and telemetry, and then send out multiple responses and telemetry when service is resumed.

The message buffer is 16 responses deep. Once the 16-message limit is reached, any additional messages will be added to the buffer, and the oldest message discarded. Thus, for very long Iridium disruptions, some data may be lost.

CCU Communications Security

The Wave Glider communicates with WGMS securely using the Authentication and Encryption Protocol (AEP). The AEP protocol generates a shared FIPS 140-2 compliant symmetric cryptographic key. This session key provides confidentiality and integrity of communications between the Wave Glider and WGMS.

WGMS initiates the authentication process, requiring the Wave Glider to authenticate itself. The authentication process requires the exchange of the symmetric AES256 session key, then the Wave Glider and WGMS can exchange messages using a secure session.

CCU Communications Components

Figure 4.3 illustrates Iridium Relay, Cellular and WiFi communications configurations.


- Blue circles are user configurable Liquid Robotics-supplied components All of these components are co-located in a Liquid Robotics data center.

- Blue lines represent TCP/IP communications.

Specific deployments use a subset of the modules represented by the illustration, for example:

- Iridium Relay communications depend on an internet connection between the Iridium Relay and an Iridium network server. The connection between the Iridium network server and the CCU is over the Iridium satellite network.
- Cellular communications depend on an internet connection between the Virtual Relay and a cellular network server. The connection between the cellular network server and the CCU is over a cellular network.
- WiFi communications do not require an Internet connection. Data is transmitted directly between the CCU and a WiFi enabled device.

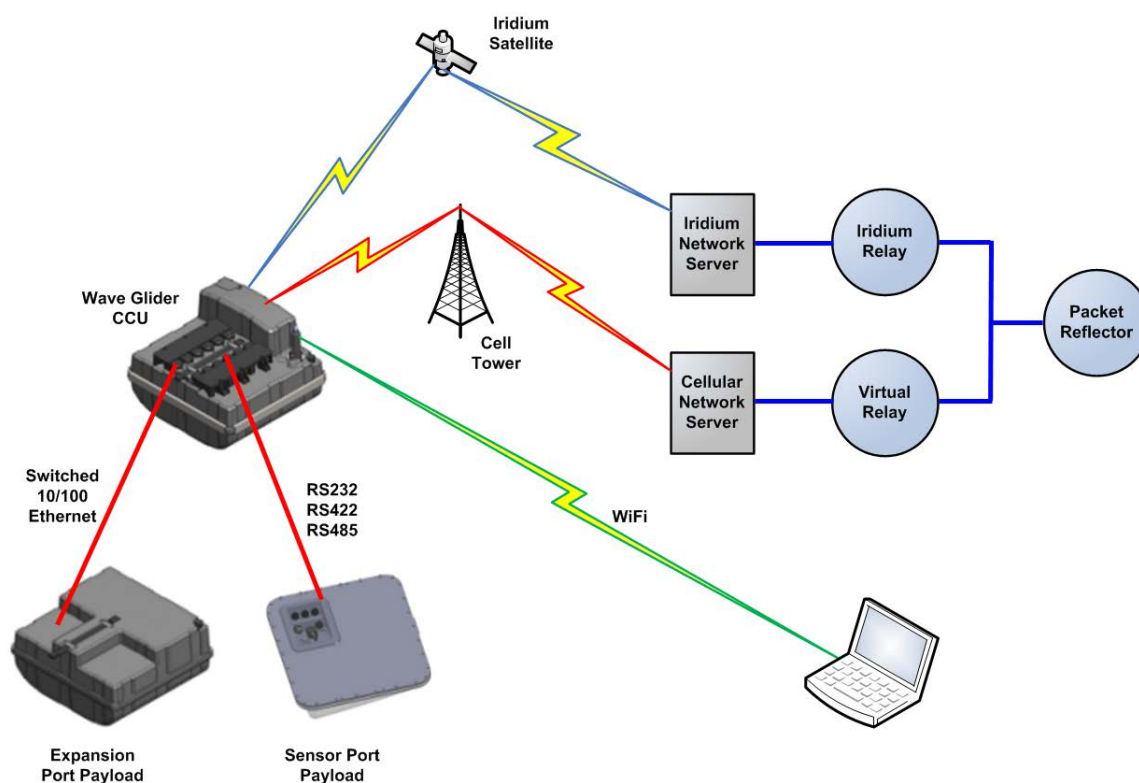Figure 4.3. CCU Communications Components



The following sections describe the basic communications components of the Wave Glider system.

Communication Relays

Relays mask the variations between the underlying communications technologies by converting the communication interface they control to remote application compatible TCP/IP packets, or by converting TCP/IP packets from remote applications to a format that is compatible with a specific communication interface. Specific duties may include fragmenting and reassembling packets, managing queues and driving the physical interface.

Communication relays can be one of two types:

- Iridium Relay
- Virtual Relay

Iridium Relay

For most deployed Wave Gliders, the primary mode of communication is through the use of Short Burst Data (SBD) packets sent over the Iridium satellite constellation. Actual satellite communications with the vehicle are accomplished through a group of servers maintained by Iridium Communications, Inc. remote applications depends on the Iridium Relay to communicate with the Iridium Servers over the Internet, using TCP/IP. If necessary, data transfer can be done using Email, but at a lower data rate.

It is sometimes beneficial to communicate with the vehicle through means other than the Iridium Relay. Considerations can include Internet availability, bandwidth, cost, latency, privacy, security and distance. For example, in a payload development scenario inside a building, the Wave Glider's Iridium satellite antenna might not be able to see the sky, necessitating the use of WiFi.

Virtual Relay

A Liquid Robotics Virtual Relay Server is required when you want to establish a direct radio communications link between one or more Wave Gliders and one or more instances of a remote application. Examples of Wave Glider radio communications methods that require the Virtual Relay Server include: Cellular, Iridium RUDICS, and BGAN. Typically a Virtual Relay Server and a Packet Reflector are installed on a PC along with a remote application instance. A Virtual Relay Client is installed (on a SMC) on each Wave Glider vehicle. The Virtual Relay Server consists of a Virtual Relay Service that runs in the background, and a Virtual Relay Application that you use to configure and manage the Virtual Relay Service. When the Virtual Relay Service is started, it will continue running any time your PC is running, until you deliberately stop the service using the Stop Service function in the Virtual Relay Application. Regardless of the radio communications method, the TCP/IP protocol is used for data transmissions between a remote application and a vehicle. The LRI Virtual Relay protocol rides on top of the TCP/IP protocol to support encryption and to ensure messages are received by their specified recipients. Communications between the Virtual Relay Server and a remote application are transmitted through a Packet Reflector in an LRI Data Packet format over TCP/IP.

Standard Modems

The CCU on the Wave Glider vehicle includes an Iridium SBD modem to enable direct communications with the Iridium satellite network and a cell modem for communications with cellular networks. Similarly, for remote applications to communicate with Wave Glider vehicles in the absence of an Internet connection, the CCU includes a WiFi modem for direct communications between a Wave Glider and a WiFi enabled device.

Iridium Network Servers and Satellites

Iridium network servers are maintained in Iridium Communications, Inc. data centers. Iridium network servers relay data across the Iridium satellite network to complete communications between Wave Glider vehicles and remote applications. The Iridium satellite constellation can be accessed from the Internet over a TCP/IP link to an Iridium network server, or directly using an Iridium SBD modem.

CCU Communication Data Types

There are three CCU communication data types:

- Telemetry
- Commands
- Responses

Telemetry

The vehicle automatically sends telemetry data packets at regular intervals. Telemetry Data indicates the position and the general status of the vehicle, as well as if there are any alarms. There are different telemetry data types, and each data type may be sent out on a different schedule. For more information on telemetry data types, see [Chapter 7: Vehicle Telemetry](#).

Commands

When a remote application receives an Iridium packet (usually telemetry), it can then send a command to the vehicle. Likewise, if a payload on the vehicle receives a message, it can send a command to the CCU. The CCU then processes the command, if possible.

Commands generally fall into the following categories:

- Make some change to the vehicle (for example, move rudder, turn a light on).
- Define a course (for example, set course Waypoints).
- Follow a course (for example, hold position, follow a set of Waypoints).
- Set system parameters (for example, telemetry rates).
- Request vehicle systems status (for example, battery level).
- Route a message to a payload or to Iridium.

Responses

When a command or payload message is sent to the vehicle, the CCU will respond in one of two ways:

- Acknowledge (ACK) responses that let the requesting system know that the command was received. Depending on the type of command/message, the ACK response may also contain requested status information.
- Not-Acknowledge (NAK) responses that indicate that the data was received but is in error, and could not be processed. The NAK response also indicates the general nature of the error.

Communication Packets

All communication to and from the Wave Glider CCU is done with information packets containing a fairly small number of bytes (approx. 200 to 500 bytes). Note that all Relay data packets contain other packets that contain the message data and an error check.

Figure 4.4. Level 3 Relay Data Packet Format


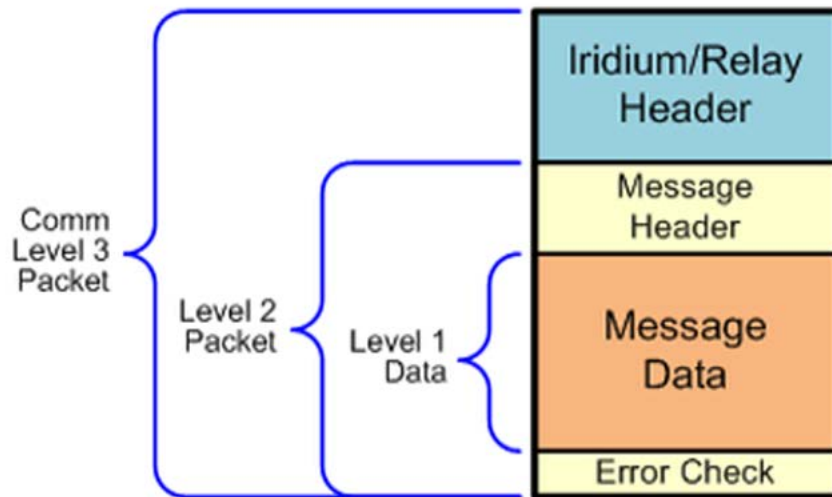



Figure 4.5. Level 3 Encrypted Relay Data Packet Format

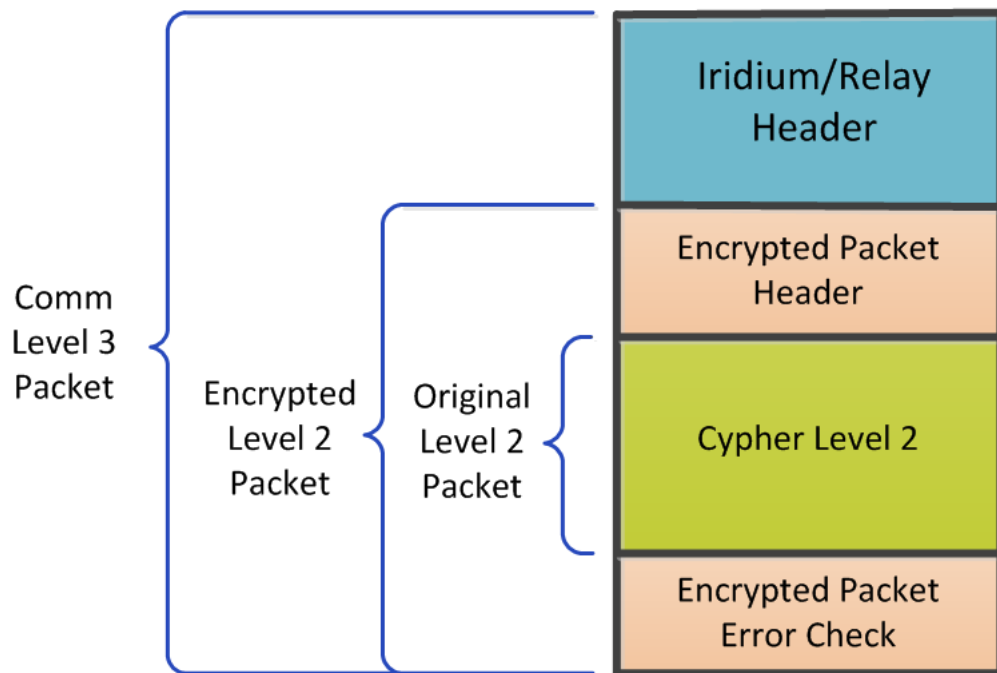

As shown in the figure, Relay data packets and encrypted Relay data packets both contain the same Level 2 data format.

Communication within or between payloads is done with payload data packets, but the message types and formats are different than what is used for Relay data packets.

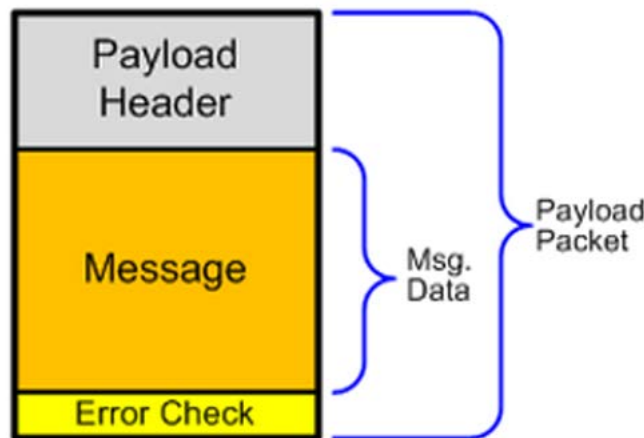Figure 4.6. Level 2 Payload Data Packet Format



The Message in a payload data packet supports many different types of data, including data that can be put into a relay data packet. For more information on payload message data types, see [Chapter 8: CCU Payload Communications](#).

All packet communications carry two CRC-16 bytes that can be checked by the receiving device. See [Appendix C: CRC-16 Calculation](#) for more information. All Iridium communications sent to remote applications have the error code checked on receipt. Payload message packets may or may not be checked, at the option of the message recipient.


Relay Data Packets

Relay data packets are described as “Level 3”, “Level 2” and “Level 1”.

The Level 3 packet is used for communications to and from the vehicle. The Iridium Direct IP service inserts a header to report the ID number of the vehicle's modem (IMEI) along with other meta data relevant to the communication session. Relays also insert a header with identification numbers (Vehicle Unique ID) and meta data. These formats are described in [Appendix B: Relay Header Data](#). In each case, Level 2 packet data can follow the Level 3 header.

The Level 2 packet contains its own header, message data, and an error check. The Level 1 packet can be raw data without any header. This hierarchy is shown in [Figure 4.7](#).

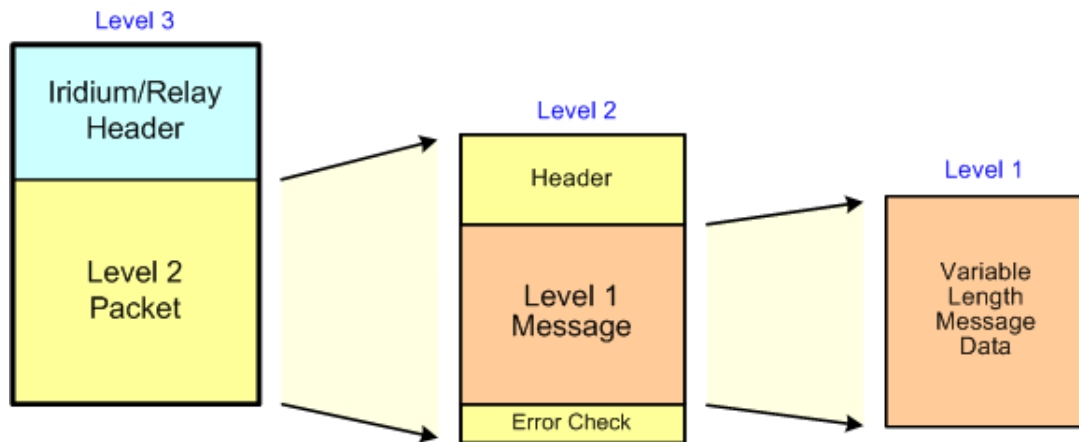Figure 4.7. Level 3, Level 2, and Level 1 Data Packets



Level 2 packets within Relay data packets can be: Telemetry, Commands, or Responses and Alarms. The length and structure of the different packets will vary depending on the data type, and the intended recipient. These packets are described in more detail in [Chapter 6: Vehicle Responses](#), [Chapter 7: Vehicle Telemetry](#), and [Chapter 8: CCU Payload Communications](#).

The details of the Relay data packet headers are managed by the CCU and by remote applications, so they need not be understood for payload development. For reference, Relay data packet header formats are described in [Appendix B: Relay Header Data](#).

Addresses

Addresses are values used to route messages between the CCU, payloads and other devices (for example, sensors). Addresses are composed of a two-byte value. The MSB is the “Board ID” value which is usually put in Non-Volatile Memory on the board. The LSB is the “Task ID” which is usually assigned by the firmware on each board. For more information, see [“Addresses” \(page 161\)](#).

Vehicle Unique ID

The vehicle Unique ID is a unique 4-byte identification number stored in Non-Volatile Memory in the vehicle’s CCU. This number is assigned and uploaded when the vehicle is first brought online. It is used to identify the vehicle when data packets are sent by means other than Iridium.

Transaction ID

A Transaction ID is a 4 byte number assigned to each communication session (Command, ACK, NAK, and some types of Telemetry), between a remote application and a Wave Glider vehicle. The Transaction ID along with the Unique Vehicle ID and other meta data associated with the communication session provide a unique identifier for that transaction between a remote application and a specific vehicle. For more information see [Chapter 6: Vehicle Responses](#), [Chapter 7: Vehicle Telemetry](#), and [Chapter 8: CCU Payload Communications](#).

Communication Data Formats

Several of the message packets contain multi-byte representations of certain values. The formats of these message packets are defined below.


Little-Endian Byte Format

All multi-byte data values are represented in "little-endian" format. That is, values are stored with the least-significant byte first, and the most-significant byte last.


As an example of a value in 2-byte little-endian format, 0xAABB will be stored as:



 The 4-byte value 0xAABBCCDD will be stored as:



 Some data values are encoded in bit fields within bytes. The numbering of the bits is right-to-left, as shown in the figure below.



Waypoint Values

Each navigation waypoint is defined by a waypoint number, a Latitude value and a Longitude value.

The waypoint number is a single-byte value from 1 to 254 (the value zero cannot be used), and two waypoints cannot use the same number. However, the numbers are not required to be sequential, although there are advantages to defining a course using sequential numbers.

Latitude and Longitude values are each stored as a 4-byte value (little-endian format). They are defined in units of 1/10,000 of an arc-minute, providing a resolution of about 0.2 meters. The sign (+ or –) indicates the direction as follows.

Latitude: (+) → North (–) → South [–54,000,000 to +54,000,000]

Longitude: (+) → East (–) → West [–108,000,000 to +108,000,000]

Heading Values

Heading values are in whole Degrees from 0 to 359. The value cannot be negative. Headings are stored as a 2-byte value in little-endian format.

Distance Values

Distances are indicated in meters, and are stored as 2-byte little-endian values.

Time Values

For any given command or response value, time values are specified in whole-number minutes, seconds or milliseconds.

- **Minutes:** Stored as a 2-byte value with a typical range of 1 to 1440 minutes. (1440 minutes = 24 hours).
- **Seconds:** Stored as a 1-byte value with a range of 1 to 255.
- **Milliseconds:** Stored as 1-byte value with a range of 1 to 255.

Heading Values

Heading values are in whole Degrees from 0 to 359. The value cannot be negative. Headings are stored as a 2-byte value in little-endian format.

Distance Values

Distances are indicated in meters, and are stored as a 2-byte value.

Temperature Values

Temperature values are stored as a 2-byte signed value in units of °C / 10, thus giving 1/10th degree resolution.

File Names

A file name specified in a command field must be an 8+3, 11-byte ASCII string padded with spaces.

Only the characters 0x20 thru 0x7E are allowed (standard keyboard characters). The separating dot between the name and extension is omitted.

For example, DATA.TXT is stored as:

0	1	2	3	4	5	6	7	8	9	10
D	A	T	A					T	X	T

foo.c is stored as:

0	1	2	3	4	5	6	7	8	9	10
f	o	o						c		

GPS

The GPS constellation location signals are essential to vehicle operation. Most commands for Wave Glider positioning are based on Latitude and Longitude values. Telemetry and other status responses from the vehicle contain the Lat/Long location based on GPS data.

Figure 4.8. GPS Satellite Constellation



GPS fixes are typically obtained every 1 seconds. However, there can be short periods (usually less than a minute) when no signal is received.

Navigation

Navigation of the vehicle is typically achieved by referencing Waypoints. Each Waypoint is defined by three values:

1. The Waypoint number - a user-assigned integer value from 1 to 254. No two Waypoints can have the same number.
2. A Latitude value - defined with a precision of arc-minutes / 10,000.
3. A Longitude value - defined with a precision of arc-minutes / 10,000.

The basic Navigation Modes of a vehicle are:

- Move to a Waypoint and maintain station there.
- Move from a start Waypoint through a sequence of Waypoints to an ending Waypoint.
- Continually move through a series of Waypoints, in a cyclic fashion.
- Maintain a constant heading.
- Hold a fixed rudder position.

For more information on waypoints and heading values, see [“Communication Data Formats” \(page 86\)](#).

Navigation Modes

Once a set of one or more waypoints have been defined, the vehicle is instructed to proceed in one of several navigation modes.

The navigation **Mode Names** and their associated **Values** are shown in the table below. The value is used in commands to specify the desired navigation mode. Vehicles return the navigation mode value in the telemetry as part of the command acknowledgement (ACK).

Table 4.1. Navigation Modes

Mode Name	Value
NAV_MODE_UNDEFINED	0x00
NAV_COURSE_LOOP	0x01
NAV_COURSE_HOLD	0x02
NAV_CUSTOM_LOOP	0x03
NAV_CUSTOM_HOLD	0x04
NAV_CUSTOM_HEADING	0x10
NAV_RUDDER_POSITION	0x20
NAV_TARGET_WAYPOINT	0x40
NAV_HOLD_POSITION	0x41
NAV_MODE_UNDEFINED_ALT_GPS	0x80
NAV_COURSE_LOOP_ALT_GPS	0x81
NAV_COURSE_HOLD_ALT_GPS	0x82
NAV_CUSTOM_LOOP_ALT_GPS	0x83
NAV_CUSTOM_HOLD_ALT_GPS	0x84
NAV_COURSE_LOOP_PID	0x0A
NAV_COURSE_HOLD_PID	0x0B
NAV_CUSTOM_LOOP_PID	0x0C
NAV_CUSTOM_HOLD_PID	0x0D
NAV_COURSE_LOOP_PID_ALT_GPS	0x8A
NAV_COURSE_HOLD_PID_ALT_GPS	0x8B
NAV_CUSTOM_LOOP_PID_ALT_GPS	0x8C
NAV_CUSTOM_HOLD_PID_ALT_GPS	0x8D
NAV_CUSTOM_HEADING_ALT_GPS	0x90
NAV_RUDDER_POSITION_ALT_GPS	0xA0
NAV_TARGET_WAYPOINT_ALT_GPS	0xC0
NAV_HOLD_POSITION_ALT_GPS	0xC1

Chapter 5. Commands


Commands are primarily used to specify some action by the vehicle, or to request information from the vehicle. Commands can be sent to the Wave Glider over the Iridium network, a cellular network, or directly using WiFi.

Command packets are received by the CCU and processed to remove any Level 3 transmission headers (Iridium or Relay). The CCU interprets the data in the binary command structure, and responds appropriately.

Command Data Packet Format

The Level 2 Command Packets have a leading header and a trailing CRC error check. In addition, the Command message itself always has a 3-byte header that defines the command type and structure.

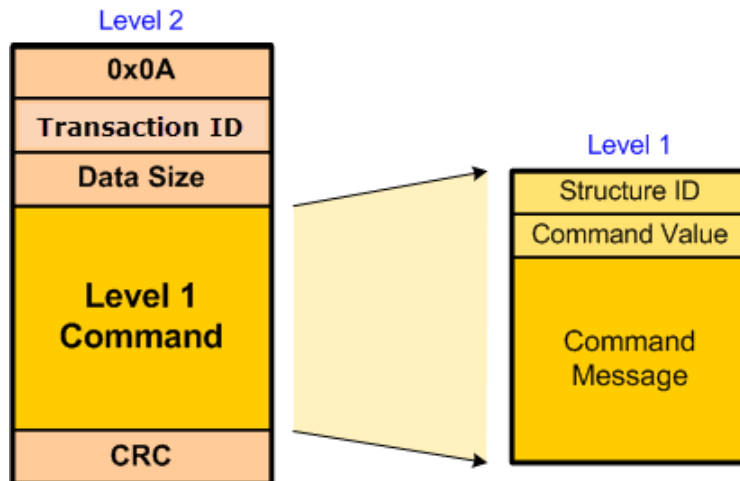Figure 5.1. Command Packet Format



Level 2 Command Packet	
0x0A	[1 byte] Indicates a Command Data Packet.
0xA7	[1 byte] Indicates an Encrypted Command Packet. Commands are encrypted by the relay and then sent to their destination over the communications channel. The header must be adjusted to reflect the changed size of the packet sent. Encrypted Command packets are transmitted between relays and vehicles in secure mode. A cipher level is implemented to transfer the LEVEL 2 data packet. Type is maintained to identify the direction of the packet (from/to vehicle) and counts are required to distinguish between the level 2 cipher data and the AES initialization vector data in the packet. If IV is not included (size = 0) then IV is assumed to be the previously used IV. Figure 4.5 illustrates the level 3 encrypted relay data packet format.
0x40	[1 byte] Indicates a Set Parameters Command Data Packet. This is an exception, all other commands are identified by 0xA. For more information see “Set Parameters (0x6000)” (page 240).

Level 2 Command Packet	
Transaction ID	[4 bytes] A Liquid Robotics-defined ID stored in a remote application database. For more information see “Transaction ID” (page 86) .
Size	[2 bytes] The size of the Command message that follows.
Command	[max 217 bytes] The Level 1 Command Packet. This packet always starts with a Structure ID and a Command Value.
CRC	[2 bytes] The CRC16 of all bytes in the data packet (except the two CRC bytes).

Level 1 Command Message	
Structure ID	[1 byte] Defines the expected size and format of the Command Data.
Command Value	[2 bytes] A number specific to the Command Data type. Tells the CCU computer the type of command.
Command Message	Variable-length field containing the actual command.

Command values and structure IDs are summarized in the table below. For command data descriptions, see [Appendix A: Command Descriptions](#).

Command Summary

There are two categories of commands for Wave Gliders:

- Commands that can be executed on SV2 or SV3 vehicles.
- Commands that can be executed on SV3 vehicles only.

Commands for SV2 and SV3 Vehicles

Listed below are the current user-accessible commands that can be executed on SV2 or SV3 vehicles. Detailed descriptions are given in the sections referenced in the **Link to Command Description Appendix** column.

Table 5.1. Command Summary

Command Name	Command Value	Structure ID	Link to Command Description Appendix
No Command	0x0000	0x10	See “No Command (0x0000)” (page 231)
Set Default Communication Channel	0x000A	0x10	See “Set Default Communication Channel (0x000A)” (page 231)
Read Unique ID	0x000E	0x10	See “Read Unique ID (0x000E)” (page 232)
Set Unique ID	0x000F	0x10	See “Set Unique ID (0x000F)” (page 232)
Hold Current Position	0x0001	0x10	See “Hold Current Position (0x0001)” (page 232)
Hold Station At Waypoint	0x0002	0x10	See “Hold Station at Waypoint (0x0002)” (page 233)

Command Name	Command Value	Structure ID	Link to Command Description Appendix
Follow Sequential Waypoint Course	0x0003	0x10	See “Follow Sequential Waypoint Course (0x0003)” (page 233)
Right Rudder	0x0004	0x10	See “Rudder Right/Left/Center (0x0004, 0x0005, 0x0006)” (page 234)
Left Rudder	0x0005	0x10	See “Rudder Right/Left/Center (0x0004, 0x0005, 0x0006)” (page 234)
Center Rudder	0x0006	0x10	See “Rudder Right/Left/Center (0x0004, 0x0005, 0x0006)” (page 234)
Follow Fixed Heading	0x0008	0x10	See “Follow Fixed Heading (0x0008)” (page 234)
Set Rudder Position	0x1006	0x10	See “Set Rudder Position (0x1006)” (page 234)
Twist Umbilical	0x1007	0x16	See “Twist Umbilical (0x1007)” (page 235)
Toggle Marker Light	0x2000	0x10	See “Toggle Marker Light (0x2000)” (page 235)
Visible Light Off/On	0x2001 0x2002	0x10	See “Visible Light Off/On (0x2001, 0x2002)” (page 235)
IR Light Off/On	0x2003 0x2004	0x10	See “IR Light Off/On (0x2003, 0x2004)” (page 236)
XBee Comm Off/On	0x2005 0x2006	0x10	See “XBee Comm Off/On (0x2005, 0x2006)” (page 236)
Retrieve Status	0x4001	0x10	See “Retrieve Status (0x4001)” (page 236)
Set Status	0x4002	0x11	See “Set Status (0x4002)” (page 237)
Retrieve Identification	0x4003	0x10	See “Retrieve Identification (0x4003)” (page 238)
Retrieve Power Status	0x5001	0x10	See “Retrieve Power Status (0x5001)” (page 238)
Retrieve Rudder Control	0x5002	0x10	See “Retrieve Rudder Control (0x5002)” (page 239)
Set Rudder Control	0x5003	0x16	See “Set Rudder Control (0x5003)” (page 239)
Set Parameters	0x6000	0x15	See “Set Parameters (0x6000)” (page 240)
Retrieve Debug Buffer	0x7000	0x16	See “Retrieve Debug Buffer (0x7000)” (page 247)
Retrieve Sub Heading Buffer	0x7001	0x16	See “Retrieve Sub Heading Buffer (0x7001)” (page 247)

Command Name	Command Value	Structure ID	Link to Command Description Appendix
Retrieve PID Integral Cache	0x7002	0x16	See “Retrieve PID Integral Cache (0x7002)” (page 247)
Retrieve PID Operating Parameters	0x7003	0x16	See “Retrieve PID Operating Params (0x7003)” (page 248)
New Waypoint	0x8000	0x10	See “New Waypoint (0x8000)” (page 248)
New Waypoint with Attributes	0x8001	0x10	“New Waypoint with Attributes (0x8001)” (page 249)
Read Waypoint	0x8003	0x10	See “Read Waypoint (0x8003)” (page 249)
Follow Course and Loop	0x8101	0x12	See “Follow Course and Loop (0x8101)” (page 250)
Follow Course With Options	0x8102	0x12	See “Follow Course With Options (0x8102)” (page 250)
Add MMSI to Watch List	0x8200	0x16	See “Add MMSI to Watch List (0x8200)” (page 251)
Initialize File Write	0x9000	0x18	See “Initialize File Write (0x9000)” (page 251)
Write File Block	0x9001	0x19	See “Write File Block (0x9001)” (page 253)
Delete File	0x9002	0x1A	See “Delete File (0x9002)” (page 254)
Read File Request	0x9003	0x1B	See “Read File Request (0x9003)” (page 254)
Get Detailed File List (This command is implemented by the vehicle, it is not issued by a remote application.)	0x9004	0x1C	See “Get Detailed File List (0x9004)” (page 255)
Select Program	0x9005	0x10	See “Select Program (0x9005)” (page 256)
Write Console Input to Vehicle (This command is implemented by the vehicle, it is not issued by a remote application.)	0x9006	0x1E	See “Write Console Input to Vehicle (0x9006)” (page 257)
Read File Transaction Closed	0x9007	0x10	See “Read File Transaction Closed (0x9007)” (page 258)
Get File List	0x9008	0x31	See “Get File List (0x9008)” (page 258)
Write Console Script	0x9100	0x25	See “Write Console Script (0x9100)” (page 259)
Write Console Binary	0x9101	0x25	See “Write Console Binary (0x9101)” (page 260)

Command Name	Command Value	Structure ID	Link to Command Description Appendix
Float Reboot	0xA000	0x31	See “Float Reboot (0xA000)” (page 260)
Reserved	0xA51E	0x100	See “Reserved (0xA51E)” (page 260)
Secure On	0xA500	0x100	See “Secure On (0xA500)” (page 261)
Secure Authenticate	0xA501	0x101	See “Secure Authenticate (0xA501)” (page 261)
Secure Register Client	0xA502	0x102	See “Secure Register Client (0xA502)” (page 261)
Secure Off	0xA504	0x16	See “Secure Off (0xA504)” (page 262)
Secure Enable Partition	0xA505	0x16	See “Secure Enable Partition (0xA505)” (page 262)
Retrieve Log File	0xB001	0x10	See “Retrieve Log File (0xB001)” (page 262)

Commands for SV3 Vehicles Only

For information see [“Commands for SV3 Vehicles Only” \(page 263\)](#).

Chapter 6. Vehicle Responses

Most response messages are ACK/NAK data packets sent in response to Commands. There can also be unsolicited messages sent by the vehicle see [“Restricted ACK Responses”](#) (page 113) for more information.

ACK/NAK Protocol

Commands sent to the CCU will be acknowledged with an ACK or NAK. The ACK/NAK response contains the command ID to allow the receiving system to track the command being acknowledged, even if a data transmission from the vehicle is lost.

Responses are as follows:


- ACK signals successful packet reception and acceptance of its content.
- NAK signals successful packet reception but rejection of its content.
- No response (timeout) signals non-reception of a packet.

Note that the “Float Reboot” command is not expected to ACK or NAK.

ACK/NAK Packet Format

The ACK/NAK response packet format is shown in [Figure 6.1](#). Note that, unlike command packets, the Level 1 ACK/NAK message packet has no standard header structure. The different ACK/NAK “Type” values indicate the format of the Level 1 packet.

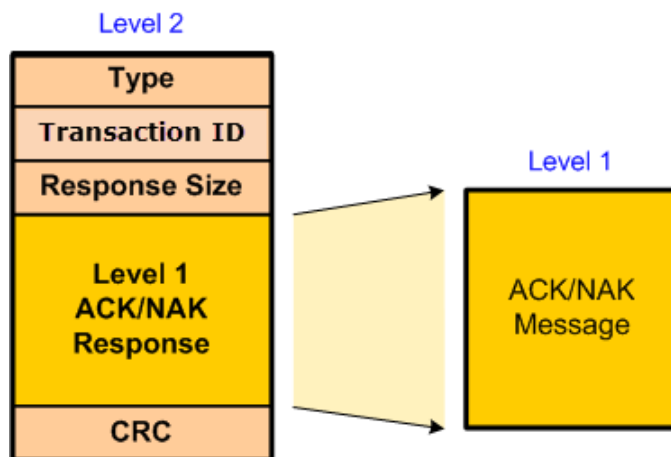Figure 6.1. ACK/NAK Response Packet Format



Where:

Type: [1 byte] ACK or NAK Data Type. For more information see [“ACK Data Type Numbers”](#) (page 97) and [“NAK Data Type Numbers”](#) (page 97).

Transaction ID: [4 bytes] The Transaction ID value for the communication session. For more information, see [“Transaction ID”](#) (page 86).

Size: [2 bytes] Size of the ACK or NAK Message that follows. Size = 0 → No Data.

ACK/NAK Response: [max 196 bytes] Level 1 ACK or NAK data/message return, if any.

CRC: [2 bytes] CRC16 of all previous bytes in the Level 2 ACK/NAK packet.

ACK Data Type Numbers

Allowed Data Types for the ACK return are:

Type	ACK Return Payload	Reference
0x10	Status With Waypoint Read-Back	See “ACK - Status with Waypoint Read-Back (0x10)” (page 98)
0x11	Status Return	See “ACK - Status Return (0x11)” (page 100)
0x12	Identification Data	See “ACK - Vehicle Identification Data (0x12)” (page 101)
0x13	No Payload	See “ACK - No Payload Response (0x13)” (page 103)
0x14	Power Controller Status	See “ACK - Power Controller Status (0x14)” (page 104)
0x15	Rudder Control Data	See “ACK - Rudder Control Data (0x15)” (page 105)
0x1B	Read File	See “ACK - Read File Block (0x1B)” (page 106)
0x1C	Detailed File List Data	See “ACK - Detailed File List Data (0x1C)” (page 107)
0x1E	Unique ID	See “ACK – Unique ID (0x1E)” (page 108)
0x1F	File at Destination	See “ACK – File at Destination (0x1F)” (page 108)
0x3D	Console Data	See “ACK – Console Data (0x3D)” (page 110)
0x31	File List Data	See “ACK – File List Data (0x31)” (page 109)
0x33	File List Item	See “ACK – File List Item (0x33)” (page 110)
0xA1	Reserved	
0xA5	Secure On	See “ACK – Secure On (0xA5)” (page 110)

NAK Data Type Numbers

Allowed data types for the NAK return are:

Type	NAK Type	Reference
0x20	(reserved)	
0x21	(reserved)	
0x22	Invalid Command	See “NAK - Invalid Command (0x22)” (page 111)
0x23	Invalid Data	See “NAK – Invalid Data (0x23)” (page 111)
0x24	File Error	See “NAK – File Error (0x24)” (page 111)
0x25	Security Failure	See “NAK – Security Failure (0x25)” (page 112)
0x26	Console Data	See “NAK – Console Data (0x26)” (page 112)
0x27	Nack with Description	See “NAK – With Description (0x27)” (page 113)

Unsolicited Response Type Numbers

Allowed data Types for an unsolicited response are:

Type	Message Type	Reference
0x60	New File Available	See “New File Available (0x60)” (page 114)
0x1D	Write Console Output to Client	See “Send Console Output to Client (0x1D)” (page 115)

Relay Messages

These are messages from a Relay to a remote application.

Type	Message Type	Reference
0x70	Relay Status	See “Relay Status (0x70)” (page 115)

ACK Response Data

The formats of data returned in the ACK packets are described below.

ACK - Status with Waypoint Read-Back (0X10)

This type of Status packet is sent in response to the commands:

New Waypoint - see “New Waypoint (0x8000)” (page 248)

Read Waypoint - see “Read Waypoint (0x8003)” (page 249)

The format is identical to the regular “Status Return” - see “[ACK - Status Return \(0x11\)](#)” ([page 100](#)), except for the last two fields (Waypoint Lat/Long).

Field Name	Bytes Used	Byte / Bit	Value [range] (units)	Default	Note
Follow Course	1	0 / 0	0 → not, 1 → Enabled	1	[1]
Manual Navigation		0 / 1	0 → not, 1 → Enabled	0	[1]
Follow Heading		0 / 2	0 → not, 1 → Enabled	0	[1]
Hold Station		0 / 3	0 → not, 1 → Enabled	0	[1]
(unused)		0 / 4	0		
XBee State		0 / 5	0 → Off, 1 → On		
Marker Light State		0 / 6	0 → Off, 1 → On		
IR Light State		0 / 7	0 → Off, 1 → On		
Telemetry Rate	2	1-2	[1 – 1440] (minutes)	2	
Low Battery Telemetry Rate	2	3-4	[1 – 1440] (minutes)	20	
Alarm Telemetry Rate	2	5-6	[1 – 30] (minutes)	2	
(reserved)	1	7	0		
Sub-to-Float Timeout	1	8	[20 – 200] (milliseconds)	20	
(reserved)	2	9-10	0		
Float Low Battery	1	11	[1 – 65] (10 Wh)	20	
Float Critical Battery	1	12	[1 – 65] (10 Wh)	3	
(reserved)	3	13-15	0		
Float Pressure Threshold High	1	16	[0 – 255] (kPa)	255	
Float Pressure Threshold Low	1	17	[0 – 255] (kPa)	115	
Float Temperature Threshold	1	18	[0 – 255] (°C)	70	
Waypoint Arrival Distance	2	19-20	[5 – 5000] (meters)	20	
(reserved)	1	21	0		
Power Controller Telemetry Rate	2	22-23	[5 – 2880] (minutes)	60	
(reserved)	2	24-25	0		
Float-to-Sub Comm Period	1	26	[1 – 240] (seconds)	15	
Waypoint Latitude	4	27-30	[See “ Waypoint Values ” (page 87)]		
Waypoint Longitude	4	31-34	[See “ Waypoint Values ” (page 87)]		

ACK - Status Return (0x11)

This type of Status packet is sent in response to the commands:

Set Status - see [“Set Status \(0x4002\)”](#) (page 237)

Retrieve Status - see [“Retrieve Status \(0x4001\)”](#) (page 236)

Hold Current Position- see [“Hold Current Position \(0x0001\)”](#) (page 232)

Note that this packet contains read-only fields that are not used in the **Set Status** command.

Field Name	Bytes Used	Byte/Bit	Value Range (units)	Default	Notes
Follow Course [1]	1	0 / 0	0 → not, 1 → Enabled	1	[1]
Manual Navigation [1]		0 / 1	0 → not, 1 → Enabled	0	[1]
Follow Heading [1]		0 / 2	0 → not, 1 → Enabled	0	[1]
Hold Station [1]		0 / 3	0 → not, 1 → Enabled	0	[1]
(unused)		0 / 4	0		
XBee State		0 / 5	0 → Off, 1 → On		
Marker Light State		0 / 6	0 → Off, 1 → On		
IR Light State		0 / 7	0 → Off, 1 → On		
Telemetry Rate	2	1	[1 – 1440] (minutes)	2	
Low Battery Telemetry Rate	2	3	[1 – 1440] (minutes)	20	
Alarm Telemetry Rate	2	5	[1 – 30] (minutes)	2	
(reserved)	1	7	0		
Sub Float Timeout	1	8	[20 – 200] (milliseconds)	20	
(reserved)	2	9	0		
Float Low_Battery Power Level	1	11	[1 – 65] (10 Wh)	20	
Float Critical_Battery Power Level	1	12	[1 – 65] (10 Wh)	3	
(reserved)	3	13	0		
Float Pressure_Threshold High	1	16	[0 – 255] (kPa)	255	
Float Pressure_Threshold Low	1	17	[0 – 255] (kPa)	115	
Float Temperature Threshold	1	18	[0 – 255] (°C)	70	
Waypoint Arrival Distance	2	19	[5 – 5000] (meters)	20	
(reserved)	1	21	0		

Field Name	Bytes Used	Byte/Bit	Value Range (units)	Default	Notes
Power Controller Telemetry Rate	2	22	[5 – 2880] (minutes)	60	
(reserved)	2	24	0		
Float-to-Sub Comm Period	1	26	[1 – 240] (seconds)	15	
(Hold Position Latitude)	4	27	0 [See “Waypoint Values” (page 87)]		[2]
(Hold Position Longitude)	4	31	0 [See “Waypoint Values” (page 87)]		[2]
NOTES:					
[1] Only one of these bits will be enabled at a time.					
[2] Latitude and Longitude values are valid only when ACKing the "Hold Current Position" command. For the “Set Status” and “Retrieve Status” commands, the response returns a value of zero.					

ACK - Vehicle Identification Data (0x12)

This response contains data on the vehicle software and hardware. It is sent in response to the command:

Retrieve Identification - see “Retrieve Identification (0x4003)” (page 238)

All Version numbers are stored as [Major] [Minor], using 2 bytes (1 byte each).

Identification Packet Field Name	Bytes Used	Byte #	Value [range] (units)
Hour	1	0	[0 – 23] (hours)
Minute	1	1	[0 – 59] (minutes)
Second	1	2	[0 – 59] (seconds)
Month	1	3	[1 – 12]
Day	1	4	[1 – 31]
Year	1	5	[0 – 99] (20xx)
Float_C&C Version	2	6-7	[major] [minor]
Float_C&C Build Number	2	8-9	[1 – 255]
Reported IMEI	15	10-24	[15 digits]
Sub Firmware Version	2	25-26	[major] [minor]
Sub Hardware Version	2	27-28	[major] [minor]
Sub Firmware CRC-32	4	29-32	

Identification Packet Field Name	Bytes Used	Byte #	Value [range] (units)
Sub EEPROM CRC-32	4	33-36	
Sensor Firmware Version	2	37-38	[major] [minor]
Sensor Hardware Version	2	39-40	[major] [minor]
Sensor Firmware CRC-32	4	41-44	
Sensor EEPROM CRC-32	4	45-48	
Bubble Firmware Version	2	49-50	[major] [minor]
Bubble Hardware Version	2	51-52	[major] [minor]
Bubble Firmware CRC-32	4	53-56	
Bubble EEPROM CRC-32	4	57-60	
Batteries Firmware Version	2	61-62	[major] [minor]
Batteries Hardware Version	2	63-64	[major] [minor]
Batteries Firmware CRC-32	4	65-68	
Batteries EEPROM CRC-32	4	69-72	
Untwist Firmware Version	2	73-74	[major] [minor]
Untwist Hardware Version	2	75-76	[major] [minor]
Untwist Firmware CRC-32	4	77-80	
Untwist EEPROM CRC-32	4	81-84	
COM Spec Version	2	85-86	[major] [minor]
COM Spec Revision	1	87	
Iridium Modem Revision	2	88-89	
XBee Channel	1	90	[12 to 23]
XBee PAN ID	2	91-92	
XBee Address	2	93-94	
(reserved)	4	95-101	

Identification Packet Field Name	Bytes Used	Byte #	Value [range] (units)
Count of Program Board Records	2	102-103	N
Record #1	17	104-120	[See "Program Board Records" below]
Record #2	17	121-137	[See "Program Board Records" below]
.....	...	...	
.....	...	...	
.....	...	...	
Record #N	17		[See "Program Board Records" below]

Program Board Records have the following structure:

Field Name	Bytes	Value [range]	Note
Storage Controller Address	2		[1]
Board Address	2		[2]
Selected Program Transaction ID	4		[3]
Default Program Transaction ID	4		[4]
Currently Reported Program Transaction ID	4		[5]
Has Files	1	0x00 or 0xFF	[6]

Notes:

[1] The "Storage Controller Address" is the location where the program originates.

[2] The "Board Address" is the board where the program executes.

[3] The "Selected Program" is the designated standard program to run.

[4] The "Default Program" is the fall-back program.

[5] The "Currently Reported Program" is the one that last ran.

[6] Boolean value indicates whether any files are stored on the board.

0x00 → No

0xFF → Yes (board is a Storage Controller)

ACK - No Payload Response (0x13)

This ACK contains no payload data (Size = 0) and is sent in response to vehicle action commands:

Follow Sequential Waypoint Course - see ["Follow Sequential Waypoint Course \(0x0003\)" \(page 233\)](#)

Follow Fixed Heading - see [“Follow Fixed Heading \(0x0008\)”](#) (page 234)

Follow Course and Loop - see [“Follow Course and Loop \(0x8101\)”](#) (page 250)

Follow Course With Options - see [“Follow Course With Options \(0x8102\)”](#) (page 250)

Rudder Left/Right/Center - see [“Rudder Right/Left/Center \(0x0004, 0x0005, 0x0006\)”](#) (page 234)

Light, IR, XBee Off/On - see [“Visible Light Off/On \(0x2001, 0x2002\)”](#) (page 235), [“IR Light Off/On \(0x2003, 0x2004\)”](#) (page 236), [“XBee Comm Off/On \(0x2005, 0x2006\)”](#) (page 236)

Initialize File Write - see [“Initialize File Write \(0x9000\)”](#) (page 251)

Write File Block - see [“Write File Block \(0x9001\)”](#) (page 253)

Delete File - see [“Delete File \(0x9002\)”](#) (page 254)

Select Program - see [“Select Program \(0x9005\)”](#) (page 256)

Write Console Input to Vehicle - see [“Write Console Input to Vehicle \(0x9006\)”](#) (page 257)

Read File Transaction Closed - see [“Read File Transaction Closed \(0x9007\)”](#) (page 258)

ACK - Power Controller Status (0x14)

Sent in response to the command: **Retrieve Power Status** - see [“Retrieve Power Status \(0x5001\)”](#) (page 238)

Field Name	Bytes Used	Byte #	Value [range] (units)
Hour	1	0	[0 – 23] (hours)
Minute	1	1	[0 – 59] (minutes)
Second	1	2	[0 – 59] (seconds)
Month	1	3	[1 – 12]
Day	1	4	[1 – 31]
Year	1	5	[20xx]
Payload_1 Current	1	6	(10 mA)
Payload_2 Current	1	7	(10 mA)
Umbilical Current	1	8	(10 mA)
Untwist Current	1	9	(10 mA)
Total Power Remaining	2	10-11	(10 mWh)
Battery Current	2	12-13	[signed] (10 mA)
System Current	2	14-15	(10 mA)
System Voltage	2	16-17	(1 mV)
Solar_Power_1 Indicator	1	18	[0 – 255] 0 → Off
Solar_Power_2 Indicator	1	19	[0 – 255] 0 → Off
Solar_Power_3 Indicator	1	20	[0 – 255] 0 → Off

Field Name	Bytes Used	Byte #	Value [range] (units)
Solar_Power_4 Indicator	1	21	[0 – 255] 0 → Off
Battery_0 Status	8	22-29	[see "Battery Status" below]
Battery_1 Status	8	30-37	[see "Battery Status" below]
Battery_2 Status	8	38-45	[see "Battery Status" below]
Battery_3 Status	8	46-53	[see "Battery Status" below]
Battery_4 Status	8	54-61	[see "Battery Status" below]
Battery_5 Status	8	62-69	[see "Battery Status" below]
Battery_6 Status	8	70-77	[see "Battery Status" below]

Battery Status	Bytes	Bit	Value [range] (units)
Battery Present	1	0	0 → No 1 → Yes
Battery Discharged		1	0 → No 1 → Yes
Battery Charged		2	0 → No 1 → Yes
Battery Discharging		3	0 → No 1 → Yes
Battery Terminate_Discharge		4	0 → No 1 → Yes
Battery Terminate_Charge		5	0 → No 1 → Yes
Battery Over_Temp		6	0 → No 1 → Yes
Battery Online		7	0 → No 1 → Yes
Battery Temp	1		[-10 to 100] (°C)
Battery Power_Remaining	2		(10 mWh)
Battery Current	2		(10 mA)
Battery Voltage	2		(1 mV)

ACK - Rudder Control Data (0x15)

Sent in response to the commands:

Set Rudder Control - see [“Set Rudder Control \(0x5003\)”](#) (page 239)

Retrieve Rudder Control - see [“Retrieve Rudder Control \(0x5002\)”](#) (page 239)

There are three sets of parameters:

- **Normal** values are the default.
- **Low** values are used when the battery energy is low.
- **Critical** values are used when the batteries are very close to depletion.

See “[Set Rudder Control \(0x5003\)](#)” (page 239) for a more detailed description of the Rudder Control parameters.

Field Name	Bytes Used	Byte #	Value (units)
Normal Gain	2	0-1	(integer)
Normal Timebase	1	2	15Hz/Value
Normal Deadband	1	3	(0.5°)
Normal Goal	1	4	(0.5°)
Normal RudderMax	1	5	(0.5°)
Normal MoveMin	1	6	(0.5°)
Normal TrimMax	1	7	(0.5°)
Low Gain	2	8-9	(integer)
Low Timebase	1	10	15Hz/Value
Low Deadband	1	11	(0.5°)
Low Goal	1	12	(0.5°)
Low RudderMax	1	13	(0.5°)
Low MoveMin	1	14	(0.5°)
Low TrimMax	1	15	(0.5°)
Critical Gain	2	16-17	(integer)
Critical Timebase	1	18	15Hz/Value
Critical Deadband	1	19	(0.5°)
Critical Goal	1	20	(0.5°)
Critical RudderMax	1	21	(0.5°)
Critical MoveMin	1	22	(0.5°)
Critical TrimMax	1	23	(0.5°)
(unused)	4	24-27	
CRC32	4	28-31	

ACK - Read File Block (0x1B)

Sent in response to the command:

Read File Request - see “[Read File Request \(0x9003\)](#)” (page 254)

If the file length exceeds the length of the data field, there may be multiple responses to a single “Read File Request” command.

Field Name	Bytes	Value
Storage Controller Address	2	Matches command request
Offset (Seek)	4	Value specified in request
EOF Flag	1	0x00 = More responses will be sent 0xFF = End of file, no more responses

Field Name	Bytes	Value
Number of Bytes in Data	2	N [≥ 1]
Data	1 to N	File data block

ACK - Detailed File List Data (0x1C)

Sent in response to the command:

Get Detailed File List - see [“Get Detailed File List \(0x9004\)”](#) (page 255)

Returns a list of file records. If the number of files to be reported exceeds the limit of this message, there will be multiple ACK responses.

Field Name	Bytes	Value	Note
Storage Controller Address	2	Matches command request	
Offset	2	Number of files previously reported	
Multiple-Report Flag	1	0x00 = Additional packets coming 0xFF = Last packet	
Number of Files in this Message	2	N [≥ 1]	[1]
Detailed File Record 1	68	[see detailed file record format below]	
Detailed File Record 2	68	[see detailed file record format below]	
.....	...		
.....	...		
Detailed File Record N	68		

Each of the Detailed File Records has the following format:

Field Name	Bytes	Field	Notes
File Name	11	8+3 ASCII string - see “File Names” (page 88))	
File ID	4	Generated by remote applications	
File Size	4	Bytes	
Creation Date	6	Date + Time	[2]
Modified Date	6	Date + Time	[2]
File Attributes	1	0x01 bit = 1 → read-only 0x80 bit = 1 → MD5 check was successful All other bits are user defined	

Field Name	Bytes	Field	Notes
Provided CRC-16	2		[3]
Provided MD5	16		[3]
Calculated CRC-16	2		[4]
Calculated MD5	16		[4]

Notes:

[1] The number of File Records that can be returned in this message depends on the maximum message size allowed in the Level 3 packet.

[2] Dates use 1 byte per value in the order shown below. Value ranges are shown in [].

Hour [0 to 23]
 Minute [0 to 59]
 Second [0 to 59]
 Month [1 to 12]
 Day [1 to 31]
 Year-2000 [0 to 99]

[3] The "Provided" CRC and MD5 are the values that were specified in the "Initialize File Write" command (see ["Initialize File Write \(0x9000\)" \(page 251\)](#)).

[4] The "Calculated" CRC and MD5 are the values calculated on a previous file access command. If they have not been calculated, the default value is 0.

ACK – Unique ID (0x1E)

Sent in response to the command:

Read Vehicle Unique ID - see ["Read Unique ID \(0x000E\)" \(page 232\)](#)

Returns the unique pre-set value from the vehicle's Non-Volatile Memory.

Field Name	Bytes	Value	Note
Transaction ID	4	see "Vehicle Unique ID" (page 86)	[1]

Note:

[1] If the ID value has not been set, Read Vehicle Unique ID returns: **0xFFFFFFFF**

ACK – File at Destination (0x1F)

This is an additional response to the commands:

Get File List - see ["Get File List \(0x9008\)" \(page 258\)](#)

Get Detailed File List - see ["Get Detailed File List \(0x9004\)" \(page 255\)](#)

Select Program - see “[Select Program \(0x9005\)](#)” (page 256)

where the file was checked and then forwarded to its final destination.

Field Name	Bytes	Value
Storage Controller Address	2	Matches command request
File Transaction ID	4	

ACK – File List Data (0x31)

This is the primary response to the command:

Get File List - see “[Get File List \(0x9008\)](#)” (page 258)

Returns a list of file records. If the number of files exceeds the limit of this message, there will be multiple ACK responses.

Field Name	Bytes	Value	Note
Storage Controller Address	2	Matches command request	
Offset	2	Number of files previously reported	
Multiple-Report Flag	1	0x00 = Additional packets coming 0xFF = Last packet	
Number of Files in this Message	2	N ≥ 1	[1]
File Record 1	20	[see file records format below]	
File Record 2	20	[see file records format below]	
.....	...		
.....	...		
File Record N	20		

Each of the File Records has the following format:

Field Name	Bytes	Value
File Name	11	8+3 ASCII string - see “ File Names ” (page 88)
File Transaction ID	4	see “ Vehicle Unique ID ” (page 86)
File Size	4	Bytes
File Attributes	1	0x01 bit = 1 → read-only 0x80 bit = 1 → MD5 check was successful All other bits are user defined

Note:

[1] The number of File Records that can be returned in this message depends on the maximum message size allowed in the Level 3 packet.

ACK – Simple (0x13)

Write Console output to client ACK using Level 2 type 0x13 - sent in response to a command.

No payload. 0x13, id (4 bytes), size (2 bytes) = 0, checksum.

ACK – Console Data (0x3D)

The **Write Console** commands can have ACKs that carry some text in the response.

Field Name	Bytes	Value
Format	1	0=ASCII format and 1=binary format
Disposition	1	3 = Succeeded TBD
Number of Bytes in Data	2	The size of the Data field in bytes
Data	1..N	ASCII data to be written into Console or ASCII/binary data results from a command invocation

ACK – File List Item (0x33)

Response to the **GetFileList** command that includes a list of the files that are in the vehicle directory.

ACK – Secure On (0xA5)

Field Name	Bytes	Size
Vehicle Perm. Public Key Size	2	
Vehicle Ephemeral Public Key Size	2	
Signature Size	2	
Vehicle Perm. Public Key (ECDSA in Vehicle Key Format)		
Vehicle (Ephemeral) Public Key (ECDH in Vehicle Key Format)		
Signature*		Relay will re-calculate this signature to authenticate the glider

* Digital Signature is the ECDSA signature of the SHA256 hash using WGMS Perm.Public Key of the following data:

- 1) Power Controller Id
- 2) Vehicle Perm. Public Key (Vehicle Key Format)
- 3) Vehicle Ephemeral Public Key (Vehicle Key Format)
- 4) Channel Name
- 5) WGMS Perm. Public Key (Vehicle Key Format)
- 6) WGMS Ephemeral Public Key (Vehicle Key Format)
- 7) SHA256 hash of the Shared Secret Key (32 byte Big Endian)

NAK Response Data

NAK - Invalid Command (0x22)

The command code number was not recognized.

This NAK contains no payload data (Size = 0).

NAK – Invalid Data (0x22)

The data in the command is not correct.

This NAK contains no payload data (Size = 0).

NAK – File Error (0x24)

Response given for a file error in the commands:

Initialize File Write - see [“Initialize File Write \(0x9000\)”](#) (page 251)

Write File Block - see [“Write File Block \(0x9001\)”](#) (page 253)

Delete File - see [“Delete File \(0x9002\)”](#) (page 254)

Read File Request - see [“Read File Request \(0x9003\)”](#) (page 254)

Get Detailed File List - see [“Get Detailed File List \(0x9004\)”](#) (page 255)

Select Program - see [“Select Program \(0x9005\)”](#) (page 256)

Get File List - see [“Get File List \(0x9008\)”](#) (page 258)

The NAK message returns one or more disposition codes indicating the type of error.

Field Name	Bytes	Value [range]	Notes
Count of Dispositions	2	N [≥ 1]	
Disposition 1	1	[3 to 17]	[1]
.....	...		

Field Name	Bytes	Value [range]	Notes
.....	...		
Disposition N	1	[3 to 17]	

Note:

[1] Disposition values are:

- 3** = Some items failed, others succeeded
- 5** = Bad data
- 7** = File exists but is marked for no-change
- 8** = File would be overwritten
- 9** = File is read-only
- 10** = Missing storage device
- 11** = Failed CRC-16 check. File was deleted if requested.
- 12** = Failed MD5 check. File was deleted if requested.
- 13** = Storage full
- 14** = Storage I/O error
- 15** = File control structures corrupted
- 16** = Program selection configuration on vehicle is corrupt
- 17** = The number of active file commands exceeds handling capability

NAK – Security Failure (0x25)

When encryption negotiations fail the vehicle will return this NAK.

NAK – Console Data (0x26)

The **Write Console** commands can have NAKs that contain the reason why the console command failed in the response.

Field Name	Bytes	Default Value
Count of Dispositions	2	1
Disposition	1	1 = Command Ok 2 = Response Truncated 10 = Unknown Command 11 = Device Busy 12 = Unsupported Command

		13 = Empty Command
		14 = Wrong Device
		15 = Command Failed
		16 = Device Not Responding
		20 = Command Not Supported
		30 = Invalid Command Length
		31 = Unknown Destination

NAK – With Description (0x27)

NAK that includes an explanation of why a command was not executed.

Field Name	Bytes	Default Value
Length in Bytes	2	n
Sequence Number	1	Sequence number for multi-nack description
N bytes of ASCII string	n	Description returned from the vehicle

Restricted ACK Responses

Certain ACK responses are only available to users with **Admin** and **Master** roles.

Special ACK Data Types

Allowed Data Types for the ACK return are:

Type	ACK Return Payload	Reference
0x16	Debug Buffer	See “ACK – Debug Buffer (0x16)” (page 113)
0x17	Sub Heading Buffer	See “ACK – Sub Heading Buffer (0x17)” (page 113)
0x18	PID Integral Cache	See “ACK – PID Integral Cache (0x18)” (page 114)
0x19	PID Operating Parameters	See “ACK – PID Operating Parameters (0x19)” (page 114)

ACK – Debug Buffer (0x16)

The Debug Buffer response is given in response to the Retrieve Debug Buffer command. This is only for debugging use by System Admins and developers.

ACK – Sub Heading Buffer (0x17)

This response is given in response to the Sub Heading Buffer command. This is only for development use by System Admins and developers.

ACK – PID Integral Cache (0x18)

This response is given in response to the PID Integral Cache command. This is only for development use by System Admins and developers.

ACK – PID Operating Parameters (0x19)

This response is given in response to the PID Operating Parameters command. This is only for development use by System Admins and developers.

Unsolicited Messages

These Messages can be sent by the vehicle without being prompted by a Command.

New File Available (0x60)

The content has following format:

Field Name	Bytes	Value	Note
Storage Controller Address	2		[1]
File Name	11	8+3 ASCII string - see “File Names” (page 88)	
File Size	4	Bytes	
Creation Date	6	Date + Time	[2]
Modified Date	6	Date + Time	[2]
File Attributes	1	0x01 bit = 1 → read-only 0x80 bit = 1 → MD5 check was successful All other bits are user-defined	
Provided CRC-16	2		
Provided MD5	16		
Calculated CRC-16	2		[3]
Calculated MD5	16		[3]

Notes:

[1] The "Storage Controller Address" is the 1-byte Board Address, and the 1-byte Task ID - see [“Addresses”](#) (page 86). The Float CCU has the reserved address value: **0x0000**

[2] Dates use 1 byte per value in the order shown below. Value ranges are shown in [].

Hour	[0 to 23]
Minute	[0 to 59]
Second	[0 to 59]
Month	[1 to 12]

Day [1 to 31]

Year-2000 [0 to 99]

[3] The "Calculated" CRC and MD5 are the values calculated on a previous file access command. If they have not been calculated, the default value is 0.

Send Console Output to Client (0x1D)

Sends a stream of ASCII data from the vehicle to remote applications.

Field Name	Bytes	Value [range]	Notes
Source Address	2	[1 to 256] + [1 to 256]	[1]
Function	1	Program-defined	[2]
Number of Bytes in Data	2	N [≥ 1]	
Data	1 to N	ASCII data being sent to the Console	

Notes:

[1] The "Source Address" is the address of the board sending the data. Float CCU = 0x0000.

[2] The "Function" is a value defined by the vehicle program. It can be used by the Client.

Relay-Only Message

Certain commands can only be issued by a relay to remote applications. These typically are instructions to remote applications that are sent when the vehicle connects to the relay.

Relay Status (0x70)

This is sent by a Relay to remote applications. It provides the characteristics and the operating status of the Relay.

Field Name	Bytes	Byte #	Bit #	Value (default)	Notes
Channel State	1	0	0	0 or 1	[1]
Message Not Sent Alarm			1	0 or 1	[2]
Communications Error Alarm			2	0 or 1	[3]
(reserved)			3	0	
(reserved)			4	0	
(reserved)			5	0	
(reserved)			6	0	
(reserved)			7	0	
Channel Revision Major	1	1			

Field Name	Bytes	Byte #	Bit #	Value (default)	Notes
Channel Revision Minor	1	2			
Channel Revision Sub-Minor	1	3			
Date	6	4 - 9			[4]

Notes:

[1] The "Channel State" values indicate the following: 0 → Channel not active 1 → Channel active

[2] The "Message Not Sent Alarm" indicates: Relay tried to forward message to the vehicle, but the file was not accepted.

[3] The "Communications Error Alarm" indicates: The Relay was getting errors while trying to communicate with the vehicle.

[4] Dates use 1 byte per value in the order shown below. Value ranges are shown in [].

Hour [0 to 23]

Minute [0 to 59]

Second [0 to 59]

Month [1 to 12]

Day [1 to 31]

Year-2000 [0 to 99]

Vehicle File System Responses

New File Available

This is a message from the vehicle to the remote application letting the operator know that there is a new file available.

Field Name	Bytes	Size
Storage Controller Address	2	Any (0=Float CCU)
File Name	11	ASCII string 8.3 padded file name
File Size	4	
Creation Date	6	Hour (1 byte 0..23) Minute (1 byte, 0..59) Second (1 byte, 0..59) Month (1 byte, , 1..12) Day (1, 1..31)

Field Name	Bytes	Size
		Years since 2000 (1 byte, 0..255)
Modified Date	6	Hour (1 byte 0..23) Minute (1 byte, 0..59) Second (1 byte, 0..59) Month (1 byte, , 1..12) Day (1, 1..31) Years since 2000 (1 byte, 0..255)
File Attributes	1	0
Provided CRC-16	2	Any
Provided MD-5	16	Any
Calculated CRC-16	2	Any
Calculated MD-5	16	Any

Read File Block ACK

This is how the vehicle transfers files to the remote application after a **Read File Request** command is successfully issued.

Field Name	Bytes	Default Value
Storage Controller Address	2	Any (0=Float CCU)
Offset (Seek)	4	Taken from request
EOF	1	0 = more responses will be sent 0xFF = end of file, no more responses to be sent
Number of Bytes in Data	2	The length of Data field (> 0)
Data	0..N	Data accompanying this message

File ACK

ACK response to the **Get File List** command.

Field Name	Bytes	Default Value
Storage Controller Address	2	Any (matching request)
Offset	2	Number of files previously reported
Last Report	1	0 = more packets to report

Field Name	Bytes	Default Value
		0xFF = no more packets to report
Number of Files Reported This Message	2	1
Records as shown below:		
File Name	11	ASCII string padded by spaces 0x20..0x7E
File Hyperion ID	4	Any
File Size	4	Any
File Attributes	1	0x1 bit = 1 if read-only 0x80 bit = 1 if has been successfully MD5 checked (this bit cannot be set, but can be read back) All other bits are user defined

File NAK

NAK of a **Write File Block**, **Get File List**, or **Program Select** command.

Field Name	Bytes	Default Value
Count of Dispositions	2	1
Disposition	1	3 = Succeeded (other items failed) 5 = Nacked Data (Invalid offset/length in file, unknown Hyperion ID, unknown storage controller or resource that cannot be written or deleted) 7 = File exists and marked for use 8 = File would be overwritten 9 = File is read-only 10 = Missing storage device 11 = Failed CRC-16 check; deleted file if requested 12 = Failed MD-5 check; deleted file if requested 13 = Storage full 14 = Storage I/O error

Field Name	Bytes	Default Value
		15 = File control structures corrupted
		16 = Program selection configuration is corrupt
		17 = Too many active file commands

File At Destination ACK

File At Destination uses Level 2 type 0x1F - this is an additional response to the **Get File List** or **Select Program** command when the file's location is being confirmed.

Field Name	Bytes	Value
Storage Controller Address	2	Any (0=Float CCU)
File Hyperion ID	4	File Hyperion ID

Vehicle Crypto Responses

The vehicle uses these responses to interact with remote applications to negotiate security.

Secure On ACK

Field Name	Bytes	Size
Vehicle Perm. Public Key Size	2	
Vehicle Ephemeral Public Key Size	2	
Signature Size	2	
Vehicle Perm. Public Key (ECDSA in Vehicle Key Format)		
Vehicle (Ephemeral) Public Key (ECDH in Vehicle Key Format)		
Signature*		Relay will re-calculate this signature to authenticate the glider

* Digital Signature is the ECDSA signature of the SHA256 hash using WGMS Perm.Public Key of the following data:

- 1) Power Controller Id
- 2) Vehicle Perm. Public Key (Vehicle Key Format)
- 3) Vehicle Ephemeral Public Key (Vehicle Key Format)
- 4) Channel Name

- 5) WGMS Perm. Public Key (Vehicle Key Format)
- 6) WGMS Ephemeral Public Key (Vehicle Key Format)
- 7) SHA256 hash of the Shared Secret Key (32 byte Big Endian)

Chapter 7. Vehicle Telemetry


Telemetry data packets are automatically sent by the CCU at the rates defined by the Set Status command. For more information see [“Set Status \(0x4002\)” \(page 237\)](#). Note that the “Standard” Telemetry rate can differ from the rate for the Retrieve Power Status command. For more information see [“Retrieve Power Status \(0x5001\)” \(page 238\)](#).

Telemetry can be sent to an off-vehicle location using the Iridium or XBee communications channel, or it can be sent to a payload. For more information, see [Chapter 8: CCU Payload Communications](#).

Telemetry Packet Format

The Level 2 Telemetry packet format is similar to the ACK/NAK packet, but with different data Type values. Also, the Level 1 data has no heading structure.

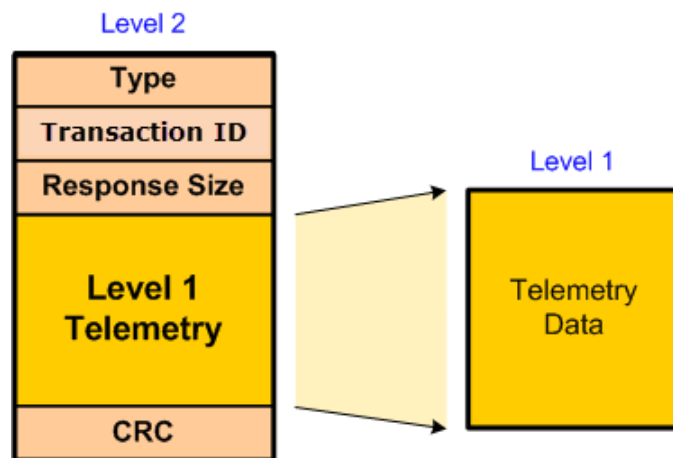Figure 7.1. Level 2 Telemetry Data Packet



Type: [1 byte] Telemetry Type (see [“Telemetry Types” \(page 121\)](#), below)

Transaction ID: [4 bytes] This field is not used and is set to **0x00000000**

Size: [2 bytes] The size of the data that follows.

Telemetry Data: [≤ 196 bytes] Telemetry Level 1 data payload.

CRC: [2 bytes] The CRC-16 of all bytes in the data packet (except the two CRC bytes).

Telemetry Types

Currently-defined Telemetry Types are:

Table 7.1. Telemetry Types

Type	Description	References
0xA6	Encrypted Output Packet	See “NAL Tracker Telemetry 0x03” (page 123)

Type	Description	References
0x03	NAL Tracker Telemetry	See “NAL Tracker Telemetry 0x03” (page 123)
0x05	Shout Tracker Telemetry	See “Shout Tracker Telemetry 0x05” (page 124)
0x06	Standard Telemetry	See “Standard Telemetry Data 0x06” (page 125)
0x07	Power Controller Status	See “Telemetry - Power Controller Status 0x7” (page 128)
0x08	DB3.5 Power Control Status	See “DB3.5 Power Control Status 0x08” (page 129)
0x09	Twist Status	See “Twist Status 0x09” (page 132)
0x10	Mobile WGMS Heartbeat	See “Mobile WGMS Heartbeat 0x10” (page 133)
0x11	Mobile WGMS Sync Packet	See “Mobile WGMS Sync Packet 0x11” (page 134)
0x32	Reserved	
0x44	Reserved	
0x70	Relay Status	See “Relay Status 0x70” (page 134)
0x71	System Information	See “System Information 0x71” (page 135)
0x80	Single Payload Packet	See “Single Payload Packet 0x80” (page 136)
0x81	Multi-Payload Packet	See “Multi-Payload Packet 0x81” (page 153)
0x91	Payload Packet	See “Payload Packet 0x91” (page 153)

Telemetry Buffering

As with ACK/NAK responses, Iridium service may occasionally be interrupted for up to several minutes. In this case, the CCU electronics will buffer any telemetry, and then send out buffered messages when service is resumed.

Since the message buffer is 16 responses deep, once the 16-message limit is reached, any additional messages will be added to the buffer, and the oldest message discarded. Thus, for very long Iridium disruptions, some data may be lost.

Encrypted Output Packet 0xA6

Encrypted output is decrypted and re-packaged by the relay into the clear text form (the header size is changed to reflect clear text size).

Encrypted Output packets are transmitted between relays and vehicles in secure mode. A cipher level is implemented to transfer the LEVEL 2 data packet. Type is maintained to identify the direction of the packet (from/to vehicle) and counts are required to distinguish between the level 2 cipher data and the AES initialization vector data in the packet. If IV is not included (size = 0) then IV is assumed to be the previously used IV.

Packet Format:

Type (1)	Size IV (1)	Size cipher (2)	IV	Level 2 Cipher Data	CRC (2)

NAL Tracker Telemetry 0x03

The NAL tracker is a commercially-available device used to log time and position data, which can then be sent out as Level 1 data. The Type 0x03 NAL tracker data format is:

NAL Tracker Telemetry Field Name	Bytes Used	Byte #	Value [range]	Note
Decade + Hour	1	0	Decade after 2000 24 Hour Time	[1]
Minute	1	1	Time Minutes [0 to 59]	
Second	1	2	Time Integral Seconds	[2]
Decimal Seconds	1	3	0.## [0 to 100]	
Year + Month	1	4	Month Year after decade	[3]
Day	1	5	[0 to 31]	
Latitude	1	6	Signed Integer Degrees [-90 to 90]	
Latitude	1	7	Integer Minutes [0 to 59]	
Longitude	1	8	Signed Integer Degrees [-180 to 180]	
Longitude	1	9	Integer Minutes [0 to 59]	
Latitude	1	10	Fraction Minutes 0.## [0 to 100]	
Latitude	1	11	Fraction Minutes 0.00## [0 to 100]	
Longitude	1	12	Fraction Minutes 0.#	[4]
Longitude	1	13	Fraction Minutes 0.0## [0 to 100]	
Longitude	1	14	Fraction Minutes 0.00## [0 to 100]	
(not used)	14	15-28		
Configuration Byte	1	29		

Notes:

[1] The Decade (after 2000) and the Hour are encoded into a single Byte as follows:

Decade = Byte modulo

10 Hour = Byte / 10

[2] Integral Time Seconds area encoded into a single Byte as follows:

Seconds = Byte modulo 0x40

[3] The Year and Month are encoded into a single Byte as follows:

Year = Byte modulo 10

Month = Byte / 10

[4] The decimal fraction of longitude is encoded as follows:

0.# = Byte modulo 10

Shout Tracker Telemetry 0x05

Byte 0 = 0x05 (format type)

Byte 1 is a bit map of the input pins (read as 0)

Bytes 2--9 is a 64 bit unsigned integer -- convert it to the decimal value and then use DIV and MOD type functions to pull out the appropriate digits based on the dLLLMMFFFIlmmfffHHHH format where:

d = latitude direction (0 North, 1 South)
l = latitude degrees
m = latitude minutes
f = latitude fraction minutes
L = longitude degrees with direction (<200 East, >200 West)
M = longitude minutes
F = longitude fraction minutes
H = horizontal dilution of precision which is set to always have 4 digits with the last 2 being decimal values

Bytes 10--17 is a 64 bit unsigned integer -- treat it as a decimal value and then use DIV and MOD type functions to pull out the appropriate digits based on the sMMDDYYYYHHmmSSTVVVV format where:

s = vertical velocity sign (1 positive, 0 negative) (Not Recorded)
MM = month of year
DD = day of month
YYYY = year
HH = hour
mm = minute of hour
SS = seconds
T = tenths of seconds (hundredths of second is always a 0 because of time alignment)
VVVV = Last 4 digits in vertical velocity

Bytes 18--25 is a 64 bit unsigned integer -- treat it as a decimal value and then use DIV and MOD type functions to pull out the appropriate digits based on the sCCCCCaAAAAAgGGGGGOO format where:

s = altitude sign (1 positive, 0 negative) – Not Recorded
CCCCC = course in degrees with always 2 digits behind the decimal
a = altitude decimal place – Not Recorded
AAAAA = altitude value – Not Recorded
g = ground velocity decimal place
GGGGG = ground velocity value
OO = 6 output pins. This number can range from 00 to 63 and each bit represents one pin value. (Not Recorded)

Byte 26--27 is a 16 bit unsigned integer -- treat it as a decimal value and then use DIV and MOD type functions to pull out the appropriate digits based on the DVVVV format where:

D = The first digit is the decimal place in the vertical velocity.
VVVV = The next 4 digits are the VDOP value which is set to always have 4 digits with the last 2 being decimal values. (Not Recorded)

Byte 28 is an unsigned 8 bit value -- treat it as a decimal value and then use DIV and MOD type functions to pull out the appropriate digits based on the SSV format where:

SS = The first 2 digits are the number of GPS satellites used. (Not Recorded)
V = The last digit is the first digit in the vertical velocity. (Not Recorded)

Byte 29 is the GPS Quality Indicators and is decoded according to the following table:

Bit	Value
0	2D-Fix (Not Recorded)
1	Dead Reckoning (Not Recorded)
2	Valid Position Fix (Not Recorded)
3	ID Included or extra data follows (Not Recorded)
4	Emergency Alert (Not Recorded)
5	Motion sensor triggered report, 1 if triggered by motion sensor. (Not Recorded)
6	Unused
7	Unused

Standard Telemetry Data 0x06

This is the standard telemetry package sent at the defined intervals. The Type 0x06 Telemetry format is:

Field Name	Byte Index	Size	Bit Index
Sub Leak Alarm	0	1	0
Float Leak Alarm	0	1	1
Sub to Float Comms Alarm	0	1	2
Payload Error Condition Alarm	0	1	3
Float Battery Low Alarm	0	1	4
Umbilical Fault Alarm	0	1	5
Sub Pressure Threshold Alarm	0	1	6
GPS Not Functioning	0	1	7
Internal vehicle Comm Error	1	1	0
Sub Reboot Alarm	1	1	1
Float to Sub Comms Error	1	1	2
Over Current Error	1	1	3
Float Temperature Threshold Exceeded	1	1	4
Float Pressure Threshold Exceeded	1	1	5

Field Name	Byte Index	Size	Bit Index
Sub Temperature Threshold Exceeded	1	1	6
Float Reboot Alarm	1	1	7
Temp_Surface	2	2	
Latitude	4	4	
Longitude	8	4	
Last_Fix_Time_Hours	12	1	
Last_Fix_Time_Minutes	13	1	
Last_Fix_Time_Seconds	14	1	
Last_Fix_Date_Month	15	1	
Last_Fix_Date_Day	16	1	
Last_Fix_Date_Year	17	1	
File Read Transaction Timeout Error	18	1	0
File Write Fallback Image Activated	18	1	1
File Write Program Image Burned	18	1	2
File Write Fallback Image Bad or Not Found	18	1	3
File Write Selected Image Bad or Not Found	18	1	4
File Write Tentative Image Retry	18	1	5
Boot Config Corrupt	18	1	6
IPIB Not Responding	18	1	7
Temperature_Sub	19	2	
Distance_Over_Ground (m)	21	2	
Rudder Count	23	4	
Heading_Sub (degrees)	27	2	
Iridium_Signal_Strength	29	1	
Target_WayPoint	30	1	
Desired_Bearing (Degrees)	31	2	
Heading_Float (Degrees)	33	2	
Pressure_Sensor_Float	35	1	
Pressure_Sensor_Sub	36	1	
Navigation_Mode	37	1	See Nav Modes
Light_State	38	1	0
IR_State	38	1	1
Xbee_State	38	1	2
Payload 1 Power	38	1	3
Payload 2 Power	38	1	4
Sub Payload Power	38	1	5
Bubble Com Error	38	1	6

Field Name	Byte Index	Size	Bit Index
Battery Com Error	38	1	7
Reset_Flags	39	1	
Total_Power (10mWh)	40	2	
Iridium_Read_Errors	42	1	
Iridium_Write_Errors	43	1	
Iridium_Session_Errors	44	1	
Water Speed	45	2	
Water Direction	47	2	
Water Speed Std Dev	49	1	
Water Direction Std Dev	50	1	
Humidity	51	1	
Payload 3 Status	52	1	0
Payload 4 Status	52	1	1
PEP Status	52	1	2
IPIB Status	52	1	3
Modem Power	52	1	4
Increased Mailbox Checks	52	1	5
Reserved	52	1	6
Reserved	52	1	7

Alarm Bytes

For the Alarm bytes 0 & 1, the bit values indicate the following:

0 → OK

1 → Alarm Active

Alarm Type	Byte	Bit
Sub Leak Alarm	0	0
Float Leak Alarm		1
Sub-to-Float Comm Alarm		2
Payload Error Condition Alarm		3
Float Battery Low Alarm		4
Umbilical Fault Alarm		5
Sub Pressure Threshold Alarm		6
GPS Not Functioning		7
Unused		
Sub Reboot Alarm	1	0
Float-to-Sub Comm Error		1
Unused		2
Unused		3

Alarm Type	Byte	Bit
Float Temperature Threshold Exceeded		4
Float Pressure Threshold Exceeded		5
Sub Temperature Threshold Exceeded		6
Float Reboot Alarm		7

Float Status Byte

For the Float Status byte 38, the bit values indicate the following:

0 → Off

1 → On

Status Type	Byte	Bit
Light State	38	0
IR State		1
XBee State		2
Payload 1 Power		3
Payload 2 Power		4
Unused		5
Unused		6
Unused		7
Payload 3 Status	52	0
Payload 4 Status		1
PEP Status		2
IPIB Status		3

Telemetry - Power Controller Status 0x7

A condensed format for the Power Controller Status is shown in the table below. The complete description is given in “[ACK - Power Controller Status \(0x14\)](#)” (page 104) The Type 0x07 Telemetry format is:

Power Controller Data Type	Bytes Used	Byte #
Hours/Minutes/Seconds	3	0-2
Day/Month/Year	3	3-6
Payload 1 & 2 Currents	2	6-7
Umbilical Current	1	8
Untwist Current	1	9
Total Power Remaining	2	10-11
Battery Current	2	12-13
System Current	2	14-15
System Voltage	2	16-17

Power Controller Data Type	Bytes Used	Byte #
Solar Power 1/2/3/4 Indicators	4	18-21
Battery_0 Status	8	22-29
Battery_1 Status	8	30-37
Battery_2 Status	8	38-45
Battery_3 Status	8	46-53
Battery_4 Status	8	54-61
Battery_5 Status	8	62-69
Battery_6 Status	8	70-77

DB3.5 Power Control Status 0x08

Power Control Status packet format:

Field Name	Byte Index	Size	Bit Index	Default
Hour	0	1		
Minute	1	1		
Second	2	1		
Month	3	1		
Day	4	1		
Year	5	1		
Payload_1_Current	6	2		(mA) Signed
Payload_2_Current	8	2		(mA) Signed
Umbilical_Current	10	2		(mA) Signed
Internal_Payload	12	2		(mA) Signed
Payload_3_Current	14	2		(mA) Signed
Payload_4_Current	16	2		(mA) Signed
Power_Extension_Port	18	2		(mA) Signed
Light_Bar	20	2		(mA) Signed
Total_Power_Remaining	22	4		(mWH)
Battery_Current	26	2		Signed
Payload_Voltage	28	2		(mV)
Float_Voltage	30	2		(mV)
Payload_Current	32	2		(mA)
Float_Current	34	2		(mA)
Modem_Current	36	2		(mA)
Solar_Power_1_Power	38	2		(mW)
Solar_Power_2_Power	40	2		(mW)
Auxiliary_Power	42	2		(mW)
Reserved_Power	44	2		(mW)

Field Name	Byte Index	Size	Bit Index	Default
PM_Status	46	1		
Reserved_0	47	1		
Reserved_1	48	1		
Reserved_2	49	1		
Reserved_3	50	1		
Reserved_4	51	1		
Reserved_5	52	1		
Reserved_6	53	1		
Reserved_7	54	1		
Reserved_8	55	1		
Reserved_9	56	1		
Reserved_10	57	1		
Reserved_11	58	1		
Reserved_12	59	1		
Count of batteries in report	60	1		0 – 7 batteries >0 – count of batteries
Battery_0_Present	61	1	0	
Battery_0_Discharged	61	1	1	
Battery_0_Charged	61	1	2	
Battery_0_Discharging	61	1	3	
Battery_0_Terminate_Discharge	61	1	4	
Battery_0_Terminate_Charge	61	1	5	
Battery_0_Over_Temp	61	1	6	
Battery_0_Online	61	1	7	
Battery_0_Temp	62	1		
Battery_0_Power_Remaining	63	2		
Battery_0_Current	65	2		Signed
Battery_0_Voltage	67	2		
Battery_1_Present	69	1	0	
Battery_1_Discharged	69	1	1	
Battery_1_Charged	69	1	2	
Battery_1_Discharging	69	1	3	
Battery_1_Terminate_Discharge	69	1	4	
Battery_1_Terminate_Charge	69	1	5	
Battery_1_Over_Temp	69	1	6	
Battery_1_Online	69	1	7	
Battery_1_Temp	70	1		

Field Name	Byte Index	Size	Bit Index	Default
Battery_1_Power_Remaining	71	2		
Battery_1_Current	73	2		Signed
Battery_1_Voltage	75	2		
Battery_2_Present	77	1	0	
Battery_2_Discharged	77	1	1	
Battery_2_Charged	77	1	2	
Battery_2_Discharging	77	1	3	
Battery_2_Terminate_Discharge	77	1	4	
Battery_2_Terminate_Charge	77	1	5	
Battery_2_Over_Temp	77	1	6	
Battery_2_Online	77	1	7	
Battery_2_Temp	78	1		
Battery_2_Power_Remaining	79	2		
Battery_2_Current	81	2		Signed
Battery_2_Voltage	83	2		
Battery_3_Present	85	1	0	
Battery_3_Discharged	85	1	1	
Battery_3_Charged	85	1	2	
Battery_3_Discharging	85	1	3	
Battery_3_Terminate_Discharge	85	1	4	
Battery_3_Terminate_Charge	85	1	5	
Battery_3_Over_Temp	85	1	6	
Battery_3_Online	85	1	7	
Battery_3_Temp	86	1		
Battery_3_Power_Remaining	87	2		
Battery_3_Current	89	2		Signed
Battery_3_Voltage	91	2		
Battery_4_Present	93	1	0	
Battery_4_Discharged	93	1	1	
Battery_4_Charged	93	1	2	
Battery_4_Discharging	93	1	3	
Battery_4_Terminate_Discharge	93	1	4	
Battery_4_Terminate_Charge	93	1	5	
Battery_4_Over_Temp	93	1	6	
Battery_4_Online	93	1	7	
Battery_4_Temp	94	1		
Battery_4_Power_Remaining	95	2		
Battery_4_Current	97	2		Signed

Field Name	Byte Index	Size	Bit Index	Default
Battery_4_Voltage	99	2		
Battery_5_Present	101	1	0	
Battery_5_Discharged	101	1	1	
Battery_5_Charged	101	1	2	
Battery_5_Discharging	101	1	3	
Battery_5_Terminate_Discharge	101	1	4	
Battery_5_Terminate_Charge	101	1	5	
Battery_5_Over_Temp	101	1	6	
Battery_5_Online	101	1	7	
Battery_5_Temp	102	1		
Battery_5_Power_Remaining	103	2		
Battery_5_Current	105	2		Signed
Battery_5_Voltage	107	2		
Battery_6_Present	109	1	0	
Battery_6_Discharged	109	1	1	
Battery_6_Charged	109	1	2	
Battery_6_Discharging	109	1	3	
Battery_6_Terminate_Discharge	109	1	4	
Battery_6_Terminate_Charge	109	1	5	
Battery_6_Over_Temp	109	1	6	
Battery_6_Online	109	1	7	
Battery_6_Temp	110	1		
Battery_6_Power_Remaining	111	2		
Battery_6_Current	113	2		Signed
Battery_6_Voltage	115	2		

Twist Status 0x09

Twist Status packet format:

Field Name	Byte Index	Size	Bit Index	Default
Hour	0	1		
Minute	1	1		
Second	2	1		
Month	3	1		
Day	4	1		
Year	5	1		
Motor_Activity	6	1	0, 1	

Field Name	Byte Index	Size	Bit Index	Default
Twist_Direction	6	1	2	
Not_Used_3	6	1	3	
Twist_Activity	6	1	4	
Twist_Configuration	6	1	5	
Twist_Calibration_0	6	1	6	
Twist_Calibration_1	6	1	7	
Not_Used_8	7	1	0	
Not_Used_9	7	1	1	
Not_Used_10	7	1	2	
Not_Used_11	7	1	3	
Not_Used_12	7	1	4	
Not_Used_13	7	1	5	
Not_Used_14	7	1	6	
Twist_Debug	7	1	7	
Twist_Speed	8	2		(RPM)
Twist_Location	10	2		0-4795 = 0-360
Number_Of_Position	12	2		signed
Gearing_Ration	14	2		
Calibration_Offset	16	2		
Calibration_Threshold_A	18	2		Signed
Calibration_Threshold_B	20	2		Signed
Home_Position_A	22	2		Signed
Max_Delta_A	24	2		Signed
Home_Position_B	26	2		Signed
Max_Delta_B	28	2		Signed
MaxEffect_A	30	2		Signed
Max_Delta_Home_A	32	2		Signed
MaxEffect_B	34	2		Signed
MaxDelta_B	36	2		Signed

Mobile WGMS Heartbeat 0x10

Field Name	Bytes Used	Byte #	Format
Latitude	4	0-3	Signed 32-bit integer
Longitude	4	4-7	Signed 32-bit integer
Unix Timestamp	4	8-11	Signed 32-bit integer
Disposition	1	12	Extended Channel Status Byte

Field Name	Bytes Used	Byte #	Format
Mobile WGMS Id	10	13 – 22	Mobile WGMS Id

Mobile WGMS Sync Packet 0x11

Field Name	Bytes Used	Byte #	Format
Latitude	4	0-3	Signed 32-bit integer
Longitude	4	4-7	Signed 32-bit integer
Unix Timestamp	4	8-11	Signed 32-bit integer
Mobile WGMS Id	10	12 – 21	Mobile WGMS Id
Command Level 3	Variable	22 –	

Relay Status 0x70

Level 1 Format:

Field Name	Byte Index	Size	Bit Index	Default
Channel State	0	1	0	0=not active 1=active
Message Not Sent Alarm	0	1	1	
Communications Error Alarm	0	1	2	
Channel Not Authenticated Alarm	0	1	3	
Unused	0	1	4	0
Unused	0	1	5	0
Unused	0	1	6	0
Channel Encrypted Status	0	1	7	0=not active 1= active
Channel Revision major	1	1		2
Channel Revision Minor	2	1		0
Channel Revision Sub-Minor	3	1		0
Hour*	4	1		
Minute*	5	1		
Second*	6	1		
Month*	7	1		
Day*	8	1		
Year – 2000*	9	1		
Signal Strength**	10	1		0 – 5 bars

*Timestamp Date-Time in UTC.

** Only present in Virtual Relay (Structure Type >= 32)

Virtual Relay Channel Status Handshake

This 5 byte handshake between remote applications and the Virtual Relay in response to a RelayStatus, is sent prior to sending any pending commands in response to a connection.

Field Name	Bytes	Default Value
Relay Status Size	2	
Relay Status CRC16	2	
Disposition	1	0 – Channel Not Secure 1 – Channel is Secure

System Information 0x71

This message format is identical to that of Message type 0x91 except that the information contained in this message is a system information/configuration in nature.

Field Name	Bytes Used	Byte #	Format
System Information Type	4	0-3	
Board Id	1	4	Unsigned 8-bit integer
Task Id	1	5	Unsigned 8-bit integer
Data Format	1	6 (bits 0-3)	Unsigned 4-bit integer
Default Parser	1	6 (bit 4)	0=Binary/1=ASCII
Delivery Priority	1	6 (bits 5-7)	Unsigned 3-bit integer
Repeat Count	1	7	Unsigned 8-bit integer
System Information Record(s)	[variable]	8	

System Information Records

(Telemetry Type 113) All system information records must provide space and time using the following format. Message 0x71 provides for repeat counts for multiple samples within a message.

Field Name	Bytes Used	Byte #	Format
Latitude	4	0-3	Signed 32-bit integer
Longitude	4	4-7	Signed 32-bit integer
Unix Timestamp	4	8-11	Signed 32-bit integer
System Information Data	[variable]	12-	

System Information Types

These are the different types of system information packets sent from the vehicle.

Field Name	Number
Unspecified	0

Field Name	Number
Partition State	1
Event Messages	2
Crypto Chip Statuses	3
AMPS J Power	4
Event (ver 2) Messages	5
Mobile WGMS Heartbeat	10
Mobile WGMS Sync	11
DB3.5 Acc Power Status	32

Partition State Record (Type 1)

The partition state record indicates the state of the encrypted partition on the System Management Computer (SMC).

Field Name	Bytes Used	Byte #	Format
Latitude	4	0-3	Signed 32-bit integer
Longitude	4	4-7	Signed 32-bit integer
Unix Timestamp	4	8-11	Signed 32-bit integer
Partition State	1	12	0: partition disabled 1: partition enabled

Single Payload Packet 0x80

This telemetry type sends data packets that originate from the vehicle payload section. The Payload Packet data is given a type-indicating header by the CCU, then sent to remote applications. There is no checking or processing of the payload data by the CCU.

Field Name	Bytes
Packet Type Value	4
Packet Data	[variable]

The first four bytes of the packet indicate the data type. The Payload Telemetry types are:

Packet Type	Value	Reference
Weather Station	1	“Weather Station Packet (Type 1)” (page 137)
Payload Status	2	“Payload Status Packet (Type 2)” (page 137)
Payload AISyG Status	16	“Payload AISyG Status Packet (Type 16)” (page 139)
Payload AISyG Static Record	17	“Payload AISyG Static Record (Type 17)” (page 139)
Payload AISyG Position Report	18	“Payload AISyG Position Report (Type 18)” (page 140)

Weather Station Packet (Type 1)

A Type 1 Weather Station data packet has 35 bytes and contains the following data:

Field Name	Bytes Used	Byte #	Value (units)	Notes
Weather Data Version	2	0-1	(internal)	
Flags	2	2-3	(internal)	
Temperature	2	4-5	°C / 10	
Pressure	2	6-7	(millibars)	
Latitude	4	8-11	(± minutes / 10,000)	[1]
Longitude	4	12-15	(± minutes / 10,000)	[2]
Avg. Wind Speed	2	16-17	(knots / 10)	
Max Wind Speed	2	18-19	(knots / 10)	
Std. Dev. Wind Speed	2	20-21	(knots / 10)	
Avg. Wind Direction	2	22-23	(degrees / 10)	
Std. Dev. Wind Dir	2	24-25	(degrees / 10)	
Number of Wind Samples	2	26-27	(count)	
Hour	1	28	[0 – 23] (UTC)	
Minute	1	29	[0 – 59]	
Second	1	30	[0 – 59]	
Day	1	31	[1 – 31]	
Month	1	32	[1 – 12]	
Year	2	33-34	[2000 – 2099]	

Notes:

[1] Latitude: (+) → North; (–) → South

[2] Longitude: (+) → East; (–) → West

Payload Status Packet (Type 2)

A Type 2 Payload Status packet has 16 bytes and contains the following data:

Field Name	Bytes Used	Byte #	Bit #	Value (units)
Hour	1	0		
Minute	1	1		
Second	1	2		
Month	1	3		
Day	1	4		
Year	1	5		
Version	2	6		

Field Name	Bytes Used	Byte #	Bit #	Value (units)
Alarm0 – Leak1	1	8	0	0 → OK, 1 → Alarm
Alarm1 – Leak2			1	0 → OK, 1 → Alarm
Alarm2 – Pressure Low			2	0 → OK, 1 → Alarm
Alarm3 – Pressure High			3	0 → OK, 1 → Alarm
Alarm4 – Humidity			4	0 → OK, 1 → Alarm
Alarm5 – Temp Humid			5	0 → OK, 1 → Alarm
Alarm6 – Temp Pressure			6	0 → OK, 1 → Alarm
Alarm7			7	
Alarm8	1	9	0	
Alarm9			1	
Alarm10			2	
Alarm11			3	
Alarm12			4	
Alarm13			5	
Alarm14			6	
Alarm15			7	
Leak1	1	10		
Leak2	1	11		
HumidTemp	1	12		(°C)
Humidity	1	13		(%)
PressureTemp	1	14		(°C)
Pressure	1	15		(kPa)

Payload Enhanced Pressure Weather Station Report Type 5

Field Name	Byte Index	Size	Bit Index	Units
Weather Data Version	0	2		
Flags	2	2		
Temperature	4	2		1/10 deg c
Pressure	6	2		1/10 mBars
Latitude	8	4		
Longitude	12	4		
Avg. Wind Speed	16	2		1/10 knots
Max Wind Speed	18	2		1/10 knots
Std. Dev. Wind Speed	20	2		1/10 knots

Field Name	Byte Index	Size	Bit Index	Units
Avg. Wind Direction	22	2		1/10 deg
Std. Dev. Wind Dir	24	2		1/10 deg
Number of Wind Samples	26	2		
Hour	28	1		
Minute	29	1		
Second	30	1		
Day	31	1		
Month	32	1		
Year	33	2		

Payload AISyG Status Packet (Type 16)

A Payload AISyG Status packet has 16 bytes and contains the following data:

Field Name	Bytes Used	Byte #	Value (units)
Hour	1	0	
Minute	1	1	
Second	1	2	
Month	1	3	
Day	1	4	
Year	1	5	
Latitude	4	6	
Longitude	4	10	
Temperature	2	14	
Pressure	2	16	
Humidity	2	18	
Alarms	2	20	(TBD)

Payload AISyG Static Record (Type 17)

A Payload AISyG Static Record packet has 86 bytes and contains the following data:

Field Name	Bytes Used	Byte #	Default
Hour	1	0	
Minute	1	1	
Second	1	2	
Month	1	3	
Day	1	4	
Year	1	5	

Field Name	Bytes Used	Byte #	Default
MMSI	4	6	
AISClass	1	10	A/B
Ship Name (20 characters)	20	11	
Call Sign (7 characters)	7	31	
Ship and Cargo Type	1	38	
Device Used for the Position Fixes	1	39	
Destination (20 characters)	20	40	
ETA (Month, Day, Hour, Minutes)	4	60	
Dimension and Point Of Reference	4	64	
IMO	4	68	
Latitude	4	72	
Longitude	4	76	
Course Over Ground	2	78	
Speed Over Ground	2	80	
Rate Of Turn	1	82	
Heading	2	83	
Navigation Status	1	85	

Payload AISyG Position Report (Type 18)

A Payload AISyG Static Record packet has a variable number of bytes depending on the number of records contained. It has the following format:

Field Name	Bytes Used	Byte #	Value
Number Of Records in Message	1	0	N
Record 1	26	1	(see record format below)
Record 2	26	27	(see record format below)
...	...	...	
...	...	...	
Record N	26		(see record format below)

Each 26-byte Record has the following format:

Field Name	Bytes Used	Byte #	Default
Hour	1	0	
Minute	1	1	
Second	1	2	
Month	1	3	

Field Name	Bytes Used	Byte #	Default
Day	1	4	
Year	1	5	
MMSI	4	6	
Latitude	4	10	
Longitude	4	14	
Course Over Ground	2	18	
Speed Over Ground	2	20	
Rate Of Turn	1	22	
Heading	2	23	
Navigation Status	1	25	

Sensor Sample Record (Unparsed)

All sensors must locate each sample in space and time using the following format. The software managing the sensor is responsible for providing the timestamp and the lat/lon. The SMC and PIBs should provide callable routines that report these values in a form that can be directly inserted into sensor sample records. Message types 0x90 and 0x91 provide for repeat counts for multiple samples within a message.

Field Name	Bytes Used	Byte #	Format
Latitude	4	0-3	Signed 32-bit integer
Longitude	4	4-7	Signed 32-bit integer
Unix Timestamp	4	8-11	Signed 32-bit integer
Sensor Data	[variable]	12-	

Fluorometer (C3) Data Type 96

Data Format 0:

Field Name	Bytes Used	Byte #	Format
Latitude	4	0-3	Signed 32-bit integer
Longitude	4	4-7	Signed 32-bit integer
Unix Timestamp	4	8-11	Signed 32-bit integer
DataC1 Int	2	12-13	Unsigned 32-bit integer
DataC1 Fraction	1	14	Unsigned 32-bit integer
DataC2 Int	2	15-16	Unsigned 32-bit integer
DataC2 Fraction	1	17	Unsigned 32-bit integer
DataC3 Int	2	18-19	Unsigned 32-bit integer

Field Name	Bytes Used	Byte #	Format
DataC3 Fraction	1	20	Unsigned 32-bit integer
Pressure Int	2	21-22	Unsigned 32-bit integer
Pressure Fraction	1	23	Unsigned 32-bit integer
Temperature	2	24-25	Unsigned 32-bit integer

Compressed CTD Data Type 112

The GPCTD Data comes back as payload type 0x00000070 or 112 decimal. The format does use the sub-type field for a couple of different possible data formats. Currently we are only supporting sub-type 8 which is the CTD Data with no O2 data included (details are in section 9 in the document). At some point in the future we will also have units that use sub-type 9, which will have an extra 4 bytes in every GPCTD sample for the oxygen.

Compressed CTD Data

This record reports the Pressure, Temperature, and Conductivity for each sample.

Field Name	Bytes Used	Byte #	Format
Latitude	4	0-3	Signed 32-bit integer
Longitude	4	4-7	Signed 32-bit integer
Unix Timestamp	4	8-11	Signed 32-bit integer
Pressure	4	12-15	Unsigned 32-bit integer
Temperature	4	16-19	Unsigned 32-bit integer
Conductivity	4	20-23	Unsigned 32-bit integer

Latitude and Longitude – the lat/lon reported by the CCU to the PIB – the location of the float at the time that the PIB obtained it from the CCU. Note that the reading of the GPS is not directly coordinated with the CTD, but should be close enough given other errors in the system.

Unix Timestamp – the standard Unix timestamp computed from the PIB RTC timestamp. The PIB clock is set from the CCU GPS and should be accurate within a second.

Pressure – The Pressure as measured by the CTD. $P(\text{in decibars}) = (\text{Value}/100) - 10$

Temperature – The Temperature as measured by the CTD. $T(\text{in deg C}) = (\text{Value}/10,000) - 5$

Conductivity – The Conductivity as measured by the CTD. $C(\text{in S/m}) = (\text{Value}/100,000) - 0.05$

Compressed CTD With Oxygen Sensor Data

This record reports the Pressure, Temperature, and Conductivity for each sample.

Field Name	Bytes Used	Byte #	Format
Latitude	4	0-3	Signed 32-bit integer
Longitude	4	4-7	Signed 32-bit integer
Unix Timestamp	4	8-11	Signed 32-bit integer
Pressure	4	12-15	Unsigned 32-bit integer
Temperature	4	16-19	Unsigned 32-bit integer
Conductivity	4	20-23	Unsigned 32-bit integer
Oxygen	4	24-27	Unsigned 32-bit integer

Latitude and Longitude – the lat/lon reported by the CCU to the PIB – the location of the float at the time that the PIB obtained it from the CCU. Note that the reading of the GPS is not directly coordinated with the CTD, but should be close enough given other errors in the system.

Unix Timestamp – the standard Unix timestamp computed from the PIB RTC timestamp. The PIB clock is set from the CCU GPS and should be accurate within a second.

Pressure – The Pressure as measured by the CTD. $P(\text{in decibars}) = (\text{Value}/100) - 10$

Temperature – The Temperature as measured by the CTD. $T(\text{in deg C}) = (\text{Value}/10,000) - 5$

Conductivity – The Conductivity as measured by the CTD. $C(\text{in S/m}) = (\text{Value}/100,000) - 0.05$

Oxygen – The Dissolved Oxygen as measured by the optional Oxygen sensor. $O(\text{in Hz}) = (\text{Value}/10)$

Payload ECO Puck Sensor Data Type 123

ECO Puck telemetry is returned as a type 0x91 structure as follows. See WET Labs documentation for definitions of the sensor specific values. Where appropriate, the text strings are converted to binary to save space.

FORMAT CODE 0 - ECO PUCK SAMPLE

Field Name	Bytes Used	Byte #	Format
PayloadType	4	0-3	123 (WET Labs ECO Puck)
Board Id	1	4	Unsigned 8-bit integer
Task Id	1	5	Unsigned 8-bit integer
Sensor Data Format	1	6 (bits 0-3)	Unsigned 4-bit integer – 0
Default Parser	1	6 (bit 4)	0=Binary/1=ASCII – 0
Delivery Priority	1	6 (bits 5-7)	Unsigned 3-bit integer – 0
Repeat Count	1	7	Unsigned 8-bit integer

Individual samples data format 0

Latitude	4	0-3	Signed 32-bit integer
Longitude	4	4-7	Signed 32-bit integer
Time	4	8-11	Unix time_t as read on the SMC
Raw date from sensor	8	12-19	String returned by sensor
Raw time from sensor	8	20-27	String returned by sensor
Reference frequency 1	2	28-29	Unsigned 16-bit integer
Reading 1	2	30-31	Unsigned 16-bit integer
Reference frequency 2	2	32-33	Unsigned 16-bit integer
Reading 2	2	34-35	Unsigned 16-bit integer
Reference frequency 3	2	36-37	Unsigned 16-bit integer
Reading 3	2	38-39	Unsigned 16-bit integer
Therm	2	40-41	Unsigned 16-bit integer

Example of a raw sample with 13 data columns of the EcoPuck:

```
99/99/99 99:99:99 532 4130 650 4130 460 4130 525 2011/06/28
7:05:45.430877 37.410927833333325 -122.00422849999999
```

How the first 9 columns of the payload should be interpreted:

	Column 1	Column 2	Column 3	Column 4	Column 5	Column 6	Column 7	Column 8	Column 9
Unit	Raw Date	Raw Time	Sample 1	532nm	Sample2	650nm	Sample3	CDOM	therm
Raw Samples	99/99/99	99:99:99	532	4130	650	4130	460	4130	525
Type	8char String	8char String	INT16	INT16	INT16	INT16	INT16	INT16	INT16

Payload CStar Sensor Data Type 124

The telemetry is returned as a type 0x91 structure. See WET Labs documentation for the definition of the sensor specific values. Where appropriate, the text strings are converted to binary to save space.

FORMAT CODE 0 – C-STAR SENSOR TELEMETRY

Field Name	Bytes Used	Byte #	Format
PayloadType	4	0-3	124 (WET Labs ECO Puck)
Board Id	1	4	Unsigned 8-bit integer
Task Id	1	5	Unsigned 8-bit integer
Sensor Data Format	1	6 (bits 0-3)	Unsigned 4-bit integer – 0
Default Parser	1	6 (bit 4)	0=Binary/1=ASCII – 0
Delivery Priority	1	6 (bits 5-7)	Unsigned 3-bit integer – 0
Repeat Count	1	7	Unsigned 8-bit integer

Individual samples

Latitude	4	0-3	Signed 32 bit integer
Longitude	4	4-7	Signed 32-bit integer
Unix Timestamp	4	8-11	Unix time_t as read on the SMC
Sensor serial number	10	12-21	String returned by sensor
Reference count	2	22-23	Unsigned 16-bit integer
Signal count	2	24-25	Unsigned 16-bit integer
Corr Signal Raw count	2	26-27	Unsigned 16-bit integer
Beam c Inverse	8	28-35	Double precision floating point
Temperature	2	36-37	Unsigned 16-bit integer

Example of a raw sample with 9 data columns of the CStar:

1234PG 11829 13838 13695 0.003 527 17:05:45.430877
37.410927833333325 -122.00422849999999

How the first 6 columns of the payload should be interpreted:

	Column 1	Column 2	Column 3	Column 4	Column 5	Column 6
Unit	Instrument serial number	Reference counts	Signal counts	Corrected Signal raw counts	Calculated Beam c inverse meters	Internal thermistor, counts
Raw Samples	CST-1234PG	11829	13838	13695	0.003	527

Payload Benthos Modem Data Type 125

Format code 0 – Range telemetry results (ATY/ATR)

Field Name	Bytes Used	Byte #	Format
PayloadType	4	0-3	125 (Benthos Modem)
Board Id	1	4	Unsigned 8-bit integer
Task Id	1	5	Unsigned 8-bit integer

Field Name	Bytes Used	Byte #	Format
Sensor Data Format	1	6 (bits 0-3)	Unsigned 4-bit integer – 0
Default Parser	1	6 (bit 4)	0=Binary/1=ASCII – 0
Delivery Priority	1	6 (bits 5-7)	Unsigned 3-bit integer – 0
Repeat Count	1	7	Unsigned 8-bit integer – 1
Latitude	4	8-11	Latitude
Longitude	4	12-15	Longitude
Time	4	16-19	Unix time_t
Distance to Target	4	20-23	Unsigned 32-bit integer, tenths of meters

Records of the following format representing results for different baud rates, 6 sets (150 bytes):

Baud Rate	2	0-1	Signed 16-bit integer
Acquisition - SNR	2	2-3	Signed 16-bit integer
Acquisition - MPD	2	4-5	Signed 16-bit integer
Acquisition - SPD	2	6-7	Signed 16-bit integer
Header - CRC	1	8	Signed 8-bit integer (0=fail, 1=pass)
Header - SNR	2	9-10	Signed 16-bit integer
Header – CCERR	2	11-12	Signed 16-bit integer (-1 if not reported)
Data - MOD	2	13-14	Signed 16-bit integer
Data - ERR	2	15-16	Signed 16-bit integer
Data - SNR	2	17-18	Signed 16-bit integer
Data - AGC	2	19-20	Signed 16-bit integer
Data - SPD	2	21-22	Signed 16-bit integer
Data - CCERR	2	23-24	Signed 16-bit integer

Payload Datawell MOSE Sensor Data Type 126

Format code 0 – Reporting Hs/Tav/Tp/Dirp wave spectrum data.

Field Name	Bytes Used	Byte #	Format
PayloadType	4	0-3	126 (Datawell MOSE)
Board Id	1	4	Unsigned 8-bit integer
Task Id	1	5	Unsigned 8-bit integer
Sensor Data Format	1	6 (bits 0-3)	Unsigned 4-bit integer – 0
Default Parser	1	6 (bit 4)	0=Binary/1=ASCII – 0
Delivery Priority	1	6 (bits 5-7)	Unsigned 3-bit integer – 0
Repeat Count	1	7	Unsigned 8-bit integer

Records the following format:

Latitude	4	8-11	Latitude
Longitude	4	12-15	Longitude
Time	4	16-19	Unix time_t
Hs	8	20-27	double precision float
Tav	8	28-35	double precision float
Tp	8	36-43	double precision float
Dirp	8	44-51	double precision float
Number of Averaged Spectra	1	52	Signed int
Number of Samples per Spectrum	2	53-54	Signed int
Number of Sample Gaps	2	55-56	Signed int

Payload VEMCO VR2C Data Type 127

Format code 0 – Reporting a single tag reading.

Field Name	Bytes Used	Byte #	Format
PayloadType	4	0-3	127 (VEMCO VR2C)
Board Id	1	4	Unsigned 8-bit integer
Task Id	1	5	Unsigned 8-bit integer
Sensor Data Format	1	6 (bits 0-3)	Unsigned 4-bit integer – 0
Default Parser	1	6 (bit 4)	0=Binary/1=ASCII – 1
Delivery Priority	1	6 (bits 5-7)	Unsigned 3-bit integer – 0
Repeat Count	1	7	Unsigned 8-bit integer
Record Format			
Latitude	4	8-11	Latitude
Longitude	4	12-15	Longitude
Time	4	16-19	Unix time_t
Tag Reading String	Varies	20-	string, variable length

Payload ADCP Data Type 128

Bathymetry Data:

Field Name	Bytes Used	Byte #	Format
Latitude	4	0-3	Signed 32-bit integer
Longitude	4	4-7	Signed 32-bit integer
Unix Timestamp	4	8-11	Signed 32-bit integer
Heading	2	12-13	Unsigned 16-bit integer
Pitch	2	14-15	Signed 16-bit integer
Roll	2	16-17	Signed 16-bit integer
B1	2	18-19	Unsigned 16-bit integer

Field Name	Bytes Used	Byte #	Format
B2	2	20-21	Unsigned 16-bit integer
B3	2	22-23	Unsigned 16-bit integer
B4	2	24-25	Unsigned 16-bit integer

C2 Data:

Field Name	Bytes Used	Byte #	Format
Latitude	4	0-3	Signed 32-bit integer
Longitude	4	4-7	Signed 32-bit integer
Unix Timestamp	4	8-11	Signed 32-bit integer
Bin size	2	12-13	Unsigned 16-bit integer
Blanking distance	2	14-15	Unsigned 16-bit integer
Bin 1, East	2	16-17	Signed 16-bit integer
Bin 1, North	2	18-19	Signed 16-bit integer
Bin 2, East	2	20-21	Signed 16-bit integer
Bin 2, North	2	22-23	Signed 16-bit integer
...	2	24-25	Signed 16-bit integer

C4 Data:

Field Name	Bytes Used	Byte #	Format
Latitude	4	0-3	Signed 32-bit integer
Longitude	4	4-7	Signed 32-bit integer
Unix Timestamp	4	8-11	Signed 32-bit integer
Bin size	2	12-13	Unsigned 16-bit integer
Blanking distance	2	14-15	Unsigned 16-bit integer
Bin 1, East	2	16-17	Signed 16-bit integer
Bin 1, North	2	18-19	Signed 16-bit integer
Bin 1, Up	2	20-21	Signed 16-bit integer
Bin 1, Error	2	22-23	Signed 16-bit integer
...	2	24-25	Signed 16-bit integer

Payload Aquatracka Data Type 130

Format code 0 – Reporting a single tag reading.

Field Name	Bytes Used	Byte #	Format
PayloadType	4	0-3	130 (Aquatracka)
Board Id	1	4	Unsigned 8-bit integer
Task Id	1	5	Unsigned 8-bit integer

Field Name	Bytes Used	Byte #	Format
Sensor Data Format	1	6 (bits 0-3)	Unsigned 4-bit integer – 0
Default Parser	1	6 (bit 4)	0=Binary/1=ASCII – 1
Delivery Priority	1	6 (bits 5-7)	Unsigned 3-bit integer – 0
Repeat Count	1	7	Unsigned 8-bit integer
Record Format			
Latitude	4	8-11	Latitude
Longitude	4	12-15	Longitude
Time	4	16-19	Unix time_t
Raw Temp. Mean	4	20-23	float
Raw Ref. Mean	4	24-27	float
Raw Sig. Mean	4	28-31	float
Conc. Mean	4	32-35	float
Temp. Mean	4	36-39	float
Raw Temp. Stddev	4	40-63	float
Raw Ref. Stddev	4	44-47	float
Raw Sig. Stddev	4	48-53	float
Conc. Stddev	4	54-57	float
Temp. Stddev	4	58-61	float

Payload WHOI Micro Modem Type 131

Format code 0 – Informational Report.

Field Name	Bytes Used	Byte #	Format
PayloadType	4	0-3	131 (WHOI Micro Modem)
Board Id	1	4	Unsigned 8-bit integer
Task Id	1	5	Unsigned 8-bit integer
Sensor Data Format	1	6 (bits 0-3)	Unsigned 4-bit integer – 0
Default Parser	1	6 (bit 4)	0=Binary/1=ASCII – 1
Delivery Priority	1	6 (bits 5-7)	Unsigned 3-bit integer – 0
Repeat Count	1	7	Unsigned 8-bit integer
Latitude	4	8-11	Latitude
Longitude	4	12-15	Longitude
Time	4	16-19	Unix time_t
Report string	Varies	20-	string, variable length

Harmony Payload Type 132

Format Code 0 - String Report

Field Name	Bytes Used	Byte #	Format
PayloadType	4	0-3	132 (Harmony)
Board Id	1	4	Unsigned 8-bit integer
Task Id	1	5	Unsigned 8-bit integer
Sensor Data Format	1	6 (bits 0-3)	Unsigned 4-bit integer – 0
Default Parser	1	6 (bit 4)	0=Binary/1=ASCII – 1
Delivery Priority	1	6 (bits 5-7)	Unsigned 3-bit integer – 0
Repeat Count	1	7	Unsigned 8-bit integer
Latitude	4	8-11	Latitude
Longitude	4	12-15	Longitude
Time	4	16-19	Unix time_t
Report string	Varies	20-	string, variable length

Format Code 1 - Binary Report

Field Name	Bytes Used	Byte #	Format
PayloadType	4	0-3	132 (Harmony)
Board Id	1	4	Unsigned 8-bit integer
Task Id	1	5	Unsigned 8-bit integer
Sensor Data Format	1	6 (bits 0-3)	Unsigned 4-bit integer – 1
Default Parser	1	6 (bit 4)	0=Binary/1=ASCII – 0
Delivery Priority	1	6 (bits 5-7)	Unsigned 3-bit integer – 0
Repeat Count	1	7	Unsigned 8-bit integer
Latitude	4	8-11	Latitude
Longitude	4	12-15	Longitude
Time	4	16-19	Unix time_t
Report data	Varies	20-	Bytes, variable length

Cefas OrbComm Payload Type 134

Data Format 0:

Field Name	Bytes Used	Byte #	Format
PayloadType	4	0-3	133 (OrbComm)
Board Id	1	4	Unsigned 8-bit integer
Task Id	1	5	Unsigned 8-bit integer
Sensor Data Format	1	6 (bits 0-3)	Unsigned 4-bit integer – 0
Default Parser	1	6 (bit 4)	0=Binary/1=ASCII – 1
Delivery Priority	1	6 (bits 5-7)	Unsigned 3-bit integer – 0
Repeat Count	1	7	Unsigned 8-bit integer
Record Format			

Field Name	Bytes Used	Byte #	Format
Latitude	4	8-11	Latitude
Longitude	4	12-15	Longitude
Time	4	16-19	Unix time_t
Data	270	20-varies	String

Turbidity Payload Type 135

Format Code 0:

Field Name	Bytes Used	Byte #	Format
PayloadType	4	0-3	135 (LISST)
Board Id	1	4	Unsigned 8-bit integer
Task Id	1	5	Unsigned 8-bit integer
Sensor Data Format	1	6 (bits 0-3)	Unsigned 4-bit integer – 0
Default Parser	1	6 (bit 4)	0=Binary/1=ASCII – 1
Delivery Priority	1	6 (bits 5-7)	Unsigned 3-bit integer – 0
Repeat Count	1	7	Unsigned 8-bit integer
Record Format			
Latitude	4	8-11	Latitude
Longitude	4	12-15	Longitude
Time	4	16-19	Unix time_t
Total Concentration	4	20-23	float
Mean Particle Size	4	24-27	float
Sample Count	4	28-31	Unsigned 32-bit integer
Serial Number	2	32-33	Unsigned 16-bit integer
Name Length	1	34	byte
File Name	Varies	35	ASCII String

Sonardyne Tsunami Sensor Payload Type 138

Format code 0 – Informational Report

Field Name	Bytes Used	Byte #	Format
PayloadType	4	0-3	new value
Board Id	1	4	Unsigned 8-bit integer
Task Id	1	5	Unsigned 8-bit integer
Sensor Data Format	1	6 (bits 0-3)	Unsigned 4-bit integer – 0
Default Parser	1	6 (bit 4)	0=Binary/1=ASCII – 1
Delivery Priority	1	6 (bits 5-7)	Unsigned 3-bit integer – 0

Field Name	Bytes Used	Byte #	Format
Repeat Count	1	7	Unsigned 8-bit integer
Latitude	4	8-11	Latitude
Longitude	4	12-15	Longitude
Time	4	16-19	Unix time_t
Report string	Varies	20-	string, variable length

Marine Magnetics Magnetometer Type 140

Format code 0 – Informational Report

Field Name	Bytes Used	Byte #	Format
PayloadType	4	0-3	136 (Marine Magnetics Magnetometer)
Board Id	1	4	Unsigned 8-bit integer
Task Id	1	5	Unsigned 8-bit integer
Sensor Data Format	1	6 (bits 0-3)	Unsigned 4-bit integer – 0
Default Parser	1	6 (bit 4)	0=Binary/1=ASCII – 1
Delivery Priority	1	6 (bits 5-7)	Unsigned 3-bit integer – 0
Repeat Count	1	7	Unsigned 8-bit integer
Latitude	4	8-11	Latitude
Longitude	4	12-15	Longitude
Time	4	16-19	Unix time_t
Raw report string	Varies	20-	string, variable length

Payload CO2 Sensor Type 144

Field Name	Bytes Used	Byte #	Format
PayloadType	4	0-3	144 (pCO2)
Board Id	1	4	Unsigned 8-bit integer
Task Id	1	5	Unsigned 8-bit integer
Sensor Data Format	1	6 (bits 0-3)	Unsigned 4-bit integer – 0
Default Parser	1	6 (bit 4)	0=Binary/1=ASCII – 1
Delivery Priority	1	6 (bits 5-7)	Unsigned 3-bit integer – 0
Repeat Count	1	7	Unsigned 8-bit integer
Record Format			
Latitude	4	8-11	Latitude
Longitude	4	12-15	Longitude
Time	4	16-19	Unix time_t

Field Name	Bytes Used	Byte #	Format
Custom Format	Varies	20-	Customer Specified

Payload Thermistor Array Data Type 192

Format code 0:

Field Name	Bytes Used	Byte #	Format
PayloadType	4	0-3	131 (WHOI Micro Modem)
Board Id	1	4	Unsigned 8-bit integer
Task Id	1	5	Unsigned 8-bit integer
Sensor Data Format	1	6 (bits 0-3)	Unsigned 4-bit integer – 0
Default Parser	1	6 (bit 4)	0=Binary/1=ASCII – 1
Delivery Priority	1	6 (bits 5-7)	Unsigned 3-bit integer – 0
Repeat Count	1	7	Unsigned 8-bit integer
Latitude	4	8-11	Latitude
Longitude	4	12-15	Longitude
Time	4	16-19	Unix time_t
T1	2	20-21	
T2	2	22-23	
T3	2	24-25	
T4	2	26-27	
T5	2	28-29	
T6	2	30-31	

Multi-Payload Packet 0x81

Sequence of Payload packets sent from ship to shore using glider core Iridium modem.

Field Name	Byte Index	Size	Bit Index	Default
PayloadType	0	4		
PacketUId	4	4		
PacketCount	8	2		
PacketTotal	10	2		
PacketData	12	Variable		

NOTE: Packet UId is a vehicle unique identifier that is assigned to each multi-packet sequence in order to uniquely identify all packets that belong to that sequence.

Payload Packet 0x91

(Telemetry Type 145) This message format is identical to that of Message type 0x90 except that the whole structure has a 4 byte PayloadType prepended. The PayloadType is identical in

format and usage to the field of the same name and byte position in the deprecated Telemetry Type 0x80 message. The PacketData field of 0x80 would correspond to everything in 0x91 after the PayloadType field.

Field Name	Bytes Used	Byte #	Format
PayloadType	4	0-3	See Telemetry type 0x80
Board Id	1	4	Unsigned 8-bit integer
Task Id	1	5	Unsigned 8-bit integer
Sensor Data Format	1	6 (bits 0-3)	Unsigned 4-bit integer
Default Parser	1	6 (bit 4)	0=Binary/1=ASCII
Delivery Priority	1	6 (bits 5-7)	Unsigned 3-bit integer
Repeat Count	1	7	Unsigned 8-bit integer
Sensor Sample(s)	[variable]	8-	

Sensor Sample Records

(Telemetry Type 145) All sensors must locate each sample in space and time using the following format. The software managing the sensor is responsible for providing the time stamp and the latitude/longitude. The System Management Computer (SMC) and PIBs should provide callable routines that report these values in a form that can be directly inserted into sensor sample records. Message types 0x90 and 0x91 provide for repeat counts for multiple samples within a message.

Field Name	Bytes Used	Byte #	Format
Latitude	4	0-3	Signed 32-bit integer
Longitude	4	4-7	Signed 32-bit integer
Unix Timestamp	4	8-11	Signed 32-bit integer
Sensor Data	[variable]	12-	

Chapter 8. CCU Payload Communications

Customers using application-specific electronics on board a Wave Glider need to be able to interact with other resources on the vehicle as well as with remote applications. Liquid Robotics has developed the common generic communications protocols described below. Using these protocols allow Liquid Robotics and its customers to work independently on a project, yet retain communication interoperability.

The CCU Expansion ports support payload communications with a REST interface that has commands encoded as URL parameters - similar to a web application.

The CCU Sensor ports support the SV2 payload communications protocol described in “[Sensor Port Payload Communications Protocol](#)” (page 155)

Sensor Port Payload Communications Protocol

The payload communications protocol for the SV3 CCU Sensor ports is the same payload communications protocol that is used on SV2 vehicles.



Note

The Payload Communications Protocol carries vehicle commands and responses (Level 2 messages). For more information, see [Appendix A: Command Descriptions](#).

The CCU is able to receive communications from payloads. The CCU action will depend on how the communication is addressed:

- If addressed to the CCU payload message handler, the CCU will deliver the message to the specified address, or send a NAK if it is unable to deliver the message.
- If addressed to the CCU command processor, the CCU will process the command.
- If addressed to another payload, the CCU will route the message to that payload.
- If addressed to the Iridium system, the CCU will send it out in Iridium format.
- If addressed to the cellular network, the CCU will send it out in cellular format (then the Virtual Relay will convert it to Packet Reflector-compatible packets).
- If addressed to WiFi, the CCU will send it out in WiFi format.

Communication Method

Payload messaging relies on serial communications to transmit data packets, using polling to initiate communications and queues to accommodate messages between polling intervals.

Payload Communications Requirements

The communications protocol must allow the CCU, a PIB, or other device to:

- Identify itself and its software version number.
- Be updated with its current location according to GPS.
- Subscribe to various messages that are sent to remote applications.
- Issue commands directly to the Float CCU.
- Be updated with a new program, if the application running on the payload supports it.
- Receive a file from a remote application or send a requested file to a remote application.
- Indicate when there is a new file available to be read.
- Read or store data in the Float CCU file system.
- Be notified when it is about to be powered off.
- Request a power cycle.
- Interact with a Debug Console.

Serial Communication Parameters

Communications between the CCU and the connected PIBs are:

- 115,200 bps at RS-232 levels
- 8 data bits
- 1 stop bit
- No parity

Communication is throttled using the protocol, so handshaking features like X-On/X-Off, RTS/CTS and DTR/DSR are disabled.

Communications between a PIB and its connected devices can use other parameters, depending on the kind of PM used. However, Liquid Robotics recommends using the values listed above.

Payload Data Packet Format

Payload data packets contain header data, followed by the message and ending with a CRC error check code. A special 1-byte Start-of-Frame (SOF) character is used to indicate the beginning of each packet ("frame").

The general format is:

Figure 8.1. Payload Data Packet Format

where:

- **SOF Character:** Indicates the start of a payload message packet.
- **Packet Size:** Is the number of bytes in the packet, excluding the SOF character.
- **Destination Address:** Is where the packet is to be sent.
- **Originator Address:** Is who sent the packet.
- **Tracking ID:** Is the number created by the originator for message tracking.
- **Message Type:** Is a code value indicating the type/format of data in the message.
- **Message Data:** The actual message.
- **Error Check:** A CRC code value.

Message Routing

A message packet contains the address of the originator and the address of the recipient. When the CCU or a PIB creates a message packet, it can choose to broadcast it to all connected child devices (PIBs, payload boards or applications), or to send it to a specific device. Depending on the message destination ID and the PIB address, the PIB can process the message or route the message to any of its child devices.

Note that a child device cannot send an unsolicited message to its parent device. Thus, a PIB cannot originate a message to the CCU. Likewise, a daisy-chained PIB cannot originate a message to its parent PIB.

When a child device has a packet to send to its parent, it puts the packet in a message queue. The child then has to wait for the parent to poll it. When polled, the PIB responds with a packet that contains the message.

Polling

Certain types of messages have a polling function in addition to any data they may contain.

The CCU sends out periodic polling messages to the PIBs connected to it. The PIBs can send a "message waiting" response to the CCU. If a PIB has a message waiting, the CCU requests the PIB to send it and the PIB sends the message to the CCU. When the CCU receives the message, it routes it to the designated recipient, which can be the CCU itself, another connected PIB, or an external communications device such as Iridium or XBee.

Similarly, a PIB has the option to send out periodic polling messages to its child devices. Each child device can send a "message waiting" response to the parent PIB. The parent PIB then requests and receives the message, processes the message, and routes it to another child device (or puts it into its message queue and waits to be polled).

The polling rates are set by each PIB as part of the Enumeration Response.

Enumeration Request and Response

At power-up, a specific "Enumeration" message is broadcast by the CCU. In response, each PIB reports its addresses, along with flags indicating the type of information it would like to receive (including the polling rate). Each PIB then broadcasts its own message to connected child devices, which respond with their own message requirements.

These addresses and flags (along with their physical connectivity) form the basis of the routing tables maintained by the CCU and PIBs.

ACKs and NAKs

When the CCU or a PIB receives a message packet, it typically responds to the sender with an ACK ("Acknowledge") or NAK ("Not Acknowledge") message packet.

An ACK message indicates that the message was received and was able to be interpreted. When a PIB sends an ACK response to the CCU or parent PIB, it can also indicate that it has a message queued for sending.

A NAK message indicates that there was a problem with the message. As with the ACK response, a PIB can also use a NAK response to indicate that it has a message queued.

The original message sender has the option of notifying the recipient (using a flag bit) that it doesn't want an ACK/NAK response to the message.

Protocol Message Format

Figure 8.2 shows the format of the message packet for a message containing "N" bytes. Note that all fields are sent in "little-endian" form (LSB first).

Figure 8.2. Message Packet Format

	Field	Bytes	Format	Section
	Start-of-Frame (SOF)	1	0x7E	1
↑ ↑ ↑	Message Size	2	[LSB,MSB]	2
↑	Destination Address	2	[LSB,MSB]	3
↑	Source Address	2	[LSB,MSB]	4
	Transaction ID	2	[LSB,MSB]	5
	Message Type (No Ack)	2	[LSB,MSB]	6
Message size includes these bytes and bytes are escaped Used to calculate CRC-16	Message Data	N	≤ 544 bytes	7
↓ ↓	CRC-16	2	[LSB,MSB]	8

Start-of-Frame Character (Section 1)

The first character in a Message Packet must be the Start-of-Frame (SOF) character: **0x7E**

The SOF character can be escaped to allow it to be embedded within the remainder of the message packet (Sections 2-8).

Message Size (Section 2)

The number of bytes following the Start-of-Frame, including the CRC bytes. This must be **≤ 556 bytes**, however, the limit does not include any added Escape (ESC) bytes.

Destination Address (Section 3)

This field indicates the intended recipient of the message by address. There is also a special reserved address for broadcast messages.

Source Address (Section 4)

This field indicates the sender of the message. This allows the recipient to know who sent the message (especially in case of an ACK or NAK).

Transaction ID (Section 5)

A 2-byte number. This is an "arbitrary" number that is created by the sender. The value can be zero, but it is recommended that each message have a uniquely identifiable Transaction ID.

ACK and NAK messages do not assign Transaction IDs - they simply return the ID of the original message sender.

Transaction ID numbers are useful when a PIB sends out multiple messages. Each message should have a different Transaction ID. The response to each message will also contain the Transaction ID. This allows the sender to keep track of which messages were ACK'ed or NAK'ed.

A device may receive a message from two different sources, but with the same Transaction ID. There should not be any problem with this - the recipient should consider the address of the sender, not the Transaction ID, when responding to the message.

Except for ACK and NAK packets, consecutive valid received messages with the same Transaction ID, Source, Size, and CRC should be considered to be duplicate messages. In this case, the message recipient should simply send back duplicate responses. However, if a duplicated message requests an action, the recipient should not perform the requested action more than once.

Message Type (No ACK) (Section 6)

This is a 2-byte code that indicates the purpose and contents of this message in the least significant 15 bits (0-0x7FFF). The most significant bit (0x8000) contains a flag:

- Messages sent from Parent to Child set the flag to 1 if no acknowledgement should be sent (this is typical for broadcast or informational messages). If the flag is 0, the Child must reply with either an ACK or a NAK message.

Message Data (Section 7)

This field contains the message content to be forwarded. Some packets can contain no Message Data.

Normally, a maximum of **544** bytes is allowed, but characteristics of the recipient may impose additional length restrictions. For example, data intended to be sent out in the Iridium Short-Burst-Data format is limited to **192** bytes.

CRC-16 (Section 8)

This error-check field contains a 16-bit CRC of the message starting at the byte following the **SOF** until the byte just before the CRC field.

SOF and ESC Characters and Escaping the Message Body

Sections 2-8 of the message are escaped to prevent the SOF character (0x7E) from appearing more than once in the message. This simplifies interpretation of the incoming message since any SOF character restarts block reception.

The Escape (ESC) character is 0x7D. When either a SOF or an ESC character is used within the packet (including the CRC), it must be preceded by the ESC character and also have its bit 5 toggled. For example, for all bytes following the SOF:

0x7E → 0x7D,0x5E

0x7D → 0x7D,0x5D

The size values and size limits for the messages exclude the count of any ESC characters.

Addresses

Addresses are 2-byte values used to route messages between the CCU, PIBs and other devices. These addresses are sometimes used within the body of a message, particularly when responding to broadcast messages.

Address Format

Source and Destination addresses are composed of a two-byte value. The MSB is the “Board ID” value. The LSB is the “Task ID”. These are both described in more detail below.

Note that, since the address is stored in little-endian format, the actual order of storage for the address will be:

LSB	MSB
Task ID	Board ID

Board ID

The MSB of the address contains the “Board ID”, which has defined values as follows:

Board ID	Description
0x00	Reserved ID of the Float CCU controller
0xFF	Broadcasts the message to all boards; Some scenarios do not support broadcasts
Other	An 8-bit ID that was configured to uniquely identify a device in this vehicle

PIBs contain a Board ID that is embedded in Non-Volatile Memory on the board. Custom payload boards can assign their own Task IDs. However, the Board ID must not be duplicated by any device on any single Wave Glider vehicle.

Task ID

The LSB of the address contains the Task ID, which is defined by the individual device. PIBs and other non-CCU devices can select their own addresses.

The following Task IDs are pre-defined for the CCU (board ID 0):

Task ID	Description	Notes
0x00	Main process running on the CCU	
0x01	The command interface on the Float CCU	[1]
0x02	Iridium modem (send Level 2 message)	[2]
0x03	Debug Console interface	[3]
0x04	XBee interface (send Level 2 message)	
0x05	File transfer to shore.	[4]
0x06	Default Host (send Level 2 message)	

Task ID	Description	Notes
0x20	Forward full message to target	[5]

Notes:

[1] Level 2 messages to be executed by the CCU should be directed to Task ID **0x01**.

[2] Telemetry messages should be sent without the Level 2 transaction ID field to Task ID **0x02**. The maximum Level 2 message size is 300 bytes.

[3] Using Task ID **0x03**, a device can request to send literal text to the Console.

[4] New File Available messages should be sent to Task ID **0x05**.

[5] ACKs to Write Console commands should be sent to Task ID **0x20**, prefixed by message routing instructions. See the note on Send/Forward ICD Message.

Other Considerations

Message Routing

Devices that implement this protocol can act as message routers for connected child devices. Responsibilities of the message router are:

- Check messages received and handle any messages bound for the router device, or else forward to children. If the message has an unknown destination, queue for sending to parent when polled.
- Keep track of child devices that have indicated they have messages to send. When polled for pending messages, poll those children that have messages waiting. Message routers should not buffer messages from children.
- Messages with a broadcast Board ID (i.e., **0xFF**) should be forwarded to all children in addition to being processed by the message router.
- Route the **Power Status and Control** message promptly. Broadcast notifications to children when power removal is imminent.

Timeouts and Message Usage

Timeout and retries used for the exchange of messages should be controlled with configuration variables in the device software. The settings and suggested values are:

Setting	Description	Range	Suggest
Data Link Response Timeout	The maximum time (in milliseconds) to wait for Data Link ACK or NAK before attempting retry or discarding. This time is not end-to-end but between communicating peers.	10 to 60000 ms	5000 ms
Data Link Retries	The maximum number of retries to make before failing the transaction. A parent has the option to retry. A child will not retry.	0 to 100	3

Setting	Description	Range	Suggest
Message Receive Timeout	The maximum time (in milliseconds) to wait between bytes of a message before abandoning it.	10 to 60000 ms	100 ms



Note

Messages indicated in any examples represent intended usage and were developed in response to Customer requests. While other use scenarios are possible, please consult with Liquid Robotics on the best course of action, if your requirements are not addressed.

Payload Message Types

Message IDs below **0x1000** are reserved for Liquid Robotics use. Any customer-developed messages specific to their devices must use an ID value greater than **0x1000**.

The reserved Message Types are listed in the following table:

Message Type	Description	Direction	Detail	Broadcast	Reference
0x0000	NAK	Child → Parent	Unable to handle message or request	No	“Generic Payload NAK Data Packet (0x0000)” (page 164)
0x0001	ACK	Child → Parent	Successfully handled message/ request	No	“Generic Payload ACK Data Packet (0x0001)” (page 166)
0x0010	Request ID/ Enumerate	Parent → Child	Parent requests device ID and that of any attached devices	Yes	“Request ID/Enumerate (0x0010)” (page 166)
0x0015	Telemetry	Parent → Child	Forwards telemetry message to payloads that have requested it	Yes	“CCU Telemetry (0x0015)” (page 168)
0x0022	Request Status	Parent → Child	Parent requests status of Child	No	“Request Status (0x0022)” (page 169)
0x0023	<i>Reserved for future use</i>				
0x0024	Send/ Forward Message	Parent → Child	Parent copies a requested message to child node	Yes	“Send/Forward Message (0x0024)” (page 170)
0x0030	Power Status and Control	Parent → Child	Parent notifies Child that power is about to turn off	Yes	“Power Status and Control (0x0030)” (page 172)
0x0040	Request Queued Message	Parent → Child	Parent requests report of any queued message	No	“Request Queued Message (0x0040)” (page 173)

Message Type	Description	Direction	Detail	Broadcast	Reference
0x0041	ACK/NAK Queued Message	Parent → Child	Parent forwards result of message execution	No	“ACK/NAK Queued Message (0x0041)” (page 174)

Notes:

[1] For response messages from child to parent, the high bit (bit 15) of the Original source Msg Type number can be set to indicate that there are messages queued for sending and that they should be read out using Msg Type **0x0040** (Request Queued Message).

[2] For messages from Parent to Child, the high bit of **Msg Type** (0x8000) can be set to indicate that no ACK should be sent in response to the message.

[3] If the ACK is in response to a Request Queued Message (0x0040), it can broadcast.

Payload Message Packet Descriptions

Payload Header Abbreviation

Payload Header details:

Description	Bytes	Explanation
Header	9	Start-of-Frame + Header data

Start-of-Frame and Header Data details:

Field	Bytes
Start-of-Frame	1
Message Size	2
Destination Address	2
Source Address	2
Transaction ID	2

Generic Payload NAK Data Packet (0x0000)

If a recipient cannot properly handle a message or a request, it sends a NAK data packet back to the original sender.

The **Destination Address** is set to the original source address. The **Source Address** is set to the recipient's address. The **Transaction ID** value is set to the Transaction ID in the original request.

Note that the **Msg Type** of the original source message is included in the Message Data. Bit 15 (**0x8000**) can be set to indicate that there are additional NAK response messages.

Depending on the type of NAK, up to **541** bytes of additional information can be returned. Some responses can return an entire Level 2 NAK message including the CRC.

Description	Bytes	Explanation
Header	1	Start-of-Frame
	2	Message Size
	2	Destination Address
	2	Source Address
	2	Transaction ID
Msg Type	2	0x0000
Message Data	2	Original source Msg Type number (bit 15 set if additional messages available)
	1	Message Code: 0: Returning Level 2 NAK Message 1 → 3: Reserved For LRI 4: Program Download Requested 5 → 31: Reserved For LRI 32 → 255: Customer definable
	≤ 541	NAK details or reply data (if any).
Error Chk	2	CRC-16

NAK Message Types are as follows:

Returning NAK Data Message

If the NAK Message Code is 0, the response contains a Level 2 enumerated NAK message including the CRC.

Program Download Requested (Not Implemented)

If the NAK Message Type = 4, the following data structure is returned in the message field:

Description	Bytes	Detail
Program Download Reason	1	0x00: Responding to request to load newly selected program 0x01: Responding to request to load default program 0x02: CRC did not match 0x03: MD5 did not match 0x04: Bad configuration in EEPROM 0x05: Tentative image execution failed
CRC Expected	2	CRC expected for program image
CRC Actual	2	CRC actually computed
MD5 Expected	16	MD5 signature expected for program image

Description	Bytes	Detail
MD5 Actual	16	MD5 signature actually computed (Can be zero if boot loader is not able to compute MD5)
Number of Failed Starts This Image	2	Number of times the boot loader has attempted to start the program, but determined that it had failed (Never increments above 0xFFFF)
Program Type Loaded	1	0x00 : Non-default program loaded 0x01 : Default program loaded

Generic Payload ACK Data Packet (0x0001)

If a message is successfully handled, an ACK data packet will be sent to the original message sender.

The **Destination Address** is set to the original source address. The **Source Address** is set to the recipient's address. The **Transaction ID** value is set to the Transaction ID in the original request.

All ACK responses return the **Msg Type** of the original source message at the beginning of the Message Data. Bit 15 (**0x8000**) can be set to indicate that there are additional ACK response messages.

Up to **542** bytes of additional information can be added. Some ACK responses can return an entire Level 2 message, including the CRC.

Description	Bytes	Explanation
Header	1	Start-of-Frame
	2	Message Size
	2	Destination Address
	2	Source Address
	2	Transaction ID
Msg Type	2	0x0001
Message Data	2	Original source Msg Type number (bit 15 set if additional messages available)
	2	Command Format (0x0001 defined in Appendix A: Command Descriptions)
	≤ 542	ACK details or reply data (if any).
Error Chk	2	CRC-16

Request ID/Enumerate (0x0010)

This payload message requests identifying information about a Device. The message contains bit-maps that indicate which protocols and commands are supported by the CCU. Each Device responds with an ACK or NAK.

An ACK response contains information specifying which CCU protocols the Device supports.

A NAK response indicates that the Device doesn't support any of the protocols. If there is a NAK (or no response), the CCU will not send any messages to the Device.

For this message, the **Message Data** contains two fields:

A 2-byte bit-mask specifies what communication protocols are supported by the CCU.

A 2-byte bit-mask specifies what command formats are supported by the CCU.

The Request ID soliciting command format is:

Description	Bytes	Explanation
Header	9	Start-of-Frame + Header data
Msg Type	2	0x0010
Message Data	2	Bit mask of protocols supported by the Float CCU. 0x0001: Existing Device Protocol. All other bit mask values are reserved by LRI.
	2	Mask of command formats accepted by the Float CCU. 0x0001 = Existing Vehicle-to-remote applications commands.
Error Chk	2	CRC-16

In the specific case where the message is sent as a broadcast, the device should resend the request to its children and should concatenate responses. The receiving devices should only respond if they can communicate using at least one of the Float CCU protocols.

ACK Reply to Enumerate Message

Multiple device information blocks can be returned when multiple responses are aggregated, for example, in the case of a PIB that has daisy-chained devices or other PIBs. Up to 5 devices are currently supported on each payload port. This is done using an ACK with the format shown below:

Description	Bytes	Data Type
Header	9	Start-of-Frame + Header data
Msg Type	2	0x0001
Message Data	2	Original source Msg Type number (bit 15 set if additional messages available)
	2	Number of devices responding (maximum 5)
	2	Number of devices in this message (must be equal to the number of devices responding)
	50	1st Device Information Block (see below)
	50	2nd Device Information Block
	...	
	50	Nth Device Information Block (if necessary)
Error Chk	2	CRC-16

Device Information Block Format

All Device Information Blocks use the following format:

Description	Bytes	Value	Detail
Version	2		Device Information Version Format number: 1 : This format
Device Type	2		0x0000 – 0x1000 are reserved for LRI 0x1001 – 0x7FFF are allowed for customer use
Address	2		[Board ID + Task ID] Address of responder [1]
Serial Number	6	ASCII	Optional Manufacturer's serial number for the device, as ASCII characters. Padded on right with zeros (null terminators). A completely null string is allowed.
Location/Port	1	0	This field is reserved and should be set to zero (0)
Polling Frequency	4	Any	The requested number of seconds between polling operations, using the Request Status message
Want Extra Info	1	0x00 – 0x0F	Bit masks indicating whether a component wants to receive event notifications from the Float. 0x01 : Telemetry information desired 0x02 : Power information desired 0x04 : Event information desired 0x08 : Command ACK/NAK desired The upper 4 bits (0xF0) are reserved for LRI and should be set to 0
Firmware (Major)	1		Integer
Firmware (Minor)	1		Integer
Firmware (Revision)	2		Integer
Description	20	ASCII	Human-readable description of device. ASCII text field, padded on the right with spaces

CCU Telemetry (0x0015)

If requested in a Device Information Block, the Float CCU sends Telemetry to each device at a user-configurable rate. The rate is set as the fastest of all the rates (shortest interval) requested in the Device Information Blocks.

The Telemetry message sent to the devices is a duplicate of the Level 1 telemetry sent to shore using a relay link. The structure ID from the telemetry message determines how the message content is decoded. The message packet format is:

Description	Bytes	Data Type
Header	9	Start-of-Frame + Header data
Msg Type	2	0x0015
Message Data	1	Structure ID for Telemetry data
	≤ 544	Level 1 Telemetry data

Error Chk	2	CRC-16

The response to this message is either an ACK or NAK with message content empty. As with any ACK/NAK, a device can signal if there are messages queued to be read. Sometimes telemetry is forwarded using a broadcast and the “no ack” flag is set, in which case no reply is sent.

Request Status (0x0022)

This is the basic polling message. It is also used to update various commonly needed values.

Description	Bytes	Data Type	Detail
Header	9	Start-of-Frame + Header data	
Msg Type	2	0x0022	
Message Data	6	Time (UTC)	One byte per field. Bytes in order: 0: Second (0 – 59) 1: Minute (0 – 59) 2: Hour (0 – 23) 3: Day of Month (1 – 31) 4: Month (1 – 12) 5: Year since 2000 (0 – 255)
	4	Latitude	-90° < Latitude ≤ +90° Current Latitude encoded as a 32-bit floating-point number. Note [1]
	4	Longitude	-180° < Longitude ≤ +180° Current Longitude encoded as a 32-bit floating-point number. Note [2]
	1	Fix Valid?	Single character: ‘Y’ = Latitude and Longitude are valid ‘N’ = Latitude and Longitude are not valid
Error Chk	2	CRC-16	

Notes:

[1] Latitude = $degrees * 600000 + minutes * 10000 + minute\_fraction$. [-90 < *degrees* ≤ 90]
[0 ≤ *minutes* < 60] [0 ≤ *minute_fraction* < 10000] If *degrees* < 0, location is in the Southern hemisphere

[2] Longitude = $degrees * 600000 + minutes * 10000 + minute\_fraction$. -180 < *degrees* ≤ 180.
0 ≤ *minutes* < 60. 0 ≤ *minute_fraction* < 10000. If *degrees* < 0, location is in the Western hemisphere

ACK Reply to Request Status

The response to the Request Status is returned in an ACK packet.

As with any ACK, the device can signal if there are messages queued to be read.

In the case of a broadcast, the CCU or a PIB will retransmit the message to its connected devices and will accumulate responses. Depending upon the message, multiple response messages may be needed.

The Status ACK returns one or more blocks of status information for the responding devices. As described below, there are two Status Block versions with different formats.

Description	Bytes	Data Type
Header	9	Start-of-Frame + Header data
Msg Type	2	0x0001
Message Data	2	Original source Msg Type number (bit 15 set if additional messages available)
	2	Total number of responses (must be 1)
	2	Number of responses in this message (must be 1)
	12	1st Status Block
CRC-16	2	

Status Block, Version = 1

The only defined return type is version 1. The Version and Address fields must be set with real values, but the remainder of the block can be set to zero (0) if there is nothing to report.

Description	Bytes	Explanation
Version	2	0x0001
Address	2	Address of responding device
Alarms	2	Alarm flags (16 bit-field flags)
Leak Sensor 1	1	Status of leak sensor #1
Leak Sensor 2	1	Status of leak sensor #2
Humid Temp	1	Temperature from humidity sensor (°C)
Relative Humidity	1	% Humidity
Pressure Temp	1	Temperature from pressure sensor (°C)
Pressure	1	Air pressure (kPa)

Send/Forward Message (0x0024)

This message is used to send or to forward Level 2 data packets to a device (messages that conform to the vehicle-to-remote applications protocol). These packets have either been requested as copies (of telemetry, for example) or are meant for interaction with systems external to the vehicle. For example, the Level 2 Write Console Script message is sent using Send/Forward Message.

The format is:

Description	Bytes	Data Type	Detail
Header	9	Start-of-Frame + Header data	

Description	Bytes	Data Type	Detail
Msg Type	2	0x0024	
Message Data	1	Flag	Indicates whether this is a Forward or a Send as: 0x00 : Forward [1] 0x01 : Send [2]
	2	Command Format	Mask of command formats accepted that this message conforms to: 0x0001 : vehicle-to-remote applications commands
	≤ 541	Level 2 Packet	The Level 2 packet containing the message, including the CRC.
Error Chk	2	CRC-16	

Notes:

[1] In the "Forward" case the command is only informational and typically no ACK is requested.

[2] In the "Send" case, the command is expected to be executed.

ACK for Forward

If an ACK is requested for the "Forward" case (not typical), the response is an empty ACK message.

ACK for Send

If an ACK is requested for the "Send" case, the ACK packet carries the response type expected by the Level 2 message encapsulated as follows:

Description	Bytes	Data Type
Header	9	Start-of-Frame + Header data
Msg Type	2	0x0001
Message Data	2	Original source Msg Type number (bit 15 set if additional messages available)
	≤ 542	Level 2 response message, including the CRC
Error Chk	2	CRC-16

Note that responding to Write Console is a special case: respond with a basic ACK (Level 2 type 0x13) and the transaction ID, but with a zero-length message payload. Responses to the Write Console message are queued up as follows:

Description	Bytes	Data Type
Header	9	Start-of-Frame + Header data
Msg Type	2	0x0001
Message Data	2	Request Queued Message type (0x40) (bit 15 set if additional messages available)

Description	Bytes	Data Type
	1	Message format (2; 1= remote applications-to-vehicle message, 2=vehicle-to-remote applications message)
	2	Destination address (saved from the source of the Send/Forward Message)
	2	Source address
	≤ 537	Level 2 response message, including the CRC
Error Chk	2	CRC-16

Power Status and Control (0x0030)

This message is sent to notify a device of an intended power shutdown.

Description	Bytes	Data Type	Detail
Header	9	Start-of-Frame + Header data	
Msg Type	2	0x0030	
Message Data	1	Command Type	Numerical flag value: 0x00 : Notification of power Off
	1	Board Affected	Reserved value: 0x00 : Recipient Device
	1	New Power State	0x00 : Power Off
Error Chk	2	CRC-16	

ACK Response to Power Status and Control

Multiple response blocks can be returned in an ACK with the format shown below.

Description	Bytes	Data Type
Header	9	Start-of-Frame + Header data
Msg Type	2	0x0001
Message Data	2	Original source Msg Type number (bit 15 set if additional messages available)
	2	Number of total devices responding (1)
	2	Number of responses in this message (1)
	6	Power State Record
Error Chk	2	CRC-16

Power State Record Format

The Power State Records all use the following format:

Description	Bytes	Detail
Address	2	Address of responder

Description	Bytes	Detail
Board ID Number	1	The ID of the board number affected
Power State	1	Flag value: 0x00 : Board is shut down 0x01 : Board is currently operating
Power Off Delay	1	The minimum number of seconds to wait after receiving the ACK before powering Off
Power On Delay	1	The minimum number of seconds to wait after powering Off before powering On again

Request Queued Message (0x0040)

This packet is sent when a previous message has indicated that there is at least one message waiting to be read.

Description	Bytes	Explanation
Header	9	Start-of-Frame + Header data
Msg Type	2	0x0040
Error Chk	2	CRC-16

NAK Response to Request Queued Message

Normally, there is no need to negative-acknowledge Request Queued Message since it is only sent when the board has previously indicated that there is a message waiting. If there is no data to be read, the following NAK is returned:

Description	Bytes	Explanation
Header	9	Start-of-Frame + Header data
Msg Type	2	0x0000
Message Data	2	Original source Msg Type number
	1	0x02 (Invalid Data)
	2	Length = 0x00
Error Chk	2	CRC-16

ACK Response to Request Queued Message

If there is a message waiting, the response format is:

Description	Bytes	Explanation
Header	9	Start-of-Frame + Header data
Msg Type	2	0x0001
Message Data	2	Original source Msg Type number (bit 15 set if additional messages available)

Description	Bytes	Explanation
	≤ 542	Data message to be passed to destination
Error Chk	2	CRC-16

The format of the data message is dependent on the target address.

ACK/NAK Queued Message (0x0041)

When a payload executes a command by sending the appropriate message to a target device, this message carries back the result of that command. For example, a payload could:

1. Queue up a Set Rudder Position command, targeting address 1 (the Float CCU command interpreter). The format to target the command interpreter (address 1) is:

Description	Bytes	Explanation
Header	9	Start-of-Frame + Header data
Msg Type	2	0x0001
Message Data	2	Original source Msg Type number (bit 15 set if additional messages available)
	2	Message format (1)
	≤ 540	Level 2 data to be executed
Error Chk	2	CRC-16

2. Respond to Request Status and indicate that there are messages waiting to be read.
3. Respond to Request Queued Message with the queued Set Rudder Position message.
4. When the command is executed by the Float CCU, it sends ACK/NAK Queued Message with the result of the command execution.

Description	Bytes	Explanation
Header	9	Start-of-Frame + Header data
Msg Type	2	0x0001
Message Data	2	Command Format: 0x0001 : ICD Format
	2	Response Code: 0x00 : ACK 0x01 : NAK - Unknown Command 0x02 : NAK - Invalid Data 0x03 : NAK - Unable to Complete 0x04 : NAK - Unknown Format
	≤ 540	The response message (if any)
Error Chk	2	CRC-16

The response to this message is an ACK with no payload, or a NAK with no accompanying data.

Message Protocol Use Cases

Different use scenarios and the sequence of actions taken for each are shown in the following sections.

Bold text indicates a command (or ACK/NAK response)

Italic text indicates an action taken

[Italic] indicates a comment

Bold text indicates a command (or ACK/NAK response)

Italic text indicates an action taken

[Italic] indicates a comment

Normal Polling Update Time and Location

This case shows a PIB trying to send a Request Status command to a Device.

PIB		Device
Request Status	→	<i>Data link verifies CRC and transport packet.</i>
		<i>[Device interprets message, sets timestamp and saves location.]</i>
<i>Data link verifies CRC and transport packet.</i>	←	ACK (single response, no queued messages, version 0)
<i>[PIB handles status request reply.]</i>		

Start-up Identification Broadcast

PIB		Device
<i>[PIB waits for a specified or assumed time after start-up before attempting to communicate.]</i>		
Request ID/Enumerate	→	<i>Data link verifies CRC and transport packet.</i>
		<i>[Device interprets message and verifies compatibility with Float CCU Protocol Mask. Device reads its Serial Number and Board ID from non-volatile RAM or other storage.]</i>
<i>Data link verifies CRC and transport packet.</i>	←	ACK (single response, no queued messages)
<i>[PIB forwards response to requester, then maps Address field of response to</i>		

PIB		Device
<i>a Port to build a routing table for future messages.]</i>		

Device Receives File from Remote Application

PIB		Device
<i>[remote application sends a file tagged for this Board ID. The file is stored in the file system on the Float CCU. After the write completes, the file is checked, and the process of sending the file to the device begins. Both the PIB and the Device must be powered on for the file to be forwarded.]</i>		
Send/Forward Message (send Initialize File Write)	→	Message layer verifies the message CRC and transport fields.
		<i>[Space is reserved for the file on the device, and initial verification checks are made. Application-specific logic can be applied to determine what the file contains based on the file name or the content of the first block of data.]</i>
Message layer verifies the message CRC and transport fields.	←	ACK (Write File ACK)
<i>[ACK message is forwarded to Float CCU, which schedules the next packet.]</i>		
Send/Forward Message (send Write File Block)	→	Message layer verifies the message CRC and transport fields.
		<i>[Data is written to file or storage.]</i>
Message layer verifies the message CRC and transport fields.	←	ACK (Write File ACK)
<i>[ACK message is forwarded to Float CCU, which schedules the next packet.]</i>		
<i>[Float CCU continues to send Write File Block until all blocks are transferred.]</i>		
Send/Forward Message (send Get File List, indicating the specific file that was sent and asking for the file to be checked)	→	Message layer verifies the message CRC and transport fields.
		<i>[The file CRC and MD5 are checked against the expected values from Initialize File Write.]</i>
Message layer verifies the message CRC and transport fields	←	ACK (Get File List Data)
<i>[Float CCU sends File At Destination event to remote applications.]</i>		<i>[File is now resident on device; this event can be used to interpret the file if</i>

PIB		Device
		<i>it is actually a command or a parameter set.]</i>

Send File from Device to Remote Application

PIB		Device
		<i>[Device finishes creating a new data set to be sent to remote applications.</i>
Request Status	→	<i>Message layer verifies CRC and transport packet.</i>
		<i>[Interprets message, sets timestamp and saves location.]</i>
<i>Message layer verifies CRC and transport packet.</i>	←	ACK (single response, have queued messages, version 0)
<i>[Handles status request reply.]</i>		
Request Queued Message	→	<i>Message layer verifies CRC and transport packet.</i>
		<i>[Selects the next message in its queue to be sent.]</i>
<i>Message layer verifies CRC and transport packet.</i>	←	ACK (response with New File Available message tagged for File Transfer to remote application Task ID)
<i>[Float CCU sends New File Available message to shore side using the configured method.]</i>		
ACK/NAK Queued Message (simple ACK)	→	<i>Message layer verifies CRC and transport packet.</i>
<i>Message layer verifies CRC and transport packet.</i>	←	ACK (no accompanying data)
<i>Float CCU is informed of result.</i>		
<i>[Remote application evaluates whether the file should be uploaded according to rules configuration, and initiates a Read File request. Float CCU starts a Read File operation to buffer the file in the Float CCU file system, before transmitting.]</i>		
Send/Forward Message (send Read File, indicating the specific file that was advertised)	→	<i>Message layer verifies CRC and transport packet.</i>
		<i>[Device allocates a read operation context that can return chunks of the file. Saves the requester and the transaction ID as all resulting blocks will be returned using the same path.]</i>
<i>Message layer verifies CRC and transport packet.</i>	←	ACK (Read File ACK containing the first block of data requested. Indicates more data available, if more blocks are to be read from the file.)

PIB		Device
<i>[Float CCU stores the file chunk in its file system and schedules next check for this device.]</i>		
Request Queued Message	→	Message layer verifies CRC and transport packet.
		<i>[Device selects the next message in its queue to be sent, which is a Read File ACK.]</i>
Message layer verifies CRC and transport packet.	←	ACK (responds with Read File ACK message tagged with requester's address)
<i>[Float CCU stores the file chunk in its file system and schedules next check for this device.]</i>		
<i>[The Float CCU continues its scheduled polling and receives all chunks of the file. It then begins to respond to the Read File request and sends the file in chunks to the remote requester. When the requester has received the entire file, it issues Read File Transaction Closed to the Float CCU, which deletes the copy of the device's file from its file system.]</i>		

Device Receives Power Off Notification

PIB		Device
Power Status and Control (Notification of Power Off)	→	Message layer verifies CRC and transport packet.
Message layer verifies CRC and transport packet.	←	ACK (single response, power is ON, power off delay 3 seconds, power on delay 60 seconds)
<i>[Float CCU schedules power off.]</i>		<i>[Prepares to shut down.]</i>
<i>[Float CCU turns power off.]</i>		

Send Message to Console

PIB		Device
Request Status	→	Message layer verifies CRC and transport packet.
		<i>[Device interprets message, sets timestamp and saves location.]</i>
Message layer verifies CRC and transport packet.	←	ACK (single response, have queued messages, version 0)
<i>[PIB handles status request reply.]</i>		

PIB		Device
Request Queued Message	→	Message layer verifies CRC and transport packet.
		Device selects the next message in its queue to be sent.
Message layer verifies CRC and transport packet.	←	ACK (responds with Write Console to Client message tagged for the command interface task ID on the Float CCU)
[Float CCU sends message to console.]		
[Send/Forward Message for Write Console Input to the vehicle is likely to be sent without request for ACK, in which case the scenario stops here.]		
ACK/NAK Queued Message (passing result of Initialize File Write request) (marked as No ACK)	→	Message layer verifies CRC and transport packet.

Chapter 9. Payload Development

Mechanical and Electrical Considerations

This chapter provides information on:

- Mechanical and Electrical parameters that may impact the feasibility of a payload integration project.
- Optional Wave Glider accessories designed to save time with payload integration projects.

Float Payload Considerations

There are several parameters that determine float payload integration feasibility:

- Weight
- Center-of-Gravity
- Sail Area Considerations
- Deck Mounting Considerations
- Towing Considerations

Weight

The maximum allowed weight of the Float with standard accessories and all float-mounted payloads is 113.4 Kg (250 lb).

Table 9.1. Weight of Float and Standard Accessories

Component	Weight
Float with Skeg, Handles, Cover Plate, Mast Plate, Motion Isolator, Lift Points, Resilient Tracker, Speed Sensor, Octopus Cables, Cable Guides and Foam Inserts.	35.6 Kg (78.5 lb)
Three Solar Panels (with power cables)	11.6 Kg (25.5 lb)
CCU (includes AIS)	17.0 Kg (37.5 lb)
Weather Station and Marker Light on 1 meter Mast with Flag	1.37 Kg (3 lb)
Radar Reflector Mast assembly	0.91 Kg (2 lb)
Total Weight of Float and LRI Standard Accessories	66.45 Kg (146.5 lb)

Assuming a total weight of 66.45 Kg (146.5 lb) for the Float with LRI standard accessories, the weight of payloads must not exceed 46.95 Kg (103.5 lb).

Table 9.2. Maximum Payload Weight

Component	Weight
Maximum combined weight for all payloads added to the Wave Glider SV3 Float (including LRI standard Float accessories).	46.95 Kg (103.5 lb)

Center-of-Gravity

For maximum efficiency, the horizontal center-of-gravity of the Float must be within a narrow range.

The center-of-gravity value can be verified by placing the Float with the Umbilical and Glider attached in calm water and checking that the Mast Plate pitch angle does not exceed the fore and aft ranges shown in [Figure 9.1](#) and [Figure 9.2](#) below. This procedure is more accurate if performed in salt water, but it can be done in fresh water. Ideally, the Float should be slightly nose-high.

Figure 9.1. Float Max Forward Center-of-Gravity


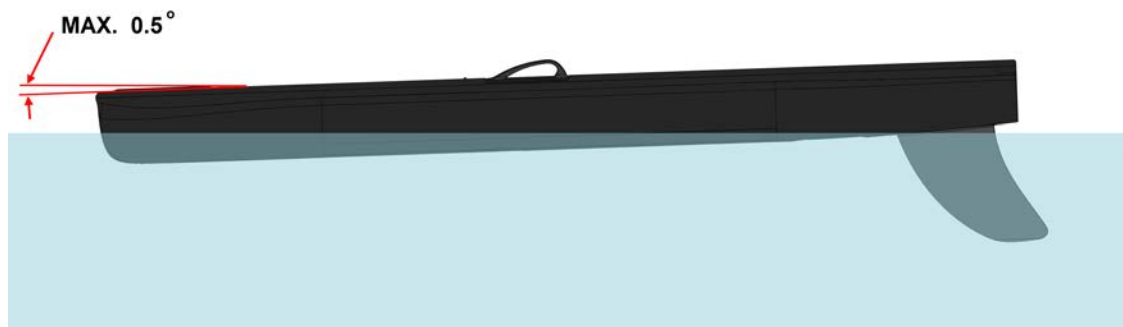


Figure 9.2. Float Max Aft Center-of-Gravity

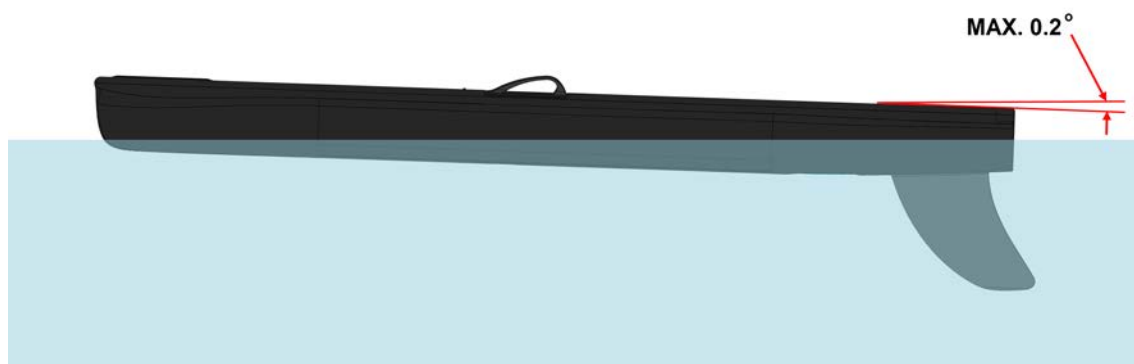


IMPORTANT - Payloads must be ballasted, if necessary, so the Float is **+/- 0.5** degrees from port side to starboard side, when resting in calm water (it cannot list).

Sail Area Considerations

There are limits to the amount of sail area that can be mounted on top of the Float. Payloads with large sail areas should be avoided. Although the underwater Glider acts like a large keel to stabilize the Float, tall masts with large or heavy tops should also be avoided. Contact Liquid Robotics Customer Support before mounting objects on the Float that could create significant sail effects or impact the stability of the Float.

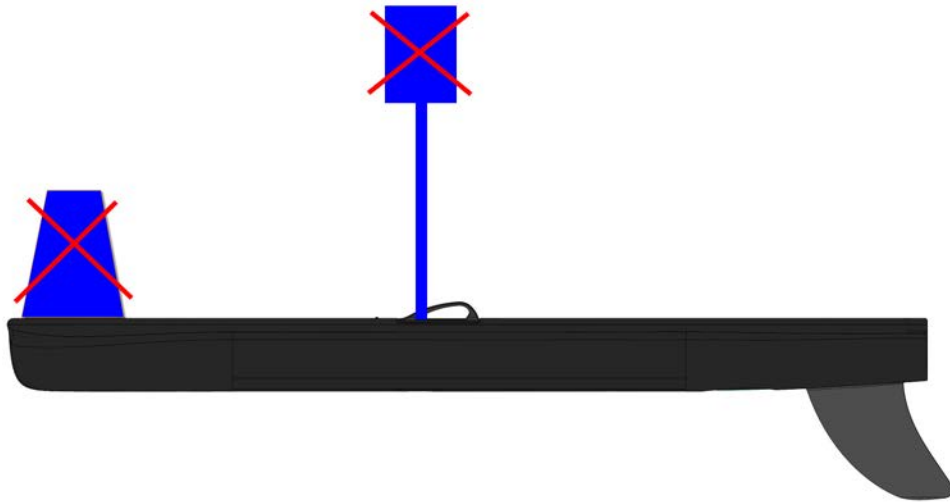Figure 9.3. Possible Sail Area Problems



Deck Mounting Considerations

Mounting payloads to the top of the Float deck may be acceptable, if the payload does not significantly shadow the solar panels (for more information on see [“Shading and Shade Compensation”](#) (page 11)). LRI recommends locating Float-mounted payloads on the Mast Deck, as shown in [Figure 9.4](#). Consult with the LRI Mechanical Engineering Organization before mounting payloads in any other location on the Float deck.


Figure 9.4. Deck Mounted Payloads



Towing Considerations

Small payloads can be towed behind the Float, although the additional drag will slow the vehicle. Consult with the LRI Mechanical Engineering Organization before attempting to tow a payload.

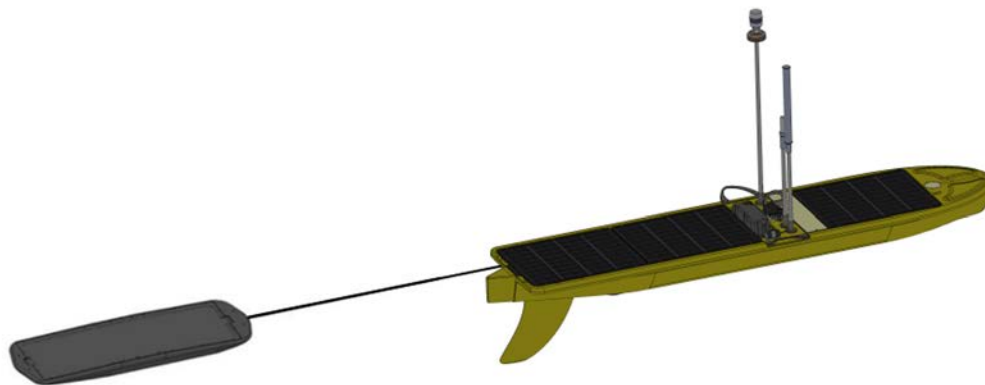Figure 9.5. Towing a Payload Behind Float



Payload Power Considerations

The Wave Glider has specific limitations on the power used by payloads.

Power Requirements - Evaluating Payload Integration Feasibility

To determine the feasibility of a Wave Glider payload integration project, you need to evaluate the payload power requirements relative to the power that is available.

Payload Maximum Currents

Each CCU General Purpose Expansion Port connector is regulated to 14-25 volts at 10 amps.

Each CCU Sensor Port connector is regulated to 13.4 volts at 3 amps.

The CCU High Voltage Port is regulated to 48 volts at 2 amps.

The CCU Umbilical connector provides a power source to the Thrudder Module that is regulated to a maximum of 1 amp.

The Thrudder Module Payload Expansion Port connector is regulated to a maximum of 1 amp.

Attempting to exceed the current limits on any CCU or Thrudder connector will cause a shut-down of the voltage to that output.

Power Requirements - Evaluating Wave Glider Mission Feasibility

To evaluate the feasibility of a payload integration project relative to a specific mission, you need to determine:


- The average and maximum power draw for the Wave Glider system including all payloads.
- The average solar power harvesting capability of the Wave Glider solar panels for the locale and time of year the mission will be active.

Sustainable Payload Power

The Wave Glider™ derives all of its long-term operating power from the solar panels. Under ideal conditions, the three solar panels on the Wave Glider can produce 156 Watts of power (see “[Solar Panels](#)” ([page 10](#)) for solar panel specifications). Depending on locale and time of day, the solar panels will harvest less energy.

[Figure 9.6](#) shows the computed power available to a Wave Glider at different northern latitudes and dates. The graph assumes that cloud cover reduces the solar flux by 25%. However, it does not take into account the larger atmospheric absorption at far-north latitudes.

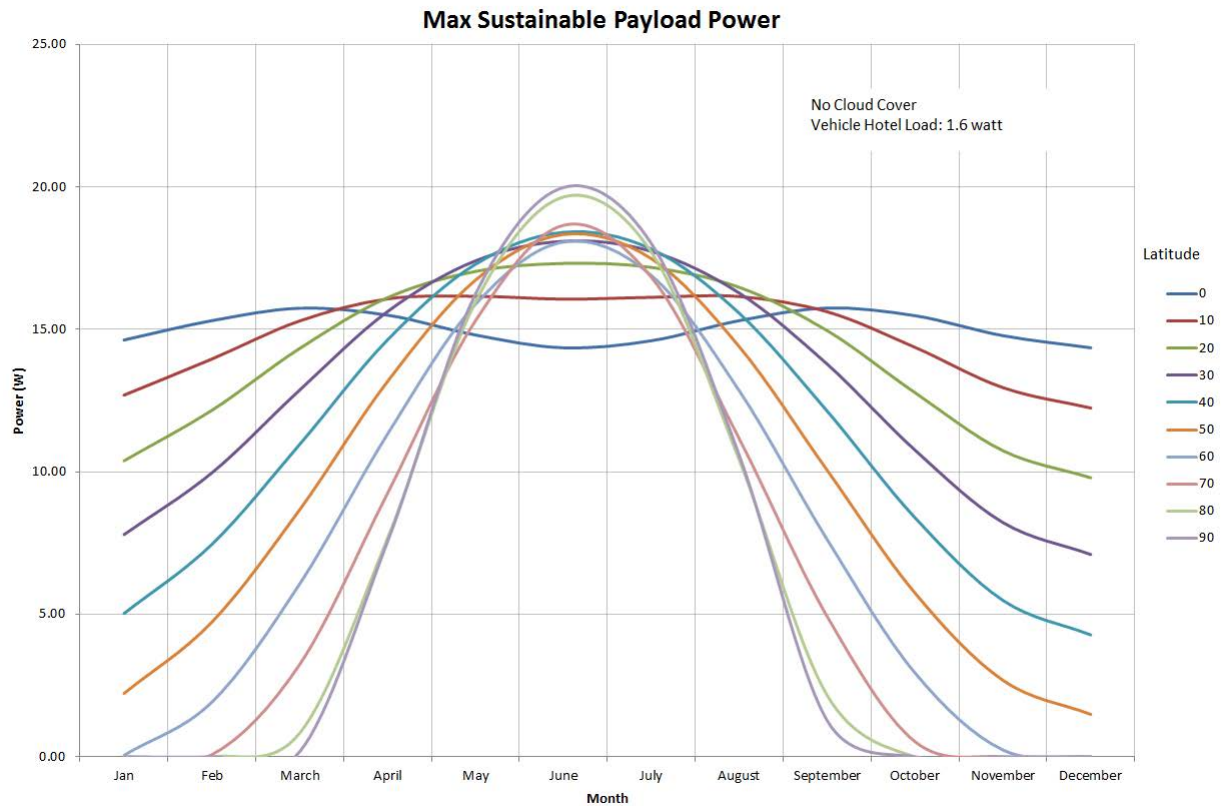Figure 9.6. Solar Power Relative To Time and Location



For sustained missions, the average energy used by the CCU and payload(s) should not exceed the average energy input from the solar panels. Allowance also has to be made for the possibility that, due to storms and cloud cover, the solar energy may be considerably less than average for several days at a time.

To the extent that the average amount of energy used by the CCU and the payload(s) exceeds the average energy input from the solar panels, the battery charge will trend downward, and will eventually be unable to supplement the solar energy input to keep the mission going.

For short duration missions, if the average amount of energy used by the CCU and the payload(s) exceeds the average energy input from the solar panels, it may be possible to complete the mission before the batteries are depleted. There is also the option to increase battery capacity by installing one or more Auxiliary Power Units (APUs). See [“Auxiliary Power Unit \(APU\)” \(page 194\)](#) for more information.

This information is provided to illustrate in general how location and time of year impact solar power harvesting. There are several variables involved in more accurately predicting how long a Wave Glider mission can be sustained based on latitude, time of year, power draw, battery capacity, and other considerations. Contact Liquid Robotics for more information.

Adapting Wave Glider SV2 Payloads for use on the Wave Glider SV3

SV3 payloads are supported on SV3 vehicles only. SV2 payloads are supported on SV2 and SV3 vehicles, however, there are mechanical and electrical considerations that must be addressed to adapt a Wave Glider SV2 payload for use on a Wave Glider SV3 vehicle.

Mechanical Considerations

SV3 payload bays are larger and shaped differently than SV2 payload bays. LRI offers mounting kits for securely installing standard SV2 forward, aft, and short aft payload dry boxes in the payload bay of an SV3 vehicle. All three mounting kits include:

- Two ABS spacers with titanium mounting hardware attach to the mounting rails of the SV3 float providing a secure attachment point for the flange of the SV2 payload dry box.
- A custom milled rigid foam spacer fits firmly under the SV2 payload dry box.

Figure 9.7. SV2 Forward Payload Dry Box - SV3 Mounting Kit (LRI Part Number 04731)

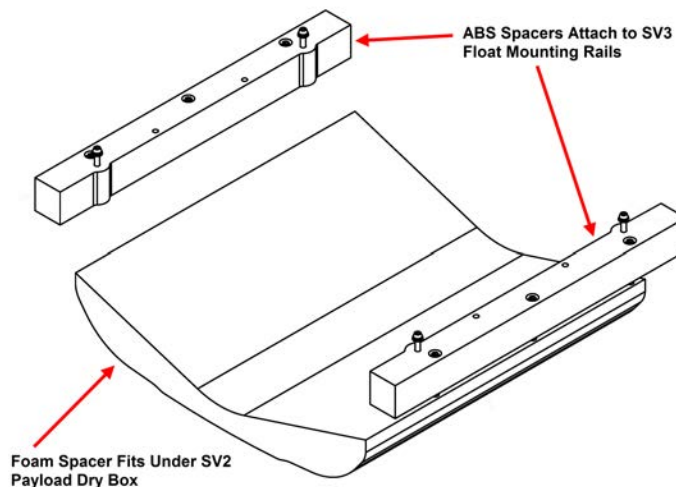


Figure 9.8. SV2 Aft Payload Dry Box - SV3 Mounting Kit (LRI Part Number 04732)


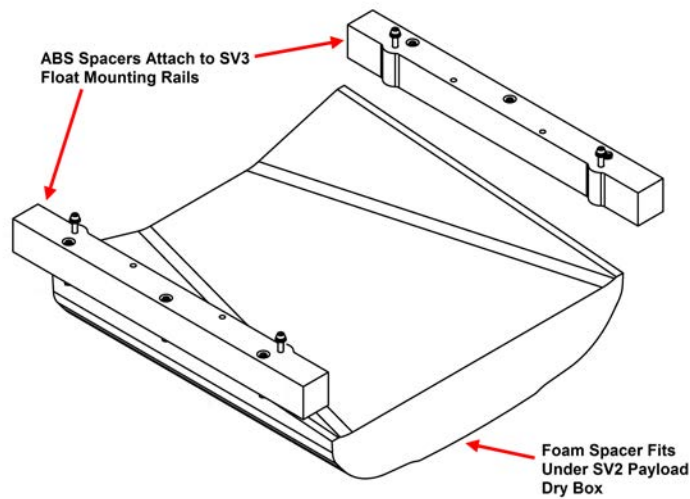


Figure 9.9. SV2 Short Aft Payload Dry Box - SV3 Mounting Kit (LRI Part Number 05224)

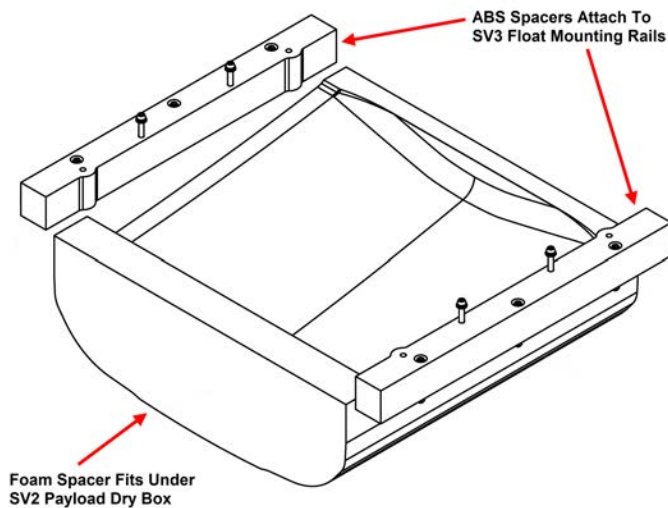

Electrical Considerations

Wave Glider SV2 payloads can be adapted for use with the Wave Glider SV3.

Wave Glider SV2 payloads that run on a 13.4 volt power supply and communicate directly with the SV2 C&C can be connected to the S1, S2, and S3 Sensor ports on the SV3 CCU (the S4 connector is dedicated for use with the Weather Station). The SV3 Sensor ports support the same electrical connectors and the same payload communications protocol that is used on the SV2 Payload ports, but the Wave Glider SV3 Sensor ports are NOT identical to the SV2 Payload ports:

- There are no AUX lines on the SV3 Sensor ports, instead pins 5 and 6 in the SV3 Sensor port connectors support the multi-protocol signal capabilities that are provided by the SMC - specifically: RS-232, RS-422, and RS-485. See “[S1, S2, S3, S4 - Sensor Connectors](#)” (page 48) for more information. If you are considering adapting an SV2 payload that uses the SV2 C&C Payload connector AUX lines (pins 5 and 6), consult with the Liquid Robotics Support Organization to determine how your payload might be adapted to an SV3 electrical environment.
- The GPS baud rate on SV2 vehicles is 4800 baud. On SV3 vehicles the GPS baud rate is 9600 baud.
- The GPS report on SV2 vehicles is different than the GPS report on SV3 vehicles:
 - The order of the sentences is different.
The sentence order for SV2 is: ZDA, GGA, VTG, GST, RMC.
The the sentence order for SV3 is: RMC, VTG, GGA, GLL, GST, ZDA.
 - The SV2 GPS reports 5 sentences - the SV3 GPS reports 6 sentences.
 - The SV3 GPS does not report some of the fields in the GLL, GST, and VTG sentences that are included in the SV2 GPS report.

Sample SV2 GPS Report.

```
$GPZDA,234041.00,25,11,2013,,*61
$GPGGA,234041.00,3724.65048,N,12200.26464,W,2,11,0.83,00000,M,-025,M,,*52
$GPVTG,000.0,T,344.4,M,000.00,N,000.00,K,D*21
$GPGST,234041.00,,127.89,127.88,071.4,011.31,011.31,011.31*48
$GPRMC,234041.00,A,3724.65048,N,12200.26464,W,000.00,000.0,251113,15.6,E,D*2B
```

Sample SV3 GPS Report.

```
$GPRMC,234821.00,A,3724.64995,N,12200.26413,W,0.026,,251113,,,D*6E
$GPVTG,,T,,M,0.026,N,0.048,K,D*2E
$GPGGA,234821.00,3724.64995,N,12200.26413,W,2,12,0.68,10.4,M,-29.9,M,,0000*52
$GPGLL,3724.64995,N,12200.26413,W,234821.00,A,D*76
$GPGST,234821.00,9.2,,,,0.63,0.46,1.3*79
$GPZDA,234821.00,25,11,2013,00,00*6F
```

The electrical specifications, including pin-outs, for SV2 C&C Payload connectors is available in the *Standard Electrical Connections* section of the *Wave Glider® SV2 Interface Control Description*.

For SV3 CCU Sensor Port electrical specifications, including pin-outs, see “[S1, S2, S3, S4 - Sensor Connectors](#)” (page 48).

Modular Payload Dry Boxes

Liquid Robotics Modular Payload Dry Boxes provide a dry environment for payload components and optionally include electronics for electrical and communications connectivity with the CCU.

The forward and aft Float payload bays can be divided into 10 equal sized spaces known as Modular Payload Units (MPUs) as illustrated in [Figure 2.2](#). The two standard Modular Payload

Dry Boxes available from Liquid Robotics conform to the cross-sectional shape of the payload bays in the Float and take up a total of either 1 MPU or 3 MPUs of space.

Liquid Robotics standard Modular Payload Dry Boxes:


- **1-MPU** - This dry box takes up 1 modular payload unit of space in a Wave Glider Float payload bay. See “[1-MPU Payload Dry Box](#)” (page 191) for more information.
- **3-MPU** - This dry box takes up 3 modular payload units of space in a Wave Glider Float payload bay. See “[3-MPU Payload Dry Box](#)” (page 193) for more information.

Each Liquid Robotics Modular Payload Dry Box includes:

- A two piece Molded Noryl case.
- Water-tight electrical and communications connectors to interface with the CCU.
- A pressurization port for interior pressurization with a non-condensing gas before the case is sealed.
- Brass interior mounting bosses for payload component mounting.
- Titanium exterior mounting hardware.
- A nylon carrying handle.

The dry box cases are held together by 316 Stainless Steel slide-clamps that maintain pressure on a Parker E 1100 O-ring for a water-tight seal.

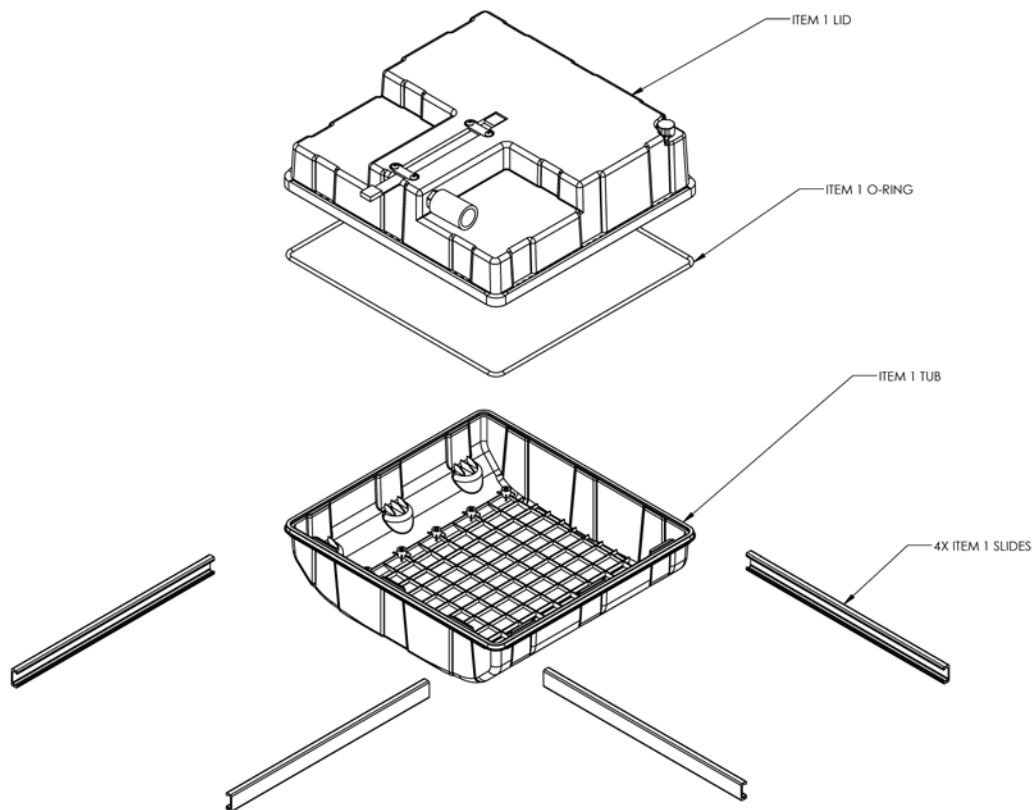Figure 9.10. 3-MPU Assembly



An optional LRI electronics package is available for the 3-MPU - for more information see “[3-MPU Payload Development Kit](#)” (page 195)).

The LRI Auxiliary Power Unit (APU) is a version of a 1-MPU that contains a battery pack and an AMPs power domain. See “[Auxiliary Power Unit \(APU\)](#)” (page 194) for more information.



Note

The CCU enclosure is a version of a 3-MPU.

For general information see:

- “[Command and Control Unit \(CCU\)](#)” (page 8)
- “[CCU Weight and Dimensions](#)” (page 9)

For information on payload electrical connections to the CCU see:

- “[CCU Electrical](#)” (page 33)
- “[G1, G2, G3 - General Purpose Expansion Port Connectors](#)” (page 45)
- “[S1, S2, S3, S4 - Sensor Connectors](#)” (page 48)

Weight of Modular Payload Dry Boxes

The weight of the Liquid Robotics 1-MPU and 3-MPU is an important consideration in evaluating the feasibility of a payload integration project.

Table 9.3. Weight of Modular Payload Dry Boxes

Modular Dry Box Type	Weight
1-MPU (payload dry box only)	2.27 Kg (5.0 lb)
APU	8.39 Kg (18.5 lb)
3-MPU (payload dry box only)	4.54 Kg (10.0 lb)
3-MPU Payload Development Kit (with standard electronics)	6.12 Kg (13.5 lb)
CCU	17.0 Kg (37.5 lb)

1-MPU Payload Dry Box

Figure 9.11. 1-MPU

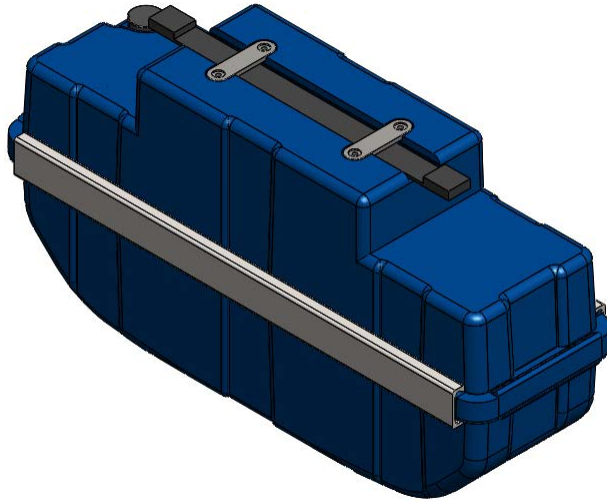


Figure 9.12. 1-MPU Interior Dimensions (mm)


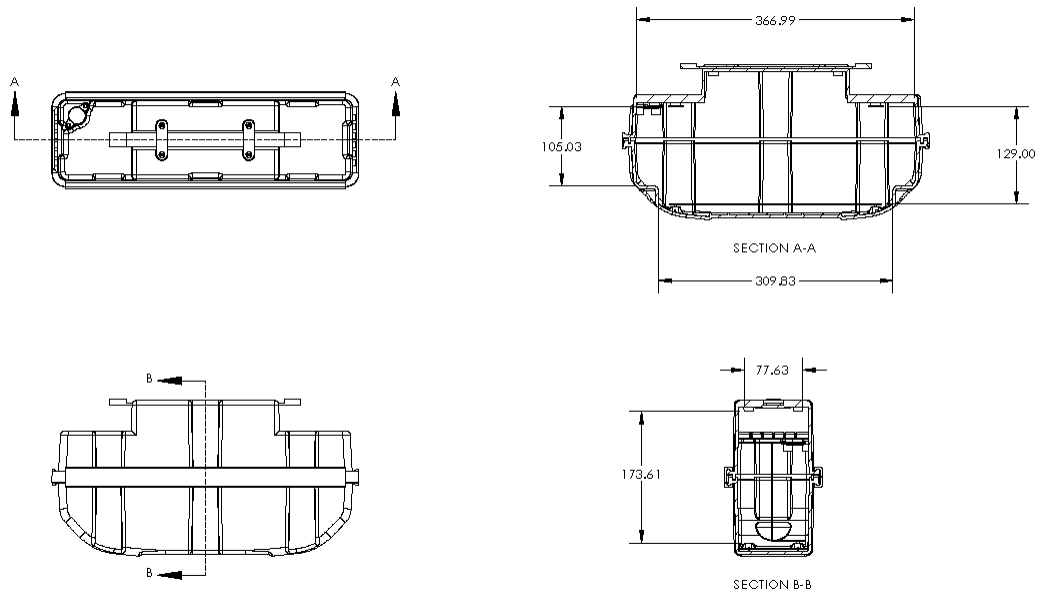


Figure 9.13. 1-MPU Attachment Points (mm)

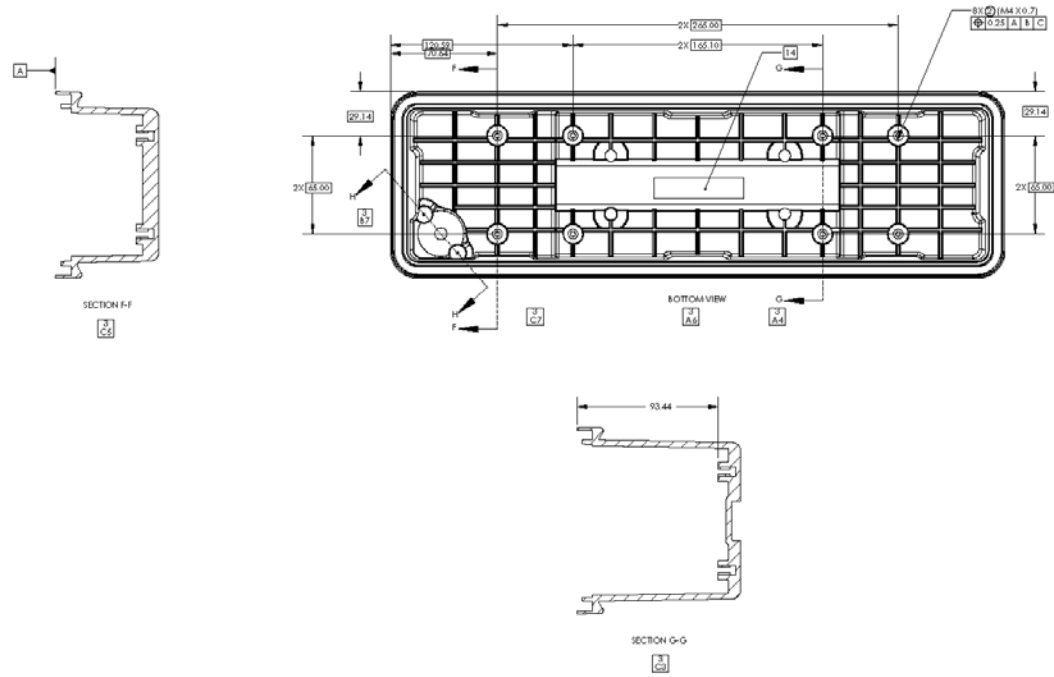

3-MPU Payload Dry Box

Figure 9.14. 3-MPU


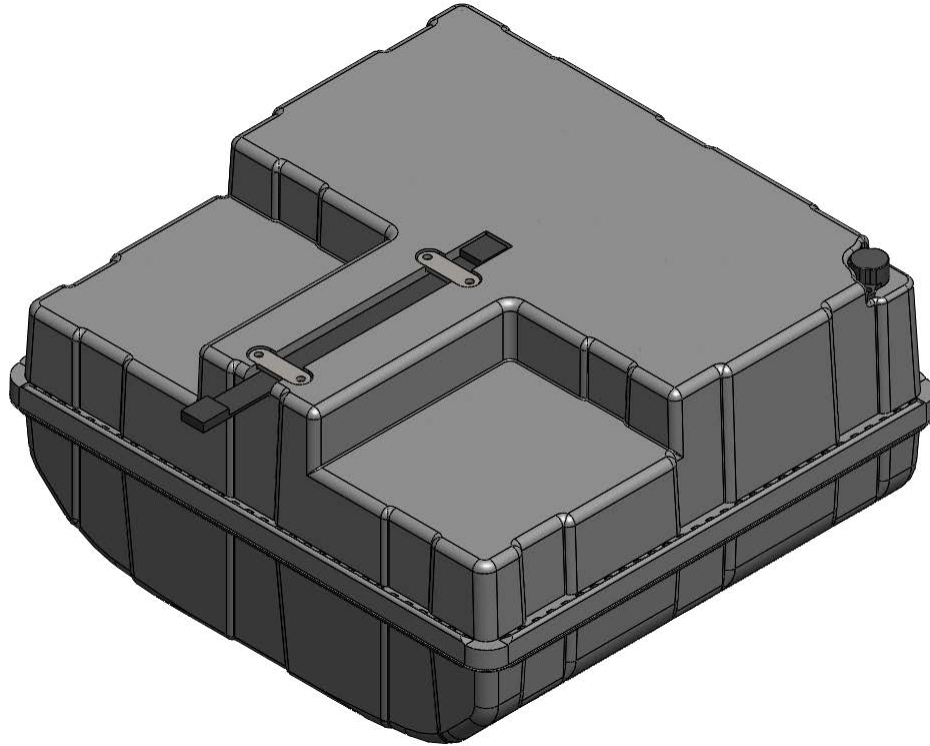


Figure 9.17. Auxiliary Power Unit (APU) Dry Box

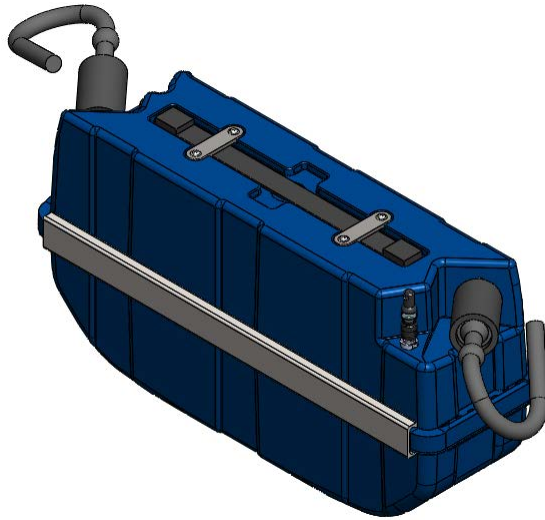

Multiple APUs can be added to a Wave Glider Float, limited by:

- The total weight of all payload components on the Float.
- The space available in the Float payload bays.
- The center-of-gravity for the Float configuration.

For more information see [“Float Payload Considerations” \(page 180\)](#).

APUs must connect to CCU General Purpose Expansion Ports. Multiple APUs can be daisy-chained together with the first APU in the chain connected directly to a CCU General Purpose Expansion Port. Alternatively, each APU can be connected to a dedicated General Purpose Expansion Port.

For information on the APU electrical connectors and instructions on connecting multiple APUs in a Wave Glider configuration see [“APU Electrical Connections” \(page 72\)](#).

3-MPU Payload Development Kit

The LRI 3-MPU Payload Development Kit (Part Number 04767) is designed to simplify payload integration in a Wave Glider SV3 vehicle. The kit includes a 3-MPU Payload Dry Box with the following installed components:

- 8 pin CCU Sensor Port connector
- 12 pin CCU General Purpose Expansion Port connector
- AMPS backplane
- AMPS Power Domain Controller module
- AMPS Bridge module

System Management Computer (SMC)

The 3-MPU Payload Development Kit weighs 6.12 kg (13.5 lb). See “[3-MPU Payload Dry Box](#)” (page 193) for the dimensions of the 3-MPU Payload Dry Box.

Figure 9.18. 3-MPU Payload Development Kit Connectors

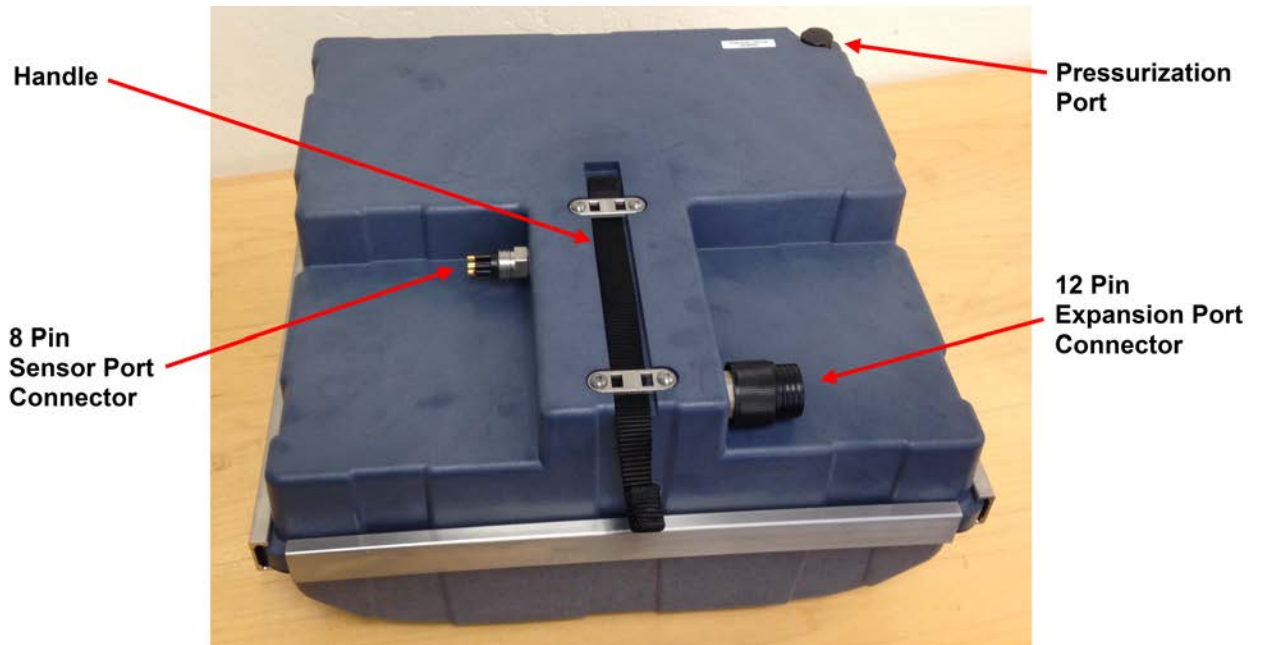


Figure 9.19. 3-MPU Payload Development Kit Electronics


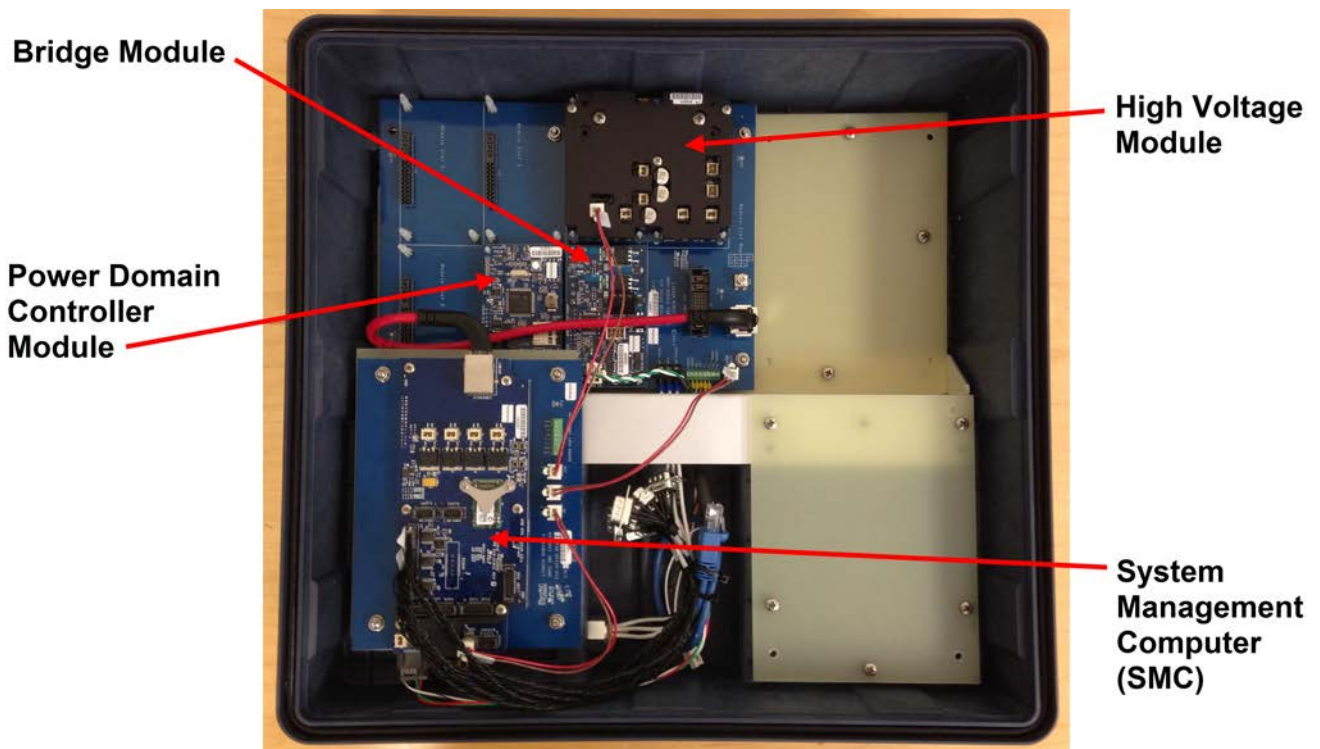


Figure 9.20. 3-MPU Payload Development Kit Electronics Block Diagram

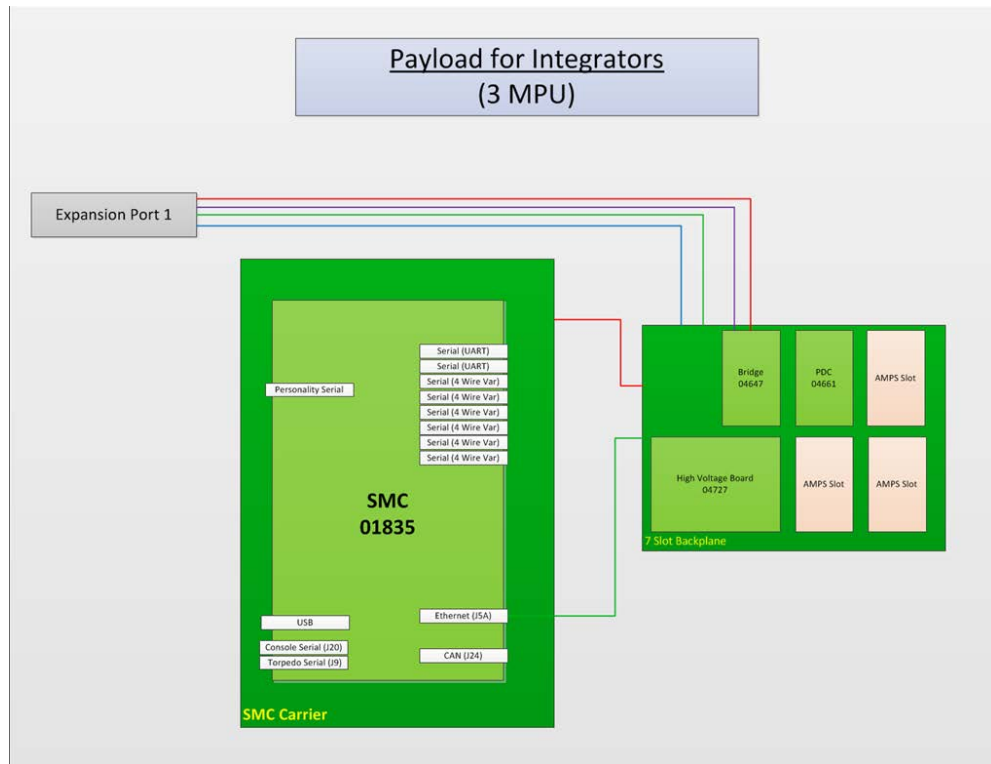

Glider Payload Considerations

Since the Glider is constantly moving underwater, it is important to consider all drag, balance, and flotation issues when designing a payload.

Drag

To maximize the efficiency of the Wave Glider system, the drag of any payload added to the Glider should be minimized both by reducing the frontal cross-sectional area, and by adding streamlined fairings if necessary.

Contrary to what might be assumed, the water flow direction over the Glider is not exactly from front to back. As shown in the two figures below, there is a substantial vertical component to the flow, especially when the Glider is being lifted upward in heavy swells.

Figure 9.21. Glider Moving Up



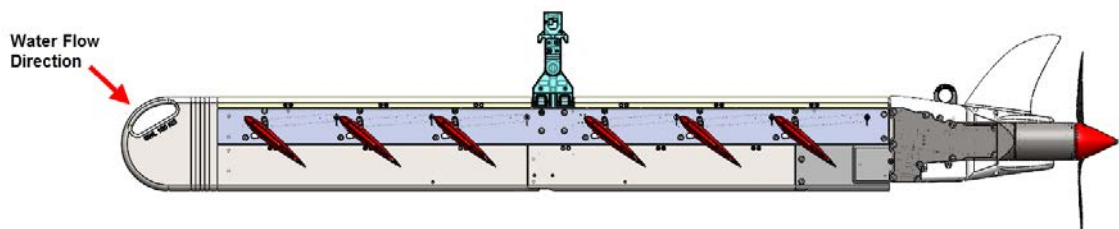


Figure 9.22. Glider Moving Down

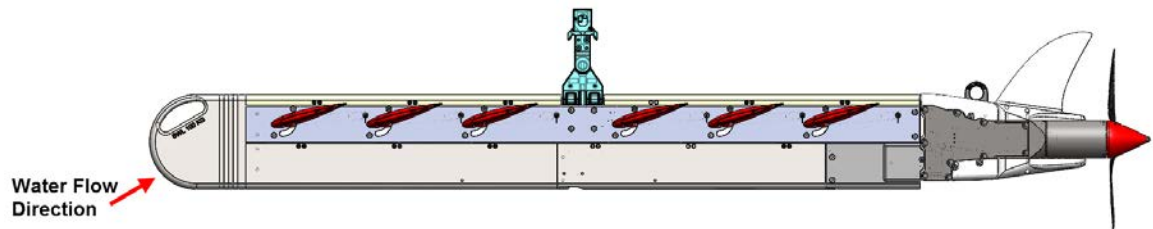

Thus, a seemingly "streamlined" payload, like that shown in [Figure 9.23](#), would create a substantial nose-down force (as well as drag) when the Glider is moving up.

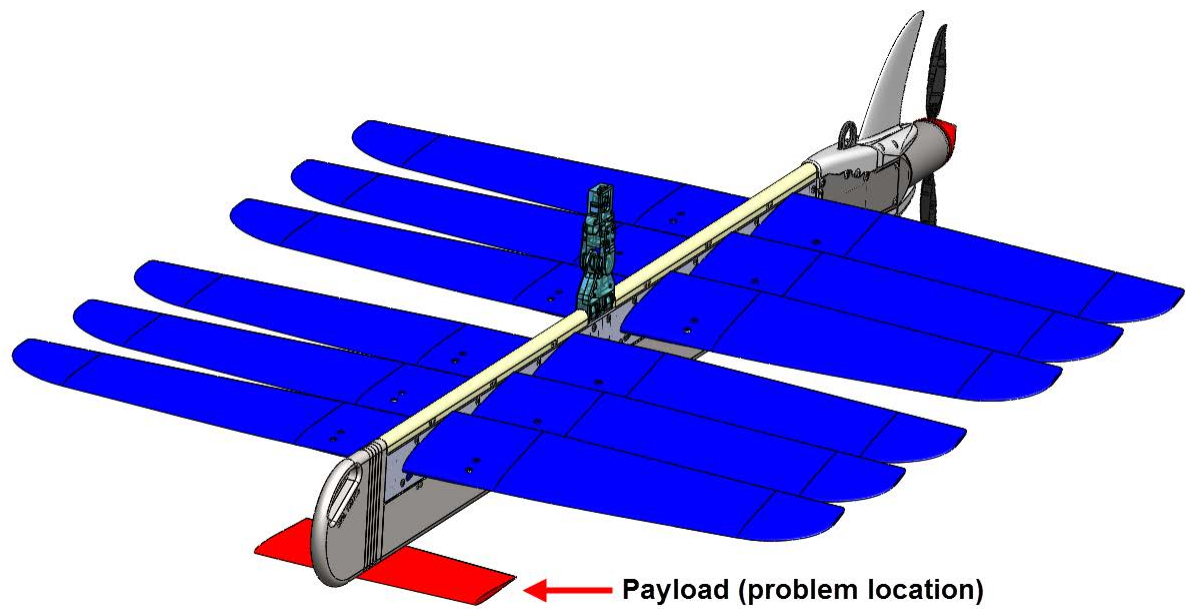Figure 9.23. Poor Payload Design/Location



Glider Ballast

Ballast weights are attached at the nose of the Glider frame as shown in [Figure 9.24](#). As payload is added to the Glider, these weights can be removed or replaced with other weights to adjust the balance and buoyancy.

Figure 9.24. Glider Ballast


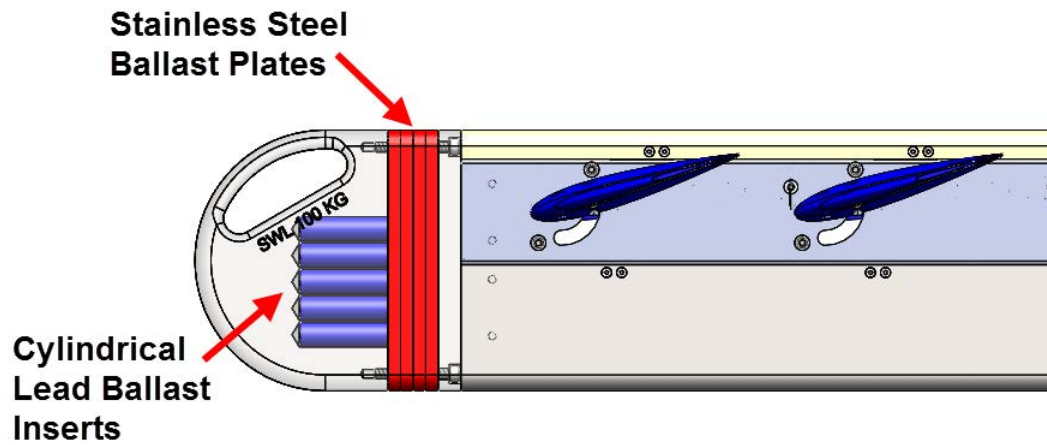



Figure 9.25. Glider Nose Assembly with Ballast

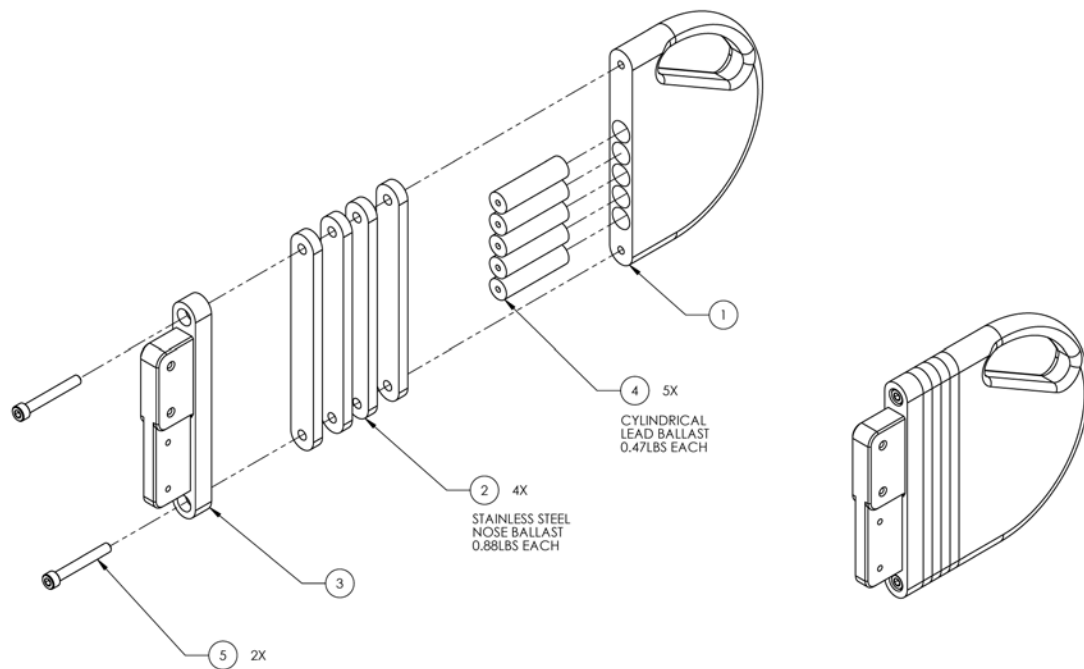

Wing-Payload Interference

Since the Glider wings can rotate upward or downward almost 90° to the vertical position, any payload (or payload cover) mounted within the main frame of the Glider has to accommodate clearance of the wings in their fully rotated position as illustrated in the figure below.

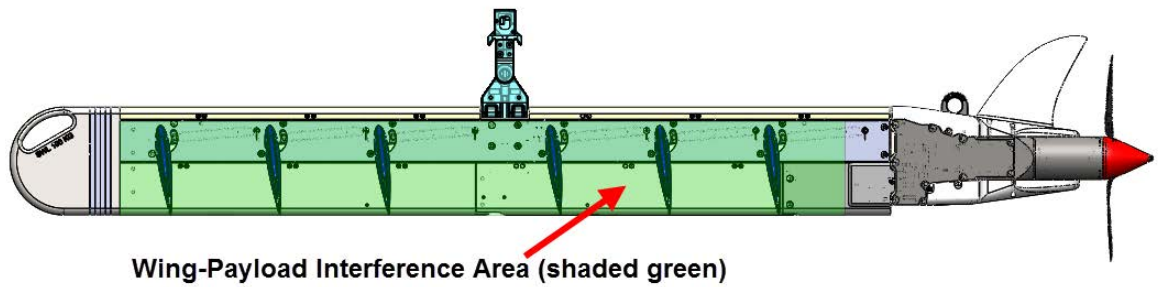Figure 9.26. Wing-Payload Interference Area



Balance and Flotation


A Glider with an added payload needs to be balanced about the Umbilical pivot point. Since the Glider is submerged, the balance needs to be established underwater, to account for both the flotation and the weight of the payload.

The best way to compute the flotation and balance of the Glider is to support it by the Umbilical attach point and check the deck angle while the Glider is submerged. This procedure is more accurate if performed in salt water, but it can be done in fresh water.

The Glider should be either level, or slightly nose-down. The maximum nose-down angle is shown in the figure below.

The Glider should never be ballasted nose-up.

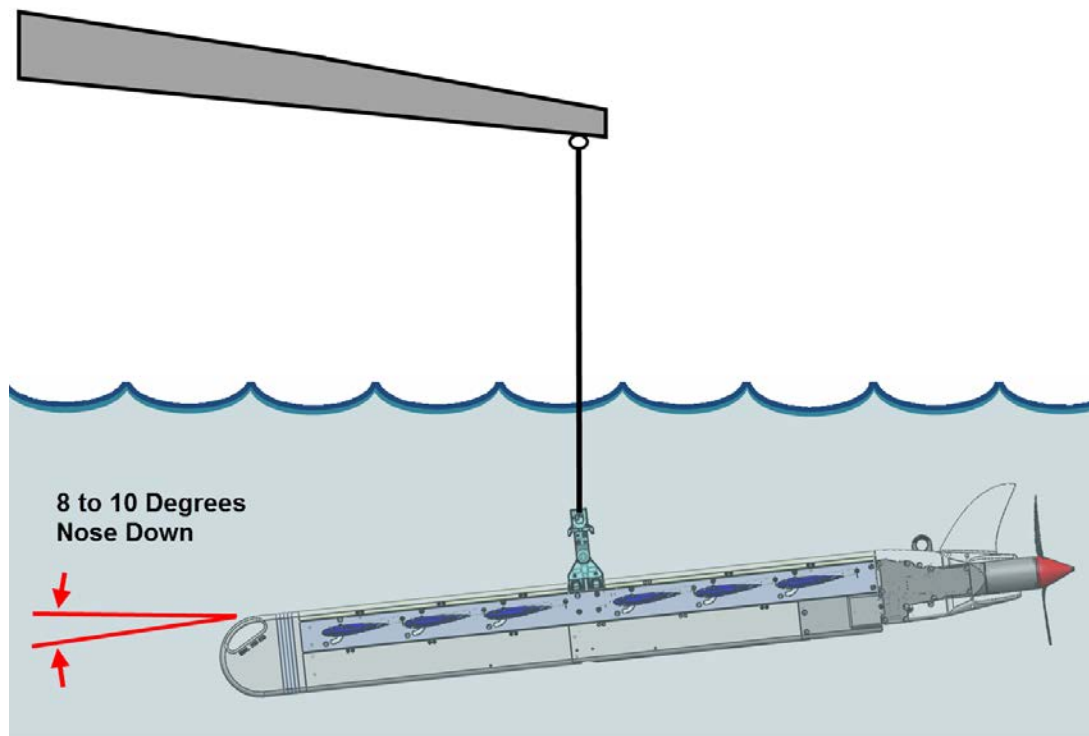Figure 9.27. Checking Glider Underwater Balance




Poor Sail Area Locations

A Glider payload with a large sail area can be a problem if the payload is mounted forward or aft of the Glider, as shown in the figures below.


A large sail area in front of the Glider can destabilize and make it over-sensitive to the rudder.

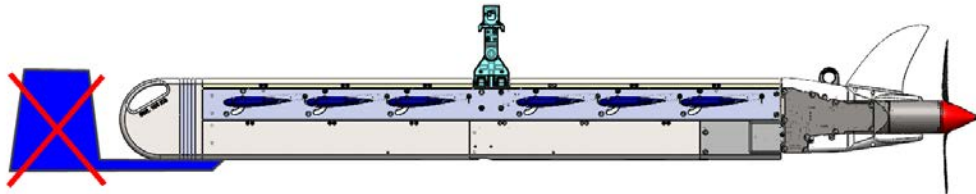Figure 9.28. Excessive Forward Payload Sail Area



Conversely, a large sail area aft of the Glider can over-stabilize and reduce the effectiveness of the rudder.

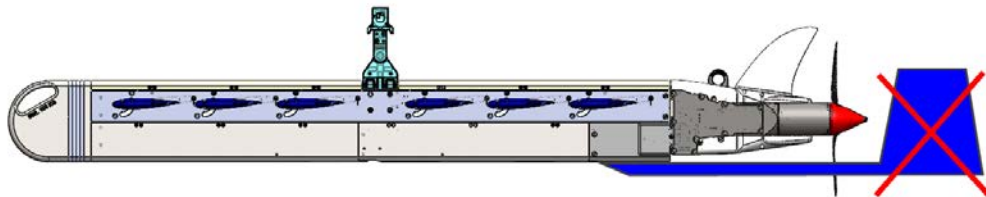
Figure 9.29. Excessive Aft Payload Sail Area



Acceptable Sail Area Locations

Generally, a reasonably-sized payload sail area located below the Umbilical attach point should not materially affect stability, though there can be a significant increase in drag for payloads mounted outside the frame.

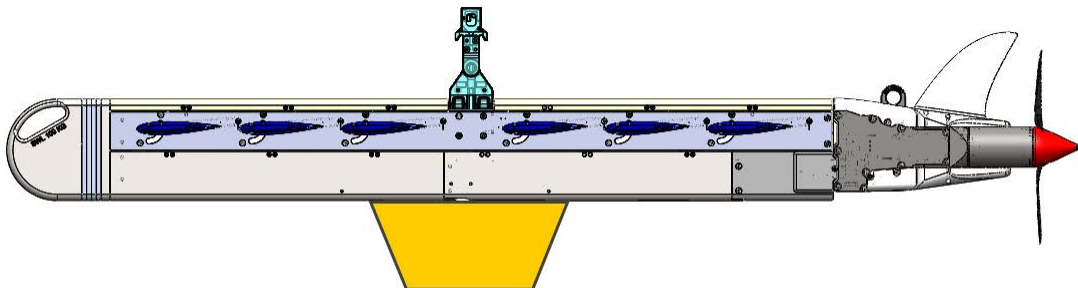Figure 9.30. Acceptable Payload Sail Area Location



Trailing Wires

Trailing wires behind the Glider are generally not recommended, as they can potentially foul the Thrudder. However, if a trailing wire is necessary, then the wire should be mounted near the center of the Glider, and not trail off of the back. In addition to fouling, rear trailing wires can have the same over-stabilizing effect as a large sail area at the aft end of the Glider.

Figure 9.31. Poor Trailing Wire Location (Tow Point)



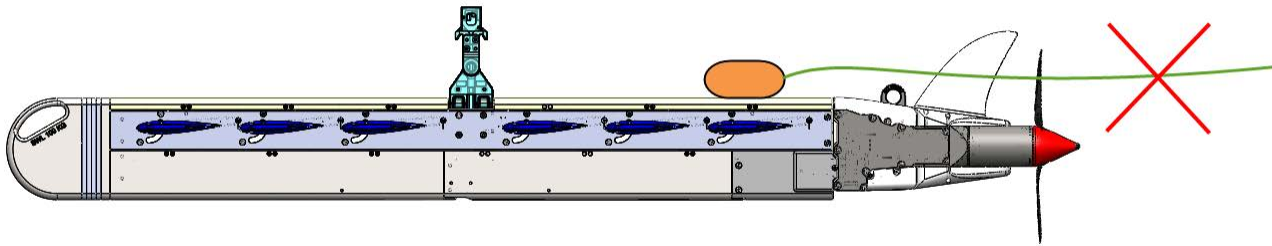


Figure 9.32. Poor Trailing Wire Location (Tow Point)

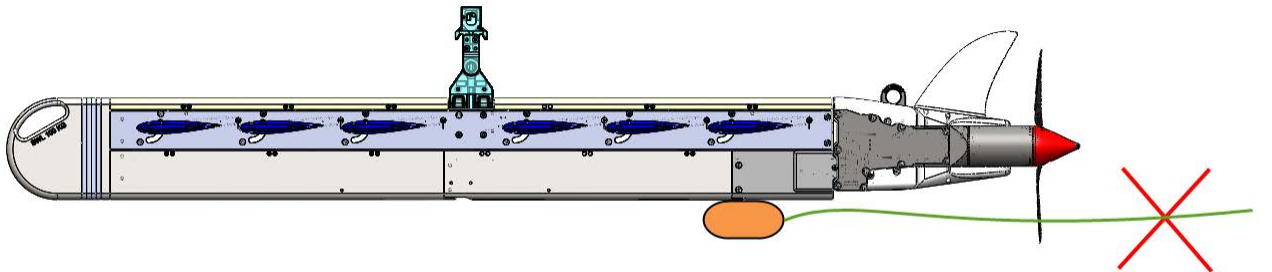

The best location for a trailing wire mounting is on a pylon directly below the Umbilical attach point, as shown in the figure below.

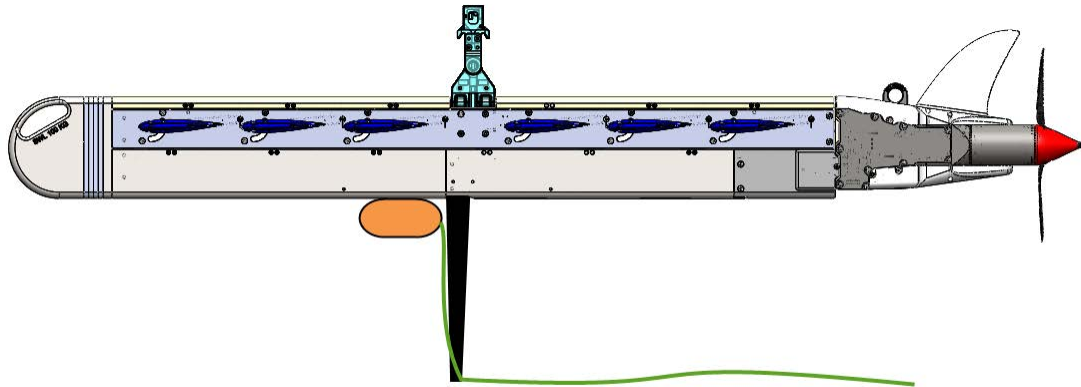Figure 9.33. Acceptable Trailing Wire Location (Tow Point)



Keep in mind that the Glider is continually moving up and down while moving forward. Any trailing wire must be short enough and mounted so it cannot foul the Thruster, regardless of the angle of the wire.

Towfish Payload Considerations

There are a wide range of variables that impact Towfish payload integration. Contact Liquid Robotics for help evaluating the feasibility of a Towfish payload integration project.

For information on Towfish electrical connections, see [“Trudder Module Expansion Port Connector”](#) (page 67).

Chapter 10. Payload Development - Hardware Environment

The SV3 payload development hardware environment is defined by the AMPS backplane, the various AMPS modules, and the System Management Computer (SMC).

- For information on AMPS and the AMPS backplane see “[Adaptable Modular Power System \(AMPS\)](#)” (page 39).
- For information on AMPS modules see “[AMPS Modules](#)” (page 204).
- For information on the SMC see “[Sensor Management Computer \(SMC\)](#)” (page 212).

AMPS Modules

Each AMPS power domain includes a Power Domain Controller (PDC) along with other AMPS modules depending on the power management requirements the configuration.

Power Domain Controller (PDC) Module

The Power Domain Controller module (PDC) is managed by higher level systems through the CCU and also provides those systems with AMPS system status. There is one PDC module in each AMPS power domain. The PDC module communicates with the Vehicle Management Computer in the CCU over CAN to monitor and control all of the other AMPS modules in a power domain. The PDC also includes pressure and temperature sensors to monitor environmental conditions in the dry box that houses the AMPS domain.


Module Data - The following data will be collected:

- Pressure
- Temperature
- A log of communications to and from AMPS modules in the power domain that the PDC controls (for troubleshooting purposes).
- A file system that contains the current firmware versions for all of the AMPS modules in the power domain that the PDC controls.

Figure 10.1. AMPS Power Domain Controller Module (PDC)



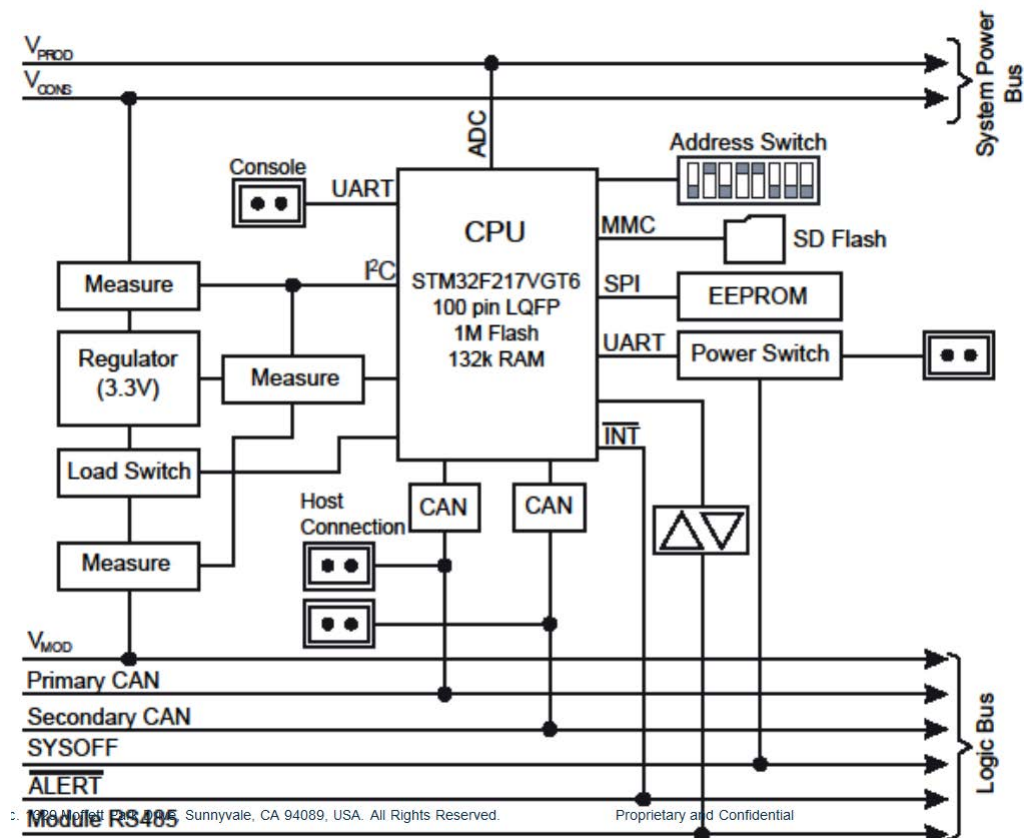Figure 10.2. PDC Electrical Diagram



Battery Charger Module

The battery charger module is designed to control the charge and discharge of two 98 Whr Inspired Energy SMBus smart batteries. There are 5 Battery Charger modules associated with

the 10 batteries in the CCU. There are also 5 Battery Charger modules in each Auxiliary Power Unit (APU), which also contain 10 batteries. Each Battery Charger module contains a feedback circuit to optimize charging and report on the state of the batteries. Batteries consume some power while online. To save power when there is excess capacity, the Battery Charger module can remove batteries from both the VCONS and VPROD bus when they aren't needed.

Module Functions - The Battery Charger module supports the following functions:

- Any battery can be disabled for discharge (it might still be enabled for charging).
- Any battery can be disabled for charging (it might still be enabled for discharge).


Module Data - Battery Charger modules gather and report the following information for each battery they are associated with:

- Battery capacities as estimated by the battery. Offline batteries return the latest estimate.
- Battery voltages (for online batteries only).
- Battery currents (maximum and average) over a 10 minute averaging cycle. Offline batteries report zero current.
- Battery status:
 - Discharge enabled
 - Charge enabled
 - Battery present or not
 - Battery needs calibration
- Number of battery cycles. Offline batteries return the latest reading.
- Battery temperature (for online batteries only).
- Battery estimated capacity error. Offline batteries report the latest reading.
- Battery serial number.
- Battery model number.
- Battery version.
- Battery manufacturer.
- Present charging current limit (or MPPT VPROD voltage).
- Soft battery discharge limit.
- Hard battery discharge limit.

Figure 10.3. Battery Charger Module



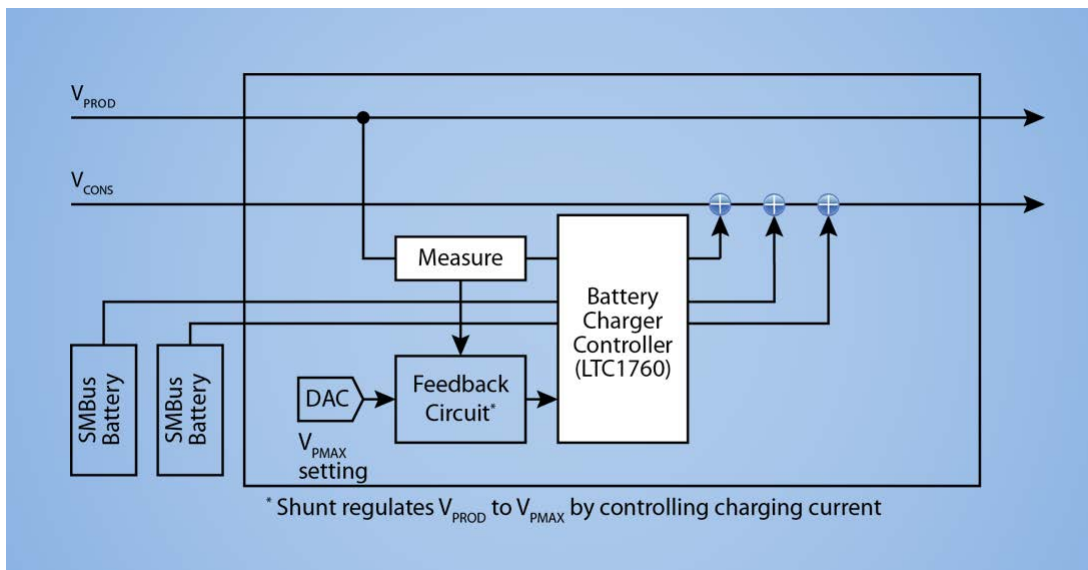Figure 10.4. Battery Charger Module Electrical Diagram



Solar Panel Input Module

A Solar Panel Input module can receive power from one or two solar panels. The output of each solar panel is connected to the VPROD bus that supplies power to replenish the batteries and operate the system. The Solar Input module monitors the energy collected and also provides a way to disconnect the Solar Panel inputs from the VPROD bus, if there is a cable fault.


Module Data - Solar Input modules return the following data:

- Total energy collected.
- Maximum, average and standard deviation of power collected (over a 10 minute non-overlapping sampling period).

Figure 10.5. Solar Panel Input Module



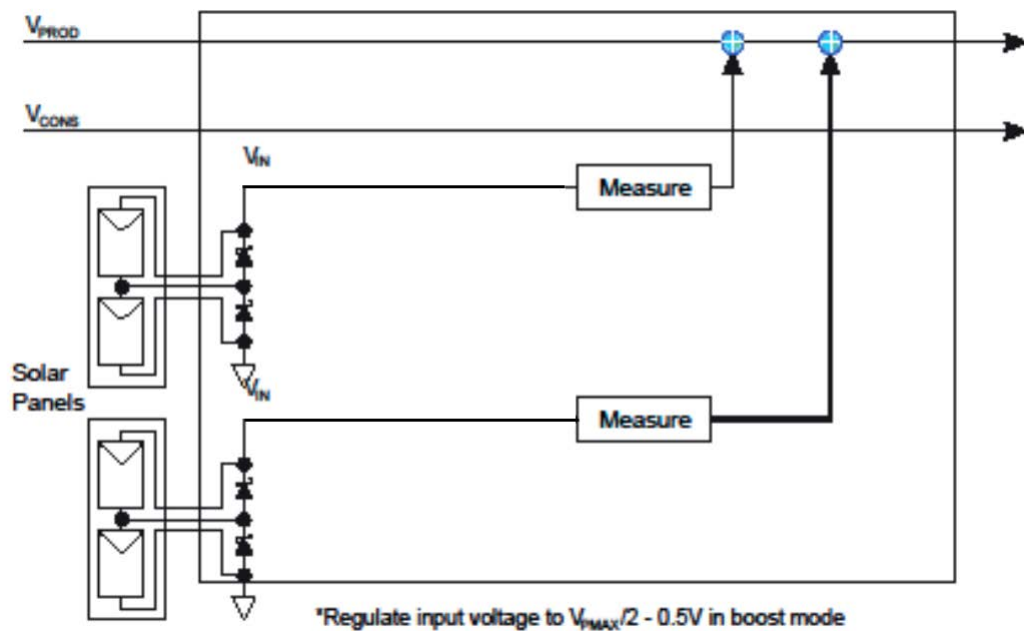Figure 10.6. Solar Panel Input Module Electrical Diagram



High Voltage Output Module

The High Voltage Output module controls the power supply to external devices requiring a regulated voltage that is higher than the VCONS power bus can supply. Regulated hardware outputs of 24, 28, 44, and 48 VDC and switched VCONS output are available. Each power output port is individually controlled and monitored. Over and under current and voltage conditions are monitored, handled, and reported on a per port basis.


Module Functions (Commands) - High Voltage Output modules support the following functions:

- Turn on port n load.
- Turn off port n load.
- Set soft current limit for port n .

Module Data - High Voltage Output modules monitor and report the following data:

- Energy consumed by each port from the time when the load was enabled.
- Efficiency of the module since power-on.
- Maximum, minimum, and average current over a 10 minute non-overlapping interval for any port.
- Efficiency of the module over a 10 minute non-overlapping interval.
- Present soft current limits for any port.
- Hard current limit for any port (fixed).
- Regulation voltage for any port (will report the latest measured voltage).

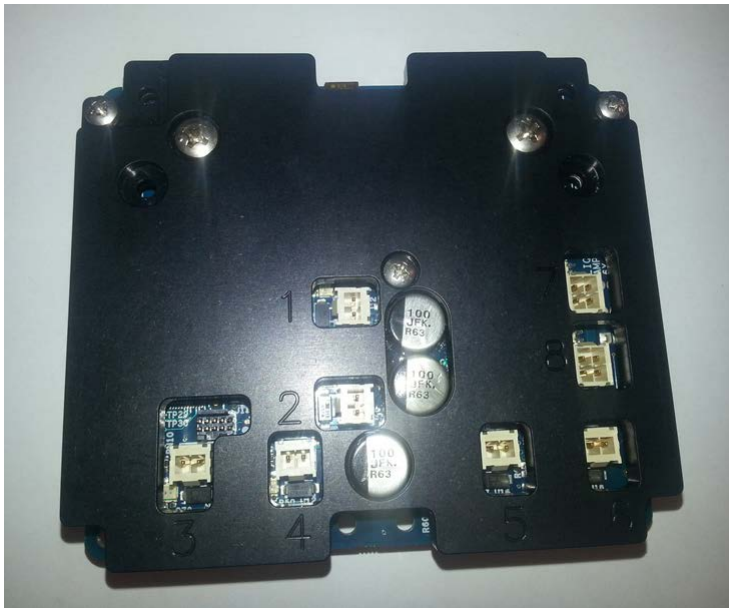Figure 10.7. High Voltage Module



Buck-Boost Regulated Output Module

Buck-Boost Regulated Output modules provide 6 regulated 13.4 VDC @ 3A power output ports for use with CCU sensor ports. The total combined limit for the 6 output ports is 10A.

Module Functions (Commands) - Buck-Boost Regulated Output modules support the following functions:


- Turn on port n load.

- Turn off port n load.
- Set soft current limit for port n .

Module Data - Buck-Boost Regulated Output modules monitor and report the following data:

- Energy consumed by each port from the time when the load was enabled.
- Efficiency of the module since power-on.
- Maximum, minimum, and average current over a 10 minute non-overlapping interval for any port.
- Efficiency of the module over a 10 minute non-overlapping interval.
- Present soft current limits for any port.
- Hard current limit for any port (fixed).
- Regulation voltage for any port (will report the latest measured voltage).

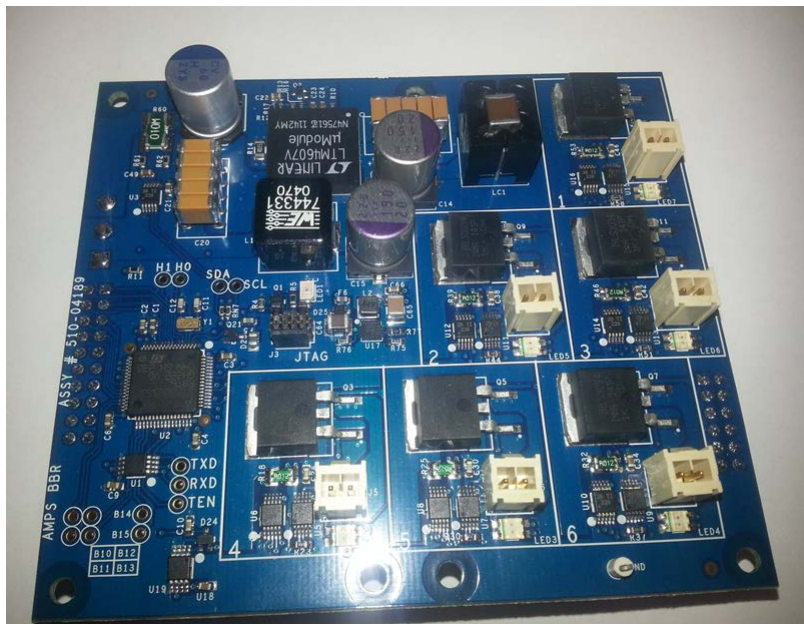Figure 10.8. Buck Boost Output Regulator



Bridge Module

The AMPS Bridge module is a physical interface between two AMPS power domains. It allows the two power domains to work together and to disconnect during failure. There are separate switches for the power buses and the CAN communications bus. Each can be independently controlled. Communications over the CAN bus pass through the bridge module to the CCU.

Module Functions (Commands) - AMPS Bridge modules support the following functions:

- Enable or disable the Bridge power outputs. VCONS and VPROD can be individually controlled, for example, if a power domain that does not use or generate any power on VPROD.

- Enable or disable the CAN bus repeaters.
- Set the soft current limit.


Module Data - AMPS Bridge modules report the following data:

- Energy inbound (negative) or outbound (positive) from VCONS and VPROD. The sum of the energy on both sides of the bridge should not change much over time. Large values of this quantity would represent excessive leakage current.
- The soft current limit.
- The hard current limit (this is not writable, but serves to identify the capability of the hardware). Future bridges may have different current limits.

Figure 10.9. Bridge Module



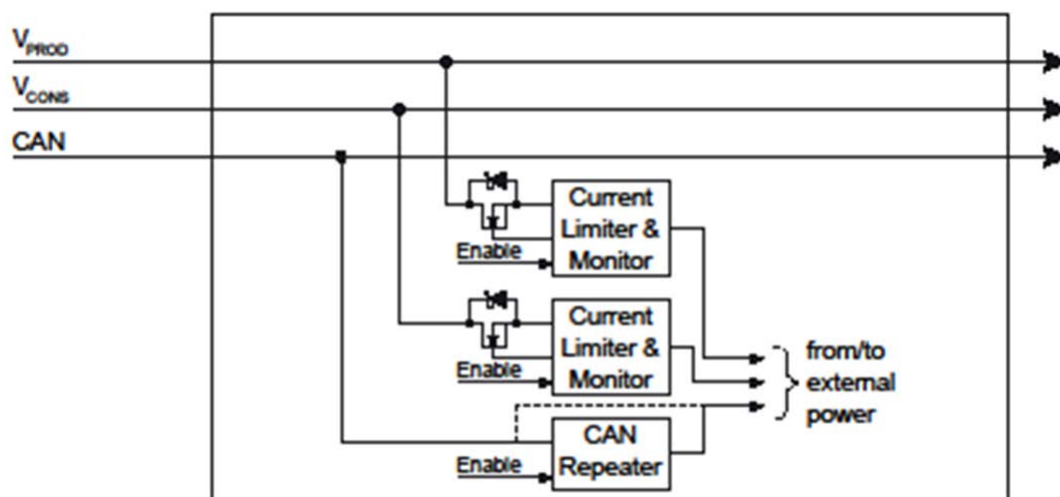Figure 10.10. Bridge Module Electrical Diagram



NOTE: Input bridges bypass the CAN repeater (dotted line).
Output bridges must use the CAN repeater.

Iridium and GPS Module (IGM)

The Iridium and GPS Module (IGM) AMPS module contains the primary GPS and the primary Iridium modem. It monitors and manages the power for the CCU Vehicle Management Computer (VMC), the primary GPS, and the primary Iridium modem. The IGM differs from the other "general purpose" AMPS modules in that there is only one IGM on each vehicle and it is dedicated to the CCU on that vehicle.

Expansion Switch Module (ESM)

The Expansion Switch Module implements programmable connectivity for the SPARE lines on the CCU Expansion Ports. For more information see [“CCU Expansion Ports” \(page 42\)](#). For information on the Expansion Switch configuration commands see [“Commands for SV3 Vehicles Only” \(page 263\)](#).

Sensor Management Computer (SMC)

A Sensor Management Computer (SMC) is a single board embedded system running Linux. One or more SMCs can be used for functions the CCU computer is not available to perform. For example, a SMC can be used to:


- Host customer or LRI developed payload-specific applications
- Run data reduction algorithms
- Run autonomy algorithms

This section provides information on the electrical interfaces to the SMC. For information on developing applications to run on the SMC, see [Chapter 11: Payload Development - Software Environment](#).

Overview

This section covers the various connectors and interfaces to the Sensor Management Computer (parts 510-00973 and 510-01232). Each connection is described with a pin-out, part numbers for the mating connector/crimp pins and an electrical specification.

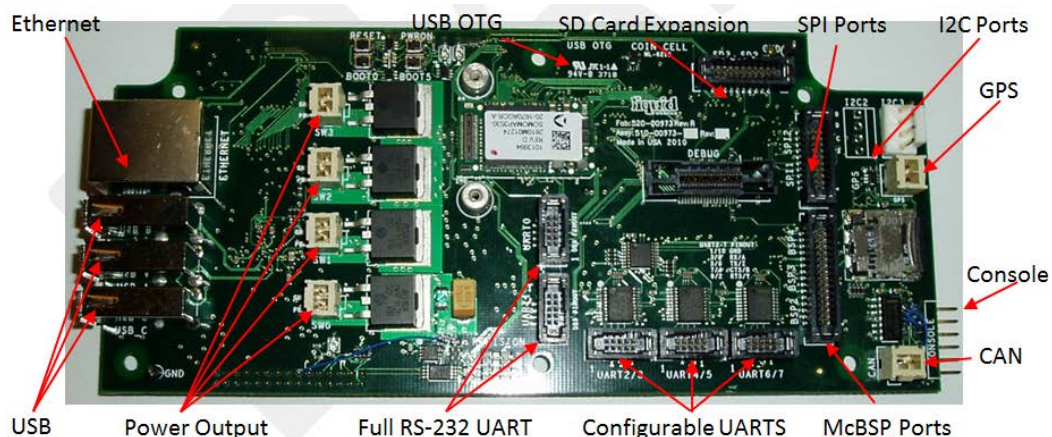Figure 10.11. SMC Connector Locations



Console Port

The console port is the main interface to the processor module. This port is used to login to the Sensor Management Computer Linux console and is the primary debug point. After deployment, this port is typically unavailable. This connection is intended to connect directly to an FTDI TTL-232R-3V3. The TTL-232R-3V3 should be oriented such that pin 1 (black lead) is to the left when reading CONSOLE.

Console Port Pin Out


The pin out on the console port is from left to right.

Pin #	SMC Name	Notes
1	GND	System Ground
2	RTS#	Not currently used, but available to support hardware flow control
3	NC	5V signal from USB converter
4	RXD	Data into the SMC
5	TXD	Data out of the SMC
6	CTS#	Not currently used, but available to support hardware flow control

Console Port Electrical Interface

The console port is a 3.3 volt level CMOS serial port intended to be interfaced to a level converter to support either a USB interface or an RS-232 style interface. For a detailed specification of the I/O levels, see the data sheet for the TI TXS0104E.

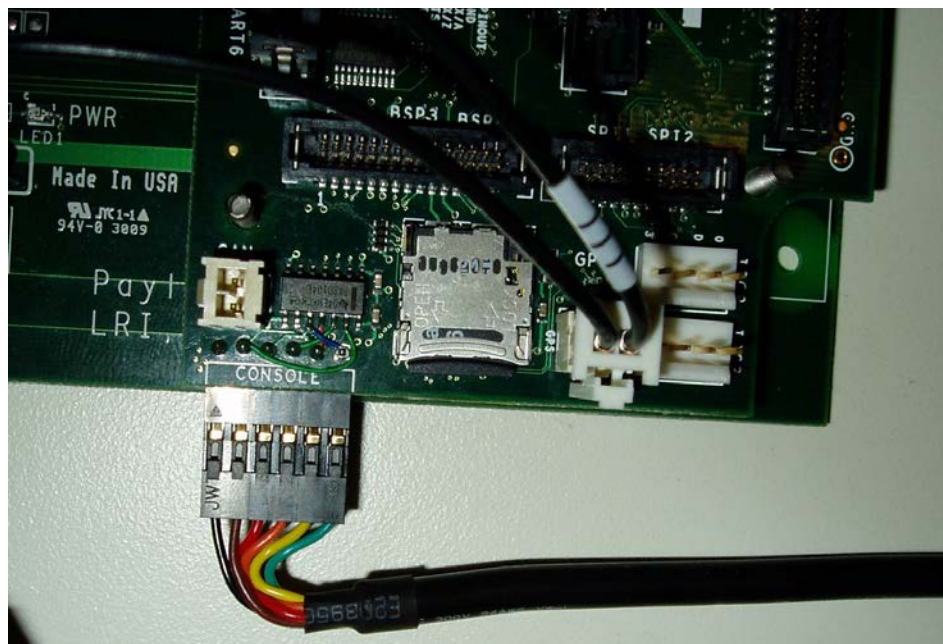Figure 10.12. Console Port Connection



Full RS-232 Ports (UART0 and UART1)

The full RS-232 ports implement a complete RS-232 interface that is compatible with a standard DB-9 pin out. One option for connecting up to this port is to use the Liquid Robotics Inc. cable assembly 140-01233 that converts the connector directly to a DB9. The connector is keyed and latching for robustness.

Full RS-232 Port Pin Out

Pin #	SMC Name	Notes
1	CD	Carrier Detect input
2	RX	Data into the UART
3	TX	Data out of the UART
4	DTR	Data Terminal Ready output
5	GND	Ground
6	DSR	Data Set Ready input
7	RTS	Request To Send output
8	CTS	Clear To Send input
9	RI	Ring Indicator input
10	GND	Ground, but intended as a no connect

Full RS-232 Electrical Interface

These connections are compatible with all standard RS-232 drivers.

Full RS-232 Mating Connector

There are two options for a mating connector from Samtec. The preferred option is to order a pre-built cable assembly such as SFSD-05-28-G-05.00-SR. The length can be adjusted as needed by changing the 4-digit number between the G and SR (i.e. the XX.XX in SFSD-05-28-G-XX.XX-SR). The second option is to use a crimp housing and crimp pins, part numbers ISDF-05-D-M and CC03R/L.

Configurable UART Ports (UART2/3, UART4/5, and UART6/7)

The configurable UART ports implement a dual, software configurable UART port that supports any of the following three options, RS-232 with RTS/CTS support, RS-485 full/half duplex and RS-422. One option for connecting to this port is to use the Liquid Robotics Inc. cable assembly 140-01234 that converts the connector directly to two DB9s. The connector is keyed and latching for robustness.

Configurable UART Port Pin Out

Pin #	SMC Name	Notes
1	GND-A	Ground for even numbered port
2	RTS-B	Request To Send output for odd numbered port

Pin #	SMC Name	Notes
3	RX-A	Data into the UART for the even numbered port
4	CTS-B	Clear To Send input for odd numbered port
5	TX-A	Data out of the UART for the even numbered port
6	TX-B	Data out of the UART for the odd numbered port
7	CTS-A	Clear To Send input for even numbered port
8	RX-B	Data into the UART for the odd numbered port
9	RTS-A	Request To Send output for even numbered port
10	GND-B	Ground for odd numbered port

Configurable UART Electrical Interface

These connections are supported by the Maxim driver IC MAX3160EEAP+

Configurable UART Mating Connector

There are two options for a mating connector from Samtec. The preferred option is to order a pre-built cable assembly such as SFSD-05-28-G-05.00-SR. The length can be adjusted as needed by changing the 4-digit number between the G and SR (i.e. the XX.XX in SFSD-05-28-G-XX.XX-SR). The second option is to use a crimp housing and crimp pins, part numbers ISDF-05-D-M and CC03R/L.

GPS/PPS Port

The GPS/PPS port is the interface to the GPS/PPS data coming in from the Float. This connection connects directly to the incoming connection or to the header on the PIB. The SMC is expecting the GPS string to be at 9600 Baud and contain the following three NMEA strings, GGA, ZDA, and VTG, using RS-232 levels. The connector is keyed and latching for robustness.

GPS/PPS Port Pin Out

Pin #	SMC Name	Notes
1	GPS	GPS Data into the system – Connects to pin 8 of the PIB header
2	PPS	PPS timing pulse into the system – connects to pin 1 of the PIB header

GPS/PPS Electrical Interface


These inputs are capable of handling +/-15 volt signals. They are intended to level shift RS-232 signals down to 1.8 volt CMOS logic. These inputs are simple N-FET level shifts/inverters.

GPS/PPS Mating Connector

There are two options for a mating connector from Samtec. The preferred option is to order a pre-built cable assembly such as MMSS-02-24-L-05.00-S-K. The length can be adjusted as needed by changing the 4-digit number between the L and S (i.e. the XX.XX in MMSS-02-24-

L-XX.XX-S-K). The second option is to use a crimp housing and crimp pins, part numbers IPD1-02-S-K and CC79R/L.

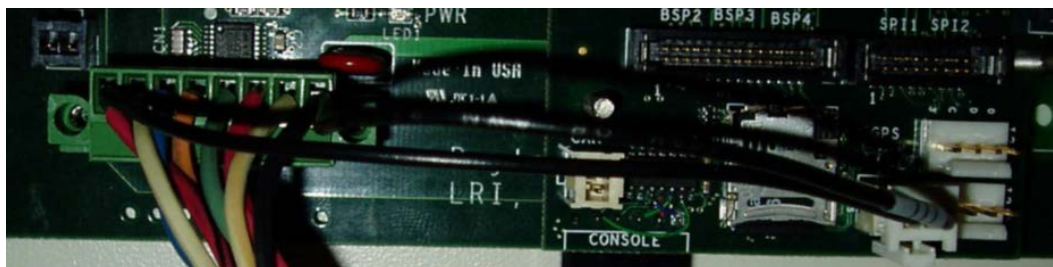Figure 10.13. GPS/PPS Connections to a PIB



Power Ports

The power ports are software controllable switches to enable/disable sensors as needed. The connector is keyed and latching for robustness.

Power Port Pin Out

Pin #	SMC Name	Notes
1	PWR	12 Volt +/-10% output at up to 2 A
2	GND	Ground

Power Electrical Interface

These outputs are capable of providing 12 volts +/-10% at up to 2 amps. The total system current only supports up to 3 amps into the SMAC so the sum of currents out is the limiting factor, not the switches. The current through the switch can be read in software.

Power Mating Connector

There are two options for a mating connector from Samtec. The preferred option is to order a pre-built cable assembly such as MMSS-02-24-L-05.00-S-K. The length can be adjusted as needed by changing the 4-digit number between the L and S (i.e. the XX.XX in MMSS-02-24-L-XX.XX-S-K). The second option is to use a crimp housing and crimp pins, part numbers IPD1-02-S-K and CC79R/L.

CAN Port

The CAN port is not currently used or supported, but is intended for inter-SMC communication and/or for specific sensors that require a CAN interface. The information provided here is for future use only. The connector is keyed and latching for robustness.

CAN Port Pin Out

Pin #	SMC Name	Notes
1	CANH	CAN non-inverting output
2	CANL	CAN inverting output

CAN Electrical Interface

This output is supported by a TI SN65HVD230DR transceiver. One thing to note is that this interface is running at 3.3 volts, and although this meets the ISO 11898 standard (CAN specifications), it may not be compatible with older 5.0 volt CAN bus systems.

CAN Mating Connector

There are two options for a mating connector from Samtec. The recommended option is to order a pre-built cable assembly such as MMSS-02-24-L-05.00-S-K. The length can be adjusted as needed by changing the 4-digit number between the L and S (i.e. the XX.XX in MMSS-02-24-L-XX.XX-S-K). The second option is to use a crimp housing and crimp pins, part numbers IPD1-02-S-K and CC79R/L.

USB Ports (not USB OTG)

These ports are not supported.

USB OTG Port

The USB OTG port meets the USB OTG specification. The USB OTG interface is currently not supported in the Linux kernel. To use the USB OTG port as the host a special mini A to B (or mini B) cable is required. A standard A to mini B cable will turn the SMC into a slave device.

USB OTG Port Pin Out

See the USB OTG specification.

USB OTG Electrical Interface

See the USB OTG specification.

USB OTG Mating Connector

See the USB OTG specification.

Ethernet Port

The Ethernet port meets the 10/100 Base T Ethernet specification. The connector is specified as a latching RJ-45.

Ethernet Port Pin Out

See the Ethernet specification.

Ethernet Electrical Interface

See the Ethernet specification.

Ethernet Mating Connector

See the Ethernet specification.

SD Card Expansion Port

The SD Card Expansion port supports additional data storage. This interface connects directly to the Torpedo module/OMAP processor so the signals must be level shifted to 1.8 volts. This port is untested.

SD Card Expansion Port Pin Out

Pin #	SMC Name	Notes
1	1V8	1.8 Volt output for supplying a logic level reference, limit draw to less than 10mA
2	3V3	3.3 volts for powering any needed circuits
3	SD2_CLK	SD card interface #2 clock output
4	SD2_CDn	SD card interface #2 card detect input
5	SD2_DAT3	SD card interface #2 data bit 3 I/O
6	SD2_CMD	SD card interface #2 command output
7	SD2_DAT1	SD card interface #2 data bit 1 I/O
8	SD2_DAT2	SD card interface #2 data bit 2 I/O
9	GND	Ground
10	SD2_DAT0	SD card interface #2 data bit 0 I/O
11	1V8	1.8 Volt output for supplying a logic level reference, limit draw to less than 10mA
12	3V3	3.3 volts for powering any needed circuits
13	SD3_CLK	SD card interface #3 clock output
14	SD3_CDn	SD card interface #3 card detect input
15	SD3_DAT3	SD card interface #3 data bit 3 I/O
16	SD3_CMD	SD card interface #3 command output
17	SD3_DAT1	SD card interface #3 data bit 1 I/O
18	SD3_DAT2	SD card interface #3 data bit 2 I/O
19	GND	Ground
20	SD3_DAT0	SD card interface #3 data bit 0 I/O

SD Card Expansion Electrical Interface

The inputs and outputs here are referenced to the OMAP 1.8 volt logic levels. The 1.8 volt output is intended only for level shifters as needed and the rest of the circuit should be run from 3.3 volts.

SD Card Expansion Mating Connector

There are two options for a mating connector from Samtec. The recommended option is to order a pre-built cable assembly such as SFSD-10-28-G-05.00-SR. The length can be adjusted as needed by changing the 4-digit number between the G and SR (i.e. the XX.XX in SFSD-10-28-G-XX.XX-SR). The second option is to use a crimp housing and crimp pins, part numbers ISDF-10-D-M and CC03R/L.

SPI Expansion Port

The SPI Expansion port supports additional circuitry for expanded operation. This interface connects directly to the Torpedo module/OMAP processor so the signals will need to be level shifted to 1.8 volts. This port is untested.

SPI Expansion Port Pin Out

Pin #	SMC Name	Notes
1	1V8	1.8 Volt output for supplying a logic level reference, limit draw to less than 10mA
2	3V3	3.3 volts for powering any needed circuits
3	SPI1_CS2	SPI interface #1 chip select 2 output
4	SPI1_CS3	SPI interface #1 chip select 3 output
5	SPI1_CS0	SPI interface #1 chip select 0 output
6	SPI1_CS1	SPI interface #1 chip select 1 output
7	SPI1_SIMO	SPI interface #1 slave in master out output
8	SPI1_CLK	SPI interface #1 clock output
9	GND	Ground
10	SPI1_SOMI	SPI interface #1 slave out master in input
11	1V8	1.8 Volt output for supplying a logic level reference, limit draw to less than 10mA
12	3V3	3.3 volts for powering any needed circuits
13	SPI2_CS2	SPI interface #2 chip select 2 output
14	SPI2_CS3	SPI interface #2 chip select 3 output
15	SPI2_CS0	SPI interface #2 chip select 0 output
16	SPI2_CS1	SPI interface #2 chip select 1 output
17	SPI2_SIMO	SPI interface #2 slave in master out output
18	SPI2_CLK	SPI interface #2 clock output
19	GND	Ground
20	SPI2_SOMI	SPI interface #2 slave out master in input

SPI Expansion Electrical Interface

The inputs and outputs here are referenced the OMAP 1.8 volt logic levels. The 1.8 volt output is intended only for level shifters as needed and the rest of the circuit should be run from 3.3 volts.

SPI Expansion Mating Connector

There are two options for a mating connector from Samtec. The recommended option is to order a pre-built cable assembly such as SFSD-10-28-G-05.00-SR. The length can be adjusted as needed by changing the 4-digit number between the G and SR (i.e. the XX.XX in SFSD-10-28-G-XX.XX-SR). The second option is to use a crimp housing and crimp pins, part numbers ISDF-10-D-M and CC03R/L.

McBSP Expansion Port

The McBSP Expansion port supports additional circuitry for expanded operation. This interface connects directly to the Torpedo module/OMAP processor so the signals will need to be level shifted to 1.8 volts. This port is untested.

McBSP Expansion Port Pin Out

Pin #	SMC Name	Notes
1	1V8	1.8 Volt output for supplying a logic level reference, limit draw to less than 10mA
2	3V3	3.3 volts for powering any needed circuits
3	BSP2_I/O1	McBSP interface #2 general purpose I/O 1
4	BSP2_I/O0	McBSP interface #2 general purpose I/O 0
5	BSP2_DR	McBSP interface #2 DR
6	BSP2_I/O2	McBSP interface #2 general purpose I/O 2
7	BSP2_FSX	McBSP interface #2 FSX
8	BSP2_DX	McBSP interface #2 DX
9	GND	Ground
10	BSP2_CLKX	McBSP interface #2 CLKX
11	1V8	1.8 Volt output for supplying a logic level reference, limit draw to less than 10mA
12	3V3	3.3 volts for powering any needed circuits
13	BSP3_I/O1	McBSP interface #3 general purpose I/O 1
14	BSP3_I/O0	McBSP interface #3 general purpose I/O 0
15	BSP3_DR	McBSP interface #3 DR
16	BSP3_I/O2	McBSP interface #3 general purpose I/O 2
17	BSP3_FSX	McBSP interface #3 FSX
18	BSP3_DX	McBSP interface #3 DX
19	GND	Ground
20	BSP3_CLKX	McBSP interface #3 CLKX
21	1V8	1.8 Volt output for supplying a logic level reference, limit draw to less than 10mA
22	3V3	3.3 volts for powering any needed circuits
23	BSP4_I/O1	McBSP interface #4 general purpose I/O 1
24	BSP4_I/O0	McBSP interface #4 general purpose I/O 0
25	BSP4_DR	McBSP interface #4 DR
26	BSP4_I/O2	McBSP interface #4 general purpose I/O 2
27	BSP4_FSX	McBSP interface #4 FSX
28	BSP4_DX	McBSP interface #4 DX
29	GND	Ground
30	BSP4_CLKX	McBSP interface #4 CLKX

McBSP Expansion Electrical Interface

The inputs and outputs here are referenced to the OMAP 1.8 volt logic levels. The 1.8 volt output is intended only for level shifters as needed and the rest of the circuit should be run from 3.3 volts.

McBSP Expansion Mating Connector

There are two options for a mating connector from Samtec. The recommended option is to order a pre-built cable assembly such as SFSD-15-28-G-05.00-SR. The length can be adjusted as needed by changing the 4-digit number between the G and SR (i.e. the XX.XX in SFSD-15-28-G-XX.XX-SR). The second option is to use a crimp housing and crimp pins, part numbers ISDF-15-D-M and CC03R/L. I2C Ports (I2C2 and I2C3)

I2C Ports

The I2C ports are for debug only in the 510-00973 design. In the 510-01232 design, they have an expansion capability as specified below. The 510-00973 connectors are keyed. The 510-01232 PCBA connector is keyed and latching for robustness.

I2C Ports 510-01232 Pin Out

Pin #	SMC Name	Notes
1	3V3	3.3 volt output to power external circuits
2	3V3	3.3 volt output to power external circuits
3	I2C2_SCL	I2C2 serial clock output
4	I2C3_SCL	I2C3 serial clock output
5	I2C2_SDA	I2C2 serial data I/O
6	I2C3_SDA	I2C3 serial data I/O
7	GND	Ground
8	GND	Ground
9	GND	Ground
10	GND	Ground

I2C Electrical Interface

This interface conforms to the I2C specification for 3.3 volt logic levels and supports up to 400 KHz operation.

I2C Ports 510-01232 Mating Connector

There are two options for a mating connector from Samtec. The recommended option is to order a pre-built cable assembly such as SFSD-05-28-G-05.00-SR. The length can be adjusted as needed by changing the 4-digit number between the G and SR (i.e. the XX.XX in SFSD-05-28-G-XX.XX-SR). The second option is to use a crimp housing and crimp pins, part numbers ISDF-05-D-M and CC03R/L.

Chapter 11. Payload Development - Software Environment

For information on developing payload-specific Linux applications to run on a System Management Computer (SMC), including design recommendations, a library, setup and installation tools, and a virtual machine for use during development, contact the Liquid Robotics Customer Support organization.

Customer support is available during regular business hours:

Monday - Friday, 8:00 AM to 5:00 PM (PST).

Telephone:

(US) 888-574-4574

(International) 1-408-636-4205

Email: support@liquidr.com

Chapter 12. Communication Channels for Payload Development and Testing

For a Wave Glider on an extended offshore mission, the most commonly used communications channel is satellite, typically the Iridium Communications Inc. constellation. This works well with the unobstructed view of the sky available from the surface of the sea, but during payload development using satellite communications is impractical since the vehicle is typically indoors. In addition, satellite bandwidth can be expensive and slow compared to other technologies.

To meet this need, the Wave Glider SV3 CCU supports:

- A wired Ethernet connection between the CCU and a LAN
- WiFi
- Cellular Communications

The debug port (D1) on the CCU can be connected to LAN with an Ethernet cable providing direct communications between the CCU and a remote application, for example WGMS. At the same time, the vehicle Web page can be displayed so you can access the information you need to debug. This is the preferred communications method for payload development and testing, when a wired connection is practical.

When a wired connection is not practical, you can use WiFi to display the vehicle Web page while using the Wave Glider SV3 cell modem to support communications between the CCU and the remote application.

Regardless of which communications methods are used for payload development and testing, Liquid Robotics recommends that the Iridium communications channel be exercised prior to launch to be sure it is working properly.

Chapter 13. Troubleshooting

This chapter focuses on problems commonly encountered during **on-shore** Wave Glider payload development. Refer to the *Wave Glider User Manual* for troubleshooting on-water operational problems.

Overview

On-shore troubleshooting falls into two general categories:

1. Fixing non-functioning systems
2. Diagnosing and correcting error conditions

Iridium Interface

In general, most development and systems integration will be done using the WiFi interface. However, it can be helpful to also have the Iridium interface available as an alternate method of communication for troubleshooting.

General Checks

Since the vehicle is fully electric, many problems can be traced back to connectors and/or batteries. The first checks for any problem should be:

1. Check that the Power Key on the CCU is inserted. The Power Key is what turns on the electrical system. An LED light in the Power Key handle is activated when power is on. For more information see [“Power Key” \(page 35\)](#) and [“Power Key Indicator Light” \(page 36\)](#).
2. If the problem appears to be a connectivity issue, check that the electrical connectors are tight. It is possible that a hold down sleeve is cross-threaded or otherwise jammed so a connector is not fully seated. If you're not sure, undo and re-install the connector.
3. Make sure that the electrical cables are plugged into the correct connectors:
 - The Expansion Port connectors are all the same. Cross-connecting should not cause damage, but data communications will be incorrect.
 - The Sensor Port connectors are all the same. Cross-connecting should not cause damage, but data communications will be incorrect.
4. Use WiFi, Cell or Iridium to get the Power Status and verify that the System voltage is at least 14 Volts. If not, the batteries need re-charging. For more information see [“External Battery Charging” \(page 70\)](#).

Re-Bootting

Generally, re-bootting the CCU is a solution of last resort. Re-bootting may temporarily fix the problem, but not address the root cause.

If you have Admin privileges, you can issue the Float Reboot command.

A “hard” re-boot can be initiated by powering the vehicle OFF (remove the Power Key), waiting 20 seconds, and then turning the vehicle back ON (insert the Power Key).

Contacting Liquid Robotics

If you've tried the suggested solutions and the problem persists, make note of the vehicle identification data and contact Liquid Robotics as described in [“Contacting Liquid Robotics, Inc.”](#) (page 230).

Problems and Responses

No Iridium Connection

The Iridium connection is initiated by the vehicle at each Telemetry interval. The interval can be set for an especially long time (as much as 24 hours). Also, if the batteries are low, the vehicle may revert to the "Low Battery" telemetry rate, which is typically longer than the standard rate (to conserve battery power).

Also, Iridium communications require a clear view of the sky to operate. Being near a window is generally not adequate.

Responses:

1. Check that the vehicle power is ON.
2. Check that the Iridium antenna (in the CCU Radome) has a clear view of the sky.
3. Confirm that the vehicle you are attempting to communicate with is the same vehicle you have selected in the remote application.
4. Refresh the remote application Web Page.
5. Use Cell or WiFi communications (if available) to get the IMEI and verify that it is the correct IMEI for the vehicle.
6. Use the remote application to check the strength of the last-sent Telemetry data. The Iridium Signal Strength ranges from 0 to 5. A Level of zero may indicate an Iridium signal problem.

No GPS Reception.

Like Iridium communications, the GPS requires a view of the sky, although it can sometimes get an adequate fix near a large window.

Responses:

1. Check that the vehicle power is ON.
2. Check that the GPS antenna (in the CCU Radome) has a reasonably clear view of the sky.

Power Key Light Does Not Blink

The LED light in the Power Key handle blinks on and off when the system is powered on. If it fails to do this, there may be a CCU electrical or software issue. For more information see [“Power Key Indicator Light”](#) (page 36)

No Float Payload Power From CCU

When the system is powered up (or re-booted), power to the payloads is turned OFF. The power needs to be explicitly turned ON. Also, the maximum current that can be supplied to any payload is limited (see “[Payload Maximum Currents](#)” (page 184)). Any attempt to use more current will result in power to that payload being shut off.

Responses:

1. Check that the payload is connected to the correct connector on the CCU.
2. Check the connectors on CCU and Payload Dry Boxes.
3. Check for an over-current alarm.
4. Check the power status for low batteries.

No Glider Payload or Towfish Payload Power From CCU

As with the Float payloads, Glider and Towfish payload power is Off when the vehicle power is turned On. Also the maximum current that can be supplied to both the Thrudder and the Glider/ Towfish payloads combined is 6 Amps.

Responses:

1. Verify that rudder can move. If not, check both the Float and Rudder Module Umbilical connectors. Also check the Umbilical for cracks or tears.
2. Check for an over-current alarm.
3. Check the power status for low batteries.

No CCU-to-Payload RS-232 Communications

Lack of RS-232 communications can be caused by a problem with the CCU electronics, the Payload electronics, and/or the connection between them. If communications were previously established, but no longer work, the best response is to try re-booting the system. The responses below assume that communication has never been established using a specific payload.

Responses:

1. Check for correct cable connection to CCU.
2. Check that CCU has turned on power to the Payload.
3. Check for an over-current alarm.
4. Check payload electronics UART.

Float Continuously Re-Boots

This indicates a serious electronics problem. Contact Liquid Robotics.

Glider Continuously Re-Boots

This indicates a serious electronics problem. Contact Liquid Robotics.

Interpreting CCU Alarms

The Alarm indicator bits are returned in the first two bytes of the Telemetry Type 0x06 data packet. The interpretation for each Alarm bit is:

0 → No alarm

1 → Alarm set

Table 13.1. CCU Alarms

Alarm	Byte	bit	For More Information
Glider Leak Alarm	0	0	See “Sub Leak Alarm (Byte 0 bit 0)” (page 227)
Float Leak Alarm	0	1	See “Float Leak Alarm (Byte 0 bit 1)” (page 228)
Glider-to-Float Comms Alarm	0	2	See “Sub-to-Float Comms Alarm (Byte 0 bit 2)” (page 228)
Payload Alarm	0	3	See “Payload Alarm (Byte 0 bit 3)” (page 228)
Float Battery Low Alarm	0	4	See “Float Battery Low Alarm (Byte 0 bit 4)” (page 228)
Umbilical Fault Alarm	0	5	See “Umbilical Fault Alarm (Byte 0 bit 5)” (page 228)
GPS Not Functioning	0	7	See “GPS Not Functioning (Byte 0 bit 7)” (page 229)
Glider Reboot Alarm	1	1	See “Sub Reboot Alarm (Byte 1 bit 1)” (page 229)
Glider-to-Sub Comms Error	1	2	See “Float-to-Sub Comms Error (Byte 1 bit 2)” (page 229)
Float Temperature Threshold Exceeded	1	4	See “Float Temperature Threshold Exceeded (Byte 1 bit 4)” (page 229)
Float Pressure Threshold Exceeded	1	5	See “Float Pressure Threshold Exceeded (Byte 1 bit 5)” (page 229)
EPROM Error	1	6	See “EPROM Error (Byte 1 bit 6)” (page 230)
Float Reboot Alarm	1	7	See “Float Reboot Alarm (Byte 1 bit 7)” (page 230)

The alarms are described below:

Sub Leak Alarm (Byte 0 | bit 0)

Water leak was detected in the Thrudder Module. This should never occur unless the vehicle is in the water. The Thrudder Module is factory-sealed and not field-repairable.

Responses:

1. If the Glider is under water, retrieve the vehicle as soon as possible.
2. If the Glider is not under water, try re-booting. If the alarm persists, there is likely an electronics error.

Float Leak Alarm (Byte 0 | bit 1)

Water leak was detected in the CCU. This should never occur unless the vehicle is in the water. The CCU is factory-sealed and not field-repairable.

Responses:

1. If the Float is in the water, retrieve the vehicle as soon as possible.
2. If the Float is out of the water, try re-booting. If the alarm persists, there is likely an electronics problem in the CCU.

Sub-to-Float Comms Alarm (Byte 0 | bit 2)

The CCU computer detected a data comm error from the Glider.

Responses:

1. Check the electrical connectors on the CCU and the Thrudder Module.
2. Check the Umbilical for cracks or tears.>
3. Try re-booting. If the error occurs again, contact Liquid Robotics.

Payload Alarm (Byte 0 | bit 3)

General problem with a payload. It may be a communications, electrical or environmental issue.

Responses:

1. Check the connectors between the CCU and each MPU dry box.
2. Verify that the payload is not drawing more than the maximum allowed current (see [“Payload Maximum Currents” \(page 184\)](#)).
3. Try re-booting. If the alarm occurs again, contact Liquid Robotics.

Float Battery Low Alarm (Byte 0 | bit 4)

CCU battery level is below the specified "Float Low_Battery Power".

Responses:

1. Power off the vehicle and re-charge the batteries.
2. If the alarm persists after re-charging, contact Liquid Robotics.

Umbilical Fault Alarm (Byte 0 | bit 5)

There is an integrity problem (a leak or broken conductor) on the Umbilical.

Responses:

1. If the vehicle is in the water, retrieve as soon as possible.

2. If the vehicle is out of the water, check the Umbilical for holes or tears.
3. Try re-booting. If the alarm persists, there is likely an electronics error.

GPS Not Functioning (Byte 0 | bit 7)

The vehicle has not received a valid GPS fix for two minutes.

Responses:

1. Verify that the CCU radome has a clear view of the sky.
2. Try a re-boot, then wait for at least 2 minutes.

Sub Reboot Alarm (Byte 1 | bit 1)

A serious error occurred on the Thrudder Module computer, causing a re-boot.

Responses:

1. Check for a "Sub Leak Alarm" or a "Sub-to-Float Comms Alarm".
2. Try powering OFF, then ON. If the error occurs again, contact Liquid Robotics.

Float-to-Sub Comms Error (Byte 1 | bit 2)

The Sub computer detected a data comm error from the CCU computer.

Responses:

1. Check the electrical connectors on the CCU and the Thrudder Module.
2. Check the Umbilical for cracks or tears.
3. Try re-booting. If the error occurs again, contact Liquid Robotics.

Float Temperature Threshold Exceeded (Byte 1 | bit 4)

The temperature in the CCU is above the "Float Temperature Threshold". If the Float is not exposed to high outdoor temperatures, this indicates an electronics or battery problem.

Responses:

1. Immediately power the vehicle OFF.
2. Check the outside air temperature. If the CCU interior is noticeably warmer than outside, there may be a serious internal problem. Call Liquid Robotics and do not re-power the unit.

Float Pressure Threshold Exceeded (Byte 1 | bit 5)

The pressure in the CCU is above or below the "Float Pressure Threshold" values.

Responses:

1. Remove the valve cover on the top of the CCU, and check the pressure. Adjust as necessary.

2. If the pressure values are within the acceptable range, re-boot and see if the alarm goes off.

EPROM Error (Byte 1 | bit 6)

During boot-up, the system transfers data from the EEPROM to Flash memory, using error checking. This alarm is activated if there is an error in the data transfer.

Responses:

1. Try re-booting. If the error occurs again, contact Liquid Robotics.

Float Reboot Alarm (Byte 1 | bit 7)

An error occurred on the CCU computer, causing a re-boot.

Responses:

1. If the error occurs continually, contact Liquid Robotics.

Contacting Liquid Robotics, Inc.

If you cannot determine or correct the cause of a problem, contact the Liquid Robotics Support Organization.

To expedite resolving the problem, make a brief list beforehand with the following information:

1. Wave Glider Model Number
2. Any special or added payloads on the vehicle
3. Time/date when the problem occurred
4. Location of vehicle when problem occurred
5. Initial indication of problem
6. Any other indications or unusual readings
7. Attempts at corrective actions and their results

The Liquid Robotics Customer Support organization is available 24/7.

Telephone:

(US) 888-574-4574

(International) 1-408-636-4205

Email: support@liquidr.com

Appendix A. Command Descriptions

Listed below are descriptions and explanations of the CCU commands, and the expected response for each. The ACK/NAK format types are described in [Chapter 6: Vehicle Responses](#).

Note: In the following command descriptions all fields marked "reserved" or "not used" must have a value of zero, or the CRC will trigger an error.

Commands for SV2 and SV3 Vehicles

This section lists commands that can be issued on Wave Glider SV2 vehicles and on Wave Glider SV3 vehicles. See [“Commands for SV3 Vehicles Only” \(page 263\)](#) for commands that can be issued on Wave Glider SV3 vehicles only.

No Command (0x0000)

- A "No Command" is not sent to the vehicle, but is stored in the vehicle command log along with a time-stamp and a comment text string. This can be useful for annotating tests.
- The "No Command" should not be sent by a payload.

ACK/NAK - None

Field Name	Bytes	Value
Structure ID	1	0x10
Command Value	2	0x0000

Set Default Communication Channel (0x000A)

- The command allows specification of the vehicle's communication channel. The vehicle normally uses the Iridium channel.



Note

If the specified channel is not available, the CCU will switch to Iridium communications.

ACK – No Payload (see [“ACK - No Payload Response \(0x13\)” \(page 103\)](#))

Field Name	Bytes	Value
Structure ID	1	0x10
Command Value	2	0x000A
Channel Number	1	See Channel Number options below.
(reserved)	4	0
Latitude	4	0 (not used)
Longitude	4	0 (not used)

Channel Numbers	
1	Iridium (default)
2	XBee
3	Serial
4	WiFi
5	Alternate Iridium

Read Unique ID (0x000E)

- A Vehicle Unique ID should have been written into the CCU's Non-Volatile Memory when the vehicle was first brought online.
- If a Vehicle Unique ID was never set, the returned value will be 0xFFFFFFFF (–1 decimal).

ACK – Structure type 0x1E (see “[ACK – Unique ID \(0x1E\)](#)” (page 108)) containing the Vehicle Unique ID.

Field Name	Bytes	Value
Structure ID	1	0x10
Command Value	2	0x000E
(reserved)	5	0
Latitude	4	0 (not used)
Longitude	4	0 (not used)

Set Unique ID (0x000F)

- Available to Admins only.
- Writes the Vehicle Unique ID into the CCU Non-Volatile Memory. This command is typically used only once in the vehicle lifetime - when the vehicle is first brought online.

Note: This command can only be issued by using Iridium. It will only be enabled on the primary remote application and it will not be allowed on any secondary remote application.

ACK – Structure type 0x1E containing the Vehicle Unique ID (see “[ACK – Unique ID \(0x1E\)](#)” (page 108))

Field Name	Bytes	Value
Structure ID	1	0x10
Command Value	2	0x000F
Vehicle Unique ID	4	See “ Vehicle Unique ID ” (page 86)
(reserved)	1	0
Latitude	4	0 (not used)
Longitude	4	0 (not used)

Hold Current Position (0x0001)

- Commands the vehicle to maintain position at a specified Latitude/Longitude.

ACK – Status Return (see “[ACK - Status Return \(0x11\)](#)” (page 100))

NAK – Data Error (see “[NAK – Invalid Data \(0x22\)](#)” (page 111)) if Latitude or Longitude error

Field Name	Bytes	Value
Structure ID	1	0x10
Command Value	2	0x0001
(reserved)	5	0
Latitude	4	[see “ Waypoint Values ” (page 87)]
Longitude	4	[see “ Waypoint Values ” (page 87)]

Hold Station at Waypoint (0x0002)

- Commands the vehicle to move to the specified Target Waypoint and maintain position there.

ACK – Status with Waypoint Read-Back (see “[ACK - Status with Waypoint Read-Back \(0x10\)](#)” (page 98))

NAK – Data Error (see “[NAK – Invalid Data \(0x22\)](#)” (page 111)) if Target Waypoint has not been defined

Field Name	Bytes	Value [range]
Structure ID	1	0x10
Command Value	2	0x0002
Target Waypoint Number	1	[1 to 254]
(reserved)	4	0
Latitude	4	0 (not used)
Longitude	4	0 (not used)

Follow Sequential Waypoint Course (0x0003)

- Commands vehicle to move through a contiguous sequence of Waypoints (e.g., 11, 12, 13, 14, 15, 16), specified by using a Begin-Waypoint and an End-Waypoint number (e.g., 11 and 16). The vehicle will repeatedly cycle through the Waypoint sequence until commanded otherwise (e.g., . . . 14, 15, 16, 11, 12, 13, 14, 15, 16, 11, 12, 13, 14, . . .).
- The Target Waypoint is the first Waypoint that the vehicle goes to at the start, and need not be the same as the Begin-Waypoint number. However, the Target Waypoint must be in the sequence.

ACK – No Payload (see “[ACK - No Payload Response \(0x13\)](#)” (page 103))

NAK – Data Error (see “[NAK – Invalid Data \(0x22\)](#)” (page 111)) if missing a Waypoint number in the sequence. For example, if the course is from Waypoint 9 to Waypoint 20, but Waypoint 17 was never defined.

NAK – Data Error (see “[NAK – Invalid Data \(0x22\)](#)” (page 111)) if the Target Waypoint is not within the sequence. For example, if the sequence is from 5 to 18, but the Target Waypoint is 4.

Field Name	Bytes	Value [range]
Structure ID	1	0x10
Command Value	2	0x0003
Target Waypoint #	1	[within sequence]
Begin Waypoint #	1	[1 to 254]
End Waypoint #	1	[1 to 254]
(reserved)	2	0
Latitude	4	0 (not used)
Longitude	4	0 (not used)

Rudder Right/Left/Center (0x0004, 0x0005, 0x0006)

- Commands the Glider's rudder to move either to full left, full right, or to center.

ACK – No Payload (see “[ACK - No Payload Response \(0x13\)](#)” (page 103))

Field Name	Bytes	Value
Structure ID	1	0x10
Command Value	2	0x0004 (Right Rudder) 0x0005 (Left Rudder) 0x0006 (Center Rudder)
(reserved)	5	0
Latitude	4	0 (not used)
Longitude	4	0 (not used)

Follow Fixed Heading (0x0008)

- Commands the vehicle to immediately proceed on a specified heading from its current position. The heading value is specified in unit degrees.

ACK – No Payload (see “[ACK - No Payload Response \(0x13\)](#)” (page 103))

NAK – Data Error (see “[NAK – Invalid Data \(0x22\)](#)” (page 111)) if the heading value exceeds 359 degrees.

Field Name	Bytes	Value
Structure ID	1	0x10
Command Value	2	0x0008
(reserved)	3	0
Heading in Degrees	2	[0 to 359]
Latitude	4	0 (not used)
Longitude	4	0 (not used)

Set Rudder Position (0x1006)

- Commands the Glider's rudder to move to a position, specified in unit degrees.

ACK – No Payload (see “[ACK - No Payload Response \(0x13\)](#)” (page 103))

Field Name	Bytes	Value [range]	Notes
Structure ID	1	0x10	
Command Value	2	0x1006	
Position	1	Degrees [-30° to +30°]	[1]
(reserved)	4	0	
Latitude	4	0 (not used)	
Longitude	4	0 (not used)	

Notes:

[1] The sign of the "Position" value is interpreted as follows:

Negative → Left Rudder

Positive → Right Rudder

Twist Umbilical (0x1007)

Field Name	Bytes	Default Value
Structure Id	1	0x10
Command Value	2	0x1007
Number of Twists	1	Value (-7 – 7)
Field 4	1	0
Field 5	1	0
Field 6	1	0
Field 7	1	0
Latitude	4	0
Longitude	4	0

Toggle Marker Light (0x2000)

Field Name	Bytes	Default Value
Structure Id	1	0x10
Command Value	2	0x2000
Field 3	1	0
Field 4	1	0
Field 5	1	0
Field 6	1	0
Field 7	1	0
Latitude	4	0
Longitude	4	0

Visible Light Off/On (0x2001, 0x2002)

- Turns On or Off the visible light.

ACK – No Payload (see “[ACK - No Payload Response \(0x13\)](#)” (page 103))

Field Name	Bytes	Value
Structure ID	1	0x10
Command Value	2	0x2001 (Light Off) 0x2002 (Light On)
(reserved)	5	0
Latitude	4	0 (not used)
Longitude	4	0 (not used)

IR Light Off/On (0x2003, 0x2004)

- Turns On or Off the Infrared (IR) light.

ACK – No Payload (see “[ACK - No Payload Response \(0x13\)](#)” (page 103))

Field Name	Bytes	Value
Structure ID	1	0x10
Command Value	2	0x2003 (IR Off) 0x2004 (IR On)
(reserved)	5	0
Latitude	4	0 (not used)
Longitude	4	0 (not used)

XBee Comm Off/On (0x2005, 0x2006)

- Turns On or Off the XBee communications channel.

ACK – No Payload (see “[ACK - No Payload Response \(0x13\)](#)” (page 103))

Field Name	Bytes	Value
Structure ID	1	0x10
Command Value	2	0x2005 (XBee Off) 0x2006 (XBee On)
(reserved)	5	0
Latitude	4	0 (not used)
Longitude	4	0 (not used)

Retrieve Status (0x4001)

- Retrieves the Status Return data packet. Refer to section 0 for a detailed description of the Status Return packet.

ACK – Status Return (see “[ACK - Status Return \(0x11\)](#)” (page 100))

Field Name	Bytes	Value
Structure ID	1	0x10
Command Value	2	0x4001
(reserved)	5	0
Latitude	4	0 (not used)
Longitude	4	0 (not used)

Set Status (0x4002)

- Sends new operational parameters to the vehicle. This command has to send many parameters at one time. For sending only certain parameters, the Set Parameters command can be used instead (see [“Set Parameters \(0x6000\)” \(page 240\)](#)).

ACK – Status Return (see [“ACK - Status Return \(0x11\)” \(page 100\)](#))

Field Name	Bytes	Value [range] (units)	Notes
Structure ID	1	0x11	
Command Value	2	0x4002	
(not used)	1	0	
Telemetry Rate	2	[1 – 1440] (minutes)	[1]
Low_Battery Report Rate	2	[1 – 1440] (minutes)	[2]
Alarm Report Rate	2	[1 – 30] (minutes)	[3]
(reserved)	1		
Sub_Float Timeout	1	[20 – 200] (millisecs)	[4]
(reserved)	2	0	
Float Low_Battery Power	1	[1 – 65] (10Wh steps)	[5]
Float Critical_Battery Power	1	[1 – 65] (10Wh steps)	[6]
(reserved)	3	0	
Float Pressure_Threshold High	1	[0 – 255] (kPa)	[7]
Float Pressure_Threshold Low	1	[0 – 255] (kPa)	[7]
Float Temperature_Threshold	1	[0 – 255] (°C)	[8]
Waypoint Arrival Distance	2	[5 – 5000] (meters)	[9]
(reserved)	1	0	
Power Controller Telemetry Rate	2	[5 – 2880] (minutes)	[10]
(reserved)	2	0	
Float-to-Sub Comm Period	1	[1 – 240] (seconds)	[11]
(not used)	8	0	

Notes:

[1] "Telemetry Rate" is the number of minutes between telemetry transmissions.

[2] "Low_Battery Report Rate" telemetry rate is used when battery is below the "Float Low_Battery Power" value (also see note [5]).

- [3] "Alarm Report Rate" is the telemetry rate used when an alarm has been triggered.
- [4] "Sub_Float Timeout". Failure of the Sub to communicate with the CCU within this time triggers an alarm.
- [5] "Float Low_Battery Power". Level at which the battery power is considered "Low."
- [6] "Float Critical_Battery Power". Level at which the battery power is considered "Critical."
- [7] "Float Pressure_Threshold High/Low". Max and Min allowed CCU Dry Box pressures before an alarm is triggered. Thresholds are adjusted for temperature using the Ideal Gas Law, $pV=nRT$, referenced to 23°C.
- [8] "Float Temperature_Threshold" is the maximum CCU Dry Box temperature allowed before an alarm is triggered.
- [9] "Waypoint Arrival Distance" is the distance from the exact Waypoint coordinates at which the vehicle is considered to have "arrived" at the Waypoint.
- [10] "Power Controller Telemetry Rate" is the telemetry rate for the Power Controller Status.
- [11] "Float-to-Sub Comm Period" is the rate at which the Float sends a command to the Sub.

Retrieve Identification (0x4003)

- Requests the vehicle to send back the ID Packet. Refer to 9.2.3 for a description of the ID Packet format.

ACK – Identification Packet (see [“ACK - Vehicle Identification Data \(0x12\)” \(page 101\)](#))

Field Name	Bytes	Value
Structure ID	1	0x10
Command Value	2	0x4003
(reserved)	5	0
Latitude	4	0
Longitude	4	0

Retrieve Power Status (0x5001)

- Requests the vehicle to send back the Power Controller Status. See [“ACK - Power Controller Status \(0x14\)” \(page 104\)](#) for a description of the Power Controller Status Packet format.

ACK – Power Controller Packet (see [“ACK - Power Controller Status \(0x14\)” \(page 104\)](#))

Field Name	Bytes	Value
Structure ID	1	0x10
Command Value	2	0x5001
(reserved)	5	0
Latitude	4	0
Longitude	4	0

Retrieve Rudder Control (0x5002)

- Requests the vehicle to send back the Rudder Control Packet. Refer to 9.2.6 for a description of the Rudder Control Packet format.

ACK – Rudder Control Packet (see “[ACK - Rudder Control Data \(0x15\)](#)” (page 105))

Field Name	Bytes	Value
Structure ID	1	0x10
Command Value	2	0x5002
(reserved)	5	0
Latitude	4	0
Longitude	4	0

Set Rudder Control (0x5003)

- Sends the Rudder Control data parameters to the vehicle. Note that these parameters define the control laws for the rudder, **not** the rudder position.
- There are three parameter sets:
 - "Normal" values are the default
 - "Low" values are used when the battery energy is low
 - "Critical" values are used when the batteries are close to depletion
- Note that the initial default values are the same for all parameter sets. If different values are desired for the Low and Critical states, they have to be explicitly set.

ACK – Rudder Control Packet (see “[ACK - Rudder Control Data \(0x15\)](#)” (page 105))

Field Name	Bytes	Value (units)	Default	Notes
Structure ID	1	0x16		
Command Value	2	0x5003		
Normal Gain	2	[1 to 100]	0x7FFF	[1]
Normal Timebase	1	[1 to 15] (15Hz/N)	7 (2 Hz)	[2]
Normal Deadband	1	[0 to 60] (0.5°)	30 (15°)	[3]
Normal Goal	1	[0 to 10] (0.5°)	1 (0.5°)	[4]
Normal RudderMax	1	[0 to 60] (0.5°)	40 (20°)	[5]
Normal MoveMin	1	[0 to 10] (0.5°)	2 (1°)	[6]
Normal TrimMax	1	[0 to 10] (0.5°)	0	[7]
Low Gain	2	[1 to 100]	0x7FFF	
Low Timebase	1	[1 to 15] (15Hz/N)	7 (2 Hz)	
Low Deadband	1	[0 to 60] (0.5°)	30 (15°)	
Low Goal	1	[0 to 10] (0.5°)	1 (0.5°)	
Low RudderMax	1	[0 to 60] (0.5°)	40 (20°)	

Field Name	Bytes	Value (units)	Default	Notes
Low MoveMin	1	[0 to 10] (0.5°)	2 (1°)	
Low TrimMax	1	[0 to 10] (0.5°)	0	
Critical Gain	2	[1 to 100]	0x7FFF	
Critical Timebase	1	[1 to 15] (15Hz/N)	7 (2 Hz)	
Critical Deadband	1	[0 to 60] (0.5°)	30 (15°)	
Critical Goal	1	[0 to 10] (0.5°)	1 (0.5°)	
Critical RudderMax	1	[0 to 60] (0.5°)	40 (20°)	
Critical MoveMin	1	[0 to 10] (0.5°)	2 (1°)	
Critical TrimMax	1	[0 to 10] (0.5°)	0	
(unused)	4	0	0	
CRC32	4			

Notes:

[1] "Gain" is the rudder "Proportional" control multiplier, used as:

$$\text{Correction} = (\text{Gain} * 200 * \text{Rudder\_Deflection}) / \text{Heading\_Error}$$

Where Heading_Error is the error that exceeds the specified Deadband value.

Deflection and Error are in degrees.

[2] "Timebase" is the integer number of control loop samples to be taken within the 15 Hz timing intervals. Thus a value of 5 will result in a 3 Hz control loop. The default value of 7 results in a 2 Hz control loop.

[3] "Deadband" is the minimum heading error at which the control system will start to take action. Defined in units of 0.5 degrees.

[4] "Goal" The rudder will be moved to the trim value when the heading error falls to this value. Defined in units of 0.5 degrees. (Since the algorithm straightens the rudder when the heading error changes sign, this value can be made as small as needed without risk of the control loop going unstable.)

[5] "RudderMax" is the maximum allowed deflection of the rudder. Defined in units of 0.5 degrees.

[6] "MoveMin" is the minimum rudder movement. The desired position of the rudder has to be at least this much different from the actual position for the rudder to actually move. Defined in units of 0.5 degrees.

[7] "TrimMax" is the maximum trim value. Trim is an offset angle put into the rudder to compensate for any mechanical misalignment. Defined in units of 0.5 degrees.

Set Parameters (0x6000)

- Sets the value of one or more specific parameters. This command can be used instead of the Set Status Command when only a few vehicle parameters need to be changed.
- There are also restricted-use parameters that are supported for users who are assigned the Root or Admin roles only. For more information, see ["Restricted Parameters" \(page 246\)](#).

ACK – No Payload (see “[ACK - No Payload Response \(0x13\)](#)” (page 103))

Field Name	Bytes	Value [range]
Structure ID	1	0x15
Command Value	2	0x6000
Number of parameters	1	N
Parameter 1 ID	2	
Parameter 1 Length	1	
Parameter 1 Data	Length in Bytes of Parameter 1 Data	
.....	...	...
.....	...	...
.....	...	...
Parameter N ID	2	
Parameter N Length	1	
Parameter N Data	Length in Bytes of Parameter N Data	

Parameter IDs and data that are currently supported:

Parameter	Description	ID	Bytes	Type	Value [range]	Notes
Iridium Modem Always On	Sets the Iridium modem to be always On, or Off when not in use.	0x0014	1	Boolean	0 = No, 1 = Yes	[1]
Iridium Modem Default On	Sets the default power state for the Iridium modem (On or Off when not in use).	0x0015	1	Boolean	0 = No, 1 = Yes	[2]
Alternate Iridium Polling Rate	This parameter is not supported.	0x001A	1	Numeric	0 = Off, [1–120 min]	
Temporary Channel Retries	This parameter is not supported.	0x001B	1	Numeric	[1–32]	
Bubble Power	Sets the power to the Radome On or Off.	0x0020	1	Boolean	0 = Off, 1 = On	
Sub Power	Sets the power to the Rudder module (SV2) or Thrudder module (SV3) On or Off.	0x0021	1	Boolean	0 = Off, 1 = On	
Payload 1 Power	Sets the power to Payload 1 On or Off.	0x0100	1	Boolean	0 = Off, 1 = On	
Payload 2 Power	Sets the power to Payload 2 On or Off.	0x0200	1	Boolean	0 = Off, 1 = On	

Parameter	Description	ID	Bytes	Type	Value [range]	Notes
Sub Payload Power	Sets the power to Glider or Towfish mounted payloads On or Off.	0x0300	1	Boolean	0 = Off, 1 = On	
C&C Internal Payload Power	Sets the power to legacy CCU internal payloads On or Off. This parameter is not supported on SV2 or SV3 vehicles - it is supported on legacy DB2 (pre-SV2) hardware only.	0x0400	1	Boolean	0 = Off, 1 = On	[3]
AIS Receiver Power	Sets the power to the AIS receiver On or Off.	0x0401	1	Boolean	0 = Off, 1 = On	
Weather Station Power	Sets the power to the Weather Station On or Off.	0x0402	1	Boolean	0 = Off, 1 = On	
Water Sensor Power	Sets the power to the Water Speed sensor On or Off.	0x0403	1	Boolean	0 = Off, 1 = On	
GPS Alarm Threshold	The number of consecutive Invalid GPS readings allowed before a GPS Alarm is sent to WGMS.	0x000F	1	Count	[0 to 255]	[4]
Camera Controller Power	Sets the power to the Camera Controller to On or Off. This parameter is not supported – use the Payload 3 Power parameter instead.	0x00FD	1	Boolean	0 = Off, 1 = On	
Payload File Transfer Reset	When transferring files to and from payloads, it is possible for the CCU to get into a confused state. This parameter clears any and all ongoing file transfers from the CCU so you can try again.	0x00FB	1	Boolean	0 = Off, 1 = On	
Payload Power On Enumeration Delay	Sets how, many seconds the CCU will wait after turning power to a payload port On, before attempting to enumerate the port. (To allow time for payload components to finish booting).	0x0018	2	Numeric	1-32767 default 15	
Iridium Fast Mailbox Checks	Turns the Iridium Fast Mailbox Check feature On or Off. When the Iridium Fast Mailbox Check feature is On, the latency	0x001C	1	Boolean	0 = Off, 1 = On	

Parameter	Description	ID	Bytes	Type	Value [range]	Notes
	for commands sent from shore is reduced.					
AIS Inner Circle	Used by the vehicle to determine when it should automatically turn on Iridium Fast Mailbox Checks to help get commands from shore faster. This setting is in minutes and is based on the time it would take a ship to cover the distance between the ship and Wave Glider at the ship's current speed. When an approaching ship is within the set number of minutes of the Wave Glider, the Iridium Fast Mailbox Checks feature is automatically turned On. For example, if you leave the AIS Inner Circle at the default setting of 30 minutes: A ship that is 10 nautical miles from the Wave Glider traveling at 20 knots, would cause Iridium Fast Mailbox Checks to automatically turn on. A ship that is 5 nautical miles from the Wave Glider traveling at 10 knots, would also result in Iridium Fast Mailbox Checks being automatically turned on.	0x0423	2	Numeric	0-240, default 30	
AIS Outer Circle	Similar to AIS Inner Circle setting, the AIS Outer Circle setting is used in conjunction with the AIS Outer Angle setting to determine when Iridium Fast Mailbox Checks is turned On. This setting is in minutes and is based on the time it would take a ship to cover the distance between the ship and Wave Glider at the ship's current speed on the	0x0424	2	Numeric	0-240, default 60	

Parameter	Description	ID	Bytes	Type	Value [range]	Notes
	course that the ship is following. When a ship is inside the AIS Outer Circle and on a course that takes it in the direction of the Wave Glider (as determined by the AIS Outer Angle setting), the Iridium Fast Mailbox Checks feature is turned On. For example, if you leave the AIS Outer Circle at the default setting of 60 minutes, and you leave the AIS Outer Angle at the default setting of 45 degrees: A ship that is 10 nautical miles from the Wave Glider traveling at 10 knots on a course that is 45 degrees or less relative to a straight line between the ship and the Wave Glider, would cause Iridium Fast Mailbox Checks to automatically turn on.					
AIS Outer Angle	The AIS Outer Angle is the angle formed by the course a ship is on relative to a straight line between the ship and the Wave Glider. The AIS Outer Angle setting can be from 0 to 90 degrees in one degree increments. The default setting is 45 degrees.	0x0425	2	Numeric	0-90, default 45	
Payload 3 Power	Sets the power to Payload 3 On or Off.	0x0500	1	Boolean	0 = Off, 1 = On	
Power Extension Port Power	Sets the power to the Payload Extra Power (PEP) port On or Off. SV2 Only.	0x0700	1	Boolean	0 = Off, 1 = On	
IPIB Reset	Resets the iPIB on an SV2 (Hardware version DB3 or later) Replaces iPIB Power.	0x0410	1	Boolean	0 = Off, 1 = On	
Magnetic Declination	Sets a magnetic declination for the area	0x0019	1	Numeric	-90 to 90	

Parameter	Description	ID	Bytes	Type	Value [range]	Notes
	that the Wave Glider is operating in.					
Modem Off Required Port	If you have a payload that can completely control the Wave Glider and you want the Iridium Modem to be Off all of the time, use this setting to specify the CCU payload port the controlling payload is connected to (payload port 1, 2, or 3), so the CCU can verify it has the expected control path available. This setting is supported for Wave Glider SV2 vehicles only.	0x0050	1	Numeric	1-3	
Enable Alternate GPS	Sets the CCU to use the alternate GPS data, instead of the core GPS, for navigation.	0x0040	1	Boolean	0 = Off, 1 = On	
Modem Off Required Address	If you have a payload that can completely control the Wave Glider and you want the Iridium Modem to be Off all of the time, use this setting to specify the address of the payload so the CCU can verify it has the expected control path available. This setting is supported for Wave Glider SV2 vehicles only.	0x0051	2	Numeric	Un-signed Number	
Modem Power	Sets the power to the Iridium Modem On or Off. Requires valid Modem Off Required Port and Address when turning off the modem.	0x0052	1	Boolean	0 = Off, 1 = On	
Modem Power At Boot	Sets the power to the Iridium Modem On or Off when the CCU or CCU boots.	0x0053	1	Boolean	0 = Off, 1 = On	
GPS Altitude Filter	This setting enables or disables the GPS Altitude Filter for versions of the SV2 CCU that use the altitude reported by the GPS to help determine if the GPS fix is invalid.	0x0041	1	Boolean	When on (1) ignore GPS: > +100m OR < -100m	

Notes:

[1] "Iridium Modem Always On" specifies that the Iridium modem should not turn OFF between transmissions.

[2] "Iridium Modem Default On" indicates that the Iridium modem will only turn ON when it is transmitting or expecting a message.

[3] The CCU interfaces with – and supplies power to – a payload within the CCU dry box. This parameter controls the power to that payload.

[4] "GPS Alarm Threshold" is the count of continuous invalid GPS fixes detected before the "GPS Not Functioning" alarm, is triggered.

Restricted Parameters

The following parameters are supported for users who are assigned the WGMS Root or Admin roles only:

Parameter	Description	ID	Bytes	Type	Value (default) [range]	Notes
XBee PAN ID	Sets the XBee PAN ID.	0x0016	2	Numeric	(0x5000)	[1]
Default XBee Channel	Sets the default XBee channel.	0x0017	1	Numeric	(12) [12 to 23]	[2]
Enable PID Navigation	Turns Line Following On or Off.	0x0030	1	Boolean	0 = Off, 1 = On	[3]
P Gain Value	Sets the Proportional Gain for Line Following (from -32767 to 32767)	0x0031	2	Numeric	(0) [0 to 32767]	[4]
I Gain Value	Sets the Integral Gain for Line Following (from -32767 to 32767)	0x0032	2	Numeric	(0) [0 to 32767]	[5]
Integral Sat Limit	Sets the maximum allowed correction for Line Following (from 0 to 90 degrees).	0x0033	2	Numeric	[0 to 90]	[6]

Notes:

[1] The "XBee PAN ID" is the user-defined Personal Area Network ID for the XBee system.

[2] The "Default XBee Channel" is user-defined.

[3] "Enable PI Navigation" enables/disables navigation using proportional-integral course correction.

[4] The "P Gain Value" is the proportional gain filter coefficient for PI navigation. The specified value is scaled internally to the range [0.0 to 0.5].

[5] The "I Gain Value" is the integral gain filter coefficient for PI navigation. The specified value is scaled internally to the range [0.0 to 0.5].

[6] The "Integral Sat Limit" the maximum allowed integral value for PI navigation.

Retrieve Debug Buffer (0x7000)

System Admin/Developer roles have access to this command. The ACK for this command should have the debug buffer packet in it.

Field Name	Bytes	Default Value
Structure Id	1	0x10
Command Value	2	0x7000
Field 3	1	0
Field 4	1	0
Field 5	1	0
Field 6	1	0
Field 7	1	0
Latitude	4	0
Longitude	4	0

Retrieve Sub Heading Buffer (0x7001)

System Admin/Developer roles have access to this command. The ACK for this command should have the debug buffer packet in it.

Field Name	Bytes	Default Value
Structure Id	1	0x10
Command Value	2	0x7001
Field 3	1	0
Field 4	1	0
Field 5	1	0
Field 6	1	0
Field 7	1	0
Latitude	4	0
Longitude	4	0

Retrieve PID Integral Cache (0x7002)

System Admin/Developer roles have access to this command. The ACK for this command should have the debug buffer packet in it.

Field Name	Bytes	Default Value
Structure Id	1	0x10
Command Value	2	0x7002
Field 3	1	0

Field Name	Bytes	Default Value
Field 4	1	0
Field 5	1	0
Field 6	1	0
Field 7	1	0
Latitude	4	0
Longitude	4	0

Retrieve PID Operating Params (0x7003)

System Admin/Developer roles have access to this command. The ACK this command should have the debug buffer packet in it.

Field Name	Bytes	Default Value
Structure Id	1	0x10
Command Value	2	0x7003
Field 3	1	0
Field 4	1	0
Field 5	1	0
Field 6	1	0
Field 7	1	0
Latitude	4	0
Longitude	4	0

New Waypoint (0x8000)

Waypoint numbers 0 and 255 are not valid for waypoint creation. The ACK should include the number of new waypoints created, the number of previous waypoints overwritten, and as long as at least 1 waypoint has been added or modified by the Wave Glider, it should respond with an ACK. The Wave Glider will NAK if no waypoints in the system have been added or modified.

Field Name	Bytes	Default Value
Structure Id	1	0x10
Command Value	2	0x8000
Field 3	1	0
Field 4	1	0
Field 5	1	0
Field 6	1	0
Waypoint Number	1	Waypoint number
Latitude	4	Latitude
Longitude	4	Longitude

New Waypoint with Attributes (0x8001)

New waypoint with attributes carries a script that is executed when the glider reaches the new waypoint specified by the command. The script size cannot exceed 214 bytes.

Waypoint numbers 0 and 255 are not valid for waypoint creation. The ACK should include the number of new waypoints created, the number of previous waypoints overwritten, and as long as at least 1 waypoint has been added or modified by the Wave Glider, it should respond with an ACK. The Wave Glider will NAK if no waypoints in the system have been added or modified.

Field Name	Bytes	Default Value
Structure Id	1	0x10
Command Value	2	0x8001
Script Length	2	N
Field 5	1	0
Field 6	1	0
Waypoint Number	1	Waypoint number
Latitude	4	Latitude
Longitude	4	Longitude
Script Buffer	4N (Max. 214 bytes)	Script to execute when glider arrives at new waypoint.

Read Waypoint (0x8003)

- Requests the Lat/Long coordinates of a specific Waypoint number.

ACK – The ACK should be structure type 0x10 which includes the status with the latitude/longitude of the waypoint read in the hold lat/long fields (see [“ACK - Status with Waypoint Read-Back \(0x10\)”](#) (page 98))

NAK – The Wave Glider will NackData if no such Waypoint exists (see [“NAK – Invalid Data \(0x22\)”](#) (page 111)) if the specified Waypoint number hasn't been defined.

Field Name	Bytes	Value [range]
Structure ID	1	0x10
Command Value	2	0x8003
Waypoint Number	1	Waypoint number
Field 4	1	0
Field 5	1	0
Field 6	1	0
Field 7	1	0
Latitude	4	0
Longitude	4	0

Note:

When the ACK is returned, remote applications will compare the returned Lat/Long values to the values stored in the database. If they do not agree, an alarm will be issued.

Follow Course and Loop (0x8101)

- Commands the vehicle to follow a course from Waypoint to Waypoint in the order specified. The Waypoint numbers need not be sequential. When the vehicle reaches the last Waypoint, it goes to the first Waypoint and continues looping until terminated by another command.

ACK – No Payload (see “[ACK - No Payload Response \(0x13\)](#)” (page 103))

NAK – Data Error if:

- Any undefined Waypoint numbers.
- Count does not match number of Waypoints specified.
- The Target Waypoint is not one of the course Waypoints specified.

Field Name	Bytes	Value [range]	Notes
Structure ID	1	0x12	
Command Value	2	0x8101	
Target Waypoint	1	[1 to 254]	[1] [2]
Count of Waypoints	1	[1 to 213]	
Waypoint Number	1	[1 to 254]	
Waypoint Number	1	[1 to 254]	
.....	...	...	
.....	...	...	
Waypoint Number	1	[1 to 254]	

Notes:

[1] The Target Waypoint is the first Waypoint that the vehicle goes to, and must be the same as one of the course Waypoints specified in the command.

[2] If the Target Waypoint is specified more than once in the list of waypoint numbers, the vehicle will initially proceed toward the first course Waypoint in the list.

Follow Course With Options (0x8102)

- Commands vehicle to follow a course from Waypoint to Waypoint in the order specified. An additional option field specifies whether to loop continuously, or to hold at the last Waypoint.

ACK – No Payload (see “[ACK - No Payload Response \(0x13\)](#)” (page 103))

NAK – Data Error if:

- Any undefined Waypoint numbers.
- Count does not match number of Waypoints specified.
- The Target Waypoint is not one of the course Waypoints specified.

d) The Navigation Option is not 0 or 1.

Field Name	Bytes	Value [range]	Notes
Structure ID	1	0x12	
Command Value	2	0x8102	
Target Waypoint	1	[1 to 254]	[1]
Navigation Option	1	0x00 or 0x01	[2]
Count of Waypoints	1	[1 to 213]	
Waypoint Number	1	[1 to 254]	
Waypoint Number	1	[1 to 254]	
.....	...	...	
.....	...	...	
Waypoint Number	1	[1 to 254]	

Notes:

[1] The "Target Waypoint" is the first Waypoint that the vehicle goes to, and must be the same as one of the course Waypoints specified in the command.

[2] The "Navigation Option" indicates what the vehicle should do when it reaches the last Waypoint. The options are:

0x00 → Loop Continuously

0x01 → Hold at Last Waypoint

Add MMSI to Watch List (0x8200)

Add MMSI to vehicle watch list to allow for increased reporting rate for the vessel under watch.

Field Name	Bytes	Default Value
Structure Id	1	0x10
Command Value	2	0x8200
MMSI	4	Any
Field 7	1	0
Latitude	4	0
Longitude	4	0

Initialize File Write (0x9000)

- Start a data file download to the CCU or to a Payload.

ACK – No Payload (see [“ACK - No Payload Response \(0x13\)”](#) (page 103))

NAK:

- Command Error (see [“NAK - Invalid Command \(0x22\)”](#) (page 111))
- Data Error (see [“NAK – Invalid Data \(0x22\)”](#) (page 111))

- File Error (see “NAK – File Error (0x24)” (page 111))

Field Name	Bytes	Value [range]	Notes
Structure ID	1	0x18	
Command Value	2	0x9000	
Storage Controller Address	2	[1 to 256] + [1 to 256]	[1]
File Name	11	8+3 ASCII string (see “File Names” (page 88))	[2] [4]
File ID	4	Remote application-generated (or 0xFFFFFFFF)	[3] [4]
File Length	4	Number of bytes ≥ 1	[5]
Creation Date	6	Time+Date	[6] [7]
Modified Date	6	Time+Date	[6] [7] [8]
File Attributes	1	Bit flags	[9]
Overwrite File Flag	1	0x00 or 0xFF	[10]
CRC-16 of content	2		[11]
MD5 of content	16		[11]
Number of bytes to write	2	N ≥ 0	
File Data	0 to N		[12]

Notes:

[1] The "Storage Controller Address" is the 1-byte Board Address, and the 1-byte Task ID (see “Addresses” (page 86)). The Float CCU has the reserved address value: 0x0000

[2] The "File Name" is an ASCII string padded by spaces. Only the characters 0x20 thru 0x7E are allowed. (see “File Names” (page 88)).

[3] The "File ID" is typically generated by remote applications. If this command is not generated by remote applications, the value 0xFFFFFFFF must be used.

[4] The following file names and ID numbers are reserved; they cannot be written or deleted:

EEPROM (ID = 0x1): Non-Volatile memory at the Storage Controller Address

PRGMEM (ID = 0x2): Program memory at the Storage Controller Address

RAM (ID = 0x3): Volatile memory at the Storage Controller Address

[5] The "File Length" is the total number of bytes to allocate for storing the file. It cannot be zero.

[6] Dates use 1 byte per value in the order shown below. Value ranges are enclosed in [].

Hour	[0 to 23]
Minute	[0 to 59]
Second	[0 to 59]
Month	[1 to 12]
Day	[1 to 31]

Year-2000 [0 to 99]

[7] If all the time/date value fields are set to zero, the time/date value stored in the vehicle's CCU will be used.

[8] The Modified Date field will be updated by any subsequent writes to the file content.

[9] The "File Attributes" flag bit flags indicate the following: 0x01 set $\diamond$ Read Only 0x08 set $\diamond$ (reserved) All other bits are user-defined.

[10] The "Overwrite File Flag" indicates what to do if the file already exists: 0x00: Don't overwrite the file (returns NAK) 0xFF: Overwrite the file.

[11] The CRC-16 and MD5 values should be provided for later checking by remote applications.

[12] There will be no "Data" field if there are no bytes to be written with this command.

Write File Block (0x9001)

- Send a single block of data from the file.

ACK – No Payload (see [“ACK - No Payload Response \(0x13\)” \(page 103\)](#))

NAK:

- Command Error (see [“NAK - Invalid Command \(0x22\)” \(page 111\)](#))
- Data Error (see [“NAK – Invalid Data \(0x22\)” \(page 111\)](#))
- File Error (see [“NAK – File Error \(0x24\)” \(page 111\)](#))

Field Name	Bytes	Value [range]	Notes
Structure ID	1	0x19	
Command Value	2	0x9001	
Storage Controller Address	2	[1 to 256] + [1 to 256]	[1]
File ID	4	0xFFFFFFFF (unless remote application-generated)	[2]
Offset (Seek)	4	[0 to (File_Length - 1)]	[3]
Number of Bytes to Write	2	N [>0]	[4]
File Data	1 to N	[1 to (Packet_Size – 19)]	

Notes:

[1] The "Storage Controller Address" is the 1-byte Board Address, and the 1-byte Task ID (see [“Addresses” \(page 86\)](#)). The Float CCU has the reserved address value: 0x0000

[2] The "File ID" value 0xFFFFFFFF must be used if this command is generated by a payload. (The ID is otherwise generated by remote applications.)

[3] The "Offset: is the number of bytes from the start of the file at which the write begins. Offset = 0 $\rightarrow$ Start of File

[4] The "Number of Bytes" cannot be zero. The limit is determined by the overall packet size.

Delete File (0x9002)

- Delete a file from the selected storage address.

ACK – No Payload (see [“ACK - No Payload Response \(0x13\)”](#) (page 103))

NAK:

- Command Error (see [“NAK - Invalid Command \(0x22\)”](#) (page 111))
- Data Error (see [“NAK – Invalid Data \(0x22\)”](#) (page 111))
- File Error (see [“NAK – File Error \(0x24\)”](#) (page 111))

Field Name	Bytes	Value [range]	Notes
Structure ID	1	0x1A	
Command Value	2	0x9002	
Storage Controller Address	2	[1 to 256] + [1 to 256]	[1]
File Name	11	8+3 ASCII string. (see “File Names” (page 88))	[2]
File ID	4	0xFFFFFFFF (unless remote application-generated)	[3]
Override Read Flag	1	0x00 or 0xFF	[4]

Notes:

[1] The "Storage Controller Address" is the 1-byte Board Address, and the 1-byte Task ID (see [“Addresses”](#) (page 86)). The Float CCU has the reserved address value: 0x0000.

[2] The "File Name" is an ASCII string padded by spaces (see [“File Names”](#) (page 88)). This name will be ignored if the File ID is not 0xFFFFFFFF.

[3] The "File ID" value 0xFFFFFFFF must be used if this command is generated by a payload. (The ID is otherwise generated by remote applications.)

[4] The "Override Read Flag" value indicates the following:

0x00 = Do not delete file if marked Read-Only

0xFF = Delete file even if the file is marked as Read-Only

Read File Request (0x9003)

- Send a request to read a file from the vehicle.

ACK – Read File ACK

NAK:

- Command Error (see [“NAK - Invalid Command \(0x22\)”](#) (page 111))
- Data Error (see [“NAK – Invalid Data \(0x22\)”](#) (page 111))
- File Error (see [“NAK – File Error \(0x24\)”](#) (page 111))

Field Name	Bytes	Value [range]	Note
Structure ID	1	0x1B	
Command Value	2	0x9003	
Storage Controller Address	2	[1 to 256] + [1 to 256]	[1]
File Name	11	8+3 ASCII string. (see “File Names” (page 88))	[2]
Transaction ID	4	See note [3]	[3]
Offset (Seek)	4	[0 to (File_Length – 1)]	[4]
Read Length	4	0 or [1 to File_Length]	[5]
Max Response Size	2	175	[6]

Notes:

[1] The "Storage Controller Address" is copied from the New File Available request.

[2] The "File Name" is an ASCII string padded by spaces. (see [“File Names” \(page 88\)](#))

[3] The "Transaction ID" is -1 for the first read. For retries, it is the original Read File ID. (see [“Read File Transaction Closed \(0x9007\)” \(page 258\)](#))

[4] The "Offset" is the number of bytes from the start of the file at which the write begins. Offset = 0 → Start of File.

[5] The "Read Length" indicates how many bytes to read from the Offset. Read Length = 0 → Read entire file starting from the Offset.

[6] The "Max Response Size" is the maximum number of bytes to allocate for the response. The vehicle may choose to report fewer bytes than requested.

Get Detailed File List (0x9004)

- Used to request a directory listing or the listing for a specific file. Optionally, this command can be used to request a check of the validity of a file using MD5 and CRC, and delete files that fail the validity check.
- If the Float CCU is implementing a “store and forward” protocol, a successful file check will transfer the file to its target storage controller, resulting in a second ACK.

ACK – Get Detailed File List Data (see [“ACK - Detailed File List Data \(0x1C\)” \(page 107\)](#))

ACK – File at Destination [2nd response if file transferred] (see [“ACK – File at Destination \(0x1F\)” \(page 108\)](#))

NAK:

- Command Error (see [“NAK - Invalid Command \(0x22\)” \(page 111\)](#))
- Data Error (see [“NAK – Invalid Data \(0x22\)” \(page 111\)](#))
- File Error (see [“NAK – File Error \(0x24\)” \(page 111\)](#))

Field Name	Bytes	Value [range]	Notes
Structure ID	1	0x1C	

Field Name	Bytes	Value [range]	Notes
Command Value	2	0x9004	
Storage Controller Address	2	[1 to 256] + [1 to 256]	[1]
File Name	11	8+3 ASCII string. (see “File Names” (page 88))	[2]
File ID	4	0xFFFFFFFF (unless remote application-generated)	[3]
Action Flags	1	Bit Flags	[4]
Max Response Size	2	[1 to 300]	[5]

Notes:

[1] The "Storage Controller Address" is the 1-byte Board Address, and the 1-byte Task ID (see [“Addresses” \(page 86\)](#)). The Float CCU has the reserved address value: 0x0000

[2] The "File Name" is an ASCII string padded by spaces (see [“File Names” \(page 88\)](#)). This name will be ignored if the File ID is not 0xFFFFFFFF.

[3] The "File ID" value 0xFFFFFFFF must be used if this command is generated by a payload. (The ID is otherwise generated by remote applications.)

[4] The "Action Flags" are bit fields used to request the following:

0x01 bit = 1 → Files should be MD5 and CRC checked before reporting

0x02 bit = 1 → Files failing check should be deleted

[5] The "Max Response Size" is the maximum number of bytes to allocate for the response. Note that the vehicle may choose to respond with a smaller packet than requested.

Select Program (0x9005)

- This command is used to select one or more program images. Each program can be specified as either the current selection, as a default selection, or as both.
- For each program, the file MD5 will be checked, unless it has previously been checked. If the MD5 check fails for a program, that program will not be selected. Thus, this command can be used in place of a "Get File List" command to verify the validity of program files.
- If the Float CCU is implementing a "store and forward" protocol, a successful file check will transfer the file to its target storage controller, resulting in a second ACK.

ACK – No Payload (see [“ACK - No Payload Response \(0x13\)” \(page 103\)](#))

ACK – File at Destination [2nd response if file transferred] (see [“ACK – File at Destination \(0x1F\)” \(page 108\)](#))

NAK:

- Command Error (see [“NAK - Invalid Command \(0x22\)” \(page 111\)](#))
- Data Error (see [“NAK – Invalid Data \(0x22\)” \(page 111\)](#))
- File Error (see [“NAK – File Error \(0x24\)” \(page 111\)](#))

Field Name	Bytes	Value [range]	Notes
Structure ID	1	0x10	
Command Value	2	0x9005	
Storage Controller Address	2	[1 to 256] + [1 to 256]	
Number of Program Selections	2	N $\geq$ 1	[1]
Program Record 1	9	See below	
Program Record 2	9		
.....	...		
.....	...		
Program Record N	9		

Program Record Types are as follows:

Field Name	Bytes	Value [range]	Notes
Program Type Select	1	0, 1 or 2	[2]
File ID	4	remote application-generated only	[3]
Board Address	2	[1 to 256] + [1 to 256]	[4]
(reserved)	2	0	

Notes:

[1] At least one program must be specified.

[2] "Program Type Select" specifies the type of one program. Any other program on the board is de-selected. The select flags are:

0 = Select program as the default

1 = Select program as current (the one to be used)

2 = Select program as both default and current

[3] The "File ID" is the remote application-generated number that will be used to tag all the ACKs with file blocks. These will then have to be assembled back to form the actual file. (The ID 0xFFFFFFFF cannot be used)

[4] The "Board Address" is the location (CCU or payload) where the program will be executed.

Write Console Input to Vehicle (0x9006)

- Writes a stream of ASCII data to the CCU or a payload board on the vehicle.

ACK – No Payload (see [“ACK - No Payload Response \(0x13\)”](#) (page 103))

NAK – Command Error (see [“NAK - Invalid Command \(0x22\)”](#) (page 111)), Data Error (see [“NAK – Invalid Data \(0x22\)”](#) (page 111))

Field Name	Bytes	Value [range]	Notes
Structure ID	1	0x1E	
Command Value	2	0x9006	

Field Name	Bytes	Value [range]	Notes
Destination Address	2	[1 to 256] + [1 to 256]	[1]
Function	1	0x00 for CCU, or else user-assigned	[2]
Number of Bytes in Data	2	N ≥ 1	
Data	1 to N	ASCII data for vehicle console input	

Notes:

[1] The "Destination Address" is the 1-byte Board Address, and the 1-byte Task ID (see ["Addresses" \(page 86\)](#)). The Float CCU has the reserved address value: 0x0000.

[2] The "Function" is a user-assigned code value that is passed to the destination board. If the destination board is the CCU, the Function value should be 0x00.

Read File Transaction Closed (0x9007)

- Sends a transaction closed message to the vehicle to signify successful reception of the file. The CCU then removes the file from the vehicle's memory.

ACK – No Payload (see ["ACK - No Payload Response \(0x13\)" \(page 103\)](#))

NAK – Command Error (see ["NAK - Invalid Command \(0x22\)" \(page 111\)](#)), Data Error (see ["NAK – Invalid Data \(0x22\)" \(page 111\)](#))

Field Name	Bytes	Default Value	Notes
Structure ID	1	0x10	
Command Value	2	0x9007	
Storage Controller Address	2	[1 to 256] + [1 to 256]	[1]
(reserved)	3	0	
File ID	4	remote applications-generated	
Longitude	4	0 (not used)	

Notes:

[1] The "Storage Controller Address" is the 1-byte Board Address, and the 1-byte Task ID (see ["Addresses" \(page 86\)](#)). The Float CCU has the reserved address value: 0x0000.

Get File List (0x9008)

- Used to request a directory listing or the listing for a specific file. Optionally, this command can request a check of the validity of a file using MD5 and CRC, and delete files that fail the validity check.
- If the Float CCU is implementing a "store and forward" protocol, a successful file check will transfer the file to its target storage controller, resulting in a second ACK.

ACK – Detailed File List Data (see ["ACK - Detailed File List Data \(0x1C\)" \(page 107\)](#))

ACK – File at Destination [2nd response if file transferred] (see ["ACK – File at Destination \(0x1F\)" \(page 108\)](#))

NAK:

- Command Error (see [“NAK - Invalid Command \(0x22\)”](#) (page 111))
- Data Error (see [“NAK – Invalid Data \(0x22\)”](#) (page 111))
- File Error (see [“NAK – File Error \(0x24\)”](#) (page 111))

Field Name	Bytes	Value [range]	Notes
Structure ID	1	0x31	
Command Value	2	0x9008	
Storage Controller Address	2	[1 to 256] + [1 to 256]	[1]
File Name	11	8+3 ASCII string. (see “File Names” (page 88))	[2]
File remote applications ID	4	See note [3]	[3]
Action Flags	1	Bit Flags	[4]
Max Response Size	2	[1 to 300]	[5]

Notes:

[1] The "Storage Controller Address" is the 1-byte Board Address, and the 1-byte Task ID (see [“Addresses”](#) (page 86)). The Float CCU has the reserved address value: 0x0000

[2] The "File Name" is an ASCII string padded by spaces (see [“File Names”](#) (page 88)). This name will be ignored if the File ID is not 0xFFFFFFFF.

[3] The "File ID" value 0xFFFFFFFF must be used if this command is generated by a payload. (The ID is otherwise generated by remote applications.)

[4] The "Action Flags" are bit fields used to request the following:

0x01 bit = 1 → files should be MD5 and CRC checked before reporting

0x02 bit = 1 → files failing check should be deleted

[5] The "Max Response Size" is the maximum number of bytes to allocate for the response. Note that the vehicle may choose to respond with a smaller packet than requested.

Write Console Script (0x9100)

This is a single packet command to a particular 16-bit board address on a Wave Glider expecting either ASCII or binary data.

Field Name	Bytes	Value
Structure ID	1	0x1E (Write Console Input to Wave Glider)
Command Value	2	0x9100 (execute component command – ASCII format)
Destination Address	2	0 = Float CCU; otherwise, the address for the board to receive console input or command
Function	1	0 or destination specific value (user entered)
Number of Bytes in Data	2	The number of bytes in the Data field (at least 1)

Field Name	Bytes	Value
Data	1..N	Data to send into Wave Glider Console input (ASCII)

Write Console Binary (0x9101)

This is a single packet command to a particular 16-bit board address on a Wave Glider expecting either ASCII or binary data.

Field Name	Bytes	Value
Structure ID	1	0x1E (Write Console Input to Wave Glider)
Command Value	2	0x9101 (execute component command – binary format)
Destination Address	2	0 = Float CCU; otherwise, the address for the board to receive console input or command
Function	1	0 or destination specific value
Number of Bytes in Data	2	The number of bytes in the Data field (at least 1)
Data	1..N	Data to send into Wave Glider Console input (HEX)

Float Reboot (0xA000)

System Admin/Developer roles have access to this command to reset the float in the case of no-response or debug. This command is not expected to be ACKed by the vehicle and will be followed up by a Float Reboot alarm on the next telemetry transmission.

Field Name	Bytes	Default Value
Structure Id	1	0x10
Command Value	2	0xA000
Field 3	1	0
Field 4	1	0
Field 5	1	0
Field 6	1	0
Field 7	1	0
Latitude	4	0
Longitude	4	0

Reserved (0xA51E)

The ACK for this command is structure type 0xA1.

Field Name	Bytes	Default Value
Structure Id	1	0x64
Command Value	2	0xA51E
Internal Use	Variable (68)	
Internal Use	32	

Secure On (0xA500)

Command to start the process of switching to a secure (encrypted) channel communication between vehicle and remote applications. *This command and its ACK is always sent in clear text.

Field Name	Bytes	Value
Structure ID	1	0x64
Command Value	2	0xA500
Remote application Ephemeral ECDH-P256 Public Key (in Vehicle Key Format**)	Variable (68)	
Client Channel Id	32	

*See Secure On ACK message format for response.

** Vehicle Key Format is 68 byte Big Endian Key Format:

Description	Value	Length (bytes)	
Bit Length X (for P256 and SHA256)	256	2	Count of bits (Big Endian)
X	...	32	
Bit Length Y (for P256 and SHA256)	256	2	Count of bits (Big Endian)
Y	...	32	

Secure Authenticate (0xA501)

Command to send the vehicle a pass-phrase to authenticate a remote application. This command is always sent in clear text, and the Pass-Phrase field is encrypted with a symmetric key.

Field Name	Bytes	Value
Structure ID	1	0x65
Command Value	2	0xA501
Client Channel Id	32	
IV size	1	
Cipher text size	2	
IV	Variable	
Pass-Phrase (cipher text)	Variable	

Secure Register Client (0xA502)

Command to send the vehicle a client registration allowing the vehicle to recognize future secure clients.

Field Name	Bytes	Value
Structure ID	1	0x66
Command Value	2	0xA502

Field Name	Bytes	Value
Client Permanent ECDSA-P256 Public Key (Vehicle Key Format)	68	
Client Channel Id	32	
Pass-Phrase	20	

Secure Off (0xA504)

Command to start the process of switching from a secure (encrypted) channel to clear text communication between the vehicle and remote applications.

Field Name	Bytes	Value
Structure ID	1	0x10
Command Value	2	0xA504
Field 3	1	0
Field 4	1	0
Field 5	1	0
Field 6	1	0
Field 7	1	0
Latitude	4	0
Longitude	4	0

Secure Enable Partition (0xA505)

This is a single packet command that will be intercepted by the Crypto Lib and be replaced by Write Debug Console with the appropriate encrypted partition mount command.

Field Name	Bytes	Value
Structure ID	1	0x10
Command Value	2	0xA505
PartId	4	User entered
Field 7	1	0
Latitude	4	0
Longitude	4	0

Retrieve Log File (0xB001)

Field Name	Bytes	Value
Structure ID	1	0x10
Command Value	2	0xB001
Month	1	
Day	1	0
Year	1	Year - 2000
Hour	1	

Field Name	Bytes	Value
Minute	1	
Second	1	
Number of Entries	2	1 - n
Sublog Number	1	1 - 99
Spare	4	

Commands for SV3 Vehicles Only

This section lists commands that can be issued on Wave Glider SV3 vehicles only. See [“Commands for SV2 and SV3 Vehicles” \(page 231\)](#) for commands that can be issued on Wave Glider SV2 and Wave Glider SV3 vehicles.

SV3-only commands are issued using the SV2/SV3 compatible [“Write Console Script \(0x9100\)” \(page 259\)](#) command by including the SV3 command syntax in the data field of the Write Console Script binary command structure.

The Write Console Script command delivers a single packet to a 16-bit board address (0,0) on a Wave Glider expecting either ASCII or binary data.

Table A.1. Write Console Script Binary Command Structure

Field Name	Bytes	Value
Structure ID	1	0x1E (Write Console Input to Wave Glider)
Command Value	2	0x9100 (execute component command – ASCII format)
Destination Address	2	0 = Float CCU; otherwise, the address for the board to receive console input or command
Function	1	0 or destination specific value (user entered)
Number of Bytes in Data	2	The number of bytes in the Data field (at least 1)
Data	1..N	Data to send to the Wave Glider CCU console input (ASCII). This is where you enter the SV3-only command syntax. See “SV3-Only Commands: Syntax and Descriptions” (page 263) for more information.

SV3-Only Commands: Syntax and Descriptions

The tables in this section provide:

- The SV3-only command syntax to be entered into the data field of the **Write Console Script** binary command structure.

- A description of what each SV3-only command does.
- Information on the type of command:
 - **Standard Piloting** commands can be used by pilots based on the information provided in the command description. The **S** icon appears in the **Type** column for **Standard Piloting** commands.
 - **Expert** commands should not be used without first consulting the LRI Support Organization to gain a better understanding of the Wave Glider behaviors (and the risks) associated with these commands. The **E** icon appears in the **Type** column for **Expert** commands.

Table A.2. amps

Command Syntax and Description	Type
%amps.rebootSub() Power cycle the Thrudder Module.	S
%amps.handleFloatReboot() Do a full CCU reboot, including Regulus and Linux.	E
%amps.rebootSub3() Power-off the Thrudder Module for 3 minutes, then power it on.	E
%amps.rebootSub10() Power-off the Thrudder Module for 10 minutes, then power it on.	E
%amps.rebootSub(float) Power-off the Thrudder Module for the specified number of minutes, then power it on.	E
%amps.resetRudder() Power cycle the Thrudder Module expansion port.	E

Table A.3. camera

Command Syntax and Description	Type
%camera.takePhotoNow() Take a photo when the CCU receives the command.	S
%camera.takePhotoOf(double,double) Take a photo when the specified latitude/longitude is reached.	S
%camera.takePhotoOfAnything() Find something nearby to take a picture and take a picture.	S
%camera.addTarget(double,double) The latitude/longitude value of something to take a picture of.	E

Table A.4. commsManager

Command Syntax and Description	Type
%commsManager.clearDefaultChannel() If a default communications channel was previously set, issuing this command will clear the default setting. After the default setting has been cleared it will remain set at whatever communications channel you are using, until you issue a command setting it to a different channel.	S

Table A.5. ffn

Command Syntax and Description	Type
%ffn.setBoostThresholds(float,float) Changes the thresholds at which thruster power is automatically turned on and off. The thresholds are "speed-to-goal" settings. "Speed-to-goal" takes into account speed over ground, speed over water, and adherence to a straight line between waypoints.	S
%ffn.setAvoidObstacles(boolean) Sets automatic avoidance of dynamic obstacles - primarily ships. Enter True = 1 to turn on obstacle avoidance. Enter False = 0 to turn off obstacle avoidance.	S
%ffn.stdbox() Change waypoint list to a standard box at Kawaihae.	S
%ffn.mfgbox() Change waypoint list to the standard Sunnyvale manufacturing checkout box.	S
%ffn.setFigure8(boolean) Use a figure 8 shaped watch circle. Enter True = 1 for vehicle to begin a figure 8 watch circle. Enter False = 0 for vehicle to stop traveling in a figure 8 watch circle.	S
%ffn.heading(float) Manually override vehicle heading. Enter a new heading in degrees. .	S
%ffn.gotoWatch(double,double,double) Go to a watch circle: Enter comma separated: • Latitude • Longitude	S

Command Syntax and Description	Type
• Radius in meters	
%ffn.hold() Start a 150M radius watch circle at the current location.	S
%ffn.hold(double) Start a watch circle at the current location. Enter the radius of the watch circle in meters.	S
%ffn.setHoldLast(boolean) Enter True = 1 to hold station at the last waypoint. Enter False = 0 to cycle back to the first waypoint.	S
%ffn.setLineFollowing(boolean) Enter True = 1 for the vehicle to follow a straight line between waypoints. Enter False = 0 to allow the vehicle to drift while moving between waypoints.	S
%ffn.advanceToNextWaypoint() Skip the current waypoint heading and change the heading to proceed directly to the next waypoint.	S
%ffn.resume() Resume previously suspended navigation settings and proceed to the next waypoint.	S
%ffn.setRadiusMeters(double) Sets the radius of the watch circle. Enter radius in meters.	S
%ffn.wpl(double[]) Sets an array of waypoints. Enter an array of comma separated latitude/longitude pairs to define waypoints.	S
%ffn.wpl(boolean,double[]) Sets an array of waypoints with the option to go into a watch circle when the last vehical arrives at the last waypoint in the course. Enter True = 1 or False = 0 to set hold at last waypoint. Enter an array of comma separated latitude/longitude pairs to define the waypoints in a course.	S
%ffn.setAchievedThresholdMeters(double) Set how close to a waypoint the vehicle must get to meet the requirement that it has arrived at that waypoint (and can proceed to the next waypoint).	E

Command Syntax and Description	Type
Enter the distance in meters.	
%ffn.forceRudder(float) Suspend all navigation settings and force the rudder to a fixed angle. Enter forced rudder angle in degrees. Use the %ffn.resume() command to restore navigation settings.	E
%ffn.setLineFollowingStrength(float) Sets how much energy a Wave Glider will expend trying to follow a straight line between waypoints. Settings greater than 2 can induce instabilities.	E
%ffn.setLineWidthMeters(float) Sets the distance in meters to either side of a straight line between waypoints where the Wave Glider is allowed to wander as it makes progress toward its goal. The smaller the setting, the straighter the line, but energy can be wasted and instabilities can be induced.	E
%ffn.setLissajous(double) Enter 1=> circle. Enter 2=> figure 8. Enter others - fill the space.	E
%ffn.setMaxTurnRateDegreesPerSecond(float) Sets the maximum rate at which the Wave Glider is allowed to turn.	E
%ffn.setAspect(double) Sets the watch circle aspect ratio.	E
%ffn.setRotationDegrees(double) Sets watch circle rotation in degrees - not useful for circles.	E

Table A.6. morse

Command Syntax and Description	Type
%morse.tapMessage(String) Flash a morse code message through the vehicle marker light. Enter a text message to send.	S

Table A.7. pwrCtl

Command Syntax and Description	Type
%pwrCtl.off(String,int,int) Send the power-off command to <i>Domain,Module,Port</i> . Enter the domain as a text string.	S

Command Syntax and Description	Type
Enter the module.	S
Enter the port.	
%pwrCtl.on(String,int,int)	
Send the power-on command to <i>Domain,Module,Port</i> :	
Enter the domain as a text string.	
Enter the module.	
Enter the port.	

Table A.8. ship

Command Syntax and Description	Type
%ship.setTreatmentCircle()	S
Circle the ship with a radius of 20m.	
%ship.setTreatmentIgnore()	S
Ignore the ship selected for special treatment.	
%ship.setTreatmentNormal()	S
Treat the ship selected for special treatment just like any other ship (no special treatment).	
%ship.setSpecialMMSI(int)	S
Set the MMSI code for a ship that you want to give special treatment (please define special treatment, or provide an example). The default setting is 338149019 (the Po'okela)	
Enter the MMSI code of the ship.	

Table A.9. surfer

Command Syntax and Description	Type
%surfer.wgDumpsyncd()	S
Gets Seismic Surfer sync status and history.	
%surfer.wgErase()	S
Erase all *.bin seismic files.	
%surfer.powerlbn(boolean)	S
Toggle IBN power state.	
Enter 1 = on	
Enter 0 = off	

Command Syntax and Description	Type
%surfer.powerStreamer(boolean) Toggle Streamer power state. Enter 1 = on Enter 0 = off	S
%surfer.wgStart(int) Turn on the Streamer & IBN and start data collection. Enter the number of seconds to delay before data collection begins.	S
%surfer.wgStatus() Get the status of Seismic Surfer processes.	S
%surfer.wgStop() Halt data collection and turn off the IBN and Streamer.	S
%surfer.wgTestStreamer() Test IBN and Streamer - cycle power to test IBN and Streamer.	S

Table A.10. telemetry06Reporter

Command Syntax and Description	Type
%telemetry06Reporter.updateReportRate(int) Set the telemetry reporting frequency. Enter the number of minutes between telemetry reports.	S

Table A.11. untwist

Command Syntax and Description	Type
%untwist.twistIsClear() Clears (resets) the twist indicator.	S
%untwist.untwistCCW() Untwist degrees counter-clockwise.	S
%untwist.untwistCW() Untwist degrees clockwise.	S

Table A.12. wap

Command Syntax and Description	Type
%wap.turnOff() Turn wireless access point off.	S

Command Syntax and Description	Type
%wap.turnOn() Turn wireless access point on.	S

Table A.13. waterSpeed

Command Syntax and Description	Type
%waterSpeed.setAssumeInWater(boolean) When set to "True" the CCU assumes that the vehicle is in the water, regardless of any conflicting sensor data. This allows for out of water thruster testing. When set to "False" the CCU assumes that the vehicle is out of the water, regardless of any conflicting sensor data. As a safety measure, the thruster cannot be turned on when when %waterSpeed.setAssumeInWater is set to False. Enter True = 1. Enter False = 0.	S

Table A.14. xp

Command Syntax and Description	Type
%xp.send(String,String) Send a script command to a payload. Enter payload name, message.	S
%xp.clear() Clear all pending payload messages.	E

Table A.15. xp1

Command Syntax and Description	Type
%xp1.turnOff() Turn this device off.	S
%xp1.turnOn() Turn this device on.	S

Table A.16. xp2

Command Syntax and Description	Type
%xp2.turnOff() Turn this device off.	S
%xp2.turnOn()	S

Command Syntax and Description	Type
Turn this device on.	

Table A.17. xp3

Command Syntax and Description	Type
%xp3.turnOff() Turn this device off.	S
%xp3.turnOn() Turn this device on.	S

Table A.18. genericAlarmReporter

Command Syntax and Description	Type
%genericAlarmReporter.toggleAlarmState(boolean) Toggles the state of alarm reporting. Enter 1 = alarm reporting on Enter 0 = alarm reporting off	E
%genericAlarmReporter.toggleEventState(boolean) Toggles the state of event reporting. Enter 1 = event reporting on Enter 0 = event reporting off	E
%genericAlarmReporter.toggleTelemAlarmState(boolean) Toggle the state of telem06 alarm reporting. Enter 1 = telem06 alarm reporting on Enter 0 = telem06 alarm reporting off	E

Table A.19. internet

Command Syntax and Description	Type
%internet.setPingInterval(int) Set the interval between cell modem pings to determine if the vehicle is in cellular communications range. Enter interval in minutes.	E
%internet.setInternetProvider(String) Sets the default internet connection for the Virtual Relay. Enter cell or debug .	E

Command Syntax and Description	Type
%internet.vpnOff() Disable Regulus VPN.	E
%internet.vpnOn() Enable Regulus VPN.	E

Table A.20. thruster

Command Syntax and Description	Type
%thruster.setBoostBatteryCapacityMinimum(int) Set the minimum battery capacity required to run the thruster. Enter battery level in watthours.	E

Table A.21. weatherReporter

Command Syntax and Description	Type
%weatherReporter.setReportLength(String) Sets the report interval for the weather station. Enter the interval between weather reports in minutes.	E

Appendix B. Relay Header Data

Iridium Vehicle-to-Remote Applications Data Packets

Vehicle-to-remote applications relay packets are command responses, telemetry or alarms. These packets have a 51 byte header, followed by up to 205 bytes of response data.

Iridium Vehicle-to-Remote Applications Field Name	Byte #	Length (bytes)	Value	Format
Protocol Revision	0	1	1	Big Endian
Message Length	1-2	2	Total length - 3	
MO_Header IEI	3	1		
MO_Header Length	4-5	2		
CDR Reference	6-9	4	"Msg1"	
IMEI	10-24	15		
Session Status	25	1		
MOMSN	26-27	2		
MTMSN	28-29	2		
Time of Session	30-33	4		
MO_Payload IEI	34	1		
MO Payload Length	35-36	2	[# Level 2 bytes]	
MO Location Info IEI	37	1		
MO Location Info Length	38-39	2		
MO Lat/Long	40-46	7		
CEP Radius	47-50	4		
Level 2 Packet (Response or Telemetry)	51-255	≤ 205		Little Endian

Iridium Vehicle-to-Remote Applications Field Name Descriptions:

Protocol Revision – Iridium protocol revision number.

Message Length – Number of bytes in the remainder of the packet.

MO_Header IEI – Mobile Originated Header Information Element Identifier.

MO_Header Length – Mobile Originated Header length in bytes.

CDR Reference – Call Detail Record Reference.

IMEI – International Mobile Receiving Identity. 15 digit code of the receiving modem.

Session Status – Status of the connection link. Values larger than 2 indicate a problem.

MOMSN – Mobile Originated Message Sequence Number.

MTMSN – Mobile Terminated Message Sequence Number.

Time of Session – Time of day of session.

MO_Payload IEI – Mobile Originated Payload Information Element Identifier.

MO Payload Length – Mobile Originated Payload Length. (Number of Level 2 bytes)

MO Location Info IEI – Mobile Originated Location Information Element Identifier.

MO Location Info Length – Mobile Originated Location Information Length.

MO Lat/Long – Mobile Originated Latitude and Longitude data. See below.

CEP Radius – Circular Error Probability Radius. Distance (in Kilometers) around the center point within which the IMEI is located with an 80% probability of accuracy.

Level 2 Packet – Telemetry or Command response (see [Chapter 6: Vehicle Responses](#) and [Chapter 7: Vehicle Telemetry](#))

Mobile Originated Lat/Long Data

The Mobile Originated Latitude and Longitude data is encoded in a 7-byte value as follows:

Field Name	Bytes	Units	Value Description
Latitude N-S Bit Longitude E-W Bit	1	N/S/E/W	Bit 6: 0 → North, 1 → South Bit 7: 0 → East, 1 → West
Latitude (degrees)	1	Degrees	[0 to 90] (dec) [0x00 to 0x5A] (hex)
Latitude (minutes)	2	Minutes / 1,000	[0 to 59,999] (dec) [0x0000 to 0xEA5F] (hex)
Longitude (degrees)	1	Degrees	[0 to 180] (dec) [0x00 to 0xB4] (hex)
Longitude (minutes)	2	Minutes / 1,000	[0 to 59,999] (dec) [0x0000 to 0xEA5F] (hex)

Relay Vehicle-to-Remote Applications Packets

Vehicle-to-Remote Applications Relay packets are similar (but not identical) to the Iridium Vehicle-to-Remote Applications packets. These packets also have a 51 byte header, followed by up to 205 bytes of response data.

Though these packets are structured like Iridium packets, note that an ID number and IP Address/Port replace the IMEI. Also, many of the fields are zero-valued placeholders.

Relay Vehicle-to-Remote Applications Field Name	Byte #	Length (bytes)	Value
Protocol Version	0	1	See below
Message Length	1-2	2	Total length - 3
MO Header IEI	3	1	0
MO Header Length	4-5	2	0
CDR Reference	6-9	4	See below
Vehicle Unique ID	10-13	4	See “Vehicle Unique ID” (page 86)
IP Address	14-17	4	
IP Port	18-21	4	
(not used)	22-24	3	0
Session Status	25	1	0
MOMSN	26-27	2	0
MTMSN	28-29	2	0
Time of Session	30-33	4	0
MO Payload IEI	34	1	0
MO Payload Length	35-36	2	[# Level 2 bytes]
MO Location Info IEI	37	1	0
MO Location Info Length	38-39	2	0
MO Lat/Long	40-46	7	0
CEP Radius	47-50	4	0
Level 2 Packet	51-255	≤ 205	

The Relay Packet significant field types are:

Protocol Version – Number indicates the type of protocol to be expected in the Level 2 packet.

Protocol	Value	Notes
Iridium (plug-In)	1	[1]
XBee	2	
Serial	3	
802.11	4	
Alternate Iridium	5	[2]

Notes:

[1] Protocol 1 – Refers to the Iridium modem in the CCU. Uses SBD transmit/receive.

[2] Protocol 5 – Refers to another device on the vehicle that sends and receives data in the Iridium format. This data transmission does not use SBD.

CDR Reference – A 4-character text sequence that indicates the type of message recipient, as follows:

Protocol	Value
Iridium (plug-In)	"Msg1"
XBee	"Xbee"
Serial	"Ser1"
802.11	"WiFi"
Alternate Iridium	"Irid"

Vehicle Unique ID – The unique 4-byte identification number that is stored in the vehicle's Non-Volatile memory. See "[Vehicle Unique ID](#)" (page 86).

IP Address – Internet Protocol destination address of the message recipient.

IP Port – Internet Protocol port number of the destination address.

MO Payload Length – Length of the Level 2 Content payload.

Level 2 Content – Data in the format specified by the "Protocol Version" number.

Virtual Relay Vehicle-to-Remote Applications Packets

These packets usually contain telemetry data. Related Ack and Nak packets (up to 270 bytes long) have up to 340 bytes of payload and 50 bytes of header content.

Field Name	Index	Length (bytes)	Value
Protocol Revision	0	1	See: Protocol Revision
Message Length	1	2	Total length - 3
MO Header IEI	3	1	0
MO Header Length	4	2	0
CDR Reference	6	4	See: CDR Reference
Unique Id	10	4	
Internal IP Addr	14	4	
Session Id	18	4	
Length	22	2	0-Unlimited, 1 -64K
Spare	24	1	0
Session Status	25	1	0
MOMSN	26	2	0
MTMSN	28	2	0
Time Of Session	30	4	Unix Timestamp format
MO Location Info IEI	34	1	0

MO Location Info Length	35	2	0
MO Lat/Long	37	7	0
CEP Radius	44	4	0
MO Payload IEI	48	1	0
MO Payload Length	49	2	***
Interface Level 2 Content	51	Up to 339	

*** For virtual relay status commands, the MO Payload Length value is the total buffer size in bytes used by the virtual relay client to send multiple commands. The buffer allows for multiple TCP requests for incomplete transmission.

Iridium Remote Applications-to-Vehicle Data Packets

A Remote Applications-to-Vehicle Iridium packet carries commands to the vehicle. It has 30 bytes of header content and can carry up to 135 bytes of command data.

Iridium Remote Applications-to-Vehicle Field Name	Byte #	Length (bytes)	Default Value	Format
Protocol Revision	0	1	1	Big Endian
Message Length	1-2	2	Total length – 3	
MT_Header IEI	3	1	65	
MT_Header Length	4-5	2	21	
CDR Reference	6-9	4	"Msg1"	
IMEI	10-24	15		
MT_Disposition Flags	25-26	2	0	
MT_Payload IEI	27	1	66	
MT_Payload Length	28-29	2	[# Level 2 bytes]	Little Endian
Level 2 Command Packet	30-164	≤ 135		

Iridium Remote Applications-to-Vehicle Field Name Descriptions:

Protocol Revision – Iridium protocol revision number.

Message Length – Number of bytes in the remainder of the packet.

MT_Header IEI – Mobile Terminated Header Information Element Identifier.

MT_Header Length – Mobile Terminated Header length in bytes.

CDR Reference – Call Detail Record Reference.

IMEI – International Mobile Receiving Identity. 15 digit code of the receiving modem.

MT_Disposition Flags – Mobile Terminated Disposition Flags.

MT_Payload IEI – Mobile Terminated Payload Information Element Identifier.

MT_Payload Length – Number of bytes in the payload packet that follows.

Level 2 Packet – Command Data. (see [Chapter 5: Commands](#))

Relay Remote Applications-to-Vehicle Packets

A Remote Applications-to-Vehicle Relay packet carries commands to the vehicle. It has 30 bytes of header content and can carry up to 135 bytes of command data.

Iridium Remote Applications-to-Vehicle Field Name	Byte #	Length (bytes)	Default Value
Protocol Version	0	1	See below
Message Length	1-2	2	Total length – 3
MT Header IEI	3	1	65
MT Header Length	4-5	2	21
CDR Reference	6-9	4	See below
Vehicle Unique ID	10-13	4	See “ Vehicle Unique ID ” (page 86)
IP Address	14-17	4	
IP Port	18-21	4	
(not used)	22-24	3	0
MT Disposition Flags	25-26	2	0
MT Payload IEI	27	1	66
MT Payload Length	28-29	2	[# Level 2 bytes]
Level 2 Command Packet	30-164	≤ 135	

Relay Remote Applications-to-Vehicle Field Name Descriptions:

The **Protocol Version** and **CDR Reference** numbers are the same as used for Vehicle-to-Remote Applications Relay packets.

Protocol Version	Value
Iridium (plug-in)	1
XBee	2
Serial	3
802.11	4

Protocol Version	Value
Iridium (alternate)	5

CDR Reference	Value
Iridium (plug-in)	"Msg1"
Xbee	"Xbee"
Serial	"Ser1"
802.11	"WiFi"
Iridium (alternate)	"Irid"

Vehicle Unique ID – The unique 4-byte identification number that is stored in the vehicle's Non-Volatile memory - see [“Vehicle Unique ID” \(page 86\)](#).

IP Address – Internet Protocol address of the command originator.

IP Port – Internet Protocol port number of the command originator.

Level 2 Packet – Data in the format specified by the "Protocol Version" number.

Virtual Relay Remote Applications-to-Vehicle Packets

Single Virtual Relay Remote Applications-to-Vehicle packets can be up to 370 bytes long, with up to 320 bytes of payload data and 30 bytes of Relay defined header content. This type of packet is used to send commands from remote applications to vehicles.

Field Name	Index	Length (bytes)	Default Value
Protocol Revision	0	1	See: Protocol Revision
Message Length	1	2	Total length - 3
MT Header IEI	3	1	65
MT Header Length	4	2	21
CDR Reference	6	4	See: CDR Reference
Unique Id	10	4	
Internal IP Addr	14	4	
Session Id	18	4	
Spare	22	3	0
MT Disposition Flags	25	2	0
MT Payload IEI	27	1	66
MT Payload Length	28	2	Payload length
Interface level 2 Content	30	Up to 270	

Appendix C. CRC-16 Calculation

A packet's error-check field contains a 16-bit CRC calculated from the bytes in a data packet. The specific bytes used for the calculation will depend on the type of packet. However, the computational algorithm will be the same.

Here is an example of the algorithm written in C#:

```
public static CRC16 ComputeFromArray(byte[] buffer, uint offset, uint count, UInt16 seed)
{
    UInt16 crc = seed;

    for (uint idx = offset; count-- > 0; ++idx)
        crc = ComputeIncrementally(crc, buffer[idx]);

    return new CRC16(crc);
}

public static UInt16 ComputeIncrementally(UInt16 crc, byte a)
{
    int i;

    crc ^= a;

    for (i = 0; i < 8; i++)
    {
        if ((crc & 1) == 1)
        {
            crc = (UInt16)((crc >> 1) ^ 0xA001);
        }
        else
        {
            crc = (UInt16)(crc >> 1);
        }
    }

    return crc;
}
```

Appendix D. PIB and PM Slot Configuration Commands for SV2 Payloads Adapted to SV3 Vehicles

Overview

The LRI payload electronics architecture for Wave Glider SV2 vehicles includes a Payload Interface Board (PIB) with an 8 bit Atmel processor. Each PIB has three slots that can accommodate up to three generic device interface boards known as Personality Modules. A Personality Module (PM) provides a power and communications interface between a sensor (or other payload device) and the PIB. Each PM slot is configured to meet the power and data transmission requirements for the sensor or payload device it is connected to. For more information on PIB and PM electronics see the "Payload Development - Hardware Environment" chapter in the *Wave Glider® SV2 Interface Control Description*.

On legacy Wave Glider SV2 vehicles, several LRI sensor-specific applications run on PIBs providing a management and communications interface between WGMS and sensors that LRI has integrated into the Wave Glider platform. On more recent Wave Glider SV2 vehicles, a single board computer known as a System Management Computer (SMC) is connected to a PM on a PIB with LRI sensor-specific applications running on the SMC Linux operating system.

The following sections provide information on the commands used to configure the PIB and its PM slots - they do not provide information on LRI sensor-specific commands for managing LRI integrated sensor payloads. If you have a legacy Wave Glider SV2 vehicle with an LRI integrated sensor, see the *Wave Glider® Integrated Sensor User Guide* for that sensor to obtain information on sensor-specific commands that run on a PIB or on a SMC.

Issuing PIB and PM Slot Configuration Commands

PIB and PM slot configuration commands are associated with several small programs that run on each PIB:

- PIBs are managed by the PIB program. The PIB program runs constantly when a PIB is powered on.
- The EMPTY program designates an unused PM slot as "empty." Issuing an EMPTY - i command to this PM slot will return a Console Data ACK containing the string Dummy Sensor. For more information see ["Empty ID" \(page 286\)](#).
- The COMM program configures a PM slot to allow a connected device to communicate using the LRI payload communications protocol.
- The POWER program turns power to the PM slot on or off.
- The SMC program sets up a PM slot for a System Management Computer.
- The 37SI program is a sensor-specific application for managing the Seabird 37SI CTD sensor.

- The CTD program is a sensor-specific application for managing the Seabird GPCTD sensor.
- The C3 program is a sensor-specific application for managing the Turner C3 sensor.
- The ATM program is a sensor-specific application for managing the Teledyne ATM-88X Modem.
- The CO2 program is a sensor-specific application for managing the MBARI CO2 sensor.

PIB and PM slot configuration commands are sent from WGMS to the Wave Glider CCU using a Vehicle Command Form. All commands are sent to a combined Board Address and Task ID. The Board Address identifies a specific PIB and the Task ID is used to direct the command to the PIB, or to one of the PM slots on that PIB. Sensor-specific or payload device-specific commands must also be addressed to a PIB and the PM slot on that PIB where the sensor or payload device is connected.

To issue a command:

1. Select the **Write Console Script** command in the **Command Type** drop-down menu of the **Vehicle Command** tab.
2. Enter some text in the **Command Reason** field. This is a free-form field, but it is also a required field. If you enter nothing, you will not be able to issue the command.
3. Enter the decimal version of the combined Board Address/Task ID for a specific PIB or one of the PMs attached to it into the **Board Address** field.

The combined Board Address/Task ID consists of two hexadecimal values. The first value is the Board ID for the PIB you want to issue a command to. The Board ID will be between 0x00 and 0xFF - exclusive. For more information, see [“PIB ID” \(page 285\)](#). The second value is the Task ID. The Task ID for a PIB is 00. The Task IDs for each of the PM slots on a PIB are 01, 02, and 03.

For example:

The combined Board ID/Task ID for a PIB with a Board ID of 0x01 would be 0x0100. To determine the decimal version, multiply the Board ID value by 256 and add the Task ID {(01)(256) + 00}. The result is 256. This is the number you would enter into the **Board Address** field on the **Vehicle Command** tab.

If the Board ID for the PIB is 0x02, and the command is directed to PM slot 03, the combined hexadecimal values would be 0x0203. To determine the decimal version, multiply the Board ID value by 256 and add the Task ID {(02)(256) + 03}. The result is 515. This is the number you would enter into the **Board Address** field on the **Vehicle Command** tab.

4. Enter the command you want to issue into the Script Buffer field in the Vehicle Command tab.
5. Click **Send** to issue the command.



Note

PIB commands must be sent one at a time.

All PIB commands are case-insensitive. Upper case characters are used in command syntax and examples for emphasis only.

PIB and PM Slot Configuration
Commands for SV2 Payloads
Adapted to SV3 Vehicles

Figure D.1. Vehical Command Form

Related Record

Select a related record. Simple Command Form

Vehicle Command | Related Info

Vehicle Command Info

Command Reason: Set PM 2 on PIB 0x01 to C3 sensor

Vehicle: A3 Development | Command Type: Write Console Script

Command Status: Created | Target Waypoint:

From Waypoint: | To Waypoint:

Heading (deg): | Status:

Course: | Vehicle Rudder Co...:

Function: 0 | Board Address: 256

File Type: Unspecified | Operation Type: Current Image

Com Channel: Iridium Communication Ch... | Upload File:

Part: | Vehicle File:

Read File Name: | Security Manifest:

Disposition: | Time Field:

Script Buffer: PIB -2 c3

Copy ... Send Cancel

Enter the reason this command is being issued here.

Enter command syntax here.

Enter the decimal equivalent of the combined PIB Board Address and Task ID here.

PIB PM Slot Configuration Commands

There are 3 commands used to configure each of up to 3 PM slots for the PMs that are connected to a PIB.

Syntax

PIB -1 | --pm1 [sensor]

PIB -2 | --pm2 [sensor]

PIB -3 | --pm3 [sensor]

Summary

[sensor] assigns one of the PIB programs to the designated PM slot including the EMPTY program, if the PM slot is not being used.

Semantics

These commands allow you to set the [sensor] configuration for each PM slot. The sensor parameter can be a string (case-insensitive) or a number.

Program Setting	String	Number
Empty Sensor	EMPTY	0
Payload Communications	COMM	1
System Management Computer	SMC	2

PIB and PM Slot Configuration
Commands for SV2 Payloads
Adapted to SV3 Vehicles

Seabird 37SI CTD	37SI	3
Seabird GPCTD	CTD	4
Turner C3	C3	5
Power On/Off	POWER	6
Teledyne ATM-88X Modem	ATM	7
MBARI CO2	CO2	8

For example, sample commands are:

PIB -3 ctd This command tells the PIB to configure PM slot 3 with the Seabird GPCTD sensor-specific program.

PIB --pm2 SMC This command tells the PIB to configure PM slot 2 with the SMC program.

PIB --pm1 0 This command tells the PIB to run the EMPTY program on PM slot 1. Note, the EMPTY program should be used for PMs that are not connected to anything. A PM configured with the Empty Sensor setting can only respond to an Empty ID command. For more information see [“Empty ID” \(page 286\)](#).

Upon receiving a command for one of its PM slots, the PIB program will compare the current setting for that PM slot to the command argument (desired setting). If they are the same, no action will be taken. If they are different, the PIB program will clear the EEPROM allotted to that task and end the task. If the command is successful, the PIB program will send a Console Data ACK back to shore with the current PM slot configuration. Note that this configuration does not reflect what is currently running on the PIB, instead it reflects the program that will be loaded the next time the PIB is started. The desired program is stored in the PIB non-volatile memory and will run on the designated PM after a re-boot.

If the command is unsuccessful for any reason, the PIB will return a NAK. The most common cause of a NAK is an attempt to set an invalid sensor.



Note

The PM configuration commands will NOT start the assigned programs, these commands are only for configuring the PM slots. Configuration setting changes will not take effect until the PIB is re-booted. The Power On/Off command must be used to start or stop the program assigned to a PM slot.

Reading the PIB Configuration

Syntax

```
PIB -c | --cfg
```

Summary

Returns the current PM slot configuration.

Semantics

The PIB will return a Console Data ACK with the sensor configuration that is stored in the PIB nonvolatile memory. This is not necessarily the current setting - it is the setting that will run the next time the PIB is started. The response syntax is:

PM1=[*Sensor*] PM2=[*Sensor*] PM3=[*Sensor*]

For example, a response could be:

PM1=C3 PM2=SMC PM3=CTD

PIB boardID

Syntax

PIB -b | --boardID [*boardID*]

Summary

Sets the board ID for the PIB.

Semantics

This command will set the board ID for the PIB. This ID must be between 0x00 and 0xFF, exclusive - otherwise the command will NAK. This board ID is stored in the PIB nonvolatile memory. The PIB will respond with a Console Data ACK containing an empty message.



Note

This command will NOT take effect until the PIB is re-booted (power is cycled on the payload port). Commands sent to the PIB or any of its assigned sensors or functions must be addressed to the previous board ID, until power is cycled and the PIB re-boots at which time the new board ID will be set.

PIB setDly

Syntax

PIB -d | --setDly [*delayTime*]

Summary

Sets the power down delay time to gracefully shut down the payloads (sensors or devices) connected to the PMs on the PIB. When the CCU receives a command to turn off the power to a payload port, the longest power down delay associated with a PIB connected to that port will determine the power down delay for the port.

Semantics

This command will set the power down delay time from 0 to 255 seconds. The power down delay time will be sent to the CCU the next time the PIB receives a power down notification. It is stored in the PIB nonvolatile memory.

PIB ID

Syntax

PIB -d | --id

Summary

Returns PIB identification information.

Semantics

This command will respond with a Console Data ACK that contains identification information, including the board ID and the power down delay time. For example:

PIB ver. 2.0.341. Board ID = 0x01. Power Down Delay = 1 sec.

Note that the board ID will not necessarily be the current board ID; it will be the board ID setting that will be used the next time power to the PIB is cycled.

PM Slot Commands

PM slot commands are a sub-set of PIB commands that designate unused PM slots, or configure power for PM slots connected to payloads that are not managed by an LRI sensor-specific application.

Empty ID

Syntax

EMPTY -i | --id

Summary

Used to determine if there is nothing connected to a PM.

Semantics

If the [sensor] variable in any of the “[PIB PM Slot Configuration Commands](#)” (page 283) is set to EMPTY or 0, the EMPTY id command will return a Console Data ACK containing the string Dummy Sensor. Any other command sent to this PM will return a NAK.

Power On

Syntax

POWER -o | --on

Summary

Powers on the PM.

Semantics

This command will turn on the PM and then return a Console Data ACK indicating whether power is on or off.

Power Off

Syntax

POWER -f | --off

Summary

Power off the personality module.

Semantics

This command will turn off the personality module. It will then return an Ack Console Data indicating whether power is on or off.

Power AutoRun (mode)

Syntax

```
POWER -a | --autorun [mode]
```

Summary

Sets the Autorun mode.

Semantics

This command will turn the AutoRun feature On or Off. When AutoRun is On, the PM will be powered on when the PIB starts up. When Autorun is Off, the PM will not be powered on when the PIB starts. After the PIB is running, the power state can always be changed by sending a Power On or Power Off command. Valid parameters for the AutoRun command are On, Yes, 1, for Power On, or Off, No, 0 for Power Off.

Power Status

Syntax

```
POWER -s | --status
```

Summary

Sends back whether power is on or off.

Semantics

This command will return an Ack Console Data indicating whether power is on or off.

Power ID

Syntax

```
POWER -i | --id
```

Summary

Sends back identification.

Semantics

This command will return an Ack Console Data containing identification.