
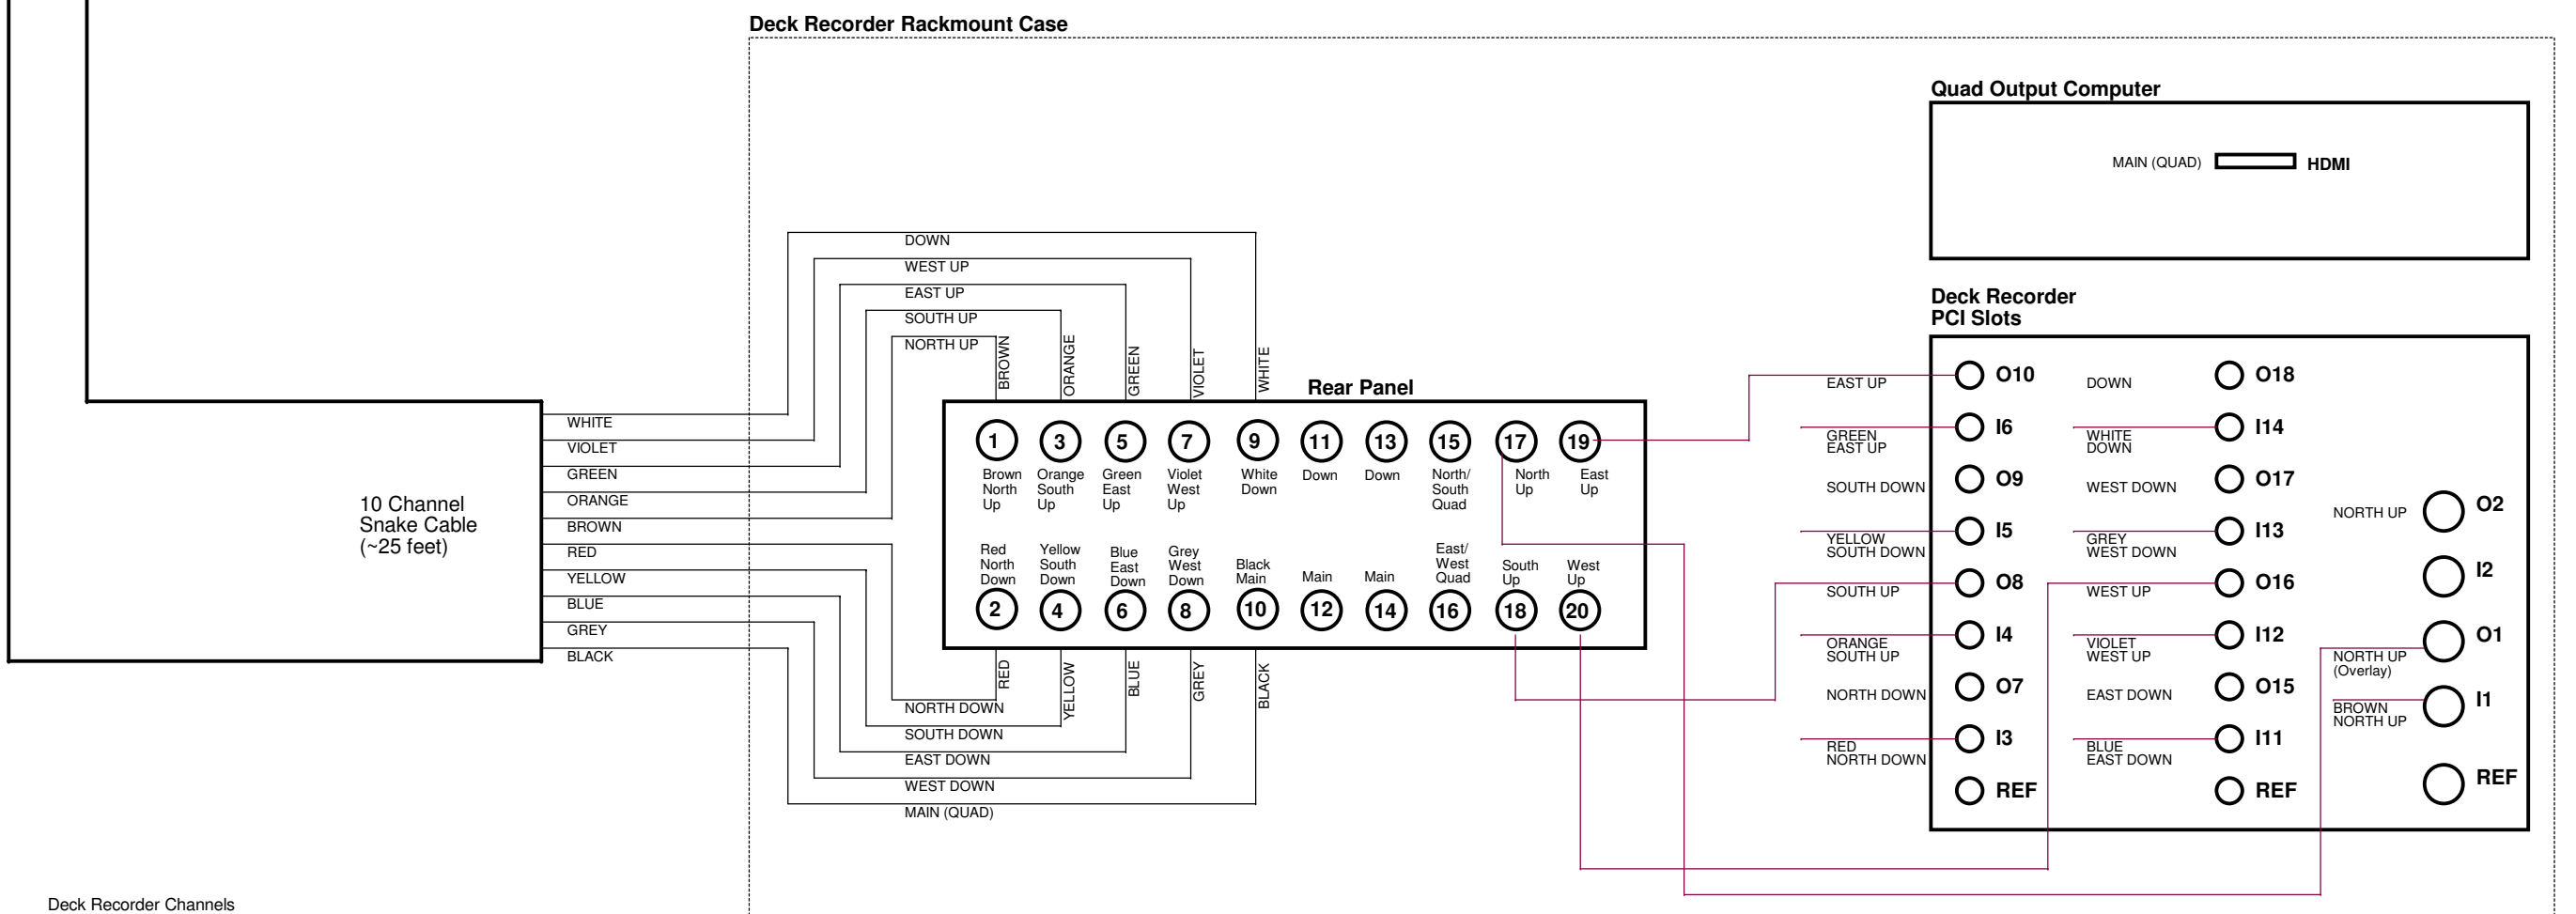


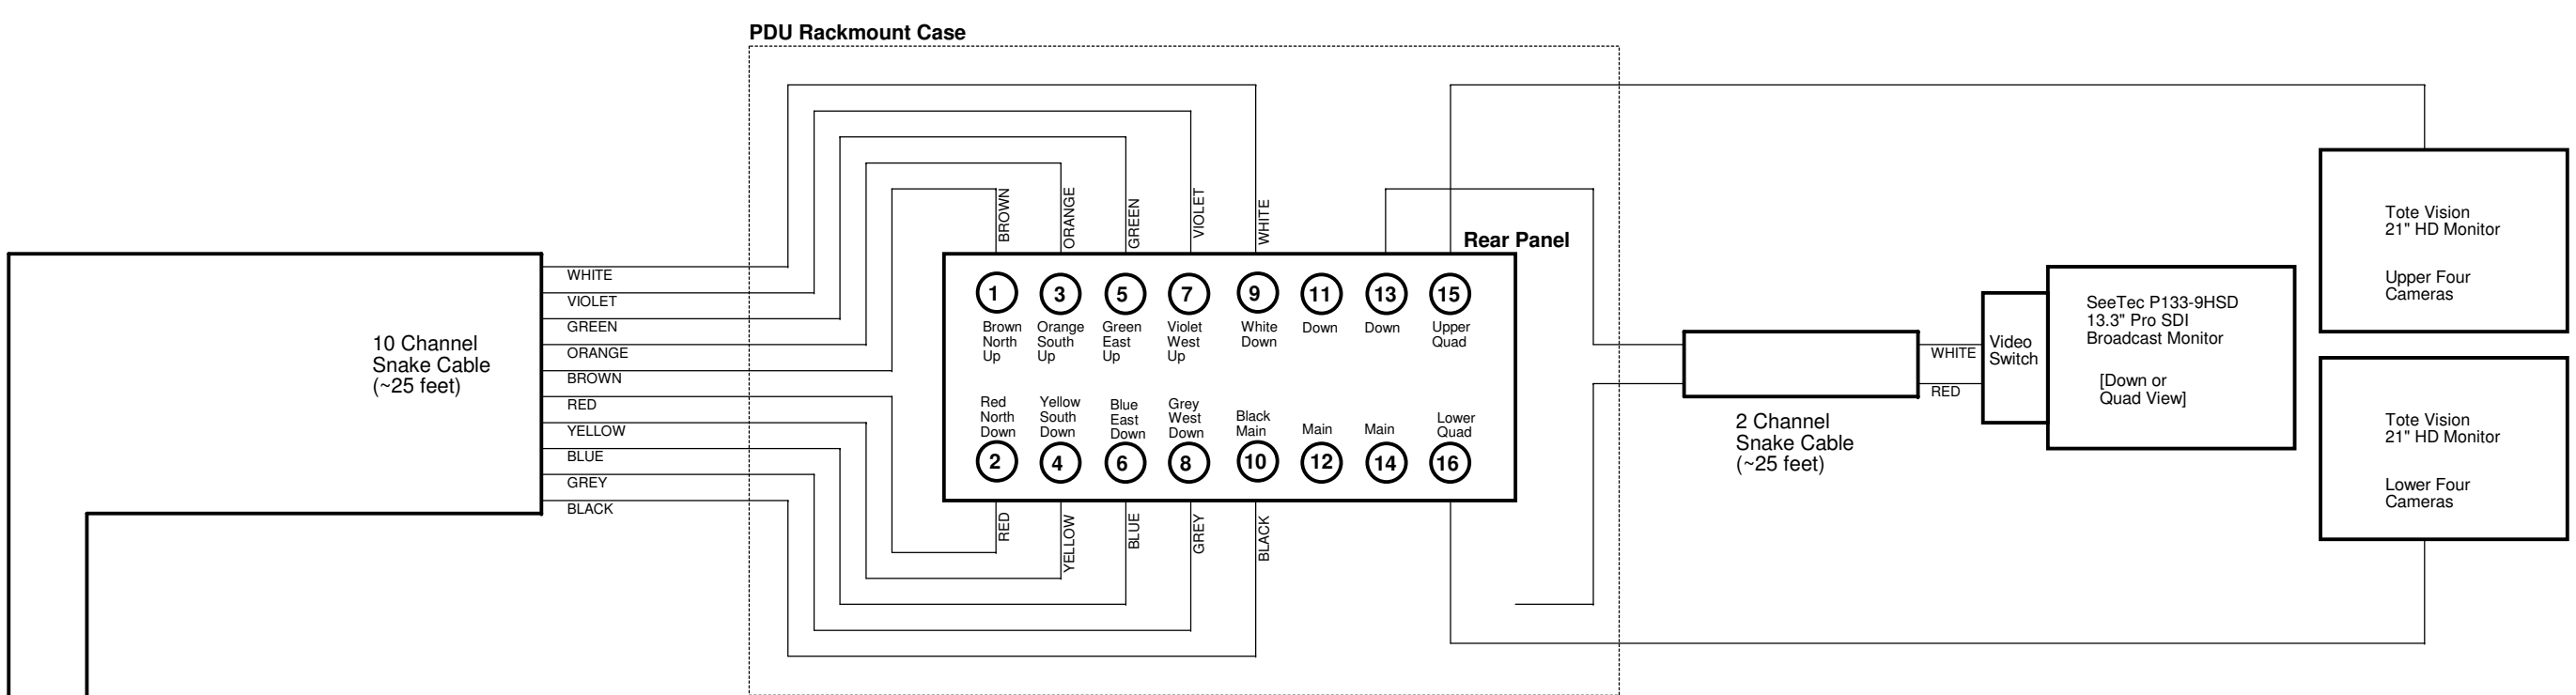

- Deck Recorder Channels
- C1 - North Up
 - C2 - North Down
 - C3 - South Up
 - C4 - South Down
 - C5 - East Up
 - C6 - East Down
 - C7 - West Up
 - C8 - West Down
 - C9 - Down