

6-1-2. Upgrading OS

Equipment required

USB drive (commercially available)

Tip

For recommended USB drive, refer to “Using a USB Drive” on the operating instructions.

Preparation

Copy the OS update data to the USB drive using the following procedure.

Note

As for how to obtain the data file for update (hdc50_os.pkg), contact your local Sony Sales Office/Service Center.

1. Create the following directory in the USB drive.
 \MSSONY\PRO\CAMERA\HDCP50
2. Copy the data file for update “hdc50_os.pkg” to the directory created.

Procedure

1. Connect the USB drive that contains the program for update to the USB connector of this unit.
2. Turn on the power of the unit.
3. Display the ROM VERSION page of the DIAGNOSIS menu.
4. Confirm that the cursor “?” is displayed to the left of D02, and then press ENTER button long.
5. Updatable items become selectable. Select “OS” and then press ENTER button.
6. A message “VERSION UP OK?” appears. Select “YES”.
7. The unit restarts automatically and the version update starts.
 Upon completion of the version update, a message “UPDATE SUCCEEDED” appears.
8. Turn off and on the power of the unit and confirm that the version has been updated on the ROM VERSION page of the DIAGNOSIS menu.