



XMF-7500


QUICK START MANUAL



QUICK START INSTRUCTIONS

Battery Change

1. Unscrew the top of the unit
- ⚠ When unscrewing the top ALWAYS grasp the top by the knurl and rotate counter clockwise.
2. Remove Old Batteries
3. Install New batteries (7 X Panasonic Lithium CR123A)
- ⚠ Batteries are installed negative end toward the bottom and the positive end toward the LED.

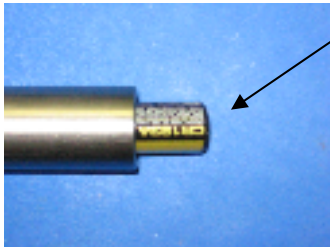


Top




Timer Adjustment switch is set at position two (2) by default.

Poly Carbonate Lens

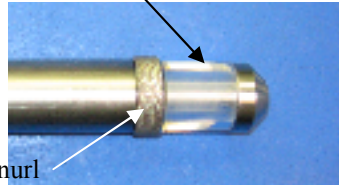


Knurl

Timer Adjustment Switch

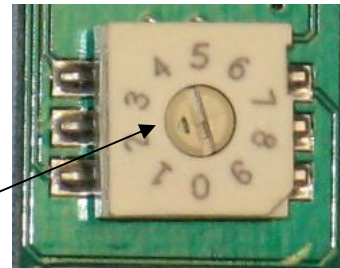

Switch Position	Delay (S)
1	1
2	2
3	3
4	4
5	5
6	6
7	10
8	15
9	20
0	30

Function Selection

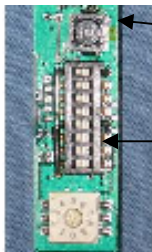

Top


FUNCTION
SELECTION
SWITCH

- ⚠ When setting function select hold unit so that the Function Select switch is facing as shown above

Switch Num	Function
1	Right pos. = 1 Flash
2	Right pos. = 2 Flashes
3	Reed Switch (Left Enabled, Right Disabled)
4	Light Sensor (Left Enabled, Right Disabled)
5	Accelerometer (Left Enabled, Right Disabled)
6	Water Sensor Sensitivity (Left Default)
7	Water Sensor (Left Enabled, Right Disabled)
8	N/A (For this model)

Both Right = 3 Flashes

XMF-7500

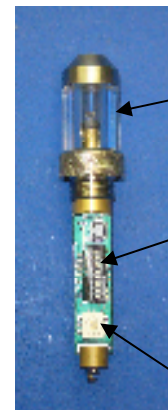

High Intensity
LED

FUNCTION
SELECTION
SWITCH

TIMER ADJUSTMENT
Switch