


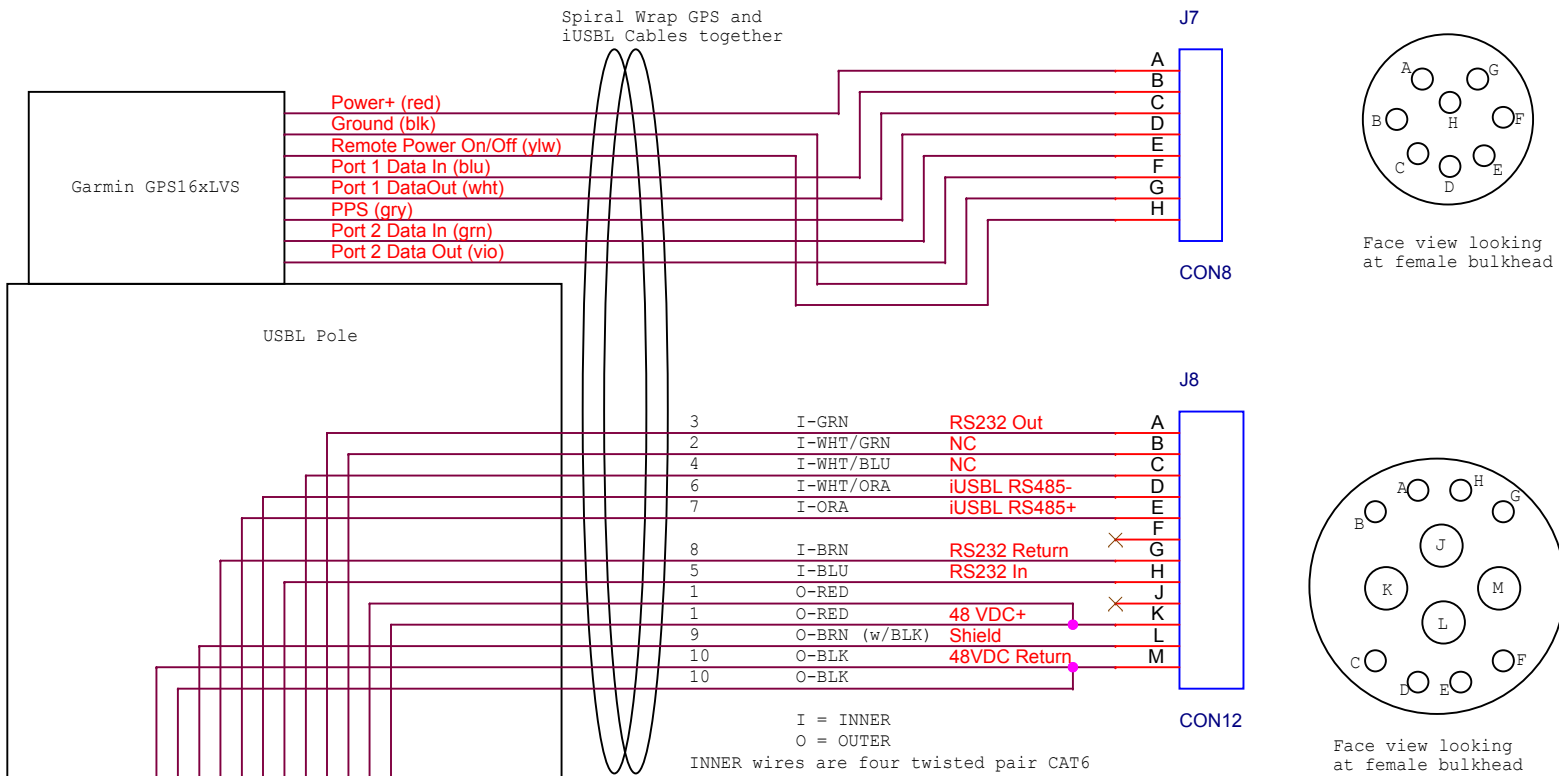

Port	Switch	RS-232	RS-422	RS-485 4-wire	RS-485 2-wire
Port 1	1	Off (down)	On (up)	Off (down)	On (up)
	2	Off (down)	On (up)	On (up)	Off (down)
Port 2	3	Off (down)	On (up)	Off (down)	On (up)
	4	Off (down)	On (up)	On (up)	Off (down)
Port 3	5	Off (down)	On (up)	Off (down)	On (up)
	6	Off (down)	On (up)	On (up)	Off (down)
Port 4	7	Off (down)	On (up)	Off (down)	On (up)
	8	Off (down)	On (up)	On (up)	Off (down)

