


Radial piston pump, fixed displacement

RA 11260/08.05

1/8

Model PR4

Sizes 0.40 to 2.00 cm³ (0.024 to 0.122 in³)
Component series 1X
Maximum operating pressure 700 bar (10150 PSI)

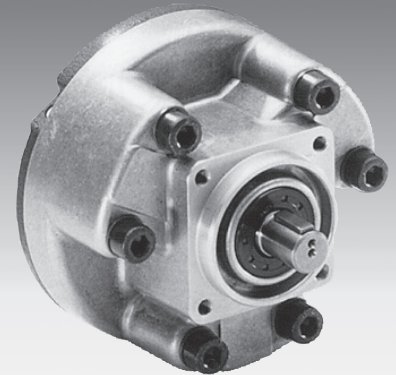

List of contents

Contents

Ordering code	2
Symbol	2
Function, section	3
Technical data, noise pressure level	4
Characteristic curves	5
Unit dimensions	6
Installation notes	7
Engineering notes	8
Commissioning notes	8

Features

Page	
2	– Self-priming, valve-controlled
2	– Very low noise
2	– Long service life due to hydrodynamically lubricated plain bearings
3	– Very compact design, therefore installation-friendly dimensions
4	– Can be combined with fixed and variable displacement vane pumps
5	– Five sizes
6	
7	
8	
8	

Function, section


These pumps are valve-controlled, self-priming radial piston pumps with fixed displacement.

They basically consist of housing (1), eccentric shaft (2) and pump elements (3), with suction valve (4), pressure valve (5) and piston (6).

Suction and displacement process

Pistons (6) are arranged radially to eccentric shaft (2). Piston (6) is guided in cylinder (7) and pressed by spring (8) onto eccentric (2). During the downward stroke of piston (6), the working

chamber (9) in cylinder (7) increases in size. The resulting negative pressure lifts suction valve plate (4.1) from the sealing edge. This opens the connection between suction chamber (10) to working chamber (9). The working chamber fills with fluid. During the upward movement of piston (6), the suction valve closes and pressure valve (5) opens. Fluid can now flow via pressure port (P) to the system.

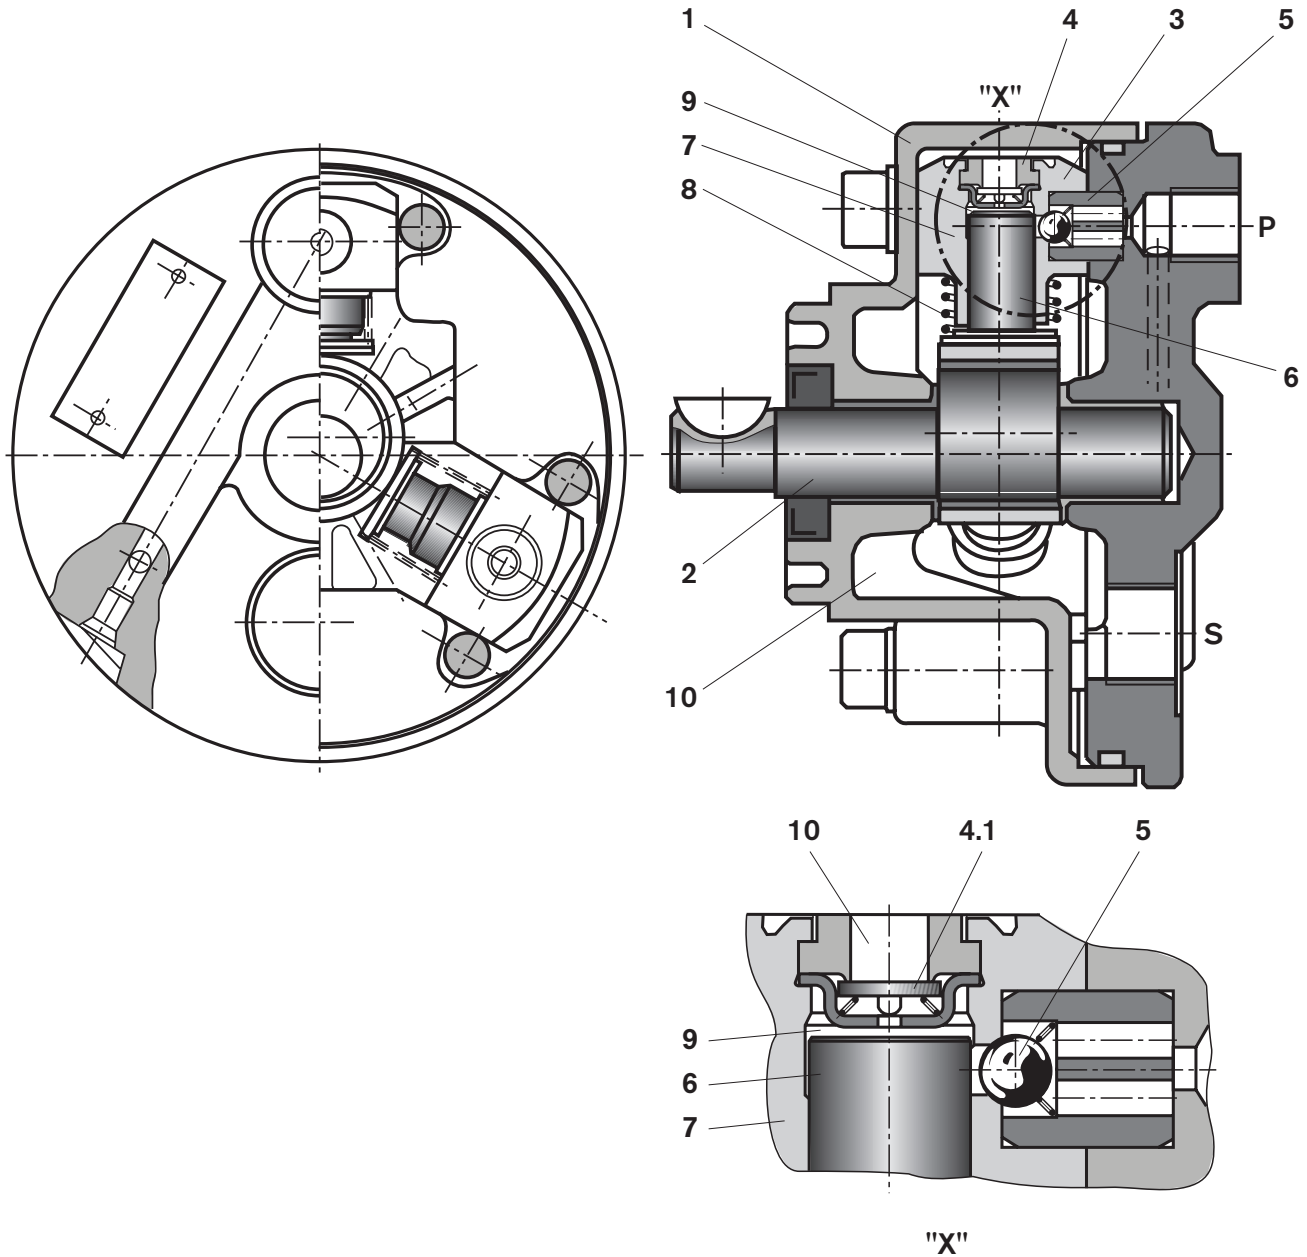


Technical data (for applications outside these parameters, please consult us!)

Speed range		rpm	Size 0.40	1000 to 3400
			Size 0.63	1000 to 3000
			Size 1.00	1000 to 2000
			Size 1.60	1000 to 2000
			Size 2.00	1000 to 2000
Operating pressure	Inlet	bar (PSIA)	0.8 to 1.5 absolute (11.6 to 21.7)	
	Outlet	bar (PSI)	Size 0.40	700 (10150)
			Size 0.63	700 (10150)
			Size 1.00	450 (6525)
			Size 1.60	250 (3625)
			Size 2.00	175 (2540)
Max. permissible torque (drive shaft)		Nm (lb-ft)	10 (7.38)	
Installation orientation			Size 0.40-700 Horizontal installation: The suction port should be located vertically above the pressure port. This arrangement improves bleeding of the pump. Vertical installation: No restrictions. All other sizes can be installed at any position.	
Shaft loading			Radial and axial forces cannot be absorbed!	
Type of mounting			Face mounting	
Pipe connections			Screw-in fittings	
Direction of rotation (viewed to shaft end)			Counter-clockwise or clockwise, has no influence on the direction of flow	
Hydraulic fluid			HLP mineral oil to DIN 51524 part 2 Please note the regulations laid down in RE 07075!	
Hydraulic fluid temperature range		°C (°F)	-10 to +70 (14 to 158)	
Viscosity range		mm ² /s (SUS)	10 to 200 (46 to 927)	
Max. permissible degree of contamination of the hydraulic fluid – cleanliness classes to ISO 4406 (c)			Class 20/18/15 1)	
Weight		kg (lbs.)	2.6 (5.73)	

¹⁾ The cleanliness classes specified for components must be adhered to in hydraulic systems. Effective filtration prevents malfunction and, at the same time, prolongs the service life of components.

For the selection of filters, see data sheet RE 51144.

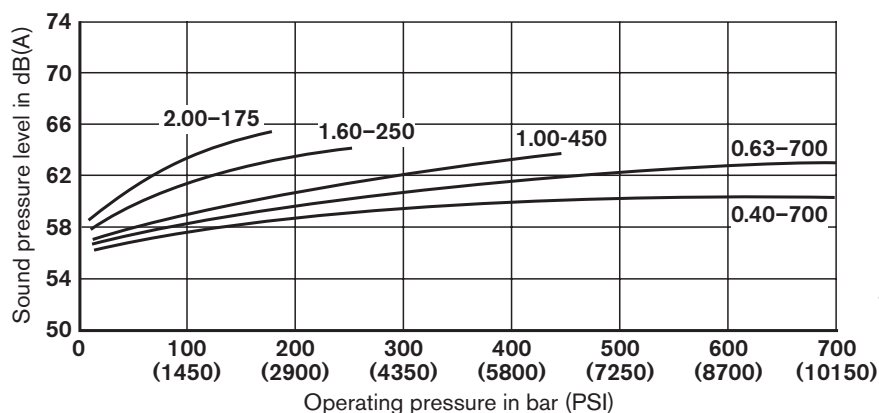Sound pressure level (average value) – measured at $n = 1450$ rpm, $\nu = 41$ mm²/s (190 SUS) and $\vartheta = 50$ °C (122 °F)


Measured in an anechoic chamber to DIN 45 635, part 26



Distance:
Microphone – pump = 1 m (3.28 ft.)

At a system pressure below 4 bar (58 PSI) and a viscosity > 150 mm²/s (695 SUS), audible valve noise may occur.



Sound pressure level at system pressure < 4 bar (58 PSI): ≤ 58 dB(A)


Characteristic curves – measured at $n = 1450$ rpm, $\nu = 41$ mm²/s (190 SUS) and $\vartheta = 50$ °C (122 °F)

Flow

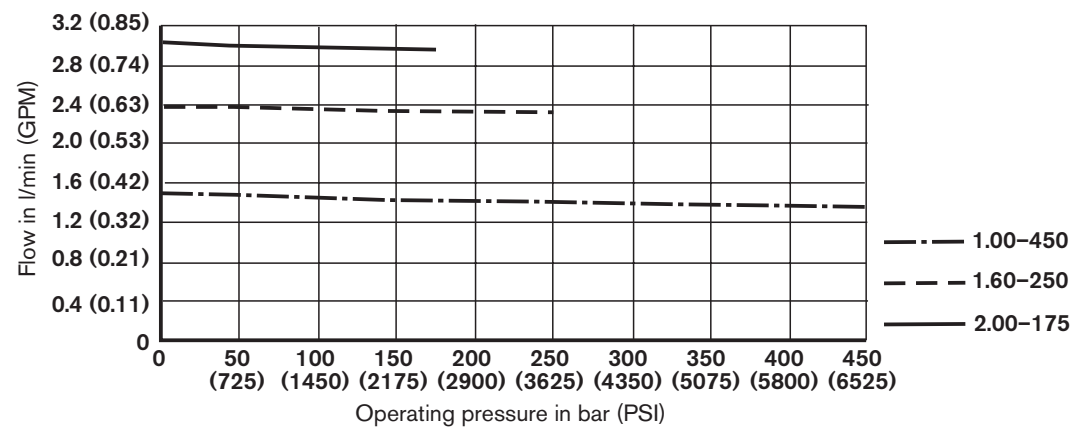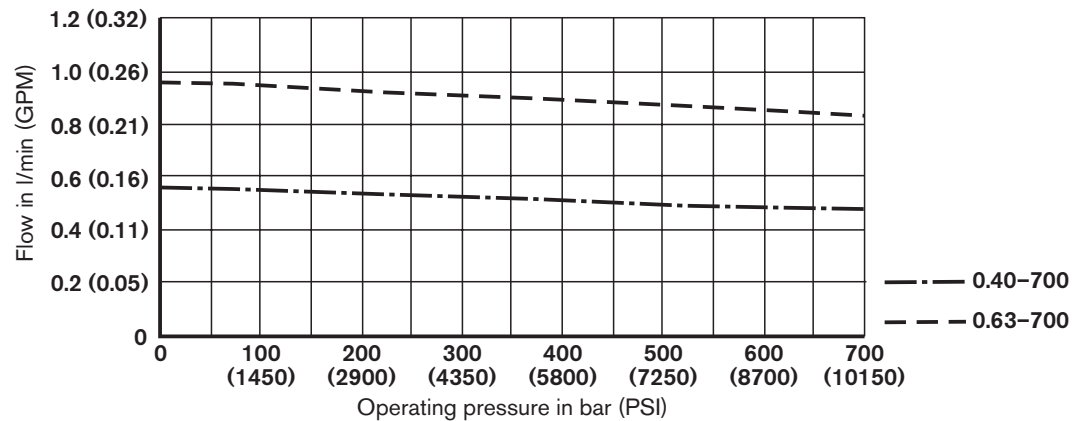

Drive power

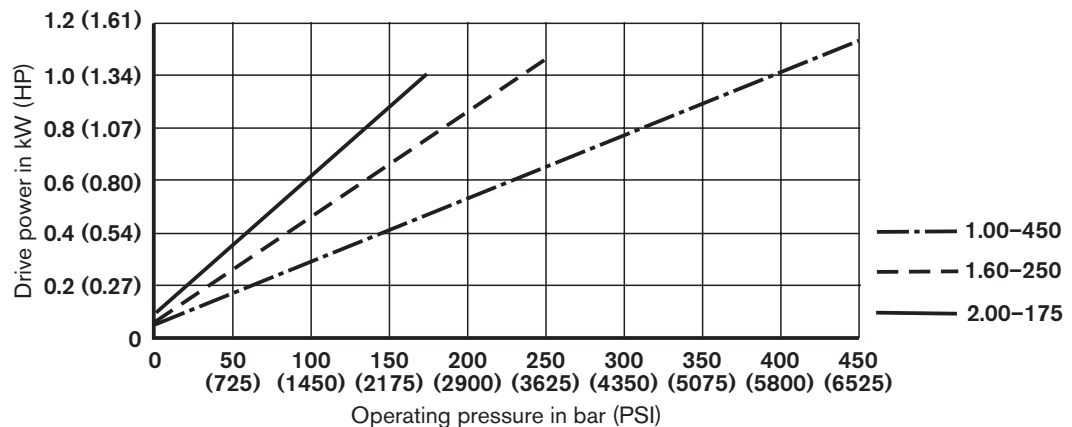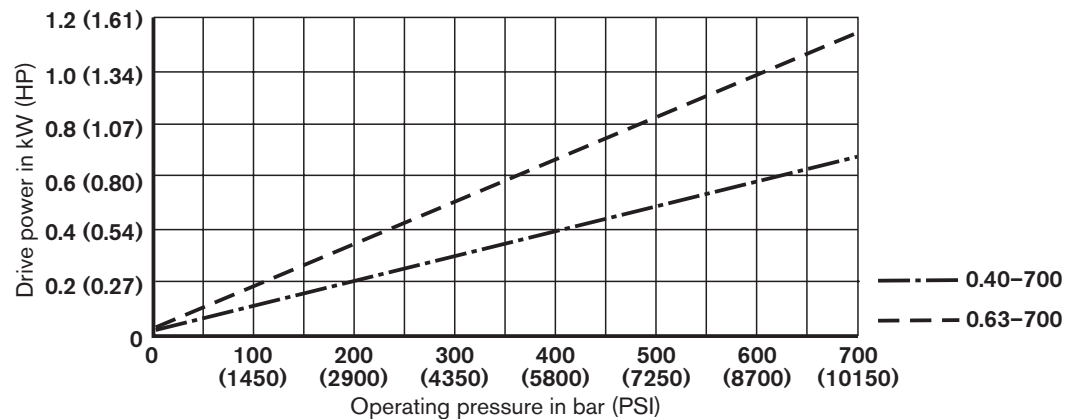

 

- 1 Pressure port P
- 2 Suction port S
- 3 Plate spring 5 x 6.5 DIN 6888


Seal kit (NBR):
Material no. **R900312138**
(valid for all sizes)

Seal kit (FKM)
Material no. **R900313049**
(valid for all sizes)


Installation notes

Drive

El. motor + pump mounting bracket + coupling + pump

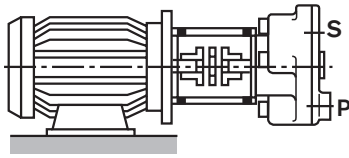


- No radial and axial forces permitted on the pump drive shaft!
- Motor and pump must be exactly aligned!
- Always use a coupling that is suitable for compensating for shaft offsets!
- When installing the coupling, avoid axial forces, that is, **do not hammer or press the coupling onto the shaft!** Use the female thread of the drive shaft!

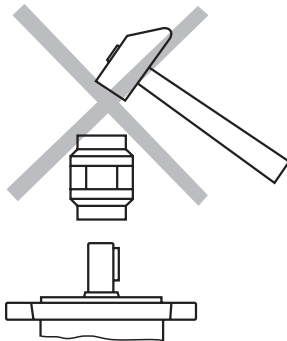


Installation positions


B3

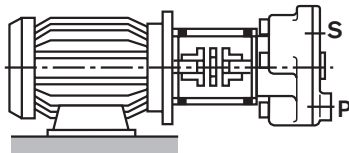

B5

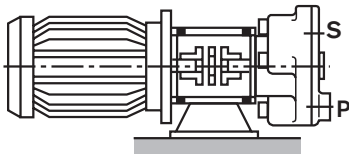

V1

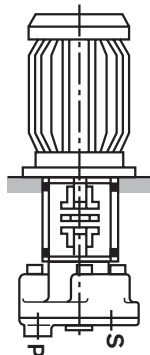


Fluid tank

- Adjust the useful capacity of the tank to the operating conditions
- The permissible fluid temperature must not be exceeded; if required, provide cooler

Lines and connections

- Remove protective plug from pump
- We recommend the use of seamless precision steel pipes according to DIN 2391 and pipe connections that can be loosened
- Select the clear width of pipes according to the connections (suction velocity 1 to 1.5 m/s [3.28 to 4.92 ft/s])
- For inlet pressure, see page 4
- Thoroughly clean pipes and fittings before their installation

Recommendation for piping

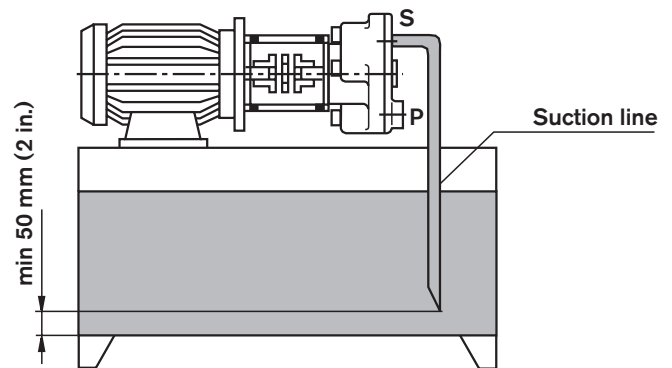

- The returning oil must **under no circumstances** be re-aspired directly, i.e. select the largest possible distance between suction and return line
- The return oil outlet must always be immersed in the oil
- Ensure suction-tight installation of the pipes

Filters

- If possible, use return line or pressure filters. (Use suction filters only in conjunction with an underpressure switch/clogging indicator)

Hydraulic fluid

- Please observe our regulations according to data sheet RE 07075
- We recommend the use of branded hydraulic oils
- Different oil grades must not be mixed, since this can result in decomposition and deterioration of the lubricating properties
- The fluid must be changed at certain intervals depending on the operating conditions. This involves cleaning of the fluid tank from residues.

Engineering notes

Comprehensive notes and suggestions can be found in The Hydraulic Trainer, Volume 3 RE 00281, "notes on the planning and design of hydraulic systems."

When using radial piston pumps, the following notes should be observed in particular.

Technical data

All technical data given depend on manufacturing tolerances and are valid in conjunction with certain boundary conditions.

Please note that certain deviations are therefore possible, and that technical data may vary when boundary conditions (e.g. viscosity) change.

Characteristic curves

Characteristic curves for flow and required power.

When dimensioning the drive motor, observe the permissible maximum data.

Noise

The sound pressure level values given on page 4 were measured in line with DIN 45635 part 26. This means that only the noise emitted by the pump is shown. Influences by the surroundings (such as place of installation, piping, etc.) were eliminated. The values always refer to only one pump

Caution!

Due to the power unit design and influences at the final place of installation of the pump, the noise pressure level is usually 5 to 10 dB(A) higher than the value of the pump itself.

Commissioning notes

Bleeding

- All radial piston pumps of type PR4 are self-priming.
- Fill the housing with filtered oil via port S.
- For initial commissioning, set the pump to pressureless circulation. To this end, disconnect the pressure hose and route it to the tank.
- Before initial commissioning, the pump must be bled in order to protect it from damage.
- Switch over to pressureless circulation or route the pressure line or pressure hose back to the tank.
- Briefly switch the pump on (inching mode).
- Should the pump not displace bubble-free oil after approx. 20 seconds, re-check the system. After having reached operating values, check the pipe connections for leakage. Check the operating temperature.
- Take note of the generation of noise.

Commissioning

- Check that the system is properly and correctly installed.
- Start the pump under no-load conditions and let it displace fluid for some seconds at zero pressure to ensure sufficient lubrication.
- In no case may the pump be operated without fluid!

Important notes

- Adjustments, maintenance and repair of the pump may only be carried out by authorized, trained and instructed personnel!
- Use only genuine Rexroth spare parts!
- The pump may only be operated at the permissible data.
- The pump may only be operated when in perfect condition!
- When carrying out any work on the pump (e.g. installation or removal), the system must be switched off and depressurized!
- Unauthorized conversions or changes that affect safety and function are not permitted!
- Attach protective guards (e.g. coupling protection)!
- Any existing protective guards must not be removed!
- The generally valid safety regulations and regulations for the prevention of accidents must be strictly observed!

Bosch Rexroth Corp.
Industrial Hydraulics
2315 City Line Road
Bethlehem, PA 18017-2131
USA
Telephone (610) 684-8300
Facsimile (610) 694-8467
www.boschrexroth-us.com

© This document, as well as the data, specifications and other information set forth in it, are the exclusive property of Bosch Rexroth Corporation. Without their consent it may not be reproduced or given to third parties.

The data specified above only serve to describe the product. No statements concerning a certain condition or suitability for a certain application can be derived from our information. The information given does not release the user from the obligation of own judgment and verification. It must be remembered that our products are subject to a natural process of wear and aging.