

Start-up

■ Safety instructions	■ B 10
■ Pump connection to an installation	■ B 20
■ Water cooling circuit connection	■ B 30
■ Nitrogen purge connection for corrosive version	■ B 40
■ Venting valve connection	■ B 50
■ Air cooling kit connection	■ B 60
■ ACT 201 H electrical connections	■ B 70
■ «Remote Control» connector wiring (ACT 201 H box version)	■ B 80
■ ACT 201 H "mini Board" power supply and remote control wiring	■ B 81
■ RS 232 or RS 485 serial link wiring (ACT 201 H box version)	■ B 90
■ RS 232 or RS 485 serial link wiring (ACT 201 H "mini Board")	■ B 91
■ Detailed description of RS commands	■ B 100
■ The controller start-up	■ B 110
■ Configuring the controller for the application	■ B 120
■ First pump start-up	■ B 130