


Venting valve connection

This accessory vents the ATH to atmosphere when the pumping stop key is activated or when a power failure occurs. The controller stops the pump and controls the air inlet. The time before valve opening and venting time can be customized through the controller menu (**See B 120**). The venting valve (normally opened, closed with power on) opens when a non-zero value is programmed in the **venting time** menu. When a power failure occurs, the venting valve opens immediately without delay.

Valve connection (DN 16 ISO-KF* fitting)

«IPL» or «IPH» port:

- Install a DN16 centering ring and connect the venting valve to the port.
- Install a blank-off flange on a centering ring at the other end of the venting valve port and secure with a clamping ring.

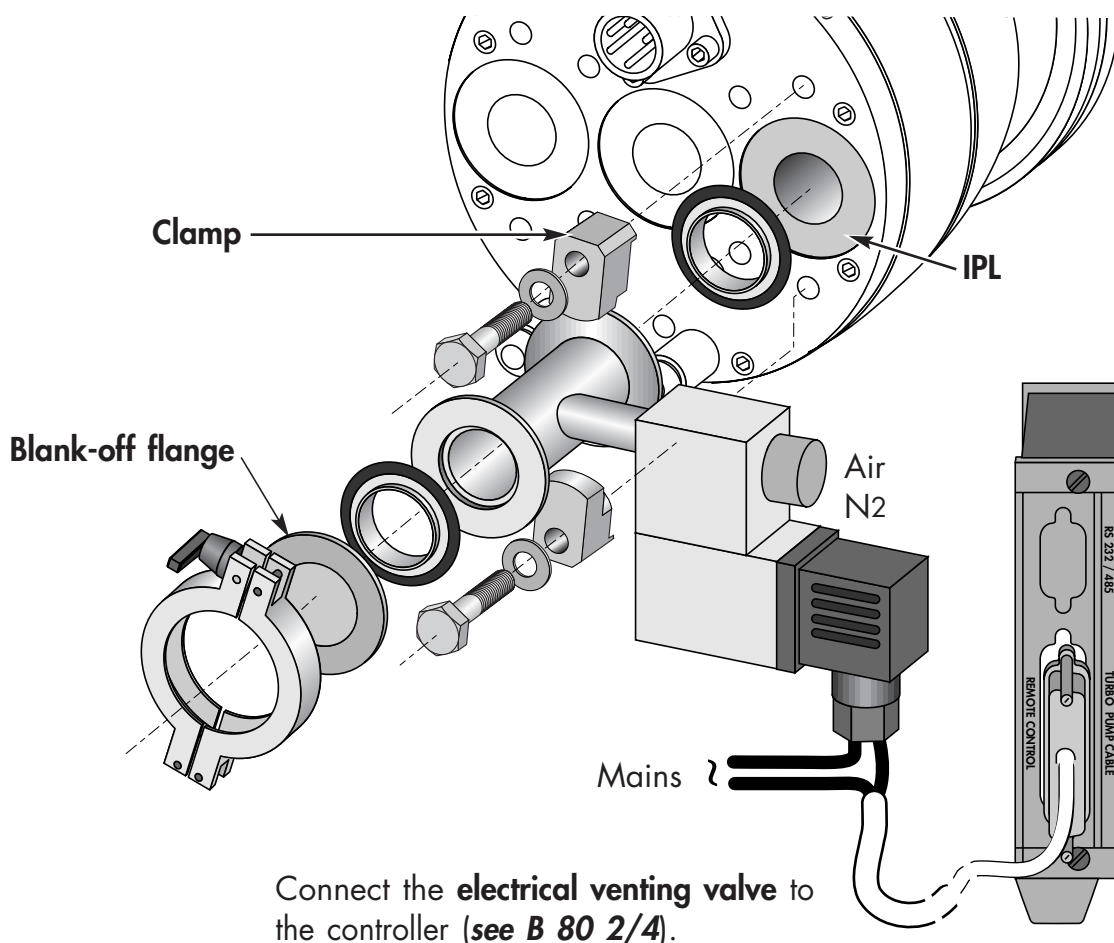

Connect the **electrical venting valve** to the controller (**see B 80 2/4**).

* Different connection accessories can be found in the Alcatel Catalog.