


Air cooling kit connection (accessory)

Axial air cooling kit connection

- Remove the clamps on the bottom of the pump;
- Check the presence of an O-ring in each of the 3 fan groove ports (supplied with the fan);
- Align the fan electrical plug with the pump's electrical connector;
- Secure it by fastening the 4 screws with a screwdriver.

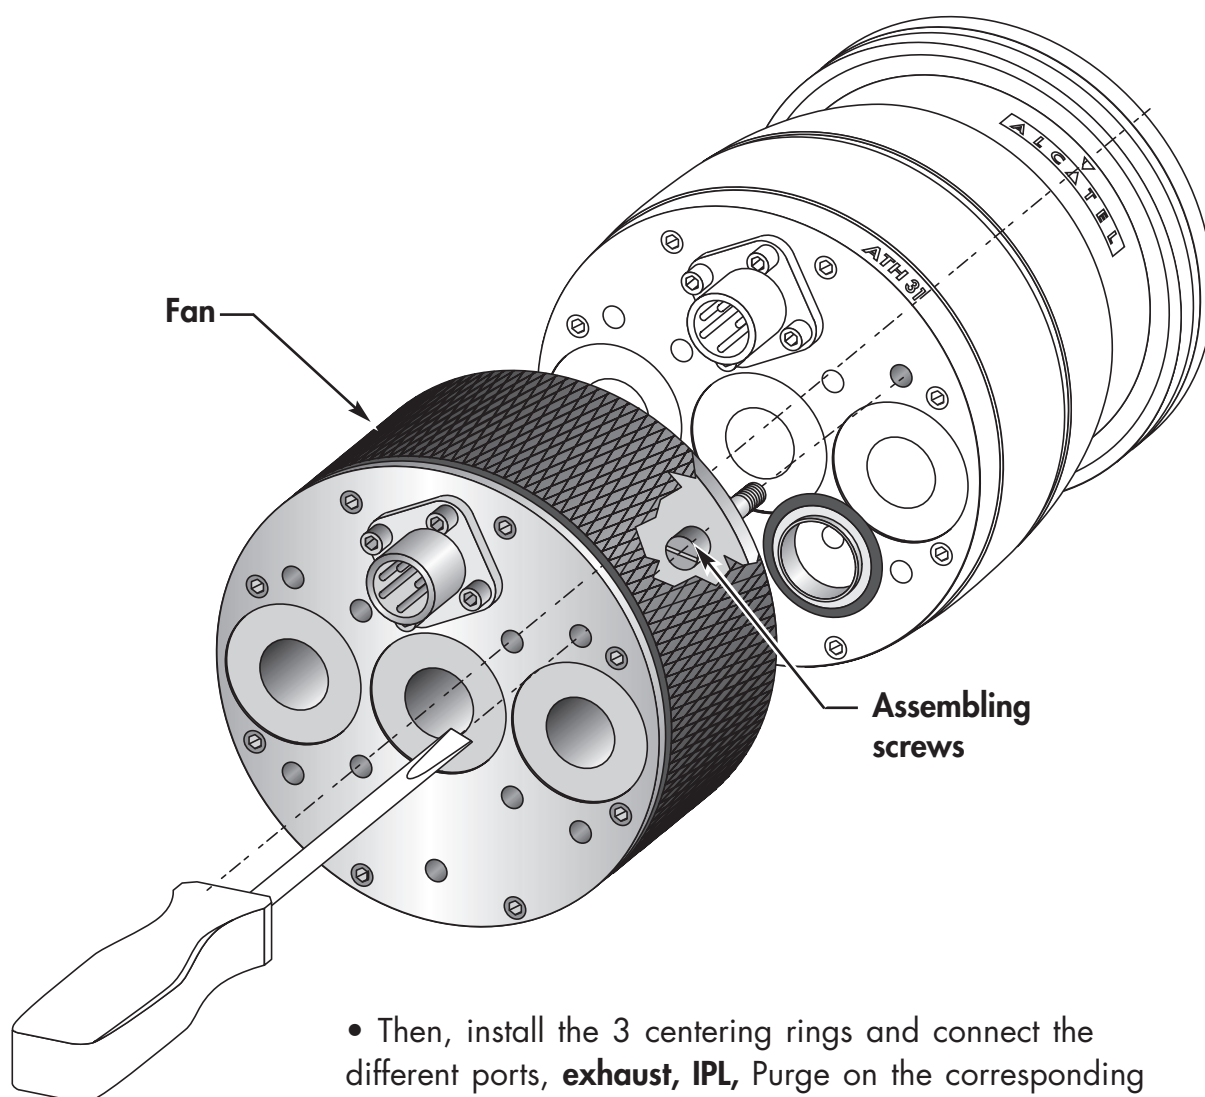


- Then, install the 3 centering rings and connect the different ports, **exhaust**, **IPL**, Purge on the corresponding pipe with the lugs (**See B20**).

Air cooling kit connection (accessory)

Side fan air cooling kit connection

- For more ease, put the pump in the vertical position with the exhaust upward.
- Position the kit on the pump and install the screw H M6-10 with the washer.

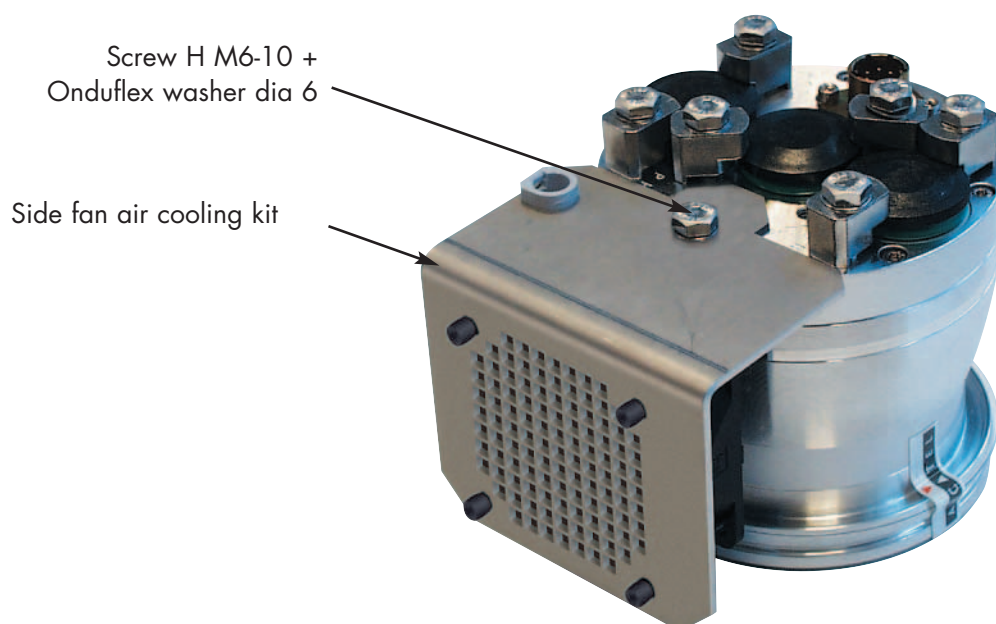

Pump ATH 31 equipped with air cooling kit

Not contractuals photos