

The controller start-up

Once the various electrical connections have been made, set the main switch on the rear panel to "I".

The controller performs a self-test and identifies the pump to which it is connected.

The initialization time is approximately 15 seconds.

Display initialization



Indicator light test: they are lit in succession.



The equipment is identified, the program version is displayed.



Select yes to start or no to initiate the running-in program N°2.



When the pump is new, or after a prolonged shut-down, (see B 130).

Pumping mode selection without preliminary running-in procedure.



The operation time and the name of the pump are displayed.



See also B 130

The parameter setting keys

Parameter setting access



- used to access the parameter setting mode.
- used to exit the various menus without validating the functions.

Selection



- used to move in the menus, or from one parameter to another.



- used to select or adjust the value of the selected parameter.

Validation



- used to validate the selection of a menu, parameter or value.

The controller start-up

Configure the parameters
for the application using
the various menus

Enter the sub-menus by
pressing

