

"Time bearings" counter resetting

After a ball bearing replacement at an Alcatel Service Center, it is necessary to reset the **TIME BEARINGS** counter, as follows:

