

# DAQ Getting Started Guide


This guide describes how to confirm your NI data acquisition (DAQ) device is operating properly. Install your application and driver software, then your device, using the instructions packaged with your device.

## Confirm Device Recognition

Complete the following steps:



1. Double-click the **Measurement & Automation** icon on the desktop to open MAX.
2. Expand **Devices and Interfaces** to confirm your device is detected. If you are using a remote RT target, expand **Remote Systems**, find and expand your target, and then expand **Devices and Interfaces**. If your device is not listed, press <F5> to refresh MAX. If the device is still not recognized, refer to [ni.com/support/daqmx](http://ni.com/support/daqmx).

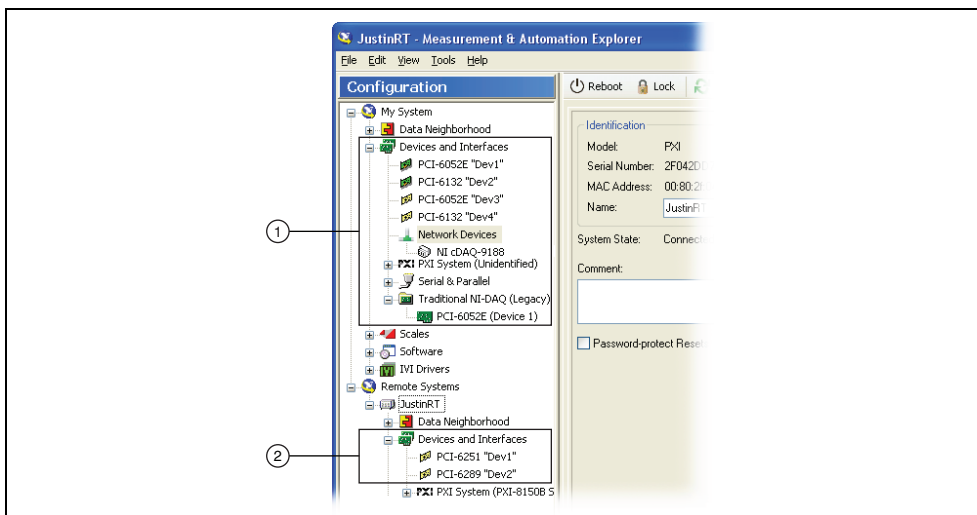

- 1 When a device is supported by both NI-DAQmx and Traditional NI-DAQ (Legacy) and both are installed, the same device is listed with a different name under **My System»Devices and Interfaces**.
- 2 Only NI-DAQmx Devices are listed under **Remote Systems»Devices and Interfaces**.

For a Network DAQ device, do the following:

- If the Network DAQ device is listed under **Devices and Interfaces»Network Devices**, right-click it and select **Add Device**.
- If your Network DAQ device is not listed, right-click **Network Devices**, and select **Find Network NI-DAQmx Devices**. In the Add Device Manually field, type the Network DAQ device's host name or IP address, click the + button, and click **Add Selected Devices**. Your device will be added under **Devices and Interfaces»Network Devices**.



**Note** If your DHCP server is set up to automatically register host names, the device registers the default host name as cDAQ<model number>-<serial number>, WLS-<serial number>, or

ENET-<serial number>. You can find the serial number on the device. If you cannot find the host name of that form, it may have been modified from the default to another value.

If you still cannot access your Network DAQ device, click the **Click here for troubleshooting tips if your device does not appear** link in the Find Network NI-DAQmx Devices window or go to [ni.com/info](http://ni.com/info) and enter the info code `netdaqhelp`.



**Tip** You can test NI-DAQmx applications without installing hardware by using an NI-DAQmx simulated device. For instructions on creating NI-DAQmx simulated devices and importing NI-DAQmx simulated device configurations to physical devices, in MAX, select **Help»Help Topics»NI-DAQmx»MAX Help for NI-DAQmx**.

3. Right-click the device and select **Self-Test**. When the self-test finishes, a message indicates successful verification or if an error occurred. If an error occurs, refer to [ni.com/support/daqmx](http://ni.com/support/daqmx).
4. For NI M and X Series PCI Express devices, right-click the device and select **Self-Calibrate**. A window reports the status of the calibration. Click **Finish**.

## Configure the Device Settings

---

Some devices, such as the NI-9233 and some USB devices, do not need properties for configuring accessories, RTSI, topologies, or jumper settings. If you are installing only devices without configurable properties, skip to the next step. Configure each device with configurable settings that you install:

1. Right-click the device name and select **Properties**. Be sure to click the device name under the folder for the system (My System or Remote Systems) and NI-DAQ API in which you want to control the device.

For Network DAQ devices, click the device name and then the **Network Settings** tab. All settings are populated automatically unless you choose **Static** in the Configure IPv4 Address menu. If you do choose **Static**, ask your network administrator for the correct settings.

2. Configure the device properties.
  - If you are using an accessory, add the accessory information.
  - For IEEE 1451.4 transducer electronic data sheet (TEDS) sensors and accessories, configure the device and add the accessory as previously described. Click **Scan for TEDS**. To configure TEDS sensors cabled directly to a device, in MAX, right-click the device under Devices and Interfaces and select **Configure TEDS**.
3. Click **OK** to accept the changes.

## Install Signal Conditioning or Switch Devices

---

If your system includes SCXI signal conditioning modules, Signal Conditioning Components (SCC) such as SC carriers and SCC modules, terminal blocks, or switch modules, refer to the getting started guide for the product to install and configure the signal conditioning or switch hardware.

## Attach Sensors and Signal Lines

Attach sensors and signal lines to the terminal block or accessory terminals for each installed device. The following table lists device terminal/pinout locations.

| Location                                           | How to Access Pinout                                                                                                                                                                                                                                   |
|----------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MAX                                                | Right-click the device name under Devices and Interfaces and select <b>Device Pinouts</b> .                                                                                                                                                            |
|                                                    | Right-click the device name under Devices and Interfaces and select <b>Help»Online Device Documentation</b> . A browser window opens to <a href="http://ni.com/manuals">ni.com/manuals</a> with the results of a search for relevant device documents. |
| DAQ Assistant                                      | Select the task or virtual channel, and click the <b>Connection Diagram</b> tab. Select each virtual channel in the task.                                                                                                                              |
| NI-DAQmx Help                                      | Select <b>Start»All Programs»National Instruments»NI-DAQ»NI-DAQmx Help</b> .                                                                                                                                                                           |
| <a href="http://ni.com/manuals">ni.com/manuals</a> | Refer to the device documentation.                                                                                                                                                                                                                     |

For information about sensors, refer to [ni.com/sensors](http://ni.com/sensors). For information about IEEE 1451.4 TEDS smart sensors, refer to [ni.com/teds](http://ni.com/teds). If you are using LabVIEW SignalExpress, refer to [Use NI-DAQmx with Your Application Software](#).

## Run Test Panels

Use the MAX test panel as follows.

1. In MAX, expand **Devices and Interfaces** or **Devices and Interfaces»Network Devices**.
2. Right-click the device to test, and select **Test Panels** to open a test panel for the selected device.
3. Click the tabs at the top and **Start** to test the device functions, or **Help** for operating instructions.
4. If the test panel displays an error message, refer to [ni.com/support](http://ni.com/support).
5. Click **Close** to exit the test panel.

## Take an NI-DAQmx Measurement

### NI-DAQmx Channels and Tasks

A *physical channel* is a terminal or pin at which you can measure or generate an analog or digital signal. A *virtual channel* maps a name to a physical channel and its settings, such as input terminal connections, the type of measurement or generation, and scaling information. In NI-DAQmx, virtual channels are integral to every measurement.

A *task* is one or more virtual channels with timing, triggering, and other properties. Conceptually, a task represents a measurement or generation to perform. You can set up and save configuration information in a task and use the task in an application. Refer to the *NI-DAQmx Help* for complete information about channels and tasks.

Use the DAQ Assistant to configure virtual channels and tasks in MAX or in your application software.

### Configure a Task Using the DAQ Assistant from MAX

Complete the following steps to create a task using the DAQ Assistant in MAX:

1. In MAX, right-click **Data Neighborhood** and select **Create New** to open the DAQ Assistant.
2. In the Create New window, select **NI-DAQmx Task** and click **Next**.
3. Select **Acquire Signals** or **Generate Signals**.

4. Select the I/O type, such as analog input, and the measurement type, such as voltage.
5. Select the physical channel(s) to use and click **Next**.
6. Name the task and click **Finish**.
7. Configure individual channel settings. Each physical channel you assign to a task receives a virtual channel name. To modify the input range or other settings, select the channel. Click **Details** for physical channel information. Configure the timing and triggering for your task. Click **Run**.

## Use NI-DAQmx with Your Application Software

---

The DAQ Assistant is compatible with version 8.2 or later of LabVIEW, version 7.x or later of LabWindows™/CVI™ or Measurement Studio, or with version 3 or later of LabVIEW SignalExpress.

LabVIEW SignalExpress LE, an easy-to-use configuration-based tool for data logging applications, is at **Start»All Programs»National Instruments»LabVIEW SignalExpress**.

To get started with data acquisition in your application software, refer to the tutorials:

| Application           | Tutorial Location                                                                                                                                                                                     |
|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LabVIEW               | Go to <b>Help»LabVIEW Help</b> . Next, go to <b>Getting Started with LabVIEW»Getting Started with DAQ»Taking an NI-DAQmx Measurement in LabVIEW</b> .                                                 |
| LabWindows/CVI        | Go to <b>Help»Contents</b> . Next, go to <b>Using LabWindows/CVI»Data Acquisition»Taking an NI-DAQmx Measurement in LabWindows/CVI</b> .                                                              |
| Measurement Studio    | Go to <b>NI Measurement Studio Help»Getting Started with the Measurement Studio Class Libraries»Measurement Studio Walkthroughs»Walkthrough: Creating a Measurement Studio NI-DAQmx Application</b> . |
| LabVIEW SignalExpress | Go to <b>Help»Taking an NI-DAQmx Measurement in SignalExpress</b> .                                                                                                                                   |

## Examples

NI-DAQmx includes example programs to help you get started developing an application. Modify example code and save it in an application, or use examples to develop a new application or add example code to an existing application.

To locate LabVIEW, LabWindows/CVI, Measurement Studio, Visual Basic, and ANSI C examples, go to [ni.com/info](http://ni.com/info) and enter the info code `daqmxexp`. For additional examples, refer to [zone.ni.com](http://zone.ni.com).

To run examples without hardware installed, use an NI-DAQmx simulated device. In MAX, select **Help»Help Topics»NI-DAQmx»MAX Help for NI-DAQmx** and search for simulated devices.

## Troubleshooting

---

If you have problems installing your software, go to [ni.com/support/daqmx](http://ni.com/support/daqmx). For hardware troubleshooting, go to [ni.com/support](http://ni.com/support) and enter your device name, or go to [ni.com/kb](http://ni.com/kb).

If you need to return your National Instruments hardware for repair or device calibration, refer to [ni.com/info](http://ni.com/info) and enter the info code `rdse` to start the Return Merchandise Authorization (RMA) process.

Go to [ni.com/info](http://ni.com/info) and enter `rdq8x` for a complete listing of the NI-DAQmx documents and their locations.

## More Information

---

After you install NI-DAQmx, the NI-DAQmx software documents are accessible from **Start»All Programs»National Instruments»NI-DAQ»NI-DAQmx document title**. Additional resources are online at [ni.com/gettingstarted](http://ni.com/gettingstarted).

You can access online device documentation by right-clicking your device in MAX and selecting **Help»Online Device Documentation**. A browser window opens to [ni.com/manuals](http://ni.com/manuals) with the results of a search for relevant device documents. If you do not have Web access, documents for supported devices are included on the NI-DAQmx media.

## Worldwide Technical Support

---

For support information, refer to [ni.com/support](http://ni.com/support) for access to everything from troubleshooting and application development self-help resources to email and phone assistance from NI Application Engineers. Visit [ni.com/zone](http://ni.com/zone) for product tutorials, example code, webcasts, and videos.

Visit [ni.com/services](http://ni.com/services) for NI Factory Installation Services, repairs, extended warranty, calibration, and other services.

To ensure measurement accuracy, NI factory calibrates all applicable hardware and issues a Basic Calibration certificate, which are available online at [ni.com/calibration](http://ni.com/calibration).

Visit [ni.com/training](http://ni.com/training) for self-paced training, eLearning virtual classrooms, interactive CDs, Certification program information, or to register for instructor-led, hands-on courses at locations around the world.

For support available at the National Instruments worldwide offices, visit [ni.com](http://ni.com), or contact your local office at [ni.com/contact](http://ni.com/contact). National Instruments corporate headquarters is located at 11500 North Mopac Expressway, Austin, Texas, 78759-3504.