


## MARS High Level Network Topology – NPS Setup

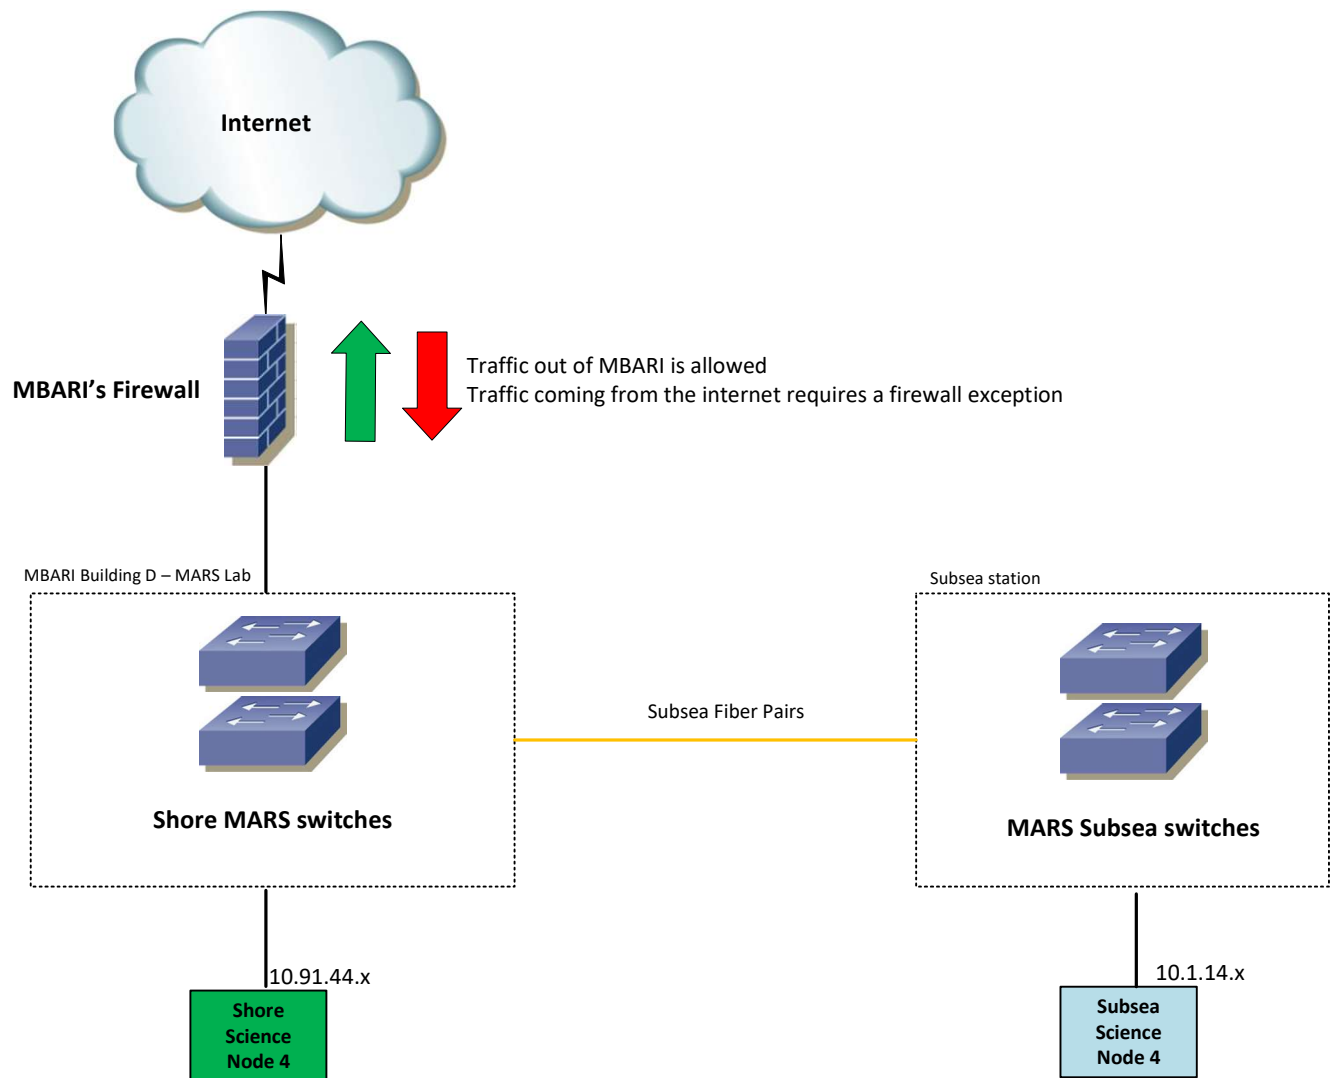

Shore nodes are used by the same nodes at sea to place any data collection equipment the deployments may need

|        | Subsea    |           |                 | Shore side |                 |                 |
|--------|-----------|-----------|-----------------|------------|-----------------|-----------------|
| Node   | Gateway   | Subsea IP | External NAT IP | Gateway    | Control Room IP | External NAT IP |
| NODE 4 | 10.1.14.1 | 10.1.14.2 | 134.89.42.142   | 10.91.44.1 | 10.91.44.4      | 134.89.42.144   |
|        |           | 10.1.14.3 | 134.89.42.143   |            |                 |                 |

NOTE: The external IP for the devices will be in the 134.89.52.x range while using the MBARI Wet Node Simulator (WNS).