



Firmware Upgrade

- Open a Web Browser:
 - For the Web Browser's URL, enter: **http:// <IP Address of encoder>/update.htm**
 - The unit's login window will open:
 - User name = admin (default)
 - Password = (blank is default)

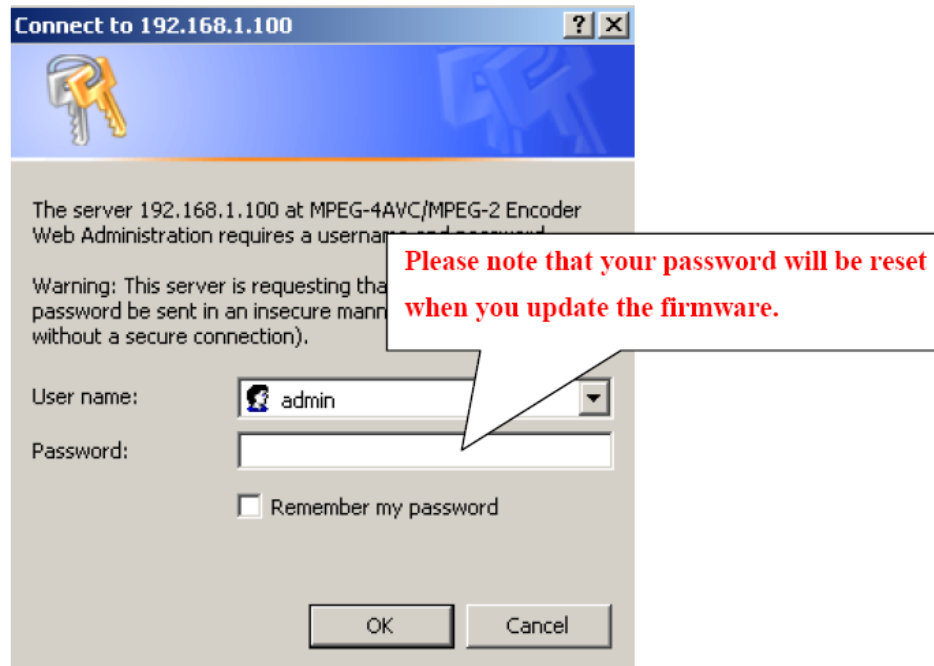

Firmware Upgrade


- The following web page opens in the browser:

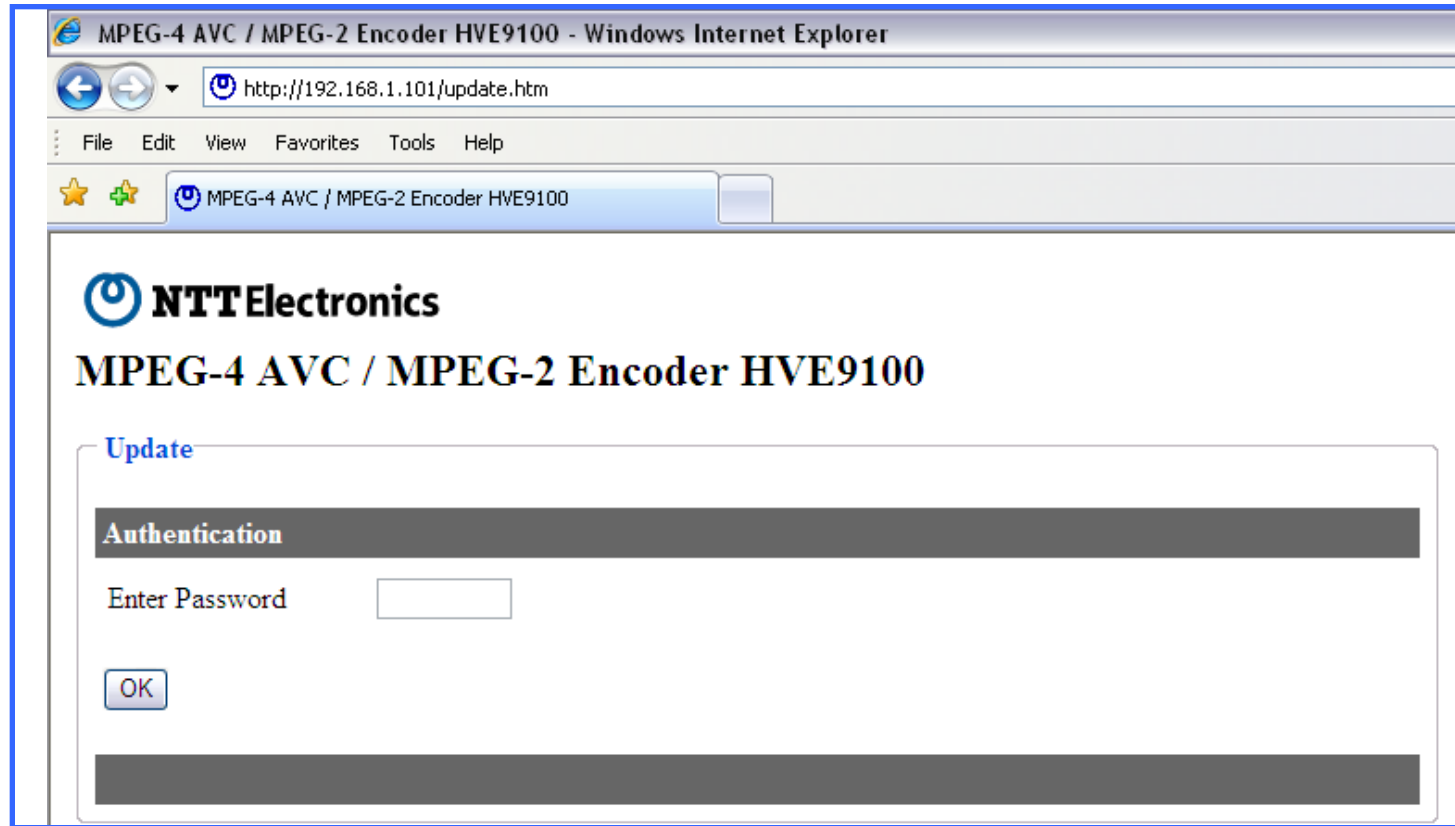

- Enter **14142135** for the password and click “OK”.

Firmware Upgrade


- The following web page opens in the browser:

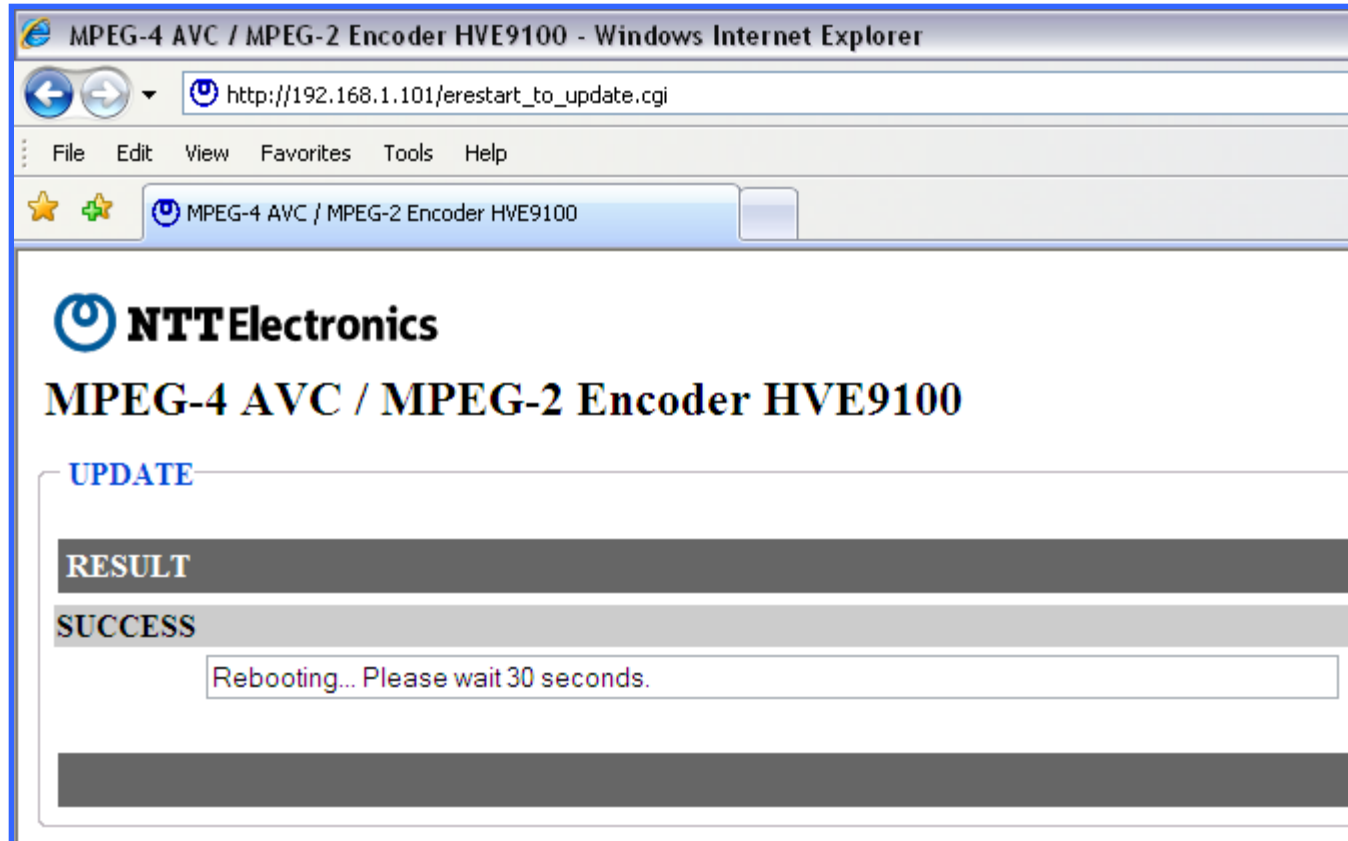

- The encoder will reboot


Firmware Upgrade

- At the completion of the reboot cycle, the following web page opens in the browser:

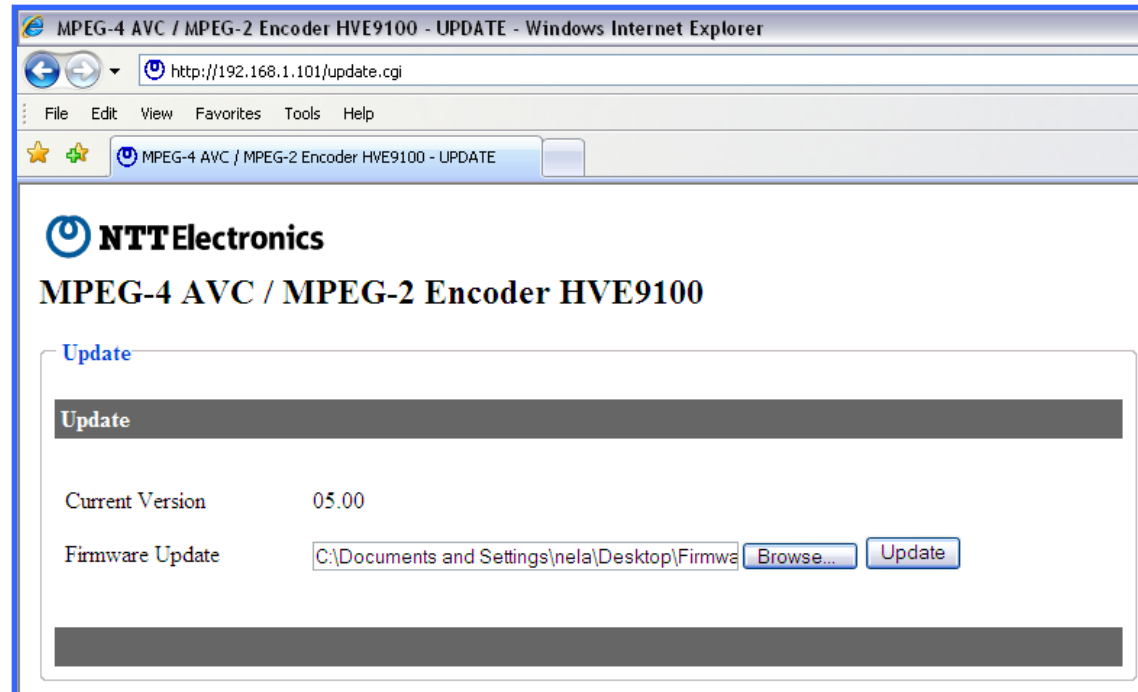


- Browse to the location of the firmware upgrade
 - If upgrading from a firmware release that is earlier than 2.57, an upgrade to the 2.57 release must first be performed before proceeding to the latest release.

Firmware Upgrade

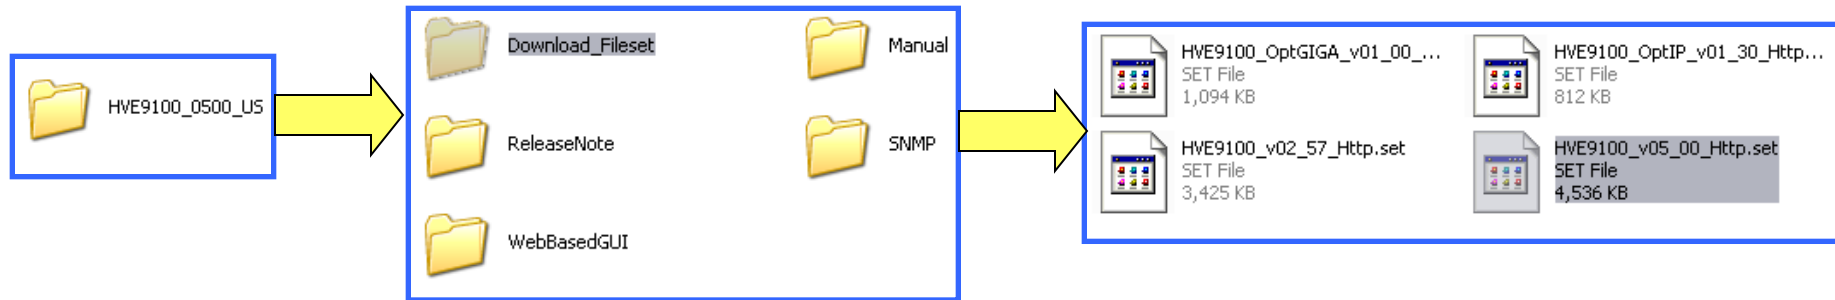


- Click the “Upgrade” button. An acknowledgement to proceed with the upgrade will appear. Click “O.K.” The following web page will open:

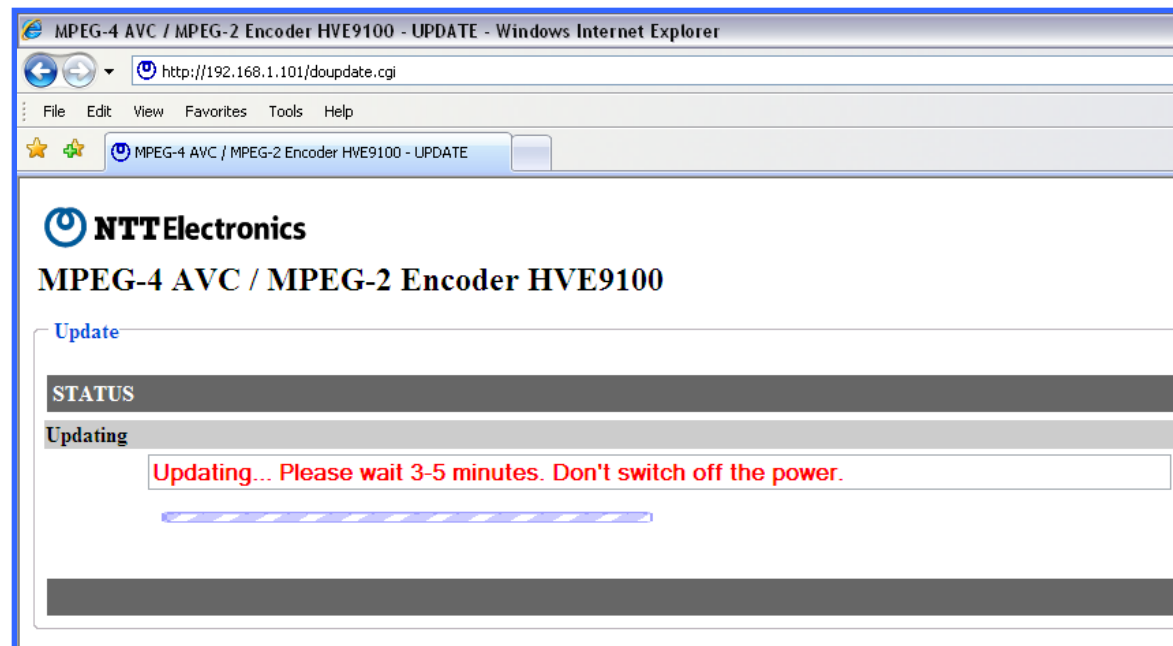

Firmware Upgrade

- At the conclusion of the firmware upgrade, the following web page will open:

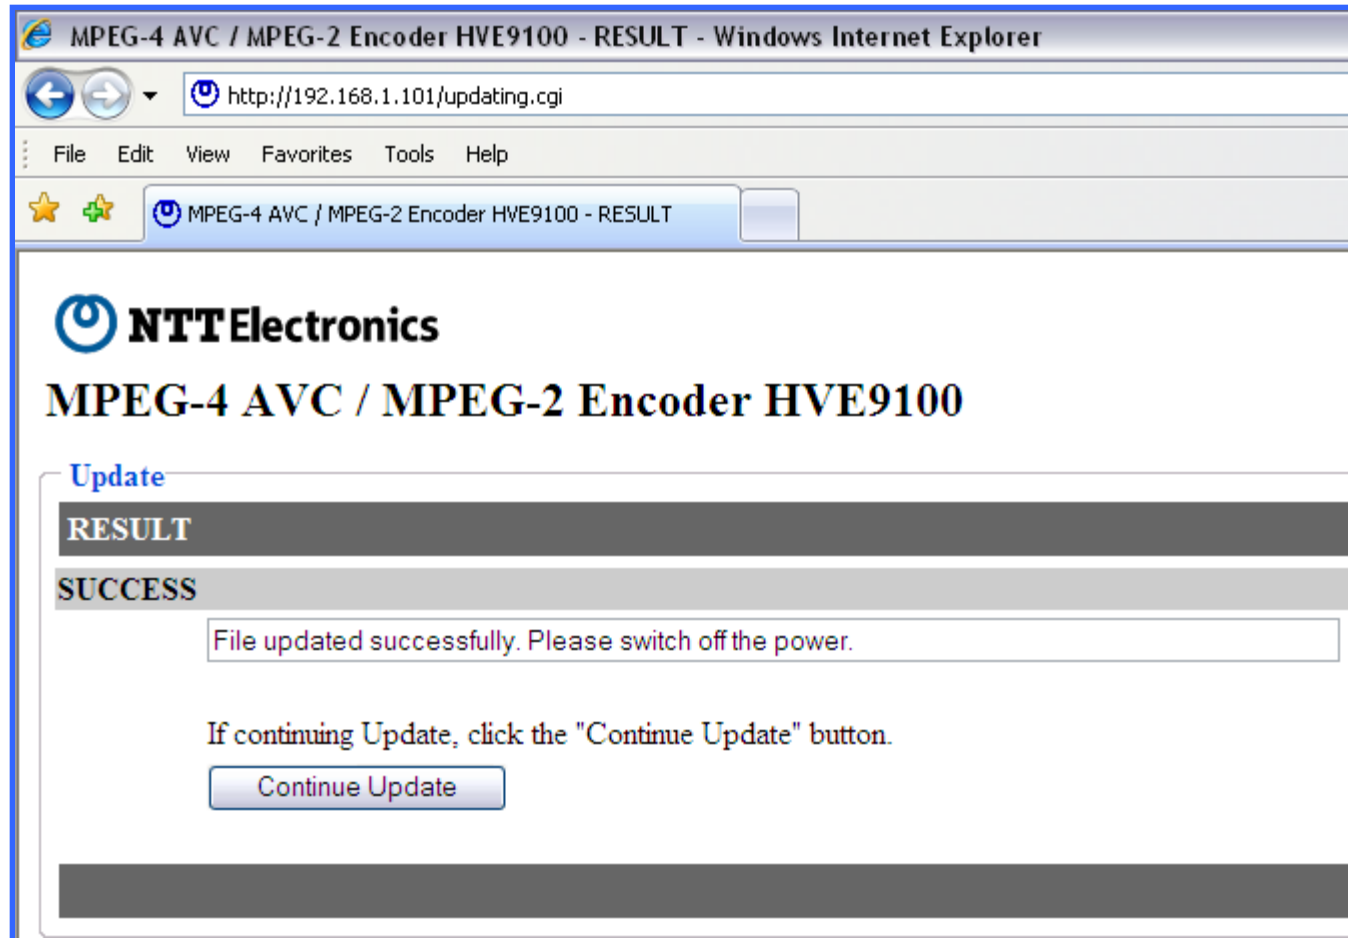

Firmware Upgrade

- If the upgrade was an intermediate upgrade to the 2.57 firmware release performed before proceeding to the latest release, or a firmware upgrade for an IP option board is to also be performed, click the “Continue Upgrade” button and repeat the previous process - otherwise power cycle the encoder.

1000 Base-T IP Interface Board
Firmware Upgrade

10/100 Base-T IP Interface Board
Firmware Upgrade

