

Comware V7 MQC NETCONF XML API Action Reference

Contents

- MQC 1
 - MQC/ClearGlobalStatistic 1
 - XML structure 1
 - Table description 1
 - Columns 1
 - MQC/ClearVlanStatistic 1
 - XML structure 2
 - Table description 2
 - Columns 2

MQC

MQC/ClearGlobalStatistic

This table is used to clear statistics of a global QoS policy.

XML structure

```
<MQC>
  <ClearGlobalStatistic>
    <Application>
      <Direction></Direction>
      <Clear></Clear>
    </Application>
  </ClearGlobalStatistic>
</MQC>
```

Table description

Item	Description
Feature name	MQC
Table name	ClearGlobalStatistic
Table type	Multi-instance table
Row name	Application
Restrictions	None

Columns

Column name	Column description	Column type	Data type and restrictions	Remarks
Direction	Application direction	N/A	Enumeration: • 0—Inbound. • 1—Outbound.	If you do not specify this column, All directions are cleared.
Clear	Clear global policy statistics	N/A	This column must be empty	Required.

MQC/ClearVlanStatistic

This table is used to clear statistics of the QoS policy applied in VLAN.

XML structure

```
<MQC>
  <ClearVlanStatistic>
    <Application>
      <VLANID></VLANID>
      <Direction></Direction>
      <Clear></Clear>
    </Application>
  </ClearVlanStatistic>
</MQC>
```

Table description

Item	Description
Feature name	MQC
Table name	ClearVlanStatistic
Table type	Multi-instance table
Row name	Application
Restrictions	None

Columns

Column name	Column description	Column type	Data type and restrictions	Remarks
VLANID	VLAN ID	N/A	Unsigned integer. Value range: 1 to 4094.	If you do not specify this column, All VLANs are cleared.
Direction	Application direction	N/A	Enumeration: • 0—Inbound. • 1—Outbound.	If you do not specify this column, All directions are cleared.
Clear	Clear VLAN policy statistics	N/A	This column must be empty	Required.