

CircuitPro 1.4.xxx Installation Note For Windows 7 and Windows XP

NOTE: If there is an older version of CircuitPro installed on your PC, you must remove the program and delete the following files before you install the new version.

- LPKF.ToolLibrary.xml
- LPKF.ToolInstanceLibrary.xml


Windows 7

The files are located in the following location C:\ProgramData\LPKF Laser & Electronics\LPKF CircuitPro 1.4

1. Open Folder Options by clicking the Windows **Start** button 
2. Click **Control Panel**
3. Click **Appearance and Personalization**
4. Click **Folder Options**.
5. Press the tab, **View** and place the green bullet in Show hidden files and folder.



6. Press Apply and OK
7. Open Windows Explorer.
8. Navigate to C:\ProgramData\LPKF Laser & Electronics\LPKF CircuitPro 1.4

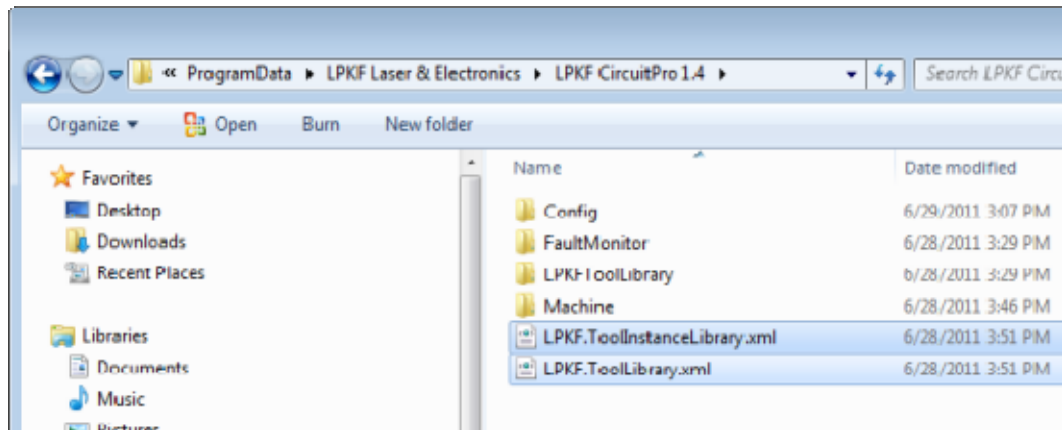

9. Delete the two files LPKF.ToolLibrary.xml and LPKF.ToolInstanceLibrary.xml

Note: After deleting the files, the tool life counters for all tools are reset to zero. There is no way to avoid this.

10. Install the new version of CircuitPro
11. CircuitPro and follow the steps in the Equipment Configuration Wizard.

Windows XP

NOTE: If there is an older version of CircuitPro installed on your PC, you must remove the program and delete the following files before you install the new version.


- LPKF.ToolLibrary.xml
- LPKF.ToolInstanceLibrary.xml

The files are located in the following location C:\Documents and Settings\All Users\Application Data\LPKF Laser & Electronics\LPKF CircuitPro 1.4

1. Open Windows Explorer.
2. Click on Tools>>Folder Options.
3. Press the tab, View and place the green bullet in Show hidden files and folder.



4. Press Apply and OK.
5. Navigate to C:\Documents and Settings\All Users\Application Data\LPKF Laser & Electronics\LPKF CircuitPro 1.4

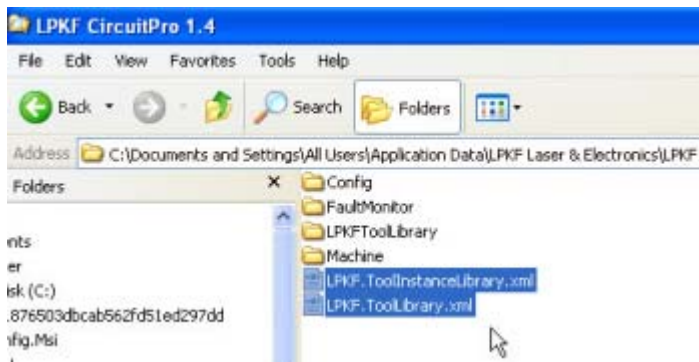

6. Delete the two files LPKF.ToolLibrary.xml and LPKF.ToolInstanceLibrary.xml

Note: After deleting the files, the tool life counters for all tools are reset to zero. There is no way to avoid this.

7. Install the new version of CircuitPro
8. Open CircuitPro and follow the steps in the Equipment Configuration Wizard.