



2) For RS485 stuff R94 and R97 and not R84 and R88

