


UDB-9400 Universal Deck Box

UDB-9400M and UDB-9400E Portable and Rack Mount Configurations

User's Manual

P/N M-270-35, Rev. A

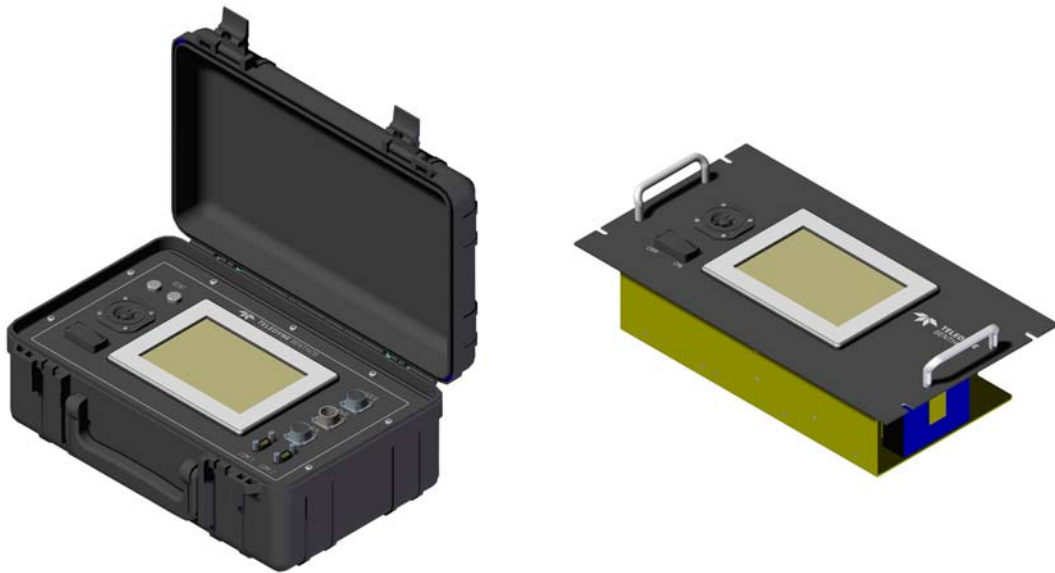

TELEDYNE BENTHOS

Teledyne Benthos
49 Edgerton Drive
North Falmouth, MA 02556
U.S.A.

Tel: (508) 563-1000
Fax: (508) 563-6444

www.benthos.com

Notices

Proprietary Information

The information, descriptions, photos and illustrations in this manual are the property of Teledyne Benthos Materials may not be reproduced or disseminated without the prior written consent of Teledyne Benthos.

Warranty, Limitation of Liability, and Intellectual Property Rights Statement

This Statement applies to the products of Teledyne Benthos, a Business Unit of Teledyne Instruments, Inc. Approved 4/17/12.

LIMITED WARRANTY. Teledyne Benthos warrants that Goods delivered under Buyer's Order shall be free from defects in material and workmanship, and conform to the specifications for a period of twelve (12) months from the date of original shipment. The warranty period for spare parts is ninety (90) days from the date of original shipment. This warranty does not apply to any Goods that, upon examination by Teledyne Benthos, are found to have been (a) mishandled, misused, abused, or damaged by Buyer or Buyer's customer, (b) altered or repaired without Teledyne Benthos' prior written approval, or (c) improperly stored, installed, operated, or maintained in a manner inconsistent with Teledyne Benthos' instructions. This warranty does not apply to defects attributed to normal wear and tear. Teledyne Benthos, at its sole option, shall repair or replace defective Goods, or issue Buyer a credit for the original price of the defective Goods. Such repair, replacement, credit, and re-performance by Teledyne Benthos shall be Buyer's sole remedy for defective Goods and Services. Under no circumstances is Teledyne Benthos, liable for retrieval, removal, dismantling, re-installation, redeployment, or re-commissioning of any defective Goods or any costs associated therewith including, but not limited to, any subsea work performed below the waterline, heavy lift operations, or the transportation to or from offshore locations. Consumables obtained from third-parties shall bear the warranty of their manufacturer. The warranty period for repaired or replaced Goods or reperformed Services shall be the unexpired portion of the original warranty period. THESE EXPRESS WARRANTIES, INCLUDING THE REMEDIES SET FORTH HEREIN, ARE EXCLUSIVE AND ARE IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS INTENDED OR GIVEN. IN THE CASE OF GOODS OTHER THAN THOSE OF TELEDYNE BENTHOS' OWN MANUFACTURE, TELEDYNE BENTHOS MAKES NO WARRANTIES, EXPRESS, STATUTORY, OR IMPLIED.

LIMITATION OF LIABILITY. NOTWITHSTANDING ANY OTHER PROVISION HEREIN, UNDER NO CIRCUMSTANCES SHALL EITHER PARTY BE LIABLE FOR ANY CONSEQUENTIAL, SPECIAL, INCIDENTAL, INDIRECT, MULTIPLE, ADMINISTRATIVE, OR PUNITIVE DAMAGES, OR ANY DAMAGE OF AN INDIRECT OR CONSEQUENTIAL NATURE ARISING OUT OF OR RELATED TO ITS PERFORMANCE UNDER BUYER'S ORDER, INCLUDING, WITHOUT LIMITATION, LOSS OF USE, LOSS OF REVENUES, LOSS OF ANTICIPATED PROFITS, AND COST OF CAPITAL, WHETHER BASED UPON BREACH OF BUYER'S ORDER, WARRANTY, NEGLIGENCE, OR ANY OTHER TYPE OF CLAIM, AND WHETHER GROUNDED IN TORT, CONTRACT, CIVIL LAW, OR OTHER THEORIES OF LIABILITY, INCLUDING STRICT LIABILITY, EVEN IF ADVISED IN ADVANCE OF THE POSSIBILITY OF SUCH DAMAGES. TELEDYNE BENTHOS' TOTAL LIABILITY ARISING FROM OR RELATED TO BUYER'S ORDER, INCLUDING, BUT NOT LIMITED TO, ITS LIABILITY FOR INDEMNITY, DEFENSE, AND HOLD HARMLESS OBLIGATIONS UNDER BUYER'S ORDER, IS LIMITED TO NO MORE THAN THE AMOUNT PAID BY BUYER TO TELEDYNE BENTHOS UNDER BUYER'S ORDER, AND BUYER AGREES TO INDEMNIFY TELEDYNE BENTHOS FOR ANY EXCESS AMOUNTS. TO THE EXTENT THAT THIS LIMITATION OF LIABILITY CONFLICTS WITH ANY OTHER SECTION OR PROVISION HEREIN, SUCH PROVISION SHALL BE REGARDED AS AMENDED TO WHATEVER EXTENT REQUIRED TO MAKE SUCH PROVISION CONSISTENT WITH THIS CLAUSE.

INTELLECTUAL PROPERTY RIGHTS. Teledyne Benthos shall retain all rights, title, and interest in and to any data, information, software programs, tools, specifications, templates, scripts, ideas, concepts, inventions, works of authorship, products, know-how, processes, techniques, and the like used or developed by Teledyne Benthos, its employees, and its subcontractors in connection with Buyer's Order. Buyer agrees that Teledyne Benthos retains all proprietary rights in and to all products, specifications, designs, discoveries, inventions, patents, copyrights, trademarks, trade secrets, and other proprietary rights relating to Goods or Services. Unless otherwise identified in writing to Teledyne Benthos, no information or knowledge heretofore or hereafter disclosed to Teledyne Benthos in the performance of, or in connection with, the terms hereof, shall be deemed to be confidential or proprietary and any such information or knowledge shall be free from restrictions, other than a claim for patent infringement, as part of the consideration hereof.

Liability

Teledyne Benthos assumes no liability for damages, losses or costs incurred consequentially through operation or malfunction of Teledyne Benthos products.

Title

Title shall pass to the Buyer on delivery to the carrier at North Falmouth, Massachusetts, U.S.A. Risk of damage or loss following such delivery shall be the Buyer's, and Teledyne Benthos shall in no way be responsible for safe arrival of the shipment. Title shall so pass to the Buyer regardless of any provision for payment of freight or insurance by Teledyne Benthos, and regardless of the form of the shipping documents. If shipment is consigned to Teledyne Benthos, it shall be for the purpose of securing the Buyer's obligations under contract.

Changes

Teledyne Benthos reserves the right to make changes to the design or specifications at any time without incurring any obligation to modify previously installed units. In addition, while considerable effort has been made to ensure that the information in this manual is accurate and complete, Teledyne Benthos assumes no liability for any errors or omissions.

Preface

Congratulations on your purchase of a Teledyne Benthos UDB-9400 Universal Deck Box! This deck box combines all of the features of the Teledyne Benthos DS-8750, DS-8000 and DS-7000 Acoustic Deck Sets and the ATM-891 Acoustic Telemetry Modem Deck Box into one unit. This capability enables the UDB-9400 to operate with all of the Teledyne Benthos acoustic releases, transponders and pop-up buoys, and to operate with the Teledyne Benthos acoustic telemetry modems, including Compact Modems. In addition, the deck box operates with EdgeTech/EG&G, the University of Rhode Island (URI) and GeoPro acoustic releases. The deck box employs the same digital processing technology used in the acoustic telemetry modems for reliable wireless digital communications underwater.

This manual provides information on setting up and operating the UDB-9400. It is divided into the following eight sections:

Section 1 - Overview reviews the operational features, the operator functions and the external connections provided by the UDB-9400.

Section 2 - Specifications lists the specifications for the UDB-9400.

Section 3 - Installation and Setup provides instructions on how to unpack the UDB-9400, install the rack mount configuration in a 19-inch rack and make the required connections.

Section 4 - Operation using the Touch Screen Display provides instructions on how to operate all the functions of the UDB-9400 using the touch screen display, including acquiring and displaying ranges and sending commands.

Section 5 - Operation using Serial Interface Commands provides instructions on how to send commands to the UDB-9400 and receive round trip travel times and status information over a serial port using the same command set and syntax as that used for the DS-7000 Acoustic Deck Set.


Section 6 - Care and Maintenance provides recommended care and maintenance procedures and procedures on how to replace the batteries in the portable configuration of the UDB-9400, how to calibrate the touch screen display and how to update the UDB-9400 firmware.

Section 7 - Detailed Views includes detailed assembly drawings of the UDB-9400 chassis and its front and rear panels.

Section 8 - Part Number Designator includes a part number designator for simplified ordering.

Notes and Warnings

Where applicable, special notes and warnings are presented as follows:

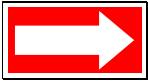

NOTE A referral to another part of this manual or to another reference; a recommendation to check that certain criteria are met before proceeding further in a step or sequence; or general information applicable to the setup and operation of the UDB-9400 Universal Deck Box.



WARNING A reminder that dangerous or damaging consequences could result if certain recommended procedures are not followed.

Customer Service

We welcome your comments and suggestions for improving our products and documentation as well as developing better ways of serving you with acoustic technology. Therefore, please contact Customer Service should you have any comments or suggestions about this manual or the UDB-9400 Universal Deck Box, or if you require service or support.

Please contact us at:

TELEDYNE BENTHOS
Attention: Customer Service
49 Edgerton Drive
North Falmouth, MA 02556
U.S.A.

Telephone: (508) 563-1000
Fax: (508) 563-6444
E-mail: benthos@teledyne.com

www.benthos.com

Contents

Notices	ii
Proprietary Information	ii
Warranty, Limitation of Liability, and Intellectual Property Rights Statement	ii
Liability	iv
Title	iv
Changes	iv
Preface	v
Notes and Warnings	vi
Customer Service	vi
Contents	vii
List of Figures	xii
List of Tables	xvii
 1 Overview	 1-1
General Description	1-2
Deck Box Types and Configurations	1-2
Operating Frequency Bands	1-3
HMTI-9000 Hull Mounted Transducer Interface	1-4
Transducer	1-4
Transducer Cable	1-4
AUX Cable	1-4
Accessories Case	1-4
Operation	1-6
Power Requirements	1-6
External Connections	1-6
Operator Functions	1-6
Operator Functions—Portable Configuration	1-6
Operator Functions—Rack Mount Configuration	1-8
Connections	1-9
Connections—Portable Configuration	1-9
Connections—Rack Mount Configuration	1-9
Hull Mounted Transducer Interface Connections	1-11
 2 Specifications	 2-1
General	2-1
Acoustic Telemetry Modem	2-1
Transponder	2-1

Environmental	2-2
Physical Characteristics	2-2
Portable Configuration Physical Characteristics	2-2
Rack Mount Configuration Physical Characteristics	2-3
HMTI-9000 Physical Characteristics	2-3
Power Requirements	2-3
Portable Configuration Power Requirements	2-3
Rack Mount Configuration Power Requirements	2-4
Input/Output	2-4
Transducer	2-4
LF/Release Band Transducer	2-4
Medium Frequency (MF) Transducer	2-5
Band C Transducer	2-5

3 Installation and Setup **3-1**

Unpacking and Inspection	3-1
Setting up the Deck Box—Portable Configuration	3-1
Setting up the Deck Box—Rack Mount Configuration	3-1
Connecting the Deck Box	3-4
Deploying the Transducer	3-4
Changing the HMTI-9000 Transformer and Resonator Jumper Positions	3-11

4 Operation using the Touch Screen

Display **4-1**

Activating the Touch Screen Display	4-1
Touch Screen Display Overview	4-2
Main Screens	4-2
Save and Help Functions	4-4
Status and Control Bar	4-5
General Setup	4-6
Selecting the Local Modem Address	4-6
Selecting the Transmit Power Level	4-7
Adjusting the Headphones Volume	4-7
Adjusting the Speaker Volume	4-8
Setting the Time and Date and Viewing the Clock Battery Voltage	4-8
Viewing the Battery Level/Charge and External AC/DC Power Source Indicators	4-10

Viewing the Time and Date Display	4-10
Adjusting the Touch Screen Display Backlight and Contrast ...	4-11
Configuring the Power Saver	4-11
Configuring the Serial Ports	4-12
Selecting the Beep and Units Preferences	4-14
Touch Screen Calibration	4-14
Working with Information Windows	4-15
Locked Information Windows	4-15
Unlocked Information Windows	4-15
Waking up a Compact Modem or Compact Release	4-16
Selecting the Slow or Fast Wakeup Scheme for a Compact Modem or Compact Release	4-16
Selecting the Wakeup Period for a Compact Modem or Compact Release	4-17
Selecting the Idle Timeout for a Remote Compact Modem or Compact Release	4-18
Transmitting a Wakeup Signal to a Compact Modem or Compact Release	4-19
Ranging to a Remote Modem	4-20
Acquiring and Displaying the Range to a Remote Modem	4-20
Acquiring and Displaying Ranges to a Remote Modem Continuously	4-22
Acquiring and Displaying Status Information from a Remote Modem	4-22
Releasing a SMART Release or SMART Modem	4-24
Configuring and Checking a Remote Modem	4-26
Selecting the Remote Modem Address	4-26
Configuring the Bit Rate and Transmit Power Level of a Remote Modem	4-27
Checking the Bit Rate, Transmit Power Level and Firmware Version of a Remote Modem	4-28
Checking the Battery Level of a Remote Modem	4-29
Acquiring and Displaying Ranges in the Modem Config Screen	4-29
Testing the Acoustic Link with a Remote Modem	4-30
Communicating with a Remote Modem	4-31
Selecting the Remote Modem Address	4-31
Sending Data to an Instrument that is Connected to a Remote Modem	4-32
Acquiring and Displaying Ranges in the Modem Comms Screen	4-34
Receiving Data from Remote Modems	4-35

Saving to a Log File	4-35
Limiting the Size of the Log File	4-35
Exporting the Log File	4-36
Clearing the Log File	4-36
Transponder Functions	4-36
Configuring the Basic Transponder Settings	4-36
Configuring the Advanced Transponder Settings	4-39
Acquiring and Displaying Ranges with a UDB-9400M	4-41
Acquiring and Displaying Ranges with a UDB-9400E	4-44
Acquiring and Displaying Ranges Continuously	4-45
Acquiring and Displaying Ranges using "Silent Ping"	4-45
Sending Commands To Acoustic Releases	4-46
Sending Commands to Teledyne Benthos Acoustic Releases ..	4-46
Sending Commands to EdgeTech/EG&G Acoustic Releases ...	4-48
Sending Commands to URI Acoustic Releases	4-50
Sending Commands to GeoPro Acoustic Releases	4-51

5 Operation using Serial Interface

Commands	5-1
COM1 Serial Port Settings	5-1
COM2 Serial Port Settings	5-1
Sending Commands and Receiving Data	5-2
Serial Commands	5-2

6 Care and Maintenance

Deck Box Cleaning and Inspection	6-1
Transducer Cleaning and Inspection	6-1
Battery Maintenance and Charging	6-2
Replacing the Batteries	6-2
Calibrating the Touch Screen Display	6-7
Updating the UDB-9400 Firmware	6-8
Updating the UDB-9400 Firmware Using the Qlarity Download Utility	6-8
Updating the UDB-9400 Firmware Using a Binary Data Transfer Program	6-10

7 Detailed Views

8 Part Number Designator

List of Figures

Figure 1-1	<i>The UDB-9400 Universal Deck Box—Portable and Rack Mount Configurations</i>	1-1
Figure 1-2	<i>The HMTI-9000 Hull Mounted Transducer Interface Box and Interface Cable</i>	1-5
Figure 1-3	<i>UDB-9400 Operator Functions and Connections—Portable Configuration</i>	1-7
Figure 1-4	<i>UDB-9400 Operator Functions—Rack Mount Configuration</i>	1-8
Figure 1-5	<i>UDB-9400 Rear Panel Connections—Rack Mount Configuration</i>	1-10
Figure 3-1	<i>UDB-9400 Outline Dimensions—Portable Configuration</i>	3-2
Figure 3-2	<i>UDB-9400 Outline Dimensions—Rack Mount Configuration</i>	3-3
Figure 3-3	<i>HMTI-9000 Hull Mounted Transducer Interface Outline Dimensions</i>	3-5
Figure 3-4	<i>Transducer Outline Dimensions</i>	3-6
Figure 3-5	<i>PWR Connector</i>	3-7
Figure 3-6	<i>XDCR Connector</i>	3-7
Figure 3-7	<i>HMTI-9000 TRANSDUCER Connector</i>	3-8
Figure 3-8	<i>HMTI-9000 INPUT Connector</i>	3-8
Figure 3-9	<i>COM2 Connector</i>	3-9
Figure 3-10	<i>AUX Connector</i>	3-9
Figure 3-11	<i>COM1 Connector</i>	3-10
Figure 3-12	<i>The HTMI-9400 Hull Mounted Transducer Interface Box Transformer and Resonator Value Jumpers and Guide</i>	3-12
Figure 3-13	<i>Blocking Capacitance Vs. Resonator Value Selection</i>	3-13
Figure 4-1	<i>Opening Screen for a UDB-9400M Universal Deck Box</i>	4-1

Figure 4-2	<i>UDB-9400 Touch Screen Main Screens</i>	4-3
Figure 4-3	<i>Help for the Release/Range Screen</i>	4-4
Figure 4-4	<i>About and System Info Pop-ups</i>	4-5
Figure 4-5	<i>Status and Control Bar</i>	4-5
Figure 4-6	<i>Modem Config Screen—Deck Box Tab</i>	4-6
Figure 4-7	<i>Modem Address Keypad</i>	4-6
Figure 4-8	<i>Transmit Power Control Drop-Down List</i>	4-7
Figure 4-9	<i>Phones Vol Pop-Up</i>	4-7
Figure 4-10	<i>Speaker Vol Pop-Up</i>	4-8
Figure 4-11	<i>Set Time and Date Pop-Up</i>	4-9
Figure 4-12	<i>Month Pop-Up</i>	4-9
Figure 4-13	<i>Display Screen</i>	4-11
Figure 4-14	<i>Timeout Drop-Down List</i>	4-12
Figure 4-15	<i>COM1 Configuration Pop-Up</i>	4-13
Figure 4-16	<i>COM2 Configuration Pop-Up</i>	4-13
Figure 4-17	<i>Example of a Locked Information Window</i>	4-15
Figure 4-18	<i>Example of Unlocked Information Window</i>	4-15
Figure 4-19	<i>Modem Config Screen—Fast Wake Selected</i>	4-17
Figure 4-20	<i>Modem Config Screen—Wakeup Period Selected</i>	4-18
Figure 4-21	<i>Modem Config Screen—Idle Timeout Selected</i>	4-18
Figure 4-22	<i>Compact Modem Wakeup Button in the Release/Range Screen</i>	4-19
Figure 4-23	<i>Waking up a Compact Modem</i>	4-19
Figure 4-24	<i>Release/Range Screen—Benthos Smart Release/Modem Selected</i>	4-20
Figure 4-25	<i>Remote Address Keypad</i>	4-21
Figure 4-26	<i>Transpond Parameters Pop-Up</i>	4-21
Figure 4-27	<i>Information Window with Displayed Range Information</i>	4-22

Figure 4-28	<i>Information Window Acknowledging Receipt of Status Information</i>	4-23
Figure 4-29	<i>Displayed Status Information and Type of SMART Release or SMART Modem</i>	4-23
Figure 4-30	<i>Release Code Keypad</i>	4-24
Figure 4-31	<i>Released CONFIRMED—SMART Release</i>	4-25
Figure 4-32	<i>Burn Wire Activated—SMART Modem</i>	4-26
Figure 4-33	<i>Modem Config Screen—Remote A Tab</i>	4-26
Figure 4-34	<i>Remote Address Keypad</i>	4-27
Figure 4-35	<i>Remote Additional Info Pop-Up</i>	4-28
Figure 4-36	<i>Information Window with Displayed Battery Level</i>	4-29
Figure 4-37	<i>Displayed Ranges in the Modem Config Screen</i>	4-29
Figure 4-38	<i>Acoustic Link Stats Pop-Up</i>	4-30
Figure 4-39	<i>Modem Comms Screen</i>	4-31
Figure 4-40	<i>Address Keypad</i>	4-32
Figure 4-41	<i>Keyboard</i>	4-33
Figure 4-42	<i>Data to be Sent</i>	4-33
Figure 4-43	<i>Sent Data</i>	4-33
Figure 4-44	<i>Confirm Log Clear Window</i>	4-34
Figure 4-45	<i>Range Options Pop-Up in the Modem Comms Screen</i>	4-34
Figure 4-46	<i>Displayed Ranges in the Modem Comms Screen</i>	4-34
Figure 4-47	<i>Modem Comms Logging Options Window</i>	4-35
Figure 4-48	<i>Release/Range Screen</i>	4-37
Figure 4-49	<i>Benthos FSK Pop-Up</i>	4-37
Figure 4-50	<i>EdgeTech/EG&G Pop-Up</i>	4-37
Figure 4-51	<i>University of Rhode Island Pop-Up</i>	4-38
Figure 4-52	<i>GeoPro Pop-Up</i>	4-38
Figure 4-53	<i>Transpond Parameters Pop-Up</i>	4-38
Figure 4-54	<i>Advanced Transponder Parameters Pop-Up</i>	4-39

Figure 4-55	<i>Per-Channel Receive Sensitivity Adjustment Pop-Up</i>	4-40
Figure 4-56	<i>Receive Sensitivity Settings Graphically Displayed</i>	4-41
Figure 4-57	<i>Transpond Data Screen for a UDB-9400M</i>	4-41
Figure 4-58	<i>Transponder Filter Editing Pop-Up</i>	4-42
Figure 4-59	<i>Transponder Filter Editing Pop-Up—Blocked Frequencies</i>	4-42
Figure 4-60	<i>Transpond Data Screen—Displayed Ranges</i>	4-43
Figure 4-61	<i>Transpond Data Screen—Transpond Options Pop-Up Closed</i>	4-43
Figure 4-62	<i>Transpond Data Screen for UDB-9400E</i>	4-44
Figure 4-63	<i>Transpond Data Screen for UDB-9400E—Displayed Ranges</i>	4-44
Figure 4-64	<i>Transpond Data Screen for UDB-9400E—Transpond Options Pop-Up Closed</i>	4-45
Figure 4-65	<i>Release/Range Screen—Benthos FSK Selected</i>	4-46
Figure 4-66	<i>Benthos FSK Pop-Up</i>	4-46
Figure 4-67	<i>Command Code Keypad</i>	4-47
Figure 4-68	<i>Duration Keypad</i>	4-47
Figure 4-69	<i>Release/Range Screen—EdgeTech/EG&G Selected</i>	4-48
Figure 4-70	<i>EdgeTech/EG&G Pop-Up</i>	4-49
Figure 4-71	<i>Release/Range Screen—University of Rhode Island Selected</i>	4-50
Figure 4-72	<i>University of Rhode Island Pop-Up</i>	4-50
Figure 4-73	<i>Release/Range Screen—GeoPro Selected</i>	4-51
Figure 4-74	<i>GeoPro Pop-Up</i>	4-52
Figure 4-75	<i>Command Type Menu</i>	4-52
Figure 4-76	<i>Unit Address Keypad</i>	4-52
Figure 6-1	<i>Removing the Front Panel Screws</i>	6-2
Figure 6-2	<i>Lifting the Edge of the Front Panel</i>	6-3
Figure 6-3	<i>Lifting the Front Panel and Electronics Chassis Out of the Case</i>	6-3

Figure 6-4	<i>Loosening the Battery Bracket Screws</i>	6-4
Figure 6-5	<i>Removing the Battery Bracket Screws</i>	6-4
Figure 6-6	<i>Disconnecting the Battery</i>	6-5
Figure 6-7	<i>Case Gasket</i>	6-5
Figure 6-8	<i>Lowering the Electronics Chassis into the Case</i>	6-6
Figure 6-9	<i>Display Screen</i>	6-7
Figure 6-10	<i>Confirm Screen Calibration Pop-Up</i>	6-7
Figure 6-11	<i>Qlarity Download Utility Dialog Box</i>	6-8
Figure 6-12	<i>Qlarity Download Utility Dialog Box—Boot Loader Entered</i>	6-9
Figure 6-13	<i>Opening Screen</i>	6-10
Figure 6-14	<i>Display Screen</i>	6-11
Figure 6-15	<i>Firmware Update Screen</i>	6-11
Figure 6-16	<i>Update Display Firmware Pop-Up</i>	6-11
Figure 8-1	<i>UDB-9400 Universal Deck Box Part Number Designator Legend</i>	8-2

List of Tables

Table 3-1 PWR Connector Pinouts 3-7

Table 3-2 XDCR Connector Pinouts 3-7

Table 3-3 HMTI-9000 TRANSDUCER Connector Pinouts 3-8

Table 3-4 HMTI-9000 INPUT Connector Pinouts 3-8

Table 3-5 COM2 Connector Pinouts 3-9

Table 3-6 AUX Connector Pinouts 3-9

Table 3-7 COM1 Connector Pinouts 3-10

*Table 4-1 Compact Modem Firmware Versions Versus Slow and
Fast Wakeup Schemes 4-16*

Table 4-2 PSNR Value and Required Action 4-31

Table 5-1 DS-7000 Read Commands 5-3

Table 5-2 DS-7000 Write Commands 5-5

1 Overview

The Teledyne Benthos UDB-9400 Universal Deck Box is an all-purpose deck box that operates with any of the Teledyne Benthos acoustic transponders, releases and acoustic telemetry modems. The UDB-9400 is available in both a portable and a rack mount configuration as shown in Figure 1-1.

The deck box combines all of the features of the following existing Teledyne Benthos deck boxes already in service into one easy to operate unit:

DS-8750 Acoustic Deck Set. A deck box that can send FSK commands, including release commands, to the Teledyne Benthos 875-A Shallow Water Release and the 875-PUB Pop Up Buoy.

DS-8000 Acoustic Deck Set. A single channel deck box that can send FSK commands, including release commands, and receive replies from the Teledyne Benthos 865-A Deep Sea Transponding Release, the 866-A Continental Shelf Transponding Release and the 867-A Shallow Water Transponding Release. The DS-8000 can also send release commands to the Teledyne Benthos 875-A Shallow Water Release and

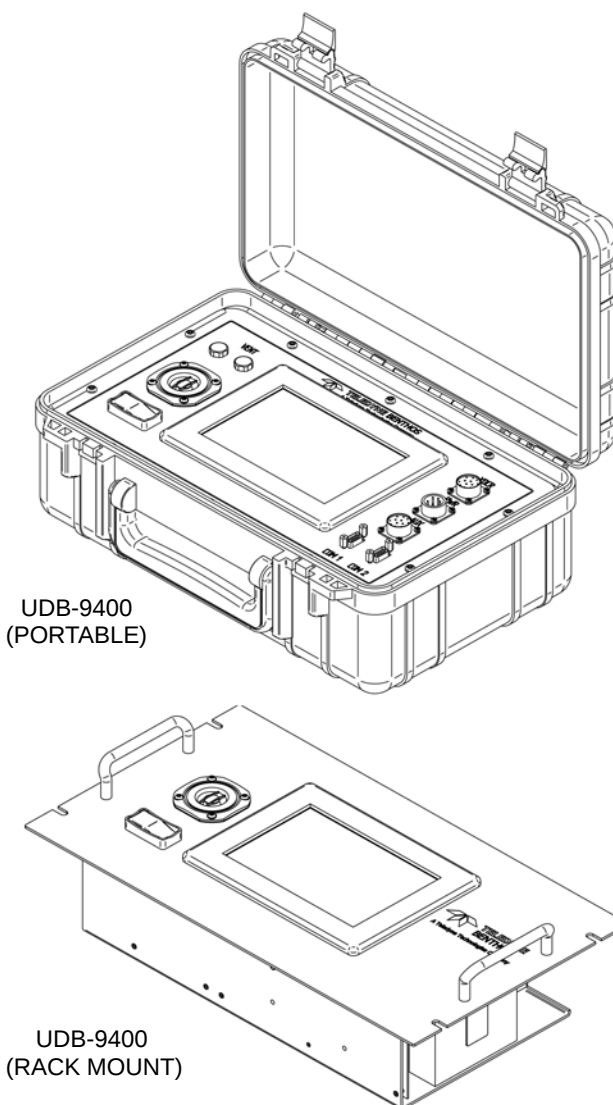


Figure 1-1 The UDB-9400 Universal Deck Box—Portable and Rack Mount Configurations

receive replies from the Teledyne Benthos 6000/6001 Series Transponders.

DS-7000 Acoustic Deck Set. A multichannel deck box that can send FSK commands to any of the Teledyne Benthos transponders and releases, and in addition, receive up to 16 replies simultaneously.

ATM-891 Deck Box. A deck box that can send and receive data from the Teledyne Benthos ATM-88X and ATM-89X Series Acoustic Telemetry Modems, the Compact Modems and the Smart Modem Acoustic Release Technology (SMART) releases. The SMART Releases combine a transponding release with an acoustic telemetry modem and include the SM-75 SMART Modem and the SR-50 and SR-100 SMART Releases.

General Description

The UDB-9400 can send commands and acquire and display ranges to and status from any of the Teledyne Benthos acoustic transponders, releases, acoustic telemetry modems, and 875-T Series Shallow Water Acoustic Releases, which are referred to as Compact Releases in this manual, plus transponders and releases provided by EdgeTech/EG&G, the University of Rhode Island (URI) and GeoPro. The UDB-9400 can also transmit data to and receive data from any of the acoustic telemetry modems and send the wakeup signal to wake up Compact Modems and Compact Releases.

Deck Box Types and Configurations

Three types of the UDB-9400 Universal Deck Box are available, each in both portable and rack mount configurations.

UDB-9400M Universal Deck Box. A multi-receive deck box that can receive any frequency simultaneously in 250-Hz increments within its specific frequency band. This feature enables operation in a long baseline (LBL) acoustic positioning system.

UDB-9400E Universal Deck Box. A deck box that has the same features as the UDB-9400M Universal Deck Box but can receive only one selectable frequency at a time in 250-Hz increments within its specific frequency band. This single receive capability precludes its use in a LBL system, and therefore results in a less restrictive export classification.

UDB-9400A Universal Deck Box. A deck box that has the same features as the UDB-9400E Universal Deck Box but with the acoustic telemetry function disabled. Therefore the UDB-9400A can only be used to send and receive acoustic commands. This configuration results in the least restrictive export classification. Refer to the UDB-9400A User's manual for more information.

Each deck box type is available in both a portable and a rack mount configuration. The portable deck box is contained in an impact resistant case with a splashproof front panel. The front panel includes a touch screen display, operator controls, connectors for making all the external connections, a speaker, and two vent plugs. This manual is also included behind the foam cushioning inside the case cover. The rack mount configuration mounts to a standard 19-inch rack using standard 19-inch rack front panel mounting hardware. The 6U high front panel requires 10.5 in. (26.7 cm) of height in the rack, and a minimum of 10 in. (25.4 cm) of depth is required for electronics and cabling. The front panel includes a touch screen display, operator controls and a speaker. All the connections to the deck box are made using connectors that are located on the rear panel. The rack mount configuration is designated by adding an "R" to the end of the deck box part number.

The UDB-9400 includes the following components:

- ***UDB-9400M or UDB-9400E (portable) Universal Deck Box***
or
- ***UDB-9400M-xxx-R or UDB-9400E-xxx-R (rack mount) Universal Deck Box***
- ***HMTI-9000 Hull Mounted Transducer Interface (included with UDB-9400M-xxx-R only)***
- ***Transducer***
- ***Transducer cable***
- ***Accessories case***
- ***AC power cable***
- ***AUX cable (optional)***
- ***Manual***

Operating Frequency Bands

The UDB-9400 Universal Deck Boxes are configured to operate in the wide low frequency 7–16 kHz (WLF), medium frequency 16–21 kHz (MF) or 22–27 kHz (Band C) band.



NOTE Refer to Section 8, "Part Number Designator," to determine the operating frequency band of the deck box based on its model number.

HMTI-9000 Hull Mounted Transducer Interface

The rack mount configuration of the deck box also includes the HMTI-9000 Hull Mounted Transducer Interface which comprises an interface box and a 3-meter long interface cable. These items are shown in Figure 1-2. The transducer interface enables the connection of a user supplied transducer, such as a hull mounted transducer, to the deck box without any special deck box setup requirements. It includes 3000 VDC input/output isolation and a 30-dB amplifier to ensure safe and reliable signal transmission and reception. The interface cable is used to connect the interface box to the deck box when they are close to each other. However, one of the available transducer cables described below can be used for installations where they are far apart.

Transducer

The UDB-9400 includes one of three available transducers:

- | | |
|------------------|--|
| LF/Release Band: | Low frequency transducer that operates in the 7–16 kHz frequency band. Standard with a UDB-9400. |
| MF: | Medium frequency transducer that operates in the 16–21 kHz frequency band. |
| Band C: | Medium-high frequency transducer that operates in the 22–27 kHz frequency band. |

Transducer Cable

The transducer cable is available in any of five different lengths: 25 m (82 ft), 50 m (164 ft), 75 m (246 ft), 100 m (328 ft), and 200 m (656 ft). Any of these cables can also be used in place of the 3-meter interface cable provided with the HMTI-9000 Hull Mounted Transducer Interface.

AUX Cable

The AUX cable is optional. This cable enables the connection of headphones, external DC power and a transmit sync output.

Accessories Case

The accessories case contains the transducer, the transducer cable, the AC power cable, and the optional AUX cable. This manual is also included in the case for the rack mount configuration of the deck box only.



Figure 1-2 The HMTI-9000 Hull Mounted Transducer Interface Box and Interface Cable

Operation

A touch screen display on the front panel of the deck box enables local control of all the deck box functions and the display of status and data. The deck box can also be operated remotely from as many as two computers.

Power Requirements

The UDB-9400 is powered externally from 85–264 VAC, 47–63 Hz at 50 watts typical. The portable configuration of the deck box can also be powered from its two internal rechargeable batteries. Optionally, external 10–30 VDC power can be used to power both the portable and rack mount configurations.

A minimum 12 VDC is required to charge the batteries. Conversion to internal power is automatic when external power is removed, and the batteries recharge automatically when external power is connected. In addition, the deck box can be operated while the batteries are being charged.

External Connections

The UDB-9400 provides for the connection of external components, which include the transducer, headphones and one or two PCs. Connections for additional inputs and outputs are also provided, where one output functions as a transmit sync for triggering an external transmitter. The inputs and the other outputs are available for future expansion. The PC connections allow commands and data to be sent and received.



WARNING Do not operate the UDB-9400 to range or send commands without a transducer connected as the deck box could be damaged.

Operator Functions

All of the UDB-9400 operator functions are provided on the front panel in both the portable and rack mount configurations.

Operator Functions—Portable Configuration

The operator functions for the portable configuration of the UDB-9400 are shown in Figure 1-3. They include the following:

OFF/ON switch:	Rocker switch—turns the UDB-9400 on or off.
Touch screen display:	Displays data and enables operator input and control; includes a built-in speaker that provides audio outputs, including a beep when a touch screen display control is touched or an error occurs.
Speaker:	Provides an audio verification of transmitted and received data, pings and replies.
Vent ports:	Allow pressure relief from battery outgassing during charging without ingressing water.

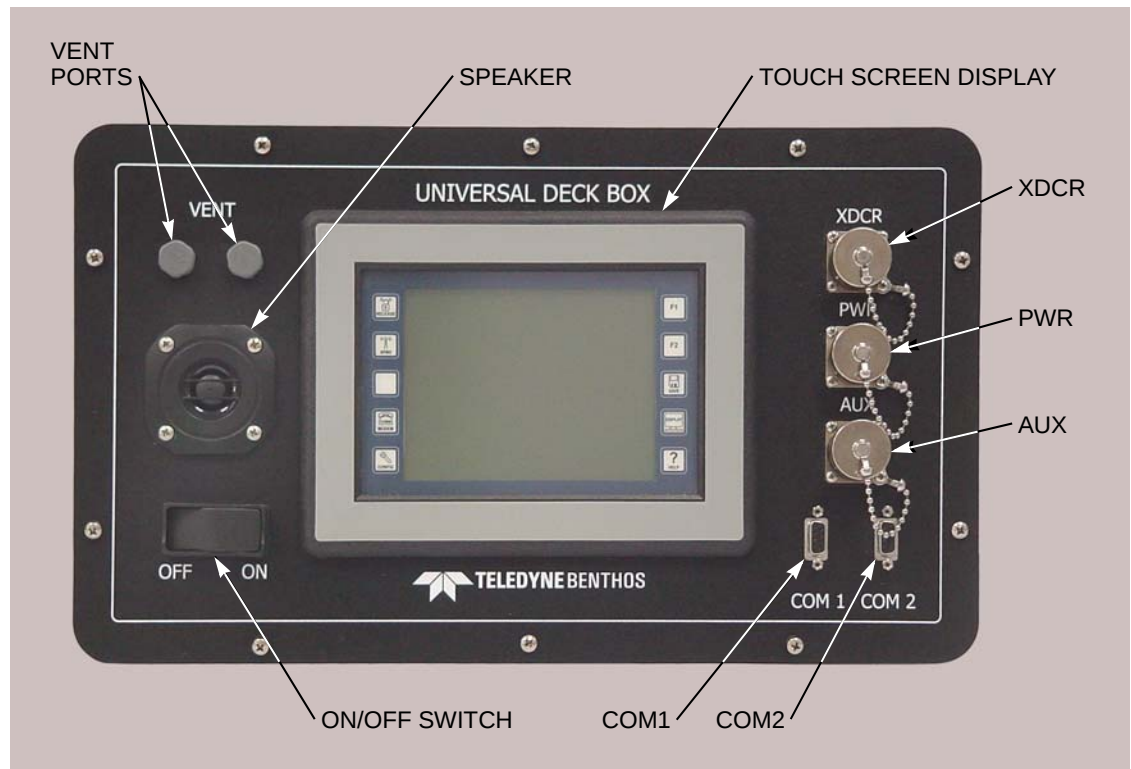


Figure 1-3 UDB-9400 Operator Functions and Connections—Portable Configuration

Operator Functions—Rack Mount Configuration

The operator functions for the portable configuration of the UDB-9400 are shown in Figure 1-4. They include the following:

- OFF/ON switch:** Rocker switch—turns the UDB-9400 on or off.
- Touch screen display:** Displays data and enables operator input and control; includes a built-in speaker that provides audio outputs, including a beep when a touch screen display control is touched or an error occurs.
- Speaker:** Provides an audio verification of transmitted and received data, pings and replies.

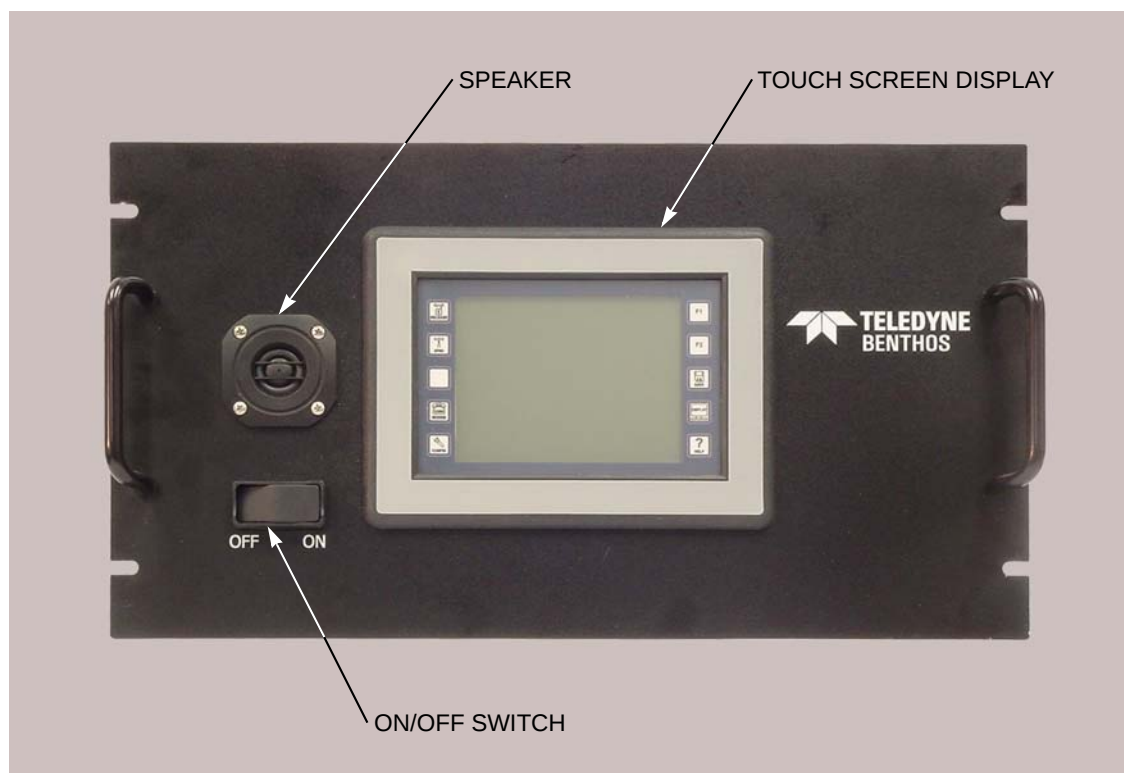


Figure 1-4 UDB-9400 Operator Functions—Rack Mount Configuration

Connections

All of the connections to the UDB-9400 are made on the front panel of the portable configuration and the rear panel of the rack mount configuration. The connections to the HTMI-9400 are made on the left and right panels.

Connections—Portable Configuration

The connections to the portable configuration of the UDB-9400 are shown in Figure 1-3 on page 1-7. They are the following:

PWR:	5-pin bulkhead connector—connects to the AC power source.
XDCR:	12-pin bulkhead connector—connects to the transducer.
AUX:	15-pin bulkhead connector—available for connection to headphones and to external 10–30 VDC power (optional). Also provides spare outputs and inputs and a transmit sync output.
COM1:	DB-9S connector—female serial port connector that connects to a PC and is used for sending and receiving acoustic telemetry modem commands and data.
COM2:	DB-9S connector—female serial port connector that connects to a PC and is used for inputting commands and outputting round trip travel times and status information in a manner that emulates the DS-7000 Acoustic Deck Set.

Connections—Rack Mount Configuration

The connections to the rack mount configuration of the UDB-9400 are shown in Figure 1-5. They are the following:

PWR:	5-pin bulkhead connector—connects to the AC power source.
XDCR:	12-pin bulkhead connector—connects to the transducer.

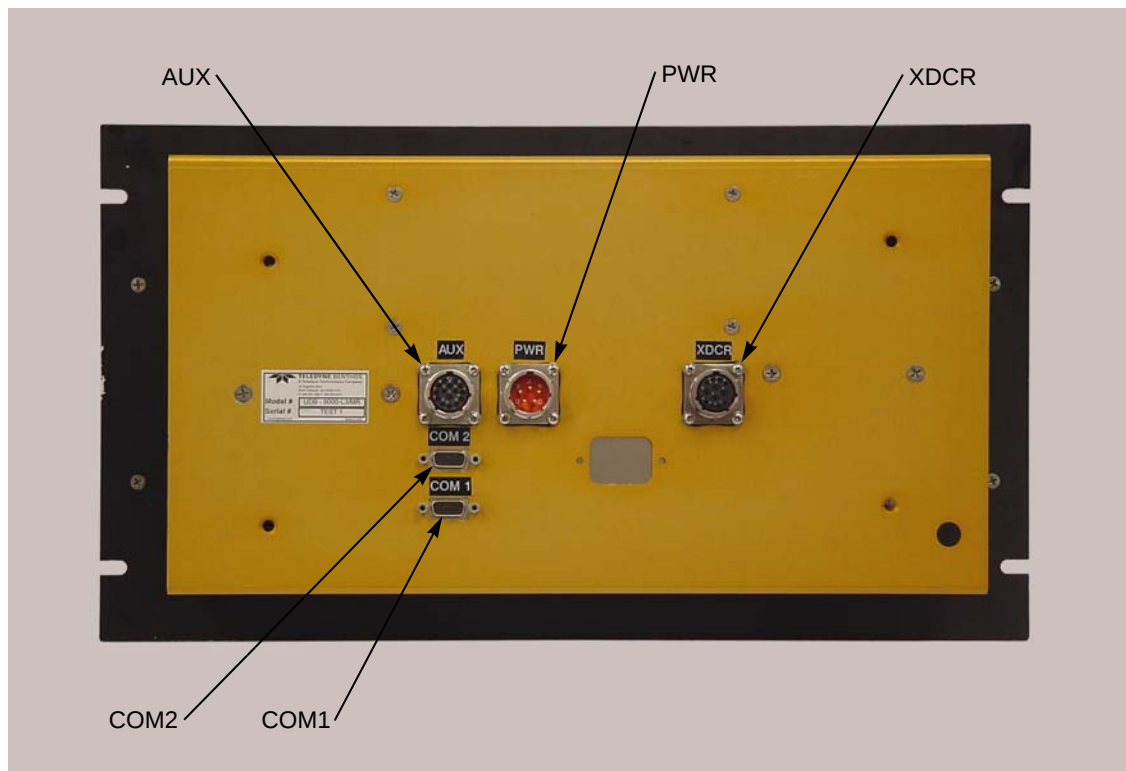


Figure 1-5 UDB-9400 Rear Panel Connections—Rack Mount Configuration

- AUX:** 15-pin bulkhead connector—available for connection to headphones and to external 10–30 VDC power (optional). Also provides spare outputs and inputs and a transmit sync output.
- COM1:** DB-9S connector—female serial port connector that connects to a PC and is used for sending and receiving acoustic telemetry modem commands and data.
- COM2:** DB-9S connector—female serial port connector that connects to a PC and is used for inputting commands and outputting round trip travel times and status information in a manner that emulates the DS-7000 Acoustic Deck Set.

Hull Mounted Transducer Interface Connections

The connections to the HMTI-9000 are shown in Figure 1-2 on page 1-5. They are the following:

INPUT:	3-pin bulkhead connector—located on the HMTI-9000. Connects to the deck box.
TRANSDUCER:	BNC connector—located on the HMTI-9000. Connects to a user supplied transducer.

2 Specifications

This section provides specifications for the UDB-9400 Universal Deck Box. All specifications are subject to change without notification.

General

Serial interface: RS-232/422 (COM1)
RS-232 (COM2)

Acoustic Telemetry Modem

Frequency band: 8.96–14.08 kHz (LF), 16.00–21.12 kHz (MF)
or 22.56–27.68 kHz (Band C)

Data modulation: PSK and MFSK

Bit rate: 2560–15,360 bits/sec (PSK transmit and receive); 140–2400 bits/sec (MFSK transmit and receive)

Addressable modems: 250 (for firmware Version 1.9.9 and later)

Processing features: Data redundancy
1/2 rate convolutional coding
Multipath guard period

Transponder

Frequency band: 7–16 kHz (LF), in 250-Hz steps

Receive frequencies: Multi-receive all frequencies across band

FSK commands: A–M

Transmit pulse width: 5.0–15.0 ms, user selectable

Receive pulse width: 5.0–15.0 ms, user selectable

Turn around time: 0.0–99.9 ms, user selectable

Timeout: 2.0–99.5 s, user selectable

Ping lockout: 0.0–995.0 ms, user selectable

Environmental

Temperature, operating:	-10°C–60°C (14–140°F)
Temperature, nonoperating:	-20°C–70°C (-4–158°F)
Relative humidity, operating:	10–60% noncondensing
Relative humidity, nonoperating:	100% for 72 hours w/temperature caused condensation; dry for operation
Shock, operating:	3 G for 11, ±1 ms in all 3 axis
Shock, nonoperating:	3 G for 11, ±1 ms in all 3 axis
Vibration, operating:	4–15 Hz @ 0.030, ±0.006 in. single amplitude
Vibration, nonoperating:	4–15 Hz @ 0.030, ±0.006 in. single amplitude

Physical Characteristics

Portable Configuration Physical Characteristics

Case construction:	ABS, injected molded
Case type:	Splashproof with cover open; waterproof to 1 m of water depth with cover closed and latched
Dimensions:	44.4 cm (17.5 in.) wide by 29.8 cm (11.75 in.) deep by 17.8 cm (7.0 in.) high
Weight:	10.9 kg (24) lb; comprises deck box (Case 1) 10.9 kg (24) lb; comprises transducer, 25-m transducer cable and AC power cable (Case 2)

Rack Mount Configuration Physical Characteristics

Case construction:	Aluminum, clear anodized and painted
Case type:	19-inch rack mount
Dimensions:	26.7 cm (10.5 in.) high by 48.3 cm (19.0 in.) wide by 11.9 cm (4.7 in.) deep
Weight:	5.5 kg (12 lb)

HMTI-9000 Physical Characteristics

Case construction:	Fiberglass, light gray
Case type:	Junction box
Dimensions:	23.9 cm (9.4 in.) long by 19.1 cm (7.5 in.) wide by 11.9 cm (4.7 in.) high
Weight:	1.8 kg (4 lb)

Power Requirements

Portable Configuration Power Requirements

AC input power:	85–264 VAC, 47–63 Hz, 50 watts typical
DC input power:	10–30 VDC; minimum 12 VDC required to charge the batteries
Batteries:	2 internal SLA (sealed lead acid) rechargeable 12 V, 5 A·h batteries
AC power cable length:	1.8 m (6 ft)
AUX cable length:	0.9 m (3 ft); cable is optional

Rack Mount Configuration Power Requirements

AC input power:	85–264 VAC, 47–63 Hz, 50 watts typical
DC input power (optional):	10–30 VDC
Batteries:	Not available
AC power cable length:	1.8 m (6 ft)
AUX cable length:	0.9 m (3 ft); cable is optional

Input/Output

Operator functions:	Power switch Touch screen display
Displays and indicators:	Touch screen display Speaker
External connections:	Power Transducer Auxiliary COM1 serial port COM2 serial port

Transducer

The available transducers are release band (LF), medium frequency (MF), and Band C.

LF/Release Band Transducer

Transducer cable length:	25 m (82 ft) standard; 50 m (164 ft), 75 m (246 ft), 100 m (328 ft), or 200 m (656 ft) optional
Frequency band:	7–16 kHz
Source level:	185 (±6 dB) dB re 1 μ Pa @ 1m, typical

Preamp gain:	30 dB
Radiation pattern:	Toroidal $\pm 40^\circ$ @ 12 kHz typical
Housing construction:	Delrin
Guard construction:	316 stainless steel
Dimensions:	14.0 cm (5.5 in.) max diameter by 26.4 cm (10.4 in.) long
Weight in air:	5.0 kg (11.0 lb)
Operating depth:	300 m (984 ft)

Medium Frequency (MF) Transducer

Transducer cable length:	25 m (82 ft) standard; 50 m (164 ft), 75 m (246 ft), 100 m (328 ft), or 200 m (656 ft) optional
Frequency band:	16–21 kHz
Source level:	183 (± 6 dB) dB re 1 μ Pa @ 1m, typical
Preamp gain:	30 dB
Radiation pattern:	Toroidal $\pm 40^\circ$ @ 18 kHz typical
Housing construction:	Delrin
Guard construction:	316 stainless steel
Dimensions:	14.0 cm (5.5 in.) max diameter by 26.4 cm (10.4 in.) long
Weight in air:	5.0 kg (11.0 lb)
Operating depth:	300 m (984 ft)

Band C Transducer

Transducer cable length:	25 m (82 ft) standard; 50 m (164 ft), 75 m (246 ft), 100 m (328 ft), or 200 m (656 ft) optional
Frequency band:	22–27 kHz

Source level:	183 (± 6 dB) dB re 1 μ Pa @ 1m, typical
Preamplifier gain:	30 dB
Radiation pattern:	Toroidal $\pm 40^\circ$ @ 25 kHz typical
Housing construction:	Delrin
Guard construction:	316 stainless steel
Dimensions:	14.0 cm (5.5 in.) max diameter by 26.4 cm (10.4 in.) long
Weight in air:	5.0 kg (11.0 lb)
Operating depth:	300 m (984 ft)

3 Installation and Setup

This section provides instructions on how to unpack and set up the UDB-9400 Universal Deck Box and make the power, the transducer and the optional external connections.

Unpacking and Inspection

The UDB-9400 is carefully packed in one or more sealed boxes, depending on the items ordered. Carefully inspect the boxes for any signs of external damage and immediately report any damage to Teledyne Benthos and to the freight carrier. After inspecting the boxes, locate and remove the packing list. While referring to the packing list, carefully remove the contents of the box, checking the items against the packing list to verify that all the items on the list are included. Inspect the items for any physical damage that might have occurred during shipment. Immediately report any damage to Teledyne Benthos and to the freight carrier.

Setting up the Deck Box—Portable Configuration

The portable configuration of the UDB-9400 is designed for deployment outdoors in open boats in a water spray environment. However, when charging the batteries, the deck box must be indoors and near a 85–264 VAC, 47–63 Hz power source. For the outline dimensions of the deck box, refer to Figure 3-1.

Setting up the Deck Box—Rack Mount Configuration

The rack mount configuration of the UDB-9400 is designed for installation in a 19-inch rack. The rack must be indoors and near a 85–264 VAC, 47–63 Hz power source. To install the deck box, first ensure 6U or 10.5 in. (26.7 cm) of height in the rack is available and there is room behind the rack for connecting the cables. For the outline dimensions of the deck box, refer to Figure 3-2. Then mount the deck box front panel to the rack and secure it using standard 19-inch rack front panel mounting hardware. Leave the back of the rack open for proper air flow.

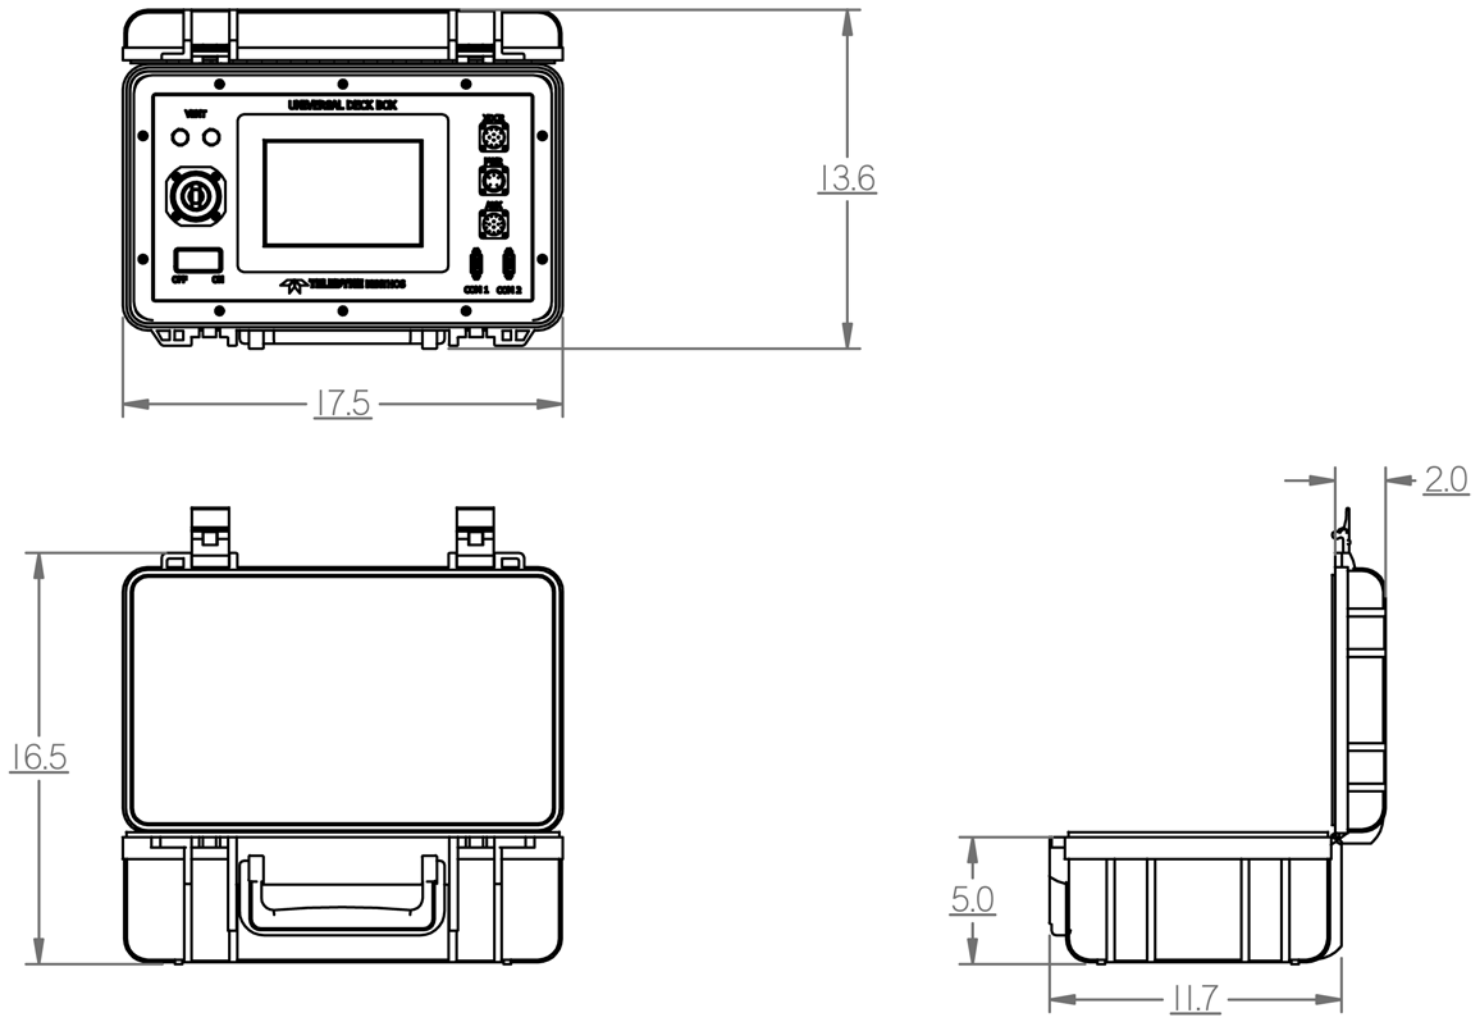


Figure 3-1 UDB-9400 Outline Dimensions—Portable Configuration

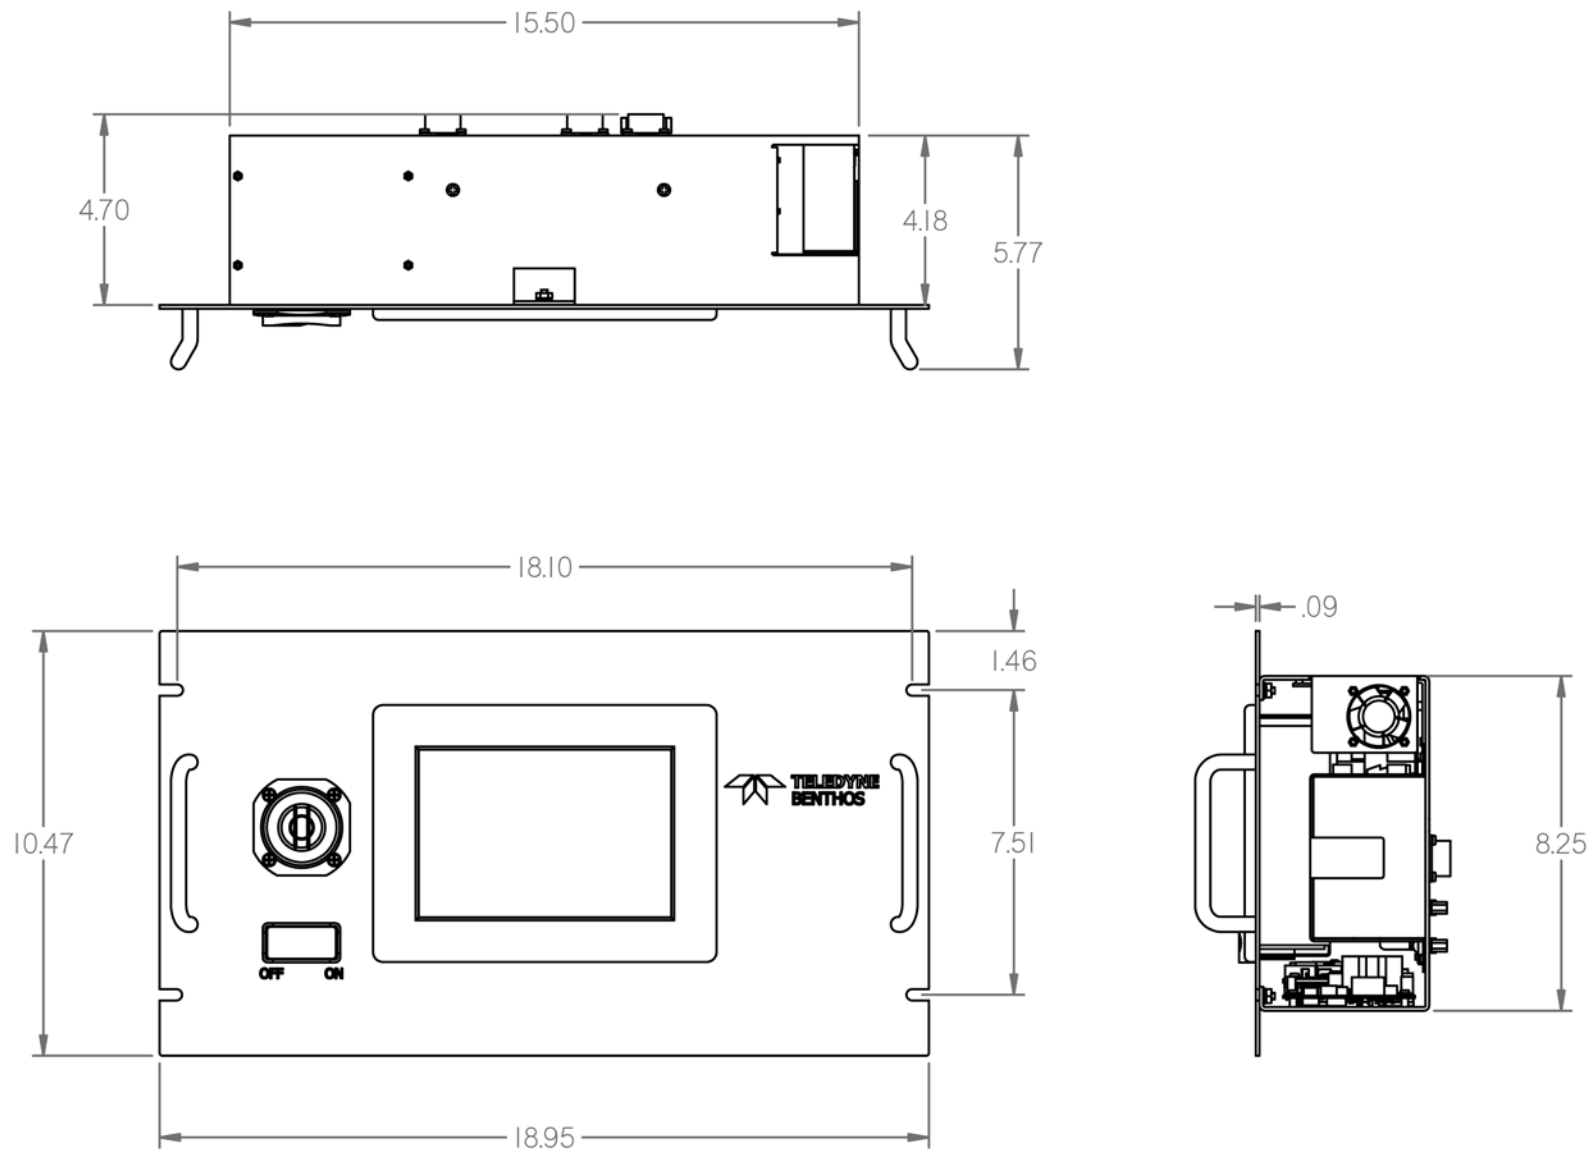


Figure 3-2 UDB-9400 Outline Dimensions—Rack Mount Configuration

The interface box of HMTI-9000 Hull Mounted Transducer Interface included with the rack mount configuration of the UDB-9400 Universal Deck Box should be used if connecting a transducer other than the one supplied with the deck box, such as a hull mounted transducer. There are no special deck box setup requirements for it to connect to the hull mounted transducer using the interface box. To install the HMTI-9000, mount the interface box indoors as close as possible to the transducer. For the outline dimensions and mounting hole dimensions of the interface box, refer to Figure 3-3.

Connecting the Deck Box

The portable configuration of the UDB-9400 requires only a transducer connection. However, to charge the batteries, the deck box must be connected to power. Refer to "Battery Maintenance and Charging" on page 6-2 for some charging recommendations. The rack mount configuration of the UDB-9400 must be connected to power and either directly to the supplied transducer, or if connecting to a user supplied transducer, to the interface box using the supplied interface cable or an existing deck cable. In addition, to send and receive acoustic commands using a PC, a PC can be connected. A PC connection is required to send DS-7000 commands. Headphones and a transmit sync can also be connected. A PC is not supplied. For the location and description of the connectors on the portable configuration of the UDB-9400, refer to Figure 1-3 on page 1-7; for the rack mount configuration, refer to Figure 1-2 on page 1-5 and to Figure 1-5 on page 1-10.



WARNING Do not operate the UDB-9400 to range or send commands without a transducer connected as the deck box could be damaged.

Deploying the Transducer

The transducer is used as a dunking transducer. For the outline dimensions of the transducer, refer to Figure 3-4. The transducer cable is used both to connect to the transducer and to lower it into the water. The weight of the transducer will assist in keeping it vertical when it is in the water. This cable must be strain relieved at the transducer end. Therefore, a Kellums grip is installed on the cable for this purpose. To strain relieve the cable, tie a nylon line from the loop in the Kellums grip to one of the holes in the connector guard. When securing the line, ensure that there is sufficient slack in the section of cable between the Kellums grip and the transducer connection.


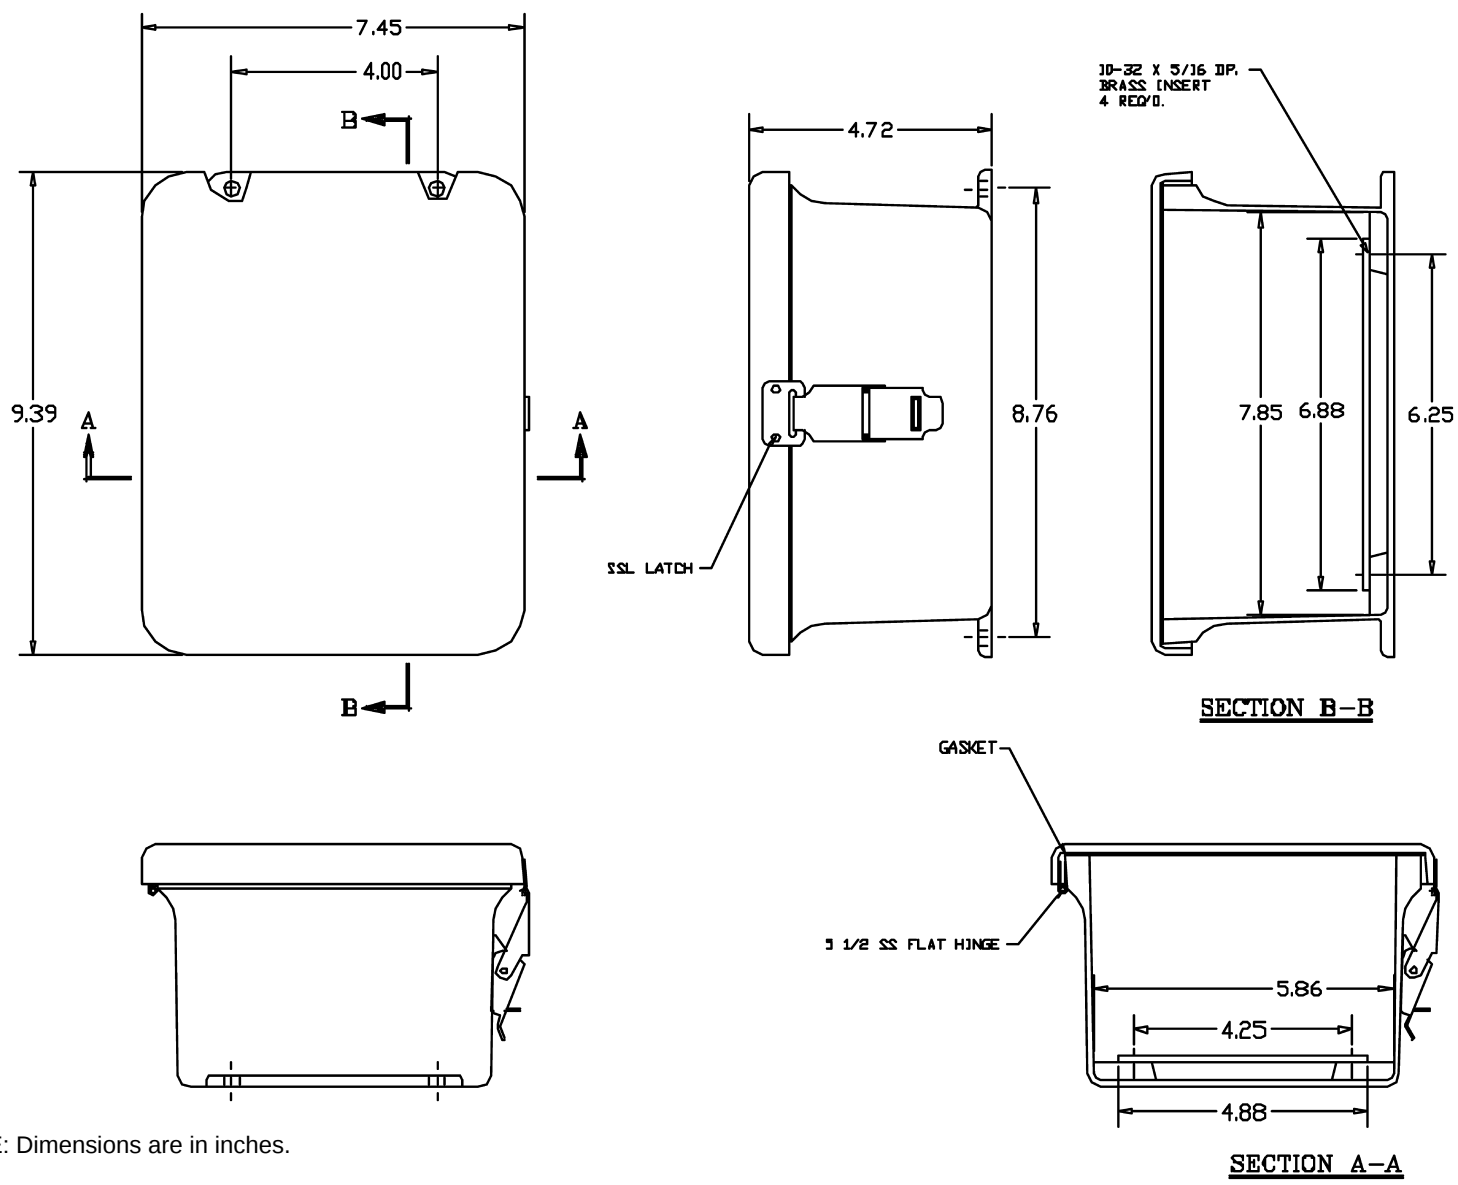


Figure 3-3 HMTI-9000 Hull Mounted Transducer Interface Outline Dimensions

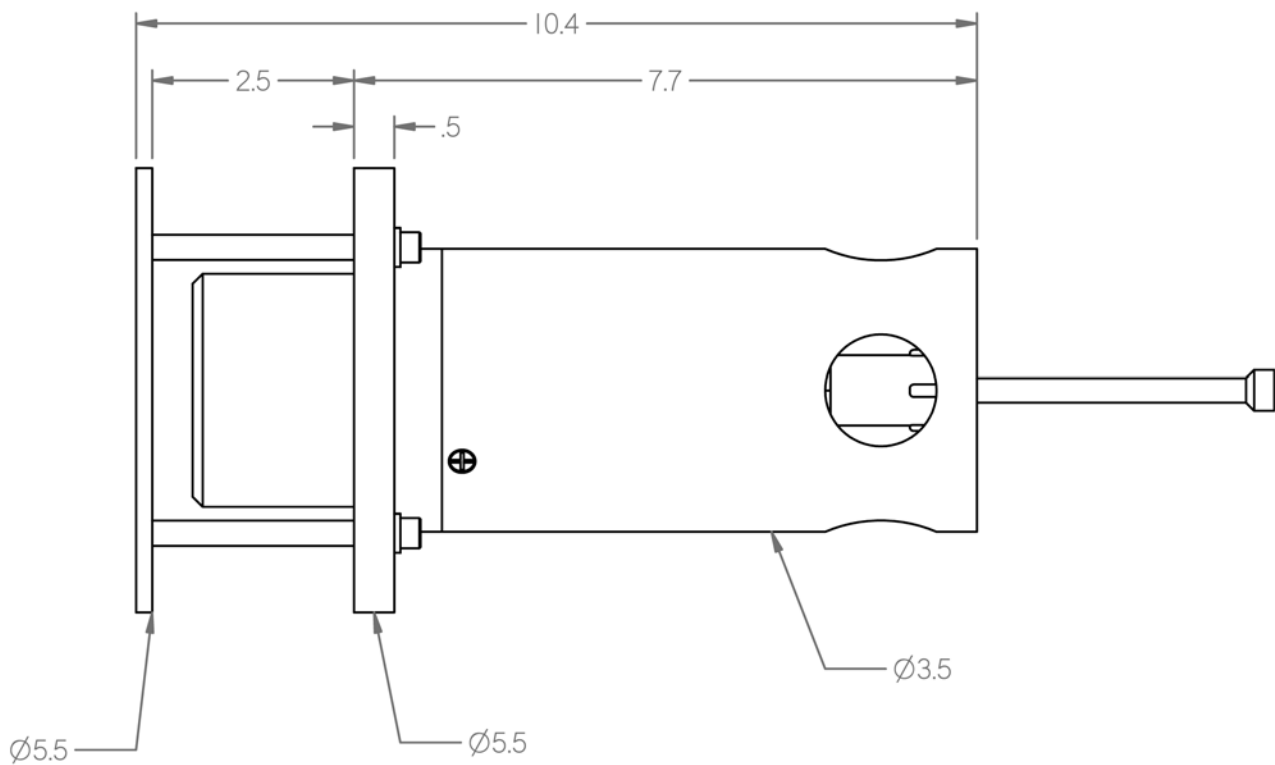

NOTE: Dimensions are in inches.

Figure 3-4 Transducer Outline Dimensions

To connect the deck box:

1. Connect the AC power source to the PWR connector using the AC power cable. For reference, refer to Figure 3-5 for the connector pin orientation, and to Table 3-1 for the pinout information.

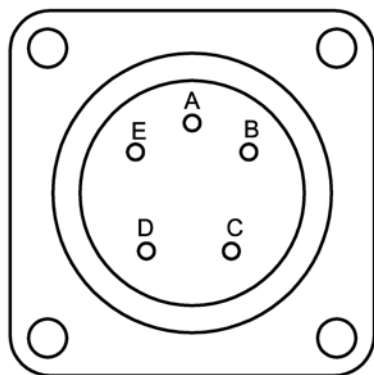


Figure 3-5 PWR Connector

Table 3-1 PWR Connector Pinouts

PIN	DESCRIPTION
A	AC Line
B	AC Neutral
C	AC Ground
D	NC
E	NC

2. If using the supplied transducer, connect the transducer cable to the transducer and to the XDCR connector on the UDB-9400. For reference, refer to Figure 3-6 for the connector pin orientation, and to Table 3-2 for the pinout information.


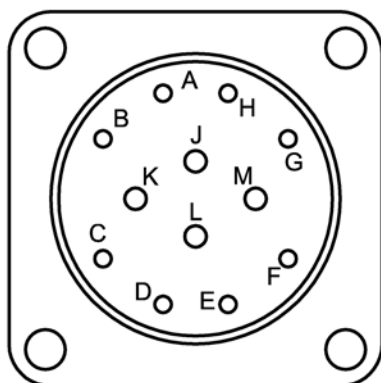


Figure 3-6 XDCR Connector

Table 3-2 XDCR Connector Pinouts

PIN	DESCRIPTION
A	Receive Return
B	Receive
C	Receive Shield Ground
D	-15VDC
E	+15VDC
F	Power Ground
G	Jumper 12V Bus
H	Jumper Remote Power Enable
J	Transducer Shield
K	Transmit
L	Chassis Ground
M	Transmit Return


If using a transducer other than the one supplied, connect the transducer to the TRANSDUCER connector on the interface box of the HTMI-9400 Hull Mounted Transducer Interface. Then connect the supplied interface cable from the INPUT connector on the interface box to the XDCR connector on the UDB-9400. If the interface box is not close enough to the deck box to enable use of this cable, a choice of longer, optionally supplied transducer cables is available as described "Transducer Cable" on page 1-4. For reference, refer to Figure 3-7 for the TRANSDUCER connector pin orientation on the interface box, and to Table 3-3 for the pinout information. Also refer to Figure 3-8 for the INPUT connector pin orientation, and to Table 3-4 for the pinout information.

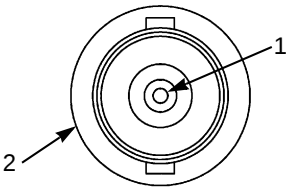

**Figure 3-7 HMTI-9000
TRANSDUCER Connector**

**Table 3-3 HMTI-9000
TRANSDUCER Connector
Pinouts**

PIN	DESCRIPTION
1	Transmit
2	Transmit Return

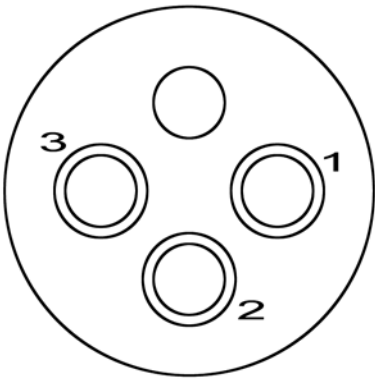

**Figure 3-8 HMTI-9000
INPUT Connector**

**Table 3-4 HMTI-9000 INPUT
Connector Pinouts**

PIN	DESCRIPTION
1	Transducer Shield
2	Transmit Return
3	Transmit

3. If sending DS-7000 commands and receiving round trip travel times and status information, connect the serial port of a PC to the COM2 connector. Refer to Figure 3-9 for the connector pin orientation, and to Table 3-5 for the pinout information.

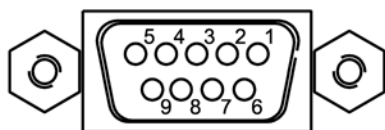


Figure 3-9 COM2 Connector

Table 3-5 COM2 Connector Pinouts

PIN	DESCRIPTION
2	Tx
3	Rx
5	Ground

- If using a headphone set, externally triggering the transmitter or connecting the binary inputs and outputs, make these connections using the AUX connector. An AUX cable is optionally available. Refer to Figure 3-10 for the connector pin orientation, and to Table 3-6 for the pinout information.

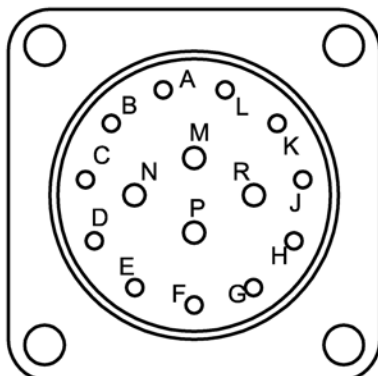


Figure 3-10 AUX Connector

Table 3-6 AUX Connector Pinouts

PIN	DESCRIPTION
A	Open Collector In 0
B	NC
C	Headphone L
D	Headphone R
E	Headphone Shield
F	Output Signal Ground
G	Open Collector Out 1
H	Open Collector Out 0
J	Transmit Sync/Silent Ping Out
K	Input Signal Ground
L	Open Collector In 1
M	10-30VDC Power In (+)
N	10-30VDC Power In (+)
P	10-30VDC Power Return (-)
R	10-30VDC Power Return (-)

5. If sending and receiving acoustic telemetry modem commands and data, connect the serial port of a PC to the COM1 connector. Refer to Figure 3-11 for the connector pin orientation, and to Table 3-7 for the pinout information.

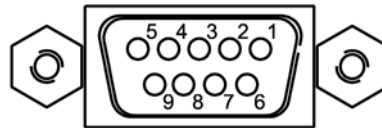


Figure 3-11 COM1 Connector

Table 3-7 COM1 Connector Pinouts

PIN	LABEL	DESCRIPTION	SIGNAL DIRECTION
2	TXD/RX(-)	RS-232 Transmit/RS-422 Receive(-)	Modem to Host/ Host to Modem
3	RXD	RS-232 Receive	Host to Modem
4	TX(+)	RS-422 Transmit(+)	Modem to Host
5	GND	Common Ground	
6	TX(-)	RS-422 Transmit(-)	Modem to Host
7	CTS	Clear to Send	Host to Modem
8	RTS/RX(+)	Request to Send/RS-422 Receive(+)	Modem to Host/ Host to Modem



WARNING When connecting to the RS-422 serial interface, the UDB-9400 display features are disabled and cannot be used. The RS-422 serial interface is available on the COM1 connector only.



WARNING When disconnecting the deck box, do not pack any cables inside the UDB-9400 case, as doing so may damage the touch screen display.

Changing the HMTI-9000 Transformer and Resonator Jumper Positions

The interface box of the HMTI-9000 Hull Mounted Transducer Interface includes a single circuit board on which two jumpers are included for impedance matching with the user supplied transducer. This circuit board is shown in Figure 3-12. The jumper on the left selects the turns ratio of the isolation transformer that connects to the transducer; the jumper on the right selects a resonator value. The jumper positions shown are factory installed. A selection guide for the jumpers is affixed to the inside lid of the box. If the output source level of the transducer is weak, the jumpers can be repositioned to increase the output power. A reference hydrophone is useful for this adjustment.


To change the HMTI-9000 transformer and resonator jumper positions:

1. Move the transformer turns ratio jumper from the 1:1 to the 2:3 position. Refer to the guide for the jumper locations.
2. If there is no improvement in the source level, move the jumper back to the 1:1 position, and then move the resonator value jumper from the 0 mH position to the 4 mH position. Refer to the guide for the jumper locations.

If there still is no improvement, move the jumper to the 8 mH position. Continue incrementing to the next highest jumper position until the source level shows an improvement if any.

3. If there has been no significant increase in the source level, again move the transformer turns ratio jumper from the 1:1 to the 2:3 position, and then move the resonator value jumper back to the 4 mH position. Continue moving the resonator value jumper to the next highest position until there is improvement.

If the blocking capacitance of the transducer known, use the graph in Figure 3-13 to select the resonator value and corresponding jumper position.

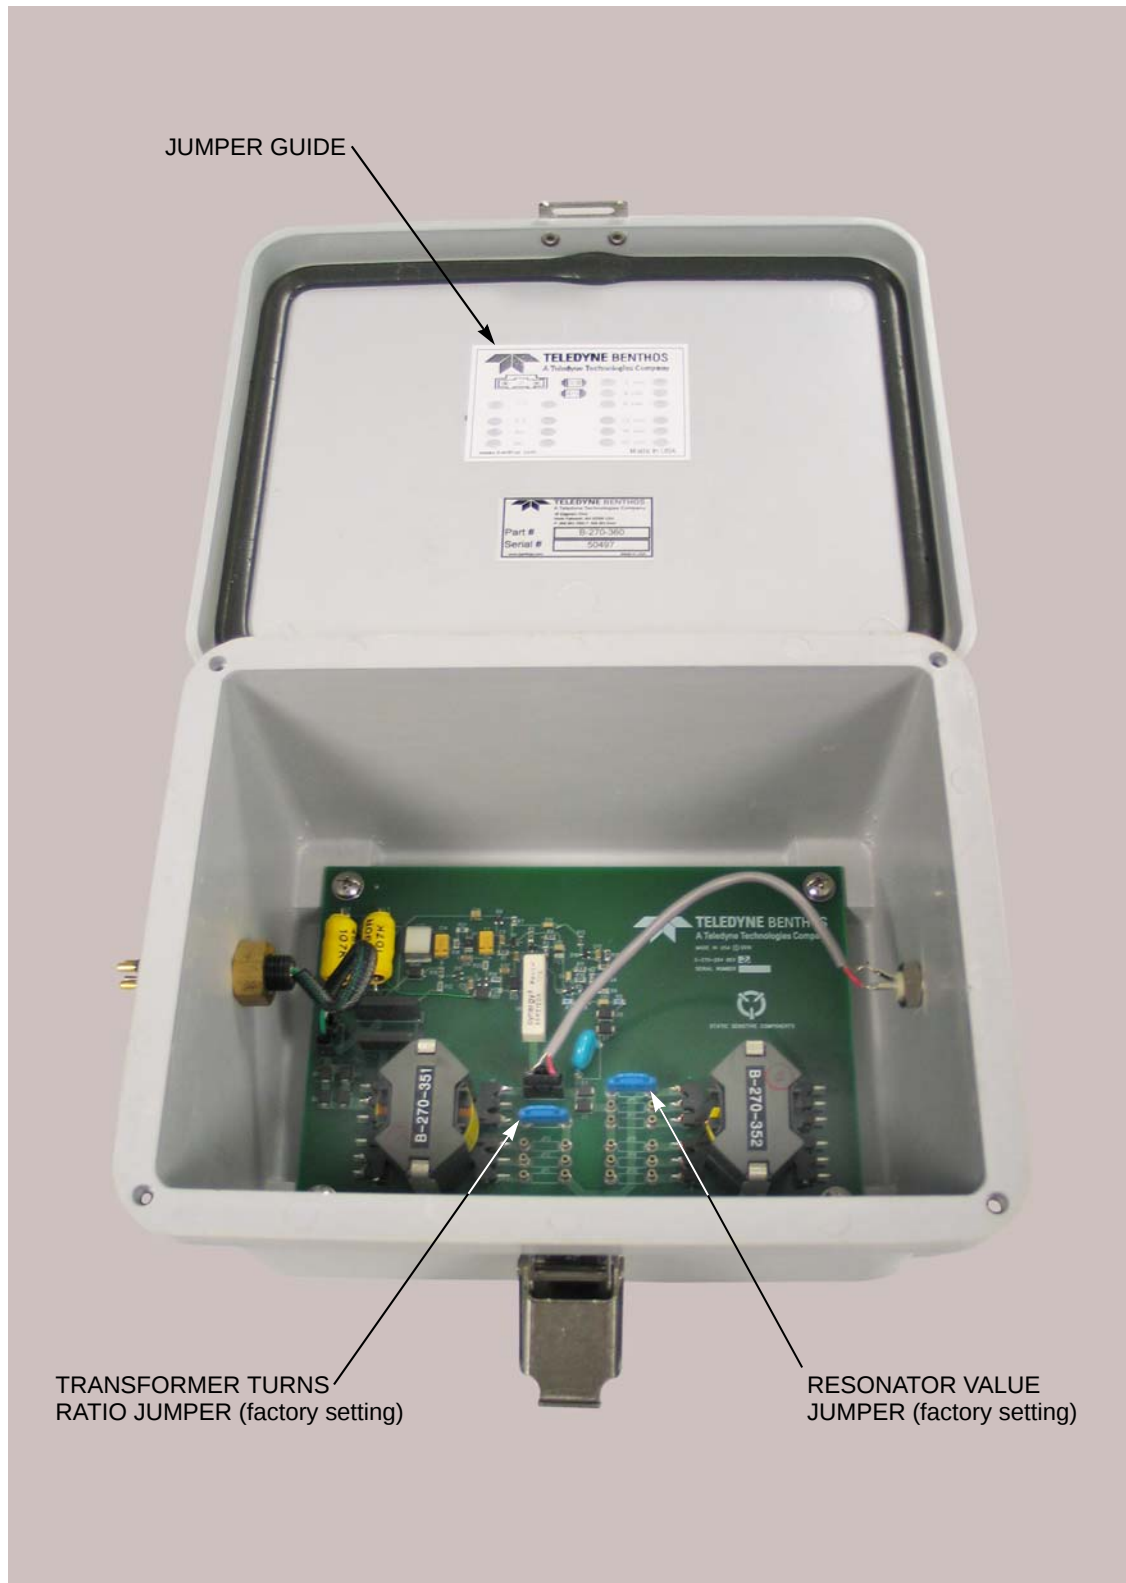

**Figure 3-12 The HTMI-9400 Hull Mounted Transducer Interface Box
Transformer and Resonator Value Jumpers and Guide**

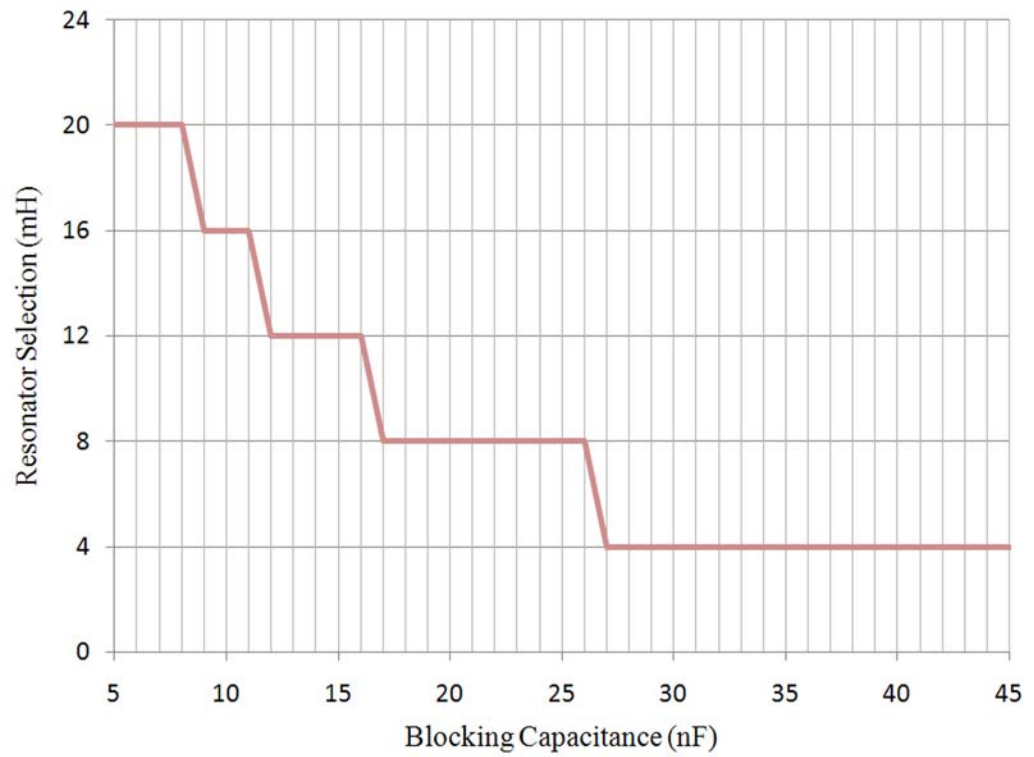


Figure 3-13 Blocking Capacitance Vs. Resonator Value Selection

4 Operation using the Touch Screen Display

This section provides instructions on how to use the touch screen display of the UDB-9400 Universal Deck Box to operate Teledyne Benthos acoustic transponders, releases and acoustic telemetry modems and EdgeTech/EG&G, URI and GeoPRo releases. Operations include acquiring ranges from transponders, releases and acoustic telemetry modems, sending commands to releases and acoustic telemetry modems, and sending data to and receiving data from acoustic telemetry modems. To perform these operations, the deck box must be set up and installed as described in Section 3, "Installation and Setup."

Activating the Touch Screen Display

The touch screen display is activated when the UDB-9400 is turned on. To turn on the deck box, switch the OFF/ON switch to ON. The opening screen will appear in the touch screen display as shown in Figure 4-1 for a 7–16 kHz UDB-9400M. In about five seconds, and if this is the first time the deck box has been turned on, it will open a welcome screen. Otherwise it will open to the screen that was open the last time the Save function button was pressed as described "Save and Help Functions" on page 4-4.

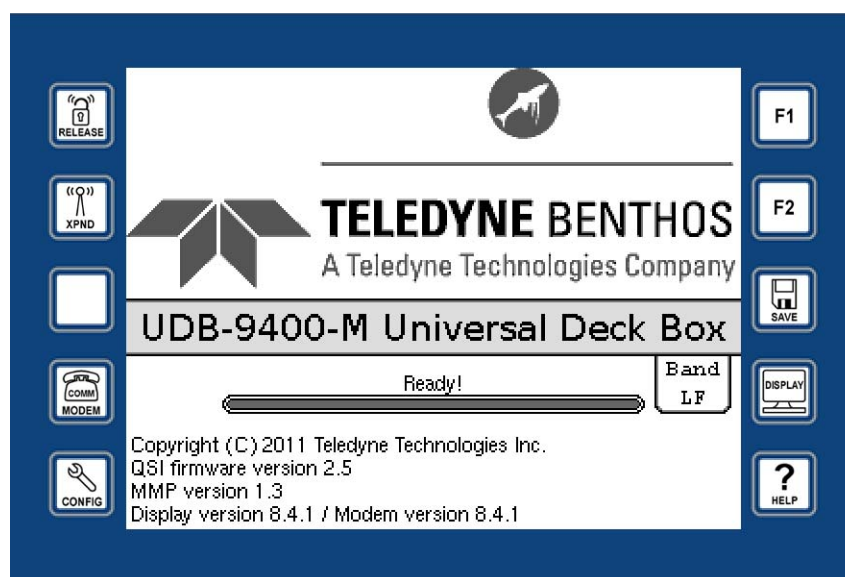


Figure 4-1 Opening Screen for a UDB-9400M Universal Deck Box

Touch Screen Display Overview

The touch screen display includes ten function buttons which provide access to five main screens and to save and help functions. Seven of the buttons are active. The buttons are located along the left and right edges of the touch screen display, five on each side as shown in Figure 4-1. They are always visible, but depending on the operating state of the UDB-9400, they are at times disabled. The touch screen display also includes a Status and Control bar which is shown in Figure 4-5 on page 4-5. It is located at the top of every screen and, like the function buttons, is always visible

Main Screens


Any one of the five main screens can be accessed at most any time by touching its corresponding function button. Altogether the screens provide access to all of the operational features and displays of the UDB-9400. They are shown in Figure 4-2 and are described below.




Release/Range. Opens the Release/Range screen where acoustic release commands can be sent and ranges to transponders and releases can be acquired. This screen also allows the selection of the UDB-9400 transpond parameter settings, which comprises the transmit frequency, the transmit and receive pulse widths, the turn around time, the timeout, and the detect threshold. In addition, from this screen a wakeup signal can be sent to activate the Teledyne Benthos Compact Modems and Compact Releases.




Transpond Data. Opens the Transpond Data screen where the received transponder reply frequencies, ranges and the round trip travel times are displayed for each transmitted ping. From this screen filters can be applied to block the display of ranges for specific reply frequencies, or the ranges for all the received replies can be blocked from being displayed, or no blocking can be applied to display all the ranges. In addition, the display of the range for only the first received reply of a selected receive frequency can be picked. A thumbnail graph that plots each of the received reply frequencies in kilohertz versus the range in kilometers is also provided on this screen, as is access to the same transponder parameter settings as the Release/Range screen.

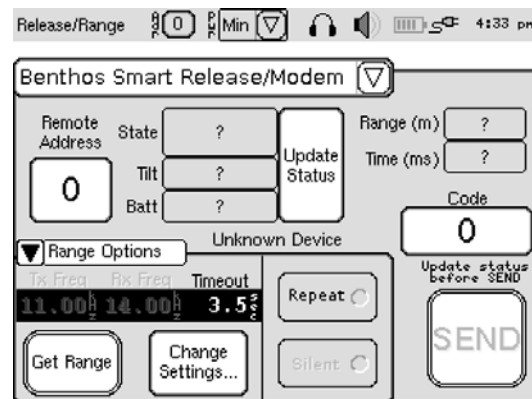


RELEASE/RANGE SCREEN

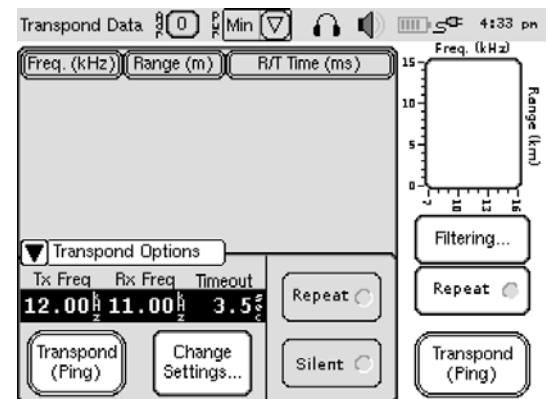


TRANSPOND DATA SCREEN

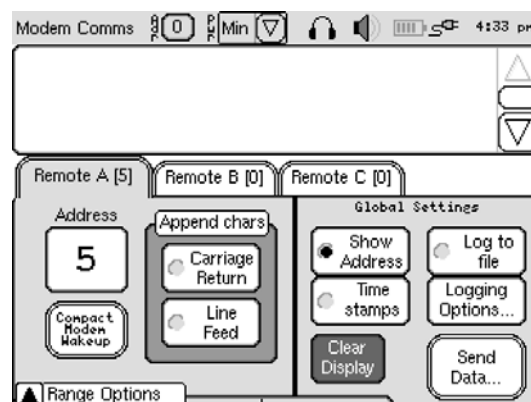

MODEM COMMS SCREEN

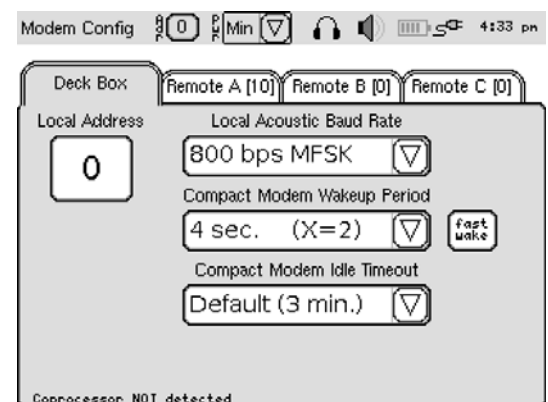

MODEM CONFIG SCREEN

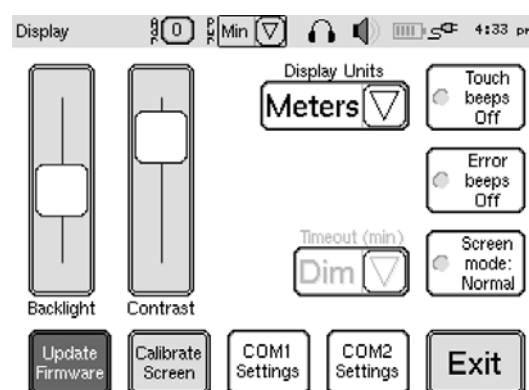

DISPLAY SCREEN

Figure 4-2 UDB-9400 Touch Screen Main Screens



Modem Comms. Opens the Modem Comms screen where many of the functions of the Teledyne Benthos acoustic telemetry modems can be operated, including the wakeup of Teledyne Benthos Compact Modems and Compact Releases.



Modem Config. Opens the Modem Config screen where the settings of the local and remote acoustic telemetry modems can be configured. The local modem is the UDB-9400. The remote modem is any modem that it is configured to communicate with.



Display. Opens the Display screen where display contrast and brightness can be adjusted, the touch and error beeps enabled or disabled, and the COM1 and COM2 serial port settings configured. This screen also allows the updating of the touch screen and the UDB-9400 modem function firmware.

Save and Help Functions

The save and help functions can be accessed at most any time by touching their corresponding function button. These functions are described below.



Save. Saves all of the current configuration settings. When the deck box is turned off and then on again, the configuration settings are unchanged and the screen last opened appears.



Help. Opens the Help screen which provides content sensitive help for many of the operator functions of the UDB-9400. An example of help for the Release/Range screen is shown in Figure 4-3. When the Help screen is active, none of the touch screen controls outside of the Help screen can be operated. To view hidden text, touch and drag the scroll bar up or down.

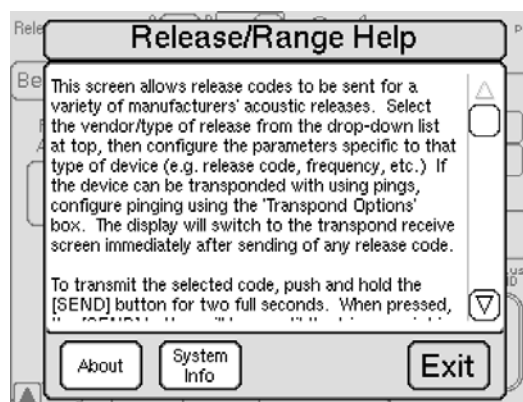


Figure 4-3 Help for the Release/Range Screen

For Teledyne Benthos copyright and contact information, touch About. The About pop-up opens as shown in Figure 4-4. And for system information, touch System Info. The System Info pop-up opens which is also shown in Figure 4-4. To close either of these pop-ups, touch the X mark. To close the Help screen, touch Exit.

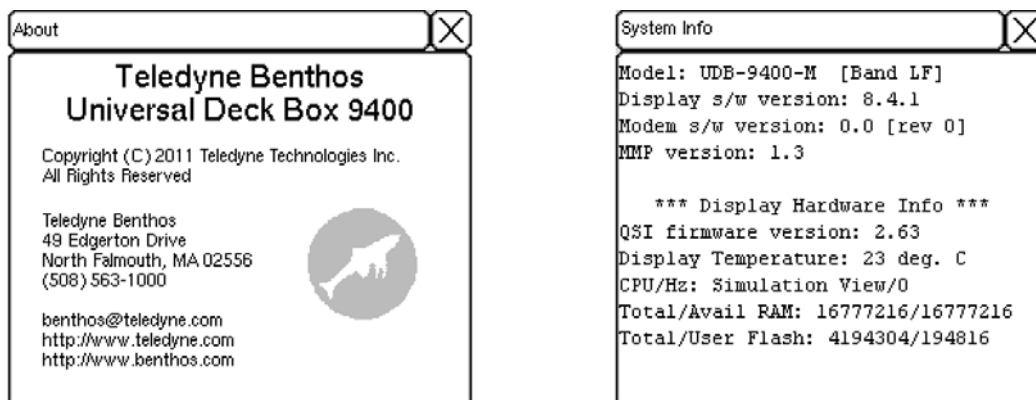


Figure 4-4 About and System Info Pop-ups

Status and Control Bar

The Status and Control bar is shown in Figure 4-5. The Status and Control bar includes controls which are used to set the address of the UDB-9400 modem function, the transmit power, and the time and date. In addition, the headphone and speaker volumes can be adjusted or muted. These controls are sometimes disabled, however, depending on the operating state of the UDB-9400. The Status and Control bar also includes the screen name, a time and date display, and status indicators which indicate the battery level, whether the battery is charging or is fully charged, and whether the deck box is being powered by internal batteries or by external AC or DC power.

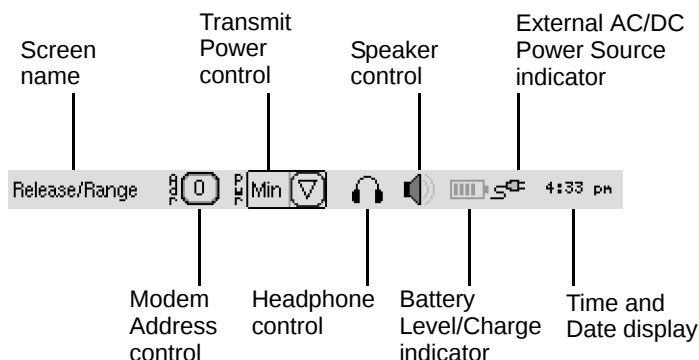


Figure 4-5 Status and Control Bar

General Setup

The general setup of the UDB-9400 involves selecting the modem address and transmit power level, adjusting the headphones and speaker volumes, setting the time and date, adjusting the touch screen display backlight and contrast, configuring the power saver and the serial ports, and selecting the audible beep and units preferences. Altogether these adjustments and selections are made from the Status and Control bar and the Display screen. The Status and Control bar is shown in Figure 4-5 on page 4-5, and the Display screen, in Figure 4-2 on page 4-3.

Selecting the Local Modem Address

The UDB-9400 contains a local modem address. This address can be any address; however, it should be different than any remote modem in the communications network.

To select the local modem address:

1. Touch the Modem Address control on the Status and Control bar, or touch the Modem Config function button.

The Modem Config screen opens to the Deck Box tab as shown in Figure 4-6.

2. Touch the Local Address setting.

The modem address keypad opens as shown in Figure 4-7.

3. Enter the local modem address, two characters maximum, and then touch OK. To backspace and delete a character, touch the Delete pad.
4. Touch Exit to close the Modem Config screen.

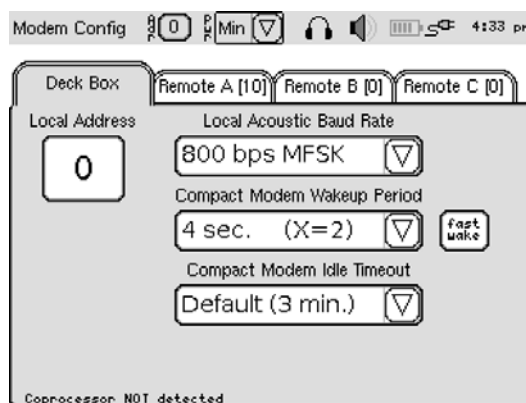


Figure 4-6 Modem Config Screen—Deck Box Tab

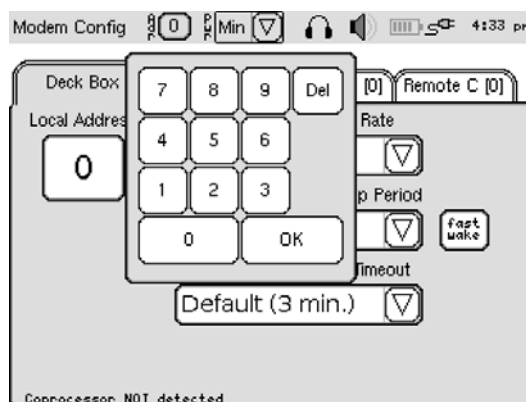


Figure 4-7 Modem Address Keypad

Selecting the Transmit Power Level

The transmit power level of the UDB-9400 can be selected by selecting an attenuation in decibels, or by selecting minimum for the lowest power (maximum attenuation) or maximum for the highest power (no attenuation).

To select the transmit power level:

1. Touch the Transmit Power control on the Status and Control bar.

A drop-down list opens as shown in Figure 4-8.

2. Select the attenuation level from the drop-down list.

The drop-down list closes and the new transmit power level is displayed.

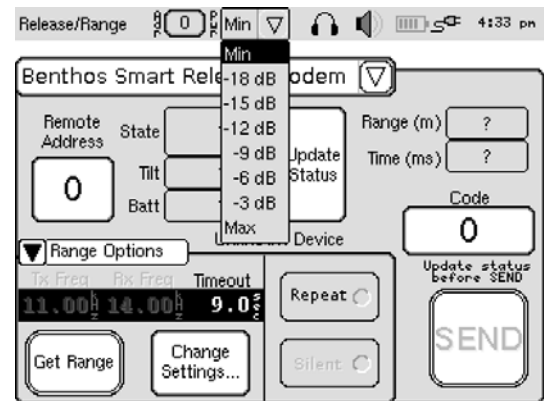


Figure 4-8 Transmit Power Control Drop-Down List

Adjusting the Headphones Volume

The headphone volume can be adjusted or the headphones muted. To mute the headphones, touch the Headphone control. Touch it again to turn the headphones back on. When muted, the Headphone control displays an X across it.

To adjust the headphones volume:

1. Touch and hold the Headphone control on the Status and Control bar.

The Phones Vol pop-up opens as shown in Figure 4-9.

2. Touch and drag the slider up or down to adjust the volume, or touch directly on the slide at the desired location. The headphones can also be muted by touching the Mute check box. When muted, a

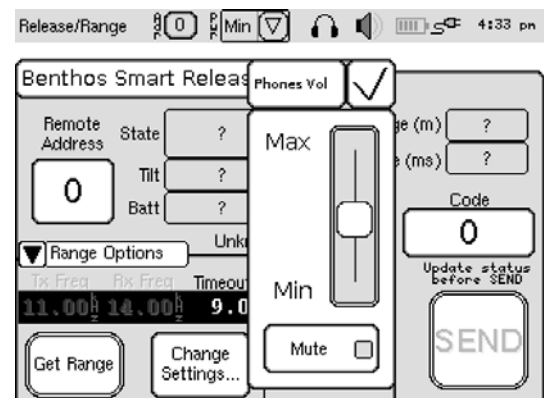


Figure 4-9 Phones Vol Pop-Up

check will appear in the box. To turn the headphones back on, touch the box again.

3. Touch the check mark to close the Phones Vol pop-up and save the volume or mute setting.

Adjusting the Speaker Volume

The speaker volume can be adjusted or the speaker muted. To mute the speaker, touch the Speaker control. Touch it again to turn the speaker back on. When muted, the Speaker control displays an X across it.

To adjust the speaker volume:

1. Touch and hold the Speaker control on the Status and Control bar.

The Speaker Vol pop-up opens as shown in Figure 4-10.

2. Touch and drag the slider up or down to adjust the volume, or touch anywhere in the slide to move the slider to that location. The speaker can also be muted by touching the Mute check box. When muted, a check will appear in the box. To turn the speaker back on, touch the box again.

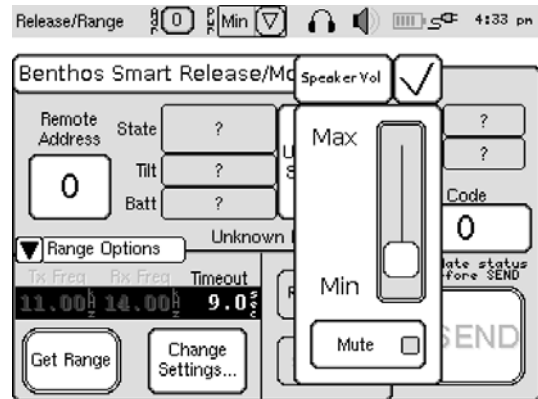


Figure 4-10 Speaker Vol Pop-Up

3. Touch the check mark to close the Speaker Vol pop-up and save the volume or mute setting.

Setting the Time and Date and Viewing the Clock Battery Voltage

The time and the date can be set, and the time can be displayed in 12-hour or 24-hour time. In addition, the clock battery voltage can be viewed.

To set the time and date and view the clock battery voltage:

1. Touch and hold the Time and Date display.

The Set Time/Date pop-up opens as shown in Figure 4-11. The clock battery voltage can be viewed in the lower left corner of the pop-up.

2. Select 24 hr. Time if it is desired to display 24-hour time.

3. Select Show Seconds if it is desired to display seconds.
4. Tap or touch and hold the up or down arrow of the hours setting to set the hour. The hours setting is to the far left.
5. Tap or touch and hold the up or down arrow of the minutes setting to set the minute. The minutes setting is to the right of the hours setting.
6. If 24 hr. Time was not selected, select AM or PM.

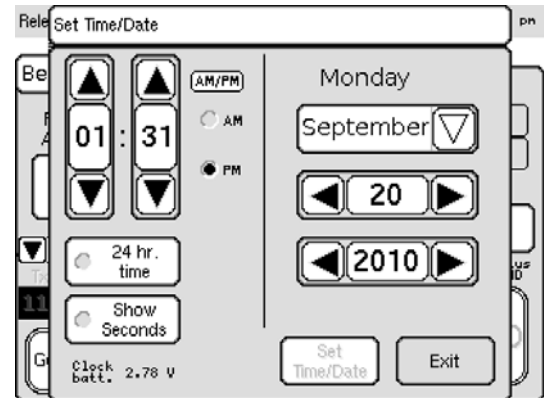


Figure 4-11 Set Time and Date Pop-Up

7. Touch the month setting.
8. A drop-down list opens as shown in Figure 4-12.
9. Touch the desired month in the drop-down list. If the month is hidden, tap the up or down arrow or drag the slider up or down to show it.
10. Tap or touch and hold the left or right arrow of the days setting to set the day. The day setting is immediately below the month setting.
11. Tap or touch and hold the left or right arrow of the years setting to set the year. The years setting is immediately below the days setting.

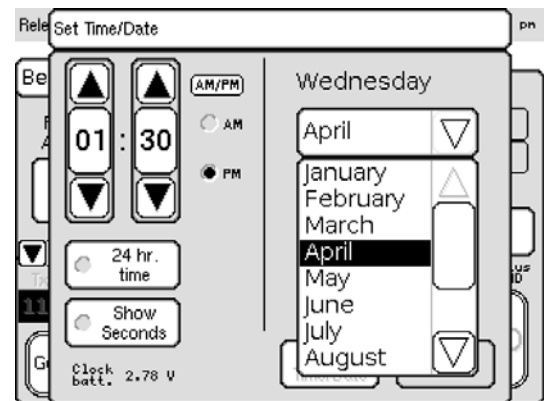


Figure 4-12 Month Pop-Up

12. Touch Set Time/Date to save the new time and date settings; touch Exit to leave them as is.

The Set Time/Date pop-up closes.

Viewing the Battery Level/Charge and External AC/DC Power Source Indicators

The Battery Level/Charge indicator provides an analog indication of the energy remaining in the two internal batteries. It also indicates when the batteries are being charged or if there are no batteries installed. The External AC/DC Power Source indicator indicates whether external AC or DC power is powering the UDB-9400. The external DC power capability is optional, and batteries are installed only in the portable configuration.

The Battery Level/Charge indicator provides the following indications:



Indicates that the batteries are low and should be recharged.



Indicates that the batteries are fully charged.



Indicates that the batteries are being charged. The batteries are charged from external AC or DC power. The external DC power capability is optional for the UDB-9400.



Indicates that the deck box is being powered by external AC or DC power.

The External AC/DC Power Source indicator provides the following indications.



Indicates that external AC power is powering the deck box. When no indicator is shown, the deck box is being powered by its internal batteries.



Indicates that external DC power is powering the deck box. When no indicator is shown, the deck box is being powered by its internal batteries.

Viewing the Time and Date Display

The Time and Date display can be viewed in any one of three modes: Time, Date or Alternate. The Alternate mode alternates from displaying time to displaying date. To go from one mode to the next, touch the display. The name of the mode is displayed briefly before switching to it.

Adjusting the Touch Screen Display Backlight and Contrast

The touch screen display backlight and contrast can be adjusted to account for room lighting and viewing angle.

To adjust the touch screen display backlight and contrast:

1. Touch the Display function button.

The Display screen opens as shown in Figure 4-13.

2. Touch and drag the Backlight slider up to increase the backlight intensity or down to decrease the intensity. Or touch anywhere in the slide to move the slide to that location.

3. Touch and drag the Contrast slider up to increase the contrast or down to decrease the contrast. Or touch anywhere in the slide to move the slide to that location.

4. Touch Exit to close the Display screen.

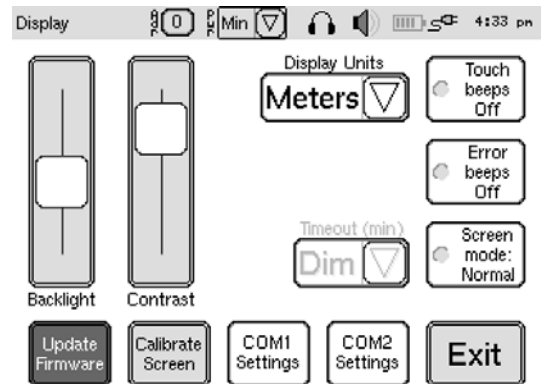


Figure 4-13 Display Screen

Configuring the Power Saver

The UDB-9400 includes a power saver which dims the backlight and turns off the displays after a predetermined time, or just dims the backlight, depending on the selection. There are two screen modes, Normal and Save:

Normal mode. The power saver is off. The touch screen backlight is on, and the screens in the touch screen display are visible at all times.

Save mode. The power saver is on. The touch screen display backlight will dim in one minute if the screen is not touched and then turn on again when it is touched. Similarly, if the screen is not touched for a predetermined time, the displays will no longer be visible, but every ten seconds the Teledyne Benthos logo will appear for one second to indicate that the deck box is on. When the screen is touched, the displays will be visible again. However, the turning off of the displays can be disabled. Touching the screen once when the power saver is on will not activate any of the controls.

To configure the power saver settings:

1. Touch the Display function button.

The Display screen opens.

2. When in Save mode, the Screen mode button indicates Screen mode: Save. In Normal mode it indicates Screen mode: Normal. Touch the button repeatedly to select Save mode.

3. Touch the Timeout setting. This setting is only available when in Save mode.

A drop-down list opens as shown in Figure 4-14.

4. Select the time in minutes after which to turn the displays off. A selection of Dim will only dim the backlight; the displays will remain visible at all times.

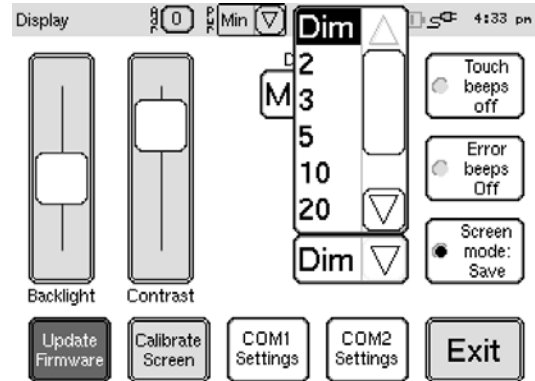


Figure 4-14 Timeout Drop-Down List

5. Touch Exit to close the Display screen.

Configuring the Serial Ports

There are two serial ports, COM1 and COM2. COM1, which can be configured for RS-232 or RS-422 operation, connects to a PC and is used for external control of the acoustic telemetry modem function of the UDB-9400. This serial port is also used to send and receive data. COM2, which is configured for RS-232 operation only, also connects to a PC and is used to emulate the DS-7000 Acoustic Deck Set external interface.

COM2 can also be disabled or set to enable CLAM Shell pass-through, which allows two devices, such as PCs, to be separately connected to the deck box using the two COM ports. The two devices can independently and seamlessly communicate with two separate remote modems.

To configure the COM1 serial port:

1. Touch the Display function button.

The Display screen opens.

2. Touch COM1 Settings.

The COM1 Configuration pop-up opens as shown in Figure 4-15.

3. Touch the Baud Rate setting and select the baud rate from the drop-down list box.
4. Touch the Data Bits setting and select 7 or 8 data bits.
5. Touch the Duplex setting and select half or full duplex.
6. Touch the Flow Control setting and select Xon/Xoff, hardware or none.
7. Touch the Operation Mode setting and select RS-232 or RS-422 for the serial interface.
8. Touch the check mark to close the COM1 configuration pop-up and save the COM1 serial port settings.
9. Touch Exit to close the Display screen.

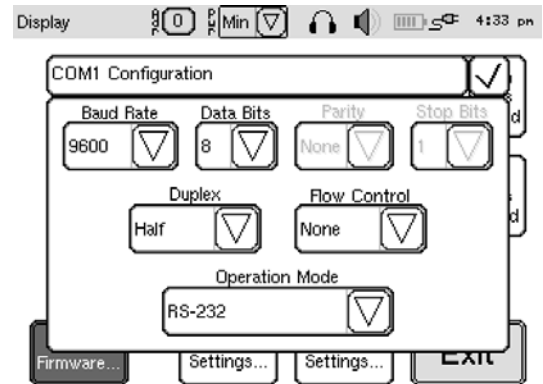


Figure 4-15 COM1 Configuration Pop-Up

To configure the COM2 serial port:

1. Touch the Display function button.
The Display screen opens.
2. Touch COM2 Settings.
The COM2 Configuration pop-up opens as shown in Figure 4-16.
3. Touch the Baud Rate setting and select the baud rate from the drop-down list box.
4. Touch the Data Bits setting and select 7 or 8 data bits.
5. Touch the Parity setting and select odd, even or no parity.
6. Touch the Stop Bits setting and select 1 or 2 stop bits.
7. Touch the Duplex setting and select half or full duplex.

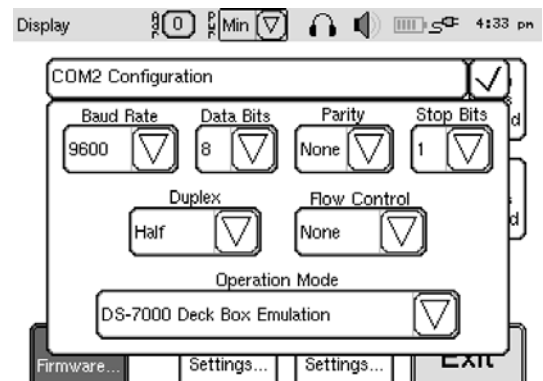


Figure 4-16 COM2 Configuration Pop-Up

8. Touch the Flow Control setting and select Xon/Xoff, hardware or none.
9. Touch the Operation Mode setting and select Disabled, DS-7000 Deck Box Emulation or CLAM Shell pass-through.
10. Touch the check mark to close the COM2 Configuration pop-up and save the COM2 serial port settings.
11. Touch Exit to close the Display screen.

Selecting the Beep and Units Preferences

The UDB-9400 provides an audible beep when touching a control or when an error occurs. Both the control and error beeps can be individually enabled or disabled. In addition, meters or feet can be selected for the displayed ranges.

To select the beep and units preferences:

1. Touch the Display function button.
The Display screen opens.
2. When touch beeps is on, the Touch beeps button indicates Touch Beeps on. When touch beeps is off, it indicates Touch beeps off. Touch the button repeatedly to select on or off for the touch beeps.
3. When error beeps is on, the Error beeps button indicates Error Beeps on. When error beeps is off, it indicates Error beeps off. Touch the button repeatedly to select on or off for the error beeps.
4. Touch the Display Units setting and select Meters or Feet.
5. Touch Exit to close the Display screen.

Touch Screen Calibration

If when touching a control, it does not respond, the touch screen display may require calibration. For instructions on how to calibrate the touch screen display, refer to "Calibrating the Touch Screen Display" on page 6-7.

Working with Information Windows

When using the UDB-9400 with Teledyne Benthos acoustic telemetry modems, SMART Releases, SMART Modems, Compact Modems, and Compact Releases, information windows will occasionally open over the currently open screen in the touch screen display. These windows provide status information on the operation currently being performed, such as ranging to a modem, waking up a Compact Modem, testing the acoustic link, and other operations. Information windows also display data, such as range, received data statistics and other information. There are two types of information windows, locked and unlocked.

Locked Information Windows

A locked information window is an information window that opens when the deck box is waiting for a response from a modem. It cannot be manually closed. A locked information window can be easily identified, as the screen that it overlays is dimmed as shown in Figure 4-17. A locked information window will automatically close when the operation being performed is complete.

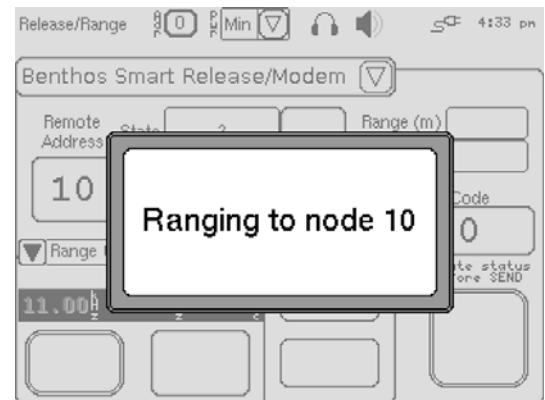


Figure 4-17 Example of a Locked Information Window

Unlocked Information Windows

An unlocked information window is an information window that displays data. It can be manually closed at any time by touching anywhere inside the window. Unlike a locked information window, the screen that an unlocked information window overlays is not dimmed as shown in Figure 4-18. An unlocked information window will automatically close after several seconds if it is not manually closed.

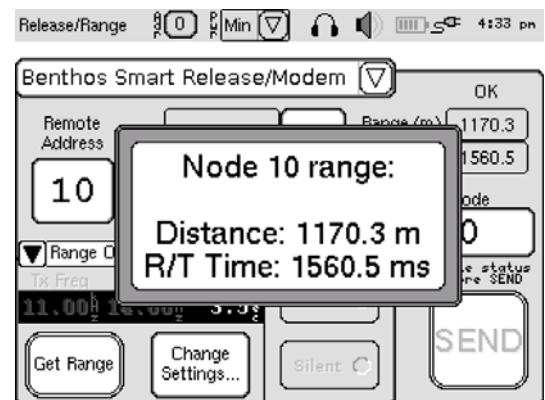


Figure 4-18 Example of Unlocked Information Window

Waking up a Compact Modem or Compact Release

The Compact Modems and Compact Releases use the same Wakeup scheme. Therefore the description of the Compact Modem also applies equally to the Compact Releases. Compact Modems are designed for long deployment, they are in a low power state most of the time. While in this low power state, a Compact Modem will not be able to receive commands or transmit messages. The modem must be awakened first before it can perform these functions.

There are two wakeup schemes, "slow" and "fast." The slow wakeup scheme is implemented in all UDB-9400 Universal Deck Boxes and in Compact Modems with firmware versions prior to 1.2.7. The fast wakeup scheme is also implemented in all UDB-9400 Universal Deck Boxes and in Compact Modems with firmware versions 1.2.7 and higher. Table 4-1 summarizes which firmware versions provide which wakeup scheme for the Compact Modems.

Table 4-1 Compact Modem Firmware Versions Versus Slow and Fast Wakeup Schemes

Compact Modem AND FIRMWARE VERSION	SLOW	FAST
Compact Modem (prior to 1.2.7)	•	
Compact Modem (1.2.7 and higher)		•

Selecting the Slow or Fast Wakeup Scheme for a Compact Modem or Compact Release

To select the slow or fast wakeup scheme for a Compact Modem :

1. Touch the Modem Address control on the Status and Control bar, or touch the Modem Config function button.

The Modem Config screen opens to the Deck Box tab.

2. If the fast wakeup scheme is currently selected, this condition is indicated on the Deck Box tab by the fast wake button as shown in Figure 4-19. Touch this button to select the slow wakeup scheme.

If the slow wakeup scheme is currently selected, this condition is indicated on the Deck Box tab by the slow wake button. The button is also highlighted. Touch this button to select the fast wakeup scheme.

Selecting the Wakeup Period for a Compact Modem or Compact Release

The UDB-9400 wakes up a Compact Modem by transmitting a wakeup signal. Although a Compact Modem is in its low power state most of the time, it will periodically listen for this signal. The time during which a Compact Modem listens for the wakeup signal is the wakeup period and is preset by the user for each Compact Modem. The wakeup period must first be selected before the deck box can be used to wake up a Compact Modem.

To select the wakeup period for a Compact Modem:

1. Touch the Modem Address control on the Status and Control bar, or touch the Modem Config function button.

The Modem Config screen opens to the Deck Box tab.

2. Determine what the wakeup period setting is for the Compact Modem to be awakened.
3. Select the wakeup period from the Compact Modem Wakeup Period drop-down list as shown in Figure 4-20.

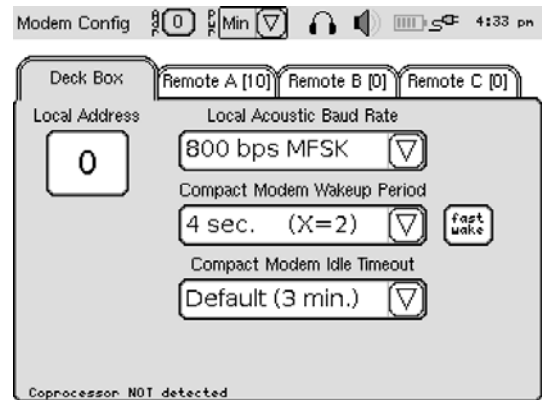


Figure 4-19 Modem Config Screen—Fast Wake Selected



NOTE The 2 sec. wakeup period setting is compatible with the slow wakeup scheme only. Similarly, the 96 sec. wakeup period setting is compatible with the fast wakeup scheme only. All of the other wakeup period selections are compatible with both wakeup schemes. When selecting a wakeup period that is not compatible with the selected wakeup scheme, an information window temporarily opens warning of this condition. A similar response occurs when selecting a wakeup scheme, slow or fast, that is not compatible with the selected wakeup period. If the warning is ignored, the Compact Modem may, or may not, wake up when the wakeup signal is transmitted. There is no guarantee one way or the other.

After a wakeup signal is transmitted to the Compact Modem as described in "Transmitting a Wakeup Signal to a Compact Modem or Compact Release" on page 4-19, the duration of the transmission sequence will be set such that it will be present when the Compact Modem listens for it. The longer the wakeup period, the longer the sequence.

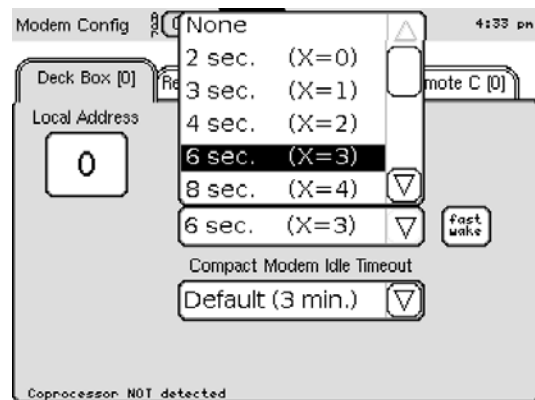


Figure 4-20 Modem Config Screen—Wakeup Period Selected

Selecting the Idle Timeout for a Remote Compact Modem or Compact Release

The idle timeout is the time after which a local modem will go into the lowpower state if there is no input either from its host processor over the serial interface or from a remote modem over the acoustic link. Beginning with the UDB-9400 firmware version 1.9.11 and the Compact Modem firmware version 1.2.8, the idle timeout for a remote Compact Modem can be selected. Prior to version 1.2.8 for the Compact Modem firmware, a fixed idle timeout of three minutes was used and could not be changed.

The range of allowable values for the idle timeout is from 15 to 90 minutes in 15-minute intervals. The default timeout of 3 minutes can also be selected.

To select the idle timeout for a Compact Modem:

1. Touch the Modem Address control on the Status and Control bar, or touch the Modem Config function button.

The Modem Config screen opens to the Deck Box tab.

2. Select the Idle Timeout from the Compact Modem Idle Timeout drop-down list as shown in Figure 4-21.

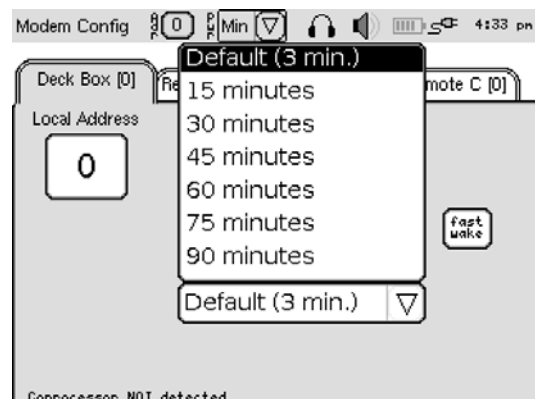


Figure 4-21 Modem Config Screen—Idle Timeout Selected

After a wakeup signal is transmitted to the Compact Modem as described in "Transmitting a Wakeup Signal to a Compact Modem or Compact Release" on page 4-19, the idle timeout will be set.

Transmitting a Wakeup Signal to a Compact Modem or Compact Release

To ensure that when transmitting the wakeup signal to a Compact Modem it will wake up, select the wakeup period for the modem as described in "Selecting the Wakeup Period for a Compact Modem or Compact Release" on page 4-17.

To transmit a wakeup signal to a Compact Modem, touch Compact Modem Wakeup. The Compact Modem Wakeup button is available in the Release/Range screen when the Benthos Smart Release/Modem pop-up is open as shown in Figure 4-22. The button is also available in the Modem Comms screen and on the Remote tabs of the Modem Config screen. If the button is not visible, touch Range Options to close the Range Options pop-up. The button is located behind this pop-up.

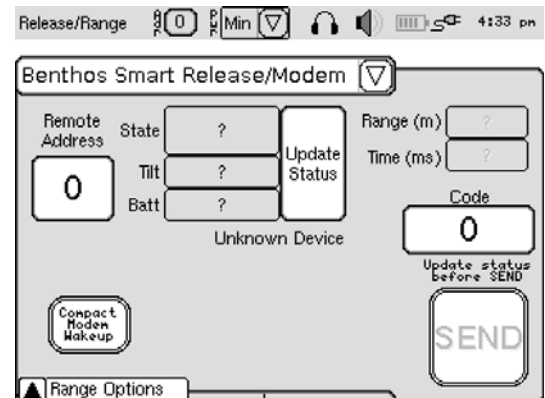


Figure 4-22 Compact Modem Wakeup Button in the Release/Range Screen

The wakeup signal is transmitted and an information window opens during the duration of the transmission sequence as shown in Figure 4-23. The window also displays the length of the sequence in seconds. If the modem is not awakened, a no response indication is displayed in an alert window.

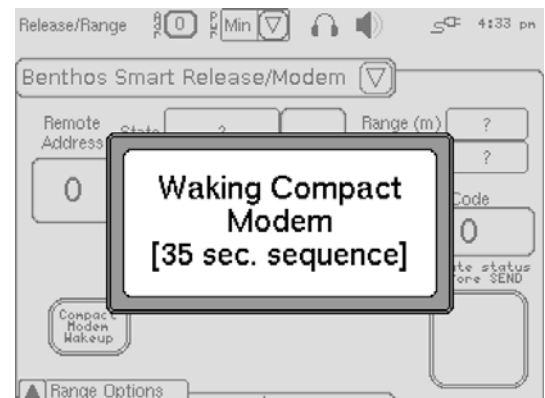


Figure 4-23 Waking up a Compact Modem



NOTE Range can also be acquired and displayed in the Modem Comms screen. Refer to "Acquiring and Displaying Ranges in the Modem Comms Screen" on page 4-33.

Ranging to a Remote Modem

The UDB-9400 can be used to acquire and display ranges to, and to acquire and display the status of, any Teledyne Benthos manufactured acoustic telemetry modem, including SMART Releases and SMART Modems. Before acquiring ranges or status, always ensure that the transducer is connected.

Acquiring and Displaying the Range to a Remote Modem

To acquire and display the range to a remote modem:

1. Touch the Release/Range function button.

The Release/Range screen opens.

2. Select Benthos Smart Release/Modem from the drop-down list as shown in Figure 4-24.

The Benthos Smart Release/Modem pop-up opens as shown in Figure 4-25.

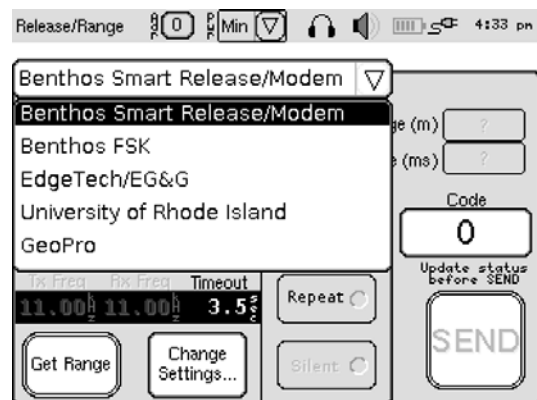


Figure 4-24 Release/Range Screen—Benthos Smart Release/Modem Selected



NOTE The Range Options pop-up is also available on the Remote tabs of the Modem Comms and Modem Config screens where as many as three modem addresses can be entered, one on each tab. The ranges are displayed on the tabs in the Modem Config screen.

3. Touch the Remote Address setting.

The remote address keypad opens as shown in Figure 4-25.

4. Enter the address of the SMART Release or SMART Modem, and then touch OK. To backspace and delete a character, touch the Delete pad.

The keypad closes and the address is displayed as the Remote Address setting.

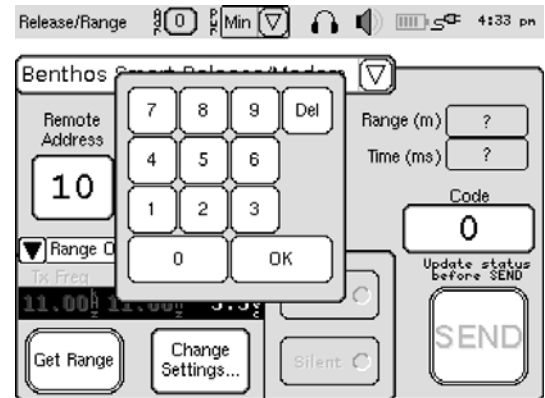


Figure 4-25 Remote Address Keypad

5. Touch Range Options to open the Range Options pop-up if it is not already open as shown.
6. Touch Change Settings.

The Transpond Parameters pop-up opens as shown in Figure 4-26.

7. Tap or touch and hold the up or down arrow to select the deck box timeout in seconds.

The timeout determines how long after transmitting a range command the deck box waits to receive the range information. When sending multiple range commands, it is the time between them.

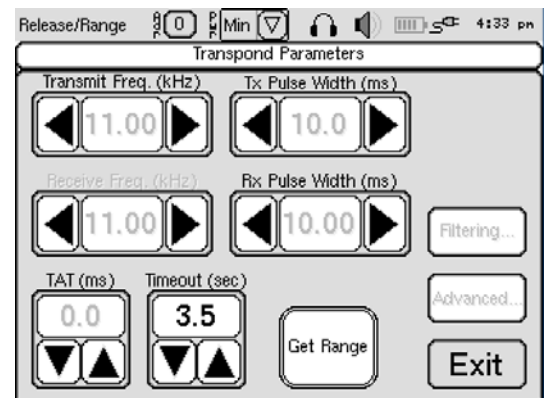


Figure 4-26 Transpond Parameters Pop-Up

8. Touch Exit to close the Transpond Parameters pop-up.
9. Touch Get Range.

The range command is sent and an information window temporarily opens confirming the sent command along with the SMART Release or SMART Modem address. In addition, "Ranging..." flashes in the Benthos Smart Release/Modem pop-up. When the range is acquired, it is displayed in another temporary information window in units of meters or feet as shown in Figure 4-27, along with the round trip time in milliseconds. Refer to "Selecting the Beep and Units Preferences" on page 4-14 to select meters or feet for the range display. The same range information is also displayed in the Benthos Smart Release/Modem pop-up along with an "OK" indication. If the range is not acquired, a no response indication is displayed in the information window and "Timed Out" is displayed in the pop-up.

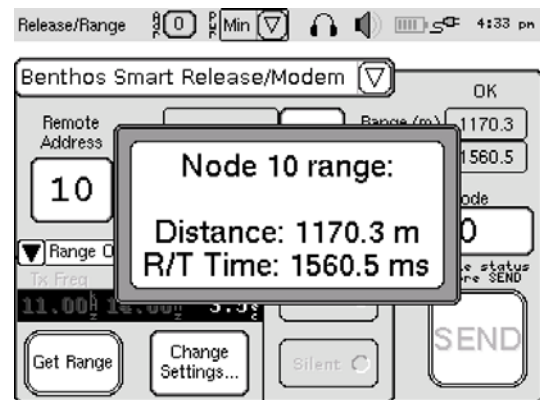


Figure 4-27 Information Window with Displayed Range Information

Acquiring and Displaying Ranges to a Remote Modem Continuously

Ranges to a remote modem can be acquired continuously by sending the range command at the end of each timeout. To acquire and display ranges continuously, acquire and display ranges as described in "Acquiring and Displaying the Range to a Remote Modem" on page 4-20, and touch Repeat before touching Get Range. To stop ranging, touch Cancel Repeat Range.

Acquiring and Displaying Status Information from a Remote Modem

The status of a remote modem can be acquired and displayed at any time. For SMART Releases and modems, the status *must* be acquired before they can be released.

To acquire and display status information from a remote modem:

1. Touch the Release/Range function button.
The Release/Range screen opens.
2. Select Benthos Smart Release/Modem from the drop-down list.

The Benthos Smart Release/Modem pop-up opens.

3. Touch the Remote Address setting.

The remote address keypad opens.

4. Enter the address of the SMART Release or SMART Modem, and then touch OK. To backspace and delete a character, touch the Delete pad.

The keypad closes and the address is displayed as the Remote Address Setting.

5. Touch Update Status.

The status command is sent and an information window temporarily opens indicating that the status is updating. When the status information is acquired, it's receipt is acknowledged in another information window as shown in Figure 4-28, along with the type of SMART Release or SMART Modem.

When the window closes, the status information is displayed in the Benthos Smart Release/Modem pop-up along with the type of modem as shown in Figure 4-29. If the status information is not acquired, a no response indication is displayed in the window.



NOTE For the types of status information that can be displayed for a SMART Release or SMART Modem, refer to its user's manual.

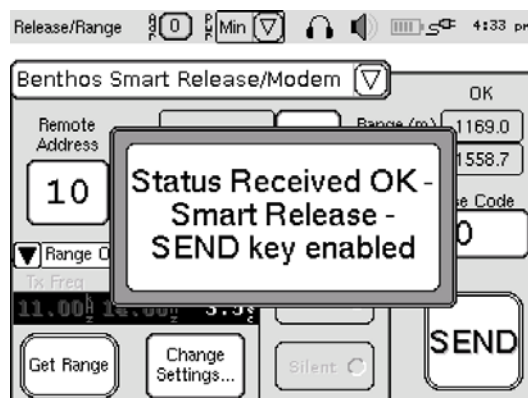


Figure 4-28 Information Window Acknowledging Receipt of Status Information

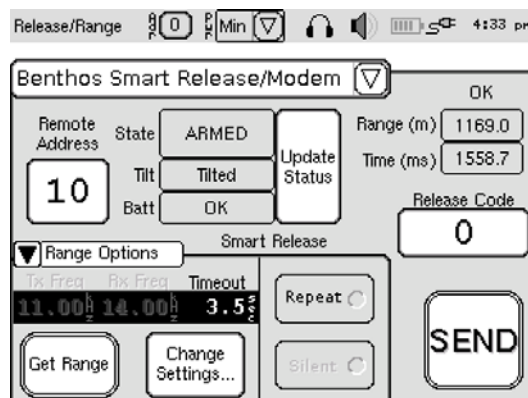


Figure 4-29 Displayed Status Information and Type of SMART Release or SMART Modem

Releasing a SMART Release or SMART Modem

Before a SMART Release or SMART Modem can be released, the status information for it must first be acquired. Before sending commands, always ensure that the transducer is connected.

To release a SMART Release or SMART Modem:

1. Acquire the status information for the SMART Release or SMART Modem to be released as described in "Acquiring and Displaying Status Information from a Remote Modem" on page 4-22.

The Send button becomes available.

2. Determine the release code for the SMART Release or SMART Modem.

3. Touch the Release Code setting.

The release code keypad opens as shown in Figure 4-30.

4. Enter the release code of the SMART Release or SMART Modem, five characters maximum, and then touch OK. To backspace and delete a character, touch the Delete pad.

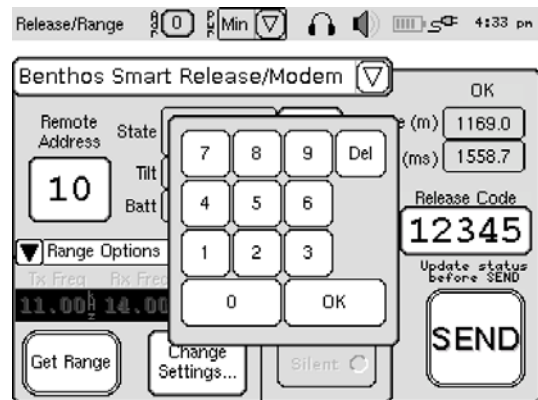


Figure 4-30 Release Code Keypad

The keypad closes and the release code is displayed as the Release Code or Burn Wire Code setting.



WARNING Before proceeding with the next step, verify that the release code is correct.

5. Touch—and hold—Send.

Three short beeps followed by a long beep will be heard, and then the Send button will become highlighted.



NOTE The command will be sent only after the Send button is released. To abort the command, continue to maintain contact with the touch screen display while sliding the finger completely off the Send button. The Send button will become unhighlighted. If the command successfully aborts, a pop-up will appear with the message "Transmission Aborted."

6. Release Send.

The release command is sent and an information window temporarily opens with the message "Valid release code, waiting for confirmation..." for a SMART Release, or "Valid burn wire code, burn started..." for a SMART Modem. If the release code is incorrect, the message "Invalid Release Code" will be displayed, instead.

For a SMART Release, if the correct release code was received, the message "Released CONFIRMED," should be displayed in the Benthos Smart Release/Modem pop-up as shown in Figure 4-31. This message acknowledges that the release mechanism has been activated and that the release has released itself from its mooring. If instead, the message "Released & unconfirmed" is displayed, the release mechanism has been activated but the release has not released itself from its mooring.

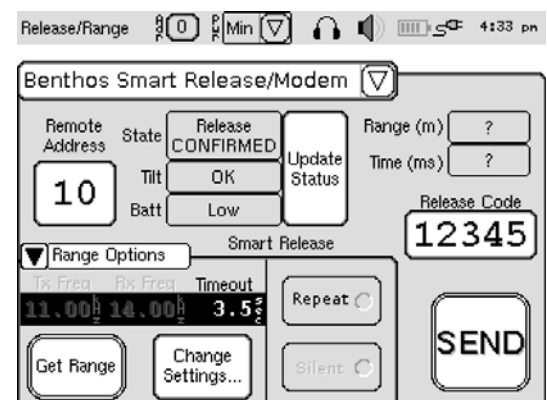


Figure 4-31 Released CONFIRMED—SMART Release

For a SMART Modem, if the correct release code was received, the message "Burn wire ACTIVATED," should be displayed in the Benthos Smart Release/Modem pop-up as shown in Figure 4-32. Once the burn wire has fully burned, which may take several minutes, an alert window opens. Touch the X mark to close the window and the message "Burn wire RELEASED" should be displayed in the pop-up.

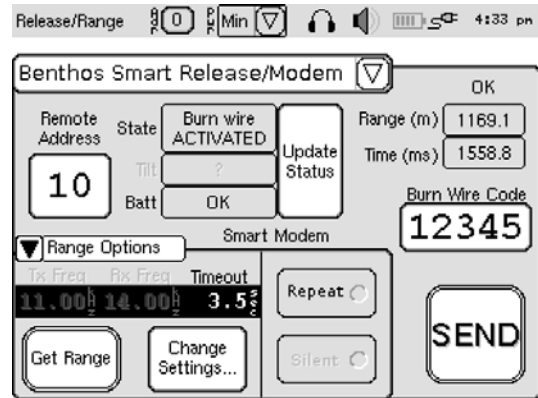


Figure 4-32 Burn Wire Activated—SMART Modem

If desired, after sending the release command, ranges can be acquired and displayed by touching Get Range. Refer to "Acquiring and Displaying the Range to a Remote Modem" on page 4-20 for detailed instructions.

Configuring and Checking a Remote Modem

If desired, the acoustic bit rate and the transmit power level of a remote modem can be configured and checked. The modem firmware version can also be checked. Although only one modem can be configured at a time, the configuration can be prepared prior to updating for up to three modems, designated Remote A, Remote B and Remote C. However, before a remote modem can be configured, its address must be selected. Before sending commands, always ensure that the transducer is connected.

Selecting the Remote Modem Address

To select the address of the remote modem to be configured:

1. Touch the Modem Address control on the Status and Control bar, or touch the Modem Config function button.

The Modem Config screen opens to the Deck Box tab.

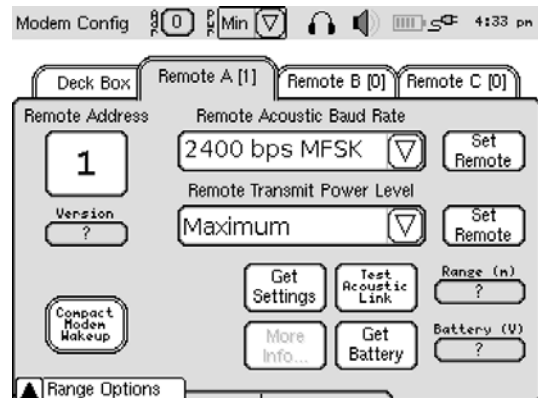


Figure 4-33 Modem Config Screen—Remote A Tab

2. Touch the Remote A, Remote B or Remote C tab to open the tab. The tab label indicates the current remote modem address setting. The Remote A tab is shown in Figure 4-33 on page 4-25.

3. Touch the Remote Address setting.

The remote address keypad opens as shown in Figure 4-34.

4. Enter the remote modem address, two characters maximum, and then touch OK. To backspace and delete a character, touch the Delete pad.

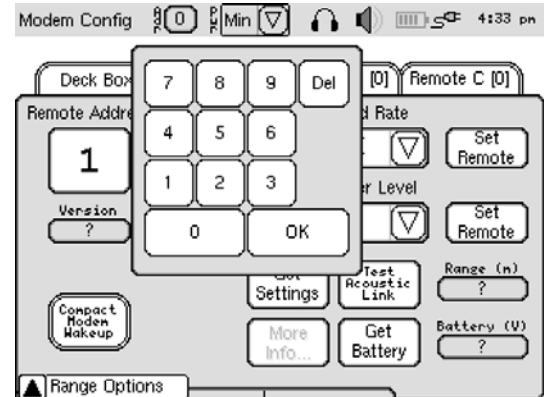


Figure 4-34 Remote Address Keypad

The keypad closes and the modem address is displayed as the Remote Address setting.

5. If desired, select the remote modem address for one or both of the remaining tabs.

Configuring the Bit Rate and Transmit Power Level of a Remote Modem

To configure the bit rate and transmit power level of a remote modem:

1. Touch the tab in the Modem Config screen for the modem to be configured.
2. On the tab, touch the Remote Acoustic Baud Rate setting and select the bit rate for the remote modem.
3. Touch Set Remote for the remote acoustic bit rate setting.

An information window temporarily opens indicating that the remote modem settings are being updated. When complete, the update is confirmed, and then the Set Remote button becomes unavailable for that remote acoustic bit rate selection only. If the update is not confirmed, a no response indication is displayed in the window.

4. Touch the Remote Transmit Power Level setting and select the attenuation level for the remote modem.

5. Touch Set Remote for remote transmit power level setting.

An information window temporarily opens indicating that the remote modem settings are being updated. When complete, the update is confirmed, and then the Set Remote button becomes unavailable for that remote transmit power level selection only. If the update is not confirmed, a no response indication is displayed in the window.

Checking the Bit Rate, Transmit Power Level and Firmware Version of a Remote Modem

To check the bit rate, transmit power level and firmware version of a remote modem:

1. Touch the tab in the Modem Config screen for the modem to be checked.
2. On the tab, touch Get Settings.

An information window temporarily opens indicating that the remote modem settings are being updated on the tab. When complete, receipt of the settings is confirmed. When the window closes, the remote modem bit rate and transmit settings are displayed on the tab along with the firmware version of the remote modem. The Set Remote buttons also become unavailable for these selections only. If the update is not confirmed, a no response indication is displayed in the window.

A confirmed update also makes the More Info button available.

Touching this button opens the Remote Additional Info pop-up which displays additional information about the remote modem as shown in Figure 4-35.

For information about the displayed parameters, refer to the "ATM-900 Series Acoustic Telemetry Modems User's Manual."

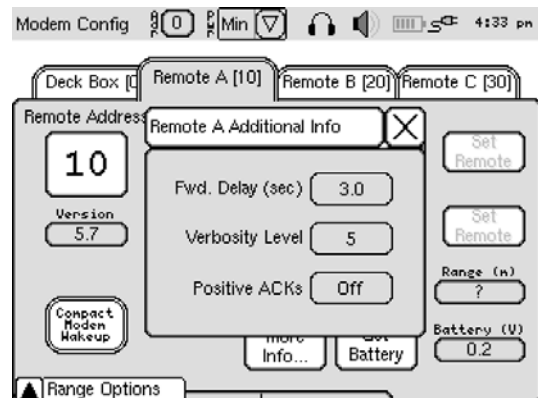


Figure 4-35 Remote Additional Info Pop-Up

3. Touch the X mark to close the Remote Additional Info pop-up.

Checking the Battery Level of a Remote Modem

To check the battery level of a remote modem:

1. Touch the tab in the Modem Config screen for the modem whose battery level is to be checked.
2. On the tab, touch Get Battery.

An information window temporarily opens indicating that the deck box is acquiring the battery level. When the battery level is acquired, the value is displayed in the window as shown in Figure 4-36. In addition, the battery voltage is displayed on the tab. If the battery level is not acquired, a no response indication is displayed in an alert window.

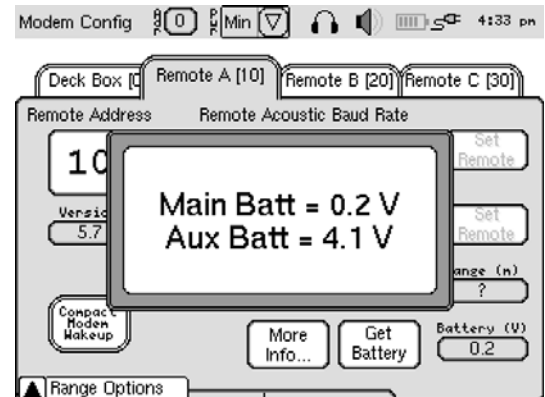


Figure 4-36 Information Window with Displayed Battery Level

Acquiring and Displaying Ranges in the Modem Config Screen

To acquire and display ranges in the Modem Config screen:

1. Touch the tab in the Modem Config screen for the modem to range on.
2. Touch Range Options to open the Range Options pop-up if it is not already open as shown in Figure 4-37.
3. Touch Get Range.

The range command is sent and an information window temporarily opens confirming the sent command along with the SMART Release or SMART Modem address. When the range is acquired, it is displayed in another temporary information window in units of meters or feet as shown in Figure 4-37, along with the round trip time in milliseconds.

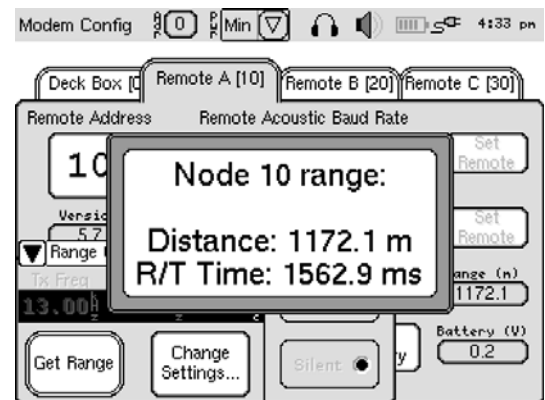


Figure 4-37 Displayed Ranges in the Modem Config Screen

Refer to "Selecting the Beep and Units Preferences" on page 4-14 to select meters or feet for the range display. The same range information is also displayed on the tab. If the range is not acquired, a no response indication is displayed in the information window.

Testing the Acoustic Link with a Remote Modem

The acoustic link between the UDB-9400 and a remote modem can be tested by commanding the remote modem to transmit a preset test message at each of several bit rates. The UDB-9400 measures and displays the received data statistics which can be used to evaluate the acoustic link.

To test the acoustic link with a remote modem:

1. Touch the tab in the Modem Config screen for the modem to be tested.
2. On the tab, touch Test Acoustic Link.

An information window temporarily opens indicating that the acoustic link for the remote modem is being tested. When complete, the window closes, and the Acoustic Link Stats pop-up opens which displays the received data statistics as shown in Figure 4-38. If the test message is not received, a no response indication is displayed in the information window.

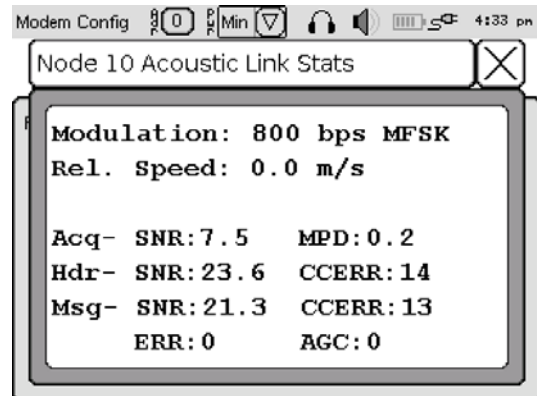


Figure 4-38 Acoustic Link Stats Pop-Up

3. Touch the X mark to close the Acoustic Link Stats pop-up.

The PSNR value is a measure of the processed SNR or signal quality. It is affected by both signal strength and multipath. It can be used to determine what the power level should be set to. Based on Table 4-2 on page 30 adjust the power level and acoustic bit rate accordingly.

Table 4-2 PSNR Value and Required Action

PSNR VALUE	ACTION REQUIRED
20+	Signal quality is high. Can use a lower power level or higher acoustic bit rate.
19–25	Signal quality is good.
14–12	Signal quality is acceptable. If multipath is a factor, a lower power level may improve the signal quality, otherwise go to a higher power level.
11–10	Signal quality is low. If multipath is a factor, a lower power level may improve the signal quality, otherwise go to a higher power level. Also try lowering the acoustic bit rate.
10>	Signal quality is poor. If multipath is a factor, a lower power level may improve the signal quality, otherwise go to a higher power level, also try lowering the acoustic bit rate.


Communicating with a Remote Modem

The UDB-9400 can be used to send commands to an instrument that is connected to a remote modem and to receive messages from a remote modem. The commands to be sent are entered and displayed in the touch screen display using an on screen keyboard. Although only one command can be created and sent at a time, the command settings can be prepared prior to creating and sending the commands for up to three modems, designated Remote A, Remote B and Remote C. However, before communicating with a remote modem, its address must be selected. Before sending commands, always ensure that the transducer is connected.

Selecting the Remote Modem Address

To select the address of the remote modem to be communicated with:

1. Touch the Modem Comms function button.
The Modem Comms screen opens.
2. Touch the Remote A, Remote B or Remote C tab to open the tab. The tab label indicates the current remote modem address setting.

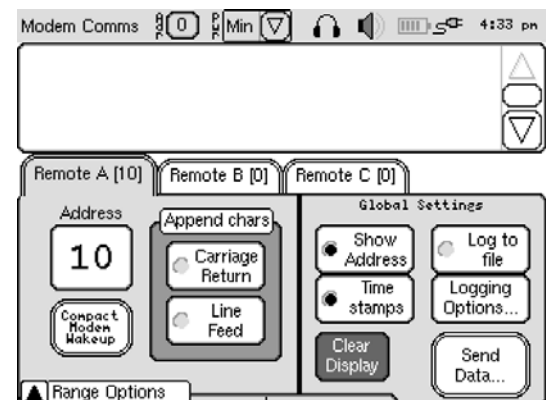
Figure 4-39 Modem Comms Screen

The Remote A tab is shown in Figure 4-39 on page 4-30.

3. Touch the Address setting.

The address keypad opens as shown in Figure 4-40.

4. Enter the remote modem address, two characters maximum, and then touch OK. To backspace and delete a character, touch the Delete pad.

The keypad closes and the address is displayed as the Address setting.

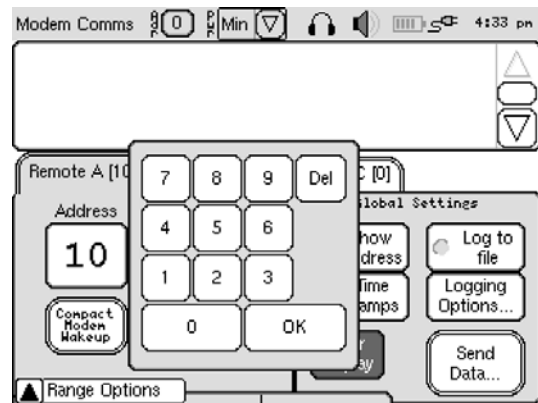


Figure 4-40 Address Keypad

5. If desired, select the remote modem address for one or both of the remaining tabs.

Sending Data to an Instrument that is Connected to a Remote Modem

Similar to being online with a remote modem as described in the "ATM-900 Series Acoustic Telemetry Modems User's Manual," data can be sent to an instrument, such as an Acoustic Doppler Current Profiler (ADCP), that is connected to a remote modem. The data are sent to the modem, and the modem sends the data to the instrument. Responses from the instrument are sent to the modem which transmits them to the UDB-9400 where they are displayed.

To send data to an instrument that is connected to a remote modem:

1. Touch the tab in the Modem Comms screen for the modem to be communicated with.
2. To append a carriage return with the data sent, touch Carriage Return on the tab; to append a line feed, touch Line feed. These selections are applied to the open tab only.
3. To display the remote modem address with the sent data, touch Show Address; to display the date and time of the sent data, touch Time Stamps. These selections are applied to all three tabs, Modem A, Modem B and Modem C.

4. Touch Send Data.

A keyboard opens as shown in Figure 4-41.

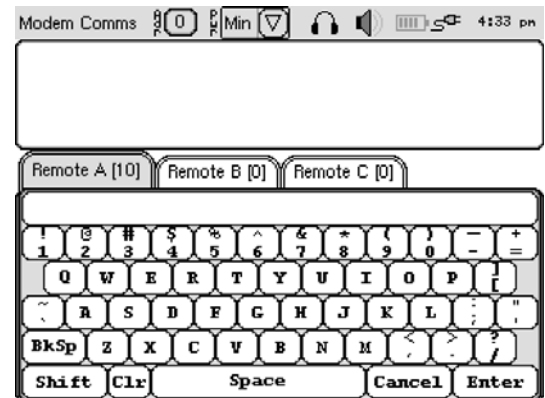


Figure 4-41 Keyboard

5. Enter the data to be sent, a maximum of 50 characters, by touching the appropriate keys. The data are displayed immediately above the keyboard as shown in Figure 4-42. To switch back and forth from lower case to upper case letters, touch Shift. To clear any entered data, touch Clr. To cancel sending the message and close the keyboard, touch Cancel.

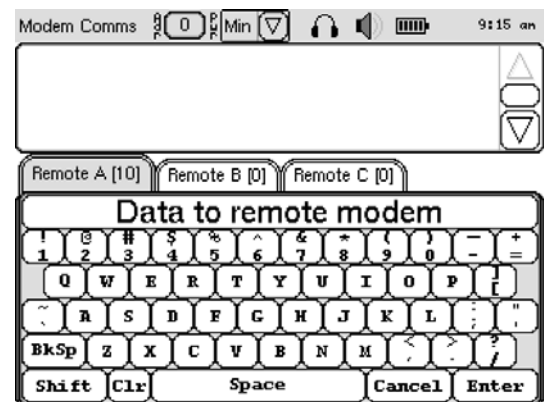


Figure 4-42 Data to be Sent

6. To send the data, touch Enter.

The data are sent and are displayed in the display box above the tabs as shown in Figure 4-43. If selected, carriage return and line feed characters are sent with the data but are not displayed. If selected, the remote modem address and the date and time are displayed with the data. When the amount of data exceeds the display capacity of the scroll box, up and down arrows appear to the right of the scroll box to enable scrolling through the lines.

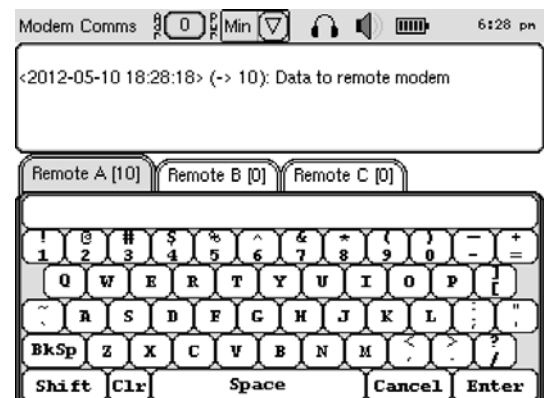


Figure 4-43 Sent Data

7. Enter and send additional data as required, and then touch Cancel to close the keyboard.

8. To clear the display, touch Clear Display.

The Confirm Log Clear window opens as shown in Figure 4-44.

9. Touch Yes, erase to clear the display.

The Confirm Log Clear window closes and the display is cleared.



Figure 4-44 Confirm Log Clear Window

Acquiring and Displaying Ranges in the Modem Comms Screen

To acquire and display ranges in the Modem Comms screen:

1. Touch the tab in the Modem Comms screen for the modem to be ranged to.
2. Touch Range Options to open the Range Options pop-up if it is not already open as shown in Figure 4-45.

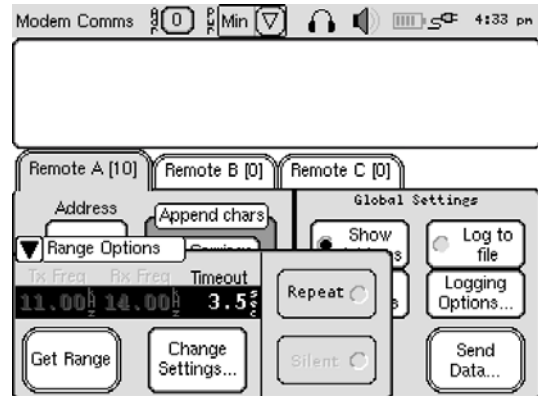


Figure 4-45 Range Options Pop-Up in the Modem Comms Screen

3. If required, touch Change Settings and select the timeout. For more information about the timeout function, refer to "Acquiring and Displaying the Range to a Remote Modem" on page 4-20.
4. Touch Get Range.

The range information is displayed, along with any sent and received data, in the display box as shown in Figure 4-46.

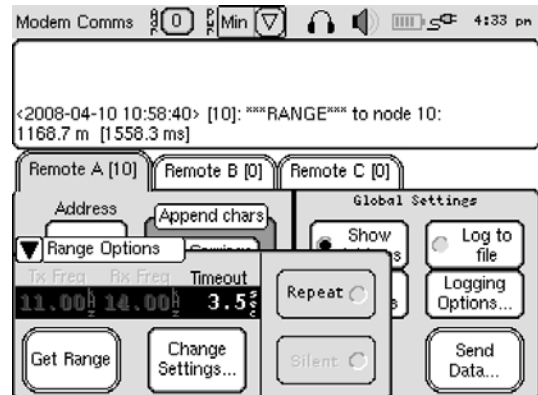


Figure 4-46 Displayed Ranges in the Modem Comms Screen

Receiving Data from Remote Modems

Data can be received from any remote modem, and when received, they are displayed in the touch screen display—along with any ranges, time stamps, remote modem addresses, and sent messages—when the Modem Comms screen is open. To display the remote modem addresses and the time stamps, Show Address and Time Stamps must be selected as shown in Figure 4-39 on page 4-30. Data can be received regardless which screen is open at the time of receipt. When a message is received, an audio indication is output and the Modem Address control on the Status and Control bar flashes. Refer to "Status and Control Bar" on page 4-5 for a description of this bar.

Saving to a Log File

The text displayed in the display box in the Modem Comms screen can be saved to a log file as ASCII text. To begin saving the text, select Log to File in the Modem Comms screen on any of the three tabs. Only the text displayed after selecting Log to File will be saved.

Limiting the Size of the Log File

The size of the log file containing saved text can be limited to a fixed number of lines, or the size can be limited to the 1 MB data log file storage capacity. Text logging stops when this limit is reached and "Log File Full" is displayed.

To limit the size of the log file:

1. Touch Logging Options in the Modem Comms screen on any of the three tabs.

The Modem Comms Logging Options window opens as shown in Figure 4-47.

2. Touch the Log Capacity setting, and then select the file size.

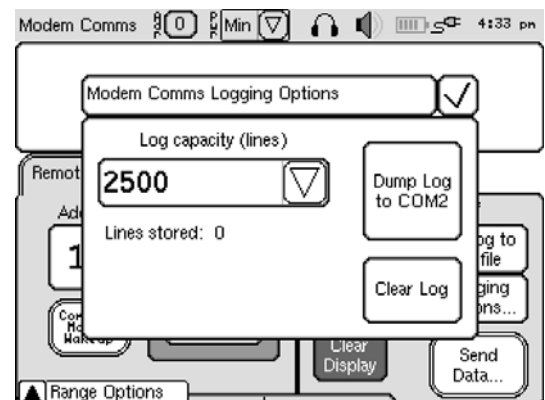


Figure 4-47 Modem Comms Logging Options Window

Exporting the Log File

The log file containing saved text can be exported as ASCII text for viewing in any text editor. For the log file to be exported, a serial port of a PC must be connected to the COM2 serial port of the UDB-9400, and the PC must be running a terminal program.

To export the log file:

1. Touch Logging Options in the Modem Comms screen on any of the three tabs.

The Modem Comms Logging Options window opens as shown in Figure 4-47 on page 4-34.

2. Touch Dump Log to COM2.

The log file is exported. When exporting is complete an information window temporarily opens with the message "Done outputting Log."

Clearing the Log File

To clear the log file:

1. Touch Logging Options in the Modem Comms screen on any of the three tabs.

The Modem Comms Logging Options window opens as shown in Figure 4-47 on page 4-34.

2. Touch Clear Log.

The log file is cleared.

Transponder Functions

The wide low frequency 7–16 kHz (WLF) UDB-9400 Universal Deck Box can be used to acquire and display ranges to any Teledyne Benthos manufactured acoustic transponder or release, and to those manufactured by EdgeTech/EG&G, URI and GeoPro, or to any transponder that replies to pings in the operating frequency band of the deck box. Before acquiring ranges, always ensure that the transducer is connected.

Configuring the Basic Transponder Settings

Before acquiring ranges to transponders, a number of basic transponder settings need to be made. These settings include the deck box transmit and receive frequencies, transmit and receive pulse widths, turn-around-time (TAT), and timeout.

To configure the basic transponder settings:

1. Touch the Release/Range function button.

The Release/Range screen opens as shown in Figure 4-48.



NOTE Except for the Benthos Smart Release/Modem, the transponder type selections listed below are available *only* with the low frequency 7–16 kHz (WLF) UDB-9400 Universal Deck Box.

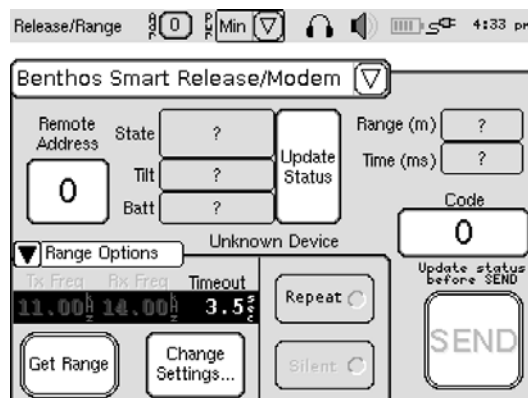


Figure 4-48 Release/Range Screen

2. Select the transponder type from the drop-down list.

Selecting Benthos FSK opens the Benthos FSK pop-up as shown in Figure 4-49.

Selecting EdgeTech/EG&G opens the EdgeTech/EG&G pop-up as shown in Figure 4-50.

Selecting University of Rhode Island opens the University of Rhode Island pop-up as shown in Figure 4-51.

Selecting GeoPro opens the GeoPro pop-up as shown in Figure 4-52.

3. Touch Transpond Options to open the Transpond Options pop-up if it is not already open as shown.



NOTE The Transpond Options pop-up is available in both the Transpond Data and Range/Release screens.

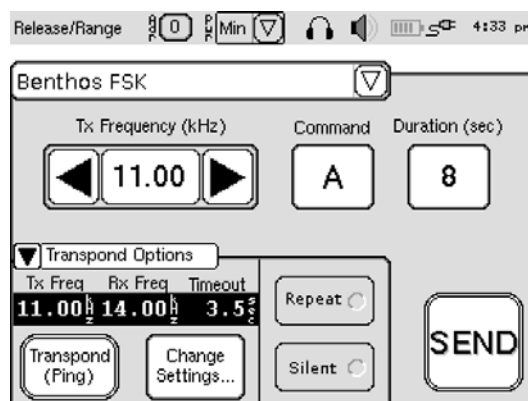


Figure 4-49 Benthos FSK Pop-Up

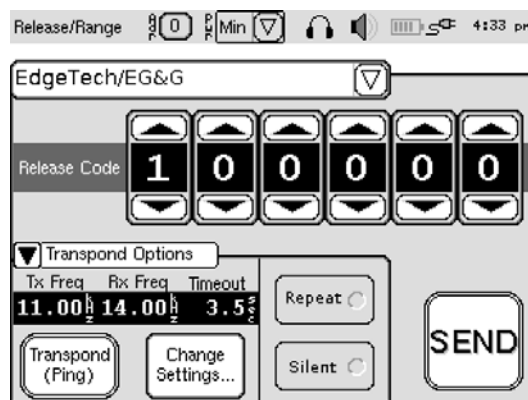


Figure 4-50 EdgeTech/EG&G Pop-Up

4. Touch Change Settings. The Transpond Parameters pop-up opens as shown in Figure 4-53.
5. Tap or touch and hold the left or right arrow to select the deck box transmit and receive frequencies in kilohertz and the transmit and receive pulse widths in milliseconds.

The receive pulse width setting should be approximately the same as the expected transmitted reply pulse widths from the transponders.

For a UDB-9400M, the receive frequency setting is *only* required to ensure the clearest audible output from the deck box speaker. The setting is otherwise not relevant since the UDB-9400M is a multi-receive deck box. A setting of ALL is also available which enables listening to all of the received frequencies in the operating frequency band of the deck box. For a UDB-9400E, the receive frequency setting *must* be set to the transmitted reply frequency of the transponder.

6. Tap or touch and hold the up or down arrow to select the TAT in milliseconds of the transponders and the timeout in seconds of the deck box, and then click EXIT.

The TAT is the time from when a transponder receives a ping to when it transmits the reply. The timeout determines how long after transmitting a ping the deck box waits to receive the transponder replies. When sending multiple pings, it is the time between them.

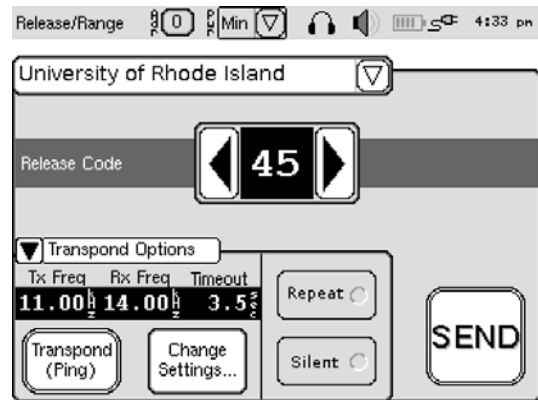


Figure 4-51 University of Rhode Island Pop-Up

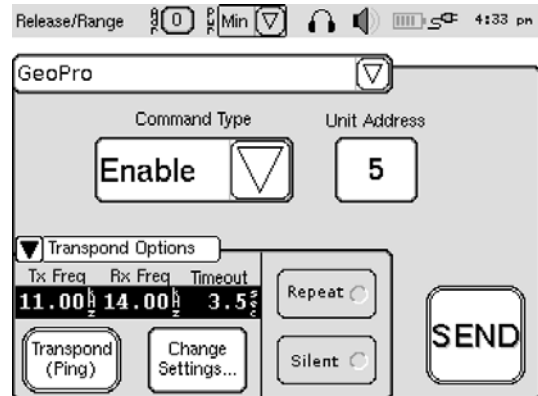


Figure 4-52 GeoPro Pop-Up

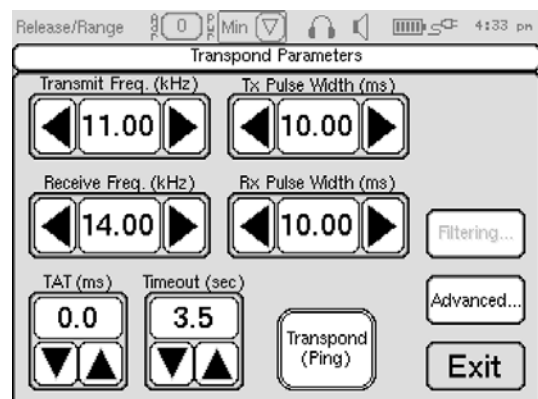


Figure 4-53 Transpond Parameters Pop-Up

Configuring the Advanced Transponder Settings

In addition to the basic transponder settings, several advanced settings can be made if desired by changing the factory default settings. These settings include the deck box ping lockout time, the receive threshold and the per-channel receive sensitivity.

To configure the advanced transponder settings

1. Touch the Release/Range function button.

The Release/Range screen opens as shown in Figure 4-48 on page 4-36.

2. Select the transponder type from the drop-down list.
3. Touch Advanced.

The Advanced Transpond Parameters pop-up opens as shown in Figure 4-54.

4. Tap or touch and hold the up or down arrow to adjust the ping lockout time in milliseconds.

The ping lockout time is the elapsed time between the start of the transmitted ping from the deck box to when the deck box will enable the detection of received signals. Effectively, this setting inhibits the detection of echoes from the transmitted ping off nearby objects.

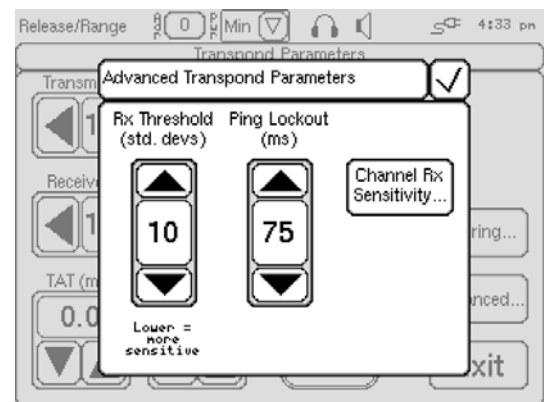


Figure 4-54 Advanced Transponder Parameters Pop-Up

5. Tap or touch and hold the up or down arrow to adjust the receive threshold.

The receive threshold sets the number of standard deviations that a detected signal must rise above the background noise level before it is marked as a received transponder reply. This setting applies to *all* the frequencies in the operating frequency band of the deck box. The lower this setting the more sensitive is the receiver and the more likely a detected signal will be marked as a received reply. However, with a low setting there is also a greater likelihood of "false positives," where a detected signal is incorrectly marked as a reply. The higher the setting the less sensitive is the receiver and the less likely a detected signal will

be marked as a received reply. Therefore a high setting increases the likelihood of "false negatives," where a detected signal is not marked as a reply and should have been. The receive threshold should be adjusted in accordance with the background noise such as to minimize false positives and negatives.

6. Touch Channel Rx Sensitivity.

The Per-channel Receive Sensitivity Adjustment pop-up opens as shown in Figure 4-55.

7. Tap or touch and hold the left or right arrow to select the receive frequency in kHz for which to adjust the sensitivity.

8. Tap or touch and hold the left or right arrow to select the receive sensitivity for the selected frequency.

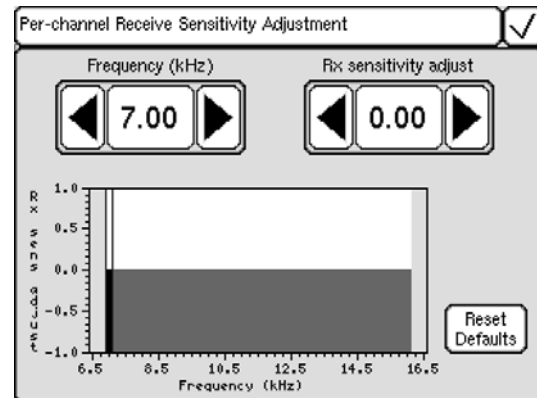


Figure 4-55 Per-Channel Receive Sensitivity Adjustment Pop-Up

The receive sensitivity setting alters the receive threshold for the selected frequency from that which is set for all the frequencies in the Advanced Transpond Parameters pop-up. The receive threshold for any frequency in the operating frequency band of the deck box, in 250-Hz increments, can be adjusted in this manner. The adjustment range is from -1.00 to +1.00 in 0.01 increments, where a negative value *decreases* the receive sensitivity by *increasing* the receive threshold for that frequency, and a positive value *increases* the receive sensitivity by *decreasing* the receive threshold for that frequency. A value of -1.00 effectively sets an infinite threshold, filtering the frequency out, and a value of +1.00 provides the highest sensitivity. A receive sensitivity setting of 0.00 leaves the receive threshold unchanged. Therefore every value between -1.00 and +1.00 sets the receive threshold for that frequency along a curve from the lowest sensitivity to the highest sensitivity, where a receive sensitivity setting of 0.00 leaves the receive threshold for that frequency to that set in the Advanced Transpond Parameter pop-up. The selected frequencies and their receive sensitivity settings are graphically displayed in the lower half of the pop-up as shown in Figure 4-56.

9. Continue selecting frequencies and their receive sensitivities, as many as desired.
10. Touch the check mark to close the Per-channel Receive Sensitivity Adjustment pop-up and save the receive sensitivity settings. Then touch the check mark to close the Advanced Transpond Parameters check box and save the receive threshold and ping lockout settings.

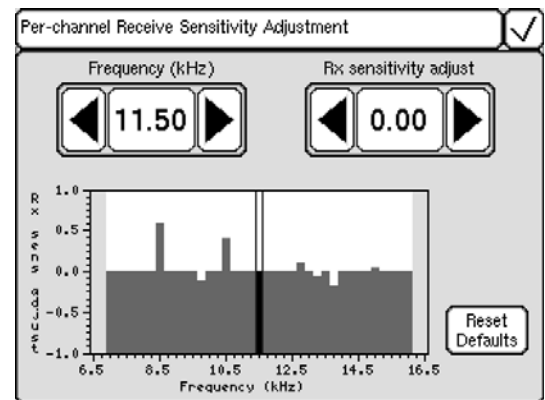


Figure 4-56 Receive Sensitivity Settings Graphically Displayed

Acquiring and Displaying Ranges with a UDB-9400M

Within a single timeout, the UDB-9400M can acquire, display and output on the COM2 serial port the ranges to any number of transponders that have reply frequencies in the operating frequency band of the deck box, in 250-Hz increments. Although ranges are determined from all the received replies, including multiple replies of the same frequency, filtering can be applied to block the display of ranges for replies of specific frequencies. In addition, the display of ranges for all but the first of the replies of the same frequency can be blocked. Ranges that are blocked from being displayed are not output on the COM2 serial port.

To display ranges:

1. Touch the Transpond Data function button:
The Transpond Data screen opens as shown in Figure 4-57.
2. Touch Transpond Options to open the Transpond Options pop-up if it is not already open as shown.



NOTE The Transpond Options pop-up includes the Change Settings button which opens the Transpond Parameters pop-up.

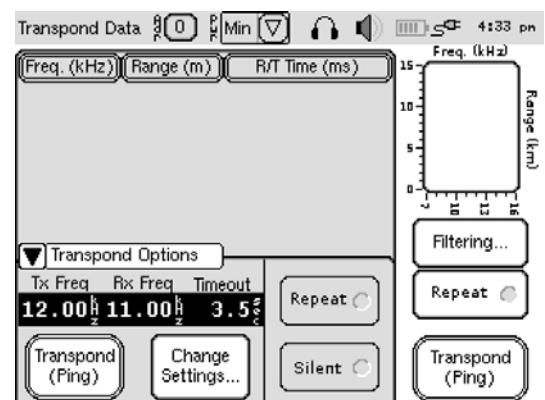


Figure 4-57 Transpond Data Screen for a UDB-9400M

3. Touch Filtering.

The Transponder Filter Editing pop-up opens as shown in Figure 4-58.



NOTE The Transponder Filter Editing pop-up can also be opened from the Release/Range screen by first touching Change Settings to open the Transpond Parameters pop-up, and then touching Filtering.

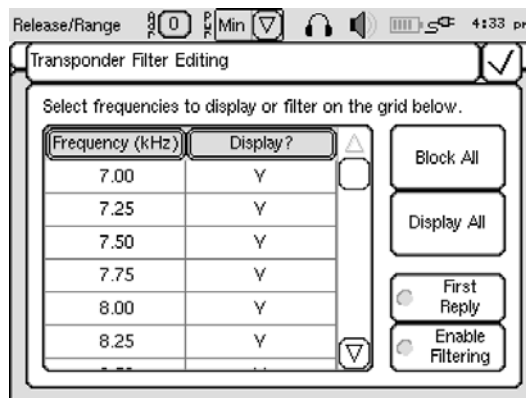


Figure 4-58 Transponder Filter Editing Pop-Up

4. Select the reply frequencies to block. Blocked frequencies will be received but will not be displayed or output on COM2.

If the frequency is hidden, tap the up or down arrow or drag the slider up or down to show it. To unblock a blocked frequency, select it again.

Blocked frequencies are highlighted as shown in Figure 4-59. They are also shown with an "N." Unblocked frequencies are unhighlighted and shown with a "Y."

To block all frequencies, Touch Block All; to unblock all frequencies, touch Display All.

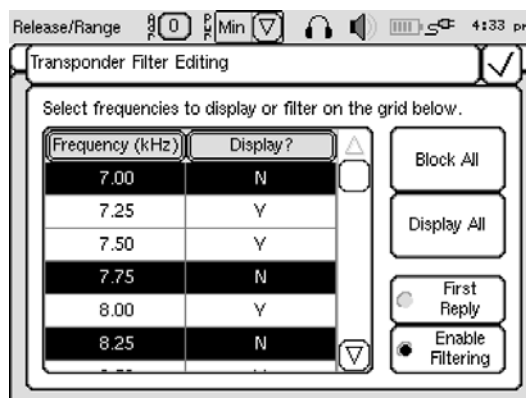


Figure 4-59 Transponder Filter Editing Pop-Up—Blocked Frequencies

5. To enable filtering, touch Enable Filtering. To disable filtering, touch Enable Filtering again. When enabled, the Filtering button on the Transpond Data screen is highlighted as an indication of the selection. Enable filtering must be selected to block all the selected frequencies.
6. To display only the first reply of the unblocked frequencies during a timeout, touch First Reply. To display all the replies, touch First Reply again.
7. Touch the check mark to close the Transponder Filter Editing pop-up and save the filter settings.

8. Touch Transpond (Ping).



NOTE The Transpond (Ping) button is available in the Transpond Options pop-up, which is in both the Transpond Data and Range/Release screens, and in the Transpond Data screen itself.

The deck box transmits a ping, the timeout begins, and the reply frequencies in kilohertz, the ranges in meters (or feet) and the round trip times in milliseconds are displayed as shown in Figure 4-60. Plots of the displayed frequencies versus range in kilometers also appear in the thumbnail graph. Tapping inside the graph changes the range scale. Four full scale ranges are available: 1, 5, 10, and 15 kilometers.

If the Transpond Options pop-up is open and it is desired to display more ranges, touch Transpond Options to close it as shown in Figure 4-61. When the display fills, a scroll bar appears which you can touch and drag up or down to view all the ranges.

9. To ping continuously and acquire ranges during each timeout, touch Repeat before the end of the timeout, or touch Repeat and then again touch Transpond (Ping). To stop pinging, touch Repeat again.

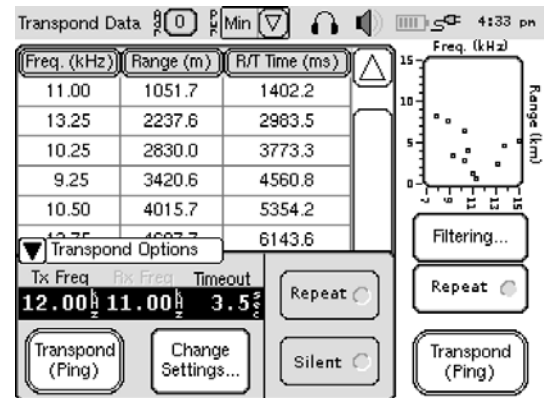


Figure 4-60 Transpond Data Screen—Displayed Ranges

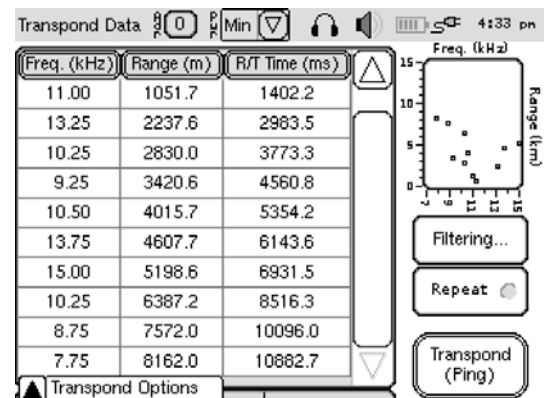


Figure 4-61 Transpond Data Screen—Transpond Options Pop-Up Closed

Acquiring and Displaying Ranges with a UDB-9400E

Within a single timeout, the UDB-9400E can acquire, display and output on the COM2 serial port the range to a transponder that has a reply frequency in the operating frequency band of the deck box, in 250-Hz increments.

To display ranges:

1. Touch the Transpond Data function button:
The Transpond Data screen opens as shown in Figure 4-62.
2. Touch Transpond Options to open the Transpond Options pop-up if it is not already open as shown.



NOTE The Transpond Options pop-up includes the Change Settings button which opens the Transpond Parameters pop-up.

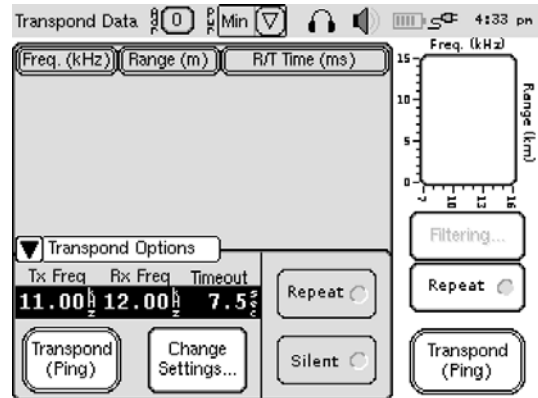


Figure 4-62 Transpond Data Screen for UDB-9400E

3. Touch Transpond (Ping).



NOTE The Transpond (Ping) button is available in the Transpond Options pop-up, which is in both the Transpond Data and Range/Release screens, and in the Transpond Data screen itself.

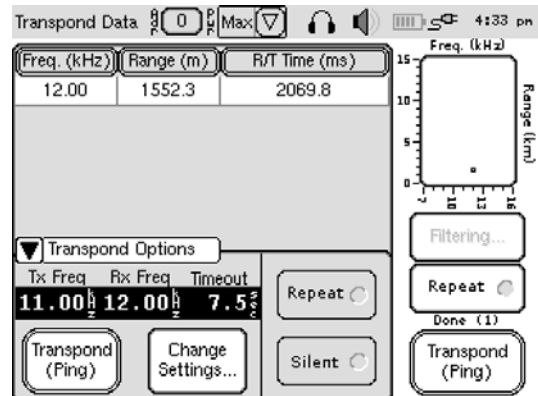


Figure 4-63 Transpond Data Screen for UDB-9400E—Displayed Ranges

The deck box transmits a ping, the timeout begins, and the reply frequency in kilohertz, the range in meters (or feet) and the round trip time in milliseconds are displayed as shown in Figure 4-63. A plot of the displayed frequency versus range in kilometers also appears in the thumbnail graph. Tapping inside the graph changes the range scale. Four full scale ranges are available: 1, 5, 10, and 15 kilometers.

If the Transpond Options pop-up is open and it is desired to display more ranges, touch Transpond Options to close it as shown in Figure 4-64. When the display fills, a scroll bar appears which you can touch and drag up or down to view all the ranges.

4. To ping continuously and acquire ranges during each timeout, touch Repeat before the end of the timeout, or touch Repeat and then again touch Transpond (Ping). To stop pinging, touch Repeat again.

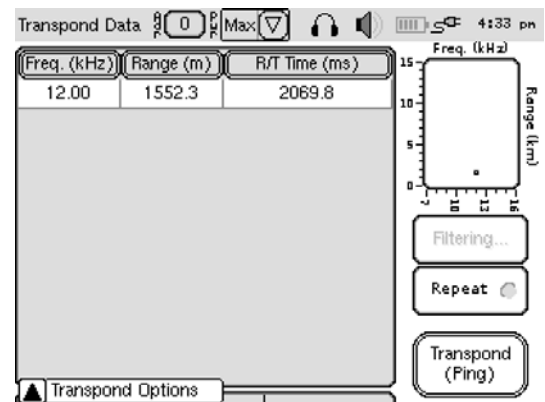


Figure 4-64 Transpond Data Screen for UDB-9400E—Transpond Options Pop-Up Closed

Acquiring and Displaying Ranges Continuously

Ranges can be acquired continuously by sending a ping at the end of each timeout. To acquire and display ranges continuously, acquire and display ranges as described in "Acquiring and Displaying Ranges with a UDB-9400M" on page 4-40 or "Acquiring and Displaying Ranges with a UDB-9400E" on page 4-43, and touch Repeat before touching Transpond (Ping). To stop pinging, touch Repeat again. This button is available both in the Transpond Options pop-up and in the Transpond Data screen.

Acquiring and Displaying Ranges using "Silent Ping"

Ranges can be acquired and displayed without transmitting a ping from the transducer connected to the UDB-9400. Instead, the deck box outputs a transmit sync, or "silent ping," on the AUX connector. This signal is used to trigger an external transmitter. For information on the AUX connector, refer to Section 3, "Installation and Setup."

To acquire and display ranges using silent ping, acquire and display ranges as described in "Acquiring and Displaying Ranges with a UDB-9400M" on page 4-40 or "Acquiring and Displaying Ranges with a UDB-9400E" on page 4-43, and touch Silent before touching Transpond (Ping). Touching Repeat will continuously send silent pings, one at the end of each timeout. To turn off silent ping, touch Silent again.

Sending Commands To Acoustic Releases

The wide low frequency 7–16 kHz (WLF) UDB-9400 Universal Deck Box can be used to send commands, including release commands, to any Teledyne Benthos manufactured acoustic release and pop-up buoy, and to send release commands to EdgeTech/EG&G, URI and GeoPro releases that operate in the operating frequency band of the deck box. Therefore except for the Benthos Smart Release/Modem, the transponder type selections in the drop-down list of the Release/Range screen are available *only* with the low frequency 7–16 kHz (WLF) UDB-9400 Universal Deck Box. Before sending commands, always ensure that the transducer is connected.

Sending Commands to Teledyne Benthos Acoustic Releases

In addition to release commands, for some Teledyne Benthos manufactured acoustic releases, transponder enable, disable and other commands can also be sent. However, the procedure to send all the commands is the same.

To send commands to Teledyne Benthos acoustic releases:

1. Touch the Release/Range function button.

The Release/Range screen opens.



Figure 4-65 Release/Range Screen—Benthos FSK Selected

2. Select Benthos FSK from the drop-down list as shown in Figure 4-65.

The Benthos FSK pop-up opens as shown in Figure 4-66.

3. Determine the receive frequency for the transponder, and then tap or touch and hold the left or right arrow to select this frequency in kilohertz.

This frequency is the deck box transmit frequency and it must be the same as the transponder receive frequency.

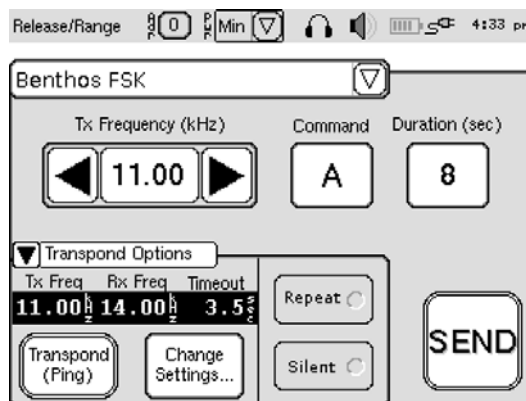


Figure 4-66 Benthos FSK Pop-Up

4. Determine the command code for the transponder. It will be one of 13 letters, A through M.
5. Touch the Command setting.
The command code keypad opens as shown in Figure 4-67.
6. Touch the required command code.
The keypad closes and the code is displayed as the Command setting.

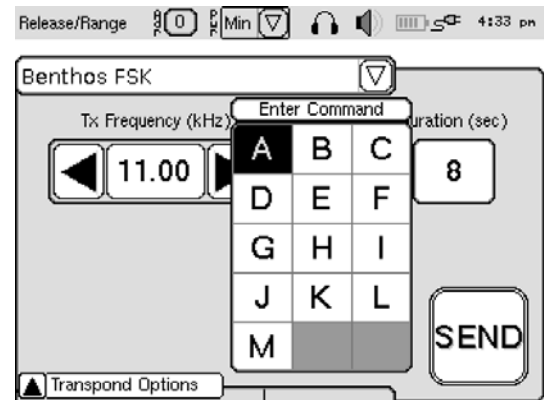


Figure 4-67 Command Code Keypad

7. Touch the Duration setting. A duration of 8 is recommended.
The duration keypad opens as shown in Figure 4-68.
8. Touch the required duration.
The keypad closes and the duration is displayed as the Duration setting.

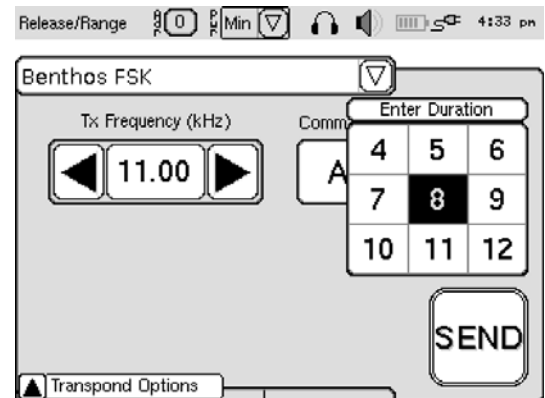


Figure 4-68 Duration Keypad



WARNING Before proceeding with the next step, verify that the command code is correct.

9. Touch—and hold—Send.
Three short beeps followed by a long beep will be heard, and then the Send button will become highlighted.



NOTE The command will be sent only after the Send button is released. To abort the command, continue to maintain contact with the touch screen display while sliding the finger completely off the Send button. The Send button will become unhighlighted. If the command successfully aborts, a pop-up will appear with the message "Transmission Aborted."

10. Release Send.

The command is sent and the Transpond Data screen opens. With this screen open—and after the command has been transmitted and any acknowledgements received—ranges can be acquired and displayed by touching Transpond (Ping). In addition, touching Repeat before touching Transpond (Ping) enables continuous ranging on a released transponder for tracking purposes. Refer to "Acquiring and Displaying Ranges with a UDB-9400M" on page 4-40 or "Acquiring and Displaying Ranges with a UDB-9400E" on page 4-43 for detailed instructions.



NOTE After sending a release command, the release will acknowledge that it has been released by transmitting four pings. Receipt of these pings is indicated by plots of frequency versus range in the thumbnail graph of the Transpond Data screen along with the display of the frequency, the ranges and the round trip times. The displayed ranges and round trip times should be disregarded, however, and if the frequency has been blocked (UDB-9400M only), no plots or displayed information will be present. Furthermore, as the frequency of each ping is the same and the round trip time increases for each ping, the plots in the graph will line up vertically.

Sending Commands to EdgeTech/EG&G Acoustic Releases

Release commands can be sent to EdgeTech/EG&G manufactured acoustic releases. In addition, other transponder command functions, if available, can be operated as long as the same type of command coding scheme is used.

To send commands to EdgeTech/
EG&G acoustic releases:


1. Touch the Release/Range function button.

The Release/Range screen opens.

2. Select EdgeTech/EG&G from the drop-down list as shown in Figure 4-69.

The EdgeTech/EG&G pop-up opens as shown in Figure 4-70.

3. Determine the release code for the transponder. It will be a six-digit number.

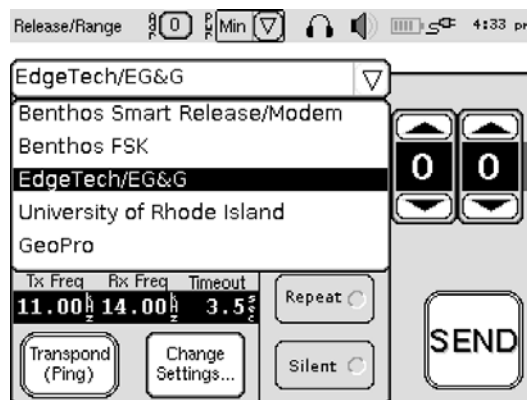

**Figure 4-69 Release/Range
Screen—EdgeTech/EG&G
Selected**

4. Tap or touch and hold the up or down arrow for each digit to enter the release code.



WARNING Before proceeding with the next step, verify that the release code is correct.

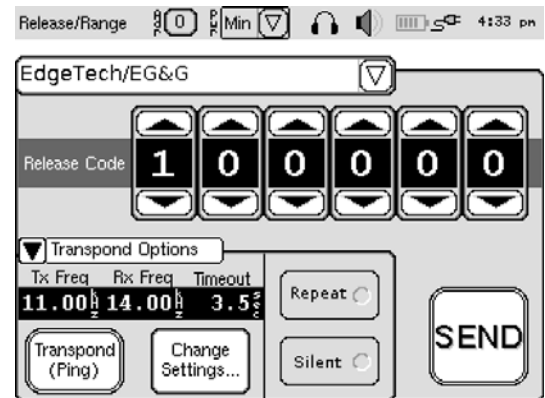


Figure 4-70 EdgeTech/EG&G Pop-Up

5. Touch—and hold—Send.

Three short beeps followed by a long beep will be heard, and then the Send button will become highlighted.



NOTE The command will be sent only after the Send button is released. To abort the command, continue to maintain contact with the touch screen display while sliding the finger completely off the Send button. The Send button will become unhighlighted. If the command successfully aborts, a pop-up will appear with the message "Transmission Aborted."

6. Release Send.

The command is sent and the Transpond Data screen opens. With this screen open—and after the command has been transmitted and any acknowledgements received—ranges can be acquired and displayed by touching Transpond (Ping). In addition, touching Repeat before touching Transpond (Ping) enables continuous ranging on a released transponder for tracking purposes. Refer to "Acquiring and Displaying Ranges with a UDB-9400M" on page 4-40 or "Acquiring and Displaying Ranges with a UDB-9400E" on page 4-43 for detailed instructions.



NOTE Refer to the EdgeTech/EG&G users manual for the specific response confirmation. Receipt of any ping is indicated by plots of frequency versus range in the thumbnail graph of the Transpond Data screen along with the display of the frequency, the ranges and the round trip times. The displayed ranges and round trip times should be disregarded, however, and if the frequency has been blocked (UDB-9400M only), no plots or displayed information will be present. Furthermore, as the frequency of each ping is the same and the round trip time increases for each ping, the plots in the graph will line up vertically.

Sending Commands to URI Acoustic Releases

Release commands can be sent to URI manufactured acoustic releases. In addition, other transponder command functions, if available, can be operated as long as the same type of command coding scheme is used.

To send commands to URI acoustic releases:

1. Touch the Release/Range function button.

The Release/Range screen opens.

2. Select University of Rhode Island from the drop-down list as shown in Figure 4-71.

The University of Rhode Island pop-up opens as shown in Figure 4-72.

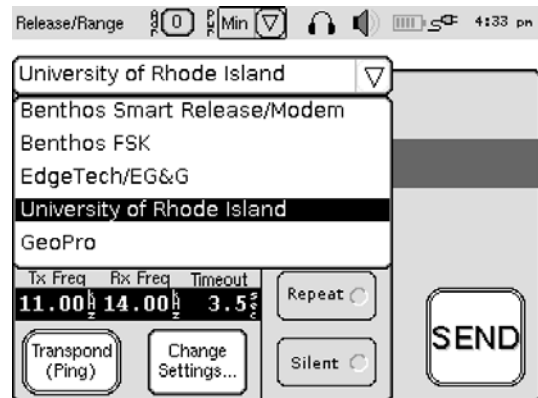


Figure 4-71 Release/Range Screen—University of Rhode Island Selected

3. Determine the release code for the transponder. It will be a two-digit number.
4. Tap or touch and hold the left or right arrow to enter the release code.

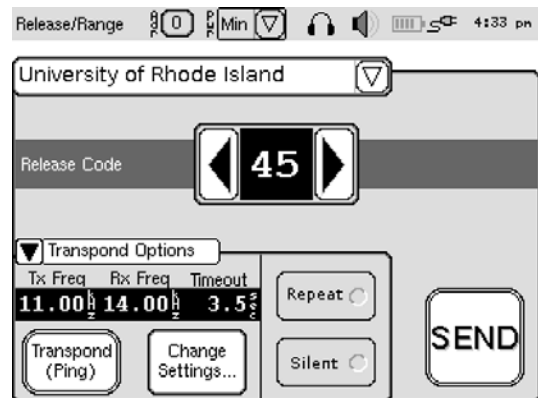


Figure 4-72 University of Rhode Island Pop-Up



WARNING Before proceeding with the next step, verify that the release code is correct.

5. Touch—and hold—Send.

Three short beeps followed by a long beep will be heard, and then the Send button will become highlighted.



NOTE The command will be sent only after the Send button is released. To abort the command, continue to maintain contact with the touch screen display while sliding the finger completely off the Send button. The Send button will become unhighlighted. If the command successfully aborts, a pop-up will appear with the message "Transmission Aborted."

6. Release Send.

The command is sent and the Transpond Data screen opens. With this screen open—and after the command has been transmitted and any acknowledgements received—ranges can be acquired and displayed by touching Transpond (Ping). In addition, touching Repeat before touching Transpond (Ping) enables continuous ranging on a released transponder for tracking purposes. Refer to "Acquiring and Displaying Ranges with a UDB-9400M" on page 4-40 or "Acquiring and Displaying Ranges with a UDB-9400E" on page 4-43 for detailed instructions.



NOTE Refer to the URI users manual for the specific response confirmation. Receipt of any ping is indicated by plots of frequency versus range in the thumbnail graph of the Transpond Data screen along with the display of the frequency, the ranges and the round trip times. The displayed ranges and round trip times should be disregarded, however, and if the frequency has been blocked (UDB-9400M only), no plots or displayed information will be present. Furthermore, as the frequency of each ping is the same and the round trip time increases for each ping, the plots in the graph will line up vertically.

Sending Commands to GeoPro Acoustic Releases

Release, enable and reset commands can be sent to GeoPro manufactured acoustic releases.

To send commands to GeoPro acoustic releases:

1. Touch the Release/Range function button.

The Release/Range screen opens.

2. Select GeoPro from the drop-down list as shown in Figure 4-73.

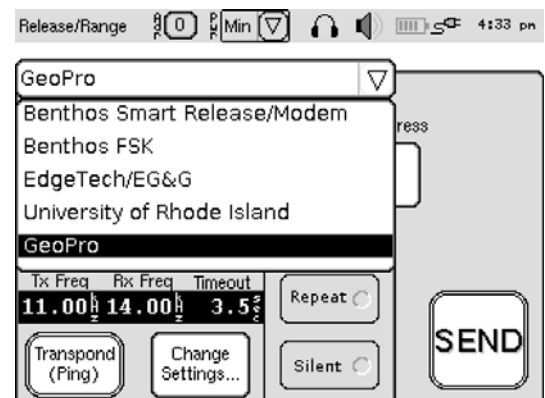


Figure 4-73 Release/Range Screen—GeoPro Selected

3. The GeoPro pop-up opens as shown in Figure 4-74. Select Enable, Release or Reset from the Command Type drop-down list as shown in Figure 4-75.

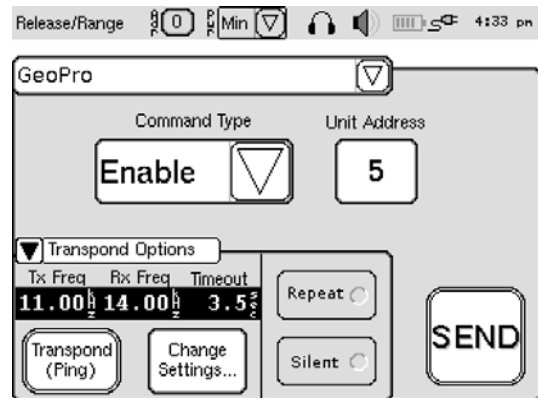


Figure 4-74 GeoPro Pop-Up

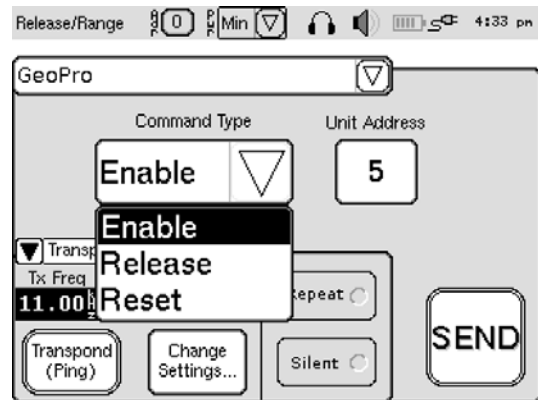


Figure 4-75 Command Type Menu

4. If the Command Type selection is *other* than Reset, determine the unit address for the transponder. It will be a number from 1 to 127. If the Command Type selection is Reset, go to Step 8.
5. Touch the Unit Address setting.
The unit address keypad opens as shown in Figure 4-76.
6. Touch the required unit address, and then touch OK.

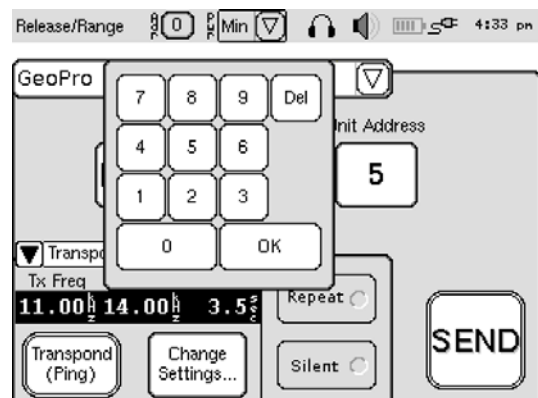


Figure 4-76 Unit Address Keypad

7. The keypad closes and the address is displayed as the Unit Address setting.



WARNING If the Command Type selection is *other* than Reset, verify that the unit address is correct before proceeding with the next step.

8. Touch—and hold—Send.

Three short beeps followed by a long beep will be heard, and then the Send button will become highlighted.



NOTE The command will be sent only after the Send button is released. To abort the command, continue to maintain contact with the touch screen display while sliding the finger completely off the Send button. The Send button will become unhighlighted. If the command successfully aborts, a pop-up will appear with the message "Transmission Aborted."

9. Release Send.

The command is sent and the Transpond Data screen opens. With this screen open—and after the command has been transmitted and any acknowledgements received—ranges can be acquired and displayed by touching Transpond (Ping). In addition, touching Repeat before touching Transpond (Ping) enables continuous ranging on a released transponder for tracking purposes. Refer to "Acquiring and Displaying Ranges with a UDB-9400M" on page 4-40 or "Acquiring and Displaying Ranges with a UDB-9400E" on page 4-43 for detailed instructions.



NOTE Refer to the GeoPro users manual for the specific response confirmation. Receipt of any ping is indicated by plots of frequency versus range in the thumbnail graph of the Transpond Data screen along with the display of the frequency, the ranges and the round trip times. The displayed ranges and round trip times should be disregarded, however, and if the frequency has been blocked (UDB-9400M only), no plots or displayed information will be present. Furthermore, as the frequency of each ping is the same and the round trip time increases for each ping, the plots in the graph will line up vertically.

5 Operation using Serial Interface Commands

This section provides instructions on how to send commands to the UDB-9400 Universal Deck Box and receive round trip travel times and status information using the same command set and syntax as that used for the DS-7000 Acoustic Deck Set. To perform this function, a serial port of a PC must be connected to the COM2 serial port of the UDB-9400, and the PC must be running a terminal program. Similarly, AT commands can be sent to the UDB-9400 from a PC connected to COM1. The deck box must also be set up and connected as described in Section 3, "Installation and Setup."

COM1 Serial Port Settings

Refer to the "ATM-900 Series Acoustic Telemetry Modems User's Manual" for the required configuration of the COM1 serial port. In addition, the manual provides descriptions of the AT commands and how to enter them.

COM2 Serial Port Settings

To communicate with the UDB-9400 over the COM2 serial port using the DS-7000 command set, the serial port configuration of the device communicating with the deck box, typically a PC, must match the serial port configuration of COM2. For instructions on how to configure the COM2 serial port, refer to "Configuring the Serial Ports" on page 4-12. When configuring the COM2 serial port the operation mode must also be set to DS-7000 Deck Box Emulation which is the default setting.

The default configuration of the COM2 serial port is as follows:

Baud rate:	9600
Data bits:	8
Parity:	None
Stop bits:	1
Duplex:	Half

Flow Control: None

Operation mode: DS-7000 Deck Box Emulation

Sending Commands and Receiving Data

For commands to be sent and for round trip travel times and status information to be received, the UDB-9400 must be on and an "@" prompt must be displayed on the monitor of the PC. To turn on the UDB-9400, switch the OFF/ON switch to ON.

There are two types of commands, commands that write and commands that read. Every command requires the entry of a two-character mnemonic. For a command that writes, the mnemonic must be followed by an equals sign (=) or a space, followed by one or more letters or numbers in accordance with a specified format, and then an Enter. For a command that reads, the mnemonic must be followed by an Enter. For both write and read commands, the results are displayed after the command is entered.

As a write command example, to set the transmit frequency, enter the command

TX=7.25 or TX 7.25

and then press Enter. The new transmit frequency is displayed:

TX=7.25

As a read command example, to display the transmit frequency, enter the command

TX

and then press Enter. The transmit frequency is displayed:

TX=7.25

Serial Commands

The read commands and their syntax and displayed response are listed in Table 5-1. The write commands and their syntax and displayed response are listed in Table 5-2.

Table 5-1 DS-7000 Read Commands

COMMAND NAME	MNEMONIC	RESPONSE
Receive Pulse Duration	RD	RD=#.## where x is 6.25 or 12.50 in ms
Receive Sensitivity	RS	RS=### where ### is 010 to 256 in standard deviations over average noise level
Version Information	VE	VE=s.s f.f where s.s is the display software version and f.f is the modem firmware version
Date	DA	DA=mm/dd/yy
Time	TI	TI=hh:mm:ss
Time Stamp	TS	TS=mm/dd/yy hh:mm:ss
Transmit Frequency	TX	TX=##.## where ##.## is the frequency in kilohertz in .25-kilohertz increments
Display Lockout	DL	DL=c where c is E for enabled or D for disabled
Power Output	PO	PO=# where # is 0 through 8
Repeat Interval	RI	RI=##.# where ##.# is 02.0 through 99.0
Repeat Ping Status	RP	RP=c where c is E for enabled or D for disabled
Silent Ping	SP	SP=c where c is E for enabled or D for disabled
Ping Duration	PD	PD=##.# where ##.# is 10.0 to 25.0
Ping Lockout	PL	PL=### where ### is 000 to 995 in steps of 5
First Reply	FR	FR=c where c is E for enabled or D for disabled
Turnaround Compensation	TC	TC=##.# where ##.# is 00.0 to 99.9 ms
Frequency Filter Status	FS	FS=c where c is E for enabled or D for disabled
Frequency Filter	FF	FF=##.## [##.##...] or FF=NONE where ##.## is the frequency in kilohertz in .25-kilohertz increments
Receive Sensitivity per Frequency	RA	RA=##.##=±#.## ##.##=±#.## ##.##=±#.##...for all frequencies in the operating frequency band of the deck box in .25-kHz increments

Table 5-1 DS-7000 Read Commands (Continued)

COMMAND NAME	MNEMONIC	RESPONSE
Reply	RT	RT=## rx.ff xxx.xxxx where ## is the ping identifier, rx.ff is the receive frequency, and xxx.xxxx is the reply time. ## will be 00 if no identifier was specified
Repetitive Ping Header	PR	PR=tx.ff c mm/dd/yy hh:mm:ss where tx.ff is the transmit frequency, and c is S for silent ping or N for normal ping.
List Ping Responses	LR	RT=## rx.ff xxx.xxxx for each ping in the buffer where ## is the ping identifier, rx.ff is the receive frequency, and xxx.xxxx is the reply time. ## will be 00 if no identifier was specified
System Status	SS	SS: TS=mm/dd/yy hh:mm:ss VE=s.s f.f FF=##.## ##.## ##.## ... ##.## FS=c RD=#.## RS=### RA=##.##=±#.## ##.##=±#.## ##.##=±#.##... PL=### SP=c RP=c RI=##.# FR=c TX=##.## PO=# PD=##.# TC=##.# DL=c

Table 5-2 DS-7000 Write Commands

COMMAND NAME	SYNTAX	RESPONSE
Receive Pulse Duration	RD ### or RD=###	RD= ### where x is 6.25 or 12.5 in milliseconds
Receive Sensitivity	RS ### or RS=###	RS=### where ### is 010 to 500
Date	DA mm/dd/yy or DA=mm/dd/yy	DA=mm/dd/yy
Time	TI hh:mm:ss or TI=hh:mm:ss	TI=hh:mm:ss
Transmit Frequency	TX ###.## or TX=###.##	TX=###.## where ###.## is the frequency in kilohertz in .25-kHz increments
Receive Sensitivity per Frequency	RA ###.##=±#.## or RA=###.##=±#.##	RA=###.##=±#.## where ###.## is the frequency to adjust in kHz, and ±#.## is the adjustment value from -1.00 to +1.00
Display Lockout	DL c or DL=c	DL=c where c is E for enabled or D for disabled
Power Output	PO # or PO=#	PO=# where # is 0 through 8
Repeat Interval	RI ##.# or RI=##.#	RI=##.# where ##.# is 03.5 through 35.0
Repeat Ping Status	RP c or RP=c	RP=c where c is E for enabled or D for disabled
Silent Ping	SP c or SP=c	SP=c where c is E for enabled or D for disabled
Ping Duration	PD ##.# or PD=##.#	PD=##.# where ##.# is 10.0 to 25.0
Ping Lockout	PL #### or PL=####	PL=#### where #### is 000 to 995 in steps of 5
Turnaround Compensation	TC ##.# or TC=##.#	TC=##.# where ##.# is 00.0 to 99.9 ms
Ping Command	PI or PI <id> or PI=<id>	PI=<id> tx.ff c mm/dd/yy hh:mm:ss where <id> is any string, tx.ff is the transmit frequency, and c is S for silent ping or N for normal ping. ## will be 00 if no identifier was specified
Frequency Filter Status	FS c or FS=c	FS=c where c is E for enabled or D for disabled

Table 5-2 DS-7000 Write Commands (Continued)

COMMAND NAME	SYNTAX	RESPONSE
Frequency Filter	FF ###.## ... ##.## or FF=###.##... ##.## or FF NONE or FF=NONE	FF=###.##... ##.## where ##.## is the frequency in kilohertz in .25-kHz increments or FF=NONE
Frequency Add	FA ###.## ... ##.## or FA=###.## ... ##.##	FA=###.## ... ##.## where ##.## is the frequency in kilohertz in .25-kHz increments
Frequency Delete	FD ###.## ... ##.## or FD=###.## ... ##.##	FD=###.## ... ##.## where ##.## is the frequency in kilohertz in .25-kHz increments
Send Command Code (for the wide low frequency 7–16 kHz (WLF) UDB-9400 Universal Deck Box only)	SC cc ##### or SC=cc #####	SC=cc <code> where cc and <code> are one of the following: ORE/Edgetech/EG&G Transponders: cc=ED, <code>= ##### (a 6-digit octal code). Benthos FSK Acoustic Releases: cc=BF, <code>=##.## x y where ##.## is the frequency in kHz, x is a letter code from A through M, and y is a duration in seconds between 4 and 12. Benthos Smart Release (with release motor): cc=BR, <code>=x y where x is the address of the release and y is a release code between 0 and 65535. Benthos Smart Modem (with burn wire): cc=BM, <code>=x y where x is the address of the release and y is a burn wire code between 0 and 65535. URI Releases: cc=RI, <code>=## where ## is a release code 0 through 63. GeoPro Releases: cc=GP, <code>=x ### where x is a letter code for the command type [E = enable, X = release, R = reset] and ### is the address of the unit to be commanded (1 to 127). If sending a reset command, the address doesn't matter, and 0 may be used or it may be omitted altogether.

6 Care and Maintenance

This section includes the recommended care and maintenance procedures for the UDB-9400 Universal Deck Box. Adherence to these recommendations will help to ensure years of continuous, reliable performance. The care and maintenance of the UDB-9400 encompasses general cleaning and inspection of the deck box, the transducer and its cable, and replacing the batteries for the portable configuration of the deck box. In addition, procedures are provided for calibrating the touch screen display and updating the UDB-9400 firmware.

Deck Box Cleaning and Inspection

The only required maintenance for the deck box, both the portable and rack mount configurations, is to occasionally clean the front panel, including the touch screen display, with a dampened, lint-free cloth or paper towel. In addition, for the portable configuration only, check the two vent ports for any obstructions and verify that the front panel screws are secure.

Transducer Cleaning and Inspection

After retrieving the transducer, clean and inspect it as follows:

1. Unplug the transducer cable from the transducer. Inspect and clean the cable.
2. Lubricate the transducer connector pins with a light coat of silicone lubricant, and then install the supplied dummy connector.



NOTE Be especially careful not to get any lubricant on the face of the transducer as this will severely degrade its performance.

3. Wash down the transducer with clean, *fresh* water and remove any debris that may have become attached to the housing.
4. Clean the transducer with a mild, non-abrasive detergent, being careful to remove any buildup. Do not use an ammonia-based cleaner such as glass cleaner. Wash the transducer again with fresh water.
5. Carefully inspect the transducer for any signs of damage.

Battery Maintenance and Charging

Depending on use, the life of the batteries in the UDB-9400 is typically two to five years. To prolong their life when storing of the UDB-9400, the deck box should be stored at a temperature of 10° C (50°F) or less. The batteries should also be charged when not in use. If stored for a long period in a discharged state, they may no longer be able to be charged. Therefore, when not in use, it is important that they be charged every six to nine months or sooner. When in use, they should be charged six to eight hours before and after service. The batteries automatically charge when the deck box is connected to power.

Replacing the Batteries

The UDB-9400 includes two rechargeable 12 VDC batteries. One is located just under the right side of the front panel, and the other on the left side. Both batteries are secured to an electronics chassis with removable battery brackets. A Phillips screw driver is the only tool required to replace the batteries.

To replace the batteries:

1. Remove the 10 front panel screws as shown in Figure 6-1.



Figure 6-1 Removing the Front Panel Screws

2. Grasp one of the connectors on the right side of the front panel, and then gently lift the edge of the panel away from the case as shown in Figure 6-2.



Figure 6-2 Lifting the Edge of the Front Panel

3. Lift the front panel and the electronics chassis out of the case, as shown in Figure 6-3.



Figure 6-3 Lifting the Front Panel and Electronics Chassis Out of the Case

4. Set the electronics chassis on its side and slightly loosen—but do not remove—the battery bracket screws, three screws for each bracket, as shown in Figure 6-4.

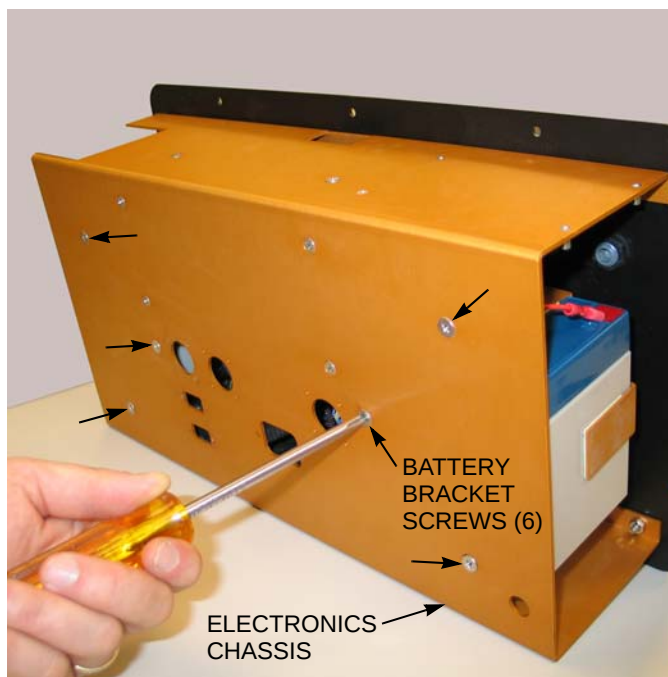


Figure 6-4 Loosening the Battery Bracket Screws

5. Rest the bottom of the electronics chassis over the edge of a table, one side of the chassis at a time, and then remove all six of the battery bracket screws as shown in Figure 6-5.
6. One at a time, slide each battery part way out of the electronics chassis and disconnect the wires from the battery terminals as shown in Figure 6-6.
7. Remove the battery bracket from each battery and install a new battery in each bracket.



Figure 6-5 Removing the Battery Bracket Screws

8. One at a time, slide each battery part way into the electronics chassis and connect the wires to the battery terminals.

For the battery on the left side of the deck box, which is the one shown in Figure 6-6, connect the red/white wire to the black battery terminal and the red wire to the red terminal.

For the battery on the right side of the deck box, connect the black wire to the black terminal and the red wire to the red terminal.

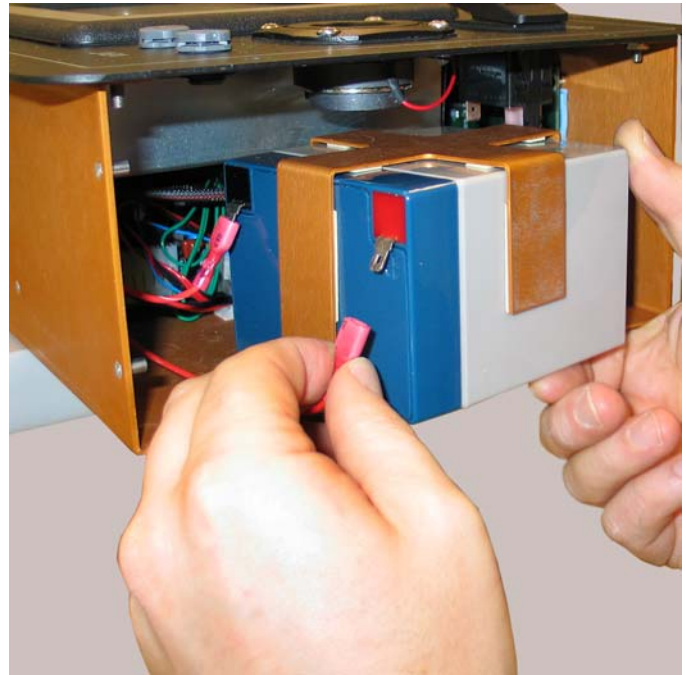


Figure 6-6 Disconnecting the Battery

9. Again rest the bottom of the electronics chassis over the edge of a table, one side of the chassis at a time, and then insert and securely tighten the six battery bracket mounting screws.

10. Examine the gasket inside the case. Be sure it is free of any debris or obstructions as shown in Figure 6-7.



Figure 6-7 Case Gasket

11. Carefully lower the electronics chassis into the case, being careful to ensure the battery brackets clear the inside rim as shown in Figure 6-8.
12. Install and securely tighten the 10 front panel screws.



Figure 6-8 Lowering the Electronics Chassis into the Case

Calibrating the Touch Screen Display

If when touching a control, it does not respond, the touch screen display may require calibration.

To calibrate the touch screen display:



NOTE If the UDB-9400 is currently turned off, touch and hold in the lower right corner of the screen while turning the deck box on. This method will open the calibration screen immediately.

1. Touch the Display function button.

The Display screen opens as shown in Figure 6-9.

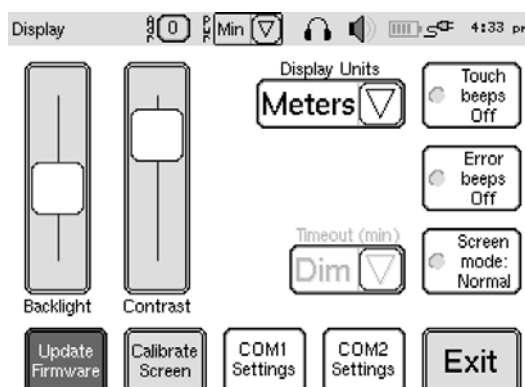


Figure 6-9 Display Screen

2. Touch Calibrate Screen.

The Confirm Screen Calibration pop-up opens as shown in Figure 6-10.

If any settings were changed, they will be lost after the screen calibration is complete. To save the settings, touch Cancel, touch the Save function button, and then repeat these two steps.

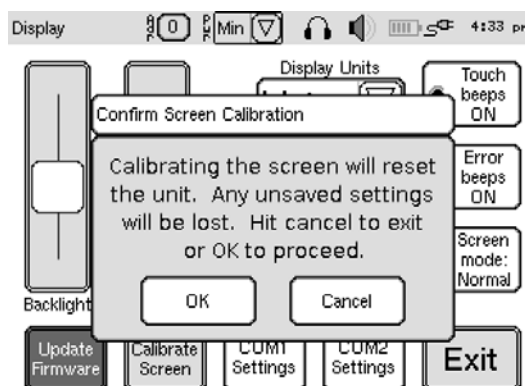


Figure 6-10 Confirm Screen Calibration Pop-Up

3. Touch OK.
4. Follow the instructions to touch each of the displayed crosses.

The UDB-9400 restarts and the opening screen is displayed.

Updating the UDB-9400 Firmware

The UDB-9400 firmware can be updated using the Qlarity Download Utility or using a terminal program capable of binary data transfers such as Procomm Plus or TeraTerm Pro. The Qlarity Download Utility is available on the included CD.

Updating the UDB-9400 Firmware Using the Qlarity Download Utility

To update the UDB-9400 firmware using the Qlarity Download Utility:

1. Verify that the deck box battery is fully charged or an uninterruptable AC power source is connected.
2. Start the QlarityDownloader.exe program.

The Qlarity Download Utility dialog box opens as shown in Figure 6-11.

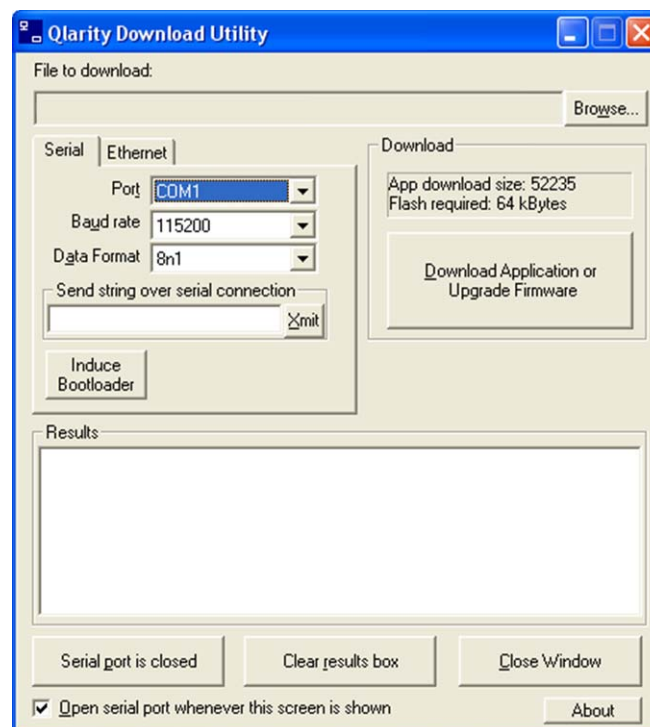


Figure 6-11 Qlarity Download Utility Dialog Box

3. Verify that the deck box is turned off.
4. Connect a serial cable to the COM2 port of the deck box and to an available RS-232 serial port on the PC.

5. Click the Serial tab, and then set up the PC's serial communications port as follows:

Port: COM1 (or available RS-232 serial port)

Baud Rate: 115200 baud

Data Format: 8n1

6. Click File Browser, and then select the new firmware, a file of extension *.bff*, to be uploaded to the display unit.
7. Click Induce Bootloader.

A pop-up window opens with the message "Entering bootloader. Connect the unit and cycle power."

8. Turn on the deck box.

The deck box should display a solid black screen, and the Results display in the Qlarity Download Utility dialog box should indicate that the bootloader has been entered as shown in Figure 6-12.

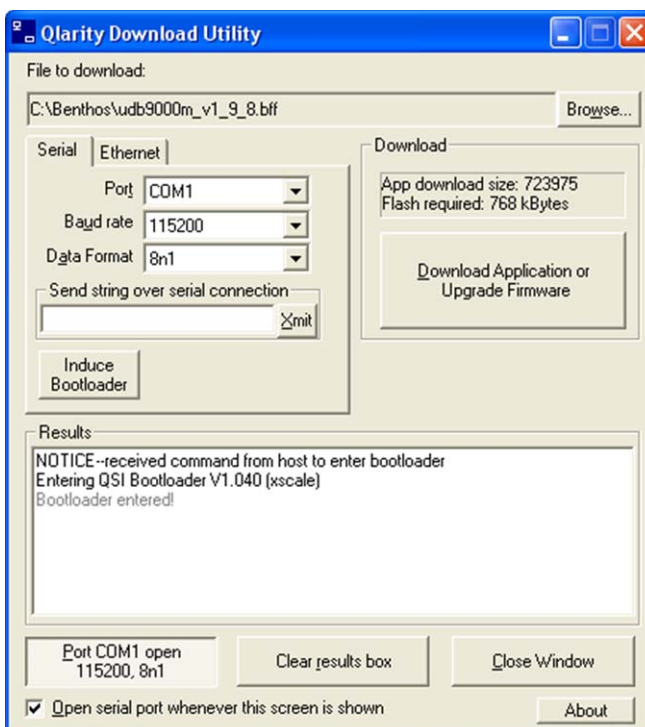


Figure 6-12 Qlarity Download Utility Dialog Box—Boot Loader Entered

9. Click Download Application or Upgrade Firmware.

The firmware will be programmed into the flash memory of the display. When the UDB-9400 reboots, you will see the display update the modem firmware. Once this process is complete the firmware is updated. Do not turn off the deck box until this process is complete.

Updating the UDB-9400 Firmware Using a Binary Data Transfer Program

Before updating the UDB-9400 firmware using a terminal program capable of binary data transfers such as Procomm Plus or TeraTerm Pro, set up the PC's serial communications port as follows:

Baud rate:	115,200
Data bits:	8
Parity:	None
Stop bit:	1
Flow control:	None
Transfer method:	RAW ASCII (Procomm Plus), or Send File with Binary selected (TeraTerm Pro)

To update the UDB-9400 firmware using a binary data transfer program:

1. Verify that the deck box battery is fully charged or an uninterruptable AC power source is connected.
2. Start TeraTerm Pro or Procomm Plus.
3. Touch the Display function button on the opening screen of the touch screen display as shown in Figure 6-13.

The Display screen opens as shown in Figure 6-14.

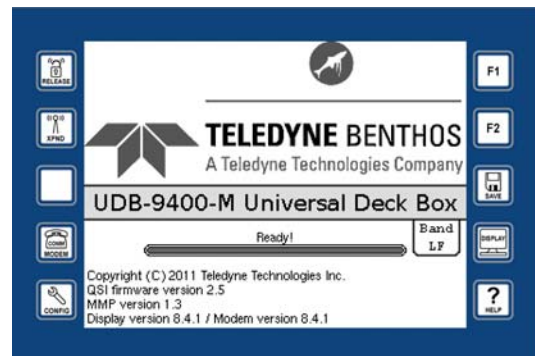


Figure 6-13 Opening Screen

4. Touch Update Firmware.

The Firmware Update screen opens as shown in Figure 6-15.

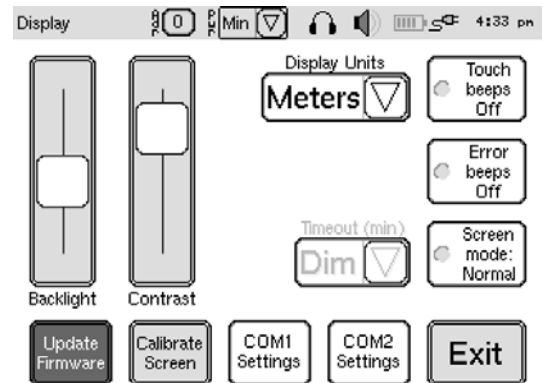


Figure 6-14 Display Screen

5. Click Display Firmware.

The Update Display Firmware pop-up opens as shown in Figure 6-16.

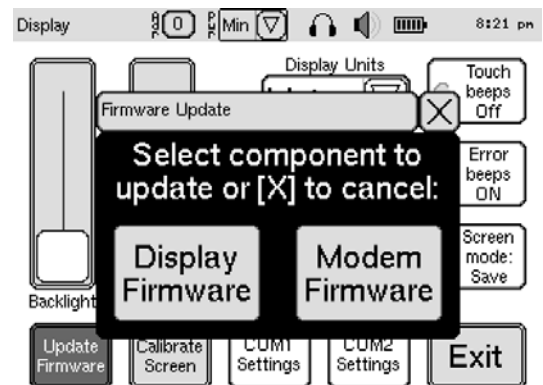


Figure 6-15 Firmware Update Screen

6. Click Go.

7. If using TeraTerm Pro, choose Send file from the File menu, select the Binary check box, and then open the new firmware, a file of extension *.bff*, to be uploaded to the display unit.

If using Procomm Plus, verify that RAW ASCII is selected, choose Send file from the Data menu, and then open the new firmware, a file of extension *.bff*, to be uploaded to the display unit.

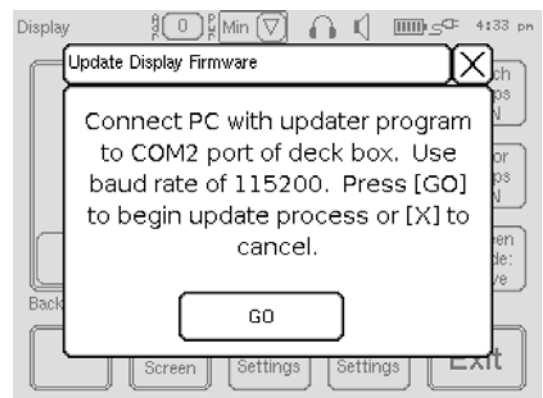


Figure 6-16 Update Display Firmware Pop-Up


The firmware will be programmed into the flash memory of the display. When the UDB-9400 reboots, you will see the display update the modem firmware. Once this process is complete the firmware is updated. Do not turn off the deck box until this process is complete.

7 Detailed Views


This section includes detailed assembly drawings of the UDB-9400 Universal Deck Box chassis and its front and rear panels. The drawings also include part numbers for the major components.


The included drawings are the following:

B-270-222	Assembly, Exploded, UDB Top
B-270-220	Assembly, Exploded, UDB Front Panel
B-270-221	Assembly, Exploded, UDB Chassis
B-270-219	Assembly, Exploded, UDB Transducer

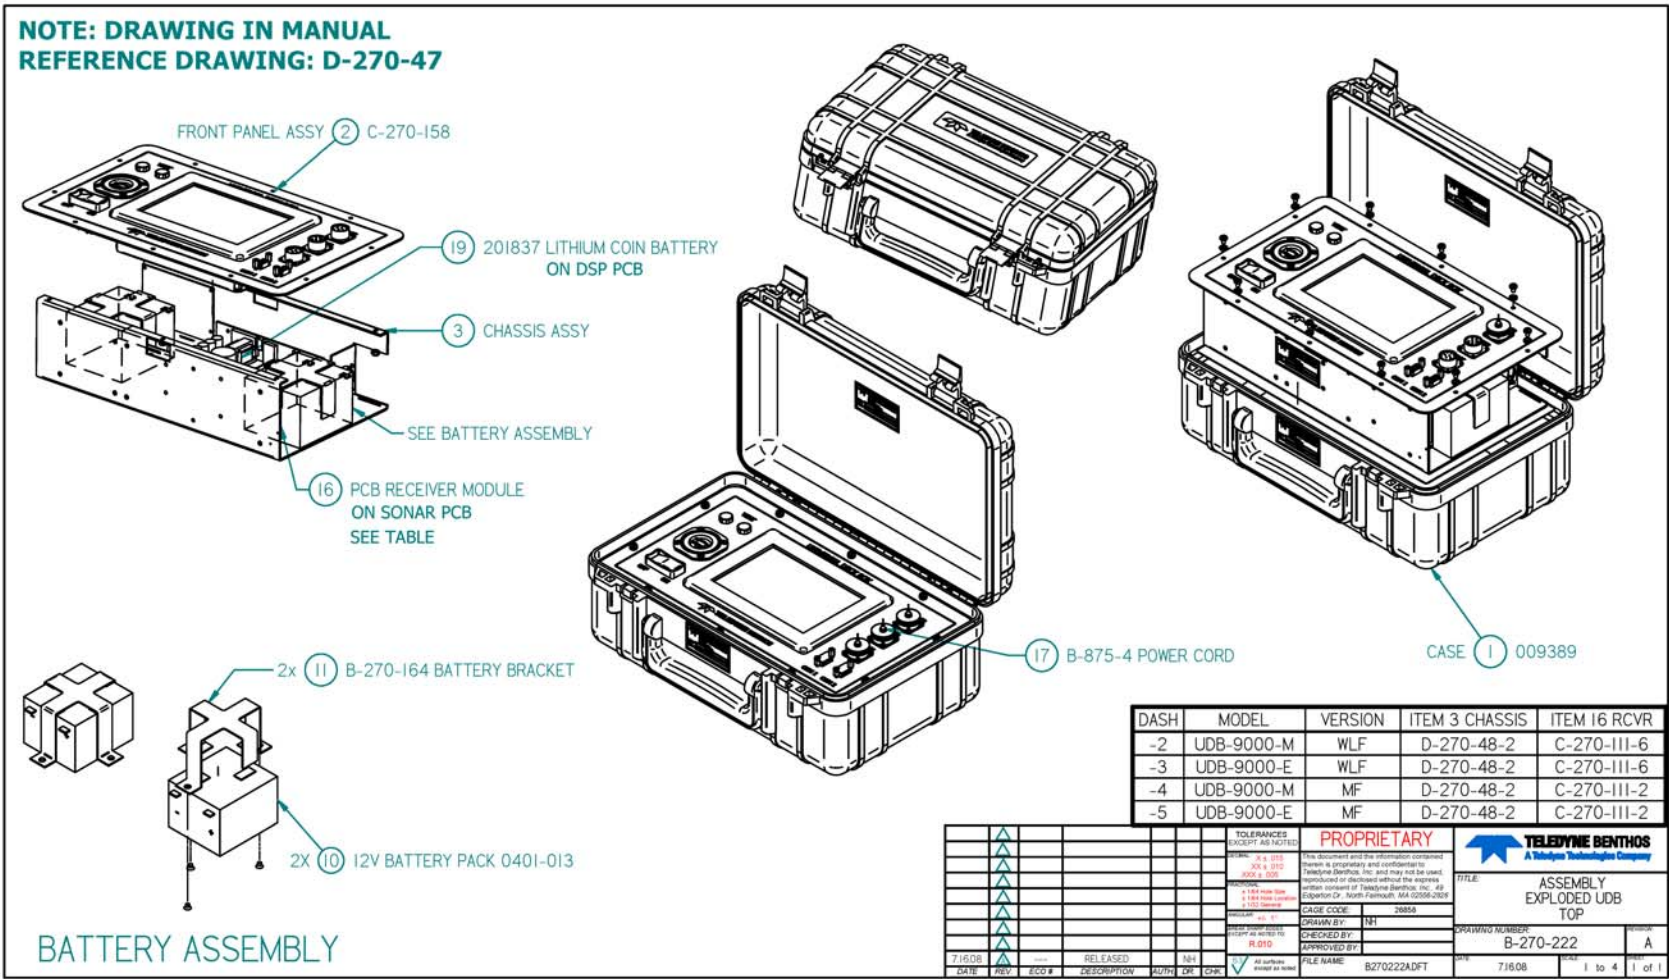


**NOTE: DRAWING IN MANUAL
REFERENCE DRAWING: C-270-158**

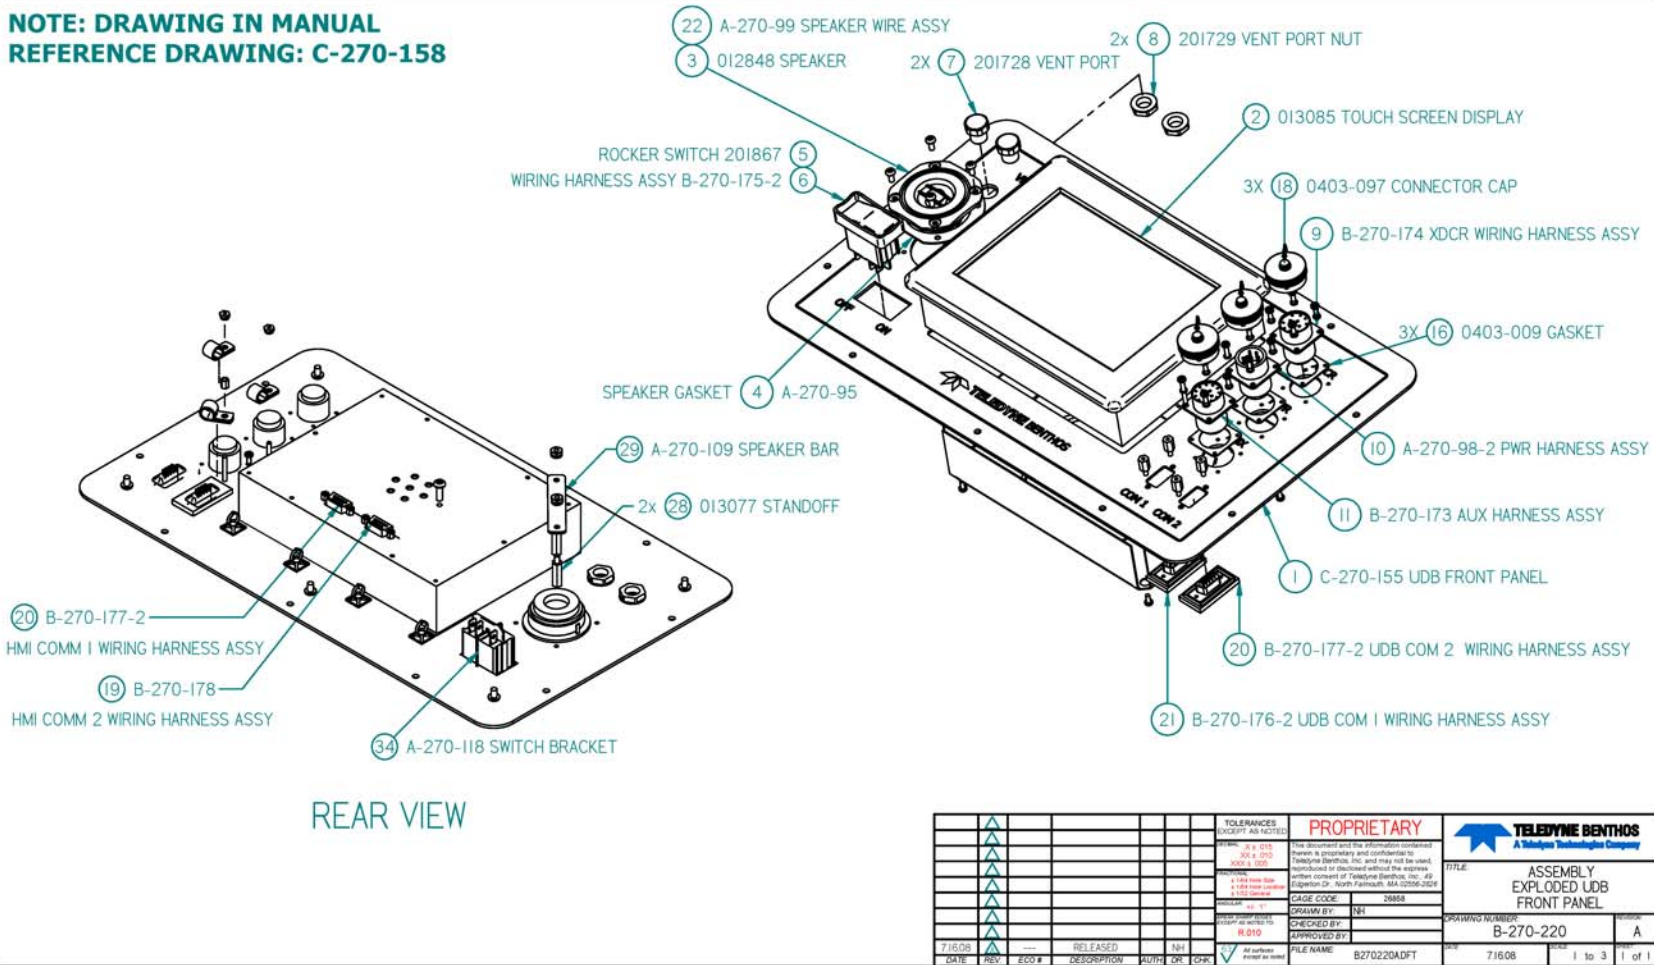

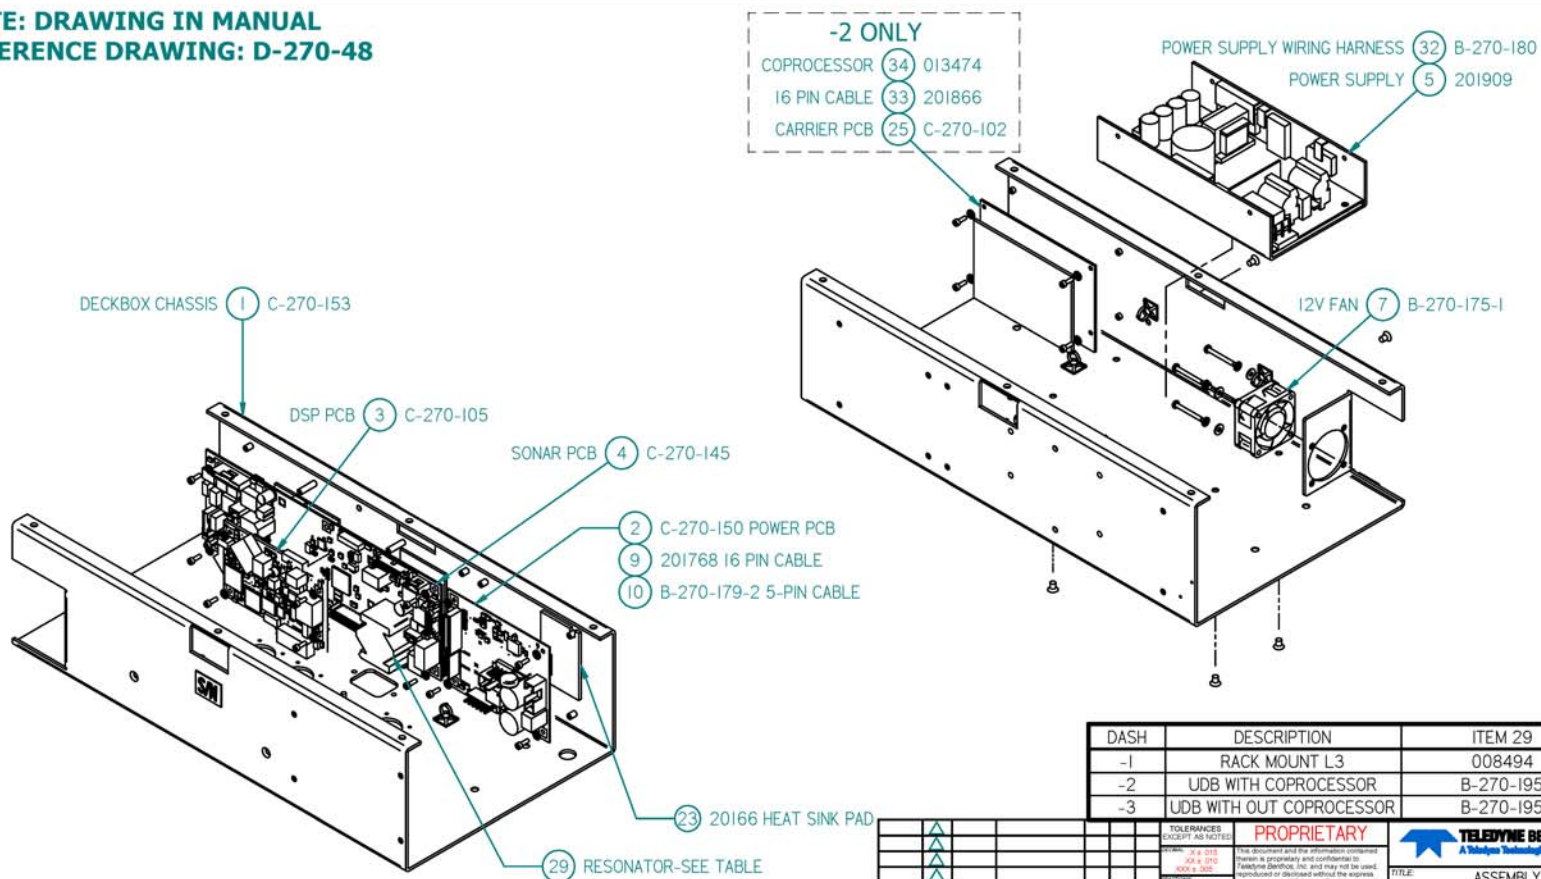


DASH	DESCRIPTION	ITEM 29
-1	RACK MOUNT L3	008494
-2	UDB WITH COPROCESSOR	B-270-195
-3	UDB WITH OUT COPROCESSOR	B-270-195
TOLERANCES EXCEPT AS NOTED UNLESS OTHERWISE SPECIFIED: FRACTIONS - ALL DIMENSIONS IN MILLIMETERS DECIMALS - ALL DIMENSIONS IN MILLIMETERS DIMENSIONS IN PARENTHESES ARE FOR INFORMATION ONLY DIMENSIONS IN PARENTHESES ARE FOR INFORMATION ONLY FINISHES - UNLESS OTHERWISE SPECIFIED: ALL SURFACES TO BE FINISHED TO A MINIMUM OF 60 RMS ALL SURFACES TO BE FINISHED TO A MINIMUM OF 60 RMS WELDING - UNLESS OTHERWISE SPECIFIED: ALL WELDS TO BE MADE TO THE REQUIREMENTS OF AWS D1.1 ALL WELDS TO BE MADE TO THE REQUIREMENTS OF AWS D1.1 PROPRIETARY This document and the information contained therein are the confidential and proprietary information of TELEDYNE BENTHOS, INC. and may not be used, reproduced or disclosed without the written consent of TELEDYNE BENTHOS, INC. All Rights Reserved © 1994 TELEDYNE BENTHOS, INC.  TELEDYNE BENTHOS <i>A Telephon Technologies Company</i>		
TITLE		ASSEMBLY EXPLODED UDB CHASSIS
DRAWN BY: NH		CHECKED BY: R.010
APPROVED BY:		DATE: 10-1-94
FILE NAME: BZ70221ADFT		REVISION: 1 of 1
CROSSING NUMBER: 716.08		QUANTITY: 1 to 3 of 1 of 1

**NOTE: DRAWING IN MANUAL
REFERENCE DRAWING: C-270-167**

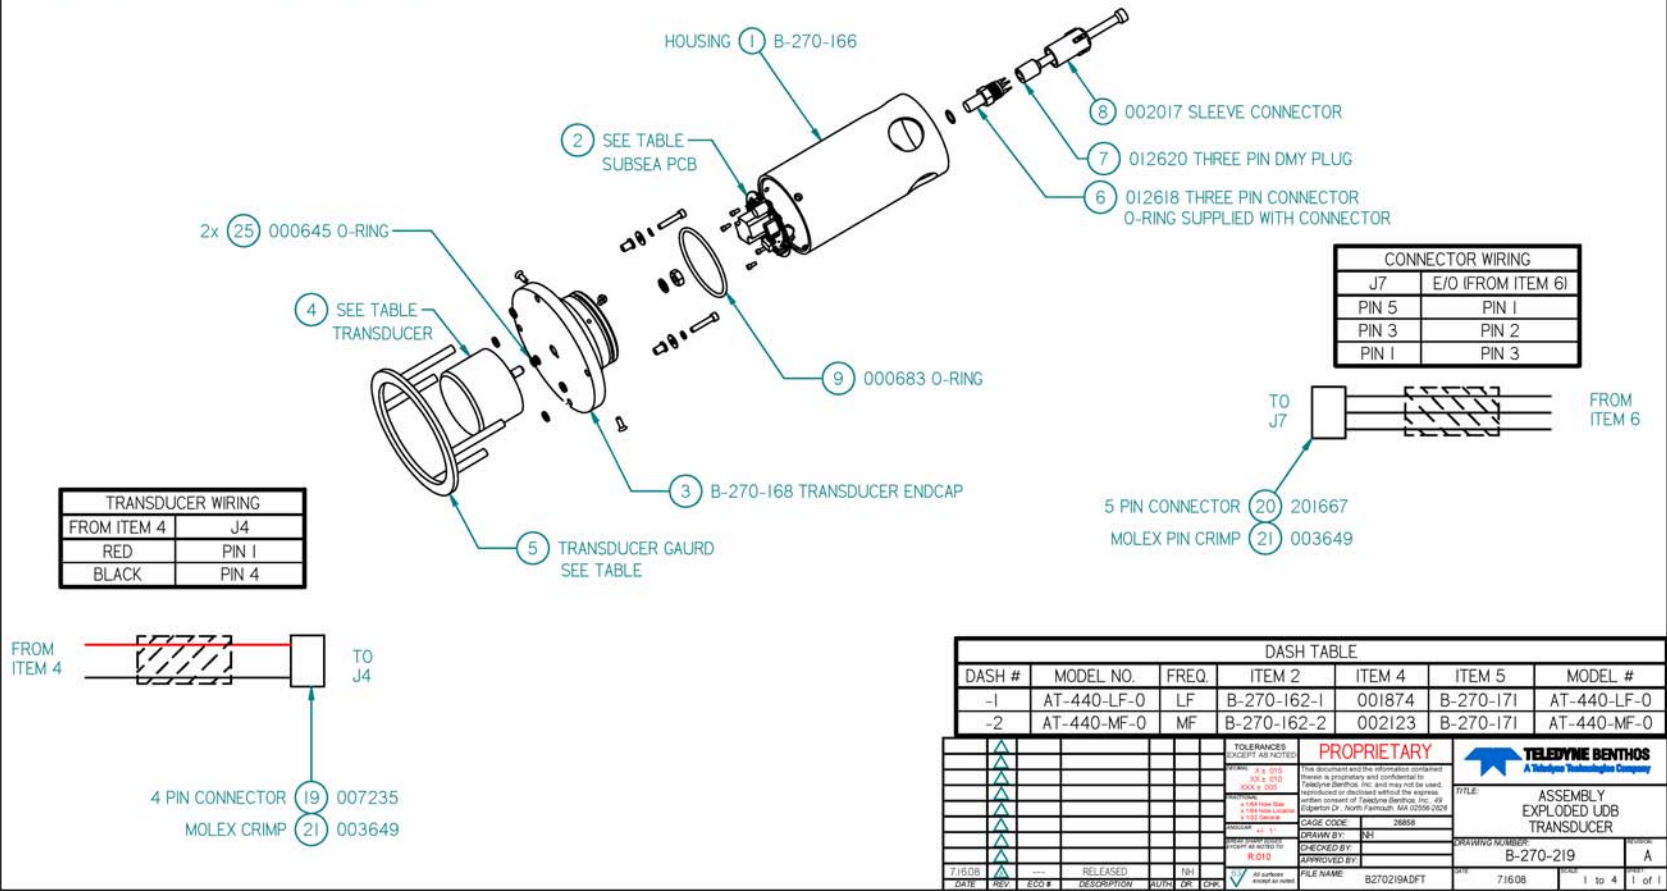

8 Part Number Designator

The UDB-9400 Universal Deck Box uses an identification number scheme that allows the model number to be used as the part number. This method simplifies the ordering and support processes. To designate the part number for a deck box specification, follow the legend shown in Figure 8-1 on page 8-2.

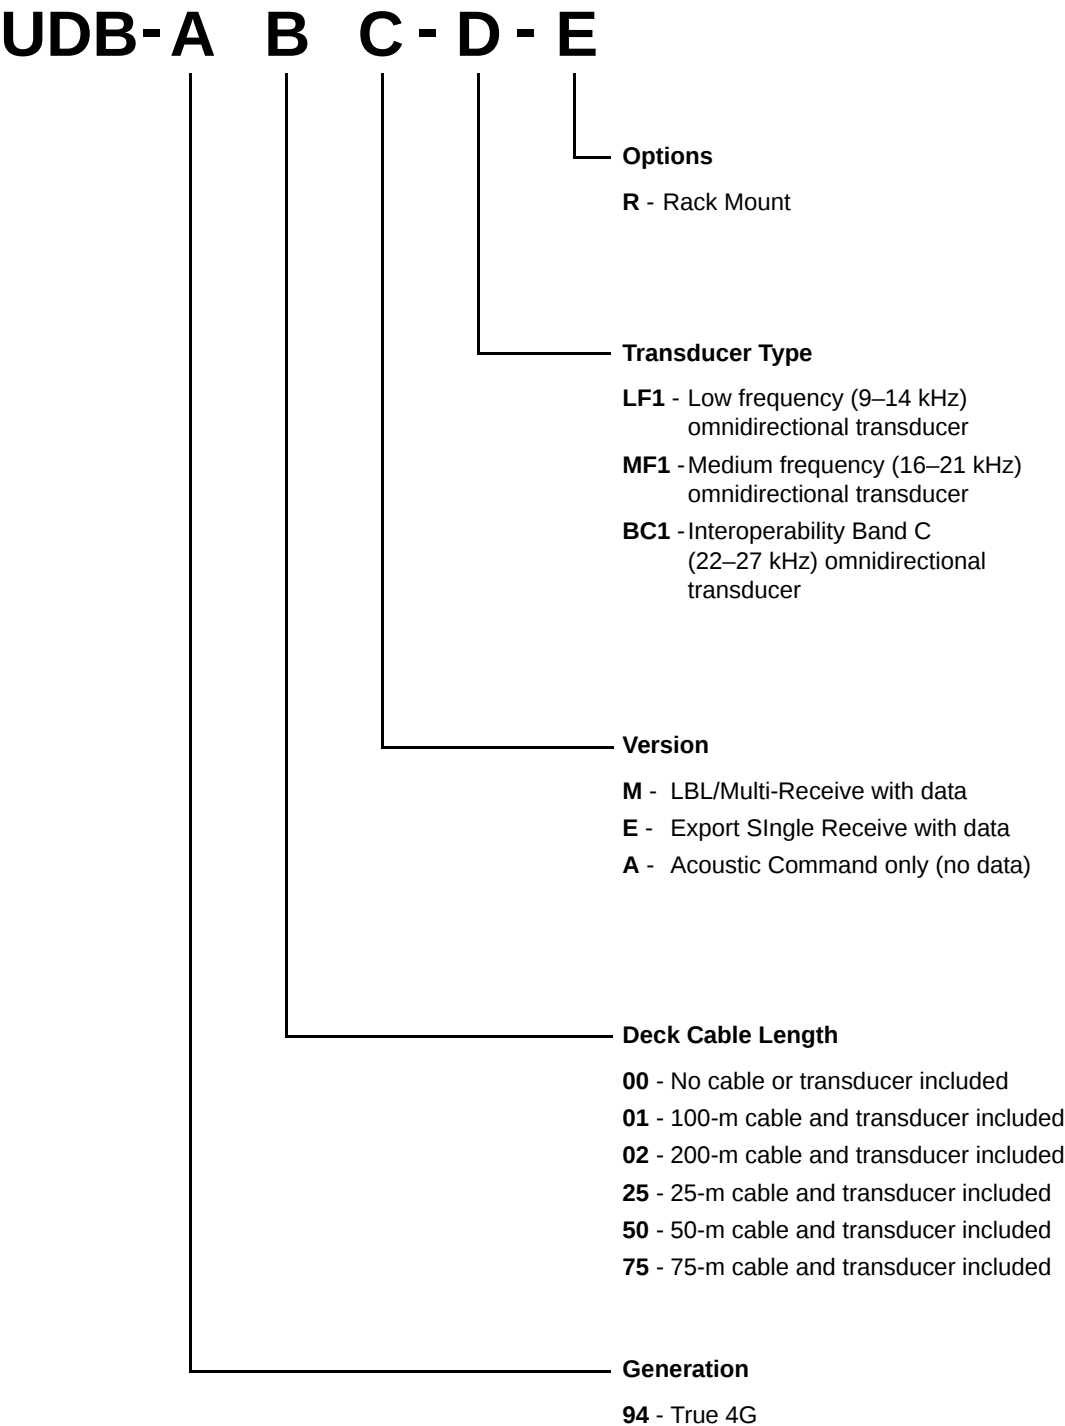

NOTE: Specification designators A through D are required, whereas specification designator E is for the option.

Figure 8-1 UDB-9400 Universal Deck Box Part Number Designator Legend