
SimplIQ_{Line}

Piccolo Analog Servo Drive Installation Guide



July 2014 (Ver. 2.301)



www.elmomc.com

Notice

This guide is delivered subject to the following conditions and restrictions:

- This guide contains proprietary information belonging to Elmo Motion Control Ltd. Such information is supplied solely for the purpose of assisting users of the Piccolo servo drive in its installation.
- The text and graphics included in this manual are for the purpose of illustration and reference only. The specifications on which they are based are subject to change without notice.
- Elmo Motion Control and the Elmo Motion Control logo are trademarks of Elmo Motion Control Ltd.
- Information in this document is subject to change without notice.


Document no. MAN-PICIG (Ver. 2.301)

Copyright © 2014

Elmo Motion Control Ltd.

All rights reserved.

Catalog Number

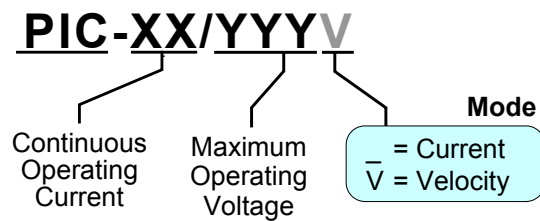

Revision History

Version	Date	Details
Ver. 1.0	May 1999	Initial release
Ver. 2.0	May 2003	Manual name revised to <i>Piccolo User Guide</i> and look updated
Ver. 2.1	Aug 2004	50 VDC models upgraded to 60 VDC models
Ver. 2.2	Apr 2008	Updated Power Ratings Table in Appendix
Ver. 2.201	Feb 2013	Updated Section 3.3: Piccolo Dimensions
Ver. 2.300	Apr 2013	Formatted according to the new template Updated Section 5.2: Electrical Specifications
Ver. 2.301	July 2014	General format updates

Elmo Worldwide

Head Office

Elmo Motion Control Ltd.

60 Amal St., P.O. Box 3078, Petach Tikva 49516
Israel

Tel: +972 (3) 929-2300 • Fax: +972 (3) 929-2322 • info-il@elmomc.com

North America

Elmo Motion Control Inc.

42 Technology Way, Nashua, NH 03060
USA

Tel: +1 (603) 821-9979 • Fax: +1 (603) 821-9943 • info-us@elmomc.com

Europe

Elmo Motion Control GmbH

Hermann-Schwer-Strasse 3, 78048 VS-Villingen
Germany

Tel: +49 (0) 7721-944 7120 • Fax: +49 (0) 7721-944 7130 • info-de@elmomc.com

China

Elmo Motion Control Technology (Shanghai) Co. Ltd.

Room 208, Building 2, Tlan'An, High Tech Industrial Plaza, Guangzhou 511400,
No. 555 PanYuDaDao, China

Cell: +86-13570712041 (Shi Zhonglin) • info-asia@elmomc.com

Asia Pacific

Elmo Motion Control APAC Ltd.

B-601 Pangyo Innovalley, 621 Sampyeong-dong, Bundang-gu, Seongnam-si, Gyeonggi-do,
South Korea (463-400)

Tel: +82-31-698-2010 • Fax: +82-31-801-8078 • info-asia@elmomc.com

Table of Contents

Chapter 1: Safety Information	7
1.1. Warnings.....	8
1.2. Cautions.....	8
1.3. Directives and Standards.....	9
1.4. CE Marking Conformance.....	9
1.5. Warranty Information	9
Chapter 2: Product Description	10
2.1. Drive Description	10
2.2. Standard Features	10
2.3. Fault Protection	11
2.4. System Architecture	12
2.5. How to Use this Guide	13
Chapter 3: Installation	14
3.1. Site Requirements	14
3.2. Unpacking the Drive Components.....	14
3.3. Dimensions	15
3.4. Mounting the Piccolo	16
3.4.1. Mounting the Heatsink.....	16
3.4.2. Mounting on the PC Board	16
3.5. Wiring the Piccolo.....	17
3.6. Connections.....	18
3.6.1. Pin Functions	18
3.6.1.1. Power.....	18
3.6.1.2. J1 Connector	19
3.6.1.3. J2 Connector	20
3.6.1.4. J3 Connector	21
3.6.2. Connecting a Non-isolated Piccolo to an Isolating Power Transformer.....	21
3.7. DC Power Supply	22
Chapter 4: Servo Control Operation	23
4.1. Current Command Input	23
4.2. CFM.....	23
4.3. Current Gain Control (CGC)	24
4.4. External Current Limit - Continuous (ECLC).....	25
4.4.1. External Voltage.....	25
4.4.2. External Resistor	25
4.5. External Current Limit - Peak (ECLP).....	25
4.5.1. External Voltage.....	25
4.5.2. External Resistor	26

4.6.	Latch Mode (LM)	26
4.7.	“30/60” Hall Sensor Selector (SEL)	26
4.8.	Amplifier Enable Logic	26
4.9.	Status Indications	27
Chapter 5: Technical Specifications		28
5.1.	Power Ratings	28
5.2.	Electrical Specifications	29
5.3.	Mechanical Specifications	29
5.4.	Environmental Conditions	30
5.5.	Compliance with Standards	31

Chapter 1: Safety Information

In order to operate the Piccolo servo drive safely, it is imperative that you implement the safety procedures included in this installation guide. This information is provided to protect you and to keep your work area safe when operating the Piccolo and accompanying equipment.

Please read this chapter carefully, before you begin the installation process.

Before you start, make sure that all system components are connected to earth ground. Electrical safety is provided through a low-resistance earth connection.

Only qualified personnel may install, adjust, maintain and repair the servo drive. A qualified person has the knowledge and authorization to perform tasks such as transporting, assembling, installing, commissioning and operating motors.

The Piccolo servo drive contains electrostatic-sensitive components that can be damaged if handled incorrectly. To prevent any electrostatic damage, avoid contact with highly insulating materials, such as plastic film and synthetic fabrics. Place the product on a conductive surface and ground yourself in order to discharge any possible static electricity build-up.

To avoid any potential hazards that may cause severe personal injury or damage to the product during operation, keep all covers and cabinet doors shut.

The following safety symbols are used in this manual:



Warning:

This information is needed to avoid a safety hazard, which might cause bodily injury.



Caution:

This information is necessary for preventing damage to the product or to other equipment.



1.1. Warnings

- To avoid electric arcing and hazards to personnel and electrical contacts, never connect/disconnect the servo drive while the power source is on.
- Disconnect the Piccolo from all voltage sources before it is opened for servicing.
- The Piccolo servo drive contains grounding conduits for electric current protection. Any disruption to these conduits may cause the instrument to become hot (live) and dangerous.
- After shutting off the power and removing the power source from your equipment, wait at least 1 minute before touching or disconnecting parts of the equipment that are normally loaded with electrical charges (such as capacitors or contacts). It is recommended to measure the electrical contact points with a meter before touching the equipment.



1.2. Cautions

- The Piccolo servo drive contains hot surfaces and electrically-charged components during operation.
- The maximum DC power supply connected to the instrument must comply with the parameters outlined in this guide.
- When connecting to Piccolo to an approved isolated 24 VDC auxiliary power supply, connect it through a line that is separated from hazardous live voltages using reinforced or double insulation in accordance with approved safety standards.
- Before switching on the Piccolo, verify that all safety precautions have been observed and that the installation procedures in this manual have been followed.
- Do not clean any of the Piccolo drive's soldering with solvent cleaning fluids of pH greater than 7 (8 to 14). The solvent corrodes the plastic cover causing cracks and eventual damage to the drive's PCBs.

Elmo recommends using the cleaning fluid Vigon-EFM which is pH Neutral (7).

For further technical information on this recommended cleaning fluid, select the link:

http://www.zestron.com/fileadmin/zestron.com-usa/daten/electronics/Product_TI1s/TI1-VIGON_EFM-US.pdf

1.3. Directives and Standards

The Piccolo conforms to the following industry safety standards:

Safety Standard	Item
Approved IEC/EN 61800-5-1, Safety	Adjustable speed electrical power drive systems
Recognized UL 508C	Power Conversion Equipment
In compliance with UL 840	Insulation Coordination Including Clearances and Creepage Distances for Electrical Equipment
In compliance with UL 60950-1 (formerly UL 1950)	Safety of Information Technology Equipment Including Electrical Business Equipment
In compliance with EN 60204-1	Low Voltage Directive 73/23/EEC

The Piccolo servo drive has been developed, produced, tested and documented in accordance with the relevant standards. Elmo Motion Control is not responsible for any deviation from the configuration and installation described in this documentation. Furthermore, Elmo is not responsible for the performance of new measurements or ensuring that regulatory requirements are met.

1.4. CE Marking Conformance

The Piccolo servo drive is intended for incorporation in a machine or end product. The actual end product must comply with all safety aspects of the relevant requirements of the European Safety of Machinery Directive 98/37/EC as amended, and with those of the most recent versions of standards EN 60204-1 and EN 292-2 at the least.

According to Annex III of Article 13 of Council Directive 93/68/EEC, amending Council Directive 73/23/EEC concerning electrical equipment designed for use within certain voltage limits, the Piccolo meets the provisions outlined in Council Directive 73/23/EEC. The party responsible for ensuring that the equipment meets the limits required by EMC regulations is the manufacturer of the end product.

1.5. Warranty Information

The products covered in this manual are warranted to be free of defects in material and workmanship and conform to the specifications stated either within this document or in the product catalog description. All Elmo drives are warranted for a period of 12 months from the time of installation, or 18 months from time of shipment, whichever comes first. No other warranties, expressed or implied — and including a warranty of merchantability and fitness for a particular purpose — extend beyond this warranty.

Chapter 2: Product Description

This installation guide describes the Piccolo servo drive and the steps for its wiring, installation and power-up. Following these guidelines ensures optimal performance of the drive and the system to which it is connected.

2.1. Drive Description

The Piccolo series of miniature servo amplifiers is designed for DC brushless motors and incorporates custom mixed analog/digital ICs and a hybrid power stage. The basic configuration is a current mode amplifier targeting the OEM market. As such, no trimmers are used in the basic version. The Piccolo amplifier meets UL508c and the relevant CE regulations.

The Piccolo power stage is implemented on a single ceramic substrate. This design enables very high thermal conductivity, high current carrying capacity, improved EMC and good mechanical strength. The control section is implemented by dedicated custom ICs that contribute to enhanced performance.

2.2. Standard Features

- Operation in current mode (velocity mode option available)
- Internal DC-to-DC converter, which allows for operation from a single supply
- Zero deadband
- Excellent linearity
- One differential input
- Motor current monitor
- Current gain change for low inductance motors
- Remote current gain control
- Current feedback multiplier for low current motors
- Status indication and remote control functions by four open collector transistors
- External continuous and peak current-limit adjustments
- Interface via soldering pins
- Package: plated-copper base plate, plastic housing, UL94V0 recognized
- Ultra-compact size

2.3. Fault Protection

The Piccolo includes built-in protection against possible fault conditions, including:

- Shorts between the outputs or between each output and the power input/return
- Over-temperature
- Under/over voltage
- Failure of internal power supplies
- Latch mode for each protective feature

2.4. System Architecture

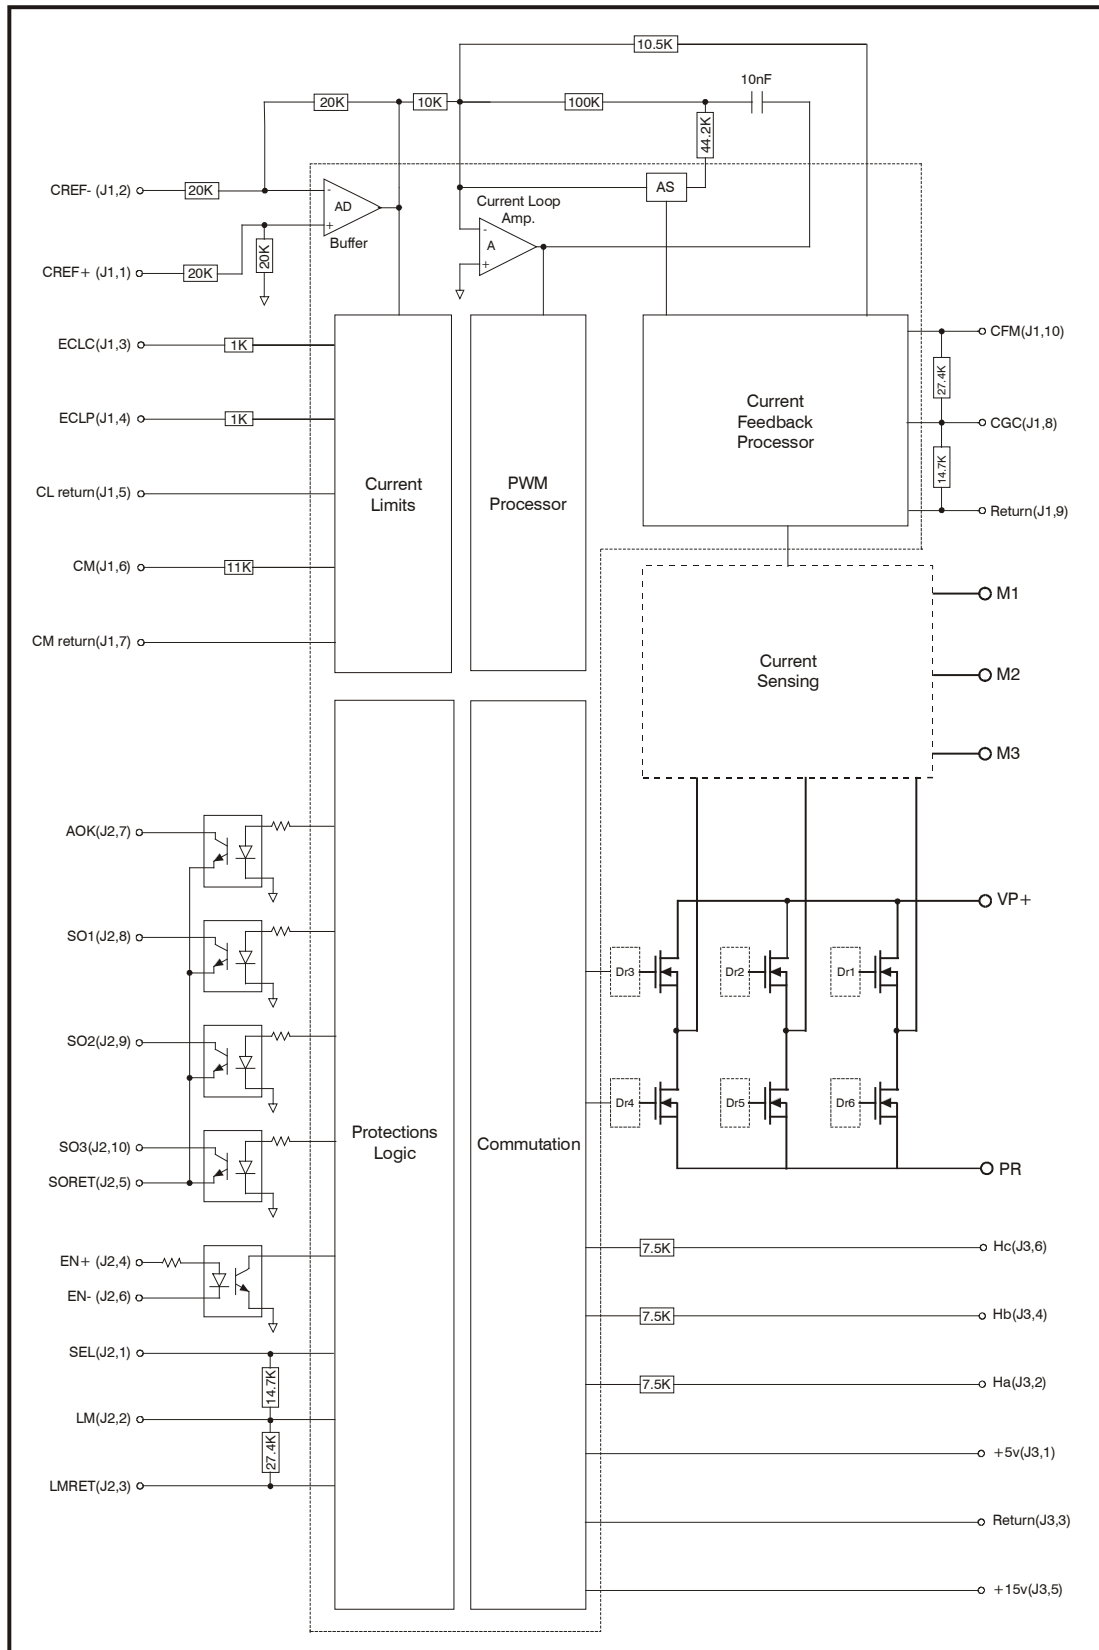


Figure 1: Piccolo System Block Diagram



2.5. How to Use this Guide

In order to install and operate the Piccolo servo drive, you will use this manual in conjunction with a set of Elmo documentation. Installation is your first step; after carefully reading the safety instructions in the first chapter, the following chapters provide you with installation instructions as follows:

- [Chapter 3 - Installation](#), provides step-by-step instructions for unpacking, mounting, connecting and powering up the Piccolo.
- [Chapter 4 – Servo Control Operation](#), explains how to control the operation of the servo amplifier.
- [Chapter 5 - Technical Specifications](#), lists all the drive ratings and specifications.

Chapter 3: Installation

3.1. Site Requirements

You can guarantee the safe operation of the Piccolo by ensuring that it is installed in an appropriate environment.

Feature	Value
Ambient operating temperature	0 °C – 50 °C (32 °F – 122 °F)
Maximum case temperature	87 °C (188 °F)

Note: Models for extended environmental conditions are available.

3.2. Unpacking the Drive Components


Before you begin working with the Piccolo system, verify that you have all of its components, as follows:

- The Piccolo servo drive
- The Composer software and software manual


The Piccolo is shipped in a cardboard box with Styrofoam protection.

To unpack the Piccolo:

1. Carefully remove the servo drive from the box and the Styrofoam.
2. Check the drive to ensure that there is no visible damage to the instrument. If any damage has occurred, report it immediately to the carrier that delivered your drive.
3. To ensure that the Piccolo you have unpacked is the appropriate type for your requirements, locate the part number sticker on the side of the Piccolo. It looks like this:

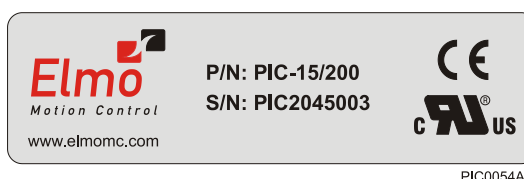

The P/N number at the top gives the type designation as follows:

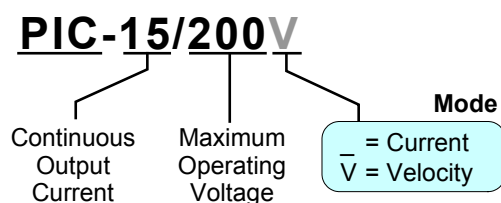

4. Verify that the Piccolo type is the one that you ordered, and ensure that the voltage meets your specific requirements.

3.3. Dimensions

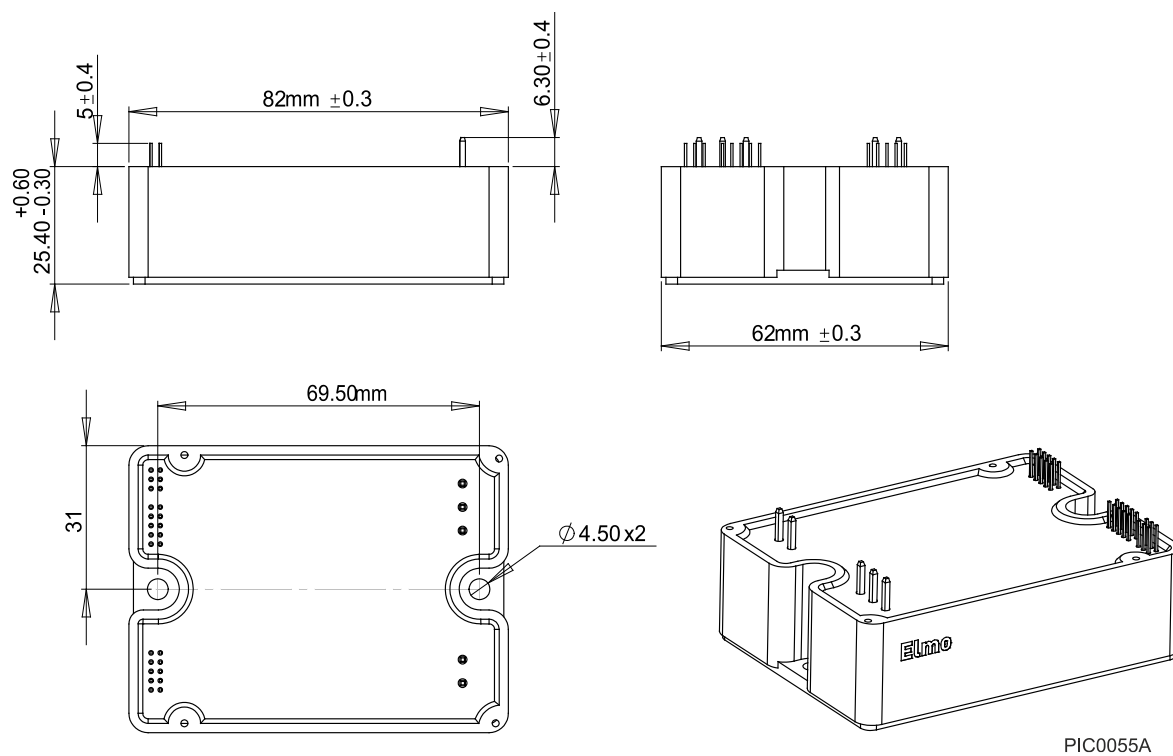


Figure 2: Piccolo Dimensions

3.4. Mounting the Piccolo

3.4.1. Mounting the Heatsink

The Piccolo dissipates its heat by natural convection, up to loads of 500 W. For higher output loads, the amplifier should be mounted on an additional heatsink or cooled by fan. There are two 4.5-mm holes in the base plate for mounting an additional heatsink, see Figure 2.

3.4.2. Mounting on the PC Board

When mounting the Piccolo on a PC board, four screws (in addition to the solder pins) may be installed to provide a mechanical connection. It is important to provide a spacer if any components are located above the amplifier. Failure to do so can warp the PC board or puncture the amplifier case. When selecting screws, the following specifications should be used. If a spacer has been added, the screw length must be calculated to penetrate the case by no more than 2.6 mm.

Screw Type: Phillips Pan Head Self-tapping (for plastic) screw – Nickel-plated Steel. Meets standards ISO 1478, EN 21478, or DIN 7970.

d	ST2.2
L	4.5*
P	0.8
d _k	4.2
k	1.8
m≈	2.6
Phillips size	1

*4.5 mm is typical for mounting on a PC board assembly without spacers.

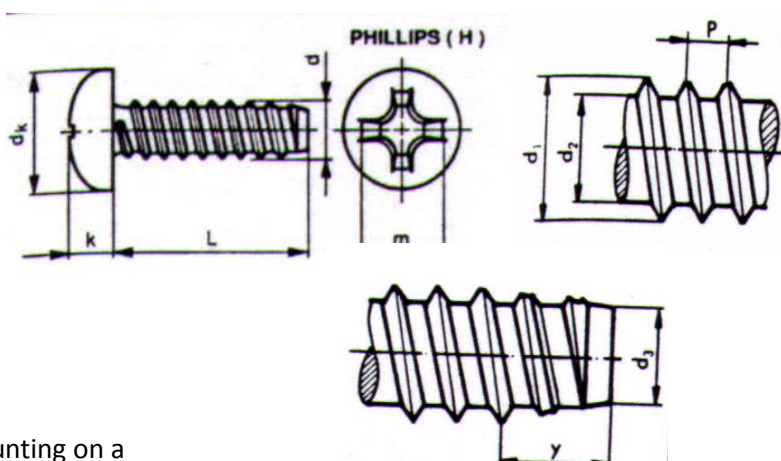


Table 1: Dimensions in Millimeters

Basic Diameter	ISO Nr.	Pitch P	Main Diameter		Minor Diameter		Flat End Diameter	
			D _{1max}	D _{1min}	D _{2max}	D _{2min}	D _{3max}	D _{3min}
ST2.2	2	0.8	2.24	2.1	1.63	1.52	1.47	1.37

Table 2: Size Limits for Tapping Screw Thread

3.5. Wiring the Piccolo

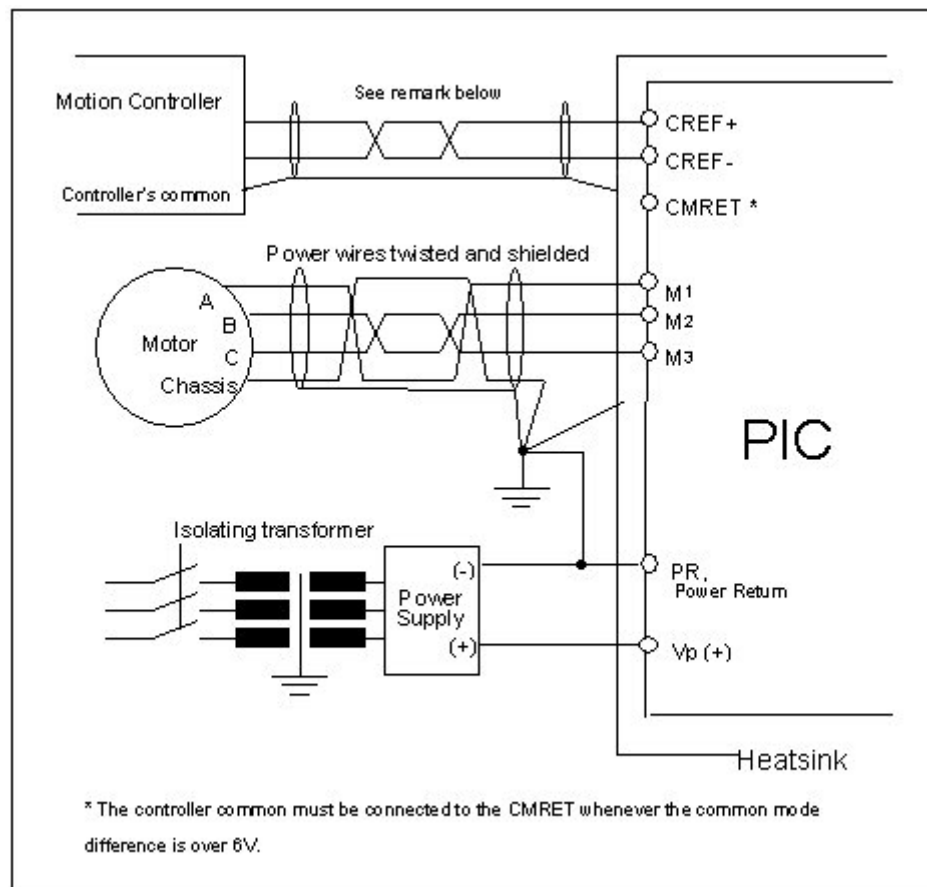


Figure 3: Piccolo Basic Wiring

3.6. Connections

3.6.1. Pin Functions

The Piccolo connections are described in the following figure and tables.

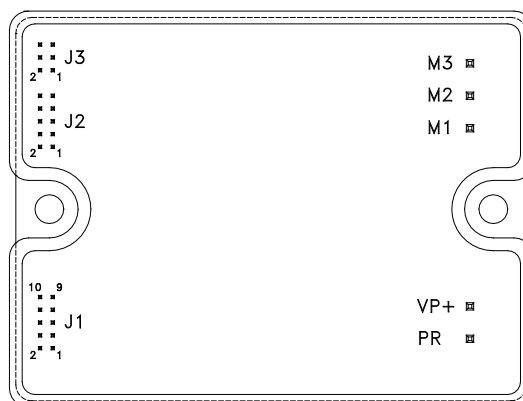


Figure 4 Piccolo Connector Locations

3.6.1.1. Power

Pin	Function	Remarks
VP+	Positive power input	
PR	Power input return	
M ₁	Motor power output 1	
M ₂	Motor power output 2	
M ₃	Motor power output 3	

Table 3: Piccolo Power Connections

3.6.1.2. J1 Connector

Pin #/ Short Form	Function	Remarks
1 CREF1+	Current command input (+)	Positive input of a differential amplifier: • Input operating voltage range: ± 3.75 V • Maximum input voltage: ± 20 V, see Section 4.1 • Maximum common mode voltage: ± 6 V (referred to as CMRET) • Differential input impedance: 40 kΩ
2 CREF-	Current command input (-)	Negative input of a differential amplifier. Specification as for pin J1/1.
3 ECLC	External current limit- continuous	External voltage scales down the rated value. • Voltage range: 0 V to 3.75 V (3.75 V = rated I_c) • Internally limited to rated value
4 ECLP	External current limit - peak	External voltage scales down the rated value. • Voltage range: 0 V to 3.75 V (3.75 V = rated I_p) • Internally limited to rated value
5 ECLRET	Current limits return	Return for current limits signals.
6 CM	Current monitor	Analog output with a scale of ± 3.9 V for $\pm I_p$. • Output resistance: 10 kΩ
7 CMRET	Current monitor return	Return for current monitor (CM) signal.
8 CGC	Current gain change	Shorting this pin to the CGCRET pin (J1/9) reduces the proportional gain (P) of the current loop by 70%.
9 CGCRET	Current gain change return	Return for CGC signal.
10 CFM	Current feedback multiplier	Shorting this pin to pin J1/8 (CGC) multiplies the current feedback signal by 2.

Table 4: J1 Connector

3.6.1.3. J2 Connector

Pin #/ Short Form	Function	Remarks
1 SEL	Hall sensor selector	Input for selection of Hall signal format. The default (open pin) is 60°. When shorting this pin to pin J2/2 (LM), the selected Hall format is changed to 30°.
2 LM	Latch mode	Latch mode input.
3 LMRET	Latch mode return	Return for Latch mode (LM).
4 EN+	Enable (+)	Positive voltage input of "Amplifier Enable" function. To enable operation of the amplifier, the opto must be switched on by applying voltage between this pin (+) and pin J2/6 (-). The opto is isolated from the amplifier, see Figure 1. • Minimum "On" voltage: 3 V, current consumption 0.6 mA. • Maximum "On" voltage: 5 V, current consumption 5.4 mA.
5 SORET	Status output return	Status output common for AOK, SO1, SO2, SO3. Isolated from circuit common, see Figure 1.
6 EN-	Enable (-)	Negative voltage input of "Amplifier Enable" function. Opto isolated from amplifier. For details, see pin J2/4.
7 AOK	Amplifier OK	"Amplifier OK" indication output pin. When the amplifier is at normal operating conditions, this output is in "active low" state. When a failure occurs, this output is changed to "open" state. Opto isolated, open collector NPN type, see Figure 1. • Maximum voltage = 30 V • Maximum current = 8 mA. • "On" voltage: V OUT(On) < 0.8 V
8 SO1	Status output 1	Status indication output 1. Specification as in pin J2/7.
9 SO2	Status output 2	Status indication output 2. Specification as in pin J2/7.
10 SO3	Status output 3	Status indication output 3. Specification as in pin J2/7.

Table 5: J2 Connector

3.6.1.4. J3 Connector

Pin #/ Short Form	Function	Remarks
1 +5V	+5 V Hall/encoder supply voltage	+5 V supply voltage for Hall sensors. Output current: 20 mA.
2 Ha	Hall A input	Logic levels: TTL Maximum input voltage: 30 VDC.
3 HARET	Hall/encoder supply voltage return	Return used only for Hall supply.
4 Hb	Hall B input	Logic levels: TTL Maximum input voltage 30 VDC.
5 +15V	+15 V Hall/ encoder supply voltage	+15 V supply voltage for Hall sensors. Output current: 20 mA.
6 Hc	Hall C input	Logic levels: TTL. Maximum input voltage: 30 VDC.

Table 6: J3 Connector

3.6.2. Connecting a Non-isolated Piccolo to an Isolating Power Transformer

Be sure to ground:

- DC power common
- Motor chassis
- Amplifier heatsink

Do not ground the control common, which is internally connected to the power common. Grounding the control common will create a ground loop.

3.7. DC Power Supply

The DC power supply can be at any voltage in the range defined in Chapter 5: Technical Specifications. The supply source must comply with the safety aspects of the relevant requirements, in accordance with the most recent version of the standard EN60950 or equivalent Low Voltage Directive Standard, all according to the applicable over-voltage category. If the power source to the power supply is the AC line (through a transformer), safety margins must be considered, in order to avoid activating the under/over voltage protection due to line variations and/or voltage drop under load.

In addition to the above, the transformer must comply with the safety aspects of the relevant requirements in accordance with the most recent version of the standard EN60742 (Isolating and Safety Isolating Transformers). The nominal DC bus voltage should be in the following range:

$$1.2 V_{dcmin} < V_{dc} < 0.9 V_{dcmax}$$

where:

V_{dcmin} is the minimum DC bus

V_{dcmax} is the maximum DC bus

The recommended minimum power supply capacitance for single-phase connections is as follows:

Amplifier Voltage Range	50 - 55 V	100 V	200 V
Recommended capacitance	5600 μ F	3300 μ F	1500 μ F

The transformer power should be calculated such that it will be able to deliver power to the amplifier (including peak power) without significant voltage drops.

The power supply should be located as close as possible to the amplifier. The maximum distance is 30 cm (1 foot). While driving high-inertia loads, the power supply must be equipped with a shunt regulator; otherwise, the amplifier will be disabled whenever the capacitors are charged above the maximum voltage.

Chapter 4: Servo Control Operation

4.1. Current Command Input

The Piccolo has a single differential input. The input operating voltage range is ± 3.75 V, meaning that a 3.75 V signal will result in a fully rated peak current. The current limit circuits will override this signal if the peak duration exceeds 2.7 seconds and/or the required current exceeds the values set by the ECLC and ECLP signals. If the input command voltage exceeds 3.75 V, input scaling must be implemented by adding a pair of external resistors, according to the following formula:

$$R_{in} (k\Omega) = (5.33 * V_{in}) - 20$$

Be careful not to apply input voltage above the maximum allowed input voltage as this will cause the input operational amplifier to operate beyond its limits (± 20 V) and in extreme cases, may even damage it.

4.2. CFM

The amplifier is equipped with a current feedback multiplier (CFM). Connecting pin J1/10 to J1/8 multiplies the signal of the current feedback by 2 and consequently causes the following changes to occur:

- Current gains are divided by 2.
- Current monitor is multiplied by 2.
- Current limits are divided by 2.

This function should be activated whenever the rated current *and* the peak current of the motor are less than 50% of the amplifier rated continuous and peak limits, respectively.

	Continuous Current Limit	Peak Current Limit	Current Gain(A/V)	Current Monitor (V/A)	Differential Input Impedance
Without CFM	Ic	Ip	Ip/3.75	3.9/Ip	40 kΩ
With CFM	Ic/2	Ip/2	Ip/7.5	7.8/Ip	40 kΩ

Table 7: CFM Effects

- The default (pin J1/10 left open) is the low current feedback.
- For permanent selection, a simple short is recommended.
- For remote selection, the scheme in Figure 5 should be used.

4.3. Current Gain Control (CGC)

The Piccolo amplifier is equipped with Current Gain Control (CGC) for improved performance of low induction motors. Connecting pin J1/8 to J1/9 reduces the gain of the current loop, thus enabling the use of low inductance motors without the insertion of an additional inductor. The default (pin J1/8 left open) is high gain.

Shorting this pin to the circuit common pin (J1/9) reduces the proportional gain (P) of the current loop by approx. 70%.

For permanent selection, a simple short is recommended. For remote selection, the following scheme should be used.

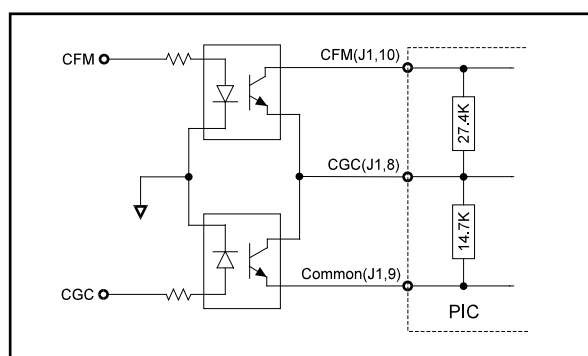


Figure 5: CFM and CGC Remote Control

The following table should be used for calculating minimum inductance values.

	Minimum Inductance for High Gain	Minimum Inductance for Low Gain
5/60	$L_{\text{Load (millihenry)}} > 12 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$	$L_{\text{Load (millihenry)}} > 4.8 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$
10/60	$L_{\text{Load (millihenry)}} > 6 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$	$L_{\text{Load (millihenry)}} > 2.4 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$
15/60	$L_{\text{Load (millihenry)}} > 4 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$	$L_{\text{Load (millihenry)}} > 1.6 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$
25/60	$L_{\text{Load (millihenry)}} > 2.4 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$	$L_{\text{Load (millihenry)}} > 0.9 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$
3/100	$L_{\text{Load (millihenry)}} > 30 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$	$L_{\text{Load (millihenry)}} > 7.5 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$
10/100	$L_{\text{Load (millihenry)}} > 9 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$	$L_{\text{Load (millihenry)}} > 2.2 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$
15/100	$L_{\text{Load (millihenry)}} > 6 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$	$L_{\text{Load (millihenry)}} > 1.5 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$
20/100	$L_{\text{Load (millihenry)}} > 4 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$	$L_{\text{Load (millihenry)}} > 1.1 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$
2/200	$L_{\text{Load (millihenry)}} > 50 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$	$L_{\text{Load (millihenry)}} > 12 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$
6/200	$L_{\text{Load (millihenry)}} > 16.5 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$	$L_{\text{Load (millihenry)}} > 4 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$
10/200	$L_{\text{Load (millihenry)}} > 10 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$	$L_{\text{Load (millihenry)}} > 2.4 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$
15/200	$L_{\text{Load (millihenry)}} > 6.5 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$	$L_{\text{Load (millihenry)}} > 1.6 \cdot 10^{-3} \cdot V_{\text{supply (Volt)}}$

Table 8: Minimum Inductance Values

4.4. External Current Limit - Continuous (ECLC)

The continuous current limit of the Piccolo amplifier can be scaled down by an external voltage or by an external resistor connected from pin J1/3 (ECLC) to pin J1/5 (ECLRET).

4.4.1. External Voltage

An external positive voltage (0 to 3.75 V) to terminal J1/3 (ECLC) in reference to terminal J1/5 (ECLRET) will control the continuous current limit from zero to $I_{c(nom)}$.

$$I_{c(new)} = \frac{V_{ECLC}}{3.75V} * I_{c(nom)}$$

- The voltage is internally clamped to 3.75 V whenever the external V_{ECLC} is greater than 3.75 V.
- The external voltage source must be able to source/ sink at least ± 0.2 mA.
- The maximum absolute V_{ECLC} is 12 V.

4.4.2. External Resistor

Connect an external resistor between terminal J1/4 (ECLC) and terminal J1/5 (ECLRET). The resistor value is given by:

$$R_{ECLC} (Kohm) = 37.4 * \frac{I_{c(new)}}{I_{c(nom)}} - 1$$

- $0 < R_{ECLC} < 36.4$ K (1/8 Watt)
- At R_{ECLC} greater than 36.4 K, the current limit will be internally clamped to the nominal value.
- $I_{c(nom)}$ is the nominal continuous current limit of the amplifier.

4.5. External Current Limit - Peak (ECLP)

The peak current limit of the Piccolo amplifier can be scaled down by an external voltage or by an external resistor connected between pin J1/4 (ECLP) and pin J1/5 (ECLRET).

4.5.1. External Voltage

An external positive voltage (0 to 3.75 V) to terminal J1/4 (ECLP) in reference to terminal J1/5 (ECLRET) will control the peak current limit from zero to $I_{p(nom)}$.

$$I_{p(new)} = \frac{V_{ECLP}}{3.75V} * I_{p(nom)}$$

- The voltage is internally clamped to 3.75 V whenever the external V_{ECLP} is higher than 3.75 V.
- The external voltage source must be able to source/sink at least ± 0.2 mA.
- The maximum absolute V_{ECLP} is 12 V.

4.5.2. External Resistor

Connect an external resistor between terminal J2/3 (ECLP) and terminal J2/2 (ECLRET). The resistor value is given by::

$$R_{ECLP} \text{ (Kohm)} = 37.4 * \frac{I_{p(\text{new})}}{I_{p(\text{nom})}} - 1$$

- $0 < R_{ECLP} < 36.4 \text{ K}$ (1/8 Watt)
- At R_{ECLP} greater than 36.4 K, the current limit will be internally clamped to the nominal value.
- $I_{p(\text{nom})}$ is the nominal peak current limit of the amplifier.

4.6. Latch Mode (LM)

By connecting J2/2 to J2/3, the amplifier can be latched to Disable mode whenever a Short, Commutation or Over Temperature failure occurs. Disabling the amplifier temporarily (by removing the power from Enable pins J2/4 and J2/6) resets the latch. Be sure to restore the Enable connection when the reason for the event no longer exists. For permanent selection, a simple short is recommended. For remote selection, use the following scheme.

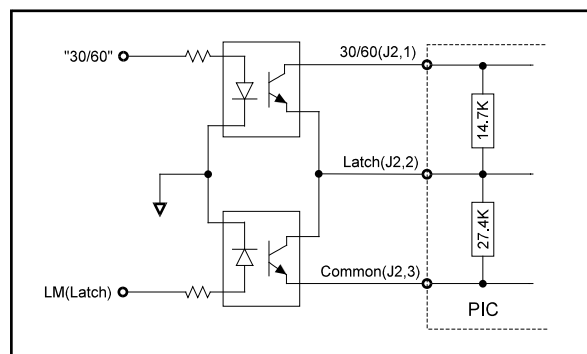


Figure 6: "30/60" and LM Remote Control

4.7. "30/60" Hall Sensor Selector (SEL)

This is the input for selecting the Hall signal format. The default (pin J2/1 open) is 60°. Shorting pin J2/1 to pin J2/2 (LM) changes the selected Hall format to 30°. For permanent selection, use a simple short; for remote selection, use the scheme shown in Figure 6.

4.8. Amplifier Enable Logic

Pins J2/4 and J2/6 are the inputs of an opto-coupler, which must be energized to enable operation of the amplifier. If the Enable input is kept high before turning on the amplifier, the amplifier power output will be active immediately upon power on.

4.9. Status Indications

The following table lists the Piccolo amplifier status indications.

	Function	Latch Option	AOK	S01	S02	S03
1	Amplifier OK (AOK)	N/A	Low	Open collector	Open collector	Open collector
2	External disable	No	Low	Low	Open collector	Low
3	Current limit	No	Low	Open collector	Open collector	Low
4	Short	Yes	Open collector	Low	Open collector	Low
5	Over temperature	Yes	Open collector	Open collector	Low	Low
6	Internal supplies protection	No	Open collector	Low	Low	Open collector
7	Under voltage	No	Open collector	Low	Open collector	Open collector
8	Over voltage	No	Open collector	Open collector	Low	Open collector
9	Shunt*	No	Low	Open collector	Low	Open collector
10	Power up reset	No	Open collector	Open collector	Open collector	Open collector
11	Commutation failure	Yes	Open collector	Low	Low	Low

** This indication can be used as a digital input for activating an external shunt regulator.*

Table 9: Piccolo Status Indications

Notes:

- *Without latch mode:*
The status indications are reset when the fault disappears.
- *With latch mode:*
The Short, Over Temperature and Commutation Failure status indications are reset when the enable signal is temporarily removed from the enable input.
- *Multiple faults:*
Only the reading of the first fault is reliable. Additional faults add on to the status outputs and the indication is therefore meaningless.

Chapter 5: Technical Specifications

5.1. Power Ratings

Feature	Units	5/60	10/60	15/60	25/60	3/100	10/100	15/100	20/100	2/200	6/200	10/200	15/200
Minimum supply voltage	VDC	10				20				40			
Nominal supply voltage	VDC	50				85				170			
Maximum supply voltage	VDC	59				95				195			
Maximum continuous power output	W	290	570	860	1400	310	950	1400	1900	430	1200	1950	2900
Efficiency at rated power (at nominal conditions)	%	> 97											
Maximum output voltage		Up to 100% of DC bus voltage											
DC and trapezoidal commutation continuous current limit (I _c)	A	5	10	15	25	3.3	10	15	20	2.25	6	10	15
DC and trapezoidal commutation peak current limit (I _c)	A	2 x I _c											
Mounting method		PCB Mounted											

5.2. Electrical Specifications

Feature	Details
Switching frequency on the load	34 kHz ($\pm 10\%$)
Current loop bandwidth	Up to 4 kHz
Current step response	< 100 μ sec
Peak current duration (full rated peak current)	Utilization dependent up to 2.7 sec $\pm 15\%$, reduced by RMS current limit
Offset current at normal room temperature	25°C ($\pm 1.5\%$)
Offset current for all range of temperatures	0°C - 14°C ($\pm 2\%$)
Continuous current limit tolerance	-1% +5%
Peak current limit tolerance	-1% +5%
Current gain linearity	Better than $\pm 1\%$ of rated continuous current
Current gain accuracy	Better than $\pm 5\%$ for $0.05 I_c < I_{motor} > I_p$
Current monitor accuracy	Better than $\pm 5\%$ for $0.05 I_c < I_{motor} > I_p$

5.3. Mechanical Specifications

Feature	Details
Dimensions	82 x 62 x 25.4 mm (3.228 x 2.440 x 1.000 in)
Weight	230 g (8.1 oz)
Power pin material	Brass with tin plating
Power pin size	1.14 mm (0.45 in) square
Power pin PCB layout	1.8 ± 0.05 mm (0.071 ± 0.002 in)
Signal pin (J1, J2) material	Phosphor bronze with 10 μ gold plating
Signal pin (J1, J2) size	0.5 ± 0.1 mm (0.02 ± 0.004 in) square
Signal pin (J1, J2) PCB layout	1 ± 0.05 mm (0.04 ± 0.002 in)

5.4. Environmental Conditions

Feature	Details
Operating ambient temperature according to IEC60068-2-2	0 °C to 40 °C (32 °F to 104 °F)
Storage temperature	-20 °C to +85 °C (-4 °F to +185 °F)
Maximum non-condensing humidity according to IEC60068-2-78	95%
Maximum Operating Altitude	2,000 m (6562 feet)
Mechanical Shock according to IEC60068-2-27	15g / 11ms Half Sine
Vibration according to IEC60068-2-6	5 Hz ≤ f ≤ 10 Hz: ±10mm 10 Hz ≤ f ≤ 57 Hz: 4G 57 Hz ≤ f ≤ 500 Hz: 5G

5.5. Compliance with Standards

Specification	Details
Quality Assurance	
ISO 9001:2008	Quality Management
Design	
Approved IEC/EN 61800-5-1, Safety	Printed wiring for electronic equipment (clearance, creepage, spacing, conductors sizing, etc.)
MIL-HDBK- 217F	Reliability prediction of electronic equipment (rating, de-rating, stress, etc.)
• UL 60950 • IPC-D-275 • IPC-SM-782 • IPC-CM-770 • UL 508C • UL 840	Printed wiring for electronic equipment (clearance, creepage, spacing, conductors sizing, etc.)
In compliance with VDE0160-7 (IEC 68)	Type testing
Safety	
Recognized UL 508C	Power Conversion Equipment
In compliance with UL 840	Insulation Coordination Including Clearances and Creepage Distances for Electrical Equipment
In compliance with UL 60950	Safety of Information Technology Equipment Including Electrical Business Equipment
Approved IEC/EN 61800-5-1, Safety	Adjustable speed electrical power drive systems
In compliance with EN 60204-1	Low Voltage Directive 73/23/EEC

Specification	Details
EMC	
Approved IEC/EN 61800-3, EMC	Adjustable speed electrical power drive systems
In compliance with EN 55011 Class A with EN 61000-6-2 : Immunity for industrial environment, according to: IEC 61000-4-2 / criteria B IEC 61000-4-3 / criteria A IEC 61000-4-4 / criteria B IEC 61000-4-5 / criteria B IEC 61000-4-6 / criteria A IEC 61000-4-8 / criteria A IEC 61000-4-11 / criteria B/C	Electromagnetic compatibility (EMC)
Workmanship	
In compliance with IPC-A-610 , level 3	Acceptability of electronic assemblies
PCB	
In compliance with IPC-A-600 , level 2	Acceptability of printed circuit boards
Packing	
In compliance with EN 100015	Protection of electrostatic sensitive devices
Environmental	
In compliance with 2002/96/EC	Waste Electrical and Electronic Equipment regulations (WEEE) Note: Out-of-service Elmo drives should be sent to the nearest Elmo sales office.
In compliance with 2002/95/EC (effective July 2006)	Restrictions on Application of Hazardous Substances in Electric and Electronic Equipment (RoHS)