


DIP Switch

Flashes

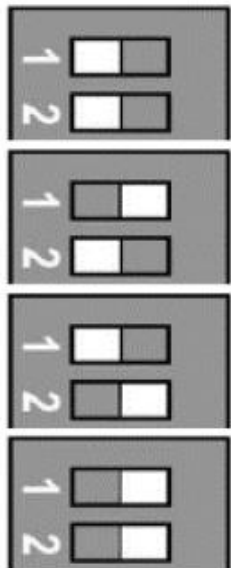

0 Flashes

1 Flash

2 Flashes

3 Flashes

Settings


Reed Switch On

Light Sensor On

Accelerometer On

Fresh Water

Water Sensor On

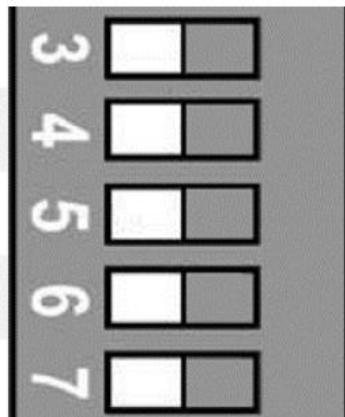

Reed Switch Off

Light Sensor Off


Accelerometer Off

Salt Water

Water Sensor Off

Rotary Switch

Delay in seconds between flashes

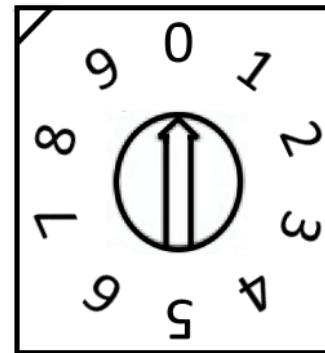

Position	Delay (s)
1	1
2	2
3	3
4	4
5	5
6	6
7	10
8	15
9	20
0	30

Switch 8 is not used