

FASTCAM Mini AX50/100

Hardware Manual

Revision 1.00 EN

Photron

WARNING

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CAUTION:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Use the appropriate parts designated in the manual to prevent EMC interference.
Refer to the "HOW TO USE A BUNDLED LAN CABLE" and follow the instruction.

- The copyright of this manual is held by PHOTRON LIMITED.
- Product specifications and manual contents can change without advanced notification.
- This manual was created taking every possible measure to ensure the accuracy of its contents. However, if you find a section which is unclear, a mistake, or an omission, please contact PHOTRON LIMITED using the contact information provided at the end of the manual.
- PHOTRON LIMITED bears no responsibility for the results of using the product or from following the instructions in this manual.

Introduction

Thank you for your purchase of Photron's high-speed camera system, the "FASTCAM Mini UX50/100" (referred to below as the system).

This manual contains the operating instructions and warnings necessary for using the system.

Before using the system, please read the entire manual.

If any part of this manual is unclear, contact Photron using the contact information printed at the back of the manual.

After you finish reading the manual, store it in a safe place along with the warranty card and refer back to it when necessary.

Manual Notation

The following icons and symbols are used in the explanations in this manual.

Icon/Symbol	Description
	This symbol indicates content that should always be read.
	This symbol indicates instructions that should always be followed when using the software, or things to be careful of when using the software.
	This symbol indicates supplementary items to be aware of when using the system.
	This symbol indicates the location of a reference.
	This symbol indicates a space for you to make notes.
" "	This symbol is used to indicate the names of items on a screen, references, dialog names, and connectors.
[]	This symbol is used to indicate menu names, and sub-menu names.



Using the Manual

This section explains the layout of the manual.

- ◆ Introduction

The introduction explains the manual and safety precautions.

- ◆ Chapter. 1 Overview

This chapter gives an overview of the system and an explanation of its features.

- ◆ Chapter. 2 Setup

This chapter gives an overview of the components that make up the system.

Please also refer to "Photron FASTCAM Viewer User's Manual" for the details of operation by PC.

- ◆ Chapter. 3 Functions

This chapter explains about the system's functions.

- ◆ Chapter. 4

- ◆ Reset of Gigabit Ethernet IF's IP address and Factory Default

This chapter explains the procedure of resetting the system when the system does not work correctly.

- ◆ Chapter. 5 Product Specifications

This chapter explains the system's specifications.

- ◆ Chapter. 6 Warranty

This chapter explains about the warranty.

- ◆ Chapter. 7 Contacting Photron

This chapter lists the contact information to use when contacting Photron if the system malfunctions or if a portion of the manual is unclear.

Using the System Safely and Correctly

In order to prevent injury to yourself and others, and to prevent damage to property, carefully observe the following safety precautions.

Photron has given its full attention to the safety of this system. However, the extent of damage and injury potentially caused by ignoring the content of the safety precautions and using the system incorrectly is explained next. Please pay careful attention to the content of the safety precautions when using the system.



Warning

This symbol indicates actions that carry the risk that a person could receive a serious injury.



Caution

This symbol indicates actions that carry the risk that a person could receive a moderate injury, or that damage to physical property might occur.

◆ The safety precautions to be observed are explained with the following symbols.



This symbol indicates actions that require caution.



This symbol indicates actions that are prohibited and must be avoided.



This symbol indicates actions that must always be performed.



Warning



- Do not perform actions that will damage the AC cable or plug.

(Do not damage the cable, modify it, use it near a heater, excessively bend, twist or pull on it, place heavy objects on it, or bundle it.)

Using the cable when damaged can cause fire, electric shock, or a short circuit.



- Do not use the system in a manner which will exceed the rating of the power outlet or wiring equipment used.

Exceeding the power rating might cause a fire from excessive heat.



- Do not insert metallic objects inside, or pour liquids such as water on, the system.

Doing so can cause fire, electric shock, or malfunction from short circuit or heat.



- Do not disassemble or modify the system.

There are high voltages inside the system that can cause electric shock.



- Do not plug in or unplug the power cord with wet hands.

Doing so can cause electric shock.



- This chapter lists the contact information to use when contacting Photron if the system malfunctions or if a portion of the manual is unclear.

Not fully plugging in the power cable can cause fire from electric shock or heat.



- When something is wrong with the system, unplug the power cable immediately.

- When a foreign substance or liquid, such as metal or water, gets inside.
- When the outer case is broken or damaged, such as from a fall.
- When the system produces smoke, a strange smell, or strange sound.

Using the system in these conditions might cause a fire or electric shock.



Caution



- Always unplug the system when cleaning it or when it is unused for a long period of time. Leaving or storing the system connected to the power source might cause fire from insulation deterioration or electrical discharge.



- Please consult us in advance when you perform an event by which laser light or direct rays fall on the image sensor surface.



- Do not set the system in a location where the temperature gets unusually hot. The trunk and inside of a car can get especially hot in summer. Doing so can cause the outer case and internal components to deteriorate or cause a fire.



- Do not place the system in a location prone to oily smoke or steam, or in a location with a lot of humidity or dust. Oil, moisture, and dust conduct electricity, which can cause a fire or electric shock.



- Ambient temperature 0-40° C, humidity 85% RH or lower, maximum altitude 2,000m or lower. In addition, if exceeding these limits, use in a condensation-free environment. Doing so can cause malfunction.



- Do not store the equipment in a location where the temperature goes below -20°C or higher than 60°C. Also, prevent condensation from forming during shipment



- This device is for indoor use, do not use it outdoors. Do not use in a location that has dust.



- When shipping, remove the connecting cable and use the original packaging or a dedicated carrying case. Do not ship the equipment in an environment where the temperature goes below -20°C or higher than 60°C. Also, prevent condensation from forming during shipment



Cleaning of the Image Sensor Surface

Electro-Static Discharge (ESD) events may cause immediate and unrecoverable damage to the image sensor. Please read the following instructions and take **EXTREME CARE** when cleaning the image sensor surface.



- ALWAYS take appropriate anti-static precautions when cleaning or working near the Image sensor.
- DO NOT use any form of cleaning equipment using electrostatic or 'charged fiber' technology.



- Please discharge any electrostatic build up in your body by touching a grounded metallic Surface before working near the camera sensor.
- Very gently, use only clean and dry air to remove dust from surface of the image sensor.
- To remove stubborn contamination use the highest grade (e.g. VLSI grade) pure Isopropyl alcohol (IPA) with optical wipes of 'clean room' grade.
- Extreme care must be taken! Gently wipe across the sensor in a single action.
(DO NOT rub to avoid abrasive damage to delicate optical coatings on the glass surface.)

Table of Contents

Chapter. 1	Overview	1
1.1.	Product Overview and Features	2
1.2.	System Components and Accessories	3
1.2.1.	Components	3
1.2.2.	Accessories/Options	5
1.2.3.	Type	6
1.3.	Part Names	7
1.3.1.	Camera Body	7
1.3.2.	Camera Body Part Names	8
1.3.3.	Status Display LEDs on the Rear of the Camera Body	9
1.3.4.	Interchangeable Lens Mounts.....	11
Chapter. 2	Setup	13
2.1.	Connecting the system	14
2.1.1.	Connection	14
2.1.2.	Connecting the AC Power Supply.....	15
2.2.	Connecting the Gigabit Ethernet Interface to a PC	16
2.2.1.	Connecting a PC	17
2.3.	Installing PFV	18
2.4.	PC Setup.....	21
2.4.1.	IP address setup for PC	21
2.4.2.	Windows Firewall Setup.....	23
2.4.3.	Connections of PC and multiple systems	25
2.4.4.	Simultaneous Replay/Record Function	25
Chapter. 3	Functions	27
3.1.	What PFV Does	28
3.2.	Image Initialization (Calibration)	29
3.2.1.	Executing Calibration	29
3.2.2.	About the Mechanical shutter	30
3.3.	Selecting the Frame Rate	31
3.4.	Selecting the Resolution	32
3.4.1.	Resolution Lock	32
3.5.	Selecting the Shutter Speed	33
3.6.	Dual Slope Shutter.....	35
3.7.	Selecting the Trigger Mode.....	36
3.7.1.	START Mode.....	36
3.7.2.	CENTER Mode	36
3.7.3.	END Mode.....	37
3.7.4.	MANUAL Mode	37
3.7.5.	RANDOM Mode	37
3.7.6.	RANDOM RESET Mode	38

3.8. LOW LIGHT Mode	39
3.9. VARIABLE Setting	39
3.10. White Balance Adjustment (Color Models Only).....	40
3.10.1. Using Preset White Balance	40
3.10.2. Using User White Balance	40
3.11. Color Enhancement Function (Color Models Only)	41
3.12. Edge Enhancement Function	41
3.13. Partition Memory & Record.....	41
3.14. Input / Output Signal Types	42
3.14.1. TRIG SW IN Connector	43
3.14.2. IRIG IN Connector	43
3.14.3. INPUT(1,2) Connector	43
3.14.4. OUTPUT (1, 2) Connector	44
3.15. Using External Triggers	45
3.15.1. Inputting an External Trigger Signal.....	45
3.15.2. Outputting External Trigger Signals	47
3.16. Using External Synchronization Signals.....	48
3.16.1. Inputting an External Synchronization Signal	48
3.16.2. Outputting an External Synchronization Signal	48
3.16.3. Synchronization with a variable frequency	48
3.16.4. Synchronizing Multiple FASTCAM Mini AX50/100 Systems.....	49
(Multiple Unit Synchronized Recording)	49
3.16.5. Synchronizing the System with Other External Devices.....	51
(Frame Rate Synchronized Recording)	51
3.16.6. Synchronizing the System with Other Cameras	53
(Mixed Device Synchronized Recording)	53
3.17. INPUT / OUTPUT Signal Settings	54
3.17.1. INPUT Signal Settings	54
3.17.2. OUTPUT Signal Settings	55
3.18. Signal Delay.....	56
3.19. Event Marker Function.....	57
3.20. IRIG Time Code (External Time Synchronization).....	58
3.21. Direct Trigger / Direct Start Mode	59
3.22. Fan Controll	59

Chapter. 4 Reset of Gigabit Ethernet IF's IP address and Factory Default 61

4.1. Reset of Gigabit Ethernet IF's IP address and Factory Default.....	62
4.1.1. Camera IP Address Initialization	62
4.1.2. Reset to the Factory Default	62

Chapter. 5 Product Specifications 63

5.1. Specifications.....	64
5.1.1. Product Specifications	64
5.1.2. General Specifications	65
5.1.3. AC / DC Adaptor	65
5.1.4. Options.....	66

5.1.5.	Frame Rate and Resolution	68
5.1.6.	Shutter Speed List	72
5.1.7.	Recordable Image Count/Resolution	73
5.1.8.	Recordable Times/Resolution	75
5.2.	Dimensions	77
5.2.1.	Camera Body	77
5.2.2.	AC Power Supply Unit	80

Chapter. 6	Warranty	81
-------------------	-----------------	-----------

6.1.	About the Warranty	82
------	--------------------------	----

Chapter. 7	Contacting Photron	83
-------------------	---------------------------	-----------

7.1.	Contact Information.....	84
------	--------------------------	----



Chapter. 1 Overview

1.1. Product Overview and Features

1.2. System Components and Accessories

1.3. Part Names

1.1. Product Overview and Features

The FASTCAM Mini AX50/100 is the latest model of the "FASTCAM Mini" series. Its super sensitive performance is 4 times greater than former models. It has superior recording performance of 4,000 fps at one million pixels (1,024 x 1,024) in a lightweight, compact design of only 1.5kg (3.3lbs).

The superior portability and recording performance is the most suitable for analysis and visualization of engine lean-burns, high-speed fluids, fluorescence observations, and other image measurement applications in various academic fields which were difficult to install and shoot by other high-speed cameras.

The small body can be installed almost anywhere, and not only does it have input/output connectors for triggering and synchronization with other equipment, but also a Gigabit Ethernet connection that allows high speed data offload and system control from a PC. The FASTCAM Mini AX50/100 fits various image analysis and image processing applications to simplify your workflow.

Use this "state-of-the-art technology in a small body" for any dynamic image measurement purpose.



1.2. System Components and Accessories

1.2.1. Components

The system's standard components are listed below. Remove the components from the packaging and check them.

1. Camera Body (with G type F mount) One



2. AC Power Supply Unit One



3. AC Cable (*Type is different in each country) One



4. C-mount One



5. Gigabit Ethernet Interface Cable (LAN Cable)

One



6. Ferrite core & Binding Band

One each

7. DC Cable

One

8. Hexagonal Wrench for Changing Lens Mounts
(1.5 mm, 4 mm)

One each

9. Lens Mount Cap (built into the camera body)

One

10. FASTCAM Series Setup Disk (Driver/Application DVD)

One

11. FASTCAM Mini AX50/100 Hardware Manual (this manual)

One

12. Photron FASTCAM Viewer (PFV) User's Manual

One

13. How to Make a Gigabit Ethernet Connection
(Simple Procedure Manual)

One

14. FirstStepGuide

One

 Supplement

- This system does not include a lens.

1.2.2. Accessories/Options

The following options are available for the system.

1. Dedicated Carrying Case
2. DAQ option
3. Movie analysis software
4. M42 Lens Mount

Supplement

- Lenses, lamps and other kinds of options are available. Please contact our sales representative or distributors. Please refer to “7.1.Contact Information 84page”.

1.2.3. Type

For the FASTCAM Mini AX50/100 system, there are monochrome and color versions, for each of these versions, there are 4 GB standard memory capacity type and 8 GB (or 16GB) high capacity type. When purchasing, it is possible to select from these models according to the application or your demands.

The Types are listed below.

Max. Frame Rate	Full Frame Max. Frame Rate	Sensor Type	Memory	Type Name
540,000fps	4,000fps	Color	4GB	FASTCAM Mini AX100 type 540K - C - 4GB
			8GB	FASTCAM Mini AX100 type 540K - C - 8GB
			16GB	FASTCAM Mini AX100 type 540K - C - 16GB
		Monochrome	4GB	FASTCAM Mini AX100 type 540K - M - 4GB
			8GB	FASTCAM Mini AX100 type 540K - M - 8GB
			16GB	FASTCAM Mini AX100 type 540K - M - 16GB
212,500fps	4,000fps	Color	4GB	FASTCAM Mini AX100 type 200K - C - 4GB
			8GB	FASTCAM Mini AX100 type 200K - C - 8GB
			16GB	FASTCAM Mini AX100 type 200K - C - 16GB
		Monochrome	4GB	FASTCAM Mini AX100 type 200K - M - 4GB
			8GB	FASTCAM Mini AX100 type 200K - M - 8GB
			16GB	FASTCAM Mini AX100 type 200K - M - 16GB
170,000fps	2,000fps	Color	4GB	FASTCAM Mini AX50 type 170K - C - 4GB
			8GB	FASTCAM Mini AX50 type 170K - C - 8GB
			16GB	FASTCAM Mini AX50 type 170K - C - 16GB
		Monochrome	4GB	FASTCAM Mini AX50 type 170K - M - 4GB
			8GB	FASTCAM Mini AX50 type 170K - M - 8GB
			16GB	FASTCAM Mini AX50 type 170K - M - 16GB



Caution

- Export control model: Frame rate are limited at the type 200K.



Reference

Subject to restrictions under Export Trade Control Order, your camera may NOT be used depending on the country where you intend to use. If you are considering using your camera outside Japan, check with Photron first. Contact information is given in Chapter 7 (page 83).

1.3. Part Names

The system is composed of components including the camera body, AC power supply, and the "Photron FASTCAM Viewer" control software (referred to below as PFV).



For each of the system components.

- Do not expose to shock.
- Do not use in an area where flammable gas or dust present is present.
- Do not place in an unstable location such as on an unstable platform or an incline.
- Do not disassemble or modify.
- Do not expose to liquids such as water.
- Do not subject to excessive force.

1.3.1. Camera Body

The camera body contains IC memory for image recording and has been designed to be able to record high-speed images uncompressed. The back of the camera body is equipped the Gigabit Ethernet interface, which permits full camera control and data download possible via connection to a PC; the input/output connector, which allows external synchronization signals, trigger signals, IRIG time code.



Apperance




Rear

FASTCAM Mini AX50/100


1.3.2. Camera Body Part Names

FASTCAM Mini AX50/100

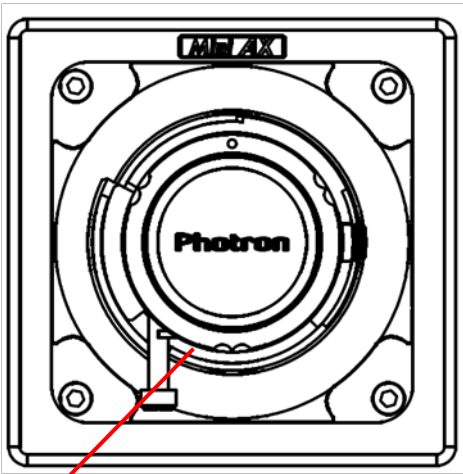

G type F Mount Front

Front

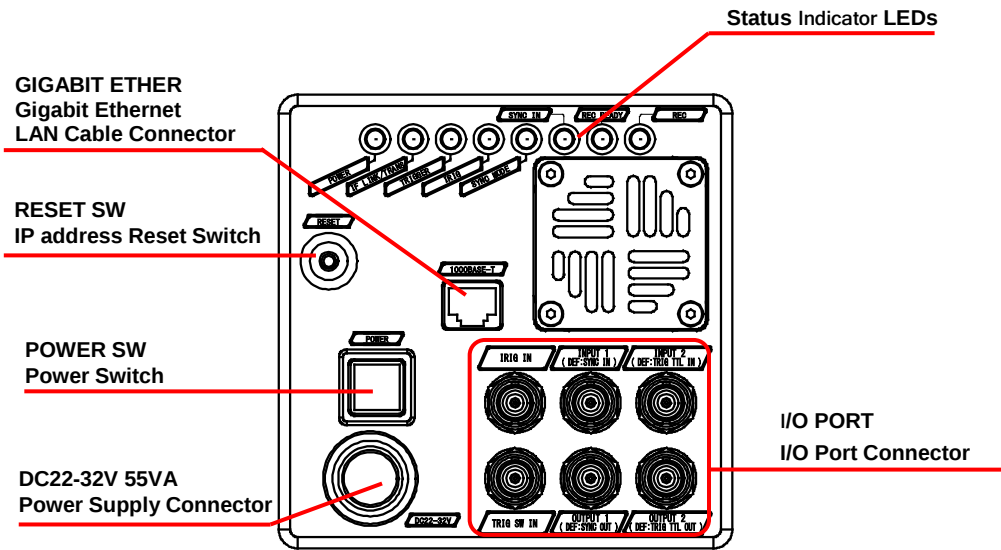

Back

1.3.3. Status Display LEDs on the Rear of the Camera Body

There are a number of LEDs on the rear of the system's camera body. These LEDs indicate the status of the system. The function of each LED is explained here.



- **POWER (Green)**
LED ON: Power On
LED OFF: Power Off
- **IF LINK/TRANS (Red)**
LED ON: The Gigabit Ethernet interface is connected
LED FLASHING: Data is transferring
LED OFF: The Gigabit Ethernet interface is not connected
- **TRIGGER (Yellow)**
LED ON: A trigger signal is present (being input) (The LED will illuminate for 0.1 second when the trigger signal is input.)
LED OFF: The trigger signal is not present
- **IRIG (Green)**
LED ON: The IRIG signal is present (being input)
LED OFF: The IRIG signal is not present
- **SYNC MODE (Red)**
LED ON: In external synchronization mode (synchronized to an external signal)
LED OFF: In internal synchronization mode (synchronized to the internal signal)
- **SYNC IN (Yellow)**
LED ON: A synchronization signal is present (being input)
LED OFF: A synchronization signal is not present
- **REC READY (Yellow)**
LED ON: Ready to record
LED FLASHING: ENDLESS recording (The REC (Red) LED is also flashing)
LED OFF: Not ready to record
- **REC (Red)**
LED ON: Ready to record (The case of "ENDLESS" recording mode)
LED FLASHING: Recording
LED OFF: Not recording

- ◆ Illumination/blinking in operational states
 - During the Gigabit Ethernet interface initialization LEDs other than POWER (green) and IF LINK/TRANS (red) blink alternately from right to left and from left to right a number of times.
 - When Factory Default is executed, LEDs other than POWER (green) and IF LINK/TRANS (red) fade out from right to left a number of times, then blink.

Reference


- For how to initialize the Gigabit Ethernet interface, and how to reset to Factory Default, refer to "4.1. Reset of Gigabit Ethernet IF's IP address and Factory Default", page 62.

1.3.4. Interchangeable Lens Mounts

The lens mount on the system can be changed according to the recording purpose. There are 2 types of interchangeable lens mounts: "G type F-mount", "C-mount".

◆ How to change the lens mount (G type F-mount → C-mount)

1. Remove the four M5 bolts with the hexagonal holes using the hexagonal wrench.
2. Remove the G type F-mount portion as a unit.
3. Install the C-mount unit using the bolts with hexagonal holes in the 90° diagonal holes.
4. After installation, always verify that the unit is not loose and does not rattle.

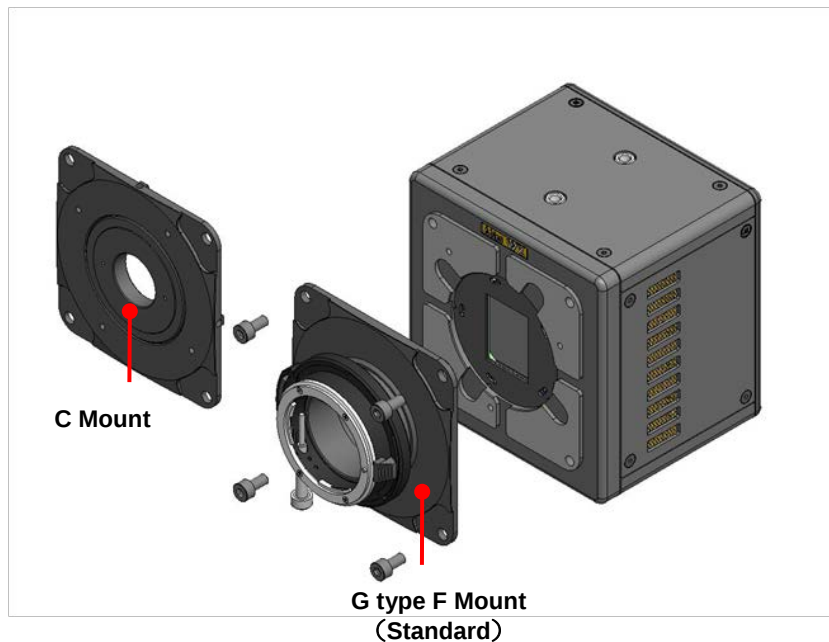



Chapter. 2 **Setup**

2.1. Connecting the system

2.2. Connecting the Gigabit Ethernet Interface to a PC

2.3. Installing PFV

2.4. PC Setup

2.1. Connecting the system

2.1.1. Connection




Supplement

- The FASTCAM camera supports 1000BASE-T (Gigabit Ethernet) only. If your PC supports 10BASE-T or 100BASE-T only, you need to install a 1000BASE-T interface board or use a switching hub that supports 10BASE-T, 100BASE-T and 1000BASE-T.

2.1.2. Connecting the AC Power Supply

Connect the supplied AC power supply unit to the power supply.

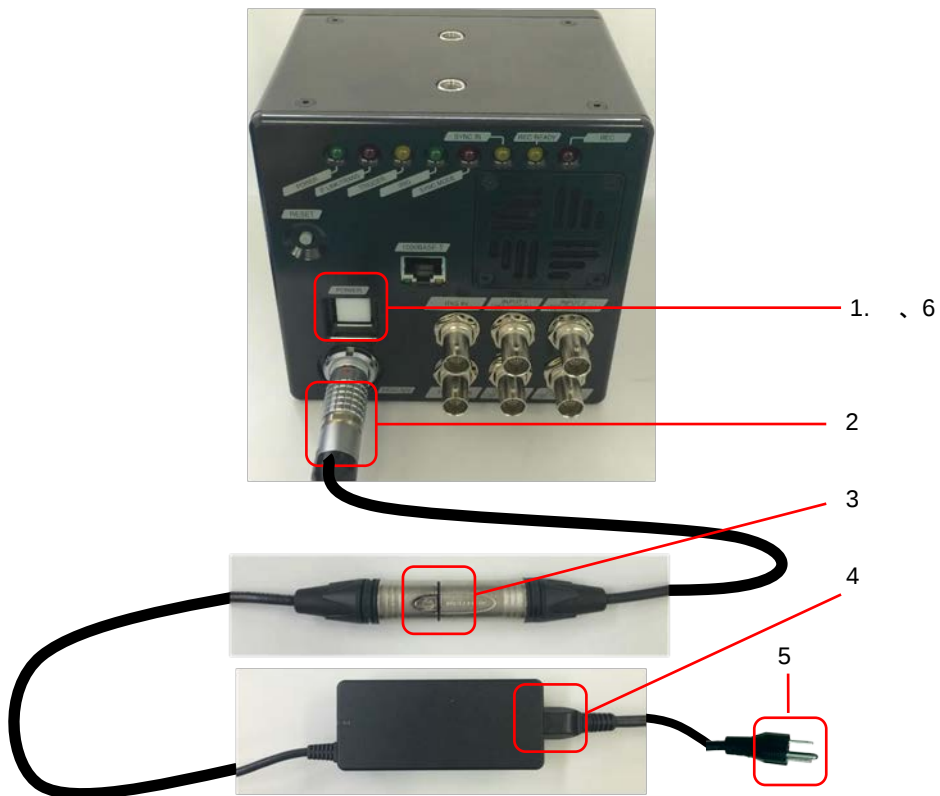

1. Confirm the Power SW is turned off.
2. Connect the DC cable to the "DC22-32V" connector on the back of the camera body.
3. Connect the DC cable to the AC power supply unit.
4. Connect the AC cable to the AC power supply unit.
5. Connect the AC cable to the power outlet.
6. Turn on the Power SW one the system.

Reference

- For the specification of the power supply which can be used, refer to "5.1.2. General Specifications", page 65.

2.2. Connecting the Gigabit Ethernet Interface to a PC

The system can have the operation of its functions performed from a PC using the Gigabit Ethernet interface. This section explains the required setup when connecting the system to a PC.

To connect a PC to the system, connect the system to a commercially available 1000BASE-T-compatible interface board with a LAN cable. If Hi-G is not required, a commercial LAN cable can be used. (Putting a ferrite core with cable rolling up twice is recommended.) For the LAN cable, prepare a UTP or STP Cat 5e (enhanced category 5) or higher LAN cable. (UTP: Unshielded Twisted Pair, STP: Shielded Twisted Pair)

The maximum cable length between the PC and the system is 100 m (compliant to the 1000BASE-T specification). One PC can connect to a maximum of 64 Photron Gigabit Ethernet interface equipped cameras using a hub. When connecting multiple devices, connect through a switching hub that can connect at 1000BASE-T. The maximum length of the cable that connects the system (or PC) to the switching hub is also 100 m.

Reference

- For the setting method of IP address for camera system, refer to “2.4.1. IP address setup for PC”, page 21.
- For the setting method of control PC, refer to “Photron FASTCAM Viewer User's Manual”.
- Please refer to the [GigabitEthernet Interface Connection Tutorial Manual] for detail instruction on PC connection setting.

Supplement

- Photron recommends using an STP cable over long distances or in noisy locations.

Important

- The system is only 1000BASE-T compatible. When using a PC compatible with only 10BASE-T or 100BASE-TX, the PC must be connected through a 10BASE-T, 100BASE-TX, and 1000BASE-T compatible switching hub.
- The system's factory default IP address is below:
IP ADDRESS > GIGABIT ETHER 192.168.0.10
NETMASK > GIGABIT ETHER 255.255.255.0
GATEWAY ADDRESS > 0.0.0.0
PORT > 2000 (Fixed, not changeable)

2.2.1. Connecting a PC

The system can have the operation of its functions performed from a PC using the Gigabit Ethernet interface.

This section explains the required setup when connecting the system to a PC.



Insert a LAN cable to “1000BASE-T” connector.

A bundled LAN cable may be different from the cable in the picture.

2.3. Installing PFV


This system is controlled by PFV.

This section explains a software installation and its setup.


1. Insert the PFV installation DVD in the DVD drive and open that drive from "Computer".




2. For a 32-bit version of Windows, open the "PFV Setup32" folder and double click "Setup.exe".
For a 64-bit version of Windows, open the "PFV Setup64" folder and double click "Setup.exe".

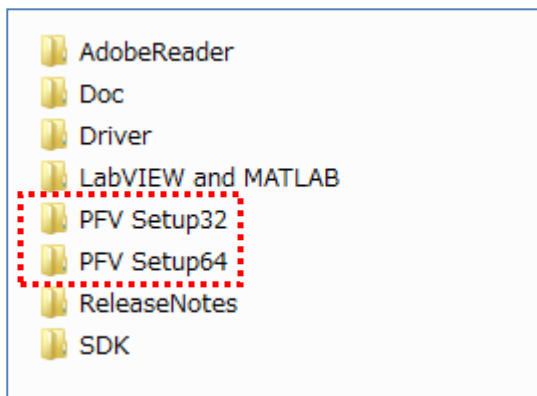

3. The setup program starts and the dialog box below is displayed.
Click the [Next] button.

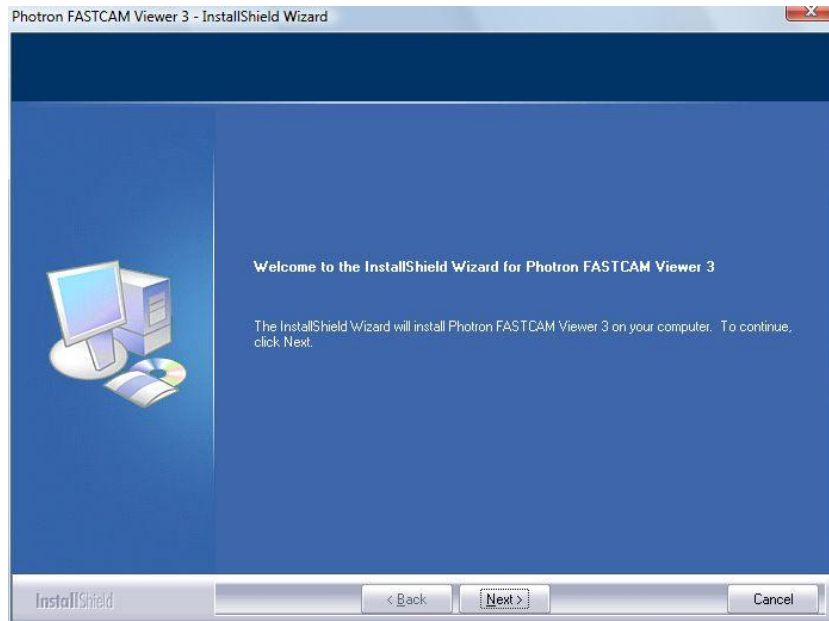


4. The license agreement is displayed. Confirm the contents and click the [Yes] button.

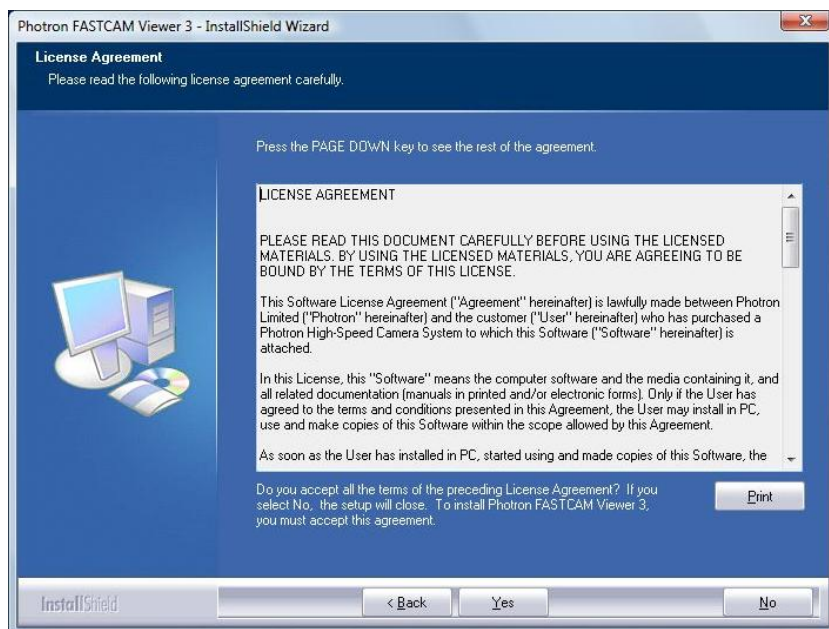


5. Specify the installation location. The default setting for the installation location is "C:\Program Files\Photron\Photron FASTCAM Viewer 3".

When necessary, click the [Browse] button and change the installation location to your preferred location.

After specifying the installation location, click the [Next] button.

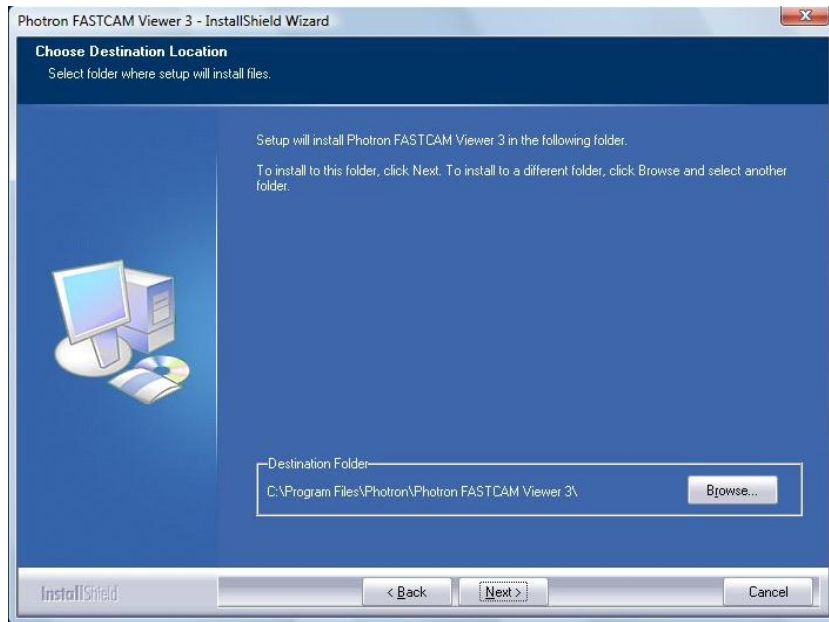

6. The installation starts, when it is completed, the screen below is displayed. Click the [Finish] button.

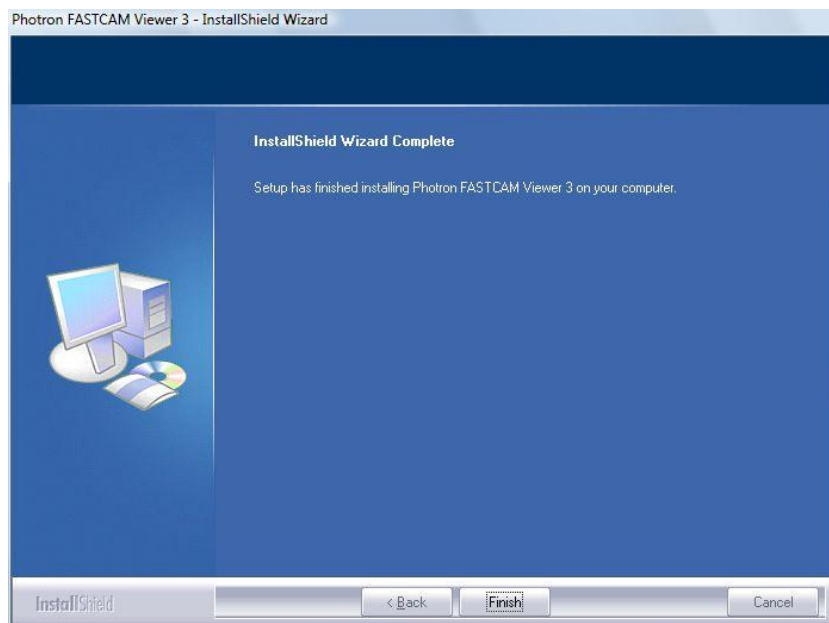


2.4. PC Setup


2.4.1. IP address setup for PC

This system is controlled by a PC via network. This section explains IP address setup for connecting the system and PC.


1. Open Start Menu, click "Control Panel"
2. Click "View network status and tasks".
If "View by:" is not "Category", Click "Network and Sharing Center".

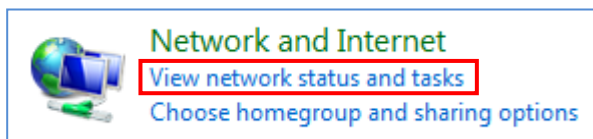


3. Click "Change adapter settings" at left side.

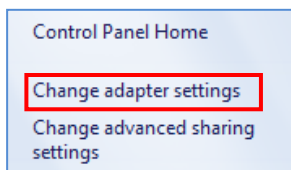

4. Network devices on the PC are displayed. Right click "Local Area Connection".
Then click "Properties".

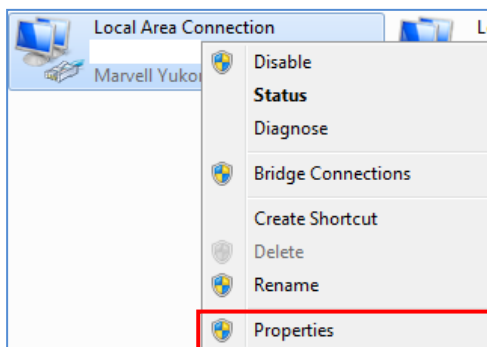


5. "Local Area Connection Properties" window is opened.
Double click "Internet Protocol Version 4 (TCP/IPv4)"

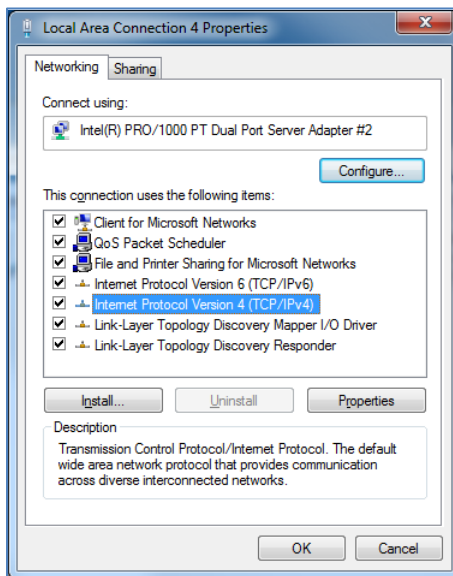

6. "Internet Protocol Version 4 (TCP/IPv4) Properties" window is opened.
Check on "Use the following IP address:" radio button.
Input IP address and Subnet mask as below, then close the window by clicking "OK".

IP address : 192 . 168 . 0 . 1
Subnet mask : 255 . 255 . 255 . 0

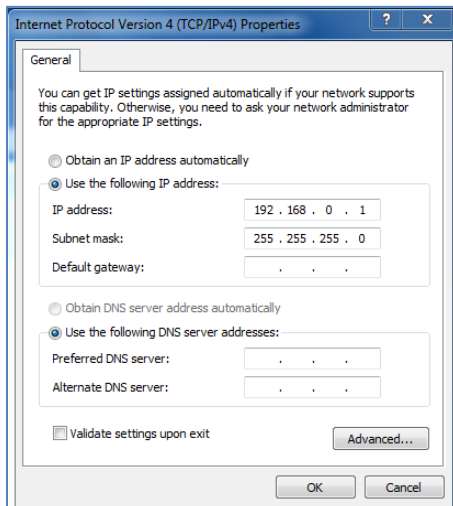


2.4.2. Windows Firewall Setup


Even if an IP address is set up, Windows Firewall blocks the connection.

This section explains how to set up that PFV is allowed through Windows Firewall.


1. Open Start Menu and click "Control Panel".
2. Click "System and Security". Then click "Allow a program through Windows Firewall"

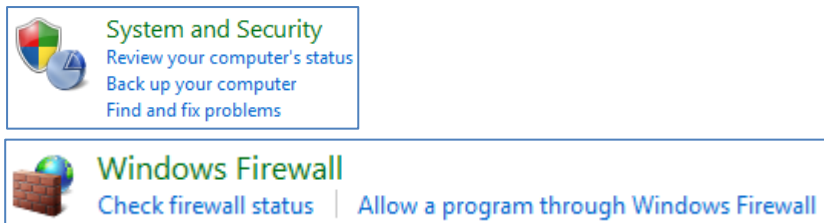


3. Click [Allow another program...] button.
If the button is gray-out. Click [Change settings] before that.

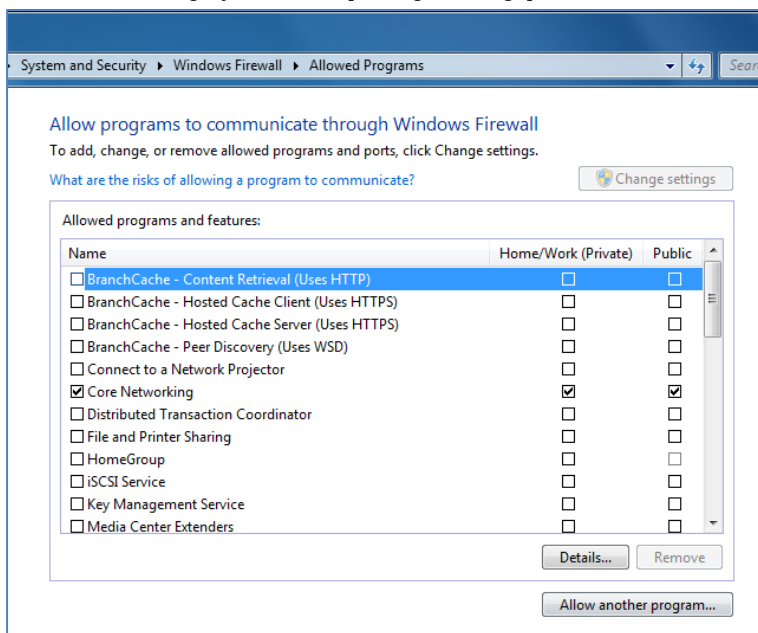

4. Select the installed "PFV Ver.XXX", then click [Add] button.

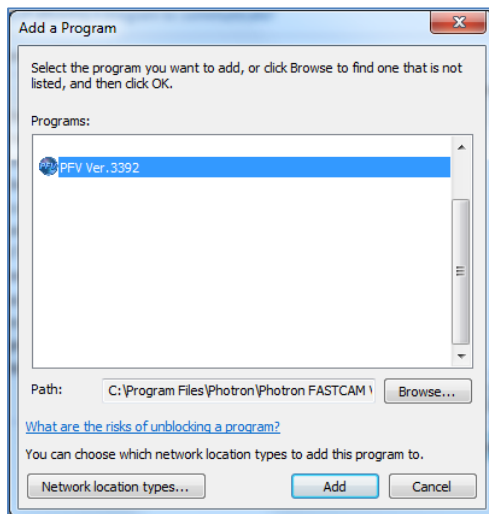

5. Click [OK] button and close the window.

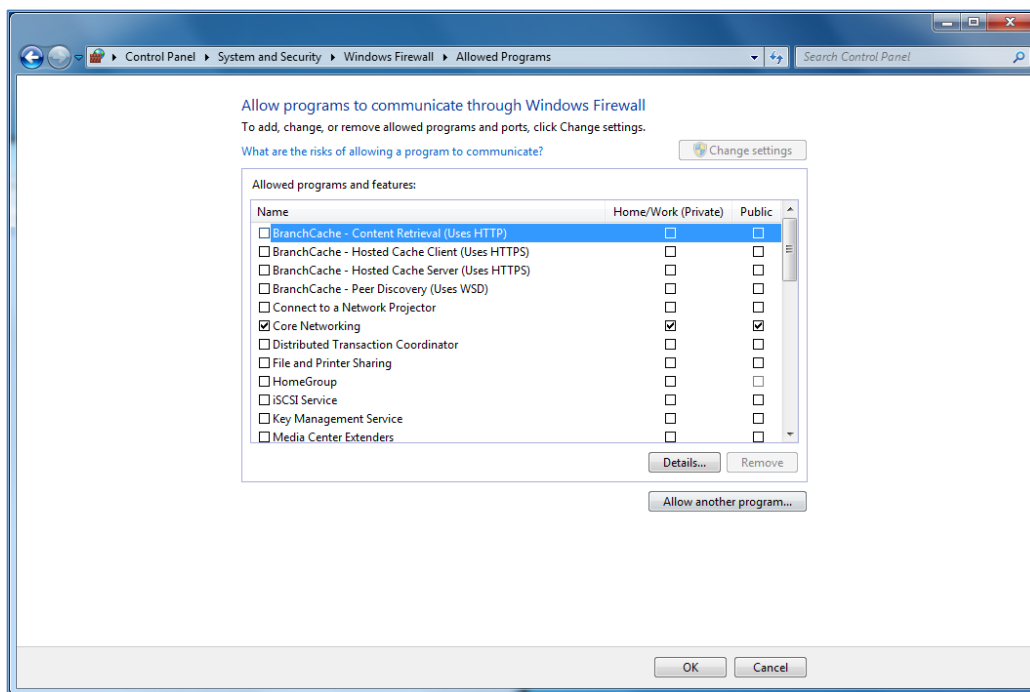

2.4.3. Connections of PC and multiple systems

The control software PFV can control multiple systems of SA / Mini series, MC2.1 and MH4-10K by connecting with one PC.



Caution

- Please do not set up conflicted IP addresses.

2.4.4. Simultaneous Replay/Record Function

With this system, the data recording memory may be divided into two active sections, which allows the user to record an ongoing event into one of the sections while replaying the image recorded in the other section.



Reference

- For information on the operation of the function, please refer to "Photron FASTCAM Viewer Users' Manual".




Chapter. 3 Functions

- 3.1. What PFV Does**
- 3.3. Selecting the Frame Rate**
- 3.4. Selecting the Resolution**
- 3.5. Selecting the Shutter Speed**
- 3.7. Selecting the Trigger Mode**
- 3.8. LOW LIGHT Mode**
- 3.9. VARIABLE Setting**
- 3.10. White Balance Adjustment (Color Models Only)**
- 3.11. Color Enhancement Function (Color Models Only)**
- 3.12. Edge Enhancement Function**
- 3.13. Partition Memory & Record**
- 3.14. Input / Output Signal Types**
- 3.15. Using External Triggers**
- 3.16. Using External Synchronization Signals**
- 3.17. INPUT / OUTPUT Signal Settings**
- 3.18. Signal Delay**
- 3.19. Event Marker Function**
- 3.20. IRIG Time Code (External Time Synchronization)**
- 3.21. Direct Trigger / Direct Start Mode**
- 3.22. Fan Control**

3.1. What PFV Does

Operating this system requires connecting PC and the system, and the control software PFV. The following figure shows functions which PFV can do. Please refer to “Photron FASTCAM Viewer User’s Manual” for the details of operation.

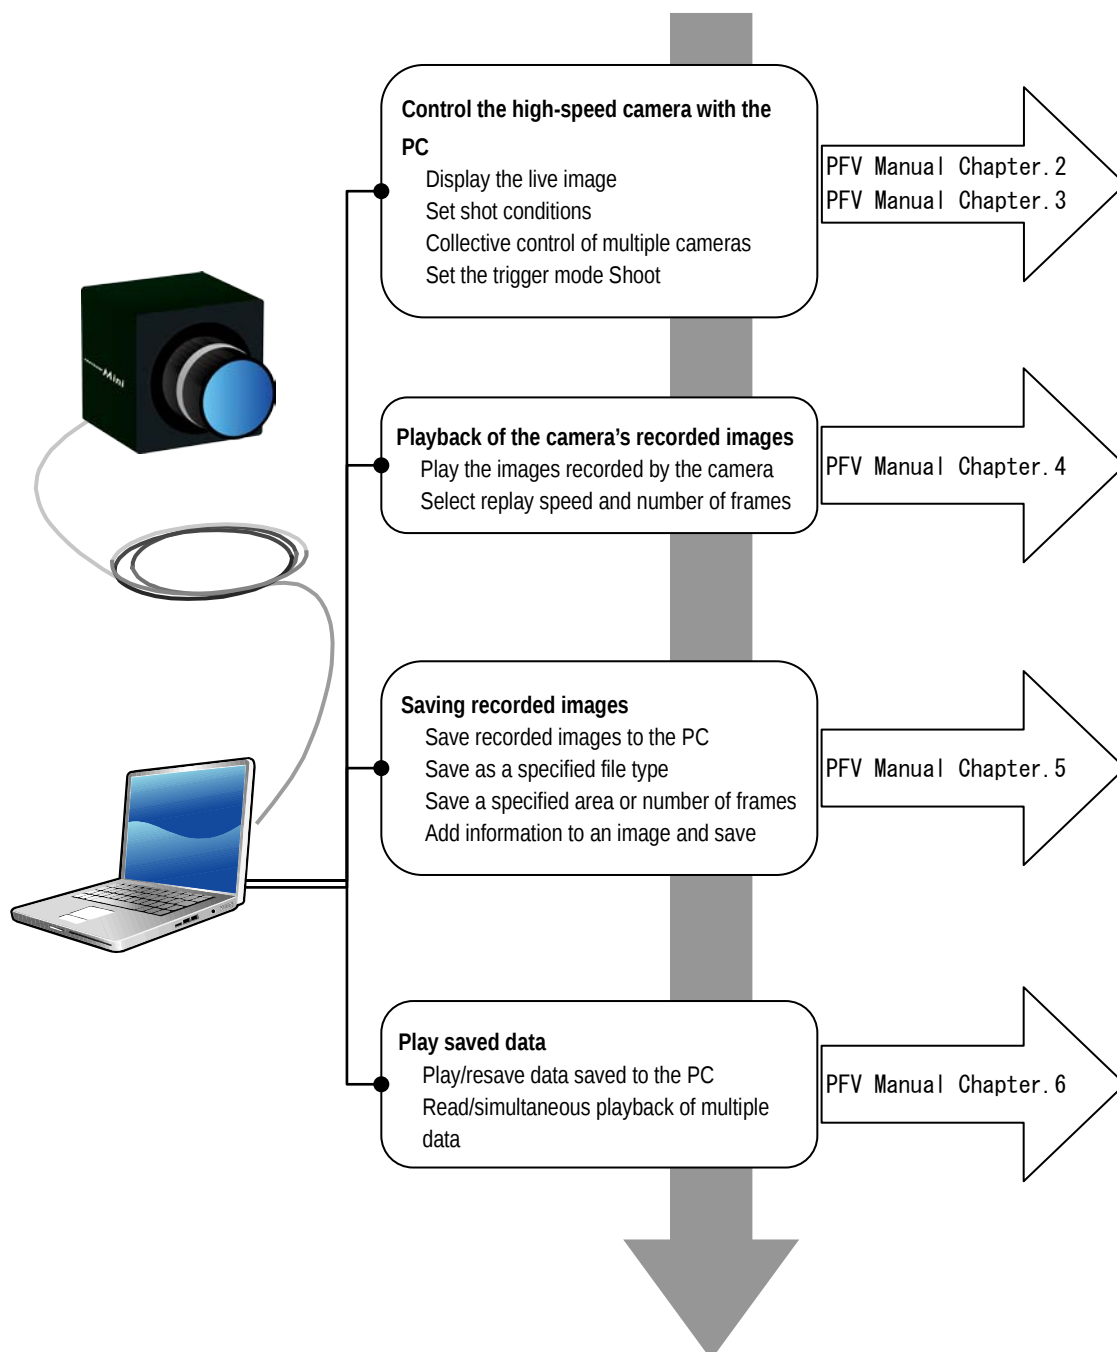

3.2. Image Initialization (Calibration)

In order to maximize the high image quality of the system, it is necessary to correct the non-uniformity in each pixel that is inherent in the image sensor.

The system is equipped with a function to correct the output value for each pixel using the black level as a standard. Using a uniform black image as the standard, each pixel's black level is set to zero.

This makes it possible to obtain faithful image output for the input light level.



Important

- In order to obtain faithful image output, execute calibration when the following settings are changed.
 - When the frame rate is changed
 - When the shutter speed is changed
 - When the resolution is changed

Also, depending on the settings, phenomena such as the following may occur.

- Fixed noise like vertical bands appears
- A portion of the screen is clear, but noise appears in the area around it

These phenomena can be resolved by executing calibration again.

3.2.1. Executing Calibration

Calibration is executed from PFV.



Reference


- For the procedure of performing this function, refer to "Remote Keypad User's Manual" or "Photron FASTCAM Viewer User's Manual".

3.2.2. About the Mechanical shutter

When using the Mechanical shutter, there is no need to shade the light since the shutter will close automatically when carrying out a calibration.

! Caution

- Mechanical shutter option physically restricts available dimension of C-mount lens.
 - Projection from the lens mount flange plane (a): maximum 8 mm
 - Diameter (b) :maximum 108 mm

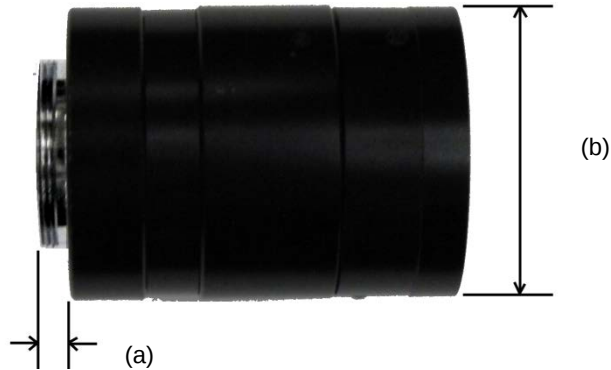

3.3. Selecting the Frame Rate

Images can be recorded with the system from 50 fps to 4,000 fps (2,000 fps for AX50) using the full 1,024x1,024 pixel resolution of the image sensor. For frame rates higher than 4,000 fps (2,000 fps for AX50), high-speed recording is achieved by limiting the read area of the image sensor.



Reference

- Please refer to “3.3 Setting and Registering the Frame Rate/Resolution” of “Photron FASTCAM Viewer User’s Manual” for the details of the setup.



Supplement

- Even if a limited horizontal resolution is applied, Frame Rate cannot be increased. This specification is different from other systems. Please refer to “5.1.5. Frame Rate and Resolution”, page. 68 for available frame rate.



Caution

- Export-controlled model type 200K is subject to restriction on the framing rate.

3.4. Selecting the Resolution

The maximum resolution of the image sensor is 1,024 x 1,024: total 1,048,576 pixels. By reducing the resolution, images can be taken with even faster frame rates, or the recording duration can be extended accordingly.



Reference

- Please refer to “3.3 Setting and Registering the Frame Rate/Resolution” of “Photron FASTCAM Viewer User’s Manual” for the details of the setup.

3.4.1. Resolution Lock

Generally, a max resolution under respective FPS will be set automatically when the FPS is changed. Under the circumstance of using a Resolution Lock function, the speed can be changed while resolution is fixed to a certain value.



Caution

- When using a Resolution Lock function, if a resolution that does not compatible with the specified FPS is selected, a max resolution under the specified speed will be set automatically instead.

3.5. Selecting the Shutter Speed

The shutter speed (Exposure time) is independent of the frame rate, and it is possible to control the exposure time in the frame using the electric shutter. By making an exposure that is of a shorter period than the frame rate, high-speed objects can be photographed blur-free.

The longest setting values of the shutter speed are as following:

- Frame rate is lower than 1,000 fps: 1/1,000 sec (1 msec)
- Frame rate is 1,000 fps or higher: one step shorter shutter speed setting than '1/frame' second.

(Please refer to the following Supplement part for the example)

The shortest setting value of shutter speed is 1/950,000 sec (approx 1.05usec).

Reference

- Please refer to “3.4 Setting the Shutter Speed” of “Photron FASTCAM Viewer User's Manual” for the details of the setup.
- For more information of Shutter Speed, refer to “5.1.6.Shutter Speed List” 72page.

Supplement

- For example, when working under 500fps, the available shutter speed varies from 1/1,000 to 1/950,000 second.

When working under 2,000fps, a shutter speed varying from one faster step than 1/2,000 second, 1/3,000 second, to 1/950,000 second can be obtained.


Caution

- Export-controlled model type 200K is subject to restriction on the framing rate.

Important

- The exposure starts at the rising edge of the EXPOSE POS signal (or the falling edge of the EXPOSE NEG signal). The exact exposure end point is on the succeeding of the falling edge of the EXPOSE POS signal in the range of maximum 1.11 micro seconds from the falling edge (referred to below as exposure uncertain interval). The position of the point varies according to the integral of the quantity of light input on the exposure indefinite interval. The relation between the light input and the output of the camera is non-linear during the exposure uncertain interval. The red diagonal areas on the following timing chart show the exposure uncertain intervals.
- The uncertain interval Δt depends on a mode setup as a follow

Setup	uncertain intervals
200K mode is OFF	Approx. 1.11unsec
200K mode is ON	Approx. 0.37usec

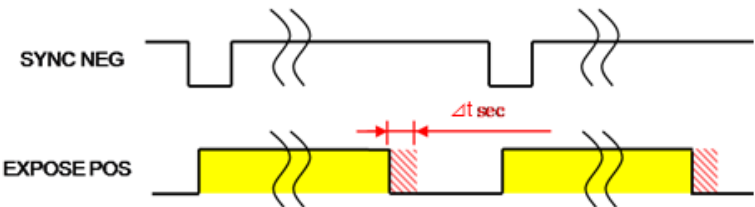

3.6. Dual Slope Shutter

DS SHUTTER is a mode that records the high brightness portion and low brightness portion in one image at the same time by adjusting the light exposure internally in the sensor. By using this function, when recording a subject with an extremely large difference in the brightness in the image, the sensor functions so that it can record at the proper light exposure for both the high brightness and low brightness portions.

The light exposure adjustment can be set from 0% to 99% to the subject to be recorded.



Caution

- This function cannot be used with the operations below.
 - When the trigger mode is RANDOM RESET
- When using the DS SHUTTER function on a color model, there are situations where the colors become unbalanced and the color reproducibility degrades.



Supplement

- The amount of adjustment is expressed as %.For the strength of the adjustment, 0% is no adjustment, 99% is the maximum effect.

3.7. Selecting the Trigger Mode

In order to reliably capture high-speed phenomena, many kinds of trigger modes have been made available. These trigger modes are explained next.

There are five types of trigger modes which are listed below.

- START
- CENTER
- END
- MANUAL
- RANDOM
- RANDOM RESET


3.7.1. START Mode

START mode is a trigger mode where recording starts the instant the trigger is input, the scene is recorded until the memory is full, and then recording ends. This mode is suitable for taking images of high-speed phenomena when what will happen, and when it happens, is known in advance. For example, in a situation with a maximum useable memory of two seconds of recording, two seconds of high-speed video is saved immediately after the trigger is input.



3.7.2. CENTER Mode

CENTER mode is a trigger mode where an equal amount of content recorded before and after the trigger is input is saved to memory. This mode is suitable for viewing before and after an important instant. For example, in a situation with a maximum useable memory for two seconds of recording, one second before and one second after the trigger was input is recorded for a total of two seconds of high-speed video.

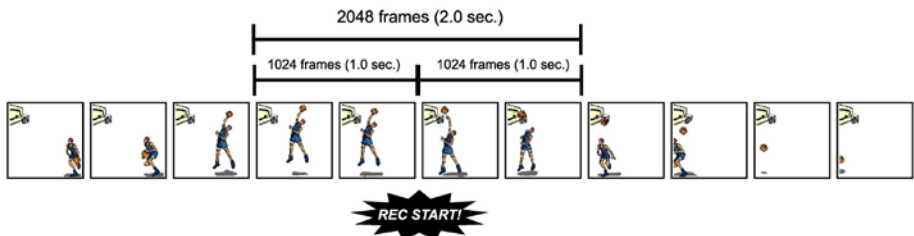


3.7.3. END Mode

END mode is a trigger mode where the content recorded immediately before the trigger is input is saved to memory. This mode is suitable for recording a high-speed phenomenon where it is hard to predict when the important action will start and stop. For example, in a situation with a maximum useable memory for two seconds of recording, the two seconds of high-speed video immediately before when the trigger was input are saved.




3.7.4. MANUAL Mode

MANUAL mode is a trigger mode, similar to CENTER mode, where the content recorded before and after the trigger is input is saved to memory, but the proportion of time before and after the trigger can be set as required. For example, in a situation with a maximum record time of two seconds, 0.5 seconds before and 1.5 seconds after the trigger is input are recorded and saved, a total of two seconds of high-speed video.

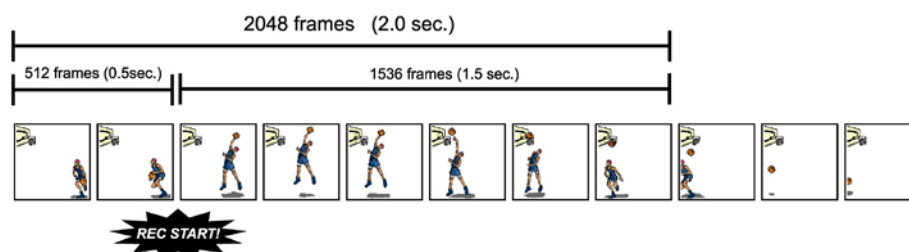


3.7.5. RANDOM Mode

RANDOM mode is a trigger mode where each time a trigger is input only a predetermined number of frames are saved to memory. For example, this function is convenient for a subject which is an irregular and repeated phenomenon which can have a trigger output produced for each cycle or occurrence. The number of frames recorded each time the trigger is input can be set as desired, in one frame increments, from one frame to the maximum of all the recordable frames available.

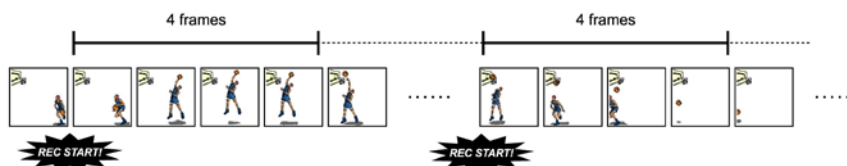

3.7.6. RANDOM RESET Mode

RANDOM RESET mode is explained here by comparing its operation with the normal mode. RANDOM RESET mode is a mode to improve the temporal accuracy of the record start timing and the timing of the trigger input, where, to put it simply, with the input of the trigger signal, at the timing that it is input, the camera's record timing is reset.

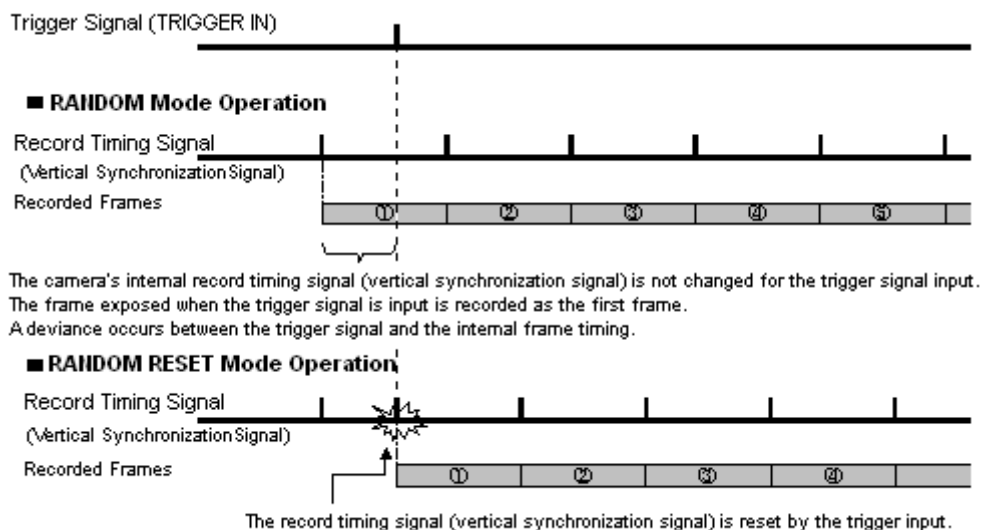

When the camera is set to the normal RANDOM mode (the same as START mode) and RANDOM RESET mode, the difference in the recording operation for the trigger input is shown graphically. In the normal RANDOM mode and START mode, the camera starts recording when the trigger is input, but the internal record timing signal is independent and it operates regardless of when the trigger is input. For this reason, there may be situations where the start time of the first frame when the trigger is input is advanced almost a full frame. The range of this overlap also cannot be known. On the other hand, in RANDOM RESET mode, the camera's internal record timing signal is reset by the trigger input and operates anew. For this reason, the trigger input time and the timing of the start of the first frame are the same. The interval from when the trigger is input until the exposure begins is approximately 2.3 μ s.

! Caution

- When you perform continuation photography using a random reset mode, please prepare the interval of at least 1 or more Frame.
(In 1000fps, the interval of 1/1000 sec is required)

3.8. LOW LIGHT Mode

The more you increase the frame rate or shutter speed of the camera, the more the amount of light entering the camera decreases, making the displayed image darker. Low light mode is a function that temporarily increases the exposure time, making the displayed image easier to see to enable you to focus and setup the camera.

The default shutter speed of this product is 1/50 second.

3.9. VARIABLE Setting

In the recording conditions settings, the frame rate and resolution can be set to the desired value following the conditions listed below.

- FRAMERATE can be set between 50 fps and 540,000 fps. (between 50 fps and 170,000 fps for AX50)
- The size and horizontal position of the resolution can be set in 128 (horizontal) and 16(vertical) increments.
- The minimum resolution is 128 (horizontal) and 16 (vertical).

Reference

- Please refer to “3.3 Setting and Registering the Frame Rate/Resolution” of “Photron FASTCAM Viewer User's Manual” for the details of the setup.

Supplement

- The area cannot be moved to the vertical/horizontal direction at the variable setting of the system.

3.10. White Balance Adjustment (Color Models Only)

On digital video cameras, photographing white as pure white is described as "having the appropriate white balance." On the system's color models as well, in order to take images with the correct color representation, the white balance must be adjusted for the color temperature of the light source used. The intensity of each color, R, G, and B, can be adjusted on this system. By adjusting the balance of those three colors to match the light source used, the appropriate white balance can be achieved. Two methods are available for adjusting the white balance, preset and user-editable white balance. These methods are explained in this section.

3.10.1. Using Preset White Balance

With the system, there are two types of white balance presets (5100K, 3100K) for use with common light sources. The suggested color temperature for these presets is listed below.

5100K (Daylight, Outdoors)

3100K (Halogen Light Source)

3.10.2. Using User White Balance

User white balance can be set in order to achieve the most appropriate white balance for the light source used with the system and the conditions during recording.

The values set here are stored in the camera body's internal memory as the user preset, and they can be loaded by selecting USER.

There are also two methods for setting user white balance, AUTO USER and EDIT USER.

Reference

- Please refer to "3.8 Other Settings" of "Photron FASTCAM Viewer User's Manual" for the details of the setup.

3.11. Color Enhancement Function (Color Models Only)

Color models feature an image color enhancement setting. The image color enhancement level can be adjusted in five steps, including the OFF setting.

Menu Display	Contents
OFF	Turns the color enhancement mode off
x 0.5 (LEVEL1)	Sets x0.5 color enhancement
x 1 (LEVEL2)	Sets x1 (default) color enhancement
x 1.5 (LEVEL3)	Sets x1.5 color enhancement
x 2 (LEVEL4)	Sets x2 color enhancement

Reference

- Please refer to “3.8 Other Settings” of “Photron FASTCAM Viewer User’s Manual” for the details of the setup.

3.12. Edge Enhancement Function

With the system's edge enhancement setting, you can enhance the edges in the recorded image in three steps.

Menu Display	Contents
OFF	Edge enhancement off.
LEVEL1	Edge enhancement set to weak.
LEVEL2	Edge enhancement set to medium.
LEVEL3	Edge enhancement set to strong.

Reference

- Please refer to “3.8 Other Settings” of “Photron FASTCAM Viewer User’s Manual” for the details of the setup.

3.13. Partition Memory & Record

The system contains internally 4 GB standard, or a maximum of 16 GB, of high-capacity memory for recording use.

This recording memory can be partitioned and assigned to each recording. Memory is partitioned into equal sizes and a maximum of 64 partitions can be set. The partitioned sections are managed by ID numbers.

Each section can be set with completely independent recording conditions, so this feature is convenient when taking consecutive recordings with changed conditions.

Reference


- Please refer to “3.8 Other Settings” of “Photron FASTCAM Viewer User’s Manual” for the details of the setup.

3.14. Input / Output Signal Types

With the system, many signals can be input and output through the I/O connector. Signals that can be input and output from the I/O connector are listed below.



A signal other than the specified signal must not be input to the various connectors.
Use extreme caution as there is a risk of damage to both, the input device and the output device.

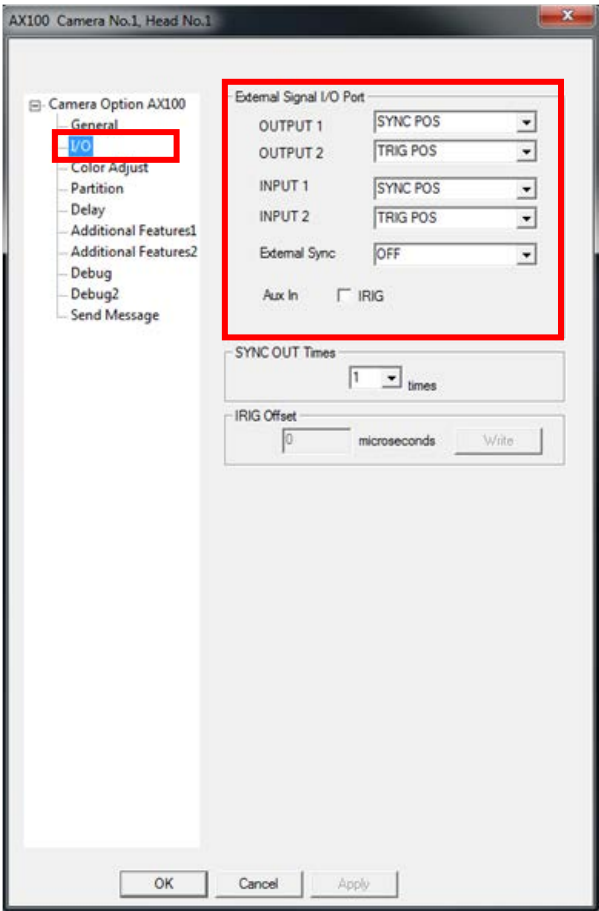

Reference

- Please refer to “3.8 Other Settings” of “Photron FASTCAM Viewer User’s Manual” for the details of the setup.

The followings are I/O connectors and related signals.

3.14.1. TRIG SW IN Connector

This trigger is input during the READY or ENDLESS recording state by contact between the BNC connector's shield and a center pin (switch closure). The center pin normally has voltage flowing through it. Use caution to avoiding contact with other pins.

3.14.2. IRIG IN Connector

IRIG signal is input from other equipment.

3.14.3. INPUT(1,2) Connector

The effect when a signal is input is described below, and can be optionally selected and set. The input voltage is 0V to +12V (H level +2.5V to +12V), positive or negative polarity, pulse width is 200 ns or greater.

Default settings are INPUT1 connector is assigned "SYNC POS", INPUT2 connector is assigned "TRIG POS".

SYNC POS/NEG	Inputs a synchronization signal from another camera or other equipment.
TRIG POS/NEG	Inputs a TTL signal to control start/end of recording. The system's status should be set READY or ENDLESS.
READY POS/NEG	Inputs a change recording ready status signal (READY ON/OFF).
EVENT POS/NEG	Inputs a signal for the event trigger.

Reference

- Please refer to "3.19.Event Marker Function for the event trigger. 58 page

Supplement

- When 2 or more these systems are synchronized, slave cameras' external synchronization settings should be set "ON CAM" at PFV.

3.14.4. OUTPUT (1, 2) Connector

These are also BNC connectors. The signals below can be changed and output from PFV. The output voltage is 0V to +5V, positive or negative polarity, pulse width can be changed. Default settings are OUTPUT1 connector is "SYNC POS", OUTPUT2 is "TRIG POS".

(POS: positive polarity, NEG: negative)

SYNC POS/NEG	Outputs a vertical synchronization signal.
EXPOSE POS/NEG	Outputs the camera's exposure period signal. * Outputs during both LIVE and recording.
REC POS/NEG	Outputs a signal during recording.
TRIG POS/NEG	Outputs the trigger signal the camera received.
READY POS/NEG	Outputs a signal that indicates the recording ready state.

3.15. Using External Triggers

With the system, you can record by receiving various trigger signals matched to the recording application. The trigger signals that can be used on the system are explained here, along with a description of how to use them.

3.15.1. Inputting an External Trigger Signal

The external trigger signals that can be used with the system and their input system are listed below.

Connector Name (Input System)	Menu	Signal
INPUT	TRIG POS	FET Input 0V - +12V (H level +2.5V to +12V), Positive Polarity
	TRIG NEG	FET Input 0V - +12V (H level +2.5V to +12V), Negative Polarity
TRIG SW IN	None	Contact signal

When a trigger signal is input to INPUT connector, this item should be set to a signal type.




Use caution not to input more than specified voltage or current to the INPUT trigger signal inputs as there is a risk of damage to the equipment.



Reference

- For the setting method of the signal inputted into INPUT, refer to “3.17.1. INPUT / OUTPUT Signal Settings”, page 54.

◆ INPUT, TRIG SW IN Circuit Diagram

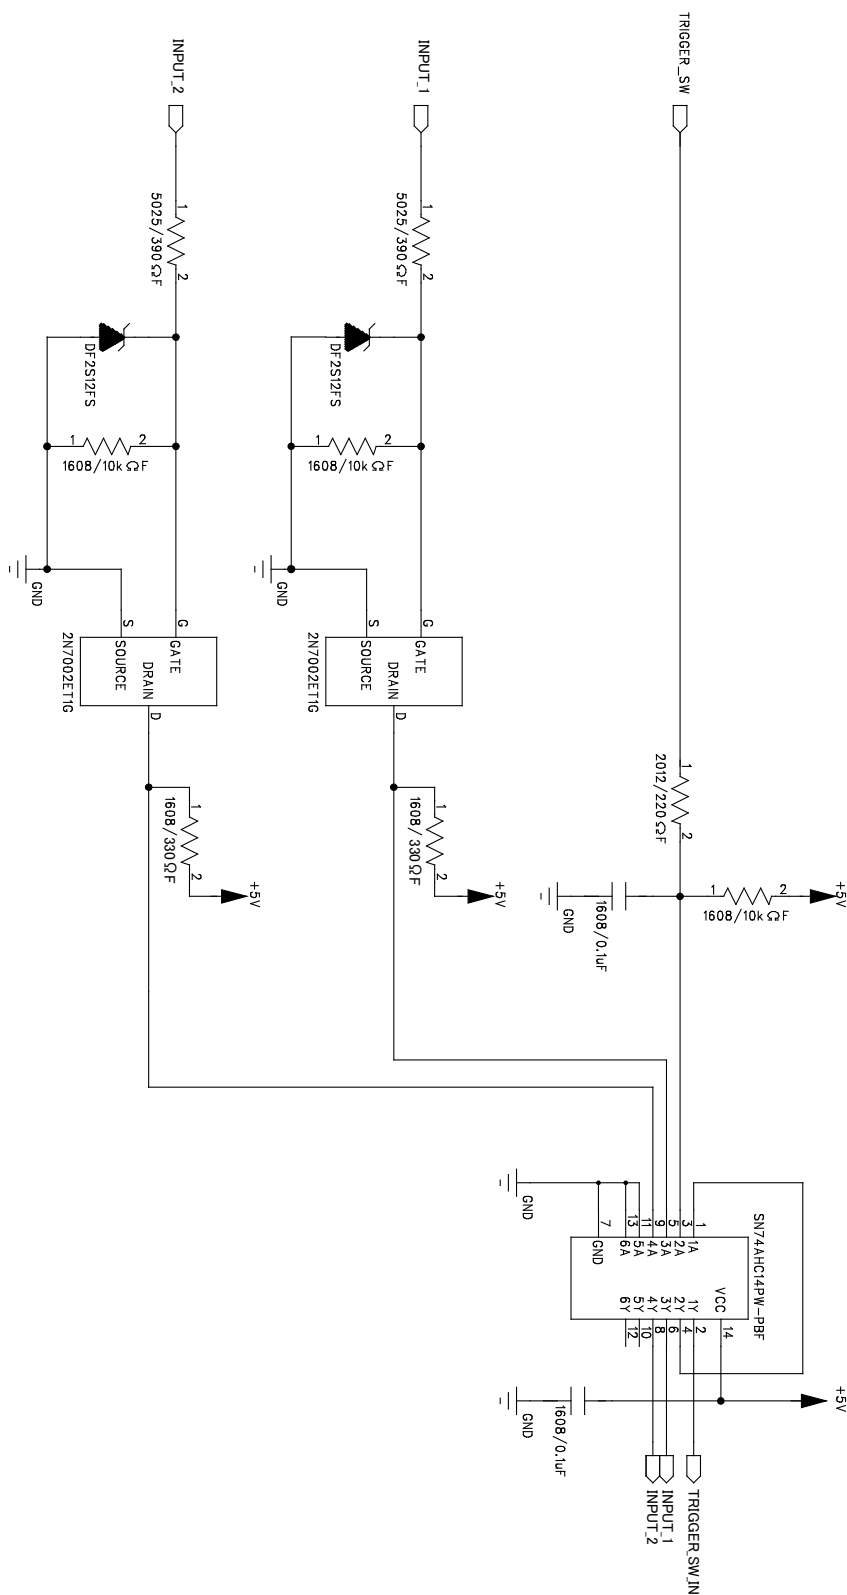

3.15.2. Outputting External Trigger Signals

With the system, you can externally output trigger signals. Output can also be optionally set from the OUTPUT connector.

The chart below summarizes the output systems and the signals that can be output.

Connector Name (Output System)	Menu Setting	Signal Type	Delay Time
OUTPUT	TRIG POS	TTL, SW, SOFT, all TRIG pulse output CMOS (74LVC2T45 buffer) output, Positive Polarity.	For TRIG SW IN, approx. 20usec. For INPUT, approx. POS: 110n sec. NEG: 110n sec
	TRIG NEG	TTL, SW, SOFT, all TRIG pulse output CMOS (74LVC2T45 buffer) output, Negative Polarity.	

3.16. Using External Synchronization Signals

An external synchronization mode to synchronize to an external signal is provided on the system. By using an external synchronization signal, recording can be conducted using multiple cameras to synchronize the timing of the shots or to also synchronize the shots with external measuring devices and lighting. The procedure and precautions for using the external synchronization signal are explained below.

3.16.1. Inputting an External Synchronization Signal

When INPUT 1 or 2 is set to SYNC POS/NEG, an external synchronization signal can be input with the system. See the chart below for external synchronization input settings.

Menu Display	Contents	Signal (Input Signal Conditions)
OFF	Sets external synchronization off, operates independently.	(none)
ON CAM POS	Synchronizes to a positive polarity signal from the system.	FET Input 0V - +12V (H level +2.5V to +12V), Positive Polarity
ON CAM NEG	Synchronizes to a negative polarity signal from the system.	FET Input 0V - +12V (H level +2.5V to +12V), Negative Polarity
ON OTHERS POS	Synchronizes to a positive polarity signal from an external device (including other Photron products).	FET Input 0V - +12V (H level +2.5V to +12V), Positive Polarity
ON OTHERS NEG	Synchronizes to a negative polarity signal from an external device (including other Photron products).	FET Input 0V - +12V (H level +2.5V to +12V), Negative Polarity

3.16.2. Outputting an External Synchronization Signal

The system can externally output a synchronization signal.

Menu Display	Contents	Signal Type	Delay Time
SYNC POS	Outputs a positive polarity vertical synchronization signal.	CMOS (74LVC2T45 buffer) output, positive polarity	Approx. 168nsec
SYNC NEG	Outputs a negative polarity vertical synchronization signal.	CMOS (74LVC2T45 buffer) output, negative polarity	Approx. 168nsec

3.16.3. Synchronization with a variable frequency


When synchronizing with a varying input frequency signal, the frame rate and resolution specified before recording will be kept as a maximum value.

3.16.4. Synchronizing Multiple FASTCAM Mini AX50/100 Systems

(Multiple Unit Synchronized Recording)

The system can perform synchronized recording by synchronizing multiple units using external.

◆ Synchronization input/output

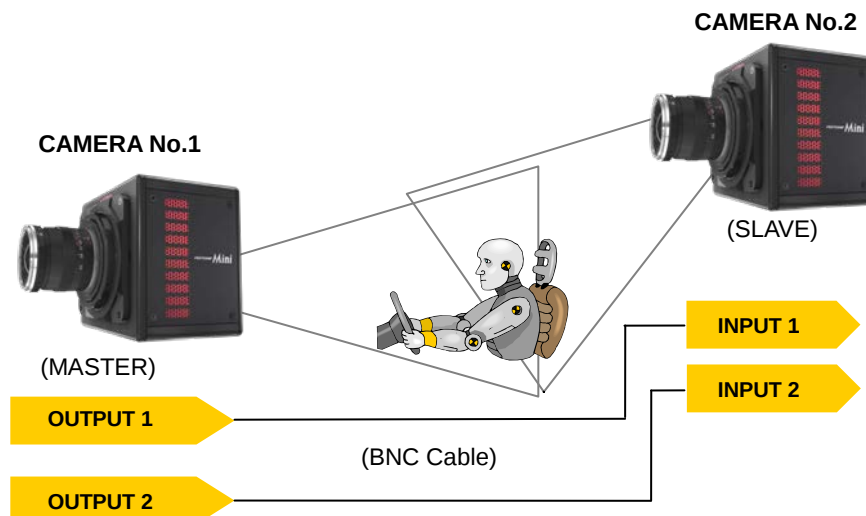

Synchronized recording settings using the system are made with PFV. The conceptual settings when performing synchronized recording using two systems are explained here. First, decide which camera to make the master camera (outputs the synchronization signal) and the slave camera (receives the synchronization signal) from the two systems to use for synchronized recording.

◆ Setting the Master Camera (Outputs Synchronization)

Set the signal output for the master camera which will output the synchronization signal. Synchronization signal settings are made with PFV.

1. Verify that the camera mode is in LIVE mode (the image displayed is passed through from the camera). If the system is in a mode other than LIVE mode, check "Live" on the camera control panel.
2. Select I/O on the left tree from "Camera Option" on the camera control panel.
3. Ensure that "OUTPUT1" is set "SYNC POS".
4. Ensure that "OUTPUT2" is set "TRIG POS".


◆ Setting the Slave Camera (Receives the Synchronization Signal)

Next, set the synchronization signal input for the slave camera which will receive the synchronization signal supplied by the master camera. Synchronization signal settings are made with PFV.

1. Input a synchronization signal to the slave camera. Connect the master camera's INPUT1 connector and the slave camera's INPUT1 connector with a BNC cable. When a synchronization signal is input to INPUT1 connector, SYNC IN LED (yellow) on the slave camera's back side lights.
2. Ensure the camera mode is "LIVE" (a live image is displayed). If the camera mode is set others, check on "LIVE" at the control panel.
3. Select "I/O" at "Camera Option" of the control panel.
4. Ensure "INPUT1" is set "SYNC POS".
5. Ensure "INPUT2" is set "TRIG POS".
6. Set "ON CAM POS" at "SYNC IN".

! Caution

- When a recording is started by pushing REC button on PFV, check on "No trigger input from PFV" at "Configuration > Record Option > Trigger input setting to slave camera".

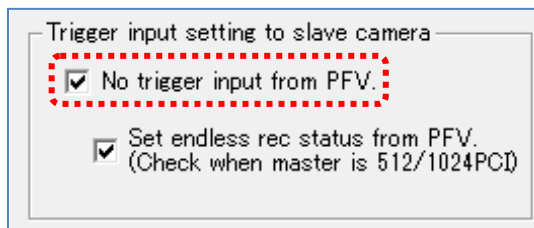

! Important

- If steps, 2 to 3 are completed when no synchronization signal is being input, the camera will not operate normally. As detailed in the procedure, make the settings when the signal is being input.


3.16.5. Synchronizing the System with Other External Devices

(Frame Rate Synchronized Recording)

With the system, in addition to the frame rate preset in the system, a function has been provided where you can receive a synchronization signal externally, set the frame rate with that frequency, and record.

In this way, for example, the system can be synchronized with a dynamic body that spins at 1,350 revolutions a second to conduct high-speed recording at 1,350 fps. This can open up broad applications that were unavailable until now.

◆ Conceptual Diagram of External Synchronized Recording

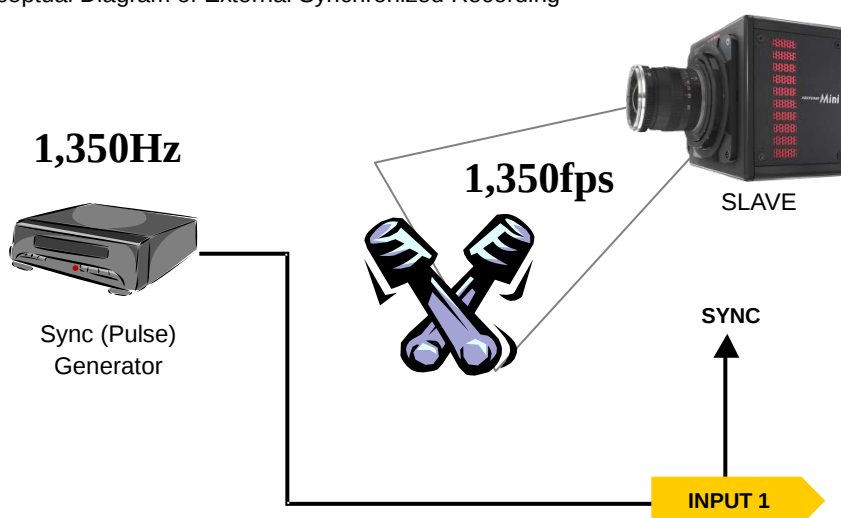

This function using an external synchronization signal to synchronize the camera to the desired frame rate is explained here.



Important

- When conducting frame rate synchronization recording with the system, the input signal must meet the following conditions.
 - FET Input 0V - +12V (H level +2.5V to +12V), positive polarity or negative polarity
 - 50 Hz to 540,000 Hz (50Hz ~ 170,000Hz for AX50)

◆ System Settings

Frame rate synchronization signal settings on the system are made with PFV.

1. Input a synchronization signal to the camera from a synchronization signal generator. Connect the generator's output connector and the camera's INPUT1 connector with a BNC cable.
2. When a synchronization signal is input to INPUT1 connector, SYNC IN LED (yellow) on the slave camera's back side lights. (*When a synchronization signal is stopped, the LED turns off.)
3. Ensure the camera mode is "LIVE" (a live image is displayed). If the camera mode is set others, check on "LIVE" at the control panel.
4. Select "I/O" at "Camera Option" of the control panel.
5. Ensure "INPUT1" is set "SYNC POS" or "SYNC NEG".
6. Set "ON OTHERS" at "SYNC IN".

! Caution

- If no synchronization signal is input or the synchronization signal is lost, a refreshing live image is stopped.
- If steps 3 through 6 are done inputting a signal over 540,000Hz(170,000Hz for AX50) , the window shows "OVER SYNC".
- A minute error occurs in the input synchronization signal due to the construction of the internal circuitry of this function.

An error of ± 21.8 ns occurs for the input synchronization signal in the actual operation.

Since the frame rate display value on the monitor is in 1Hz units, the error may be shown larger than the actual operation (an error of about ± 1.5 Hz is produced).

For example, when performing external device synchronization inputting a synchronization signal of 10000Hz, the monitor display error is:

10,000 Hz ± 1 Hz = 9,999 fps to 10,001 fps.

! Caution

- Export-controlled model types 200K are subject to certain restriction on the framing rate and, because of the restriction, there are some frequencies that cannot be selected.

3.16.6. Synchronizing the System with Other Cameras

(Mixed Device Synchronized Recording)

Using the function (frame rate synchronization recording) in the previous section, "3.16.5. Synchronizing the System with Other External Devices(Frame Rate Synchronized Recording)", mixed-type synchronized recording can be performed with Photron's other high-speed cameras (except for some older products).

◆ Basic Process

1. Decide the master camera (the source of the synchronization signal) and the slave camera (the camera that will operate according to the synchronization signal from the master). Basically, by making the master camera the camera with the lowest maximum frame rate that can be set, you can avoid setting a synchronization signal speed the slave camera cannot receive.
2. Connect the master camera's Sync output connector to the slave camera's V-SYNC input connector with a BNC cable, select the synchronization signal output polarity on the master camera, and then set the slave camera to be operated by that signal.



Reference

- For camera models that can perform synchronized recording or for detailed instructions on making the settings, contact Photron at the contact information in "84. Contact Information"page 84.

3.17. INPUT / OUTPUT Signal Settings

3.17.1. INPUT Signal Settings

Details of the signals output from the INPUT connector explained in section “3.14. Contact Information” is shown in the chart below.

There are two INPUT connectors and individual settings can be made for each connector.

Menu Display	Contents	Signal (Input Signal Conditions)
TRIG POS	Inputs a positive polarity trigger signal.	FET Input 0V - +12V (H level +2.5V to +12V), Positive Polarity
TRIG NEG	Inputs a negative polarity trigger signal.	FET Input 0V - +12V (H level +2.5V to +12V), Negative Polarity
READY POS	Inputs a positive polarity READY signal. READY ON/OFF is switched by a pulse input.	FET Input 0V - +12V (H level +2.5V to +12V), Positive Polarity
READY NEG	Inputs a negative polarity READY signal. READY ON/OFF is switched by a pulse input.	FET Input 0V - +12V (H level +2.5V to +12V), Negative Polarity
EVENT POS	Inputs a positive polarity EVENT signal. EVENT TRIGGER is recorded by a pulse input.	FET Input 0V - +12V (H level +2.5V to +12V), Positive Polarity
EVENT NEG	Inputs a negative polarity EVENT signal. EVENT TRIGGER is recorded by a pulse input.	FET Input 0V - +12V (H level +2.5V to +12V), Negative Polarity



When using the camera as a part of a system, verify the characteristics of the input signals before using them.

3.17.2. OUTPUT Signal Settings

Details of the signals output from the OUTPUT connector explained in section “3.14. Contact Information” is shown in the chart below. There are two OUTPUT connectors and individual settings can be made for each connector.

Menu Display	Contents	Signal Type
SYNC POS	Outputs a positive polarity vertical synchronization signal.	+5V CMOS output, Positive Polarity
SYNC NEG	Outputs a negative polarity vertical synchronization signal.	+5V CMOS output, Negative Polarity
EXPOSE POS	Outputs the sensor's exposure interval at H level.	+5V CMOS output, Positive Polarity
EXPOSE NEG	Outputs the sensor's exposure interval at L level.	+5V CMOS output, Negative Polarity
REC POS	Outputs an interval signal during recording at H level.	+5V CMOS output, Positive Polarity
REC NEG	Outputs an interval signal during recording at L level.	+5V CMOS output Negative Polarity
TRIG POS	Outputs the trigger signal received by the camera at H level.	+5V CMOS output, Positive Polarity
TRIG NEG	Outputs the trigger signal received by the camera at L level.	+5V CMOS output, Negative Polarity
READY POS	Outputs a signal at H level during the trigger wait state. (READY in START mode.) Only valid during START, CENTER, END, and MANUAL modes.	+5V CMOS output, Positive Polarity
READY NEG	Outputs a signal at L level during the trigger wait state. (ENDLESS recording state in CENTER, END, MANUAL) Only valid during START, CENTER, END, and MANUAL modes.	+5V CMOS output, Negative Polarity



When using as a part of a system, verify the characteristics of the output signals before using them.

3.18. Signal Delay

With the system, you can set the signal delay time or pulse width for the various signals that are input and output. Pulse width and delay settings for the various signals to input/output are made with PFV. The content of each setting is listed in the chart below.


Setting Item	Setting Range (Value)
TRIG TTL IN DELAY	0-5 (s) 100 ns units
SYNC IN DELAY	0-1/frame rate (s) 100 ns units
GENERAL IN DELAY	0-5 (s) 100 ns units
TRIG OUT WIDTH	0-1/frame rate (s) 100 ns units
SYNC OUT DELAY	0-1/frame rate (s) 100 ns units
SYNC OUT WIDTH	0-500 (us), 1/frame rate (s) at 2,000 fps or higher 100 ns units
EXPOSE OUT DELAY	0-1/frame rate (s) 100 ns units
SYNC OUT TIMES	0.5, 1, 2, 4, 6, 8, 10, 20, 30 (* x1 is standard output)

◆ SYNC OUT TIMES

Output a SYNC (vertical synchronization signal) from SYNC OUT that is X times SYNC.


Example: For a frame rate of 1,000 fps, SYNC OUT TIMES setting of 2.

1,000 fps Synchronization Signal

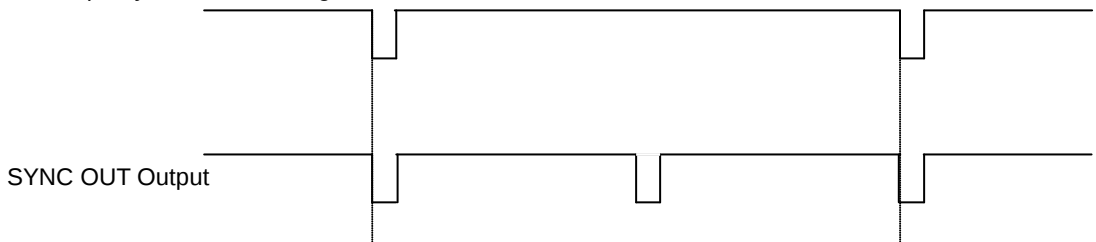

Example: For a frame rate of 1,000 fps, SYNC OUT TIMES setting of 4.

1,000 fps Synchronization Signal

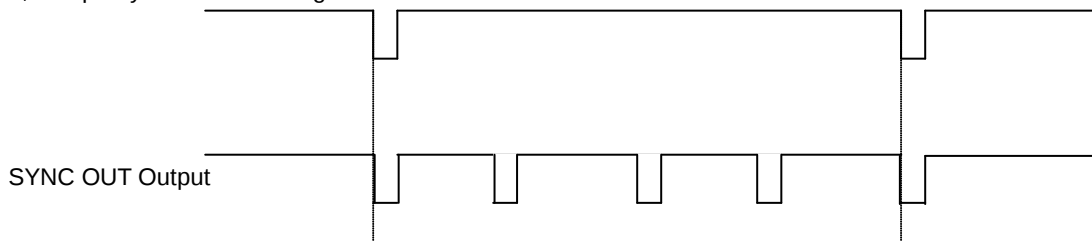

Reference

- Please refer to “3.8 Other Settings” of “Photron FASTCAM Viewer User’s Manual” for the details of the setup.



Caution

- An accurate frequency is output, but when SYNC OUT TIMES is set to a large value with a high frame rate, the setting may result in frequency errors.
- There are following limitations in SYNC OUT TIMES function(-170,000fps for AX50)

Frame Rate		Restriction
50fps	- 60,000fps	No Limit
60,001fps	- 90,000fps	x30 is unavailable
90,001fps	- 500,000fps	x20 and x30 are unavailable
500,001fps	- 540,000fps	x8, x10, x20 and x30 are unavailable



Caution

- Export-controlled model types 200K are subject to certain restriction on the framing rate.

3.19. Event Marker Function

With the system, it is possible to input an external signal during recording, at the instant the frame number is stored, and during playback you can immediately access, or jump to, the stored frame numbers (event markers). This a separate feature from the trigger point, by marking interesting points during recording, these points can be easily called up for review during playback. The event marker can store ten positions within a sequence.

The frame number recording occurs on the pulse's edge, and the next frame after the pulse's edge is input is stored as the event marker. Event marker settings can be made with PFV.

3.20. IRIG Time Code (External Time Synchronization)

The system supports IRIG-B input and can add an IRIG code to each recorded frame. The sample timing for the IRIG code is once each frame.

The recorded IRIG code is displayed with the PFV.

◆ IRIG Code Input Specification

Connector	BNC
Code Format	IRIG-B (122) Analog
Amplitude	3.0Vp-p min, 8.0Vp-p max
Mark to space ratio	3:1 to 6:1
Typical modulated carrier signal ratio	10:1

Reference

- Please refer to “3.8 Other Settings” of “Photron FASTCAM Viewer User's Manual” for the details of the setup.

Supplement

- IRIG Time Code is used when synchronizing a camera with external equipment in time.
It is a convenient function when apparatus is physically separated.
- When the IRIG code is being input, the IRIG code is displayed in white, and is displayed to the left.
- The IRIG offset time is also displayed below it. When the IRIG code is not being input, the IRIG code is displayed in grey. At that time, the counter is the camera's internal counter and it continues to count.

3.21. Direct Trigger / Direct Start Mode

The system recording operation responding to an input trigger signal can be configured according to varies of customer's needs.

- DIRECT TRIGGER Mode (This mode is NOT supported on PFV software)
 - START TRIGGER Mode
Recording starts immediately upon the second trigger input.
 - CENTER, END, MANUAL TRIGGER Mode
Once the trigger signal is input, the camera will be shifted to endless recording state.
- DIRECT START Mode
 - START TRIGGER Mode
The same operation as when the direct trigger mode is off.
 - CENTER, END, and MANUAL TRIGGER Modes
Once the trigger signal is input, the camera is shifted to endless recording state. In this circumstance, either the "RECORD" button of PFV software or the INPUT Connector under ReadyPos state.

Reference

- Please refer to "3.8 Other Settings" of "Photron FASTCAM Viewer User's Manual" for the details of the setup.
- For details of GENERL IN signal settings, refer to "3.17.1. INPUT Signal Settings", page54.

3.22. Fan Controll

This product has Fan Controll feature which makes it possible to stop the cooling fan temporarily. This feature works only within a range of temperature in which the current temperature does not adversely affect the operation of the camera. While the camera is in operation, the fan automatically stops and starts detecting the current temperature within the camera: the fan stops as soon as the temperature gets lower than the preset temperature, and starts when the temperature gets to the higher limit.

Reference

- For steps to activate Fan Controll feature, see Photron FASTCAM Viewer User's Manua.



Chapter. 4 Reset of Gigabit Ethernet IF's IP address and Factory Default

4.1. Reset of Gigabit Ethernet IF's IP address and Factory Default

4.1. Reset of Gigabit Ethernet IF's IP address and Factory Default

4.1.1. Camera IP Address Initialization

In some circumstance when the IP address is changed, and the new IP address is not explicit, an IP Address Initialization operation is recommended. In this case, the IP address will be reset to 192.168.0.10 as the factory settings.

1. Press and hold the RESET switch at the camera's back side.
2. All of the LEDs on the camera's back side light, then they turn off from right to left. All of LEDs blink twice after they turn off.
3. Reboot the camera. The IP address is reset to the factory setting.



Caution

- If pressing and holding the RESET switch is stopped during LEDs are turning off from right to left, the IP address reset is not accomplished. Press and hold the switch until they blink certainly.
- If pressing and holding the RESET switch is kept after the LEDs blink, "Factory Default" is executed.

4.1.2. Reset to the Factory Default

A camera settings can be reset to the factory default state by the following procedure.

1. Press and hold the RESET switch on the camera's back side.
2. All of the LEDs on the camera's back side light, then they turn off from right to left (first time). All of LEDs blink twice after they turn off. (An IP address is reset.)
3. All of LEDs light, then they turn off from right to left (second time). All of LEDs blink twice after they turn off. And they light again.
4. The LEDs turn off from right to left (third time). After that, they turn to keep blinking.
5. Reboot the camera. The camera settings are reset to the factory default.



Caution

- To reset to the factory default, press and hold the RESET switch until all of LEDs blink after 3 times turning off from right to left.
- If pressing and holding the RESET switch is stopped when the LEDs' turning off from right to left is finished 1 time, only an IP address is reset.

Chapter. 5 **Product Specifications**

5.1. Specifications

5.2. Dimensions

5.1. Specifications

5.1.1. Product Specifications

Image Sensor	CMOS image sensor	
Sensor Resolution	1,024 x 1,024 pixels	
Frame Rate	When full frame: FASTCAM Mini AX100 4,000fps max. FASTCAM Mini AX50 2,000fps max. When a frame segment: FASTCAM Mini AX100(type 540K) 540,000 fps max. FASTCAM Mini AX100(type 200K) 212,500 fps max. FASTCAM Mini AX50 170,000fps max.	
Lens Mount	G type F mount, C mount	
Recording Color Depth	Monochrome	12bit
	Color	RGB, each 12bit (Bayer color filter method)
Shutter Method	Electronic shutter	
Recording Method	IC memory	
Recording Memory Capacity	4 GB, 8 GB, 16 GB	
Trigger Method	START, CENTER, END, MANUAL, RANDOM, RANDOM RESET	
Image Output Customization	Customizable LUT, brightness is changeable	
External Synchronization Input Signal	+3.3 to +12Vp-p, negative polarity/positive polarity (switchable)	
External Synchronization Output Signal	5 Vp-p, negative polarity/positive polarity (switchable)	
Trigger Input Signal	TTL(+3.3 to +12V), contact	
Other Output Signals	Other timing signal outputs	
External Control	Gigabit Ethernet I/F (PC)	
Video Output Signal	NONE	
Digital Interface	Gigabit Ether Port(1000BASE-T)	

5.1.2. General Specifications

Environment Conditions	
Storage Temperature	-20°C ~ 60°C (No Condensation) -4°F ~ 140°F (No Condensation)
Storage Humidity	85% or less (No Condensation)
Operating Temperature	0 ~ 40°C (No Condensation) 32°F ~ 104°F (No Condensation)
Operating Humidity	85% or less (No Condensation)
Pollution degree	Degree 2 according to IEC60664-1
Overvoltage category	Category II according to IEC60664-1
Maximum use altitude	2,000m or lower
External Dimensions	
Camera Body	120 (H) x 120 (W) x 94 (D) mm, excluding protrusion 4.7" (W) x 4.7" (H) x 3.6" (D)
DC Power Supply	
Power Voltage	22V ~ 32 V
Power Consumption	55VA
Weight	
Camera Body	1.5 kg 3.3 lbs



Photron has verified two types of AC cables, type A (standard for Japan, USA, Canada, etc.) and type SE (standard for Germany, France, etc.). However, when those cables cannot properly receive power when plugged in, use the proper AC cable for the region's standards and verify that AC cable works properly.

For inquiries regarding the recommended AC cable for each region, contact that region's Photron branch office or the distributor.

5.1.3. AC / DC Adaptor

Manufacturer		FUTABA ELECTRIC CO. , LTD.
Type		RC60G-24T
Rating	Input	AC100-240V , 50-60Hz , ~1.3A
	Output	DC24V , 2.5A
Dimensions		33.5 (H) x 53 (W) x 118.4 (D) mm excluding protrusions
Weight		350g

5.1.4. Options

User Option
Dedicated Carrying Case
DAQ option
Movie analysis software
M42 Lens Mount



5.1.5. Frame Rate and Resolution

FASTCAM Mini AX100

1,024 x 1,024 ~ 640 x 640

Resolution Frame Rate (fps)	1,024 x 1,024	1,024 x 992	1,024 x 880	1,024 x 736	1,024 x 608	1,024 x 512	896 x 896	896 x 768	896 x 512	768 x 768	768 x 528	768 x 512	640 x 640
50	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
60	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
125	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
250	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
500	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
750	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
1,000	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
2,000	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
2,500	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
3,000	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
3,600	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
4,000	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
4,500		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
5,000			✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
5,400				✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
6,000				✓	✓	✓		✓	✓	✓	✓	✓	✓
6,800					✓	✓			✓	✓	✓	✓	✓
7,200					✓	✓			✓		✓	✓	✓
8,500						✓			✓		✓	✓	✓
9,000									✓		✓	✓	✓
10,000											✓	✓	
12,500													
13,600													
18,000													
20,000													
21,600													
25,000													
30,000													
36,000													
37,500													
45,000													
50,000													
60,000													
76,500													
100,000													
127,500													
170,000													
212,500													
type 200K													
340,000													
540,000													

The ✓ mark indicates a possible setting. Green items are the maximum resolution setting at that frame rate. This table shows default settings. Even finer settings are possible with the variable setting feature.

FASTCAM Mini AX100

640 x 480~128 x 16

Resolution Frame Rate (fps)	640 x 480	512 x 512	512 x 384	384 x 384	384 x 256	256 x 256	256 x 128	128 x 128	128 x 96	128 x 64	128 x 32	128 x 16
50	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
60	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
125	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
250	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
500	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
750	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
1,000	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
2,000	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
2,500	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
3,000	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
3,600	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
4,000	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
4,500	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
5,000	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
5,400	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
6,000	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
6,800	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
7,200	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
8,500	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
9,000	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
10,000	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
12,500	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
13,600		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
18,000			✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
20,000				✓	✓	✓	✓	✓	✓	✓	✓	✓
21,600				✓	✓	✓	✓	✓	✓	✓	✓	✓
25,000					✓	✓	✓	✓	✓	✓	✓	✓
30,000					✓	✓	✓	✓	✓	✓	✓	✓
36,000						✓	✓	✓	✓	✓	✓	✓
37,500						✓	✓	✓	✓	✓	✓	✓
45,000							✓	✓	✓	✓	✓	✓
50,000							✓	✓	✓	✓	✓	✓
60,000							✓	✓	✓	✓	✓	✓
76,500								✓	✓	✓	✓	✓
100,000									✓	✓	✓	✓
127,500										✓	✓	✓
170,000											✓	✓
212,500												✓
type 200K												
340,000												✓
540,000												✓

The ✓ mark indicates a possible setting. Green items are the maximum resolution setting at that frame rate.
This table shows default settings. Even finer settings are possible with the variable setting feature.

FASTCAM Mini AX50

1,024 x 1,024 ~ 640 x 640

Resolution Frame Rate (fps)	1,024 x 1,024	1,024 x 896	1,024 x 736	1,024 x 608	1,024 x 560	1,024 x 496	896 x 896	896 x 768	896 x 512	768 x 768	768 x 544	768 x 512	640 x 640
50	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
60	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
125	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
250	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
500	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
750	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
1,000	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
2,000	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
2,500		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
3,000			✓	✓	✓	✓		✓	✓	✓	✓	✓	✓
3,600				✓	✓	✓			✓	✓	✓	✓	✓
4,000					✓	✓			✓		✓	✓	✓
4,500						✓			✓		✓	✓	✓
5,000											✓	✓	
5,400												✓	
6,000													
6,800													
7,200													
8,500													
9,000													
10,000													
12,500													
13,600													
18,000													
20,000													
25,000													
30,000													
36,000													
37,500													
45,000													
50,000													
60,000													
76,500													
100,000													
127,500													
170,000													

The ✓ mark indicates a possible setting. Green items are the maximum resolution setting at that frame rate.
This table shows default settings. Even finer settings are possible with the variable setting feature.

FASTCAM Mini AX50

640 x 480 ~ 128 x 16

Resolution Frame Rate (fps)	640 x 480	512 x 512	512 x 384	384 x 384	384 x 256	256 x 256	256 x 128	128 x 128	128 x 96	128 x 64	128 x 32	128 x 16
50	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
60	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
125	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
250	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
500	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
750	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
1,000	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
2,000	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
2,500	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
3,000	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
3,600	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
4,000	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
4,500	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
5,000	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
5,400	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
6,000	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
6,800		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
7,200		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
8,500			✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
9,000			✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
10,000				✓	✓	✓	✓	✓	✓	✓	✓	✓
12,500					✓	✓	✓	✓	✓	✓	✓	✓
13,600					✓	✓	✓	✓	✓	✓	✓	✓
18,000						✓	✓	✓	✓	✓	✓	✓
20,000						✓	✓	✓	✓	✓	✓	✓
25,000							✓	✓	✓	✓	✓	✓
30,000							✓	✓	✓	✓	✓	✓
36,000							✓	✓	✓	✓	✓	✓
37,500							✓	✓	✓	✓	✓	✓
45,000								✓	✓	✓	✓	✓
50,000									✓	✓	✓	✓
60,000									✓	✓	✓	✓
76,500										✓	✓	✓
100,000											✓	✓
127,500											✓	✓
170,000												✓

The ✓ mark indicates a possible setting. Green items are the maximum resolution setting at that frame rate.

This table shows default settings. Even finer settings are possible with the variable setting feature.

5.1.6. Shutter Speed List

FASTCAM Mini AX100

Shutter Speed		
1,000	30,000	800,000
2,000	40,000	900,000
3,000	50,000	950,000
4,000	60,000	
5,000	70,000	
6,000	80,000	
7,000	90,000	
8,000	100,000	
9,000	150,000	
10,000	200,000	
12,000	250,000	
14,000	300,000	
16,000	400,000	
18,000	500,000	
20,000	600,000	
25,000	700,000	

FASTCAM Mini AX50

Shutter Speed		
1,000	30,000	800,000
2,000	40,000	900,000
3,000	50,000	950,000
4,000	60,000	
5,000	70,000	
6,000	80,000	
7,000	90,000	
8,000	100,000	
9,000	150,000	
10,000	200,000	
12,000	250,000	
14,000	300,000	
16,000	400,000	
18,000	500,000	
20,000	600,000	
25,000	700,000	

The unit in the chart is 1/x s

 Supplement

- These shutter speeds can be selected at 50 ~ 540,000fps.

5.1.7. Recordable Image Count/Resolution

FASTCAM Mini AX100

Resolution	4GB model Rec. Frames	8GB model Rec. Frames	16GB model Rec. Frames
1,024×1,024	2,726	5,457	10,918
1,024×992	2,814	5,633	11,270
1,024×880	3,172	6,350	12,705
1,024×736	3,793	7,592	15,191
1,024×608	4,592	9,191	18,389
1,024×512	5,453	10,914	21,837
896×896	3,561	7,127	14,261
896×768	4,154	8,315	16,637
896×512	6,232	12,473	24,956
768×768	4,847	9,701	19,410
768×528	7,050	14,111	28,234
768×512	7,271	14,552	29,116
640×640	6,980	13,970	27,951
640×480	9,307	18,627	37,269
512×512	10,906	21,829	43,674
512×384	14,542	29,105	58,232
384×384	19,389	38,807	77,643
384×256	29,084	58,211	116,465
256×256	43,626	87,317	174,698
256×128	87,253	174,634	349,397
128×128	174,506	349,269	698,794
128×96	232,675	465,692	931,726
128×64	349,013	698,538	1,397,589
128×32	698,026	1,397,077	2,795,178
128×16	1,396,053	2,794,154	5,590,357

* Recording Time = Rec. Frames x 1/frame rate (fps)

FASTCAM Mini AX50

Resolution	4GB model Rec. Frames	4GB model Rec. Frames	4GB model Rec. Frames
1,024×1,024	2,726	5,457	10,918
1,024×992	2,814	5,633	11,270
1,024×880	3,172	6,350	12,705
1,024×736	3,793	7,592	15,191
1,024×608	4,592	9,191	18,389
1,024×512	5,453	10,914	21,837
896×896	3,561	7,127	14,261
896×768	4,154	8,315	16,637
896×512	6,232	12,473	24,956
768×768	4,847	9,701	19,410
768×528	7,050	14,111	28,234
768×512	7,271	14,552	29,116
640×640	6,980	13,970	27,951
640×480	9,307	18,627	37,269
512×512	10,906	21,829	43,674
512×384	14,542	29,105	58,232
384×384	19,389	38,807	77,643
384×256	29,084	58,211	116,465
256×256	43,626	87,317	174,698
256×128	87,253	174,634	349,397
128×128	174,506	349,269	698,794
128×96	232,675	465,692	931,726
128×64	349,013	698,538	1,397,589
128×32	698,026	1,397,077	2,795,178
128×16	1,396,053	2,794,154	5,590,357

* Recording Time = Rec. Frames x 1/frame rate (fps)

5.1.8. Recordable Times/Resolution

FASTCAM Mini AX100

Resolution	MAX FrameRate	4GB model Rec. Time	8GB model Rec. Time	16GB model Rec. Time
1,024×1,024	4,000	0.682	1.364	2.730
1,024×992	4,500	0.625	1.252	2.504
1,024×880	5,000	0.634	1.270	2.541
1,024×736	6,000	0.632	1.265	2.532
1,024×608	7,200	0.638	1.277	2.554
1,024×512	8,500	0.642	1.284	2.569
896×896	5,400	0.659	1.320	2.641
896×768	6,000	0.692	1.386	2.773
896×512	9,000	0.692	1.386	2.773
768×768	6,800	0.713	1.427	2.854
768×528	10,000	0.705	1.411	2.823
768×512	10,000	0.727	1.455	2.912
640×640	9,000	0.776	1.552	3.106
640×480	12,500	0.745	1.490	2.982
512×512	13,600	0.802	1.605	3.211
512×384	18,000	0.808	1.617	3.235
384×384	21,600	0.898	1.797	3.595
384×256	30,000	0.969	1.940	3.882
256×256	37,500	1.163	2.328	4.659
256×128	60,000	1.454	2.911	5.823
128×128	76,500	2.281	4.566	9.135
128×96	100,000	2.327	4.657	9.317
128×64	127,500	2.737	5.479	10.961
128×32	170,000	4.106	8.218	16.442
128×16	540,000	2.585	5.174	10.353

The unit in the chart is sec

FASTCAM Mini AX50				
Resolution	MAX FrameRate	4GB model Rec. Time	8GB model Rec. Time	16GB model Rec. Time
1,024×1,024	2,000	1.363	2.729	5.459
1,024×896	2,500	1.246	2.494	4.991
1,024×736	3,000	1.264	2.531	5.064
1,024×608	3,600	1.276	2.553	5.108
1,024×560	4,000	1.246	2.495	4.991
1,024×496	4,500	1.251	2.504	5.009
896×896	2,500	1.424	2.851	5.704
896×768	3,000	1.385	2.772	5.546
896×512	4,500	1.385	2.772	5.546
768×768	3,600	1.346	2.695	5.392
768×544	5,000	1.369	2.739	5.481
768×512	5,400	1.346	2.695	5.392
640×640	4,500	1.551	3.104	6.211
640×480	6,000	1.551	3.105	6.212
512×512	7,200	1.515	3.032	6.066
512×384	9,000	1.616	3.234	6.470
384×384	10,000	1.939	3.881	7.764
384×256	13,600	2.139	4.280	8.564
256×256	20,000	2.181	4.366	8.735
256×128	37,500	2.327	4.657	9.317
128×128	45,000	3.878	7.762	15.529
128×96	60,000	3.878	7.762	15.529
128×64	76,500	4.562	9.131	18.269
128×32	127,500	5.475	10.957	21.923
128×16	170,000	8.212	16.436	32.884


The unit in the chart is sec

5.2. Dimensions

5.2.1. Camera Body

FASTCAM Mini AX50/100 (G type F mount)

(mm)

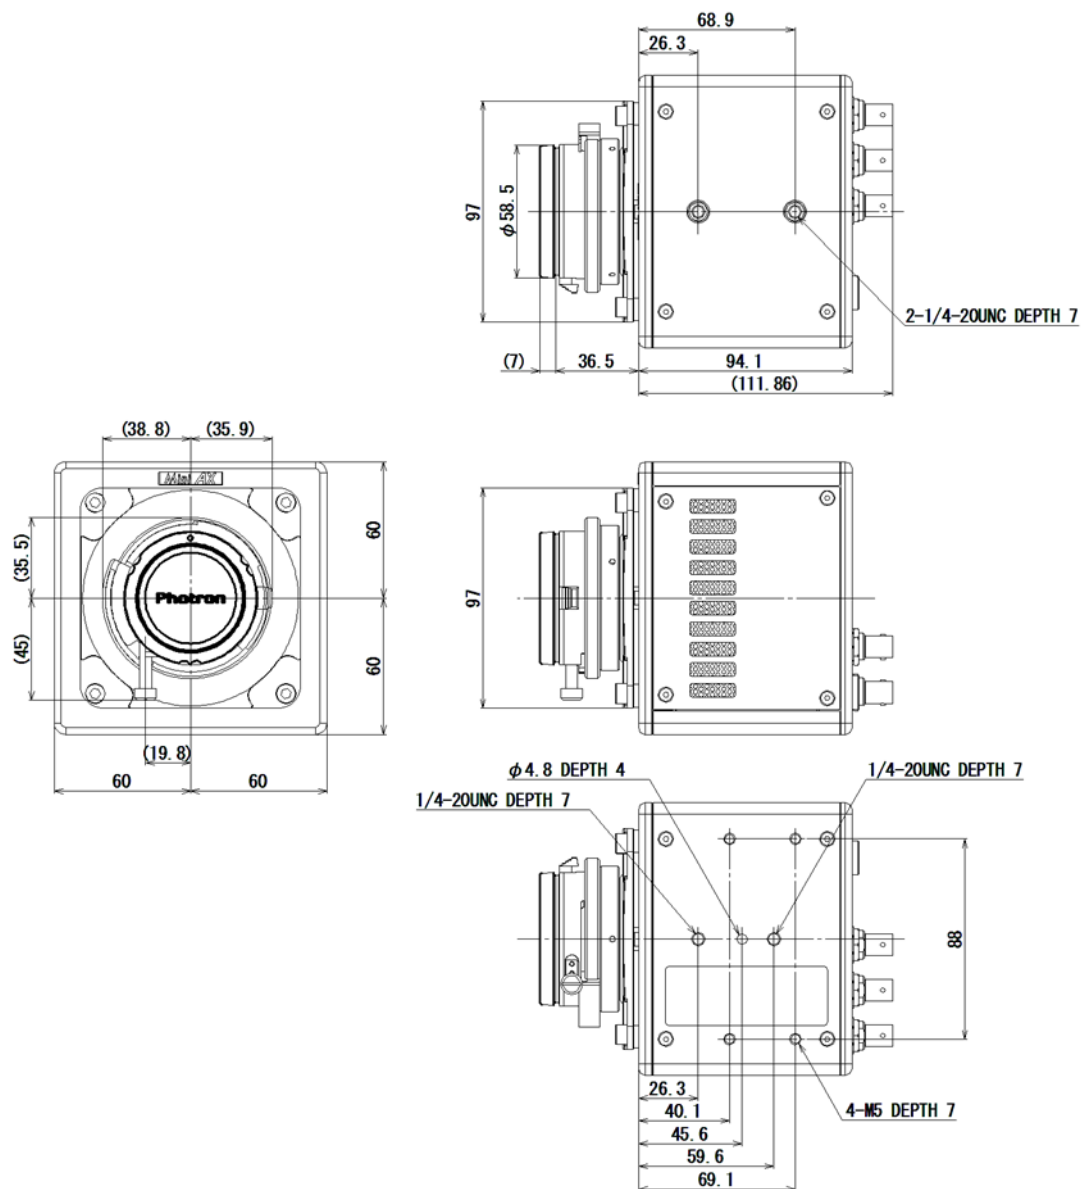


※Caution

If installing a longer screw than the specified depth (in mm), its screw hole or the camera may be damaged.

FASTCAM Mini AX50/100 (Cmount)

(mm)

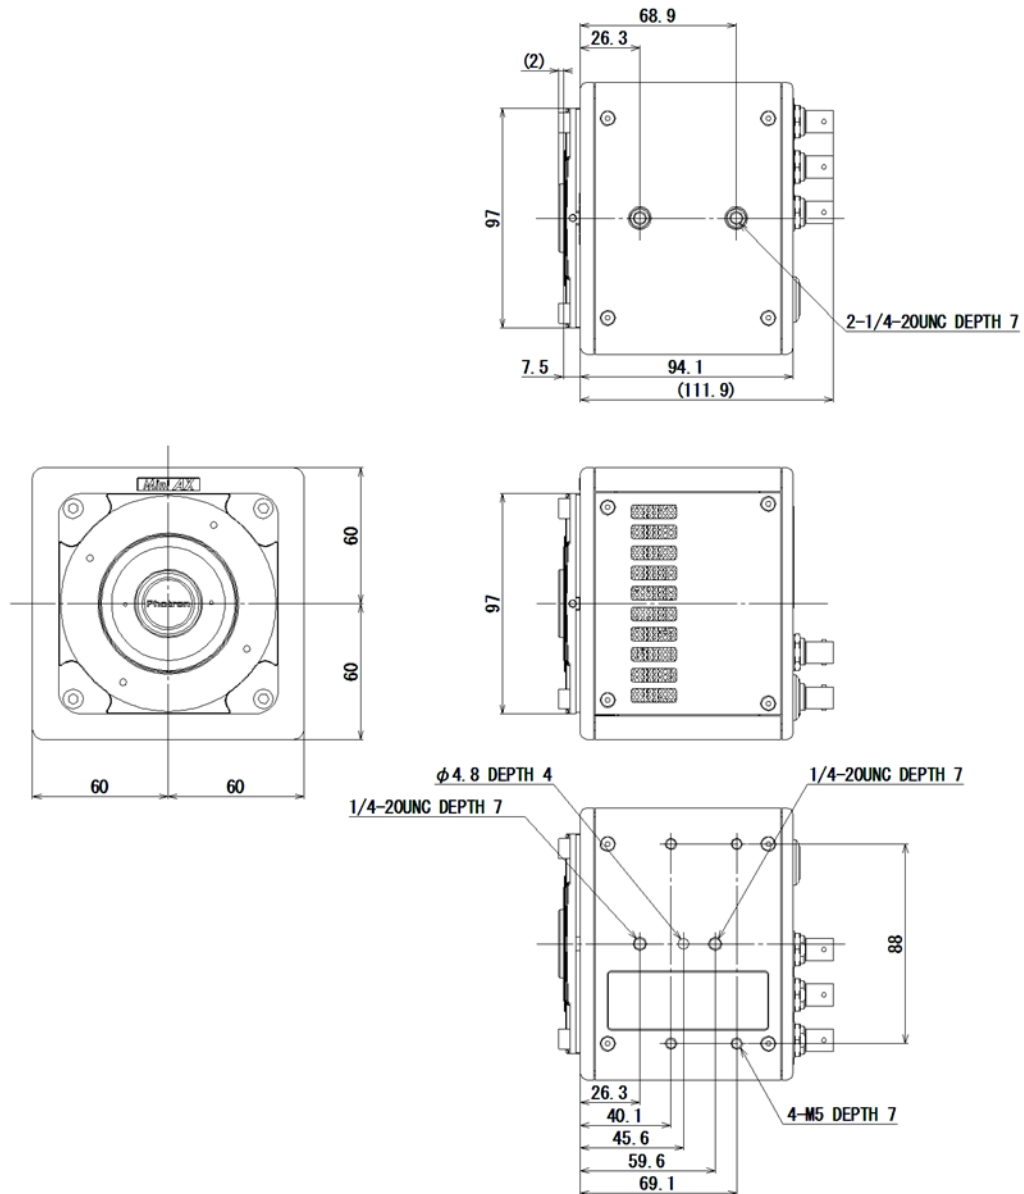


※Caution

If installing a longer screw than the specified depth (in mm), its screw hole or the camera may be damaged.

FASTCAM Mini AX50/100 (M42mount)


(mm)

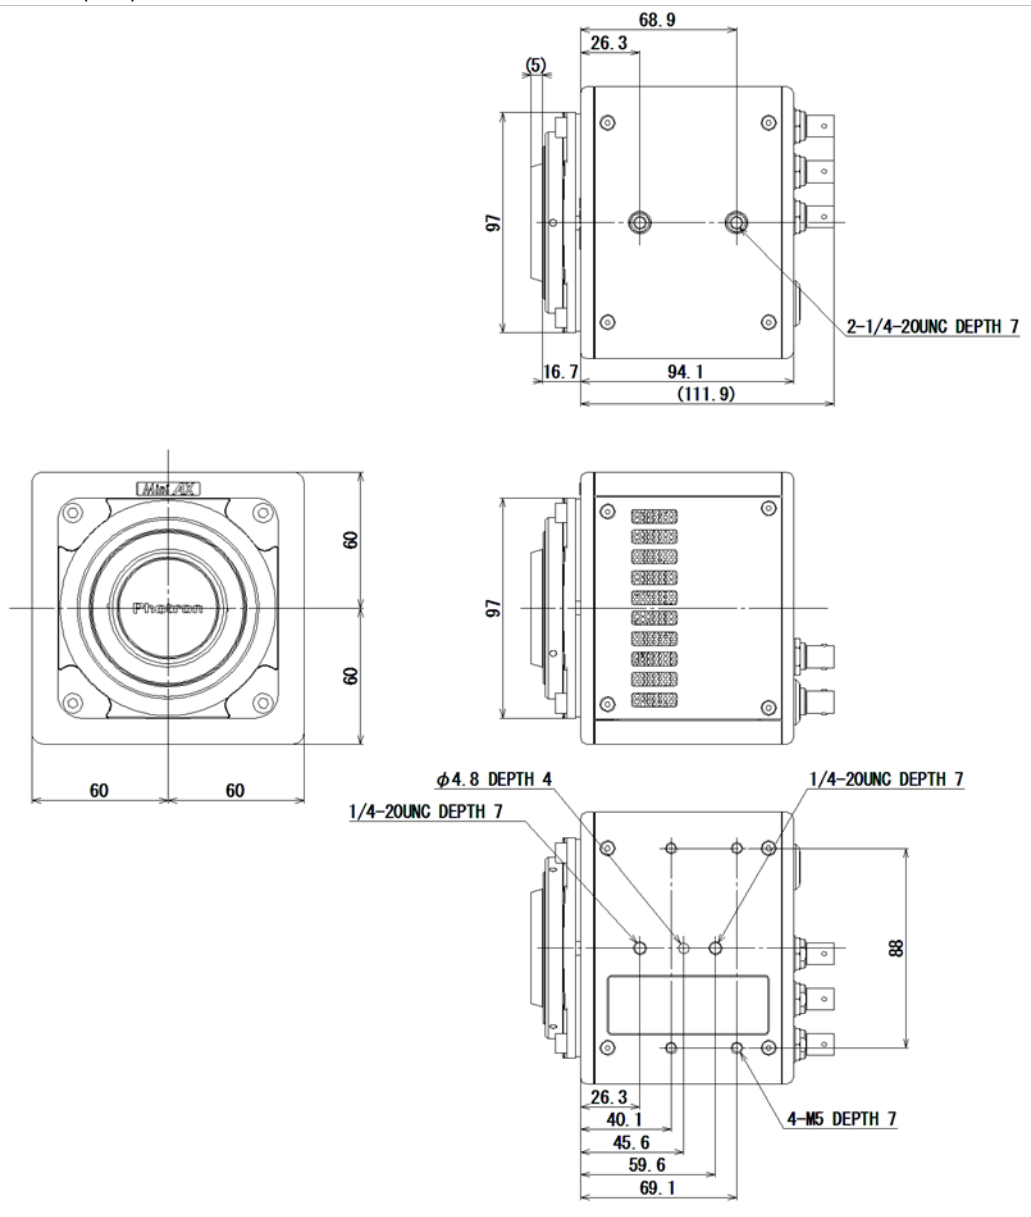

※Caution

If installing a longer screw than the specified depth (in mm), its screw hole or the camera may be damaged.

5.2.2. AC Power Supply Unit

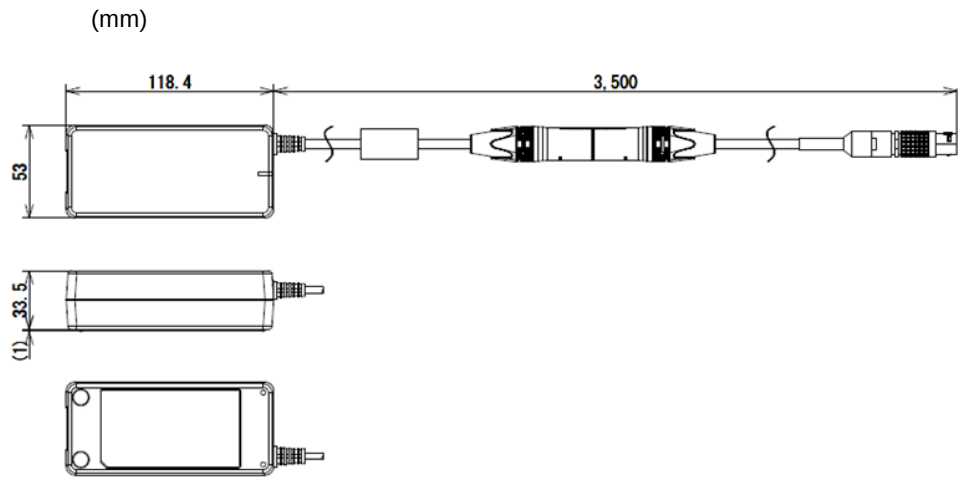

Chapter. 6 **Warranty**

6.1. About the Warranty

6.1. About the Warranty

This system has been shipped having undergone rigorous testing. However, in the unlikely event that it malfunctions due to a manufacturing defect, it will be repaired, at no charge, within the warranty period.

◆ Warranty Exceptions

The following exceptions will result in fee-based repair, even within the warranty period.

1. Damage or malfunction as a result of fire, earthquake, water damage, lightning, other natural disasters, pollution, or the effects of abnormal voltage.
2. Damage or malfunction as a result of dropping or mishandling during shipment or when moving after purchase or misuse.
3. Consumable goods (cables)
4. When repair, adjustment, or alternation done by an entity other than Photron service has been performed on the system, or damage or malfunction that is determined to be attributed to a fault in the use the product.

For inquires related to malfunction, contact the dealer where the product was purchased, or the nearest Photron office.



Reference

- For inquires related to our product, refer to "0. Contact Information", page 84.

Chapter. 7 **Contacting Photron**

7.1. Contact Information

7.1. Contact Information

For inquiries related to FASTCAM Mini AX, contact Photron at one of the contact points listed below. Additionally, the following items will be required for verification when inquiring. You are kindly asked to prepare them in advance.

Items Verified	Concrete Example
Contact Information	Company, school or organization name, customer contact name, contact phone number, contact e-mail address.
Product Name	FASTCAM Mini AX50/100
Serial Number	Shown in the nameplate seal.
Condition of the system, nature of problem, etc.	

Contact Information	
In Americas and Antipodes	PHOTRON USA, INC. 9520 Padgett Street, Suite 110, San Diego, CA 92126-4426, USA Phone : 800-585-2129 or 858-684-3555 Fax : 858-684-3558 E-mail : image@photron.com / www.photron.com
In Europe, Africa and India	PHOTRON EUROPE LIMITED The Barn, Bottom Road, West Wycombe, Buckinghamshire HP14 4BS, U.K. Phone : +44(0) 1494 48 1011 Fax : +44(0) 1494 48 7011 E-mail : image@photron.com / www.photron.com
In China	PHOTRON (SHANGHAI) LIMITED. Room 20C Zhao-Feng World Trade Building, No. 369 Jiangsu Road ChangNing District, Shanghai 200050 China Phone : 021-5268-3700 Fax : 021-5268-3702 E-mail : info@photron.cn.com / www.photron.cn.com
In other areas	PHOTRON LIMITED 21F, Jimbocho Mitsui Bldg., 1-105 Kanda Jimbocho, Chiyoda-Ku, Tokyo 101-0051 Phone : +81 3 3518 6271 Fax : +81 3 3518 6279 E-mail : image@photron.co.jp www.photron.co.jp

FASTCAM Mini AX50/100

Hardware Manual Revision 1.00 E

Publication Date: July, 2015
Publisher: PHOTRON LIMITED
21F, Jimbocho Mitsui Bldg.,
1-105 Kanda Jimbocho, Chiyoda-Ku, Tokyo 101-0051