

WinFrog Device Group:	GPS
Device Name/Model:	NOVATEL CON (CONSOLE)
Device Manufacturer:	NOVATEL INC. 1120 - 68th Avenue N.E. Calgary, Alberta, Canada, T2E 8S5 Tel: U.S. & Canada: 1-800-NovAtel Fax: (403) 295-4501 E-mail: gps@NovAtel.ca
Device Data String(s) Output to WinFrog:	Refer to Configuration Details Section
WINFROG DATA STRING(S) Output to Device:	Configuration/Control Telegrams RTCM (if turned on at Device Level)
WinFrog Data Item(s) and their RAW record:	POSITION 303 TIMEDATE 999

DEVICE DESCRIPTION:

The NovAtel GPSCard™ PC Series products are GPS receivers that are configured as PC cards rather than as stand alone devices, allowing for the unit to be installed internally in a host desktop computer. Instead of relying on a serial connection (and the required cabling) to communicate with the computer, GPSCards utilize the PC ISA bus. GPSCards are also configured with dual RS232 ports allowing for input and output of data via serial connections, if so desired. These 2 DB9 male connectors allow you to receive differential corrections from a DGPS receiver or output data to another computer, with baud rates varying from 300 to 115,200 bps.

The GPSCard™ PC Series are 12 channel parallel tracking, C/A code GPS receivers, utilizing the L1 (1575.42 MHz) frequency GPS signal. The NovAtel custom proprietary correlator chip, combined with a high performance 20 MHz 32-bit CPU is capable of measuring satellite code and carrier phase data to compute up to 10 position solutions per second. Positional data (stand alone or differentially corrected) can be output at a rate of up to 20 times per second.

For use with WinFrog, these cards are set to output raw Pseudorange and Ephemeris data as well as internally calculated, differentially corrected positions. WinFrog's optional GPS Calculations extension module can combine the raw Pseudorange and Ephemeris data with up to 5 differential GPS corrections to provide a Multi-Ref position (See chapter 14 of the WinFrog Users Guide for more details).

The internally calculated position can utilize differential corrections received via the serial ports or the PC ISA bus.


The GPSCards must be correctly installed and configured before they can be used with WinFrog. This involves that you follow specific installation procedure, not just simply installing the card into the computer. These instructions are listed below in the section entitled Driver Installation.

DEVICE CONFIGURATION INSTRUCTIONS

WINFROG I/O DEVICES > EDIT I/O:

The NovAtel CON (console) device is added to WinFrog from the GPS device group.

The **Novatel PC Card** dialog box (shown below) appears when the NovAtel CON (console) device is selected. Within this dialog are various configuration options. The settings are dependant on the GPSCard that has been installed in the PC.

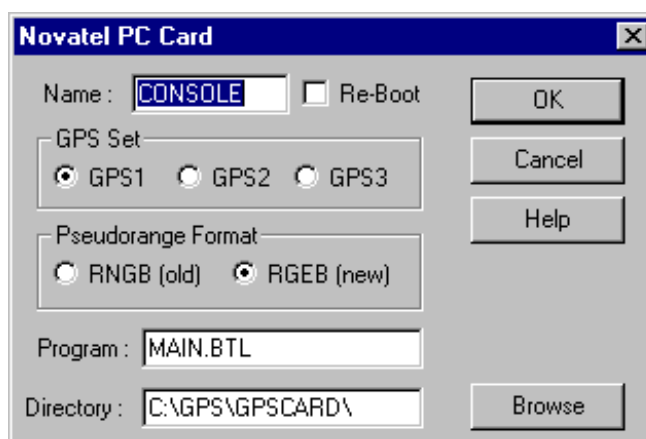

Name: Enter the name of this GPSCard, or leave the default.

Re-Boot: Enable this option to re-start the GPSCard if it has been shutdown. The re-boot will take place once you click OK to close this dialog box.

GPS Set: This section allows you to select which GPSCard to use. As detailed below, you can add up to 3 GPSCards to a single PC. Each card is identified uniquely as GPS1, GPS2 or GPS3. Select the appropriate radio button (usually GPS1).

Pseudorange Format: Most cards use the default RGEB (new) format.


Program: This window must display the correct .bt1 file name, as defined by the GPSCard serial number. Note that all of the .bt1 files that were updated for the year 2000 week rollover should have the prefix Y2K.

Directory: Type in the appropriate folder name/location, or select the Browse button to navigate to the appropriate directory where the .bt1 file is found. When you click Ok to close this window, the GPS card is “booted” (i.e. started). A message will appear if there is a problem with booting the card. A common error is experienced when WinFrog tries to boot the GPSCard while it is already running. The card can be started when the drivers are installed, and shutting down the card is often overlooked. To manually shut down the card, go to Window’s Start > Settings > Control Panel > Devices. Highlight the GPSCard device and select Stop.

If problems persist, refer to the Configuration Details section below for information on setting up the GPSCard and installing the required files.

WINFROG I/O DEVICES > CONFIGURE DEVICE:

This device must be configured at the I/O Device window level. In the I/O Devices window, click the device name to select it, then right-click and select Configure Device. The GPSSET Configuration dialog box appears, as seen below. This configuration dialog sets the internal calculation parameters of the NovAtel GPSCard.

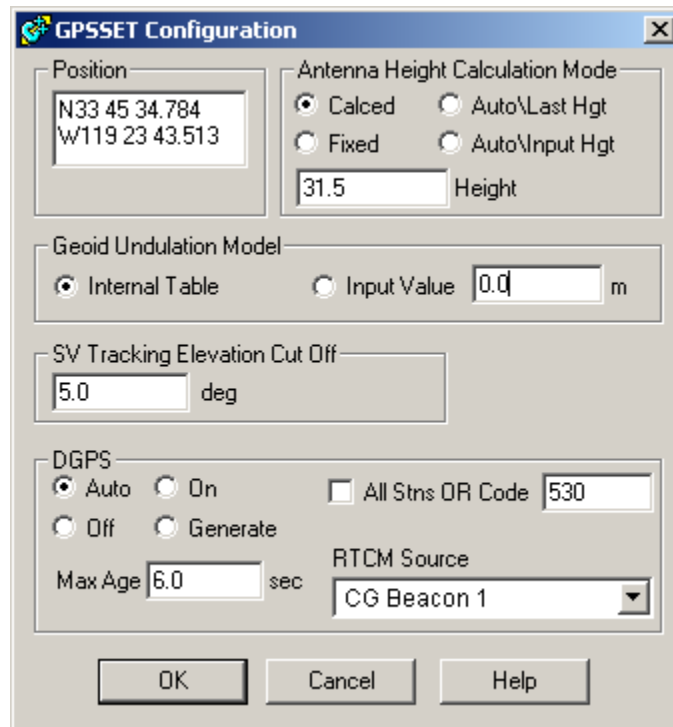

The image shows the GPSSET Configuration dialog box. It has a title bar with a globe icon and the text 'GPSSET Configuration'. The dialog is divided into several sections. The 'Position' section has two text boxes containing 'N33 45 34.784' and 'W119 23 43.513'. The 'Antenna Height Calculation Mode' section has four radio buttons: 'Calced' (selected), 'Auto\Last Hgt', 'Fixed', and 'Auto\Input Hgt'. Below these is a text box with '31.5' and the label 'Height'. The 'Geoid Undulation Model' section has two radio buttons: 'Internal Table' (selected) and 'Input Value', followed by a text box with '0.0' and the label 'm'. The 'SV Tracking Elevation Cut Off' section has a text box with '5.0' and the label 'deg'. The 'DGPS' section has four radio buttons: 'Auto' (selected), 'On', 'Off', and 'Generate'. To the right of these is a checkbox labeled 'All Stns OR Code' and a text box with '530'. Below the radio buttons is a text box with 'Max Age' and '6.0' followed by 'sec'. To the right of this is a label 'RTCM Source' and a dropdown menu showing 'CG Beacon 1'. At the bottom are three buttons: 'OK', 'Cancel', and 'Help'.

Position:

An approximate initial position must be entered to provide the position calculations with a reasonable starting point. This position should be within approximately 5 minutes in both Latitude and Longitude. Ensure that the “quadrant” signifiers are correct: N/S or E/W.

Antenna Height:

Set the antenna height mode to one of the two provided options:

Calculated – Along with Latitude and Longitude, the NovAtel GPSCard will calculate the GPS antenna Geoidal Height (Mean Sea Level). A minimum of four satellites must be tracked in order to calculate both horizontal position and height.

Fixed - Fixes the GPS antenna height to the Geoidal Height (Mean Sea Level) value entered in the provided entry box. In this mode, the NovAtel GPSCard is able to calculate horizontal positions using a minimum of three satellites.

Auto\Last Height & Auto\Input Height – No Auto Height options are used by the GPSCard.

Note: Heights entered in the provided entry box must refer to the geoid (Mean Sea level). In some other WinFrog dialog boxes, heights are displayed with respect to the vehicle's selected zero vertical reference point.

Undulation Model:

The Undulation Model can be set to the Internal Table, which uses the NovAtel's internal (OSU) geoid model, or Input Value in which case a specific Ellipsoid separation value can be input. This Ellipsoid separation value is used to calculate Ellipsoid height from the entered geoidal (Mean Sea Level) elevation, using the following formula:

$$h = H + N$$

Where: h = Ellipsoid height (of the antenna)
 H = MSL (ie geoid) height (of the antenna)
 N = Geoid height (undulation)

Unless you have accurate ellipsoid/geoid separation values from another source, select the Internal Table radio button.

SV Tracking Elevation Cut Off:

Enter a mask angle value, in degrees. The GPSCard will not use measurements from any satellites with elevation angles below the angular value input in the Elevation (angle) Cut Off entry box.

DGPS:

This section of the dialog allows you to set the mode by which the GPSCard will internally apply received differential GPS corrections.

There are four different DGPS modes: Auto, On, Off and Generate.

Auto: The GPSCard will automatically use differential corrections in its position calculations, when available. If no corrections are available, the GPSCard will compute a single point (aka autonomous) position solution.

On: The GPSCard will always attempt to use differential corrections. If no corrections are available, no position will be computed.

Off: The GPSCard will not use differential corrections in its position computations, even if they are available. Instead it will always compute a single point GPS solution.

Generate: The GPSCard will generate differential corrections based on a fixed reference position. This option is used for Base Stations only.

Maximum Age (of Corrections): If the GPS mode is set to Auto or On, the GPSCard will only apply the corrections if the received RTCM data is less than the specified Max. Age (entered in seconds).

Code: This allows you to define which DGPS reference station will be used, as defined by its Code. If you don't know the code of the station being received, select All, in which case the GPSCard will use any received RTCM data.

RTCM Source: Use the dropdown list to select which RTCM receiving device will be used to provide the GPSCard with differential corrections. This RTCM receiver must be interfaced to WinFrog before it will be listed. The RTCM data is received via a serial connection, and is passed to the GPSCard via the ISA bus.

WINFROG VEHICLE > CONFIGURE VEHICLE DEVICES > DEVICE DATA ITEM > EDIT:


Adding a NovAtel CONSOLE device to WinFrog provides you with four separate data items: Position, Pseudorange, Ephemeris, and Timedate. The GPS, CONSOLE, POSITION data item refers to the position data calculated and output by the GPSCard. The GPS, CONSOLE, PSEUDORANGE and GPS, CONSOLE, EPHEMERIS data items provide WinFrog with only raw measurement data. WinFrog's GPS Calculations extension module is required to combine these measurements to calculate a position. Time synchronization is done at the vehicle level using the TIMEDATE data item.

WinFrog can use either or both position solutions. Adding the Position data item is simpler but provides the vehicle with only a single GPS or DGPS position. Using the Pseudorange/Ephemeris option provides the ability to set up a multiple reference solution - you can add DGPS correction data from up to 5 different RTCM stations, which are then combined resulting in 1 weighted mean solution.

No matter which positioning method is selected, you must edit the device to suit the application, as detailed below. (Note that the Ephemeris data item requires no editing).

GPS, CONSOLE, POSITION

In the appropriate vehicle's Configure Vehicle - Devices dialog box, highlight the POSITION data item and click the Edit button. The Configure Position dialog box appears as seen below:

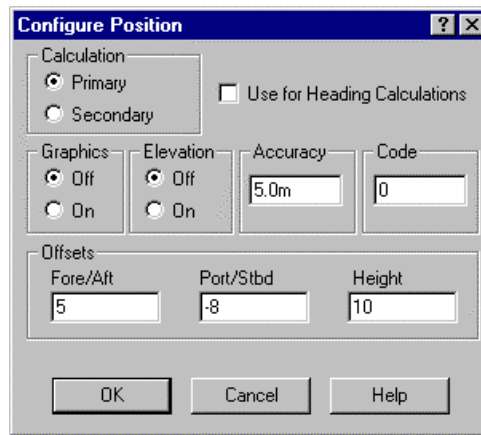

The following items are available for configuration:

Calculation:

Select either the Primary or Secondary radio button. Devices set to Primary calculation are used in the Kalman filter to produce a vehicle position. If more than one positioning device added to the vehicle's device list is deemed as primary, WinFrog will weight them based on the accuracy value entered. Devices with a higher accuracy values (i.e. lower entered value) will be weighted higher. If a positioning device's calculation is set to Secondary, WinFrog will not use the position data in of the vehicles' position solution; that device's position will simply be received and monitored. Note that in the case of Primary device failure, WinFrog will not automatically use the Secondary devices for the vehicle position computation. Instead, it will start dead reckoning (if dead reckoning is turned on). You must manually change a secondary device to primary status if you want to utilize the data coming from that device.

Accuracy:

The Accuracy value is the expected accuracy (i.e. standard deviation) of the positioning device. This value is used in the weighting of this device relative to other primary positioning devices, and in the vehicle's kalman filtering. The default values should be changed only if you have confidence that newly entered accuracy values are more correct than the default values.

You must also be cautious of setting both a Multi-Ref position and a single source DGPS position as primary positioning devices. This will weight the single position equal to the 5 positions combined to create the Multi-Ref position.

Use For Heading Calculations:

Select this checkbox if this GPS position is to be used in conjunction with another GPS device for determination of the heading of the vessel. The vessel's heading will be derived by the inverse of the GPS antenna coordinates.

Graphics:

If On is selected, a labeled square will be made visible in the Graphics and Bird's Eye displays, depicting the raw (unfiltered) location of the GPS antenna. This provides a means of comparing raw and filtered positions between different sources.

Elevation:

If On is selected, the elevation determined by the GPS will be used as the elevation of the antenna with respect to the WGS84 Ellipsoid. Do not enable this option unless you are utilizing high accuracy (centimeter level) RTK type GPS positioning.

Code:

Set the Code to coincide with the code parameters that may be associated with the GPS unit being used, as required when using telemetered GPS data. This is usually set to 0.

Offsets:

Offsets are entered to relate the GPS antenna position to the vessel's Common Reference Point (aka CRP). Offsets are entered as measured from the CRP (of the vehicle) to the device (antenna) location. Offsets Fore and Starboard are entered as positive values, Offsets measured Port and Aft are entered as negative values. Rule of thumb suggests the CRP "Z" reference should be at the water line.

GPS, CONSOLE, PSEUDORANGE

As mentioned above, WinFrog's GPS Calculations extension module can utilize raw GPS Pseudorange and Ephemeris data. With this extension module, WinFrog is able to combine the raw data with RTCM format differential corrections from up to 5 different base stations to calculate 5 independent antenna positions. These 5 positions are then combined in a weighted mean solution to result a single Multi-Ref antenna position.

Although the GPS Ephemeris data item is essential, no configuration is required for this device. All position calculation configuration is accomplished by highlighting the GPS, CONSOLE, PSEUDORANGE device in the Configure Vehicle-Devices dialog box and clicking the Edit button. The Pseudorange Calculation dialog box appears as seen below.

Calculation:

Select either the Primary or Secondary radio button. Devices set to Primary calculation are used in the Kalman filter to produce a vehicle position. If more than one positioning device added to the vehicle's device list is deemed as primary, WinFrog will weight them based on the accuracy value entered. Devices with a higher accuracy values (i.e. lower entered value) will be weighted higher. If a positioning device's calculation is set to Secondary, WinFrog will not use the position data in of the vehicles' position solution; that device's position will simply be received and monitored. Note that in the case of Primary device failure, WinFrog will not automatically use the Secondary devices for the vehicle position computation. Instead, it will start dead reckoning (if dead reckoning is turned on). You must manually change a secondary device to primary status if you want to utilize the data coming from that device.

Use Elevation:

Setting the Elevation option to 'On' will result in the elevation determined by the GPS to be used as the elevation of the vessel referencing the GPS (WGS84) Ellipsoid. Do not enable this option unless you are utilizing high accuracy (centimeter level) RTK type GPS positioning.

Accuracy:

The Position value is the expected accuracy (i.e. standard deviation) of the positioning device. This value is used in the weighting of this device relative to other primary positioning devices, and in the vehicle's Kalman filtering. If the accuracy

relationship is unbalanced, the Kalman Filter will be biased towards the data type with the overly optimistic accuracy setting.

The Velocity value is used in positional filtering. The lower the value entered, the more smoothing that is applied.

The default values should be changed only if you have confidence that newly entered accuracy values are more correct than the default values.

Remote Unit ID:

The Remote Station ID parameter is set to zero (0) unless the GPS device is interfaced to WinFrog via a telemetry device.

Antenna Height:

Set the Antenna Height using the radio buttons and the (input) Ellipsoid Height box. Settings are as follows:

Calculated – Select this option to force WinFrog to calculate the GPS antenna Height as well as its Latitude and Longitude. In this mode, WinFrog requires a minimum of four satellites to be visible.

Fixed – Select this option to fix the GPS antenna ellipsoid height to the value entered in the **Ellipsoid Height** entry box. In this mode, WinFrog is able to calculate valid positions using a minimum of three satellites.

Auto\Last Height – If this mode is selected, WinFrog will calculate a 3D position if four or more satellites are available. If only three satellites are visible, or if the VDOP of the solution exceeds the value set in the alarms dialog box, the height is fixed to that of the last valid position. In this mode WinFrog is able to calculate valid positions using a minimum of three satellites.

Auto\Input Height - If this mode is selected, WinFrog will calculate a valid 3D position if four or more satellites are available. If only three satellites are available, or if the VDOP of the solution exceeds the value set in the alarms dialog box, the height is fixed to the value entered in the **Ellipsoid Height** box. In this mode, WinFrog is able to calculate valid positions using a minimum of three satellites.

Note: The Antenna height entered in the **Pseudo-range Calculation** dialog box refers to the WGS 84 Ellipsoid, as opposed to the NovAtel GPSSET Configuration window, which requires entry of heights related to the geoid (mean sea level).

Offsets:

Offsets are entered to relate the GPS antenna position to the vessel's Common Reference Point (CRP). Offsets are entered as measured from the CRP (of the vehicle) to the device (antenna) location. Offsets Fore and Starboard are entered as positive values, offsets measured Port and Aft are entered as negative values. Rule of thumb suggests the CRP "Z" reference should be at the water line.

DGPS Mode:

Select the desired mode of DGPS operation. There are four different DGPS modes: Auto, On, Off and Generate.

Auto: WinFrog will automatically use differential corrections in its position calculations, when available. If no corrections are available, WinFrog will compute a single point (aka autonomous) position solution.

On: WinFrog will always attempt to use differential corrections. If no corrections are available, no position will be computed.

Off: WinFrog will not use differential corrections in its position computations, even if they are available. Instead it will always compute a single point GPS solution.

Generate: WinFrog will generate differential corrections based on a fixed reference position. This option is used for Base Stations only.

Phase Smoothing:

Phase smoothing utilizes the GPS receiver's observations of the GPS satellite's carrier signals. Because the GPS L1 frequency has a wavelength of only 19 cm., measurements made using this signal will provide higher accuracy than measurements made on the C/A code message modulated onto the L1 signal. Note however that since the carrier phase position is derived from the C/A code position, it does not offer an improvement in precision.

If the Phase Smoothing feature is enabled, WinFrog will use the C/A Code derived (DGPS corrected) position to derive the number of L1 wavelengths to each of the observed satellites. Over the length of time entered into the Filter Length entry window (value in seconds), WinFrog will switch the GPS calculated position from the C/A code position to the derived Carrier Phase position.

WinFrog will continue to use the carrier phase data to provide positioning until the Cycle Slip Tolerance is exceeded. A Cycle Slip is the loss of lock on a satellite's signal. This loss of lock forces WinFrog to re-establish the number of wavelengths from the antenna to the satellite. If the number of cycle slips exceeds the Cycle Slip Tolerance, WinFrog will resort back to the C/A code position and re-calculate the number of wavelengths to all received satellites.

Graphics:

If On is selected, a labeled square will be made visible in the Graphics and Bird's Eye displays, depicting the raw (unfiltered) location of the GPS antenna. This provides a means of comparing raw and filtered positions between different sources.

Display:

The selection made here determines which type of information will be displayed in WinFrog's Calculation display window (when the GPS Pseudorange device is turned on for display in that window). Select from the 3 provided options:

Results – The Calculations display window will show the results of the GPS Calculations, including the Multi-Ref position and all individual solutions.

Data - The Calculations display window will show the results of the GPS Calculations, including the Multi-Ref position and data related to each individual carrier phase solution (when Phase Smoothing is enabled).

Statistics - The Calculations display window will show the results of the GPS Calculations, including the Multi-Ref position and statistical data related to each individual solution.


Use For Heading Calculations:

Select this checkbox if the device is to be used in conjunction with another GPS device for determination of heading of the vessel. In most cases, only high accuracy receivers should be used for heading calculations as WinFrog simply inverts the individual sensors' raw positions to derive the bearing between them.

Alarms:

Click this button to view and enable various GPS alarms, as described below.

GDOP – Geometric Dilution of Precision. GDOP is a numerical value that serves as a measure of the effect of the satellite constellation's geometry on the derived positional accuracy. In other words, the GPS receiver's measurement accuracy is multiplied by the GDOP value to derive the overall positional accuracy of the GPS receiver (including the three positional dimensions and clock offset). If the GDOP mask is set to On and the calculated GDOP exceeds the entered value, WinFrog will not compute a position solution using pseudoranges. If the Calculations window is enabled, an alarm will sound to indicate that the GDOP has been exceeded.

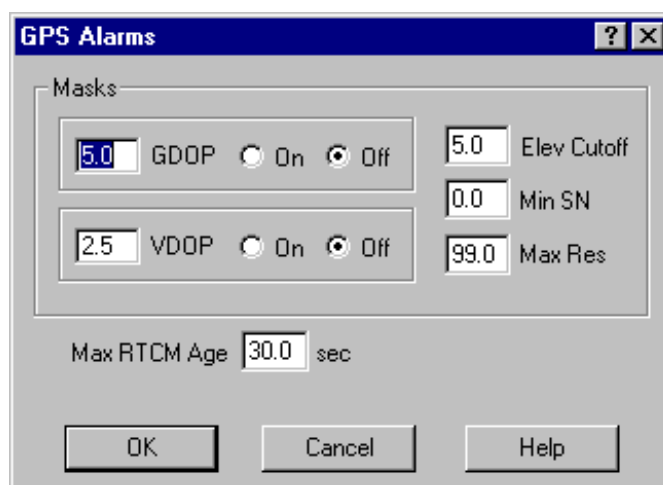

VDOP - Vertical Dilution of Precision. This parameter is also calculated from satellite geometry and gives an indication of the expected accuracy of the vertical component of the GPS position solution. If the VDOP mask is set to On and the calculated VDOP exceeds the entered value, WinFrog will automatically initiate 2D or fixed height mode using either the last valid calculated height or the height entered in the 'Antenna Height Ellipsoid Height box. If the Calculations window is enabled, an alarm will sound to indicate that the VDOP has been exceeded.

Elev. Cutoff – Elevation Angle Cutoff. WinFrog will not use measurements from any satellites with elevation angles below the angular value input in the Elevation Angle Cutoff box. Any satellites not used in the pseudorange position calculations are indicated in the Calculations window by a change of color.


Min SN - Minimum Signal to Noise. This input box is used to set the minimum signal-to-noise ratio for the pseudo-range calculations. If a satellite's signal-to-noise ratio falls below the entered value, the satellite will not be used in position computation by WinFrog. Satellites not used in the position computation due to low signal-to-noise values are indicated in the Calculations window by a change of color.

Max Res - Maximum Measurement Residual. WinFrog will not use any satellite measurement with a residual greater than the Maximum Measurement Residual in its pseudorange position computations. Satellites not used in the position computation due to measurement residuals are indicated in the Calculations window by a change of color.

Max RTCM Age - Maximum RTCM Differential Correction Age. This parameter sets the maximum latency of real time differential corrections for pseudoranges. If the maximum latency is exceeded, WinFrog will not apply the corrections from that RTCM source. To indicate this condition, the STAT light in the Position portion of the Calculations window will turn yellow. Click on the **ACK** button to acknowledge this alarm.

Test:

Click this button to bring up the GPS Solution Statistical Testing dialog box, as seen below.

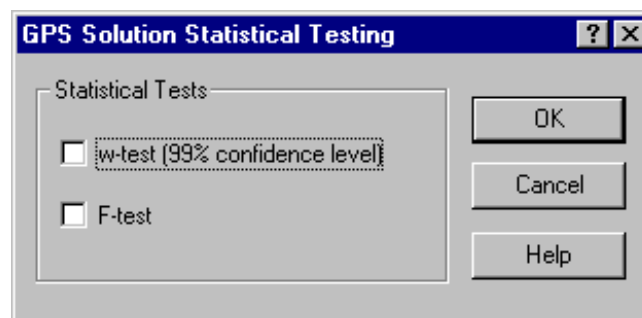

This dialog box provides you with the ability to enable or disable statistical w test and F tests. By default, both the w-test and the F-test are turned off.

w-Test:

The w-test entails normalizing the residuals of a GPS pseudo-range solution and testing these against a 99% confidence limit for outliers. This limit is 2.576. If outliers are found, they are removed and the solution is re-executed excluding that satellite data pertaining to the outlier. If more than one satellite is found to produce a residual outlier, only that satellite with the largest normalized residual is eliminated. This continues until no outliers are present or until the exclusion of any more data would result in insufficient data for a solution (four satellites for 3D and three for 2D). Since the normalized residuals tend towards being equal with reduced redundancy (as the number of satellites used in the solution approaches the minimum required), it is unlikely that WinFrog will ever have to stop the exclusion of data due to insufficient satellites. Nonetheless, WinFrog still checks for this condition.

F-Test:

The F-test is a check of the unit variance of the GPS pseudo-range solution. This confirms the validity of the model used for the solution and the weighting of the observations used. Note that it is only a confirmation check, no data or solution results are thrown out based on the results of the test.

The unit variance is the sum of the weighted, squared residuals, divided by the degrees of freedom (number of redundant measurements) in the solution. The F-Test should result in unity. If the unit variance is consistently different from unity, it indicates that there may be a problem with the stochastic model used, or an unmodeled bias in the data.

Ref-Stns:


Click the RefStns button to open the Select DGPS Reference Stations display, as seen below.

ID	Off	Use	Monitor	Relative Std. Dev.
530	☐	☒	☐	1
545	☐	☒	☐	2
570	☐	☒	☐	3
334	☐	☐	☒	1
336	☐	☒	☐	8

The Select DGPS Reference Stations dialog box allows you to define which reference stations will be used by WinFrog in its Multi-Ref solution. You can either configure WinFrog to simply use all received stations (to a maximum of 5), or you can control the use of corrections, as you deem proper.

To use all received DGPS corrections, select the **Use all Available Stations** checkbox at the top left-hand corner of the window. When this box is checked, all available RTCM corrections are utilized in the solution, each with the same Relative Standard Deviation.

The individual station method is preferable as it allows you to remove or de-weight solutions that may not agree with the weighted mean solution. If this method is used, you should add the RTCM device to the vehicle's device list once for each solution, then edit that solution entering the proper code and coordinates. For example, if there are 5 SkyFix stations to be used in the Multi-Ref solution, add the SkyFix device to the vehicle's device list 5 times as seen below.

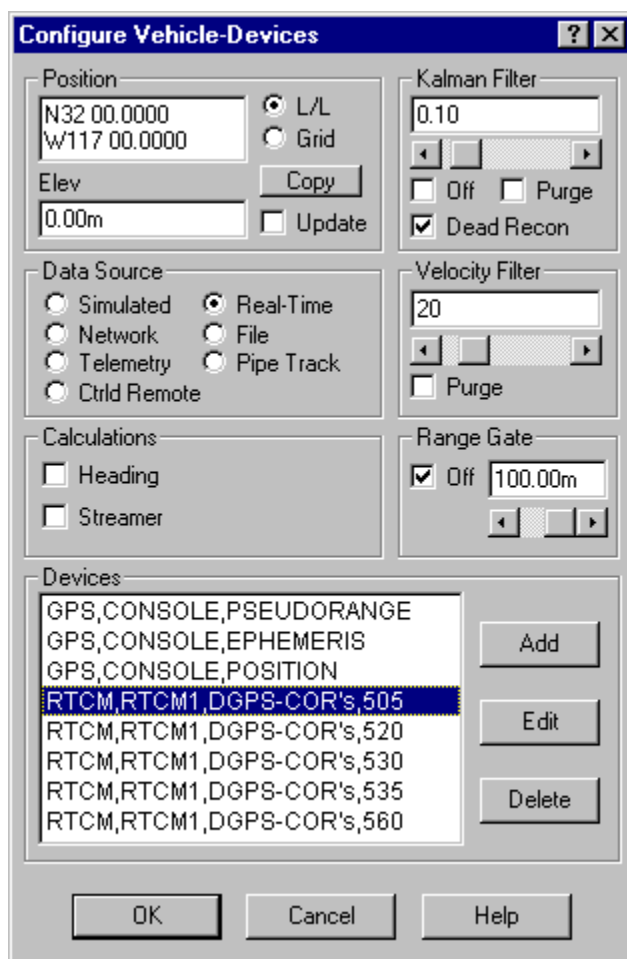

From the Configure Vehicle-Devices dialog box, highlight and edit each RTCM "device" to indicate a unique Code, as seen below.

Now, back in the Select DGPS Reference Station dialog box, ensure that the Use all Available Stations checkbox is not selected. Now the individual reference station ID's must be entered, along with station usage and relative standard deviation values, as detailed below:

Select DGPS Reference Stations:

Selection of individual stations is as follows:

ID – The Reference Station identification code. See SkyFix documentation for a listing of all SkyFix reference station ID Codes. Coast Guard Beacon corrections also contain unique codes for each station. In the above example, SkyFix stations 530, 545 and 570 are used with assigned relative standard deviations along with Coast Guard station 336. Coast Guard Station 334 is monitored and is therefore not utilized in the position solution.

Off – Corrections from the selected Reference Station will not be used in the Multi-Ref position solution. This individual solution will appear in red text in WinFrog's Calculation window and not update.

Use – Reference Station is used in the Multi-Ref position solution, and will appear in the calculation window in black text. This individual solution will appear in red text if no solution (refer to DGPS Mode) can be calculated from the data.

Monitor – Reference Station is simply monitored by WinFrog, and is not used in the Multi-Ref position. This solution will appear in yellow text in WinFrog's Calculation window.

Rel. Std. Dev – This value defines the relative standard deviation of this solution as compared to the other solutions used in the Multi-Ref position. Equal Rel. Std. Dev. values indicate that all individual solutions will be equally weighted in the Multi-Ref solution. Entering a higher Rel. Std. Dev value will de-weight an individual solution compared to the others in the Multi-Ref solution.

GPS, CONSOLE, TIMEDATE


WinFrog is able to synchronize to external time sources. The time synchronization is done at the vehicle level using the TIMEDATE data item. The following details the use of the time synchronization option.

1. Interfacing

In the case of using a NMEA telegram such as the \$--ZDA alone to synchronize WinFrog, the reception of the starting character ('\$') of the telegram is detected and time stamped. This time stamp is used as the *pulse* detection time associated with the telegram's UTC time.

2. Configuring the Device

In the appropriate vehicle's Configure Vehicle - Devices dialog box, highlight the TIMEDATE data item and click the Edit button. The Time Synchronization dialog box appears as seen below:

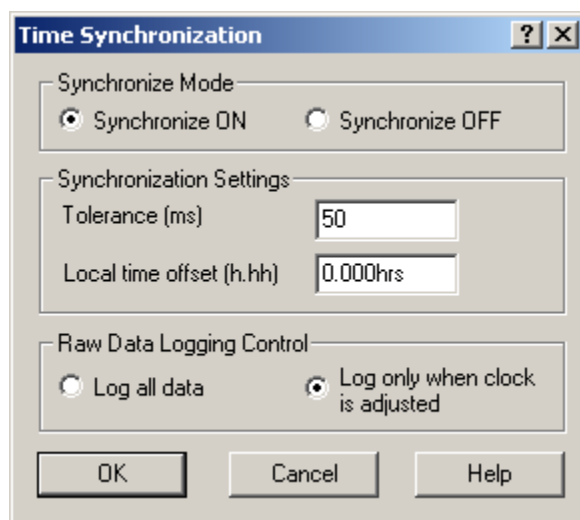

Synchronize Mode

The synchronization can be turned On or Off. Note that multiple TIMEDATE data items can be added to the same or other vehicles, but WinFrog will only allow one to be set to On and thus actually be used to synchronize the WinFrog clock. The others can only be compared to the WinFrog clock.

Synchronization Settings

The tolerance setting controls the maximum limit of the deviation of the WinFrog clock from the timing device before WinFrog resets its clock. This should not be set too small, or the clock will constantly be re-setting. A tolerance of 50 ms for a 1PPS pulse results in the resetting of the clock approximately every 5-6 minutes.

WinFrog monitors the variation between the UTC time and the WinFrog clock using a fading history of the last 20 samples of the variation between the WinFrog clock synchronization time stamp and the associated UTC time. This is filtered using a Central Tendency algorithm. When the filter result exceeds the tolerance, the clock is reset.

Local time offsets can be entered to allow synchronization to UTC while working in a local time zone. The offset is entered in +/-hours.

Raw Data Logging Control

You can control the logging of the TIMEDATE raw data records. Every time synchronization data reception update can be logged, i.e. a raw record every second. Alternatively, the data is only logged to the raw file when the clock is reset. The data logged includes the time of the clock adjustment and the amount it was adjusted.

Note that this is only in affect if Raw Data recording is turned on.

3. Monitoring the synchronization

The synchronization of the WinFrog clock can be monitored from the Calculation window using the Data Item Text and Time Series options.


In the Data Item Text panel, the following information is displayed:

- Status
Displays the data type status (On/Off) and the associated device status.
- Sync'd at
Displays the time the WinFrog clock was last adjusted.
- Computer time
WinFrog clock time stamp of last synchronization data input
- UTC time
UTC time (from device) of last synchronization data input
- Raw Delta
The difference between the UTC and associated WinFrog time stamp (UTC – WinFrog) for the last epoch
- Filter Delta
The difference between the UTC and filtered WinFrog time for the last epoch

In the Time Series panel, the difference between the UTC time and the raw and filtered WinFrog times are plotted.

CONFIGURATION DETAILS:

Before you install the card, you must ensure that the Address and IRQ settings are correct, and that they do not conflict with other hardware installed on the same PC. The GPSCard's default DIPswitch settings configure the card with a base address of 150 and an IRQ (interrupt request) setting of 5. (Switch 2 in the on position represents an address of 150, and switch 4 on position represents an IRQ of 5 as shown below). For more information on the different IRQ and Address settings, please refer to the NovAtel manual.

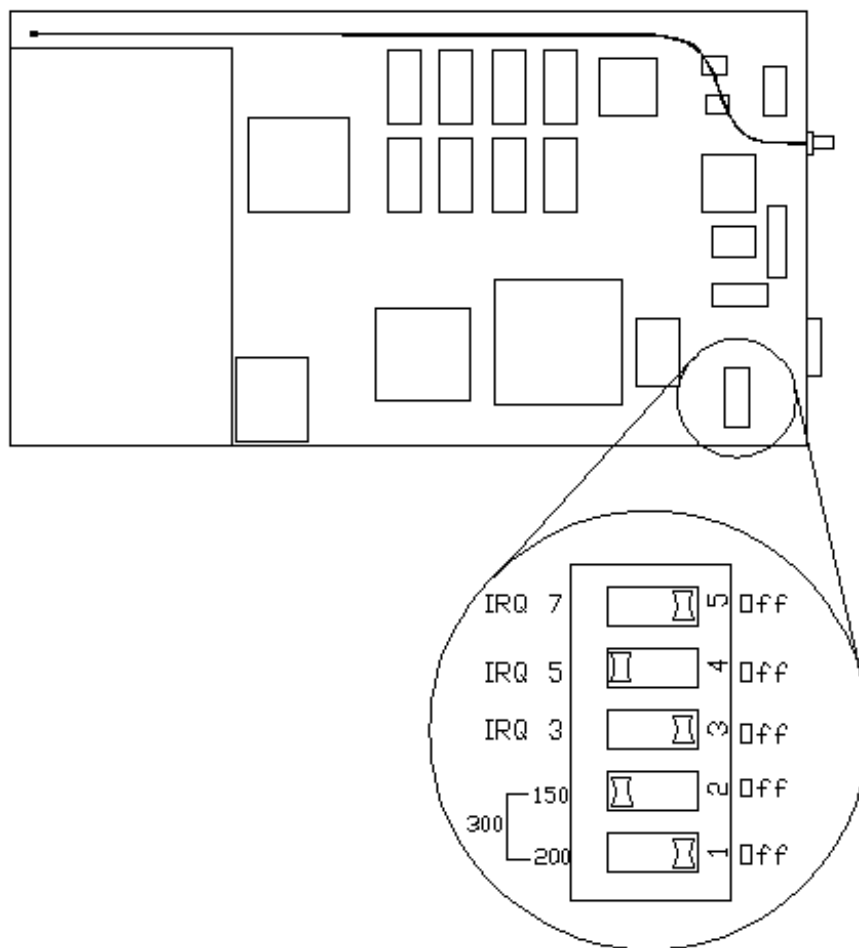

NovAtel Card: Base Address and IRQ DIP Switch Setting

Device Data String(s)

Output to WinFrog:

Upon bootup, WinFrog sends the GPSCard command messages to initiate the output of the following data:

REPB: raw ephemeris data
RCCA: receiver configuration
ALMB: almanac, ion & utc data
SATB: satellite specific data
RGEB: channel measurements new format
RNGB: channel measurements old format
CTSB: channel-tracking status
GPGGA: GGA position message
P20B: RT20 P20 position message
GPGSA: GSA message
GPGST: GGA message
GPZDA: ZDA message
SVCB: SV x,y,z,ion,trop,clk

Note: The NovAtel Console uses binary messages (as opposed to ASCII). This is defined in the last letter of the above codes, i.e ALMB is a binary message, while ALMA is an ASCII message.

Driver Installation:

In addition to correctly configuring the GPSCard's address and IRQ settings, you must also install the correct firmware to run the GPSCard.

In order to install the driver you must first locate the appropriate boot file for the specific card that you are using. This boot file (named main.btl) is sent along with the GPSCard when delivered from the factory. Although all NovAtel boot files are named main.btl, each file is tagged to a specific GPSCard and cannot be interchanged with other software or GPSCards. It is standard practice at Fugro Pelagos to rename the main.btl file to match the GPSCard's serial number, as found on the circuit board (retaining the .btl file extension). Also, if you are using an older NovAtel GPS Card (pre-2000), you must ensure that the boot file used is year 2000 (Y2K) compliant.

To install the driver:

1. Using NT Explorer, click on File and create a directory called GPS.
2. Insert the boot file disk into drive A. Copy the boot file that corresponds to the serial number of the GPS card (for example 090240.btl), to the GPS directory.
3. Insert the disk that has the NTDLL sub-directory into Drive A and then copy the NTDLL subdirectory into the GPS directory. From the C:\GPS directory copy the following files **ntgpsdrv.sys** and **pcgps3nt.dll** into the following directories **c:\winnt\system32\drivers** and **c:\winnt\system32** respectively.
4. Exit NT Explorer. Start **MSDOS Prompt**. Use the cd command to change to the C:\GPS\NTDLL directory. (i.e. type cd C:\GPS\NTDLL <enter>)
5. Type the following line then press <enter>.
gpsinst /Dc:\winnt\system32\drivers\ntgpsdrv.sys /NGPS1 /I5 /A150
6. To check that the driver is correctly installed, type "**gpsquery**" and press <Enter>. The driver parameters will show indicating that it has been successfully installed.
7. You must now load the boot file by typing the following line and pressing <Enter>.
gpsload /NGPS1 c:\gps\the bootable file (such as 090240.btl) <enter>
8. At this point, the red light on the card should be flashing, indicating that the card has been booted correctly.
9. Type **gpscon /NGPS1** <enter>. Gpscon enables you to issue commands directly to the GPSCard via the PC keyboard.
10. Type **log console rcsa** <enter>. This command allows you to monitor the receiver status. The rcsa will display the Version, Channels, Idle and Status of the receiver. By looking at the status code you will be able to determine whether

there is an error with the GPS card or not. For example: Code 00000xF7 indicates that the GPS antenna and GPS Card are correctly installed and functioning properly. Code 00000xF6 indicates an antenna fault while the GPS Card status is good.

- 11 To exit, press <Esc>. Type <Exit> in order to exit the DOS Prompt and return to Program Manager.

Installation of two NOVATEL GPS CARDS:

1. Verify that there is a directory called \GPS\NTDLL on the C: drive.
2. From the MS-DOS command prompt execute the following command:
C:\GPS\NTDLL\GPSQUERY.EXE
This will display all of the loaded instances of the driver. All instances must be removed with the following command (repeat this command for each instance of the driver).
C:\GPS\NTDLL\GPSINST /R/N (insert instance of the driver, i.e. GPSI)
3. Perform a normal shutdown of the computer and turn it OFF.
4. On the first GPS card, set the dip switch to SW2 and SW4 ON, all others OFF and make a note of it's serial number for future reference (this will set the card to IRQ5 and address 150). On the second GPS card, set the dip switch to SW1 and SW3 ON, all others OFF and make a note of its serial number for future reference (this will set the card to IRQ3 and address 200).
5. Install both cards in the computer. Install the hold down bar and adjust the extender feet to ensure that pressure is being applied to both cards.
6. Turn the computer ON. When the keyboard has been recognized press <F1> to enter the BIOS setup utility. Once in the BIOS setup utility you will have to use the arrows keys to move around as you will have no mouse.
Go to **ADVANCED** and press <enter>
Select to **Peripheral Configuration** and press <enter>.
Select **Configuration Mode** and press <enter>.
Select **Manual** and press <enter>.
Select **Serial Port 2 Address** and press <enter>.
Select **Disable** and press <enter>.
Press <Esc> to back out of this menu.
Go to **Plug and Play Configuration** and press <enter>.
Select **Configuration Mode** and press <enter>.
Select **Use Setup Utility** and press <enter>.
Select **IRQ3** and press <enter>.
Select **Used by ISA Device** and press <enter>.
Select **IRQ5** and press <enter>.
Select **Used by ISA Device** and press <enter>.
7. Press <F10> to exit the setup utility and save changes.

8. Allow the computer to boot normally and start NT. Log on as an administrator.
9. From the MS-DOS command prompt execute the following commands:
copy c:\gps\ntdll\ntgpsdrv.sys c:\winnt\system32\drivers\ntgpsdrv1.sys
copy c:\gps\ntdll\ntgpsdrv.sys c:\winnt\system32\drivers\ntgpsdrv2.sys
gpsinst.exe/Dc:\winnt\system32\drivers\ntgpsdrv1.sys /NGPS1 /I5 / A150
gpsinst.exe/Dc:\winnt\system32\drivers\ntgpsdrv2.sys /NGPS2 /I3 / A200
10. Insert the OEM disk for one of the gps cards and execute the following command:
copy a:main.btl c:\gps/(insert last 6 digits of the card serial number).btl
11. Repeat step 10 for the second card.
12. Start up WinFrog and add the NOVATEL CON device. In the Edit I/O device window, select **IRQ5** and use the Browse button to select the boot file (*.BTL) that corresponds to the card that you set to IRQ5 in step 4 (the port address is not used here). Add another NOVATEL CON device. In the edit I/O device window, select **IRQ3** and use the Browse button to select that boot file (*.BTL) that corresponds to the card that you set to IRQ3 in step 4 (the port address is not used here either).
13. If this fails, or you get any unusual error messages when you start up NT, you can define the error by going to Start> Administrative Tools > Event Viewer. This window defines any hardware conflicts.

SPECIFICATIONS (Manufacturer's):

Channels:	10 or 12 channel depending on GPS card
Code Tracking:	C/A Code (SPS)
Time to First Fix:	< 70 seconds typical (cold start: no initial time, almanac, or position required).
Pseudorange:	Standalone 15m CEP (SA off), GDOP < 2 40m CEP (SA on)
	Differential with RTCM Standard Reference Station 1-5m CEP
Dual RS-232C Serial	Default 9600 baud (COM1 and COM2)