ABB INDUSTRIAL DRIVES

ACS880-104 inverter modules

Hardware manual



ACS880-104 inverter modules

Hardware manual

Table of contents 

4. Cabinet construction 

5. Electrical installation 

9. Start-up 

3AUA0000104271 Rev N
EN
Original instructions
EFFECTIVE: 2025-01-10

Table of contents

1 Introduction to the manual

Contents of this chapter 19
Applicability 19
Safety instructions 19
Target audience 19
Categorization by frame size and option code 20
Use of component designations 20
Terms and abbreviations 20
Related documents 22

2 Hardware description

Contents of this chapter 23
Overview diagram of the drive system 24
Inverter module hardware 25
General 25
Frames R1i...R4i 25
General 25
Frame R1i layout 25
Frame R4i layout 26
Overview circuit diagram of an inverter cubicle (frames R1i...R4i) 27
Cabinet layout and cooling 27
Frame R5i 28
General 28
Frame R5i layout 28
Overview circuit diagram of an inverter cubicle (frame R5i) 29
Cabinet layout and cooling 29
Frames R6i and R7i 30
DC connection and capacitor charging 30
Frame R6i and R7i layout 31
Frame R6i and R7i layout (options +V992 and +C249) 32
Overview circuit diagram of an inverter cubicle (frame R6i) 34
Overview circuit diagram of an inverter cubicle (frame R7i) 35
Cabinet layout and cooling 35
Frame R8i and multiples 36
DC connection and capacitor charging 36
Frame R8i layout 37
Connectors X50...X53 38
Fiber optic connectors 39
Overview circuit diagram of a frame R8i inverter unit 40
Overview circuit diagram of a frame 2×R8i inverter unit 41
Cabinet layout and cooling 41
Module variant with capability for increased switching frequency 42
Inverter unit control interfaces 43
Overview of control connections of the ZCU control unit 43
Overview of the control connections of the UCU control unit 44
Overview of the control connections of the BCU control unit 45

Control panel 45
Control by PC tools 46
Type designation label 47
Type designation key 48

3 Moving and unpacking the module

Contents of this chapter 49
Moving and lifting the transport package 49
Unpacking 49
Frames R1i...R5i 49
Frames R6i...R8i 49
Lifting the unpacked modules 50
Moving the unpacked modules 50

4 Cabinet construction

Contents of this chapter 51
Limitation of liability 51
North America 51
General 51
Installation and maintenance of the control unit 52
Installation examples 52
R1i...R4i modules in a 400 mm wide Rittal VX25 enclosure 53
Installation stages 54
Overview of kits 55
Stage 1: Installation of common parts 56
Stage 2: Installation of bottom plate 57
Stage 3: Installation of mounting plate 58
Stage 4: Installation of DC busbars 59
Stage 5: Installation of mounting plate shrouds 60
Stage 6: Installation of inverter modules and air guides 61
Stage 7: Installation of du/dt filters 62
R1i...R4i modules in a 600 mm wide Rittal VX25 enclosure 63
Installation stages 64
Overview of kits 65
Stage 1: Instalation of common parts 66
Stage 2: Installation of bottom plate 67
Stage 3: Installation of mounting plate 68
Stage 4: Installation of DC busbars 69
Stage 5: Installation of mounting plate shrouds 70
Stage 6: Installation of inverter modules and air guides 71
Stage 7: Installation of du/dt filter 72
R1i...R4i modules in a 800 mm wide Rittal VX25 enclosure 73
Installation stages 74
Overview of kits 75
Stage 1: Installation of common parts 76
Stage 2: Installation of bottom plate 77
Stage 3: Installation of mounting plate 78
Stage 4: Installation of DC busbars 79
Stage 5: Installation of mounting plate shrouds 80
Stage 6: Installation of inverter modules and air guides 81
Stage 7: Installation of du/dt filters 82

R5i modules in a 400 mm wide Rittal VX25 enclosure 83
Installation stages 84
Overview of kits 85
Stage 1: Installation of common parts 86
Stage 2: Installation of bottom plate 87
Stage 3: Installation of inverter module mounting plate 88
Stage 4: Installation of DC busbars 89
Stage 5: Installation of front mounting plate 90
Stage 6: Installation of inverter modules 91
Stage 7: Installation of du/dt filters 92
R5i modules in a 600 mm wide Rittal VX25 enclosure 93
Installation stages 94
Overview of kits 95
Stage 1: Installation of common parts 96
Stage 2: Installation of bottom plate 97
Stage 3: Installation of inverter module mounting plate 98
Stage 4: Installation of DC busbars 99
Stage 5: Installation of front mounting plate 100
Stage 6: Installation of inverter modules 101
Stage 7: Installation of du/dt filters 102
One R6i/R7i module in a 400 mm wide Rittal VX25 enclosure 103
Installation stages 104
Overview of kits 105
Stage 1: Installation of common parts 106
Stage 2: Installation of bottom plate 107
Stage 3: Installation of support beams 108
Stage 4 (R6i): Installation of DC busbars and charging components 109
Stage 4 (R7i): Installation of DC busbars and charging components 110
Stage 5: Installation of common mode filters 111
Stage 6 A: Installation of AC busbars (without du/dt filters) 112
Stage 6 B: Installation of AC busbars (with du/dt filters) 113
Stage 7: Installation of inverter module 114
Stage 8: Installation of shrouding brackets 115
One R6i/R7i module in a 400 mm wide generic enclosure 116
One R8i module in a 400 mm wide Rittal VX25 enclosure 118
Installation stages 119
Overview of kits 120
Stage 1: Installation of common parts 121
Stage 2 A: Installation of DC busbars (1) (without DC switch/charging) 122
Stage 2 B: Installation of DC busbars (1) (with DC switch/charging) 123
Stage 3: Installation of module installation parts and lead-throughs 124
Stage 4 A: Installation of quick connector and output (AC) busbars (cable connection) 125
Stage 4 B: Installation of quick connector and output (AC) busbars (common AC output busbar connection) 126
Stage 5 A: Installation of DC busbars (2) (without DC switch/charging) 127
Stage 5 B: Installation of DC busbars (2) (with DC switch/charging) 128
Stage 6: Installation of shrouding 129
Stage 7: Installation of inverter module 130
Two R8i modules in a 600 mm wide Rittal VX25 enclosure 131
Installation stages 132
Overview of kits 134

Stage 1: Installation of common parts 135
Stage 2 A: Installation of DC busbars (1) (without DC switch/charging) 136
Stage 2 B: Installation of DC busbars (1) (with DC switch/charging) 137
Stage 3: Installation of module installation parts and lead-throughs 138
Stage 4 A: Installation of quick connector and output (AC) busbars (cable connection) 139
Stage 4 B: Installation of quick connector and output (AC) busbars (cable connection with bridging) 140
Stage 4 C: Installation of quick connector and output (AC) busbars (common AC output busbar connection) 141
Stage 5 A: Installation of DC busbars (2) (without DC switch/charging) 142
Stage 5 B: Installation of DC busbars (2) (with DC switch/charging) 143
Stage 6: Installation of shrouding 144
Stage 7: Installation of inverter modules 145
One R8i module in a 400 mm wide generic enclosure 146
Two R8i modules in a 600 mm wide generic enclosure 148
Three R8i modules in a 800 mm wide generic enclosure 150
One BLHF filter in a 600 mm wide Rittal VX25 enclosure 152
Installation stages 153
Overview of kits 154
Stage 1: Installation of common parts 155
Stage 2: Installation of module installation parts 156
Stage 3: Installation of AC busbars and AC input busbars 157
Stage 4: Installation of filter module, AC flanges and shrouds 158
Two BLHF filters in a 800 mm wide Rittal VX25 enclosure 159
Installation stages 160
Overview of kits 161
Stage 1: Installation of common parts 162
Stage 2: Installation of module installation parts 163
Stage 3: Installation of AC busbars 164
Stage 4: Installation of filter module, AC connection busbars and shrouds ...165
One BLHF filter in a 600 mm wide generic enclosure 166
Two BLHF filters in a 800 mm wide generic enclosure 168

5 Electrical installation

Contents of this chapter 171
Safety and liability 171
Electrical safety precautions 172
General notes 173
Printed circuit boards 173
Handling fiber optic cables 173
Measuring the insulation 173
Measuring the insulation resistance of the drive 173
Measuring the insulation resistance of the motor and motor cable 174
Brake resistor assembly 174
Power connections – Frames R1i...R5i 175
Connection procedure 175
Frames R1i and R2i 175
Frames R3i...R5i 176
Power connections – Frames R6i...R8i 177
R6i inverter module 177
R7i inverter module 178

R8i inverter module 179
R8i inverter module 179
2×R8i inverter unit 180
Connection procedure 181
Grounding the motor cable shield at the motor end 182
Installing the BLHF filter 182
Replacing ACS800 R8i modules with ACS880 R8i modules 184
Connecting the control cables 188
Installing option modules 189
Installing an I/O extension, fieldbus adapter or pulse encoder option module 189
Installing an FSO safety functions module onto UCU or BCU control unit 189
Installing an FSO safety functions module onto ZCU control unit 190
Mounting kit for FSO safety functions module 191
Installing the FSPS-21 PROFIsafe safety functions module 192
Installing the FSCS-21 CIP Safety™ functions module 192
Connecting a PC 192
Panel bus (control of several units from one control panel) 193

6 Control unit (UCU)

Contents of this chapter 197
General 197
Layout 198
Default I/O diagram of the inverter control unit 201
Additional information on the connections 205
Connecting motor temperature sensors to the drive 205
Power supply for the control unit (XPOW) 205
Digital interlock (DIIL) 205
Control panel connection (XPAN) 205
The XD2D connector 205
Safe torque off (XSTO, XSTO OUT) 206
Safety functions module connection (XFSO) 206
MicroSDHC memory card slot 206
Connector data 207
Ground isolation diagram 209
Other information 210

7 Control unit (BCU, ZCU)

Contents of this chapter 211
General 211
ZCU-12 layout 212
ZCU-14 layout 213
Default I/O diagram of the inverter control unit (ZCU) 214
Layout (BCU) 217
Default I/O diagram of the inverter control unit (BCU) 219
Additional information on the connections 223
Connecting motor temperature sensors to the drive 223
Power supply for the control unit (XPOW) 223
Digital interlock (DIIL) 223
The XD2D connector 223
Safe torque off (XSTO, XSTO OUT) 224
Safety functions module connection (X12) 224

SDHC memory card slot 225
Connector data 226
BCU ground isolation diagram 228
ZCU ground isolation diagram 229
Other information 230

8 Installation checklist

Contents of this chapter 231
Checklist 231

9 Start-up

Contents of this chapter 235
Start-up procedure 236
Charging sequence 238

10 Maintenance

Contents of this chapter 239
Maintenance intervals 239
Description of symbols 239
Recommended maintenance intervals after start-up 240
Maintenance timers and counters 241
Cleaning 241
Cleaning the interior of the cabinet 241
Cleaning the heatsink 241
Cleaning the door air inlets 242
Cleaning the door air inlets (IP20) 242
Cleaning the door air inlets (IP22 and IP42) 242
Replacing the inlet door filters (IP54) 243
Cooling fans 244
Replacing the module cooling fans 244
Replacing the R1i and R2i module cooling fan 244
Replacing the R3i and R4i module cooling fan 245
Replacing the R5i module main cooling fan 246
Replacing the R5i module auxiliary cooling fan 247
Replacing the R6i and R7i module cooling fan 247
Replacing R8i module cooling fan (speed-controlled version) 248
Replacing R8i module cooling fan (direct-on-line version) 249
Replacing the circuit board compartment fan 251
Replacing the cabinet cooling fans 253
Cabinets with ABB air outlet kits 253
Cabinets with other fan types 253
Replacing R6i/R7i module 254
Replacing R8i module 257
BLHF filters 261
Capacitors 261
Reforming the capacitors 261
Control units 262
UCU control unit types 262
Replacing the memory unit of the UCU control unit 262
Replacing the UCU control unit battery 263
Replacing the microSDHC memory card (UCU-22…24) 263

BCU control unit types 264
Replacing the memory unit of BCU control unit 264
Replacing the BCU control unit battery 265
Control panel 265
LEDs and other status indicators 266
Control panel and panel platform/holder LEDs 266
LEDs of the BPA-01 board 266
R8i module LEDs 266
Activating the reduced run function of the inverter unit 267
Starting reduced run operation 267
Resuming normal operation 267
Functional safety components 268

11 Ordering information

Contents of this chapter 269
Kit code key 270
Frames R1i...R4i 272
Inverter modules 272
Control panel 274
DC-side components 275
DC bus installation parts (for Rittal VX25 enclosures) 275
Module-specific DC fuses (IEC, UL) 276
Module-specific DC fuse bases (IEC, UL) 276
Main DC switch/disconnector kits 277
Main DC fuses (IEC, UL) 277
Busbars between main DC switch/disconnector and fuses 278
AC-side components 280
Output (du/dt) filters 280
Mechanical installation accessories 281
Mounting plate shroud kits 281
Air guide kits 282
Frame R5i 283
Inverter module 283
Control panel 285
DC-side components 286
DC bus installation parts (for Rittal VX25 enclosures) 286
Module-specific DC fuses (IEC, UL) 287
Module-specific DC fuse bases (IEC, UL) 287
Main DC switch/disconnector kits 287
Main DC fuses (IEC, UL) 288
DC busbars (IEC, UL) 288
AC-side components 289
Output (du/dt) filters 289
Mechanical installation accessories 289
Mounting plate shroud kits 290
Fuse base shroud kit 290
Frames R6i and R7i 292
Inverter modules 292
Control panel 293
Control electronics 294
Control unit (BCU) 294
Control unit (UCU) 294

Fiber optic cables 294
DC-side components 295
DC bus installation parts (for Rittal VX25 enclosures) 295
DC fuses 296
DC switch/disconnector kits 298
Charging kit (R7i only) 299
DC connection kit for Rittal VX25 enclosures 300
DC busbars with common mode filter holder for Rittal VX25 enclosures 302
DC busbars with fuse and common mode filter holders for generic enclosures 303
Common mode filters 303
AC-side components 304
AC busbar kit 304
Output (du/dt) filters 304
Mechanical installation accessories and tools 305
Inverter module mounting parts 305
Shrouding 305
Lifting device 305
Frame R8i and multiples 307
Inverter modules 307
Control panel 309
Control electronics 310
Control unit (BCU) 310
Control unit (UCU) 310
Fiber optic cables 311
Control circuit plug connectors 311
Wire sets for use with the reduced run function 311
DC-side components 312
DC bus installation parts (for Rittal VX25 enclosures) 312
DC connection parts 1 of 2 (for Rittal VX25 enclosures) 312
DC connection parts 1 of 2 (for generic enclosures) 315
DC connection parts 2 of 2 (for Rittal VX25 or generic enclosures) 317
Common mode filters 318
DC fuses (IEC, UL) 319
DC switch/disconnector kits 320
Charging kits 322
Charging resistors 324
AC-side components 325
Quick connector 325
Output busbars/shrouds kit 326
Cable entry kit 330
Mechanical installation accessories 330
Inverter module top/bottom guides 330
Insertion/Extraction ramp 332
Shrouding 332
BLHF filters 333
Filter modules 333
Control circuit plug connectors 334
Filter module top/bottom guides 335
AC connection parts 336
Shrouding 340

Cabinet ventilation 341
Air inlet kits 341
Air inlet kits 400 mm cabinet 341
Air inlet kits 600 mm cabinet 342
Air inlet kits 800 mm cabinet 343
Air outlet kits 343
Air outlet kits 400 mm cabinet 343
Air outlet kits 600 mm cabinet 345
Air outlet kits 800 mm cabinet 346
Cooling fans (frames R1i...R4i) 349
Cooling fans (frames R5i) 352
Cooling fans (frames R6i...R7i) 353
Cooling fans (frames R8i) 354

12 Technical data

Contents of this chapter 355
Ratings 355
Definitions 358
Derating 359
Surrounding air temperature derating 359
Altitude derating 359
Switching frequency derating 360
Output frequency derating 360
Cooling characteristics, noise, DC capacitance 360
Permitted mounting orientations 363
Dimensions and weights 363
Free space requirements 364
Input power (DC) connection 365
Motor connection data 365
Typical power cable sizes 366
Terminal data for the power cables 367
Input terminals 367
Output terminals (frames R1i...R5i) 367
Output terminals (frames R6i...R7i) 368
Output terminals (frame R8i) 369
Control connections 369
Protection classes 370
Ambient conditions 370
Colors 371
Materials 371
Module 371
Packaging of module 371
Packaging of options 371
Manuals 372
Disposal 372
Standards 372
Markings 372
Efficiency 372
Energy efficiency data (ecodesign) 373
Auxiliary power consumptions 373
Control equipment 373
Cabinet cooling fans 373

Definitions 374
Fuse data 374
Ferrules used with 400 V and 500 V units 374
Ferrules used with 690 V units 374
Flush-end fuse blocks used with 400 V and 500 V units 375
Flush-end fuse blocks used with 690 V units 375
Tightening torques 376
Electrical connections 376
Mechanical connections 376
Insulation supports 376
Cable lugs 376
Disclaimers 377
Generic disclaimer 377
Cyber security disclaimer 377
Declarations of conformity 377

13 The Safe torque off function

Contents of this chapter 379
Description 379
Compliance with the European Machinery Directive and the UK Supply of Machinery (Safety) Regulations 380
Wiring 381
Activation switch 381
Cable types and lengths 381
Grounding of protective shields 381
Dual-channel connection with internal power supply 382
Frames R1i...R7i (R6i/R7i without option +C249), with ZCU control unit 382
Frame R6i/R7i with option +C249, with BCU control unit 382
Frame R6i/R7i with option +C249, with UCU control unit 383
Frame R8i and multiples with BCU control unit 384
Frame R8i and multiples with UCU control unit 385
Single-channel connection of activation switch, with ZCU-12 control unit 386
Single-channel connection of activation switch, with ZCU-14 or BCU control unit 387
Single-channel connection of activation switch, with UCU control unit 388
Multiple inverter units 389
Internal power supply (example, inverter unit with ZCU or BCU control unit) 389
Internal power supply (example, inverter unit with UCU control unit) 390
External power supply (example, inverter unit with ZCU or BCU control unit) 391
External power supply (example, inverter unit with UCU control unit) 392
Operation principle 393
Start-up including validation test 394
Competence 394
Validation test reports 394
Validation test procedure 394
Use 396
Maintenance 398
Competence 398
Perfect proof test procedure 399
Simplified proof test procedure 399
Fault tracing 400

Safety data 401
Terms and abbreviations 403
TÜV certificate 404

14 Resistor braking using frames R1i...R4i inverter modules

Contents of this chapter 405
Using R1i...R4i modules for resistor braking 405
Planning the braking system 405
Restrictions 406
Selecting the brake resistor 406
Selecting and routing the brake resistor cables 407
Minimizing electromagnetic interference 407
Maximum cable length 407
Selecting the installation location for the brake resistors 407
Protecting the system against thermal overload 407
Protecting the resistor cable against short circuit 408
Mechanical installation 409
Electrical installation 409
Checking the insulation of the brake resistor assembly 409
Connection procedure 409
Start-up 410
Technical data 411
Ratings 411
Definitions 412
Resistor dimensions 413
Resistor connectors on inverter modules 414

15 Dimension drawings

Contents of this chapter 415
Frame R1i 416
Frame R2i 417
Frame R3i 418
Frame R4i 419
Frame R5i 420
Frame R6i 421
Frame R6i with options +V992 and +C249 422
Frame R7i 423
Frame R7i with options +V992 and +C249 424
Frame R8i 425
Frame R8i with option +P942 427
Control electronics 430
ZCU control unit 430
UCU control unit 431
BCU control unit 432
DPMP-01 door mounting kit 433
DC fuses and fuse bases 434
Fuse, 14 × 51 mm 434
Mersen US141 (Z331153F) fuse disconnector (for 14 × 51 mm fuses) 434
Fuse, 27 × 60 mm 435
Mersen US271MI (R227600C) fuse disconnector (for 27 × 60 mm fuses) 435

Mersen PS272PREMCPS (N220076) fuse disconnector (for R5i, 27 × 60 mm fuses) 436
DC fuse blocks (Bussmann) 437
Switchgear and charging components 438
OS_ switch fuses 438
OS100GJ04FP 438
OS160GD04F 439
OS200DZ22F 440
OT_ switch/disconnectors 441
OT200E11 441
OT200U11 442
OT400E11 443
OT400E22 444
OT400U11 445
OT400U22 446
OT600U11, OT630E11 447
OT1200U__, OT1600E__ 448
OT2500E22 449
OHB_ switch handles 450
OHB65J6, OHB125J12, OHB145J12 450
OHB150J12P 450
OHB274J12 451
OA1G10/OA3G01 auxiliary contact blocks 451
AF190-30-00-13 contactor 452
Charging controller 453
Charging resistor (frame R7i) 454
Charging resistor (frame R8i) 454
Miscellaneous components 455
Cooling fan 3AXD5000000592 455
Cooling fan 3AXD50000006111 455
Output (du/dt) filters for frames R1i…R5i 456
Common mode filters 457
Quick connector for frame R8i 457
Insertion/extraction ramp for frame R8i modules 459

16 Circuit diagrams

Contents of this chapter 461
Component designations used in the diagrams 461
Frames R1i…R5i 461
Frame R6i 462
Frame R7i 462
Frame R8i and multiples 463
Frames R1i…R4i – Sheet 000A 464
Frames R1i…R5i – Sheet 000B 465
Frames R1i…R4i – Sheet 000C 466
Frames R1i…R5i – Sheet 300A 467
Frames R1i…R5i – Sheet 001a 468
Frames R1i…R4i – Sheet 003a 469
Frames R1i…R4i – Sheet 020a 470
Frames R1i…R5i – Sheet 021a 471
Frames R1i…R5i – Sheet 026a 472
Frames R1i…R5i – Sheet 040a 473

Frames R1i…R5i – Sheet 040b 474
Frames R1i…R5i – Sheet 040c 475
Frames R1i…R5i – Sheet 040d 476
Frames R1i…R5i – Sheet 041a 477
Frames R1i…R5i – Sheet 061a 478
Frame R5i – Sheet 000A 479
Frame R5i – Sheet 000C 480
Frame R5i – Sheet 003a 481
Frame R5i – Sheet 020a 482
Frame R6i – Sheet 000A 483
Frame R6i – Sheet 000B 484
Frame R6i – Sheet 000C 485
Frames R6i and R7i – Sheet 300A 486
Frame R6i – Sheet 001a 487
Frames R6i and R7i – Sheet 020a 488
Frames R6i and R7i – Sheet 040a 489
Frames R6i and R7i – Sheet 040b 490
Frames R6i and R7i – Sheet 040c 491
Frames R6i and R7i – Sheet 041a 492
Frame R7i – Sheet 000A 493
Frame R7i – Sheet 000B 494
Frame R7i – Sheet 000C 495
Frame R7i – Sheet 001a 496
Frame R7i – Sheet 005a 497
Frame 1×R8i (with DC switch/disconnector) – Sheet 000A 498
Frame 1×R8i – Sheet 000B 499
Frame 1×R8i – Sheet 000C 500
Frames 1×R8i and 2×R8i – Sheet 300A 501
Frame 1×R8i – Sheet 001a 502
Frame 1×R8i – Sheet 002a 503
Frame 1×R8i – Sheet 005a 504
Frame 1×R8i – Sheet 020a 505
Frames 1×R8i and 2×R8i – Sheet 021a 506
Frames 1×R8i and 2×R8i – Sheet 040a 507
Frames 1×R8i and 2×R8i – Sheet 040b 508
Frame 1×R8i – Sheet 040c 509
Frames 1×R8i and 2×R8i – Sheet 040d 510
Frames 1×R8i and 2×R8i – Sheet 041a 511
Frames 1×R8i and 2×R8i – Sheet 061a 512
Frames 1×R8i and 2×R8i – Sheet 095a 513
Frame 2×R8i – Sheet 000A 514
Frame 2×R8i – Sheet 000B 515
Frame 2×R8i – Sheet 000C 516
Frame 2×R8i – Sheet 001a 517
Frame 2×R8i – Sheet 005a 518
Frame 2×R8i – Sheet 020a 519
Frame 2×R8i – Sheet 040c 520

Further information

1

Introduction to the manual

Contents of this chapter

This chapter gives the basic information on the manual.

Applicability

The manual applies to ACS880-104 inverter modules (frame sizes R1i…R8i) and inverter units (frame sizes 2×R8i…6×R8i) intended for user-defined cabinet installations.

Safety instructions

Obey all safety instructions of the drive.

- Read the **complete safety instructions** before you install, commission, use or service the drive. The complete safety instructions are given in ACS880 multidrives cabinets and modules safety instructions (3AUA0000102301 [English]).
- Read the warnings of the software function before you take the function in use or change its default parameter settings. Read the warnings of the parameter before you change its default setting. Refer to the firmware manual.

Target audience

This manual is intended for people who plan the installation, install, commission, and do maintenance work on the drive, or create instructions for the end user of the drive concerning the installation and maintenance of the drive.

Read the manual before you do work on the drive. You are expected to know the fundamentals of electricity, wiring, electrical components, and electrical schematic symbols.

Categorization by frame size and option code

The instructions and technical data which concern only certain module or frame sizes are marked with the size identifier.

The module size can be identified from the basic code visible on the type designation label, for example, ACS880-104-0100A-3 where 0100A is the module size. The option codes of the module are listed after the plus sign.

The frame size of a module can be, for example, R1i, R4i, R7i, R8i or 3×R8i (the latter describing an inverter unit consisting of three parallel-connected R8i inverter modules). See the technical data for the units and frame sizes.

Use of component designations

Some device names in the manual include the component designation in brackets (for example, [Q20]). This will help you to identify the components in the circuit diagrams of the drive.

Terms and abbreviations

Term	Description
BCON	Type of control board
BCU	Type of control unit
BDPS	Module internal power supply board
BFPS	Control and power supply board for speed-controlled cooling fan
BLHF	Inductor-type filter. Refer to ACS880 multidrive for high-speed test benches supplement (3AXD50000818013 [English]).
Brake chopper	Conducts the surplus energy from the intermediate circuit of the drive to the brake resistor when necessary. The chopper operates when the DC link voltage exceeds a certain maximum limit. The voltage rise is typically caused by deceleration (braking) of a high inertia motor.
CMF	Common mode filtering
Cubicle	One section of a cabinet-installed drive. A cubicle is typically behind a door of its own.
DC link	DC circuit between rectifier and inverter
DC link capacitors	Energy storage which stabilizes the intermediate circuit DC voltage
DDCS	Distributed drives communication system protocol
Drive	Frequency converter for controlling AC motors
EFB	Embedded fieldbus
EMC	Electromagnetic compatibility
EMI	Electromagnetic interference
FAIO	Analog I/O extension module
FBA	Fieldbus adapter
FCAN	Optional CANopen® adapter module
FCNA	Optional ControlNet™ adapter module
FDCO	Optical DDCS communication module
FDPI	Diagnostics and panel interface board
FECA	Optional EtherCAT® adapter module
FEN-01	Optional TTL incremental encoder interface module
FEN-11	Optional absolute encoder interface module
FEN-21	Optional resolver interface module
FEN-31	Optional HTL incremental encoder interface module

Term	Description
FENA-11	Optional Ethernet adapter module for EtherNet/IP™, Modbus TCP® and PROFINET IO® protocols
FENA-21	Optional Ethernet adapter module for EtherNet/IP™, Modbus TCP and PROFINET IO protocols, 2-port
FEPL	Optional Ethernet POWERLINK adapter module
FIO-01	Optional digital I/O extension module
FIO-11	Optional analog I/O extension module
Four-quadrant operation	Operation of a machine in both the forward and reverse directions in both motoring and generating modes. Also used as an attribute of a drive; a regenerative drive can operate the electric machine in all four modes, while a non-regenerative drive can only operate the machine in motoring mode.
FPBA-01	Optional PROFIBUS DP® adapter module
Frame, frame size	Physical size of the drive or power module
FSCA	Optional Modbus RTU adapter module
FSCS-21	CIP Safety™ functions module
FSO-12, FSO-21	Optional functional safety modules
FSPS-21	PROFIsafe safety functions module
Generic enclosure	See chapter Ordering information.
HSFU	High-speed filter unit containing BLHF filters. Refer to ACS880 multidrive for high-speed test benches supplement (3AXD50000818013 [English]).
HTL	High-threshold logic
IGBT	Insulated gate bipolar transistor
Intermediate circuit	DC circuit between rectifier and inverter
INU	Inverter unit
Inverter	Converts direct current and voltage to alternating current and voltage.
Inverter module	Inverter bridge, related components and drive DC link capacitors enclosed in a metal frame or enclosure. Intended for cabinet installation.
Inverter unit	Inverter module(s) under control of one control unit, and related components. One inverter unit typically controls one motor.
Multidrive	Drive for controlling several motors which are typically coupled to the same machinery. Includes one supply unit, and one or several inverter units.
NBRA	Series of optional brake chopper modules
Parameter	In the drive control program, user-adjustable operation instruction to the drive, or signal measured or calculated by the drive. In some (for example fieldbus) contexts, a value that can be accessed as an object. For example, variable, constant, or signal.
PLC	Programmable logic controller
RFI	Radio-frequency interference
SIL	Safety integrity level (1…3) (IEC 61508, IEC 62061, IEC 61800-5-2)
STO	Safe torque off (IEC/EN 61800-5-2)
THD	Total harmonic distortion
TS 8	Enclosure system by Rittal (www.rittal.com)
TTL	Transistor-transistor logic
UCU	Type of control unit
UPS	Uninterruptible power supply
USCA-02	Adapter for installing F-series option modules onto the UCU control unit.
ZCON	Type of control board
ZCU	Type of control unit
ZMU	Type of memory unit, attached to the control unit

Related documents

You can find manuals on the Internet. See below for the relevant code/link. For more documentation, go to www.abb.com/drives/documents.

	Manuals for ACS880 multidrives modules

2


Hardware description

Contents of this chapter

This chapter describes a typical drive system and the hardware of ACS880-104 inverter modules.

Overview diagram of the drive system

The diagram that follows shows an example of a multidrive. The supply unit connects the drive to the AC supply network. It converts the AC voltage into DC. The DC voltage is distributed through the DC bus to all inverter units and optional brake units. The inverter unit converts the DC back to AC that rotates the motor. The brake unit (optional) conveys energy to brake resistors whenever needed.

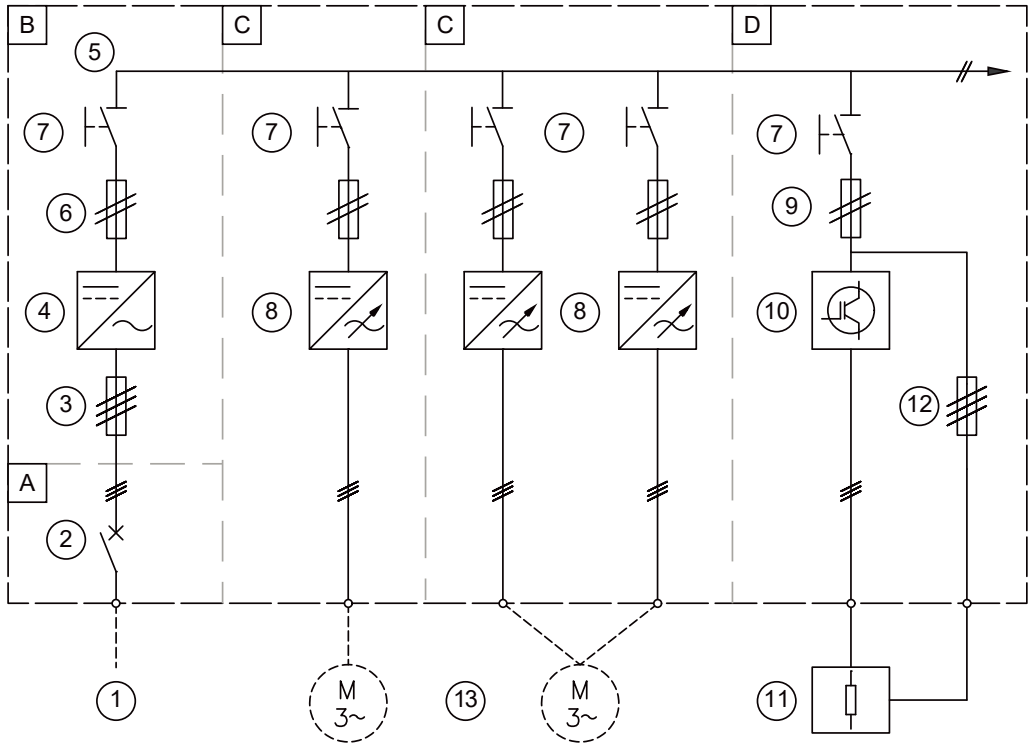

A	Incoming unit
B	Supply unit
C	Inverter unit
D	Brake unit (optional)
1	AC supply
2	Main breaker, or main contactor and main switch-disconnector
3	Input (AC) fuses
4	Supply module
5	DC bus
6	Supply and inverter module DC fuses
7	DC switch-disconnector (optional)
8	Inverter modules
9	Brake chopper fuses
10	3-phase brake chopper module (optional)
11	Brake resistors (optional or acquired by the customer)
12	Fuses for the brake resistors
13	Motor(s) (acquired by the customer)

Inverter module hardware

General

An inverter unit contains the components required to control one motor. These include one or more inverter modules connected in parallel, together with the necessary auxiliary equipment such as control electronics, fusing, cabling and switchgear.

ACS880-104 inverter modules can be used to construct inverter units with a power rating from 2.5 kW up to several megawatts. Up to approximately 500 kW, inverter units consist of one module only; higher power ratings are achieved by connecting multiple modules in parallel.

All inverter modules have coated circuit boards as standard.

Frames R1i...R4i


General

The DC input terminals are located at the top of the module; the AC output are located at the bottom. The ZCU-14 control unit is mounted onto the module; the control unit contains the basic I/Os and slots for optional I/O modules. Other optional equipment is primarily installed on separate mounting plates.

The module should be fitted with external DC fuses. Frame R1i…R4i modules have an internal capacitor pre-charge circuit.

Frame R1i layout


Frame R1i is pictured (frame R2i has a similar layout).

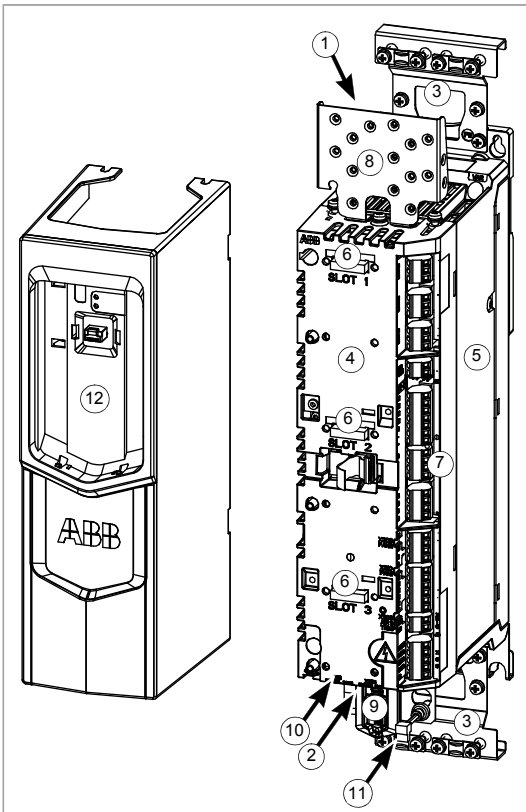

Item	Explanation
1	DC connection (obscured)
2	AC connection (obscured)
3	Grounding/clamping plates for power cables
4	ZCU control unit
5	Power unit
6	Slots for optional I/O modules
7	I/O terminal blocks
8	Grounding/clamping plate for control cables
9	Memory unit
10	Control panel connector
11	Air temperature sensor
12	Cover with recess for control panel (can optionally be left out)

Frame R4i layout


Frame R4i is pictured (frame R3i has a similar layout).

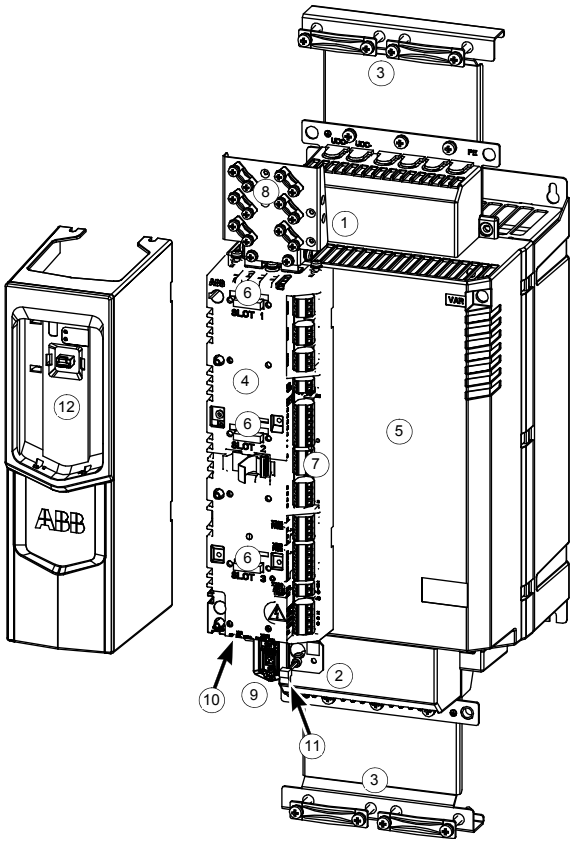

1	DC connection (under connector cover)
2	AC connection (under connector cover)
3	Grounding/clamping plates for power cables
4	ZCU control unit
5	Power unit
6	Slots for optional I/O modules
7	I/O terminal blocks
8	Grounding/clamping plate for control cables
9	Memory unit
10	Control panel connector
11	Air temperature sensor
12	Cover with panel mounting platform (can optionally be left out)

Overview circuit diagram of an inverter cubicle (frames R1i...R4i)

The following figure shows a simplified connection example of an inverter cubicle containing several frame R1i...R4i inverter modules.

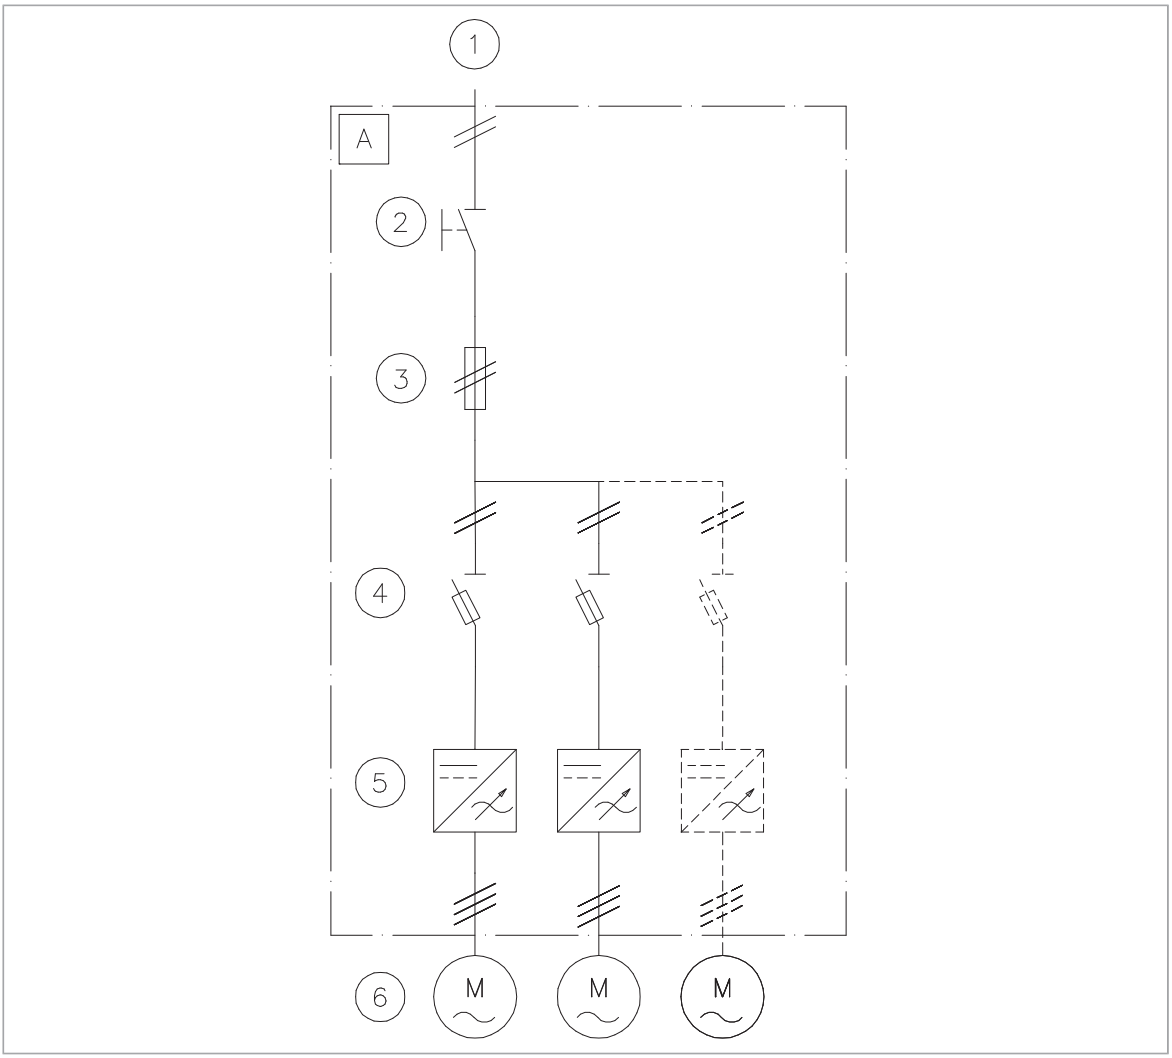

Item	Explanation	Available through
A	Inverter cubicle	-
1	DC supply	-
2	DC switch/disconnector	ABB or third party
3	Common DC fuses	ABB or third party
4	Fuse disconnector	ABB or third party
5	Inverter modules	ABB
6	Motor	ABB (not part of ACS880-104 product offering) or third party

Cabinet layout and cooling

See chapter Cabinet construction (page 51).


Frame R5i

General

The DC input and AC output terminals are located at the bottom of the module. The ZCU-12 control unit is mounted underneath the front cover; the control unit contains the basic I/Os and slots for optional I/O modules. Other optional equipment is primarily installed on separate mounting plates.

The module should be fitted with external DC fuses. Frame R5i modules have an internal capacitor pre-charge circuit.


Frame R5i layout

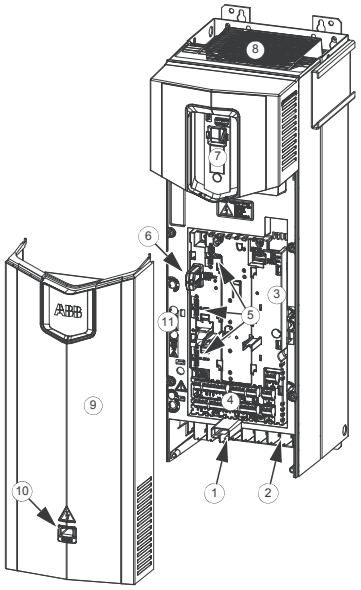

Item	Explanation
1	DC connection
2	AC connection
3	ZCU control unit
4	I/O terminal blocks
5	Slots for optional I/O modules
6	Memory unit
7	Control panel holder
8	Cooling fan
9	Front cover
10	Front cover retaining clip To remove the front cover, use a screwdriver to push the clip down, and pull cover outwards by its bottom edge.
11	Varistor board and EMC filter connecting screws (VAR and EMC). Should not be present in an ACS880-104.

Overview circuit diagram of an inverter cubicle (frame R5i)

The following figure shows a simplified connection example of an inverter cubicle containing several frame R5i inverter modules.

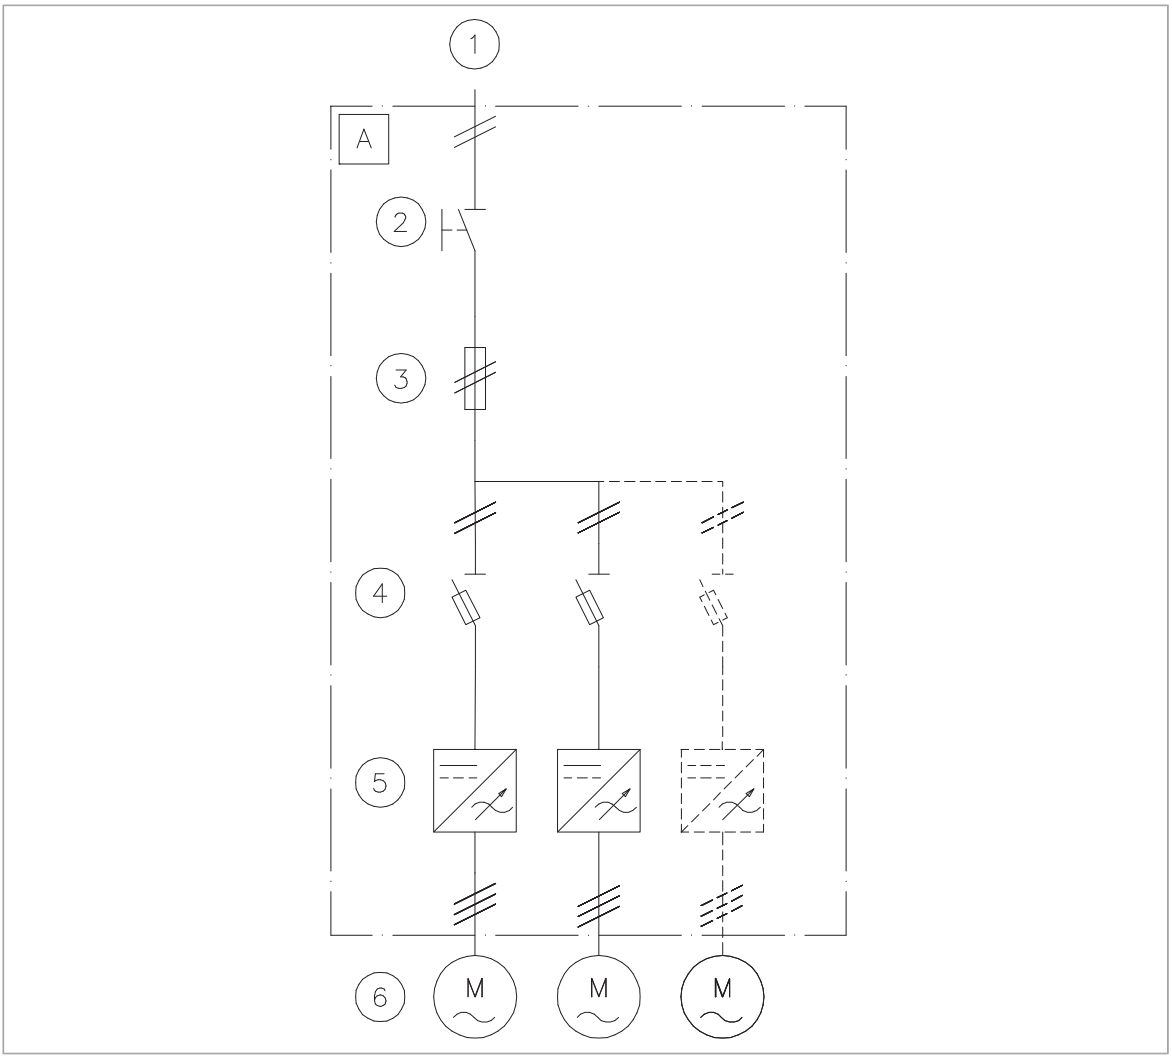

Item	Explanation	Available through
A	Inverter cubicle	-
1	DC supply	-
2	DC switch/disconnector	ABB or third party
3	Common DC fuses	ABB or third party
4	Fuse disconnector	ABB or third party
5	Inverter modules	ABB
6	Motor	ABB (not part of ACS880-104 product offering) or third party

Cabinet layout and cooling

See chapter Cabinet construction (page 51).

Frames R6i and R7i

The DC input terminals are located at the top of the module; the AC output are located at the bottom. The ZCU-14 control unit is mounted onto the module; the control unit contains the basic I/Os and slots for optional I/O modules. Other equipment is primarily installed on separate mounting plates.

Frame R6i or R7i module ordered with option +V992 is hardware version that is added to offering during 2023. Hardware version +V992 is mechanically and electrically backward-compatible with modules without option +V992. However, ACS880 primary control program v3.40 and later versions only support option +V992.

Frame R6i or R7i module ordered with option +C249 contains an interface for fiber optic cable connection for BCU or UCU control unit. Option +C249 replaces ZCU control unit in R6i and R7i modules with fiber optic cable connection board BPA-01. BPA-01 board is mounted onto the R6i or R7i module. The module can be installed into cabinet that is 500 mm in depth.

DC connection and capacitor charging

The module must be equipped with external DC fuses.

A DC switch/disconnector can be installed if quick isolation of the module from the DC bus is required.

A capacitor charging circuit must be fitted if:


- the module is connected to the DC bus through a DC switch/disconnector, or
- the module is directly connected to the DC bus and the supply unit of the system does not have a charging capability.

Frame R6i modules ordered with option +F272 have an internal capacitor charging circuit.

Frame R7i modules require, in addition to option +F272, a charging contactor and charging resistors which must be fitted outside the module. The contactor is controlled by an internal monitoring board using a voltage of 230 V DC.


Common mode filtering is implemented by running the DC bus through ferrite cores at the input of the module.

Frame R6i and R7i layout

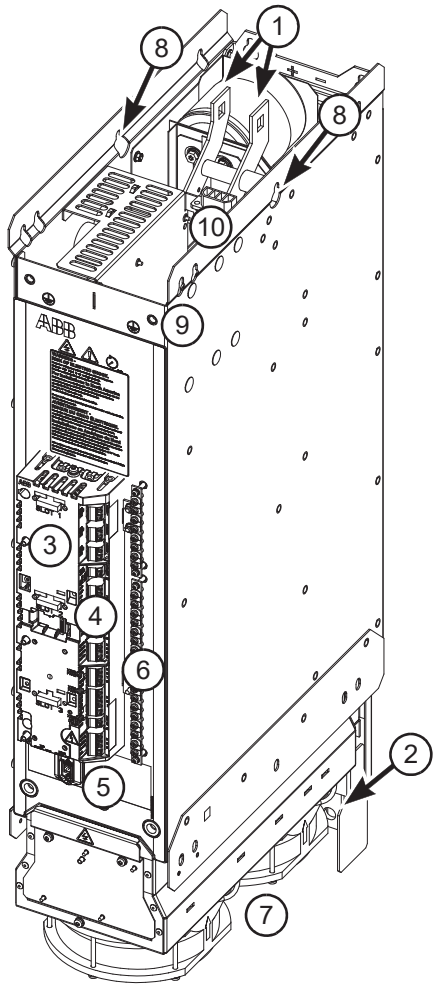




Item	Explanation
1	DC connection
2	AC connection
3	ZCU control unit (with slots for optional I/O modules)
4	I/O terminal blocks
5	Control panel connector, memory unit
6	Grounding/clamping plates for control cables
7	Cooling fan(s) (frame R6i has one fan, R7i has two)
8	Lifting eyes
9	The grounding point (PE) between module frame and cabinet frame
10	Frame R7i: Connector X7 for external charging circuit

Frame R6i and R7i layout (options +V992 and +C249)


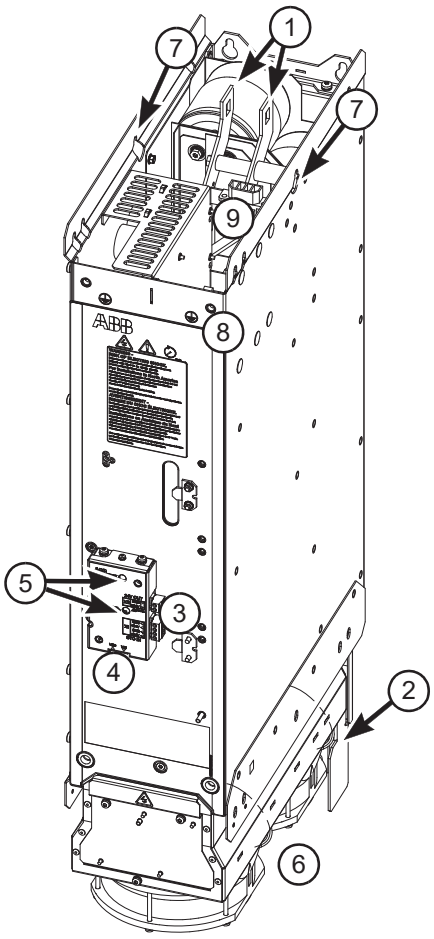


Item	Explanation	
1	DC connection	
2	AC connection	
3	Terminal blocks:	
	X1 (STO IN)	STO input
	X2 (24V OUT)	Control unit power supply
4	Fiber optic connections:	
	V10	Fiber optic transmitter (signal to control unit)
	V20	Fiber optic receiver (signal from control unit)
5	LEDs:	
	24V OUT FAULT	
	INTERNAL POWER OK	
6	Cooling fan(s) (frame R6i has one fan, R7i has two)	
7	Lifting eyes	
8	The grounding point (PE) between module frame and cabinet frame	
9	Frame R7i: Connector X7 for external charging circuit	

Connectors X1 and X2

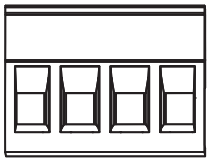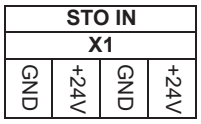		X1	STO IN	24 V Safe torque off (STO) signals from control unit **Note:** By default, the Safe torque off (STO) terminals are energized by jumpering from terminal X2. If the STO function is required, remove the jumpering and wire the signals from the control unit. Refer to chapter The Safe torque off function (page 379).
		X2	24V OUT	Control unit power supply. **Note:** For powering the control unit (max 2 A).

Connector X7

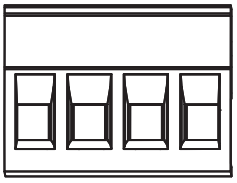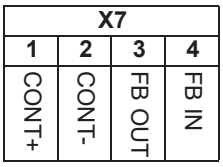
		X7	Frame R7i, option +F272: External charging circuit connector. Connector counterpart is included in charging kit 3AXD50000018982.

Fiber optic connectors V10 and V20

	Control unit connection.


Overview circuit diagram of an inverter cubicle (frame R6i)

The following figure shows a simplified connection example of an inverter unit based on a frame R6i inverter module.

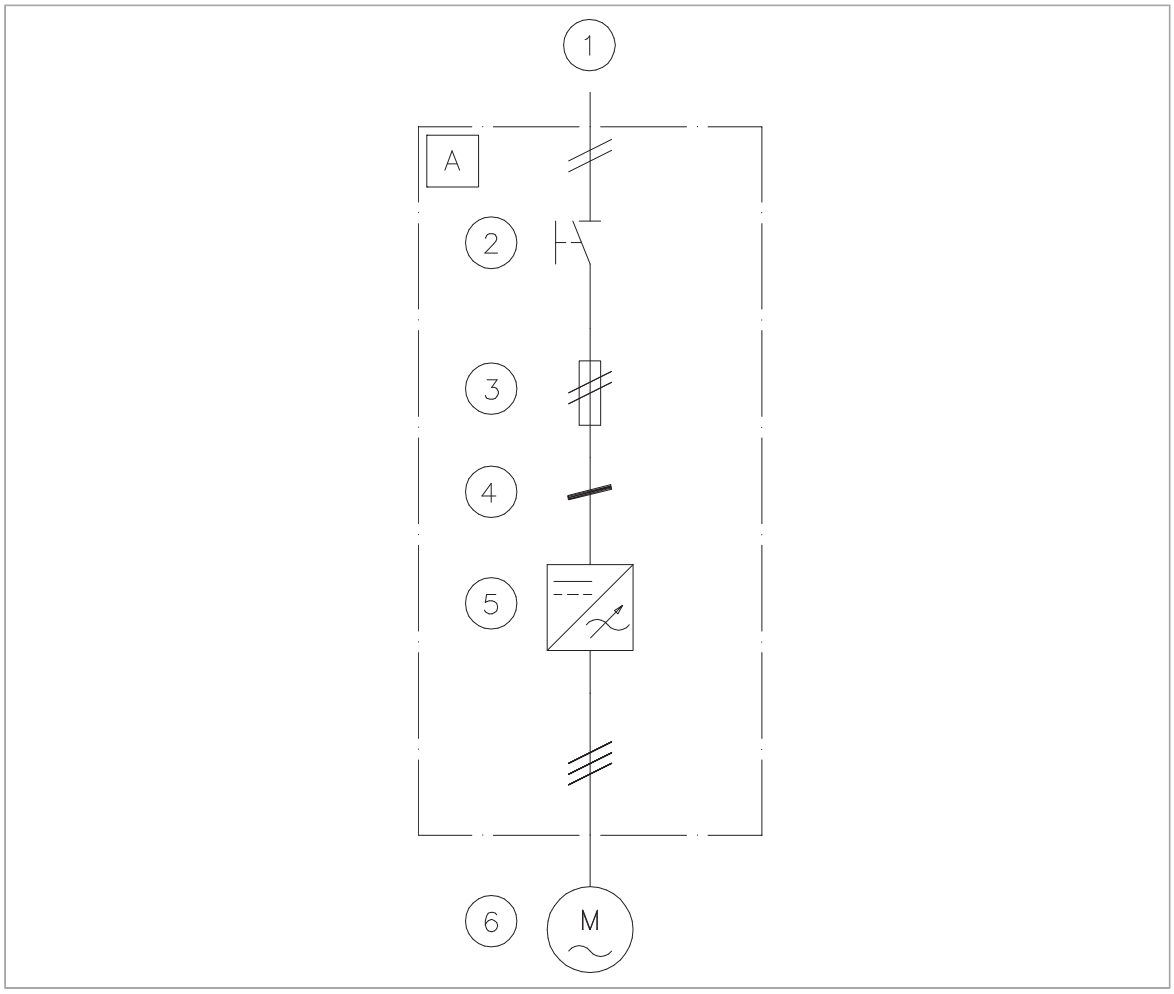

Item	Explanation	Available through
A	Inverter cubicle	-
1	DC supply	-
2	DC switch/disconnector (optional)	ABB or third party
3	DC fuses	ABB or third party
4	Common mode filters	ABB
5	Inverter module	ABB
6	Motor	ABB (not part of ACS880-104 product offering) or third party

Overview circuit diagram of an inverter cubicle (frame R7i)

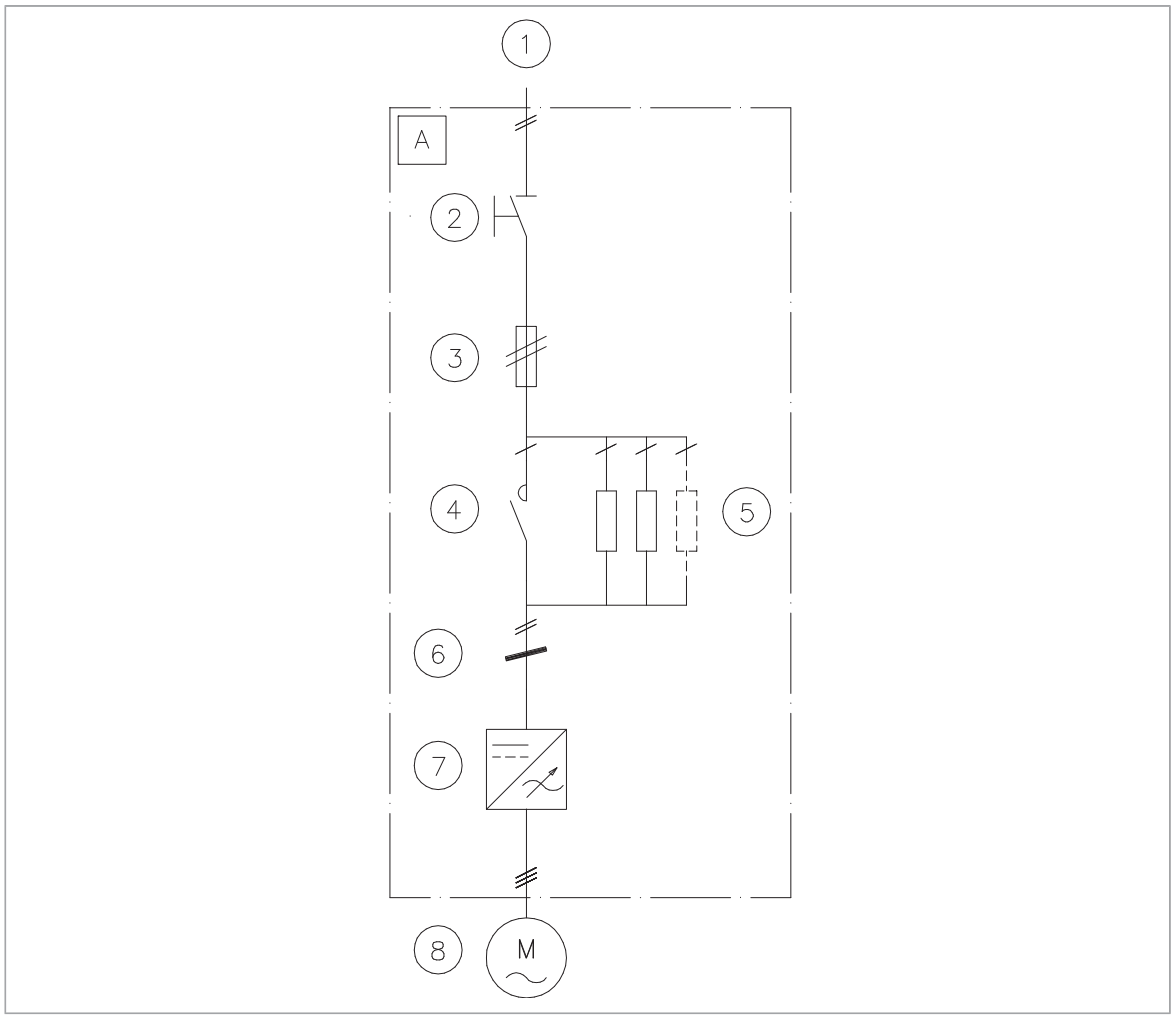

Item	Explanation	Available through
A	Inverter cubicle	-
1	DC supply	-
2	DC switch/disconnector (optional)	ABB or third party
3	DC fuses	ABB or third party
4	Charging contactor (optional)	ABB or third party
5	Charging resistor (optional)	ABB or third party
6	Common mode filters	ABB
7	Inverter module	ABB
8	Motor	ABB (not part of ACS880-104 product offering) or third party

Cabinet layout and cooling

See chapter Cabinet construction (page 51).

Frame R8i and multiples

Frame R8i modules are used to achieve output powers from approximately 250 kW up.

Frame R8i modules are used in single or parallel configurations. R8i modules have wheels, and can easily be removed from the cubicle for cable installation or service.

The motor connection is via a quick connector at the back of the module that couples when the module is inserted into the cubicle. Each parallel-connected module is cabled separately to the motor, or connected by busbars to adjacent modules to reduce the number of cables. It is also possible to build an AC bus from each module to a separate output cubicle.

As standard, the cooling fan is automatically speed-controlled according to the loading of the inverter module. The fan is supplied internally.

If a direct-on-line fan (option +C188) is used, the installer must connect the fan supply (400 V AC / 50/60 Hz or 320 V AC / 60 Hz) to the terminal block [X50].

Internal du/dt filtering is optional for single-module 400/500 volt inverter units, but mandatory with all 690 volt units and all parallel-connected modules.

Frame R8i (and multiples, if any) modules are controlled by a single BCU or UCU control unit installed separately from the module(s). The control unit is connected to each module by a fiber optic link. The control unit can be powered from the module (terminal block X53), from an external 24 V DC supply, or both for redundancy. The control unit contains the basic I/Os and slots for optional I/O modules. Other equipment is primarily installed on separate mounting plates.

DC connection and capacitor charging

The module must be equipped with external DC fuses.

A DC switch/disconnector can be installed if quick isolation of the module from the DC bus is required.

A capacitor charging circuit must be fitted if:


- the module is connected to the DC bus through a DC switch/disconnector, or
- the module is directly connected to the DC bus and the supply unit of the system does not have a charging capability.

The charging circuit design presented in this manual consists of a charging switch, resistors and a charging controller. When the module is connected to an energized DC bus, the charging switch is closed first. When the charging is finished, the main DC switch/disconnector can be closed and the charging switch opened. The module will not start if the charging switch is closed. When stopping, drive must be stopped before opening the DC switches.

Common mode filtering is implemented by running the DC bus through ferrite cores at the input of the module.

Frame R8i layout

This figure shows the layout of the R8i module.

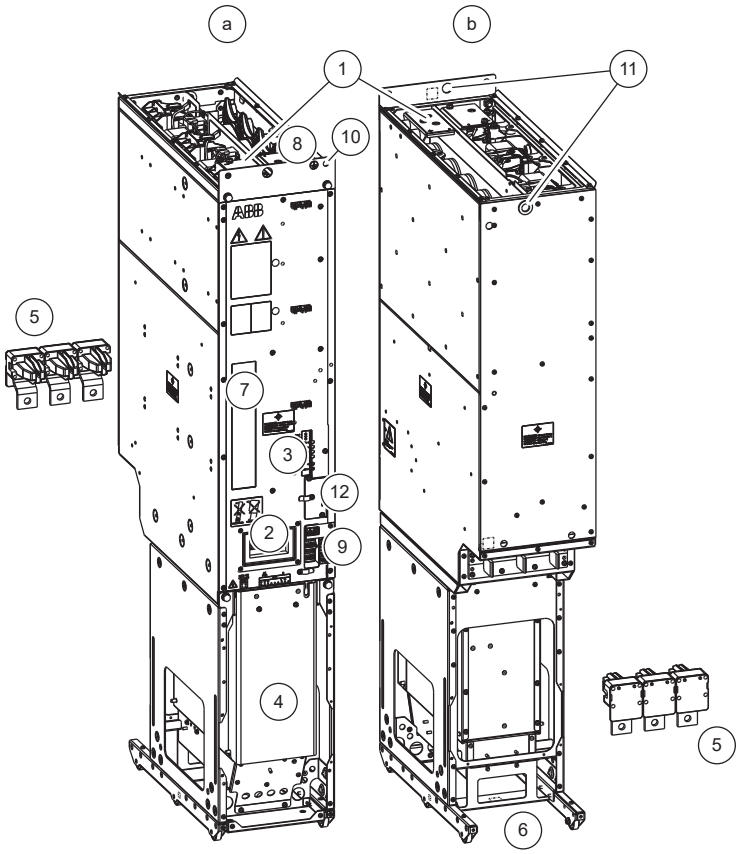

A	R8i module, front
B	R8i module, back
1	DC busbars
2	Handle
3	LEDs and fiber optic connectors
4	Fan (standard speed-controlled fan shown; a direct-on-line fan is available as option +C188)
5	Quick connector (three phases). The counterpart is fastened to the cabinet behind the module.
6	Wheels
7	Type designation label
8	Terminal block [X50] (power supply for internal boards and module heating element, option +C183; DOL fan supply, option +C188)
9	Connectors [X51], [X52], [X53]
10	The unpainted grounding point (PE) between module frame and cabinet frame.
11	Lifting eyes
12	Circuit board compartment fan

Connectors X50...X53

R8i modules contain a power supply (BDPS) that provides 24 V DC for the circuit boards of the module. The BDPS is powered internally from the DC link. An auxiliary voltage of 230 V AC (standard) or 115 V AC (option +G304) can optionally be fed to X50 (X50:4 and X50:5) to power the BDPS even when the DC link is not live. The 24 V DC voltage provided by the BDPS is available on X53, and can be used to power the control unit of a single R8i inverter module. An output power of 60 W is available from X53.

Note: With an inverter unit consisting of parallel-connected R8i modules, ABB recommends to use an external 24 V DC supply to power the control unit.


If a direct-on-line fan (option +C188) is used, the installer must connect the fan supply (400 V AC 50 Hz or 60 Hz) to the module control connector [X50.1]. If an internal heating element (option +C183) is used, the installer must connect the supply for the heating element to the module control connector [X50.7].

If the Safe torque off (STO) function is used, STO OUT on the control unit is wired to X52 (STO IN); see the safe torque off function. X51 on the R8i module forwards the STO signals to the X52 connector of the next module (if present).

If the Safe torque off function is not used, the “24V” inputs on X52 must be connected to +24 V (X53, for example) on each inverter module. X51 is to be left unconnected.


Note: As a factory standard, Safe torque off is disabled by a jumper connection between connectors X52 and X53.


Connector X50

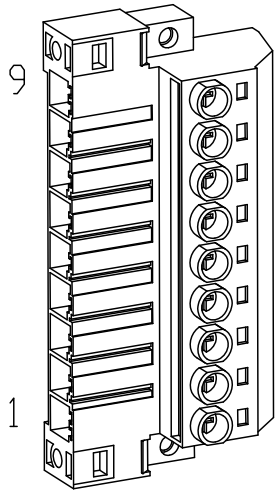





9	Not in use.	
8	N	115/230 V AC (50/60 Hz) input for optional heating element (+C183). The cabinet builder must connect this when the option is in use.
7	L	
6	Not in use.	
5	N	230 V AC 50/60 Hz input for internal power supply (BDPS) (115 V AC 50/60 Hz with option +G304). The cabinet builder must connect this.
4	L	
3	W	400 V AC (50/60 Hz) supply for optional DOL (direct-on-line) cooling fan (option +C188). The cabinet builder must connect this when the option is in use. **Note:** In modules without +C188, the DOL wiring is present but not in use.
2	V	
1	U	

Connectors X51, X52, X53

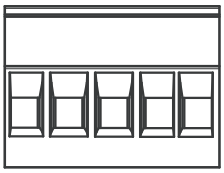


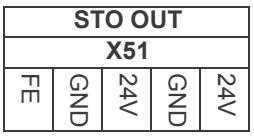

X51	STO OUT	STO signal forwarding output to next inverter module (if present). The cabinet builder must connect this in a unit with parallel modules.

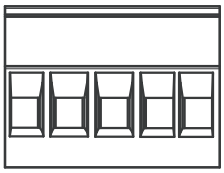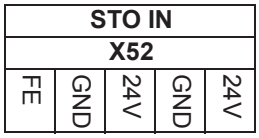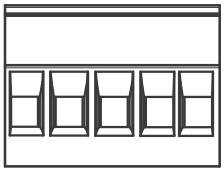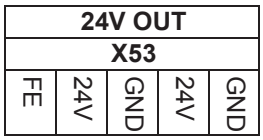
Connectors X51, X52, X53				
		X52	STO IN	24 V STO signals from the control unit
		X53	24V OUT	24 V DC output (for eg. the control unit)
		Note: The Safe torque off (STO) safety function is only implemented in inverter units. Therefore, the STO function cannot be used in supply, rectifier, DC/DC converter and brake units. In these units, de-energizing any connection of STO IN (X52) connector stops the unit. Note that this stop is not safety related and must not be used for safety function purposes.		

Fiber optic connectors

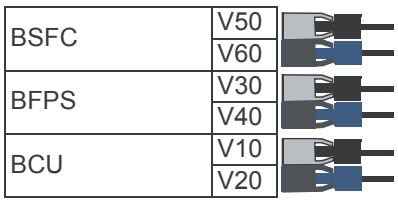	**Name**	**Description**	
	BSFC	Charging controller connection. Must be connected by the installer.	
	BFPS	Fan control connection (to fan control box). Connected at the factory.	
	BCU or UCU	Control unit connection. Must be connected by the installer.	

Overview circuit diagram of a frame R8i inverter unit


The following figure shows a simplified connection example of an inverter unit based on a single inverter module.

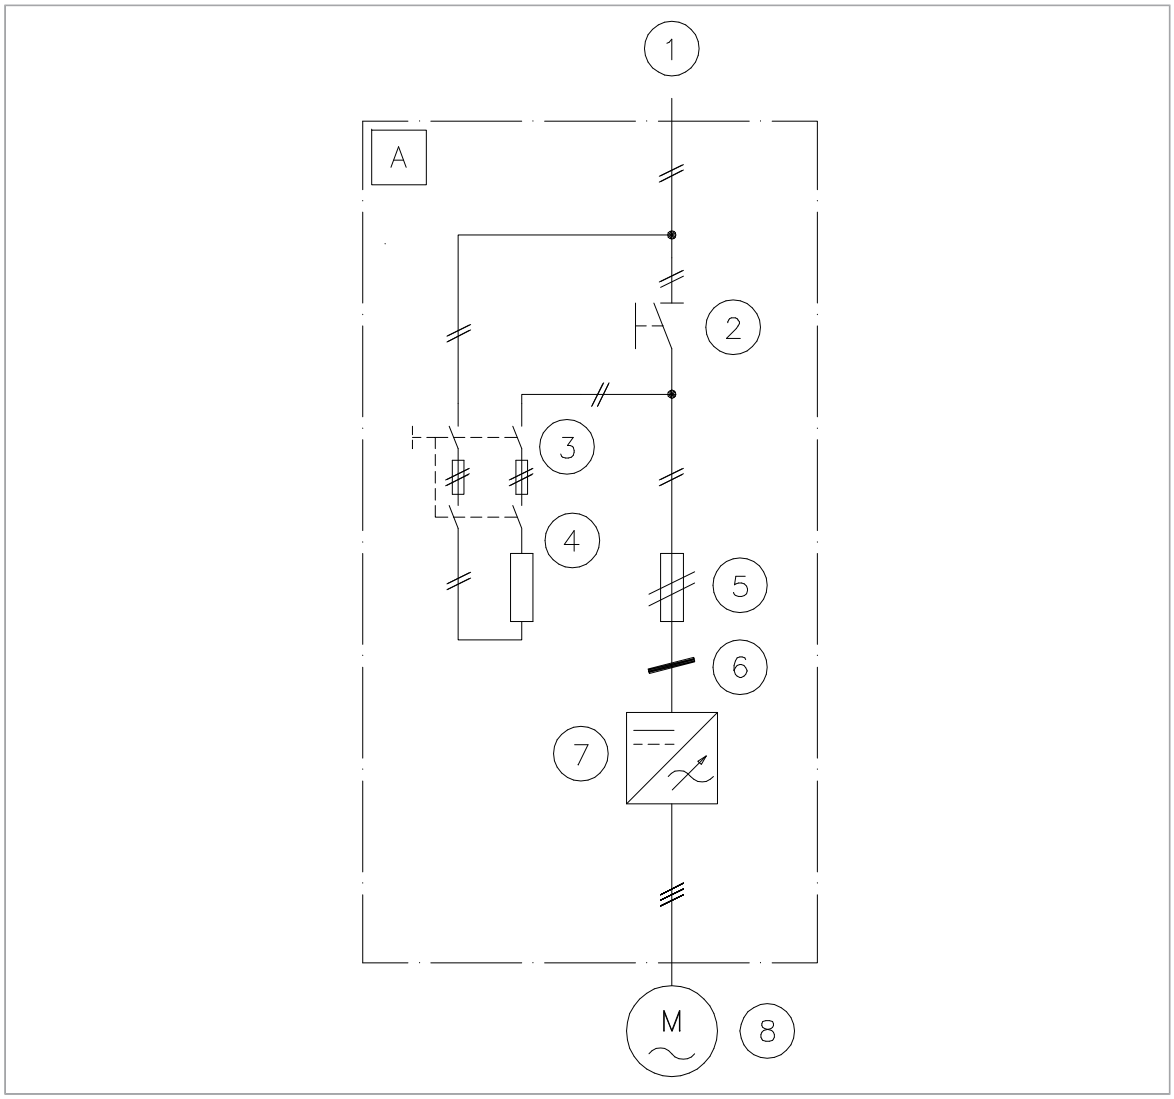

Item	Explanation	Available through
A	Inverter cubicle	-
1	DC supply	-
2	DC switch-disconnector (optional)	ABB or third party
3	Charging switch (optional)	ABB or third party
4	Charging resistor (optional)	ABB or third party
5	DC fuses	ABB or third party
6	Common mode filters	ABB
7	Inverter module	ABB
8	Motor	ABB (not part of ACS880-104LC product offering) or third party

Overview circuit diagram of a frame 2×R8i inverter unit

The following figure shows a simplified connection example of an inverter based on two parallel-connected frame R8i inverter modules.

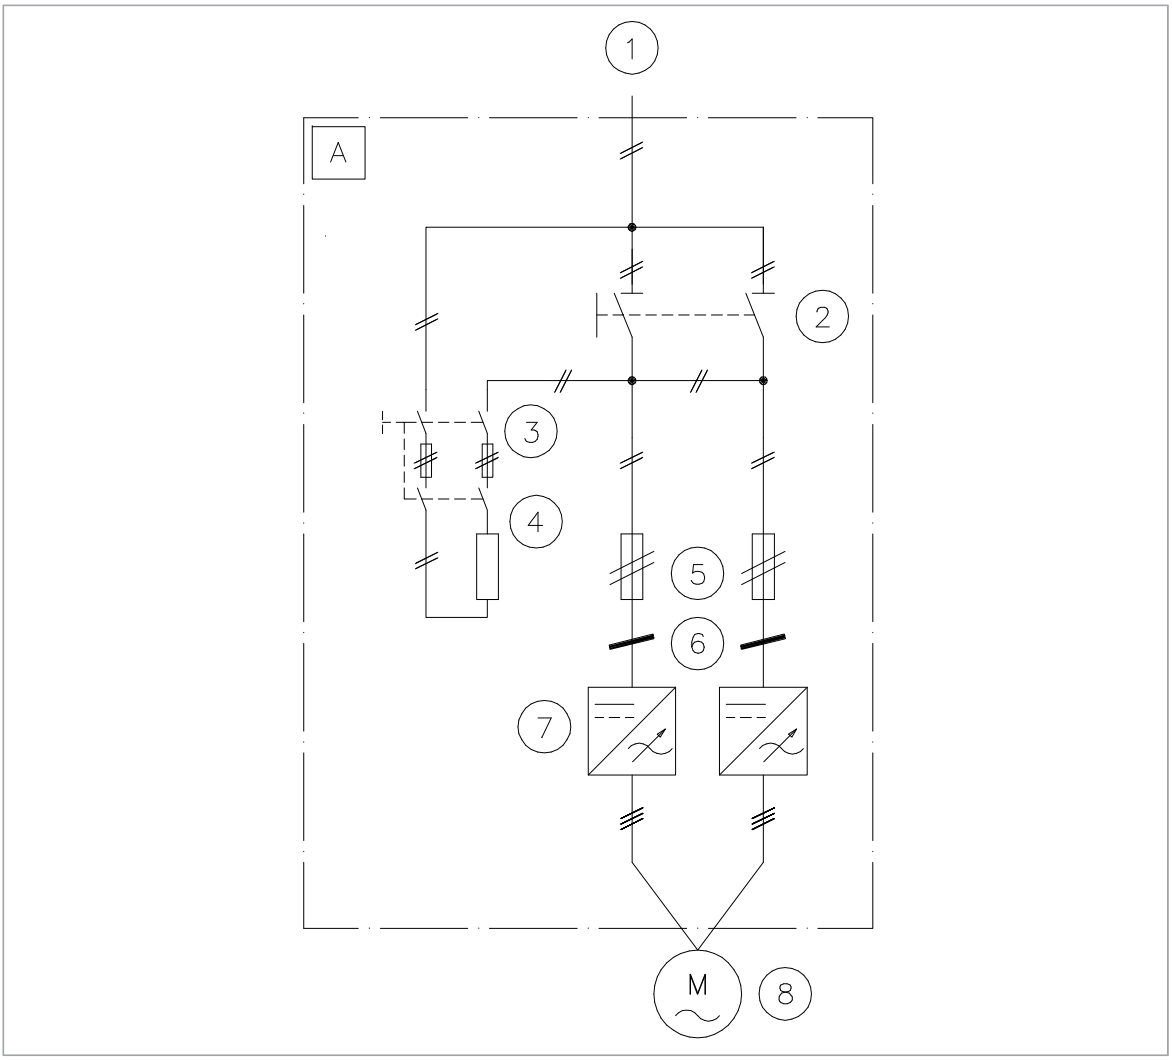

Item	Explanation	Available through
A	Inverter cubicle	-
1	DC supply	-
2	DC switch-disconnector (optional)	ABB or third party
3	Charging switch (optional)	ABB or third party
4	Charging resistors (optional)	ABB or third party
5	DC fuses	ABB or third party
6	Common mode filters	ABB
7	Inverter modules	ABB
8	Motor	ABB (not part of ACS880-104LC product offering) or third party

Cabinet layout and cooling

See chapter Cabinet construction (page 51).

Module variant with capability for increased switching frequency


Module variant with capability for increased switching frequency (option +P967) is also available. The high-speed option is intended for test bench applications with high-speed permanent magnet motors. The option involves installing a BLHF-2x-7 filter to the drive output. Refer to ACS880 multidrive for high-speed test benches supplement (3AXD50000818013 [English]).

Inverter unit control interfaces

Overview of control connections of the ZCU control unit


The diagram shows the control connections and interfaces of the ZCU-14 control unit.

It is used with module frame sizes R1i…R7i. Frame R5i modules use a type ZCU-12 unit which has a different layout but the same connectivity as the ZCU-14.

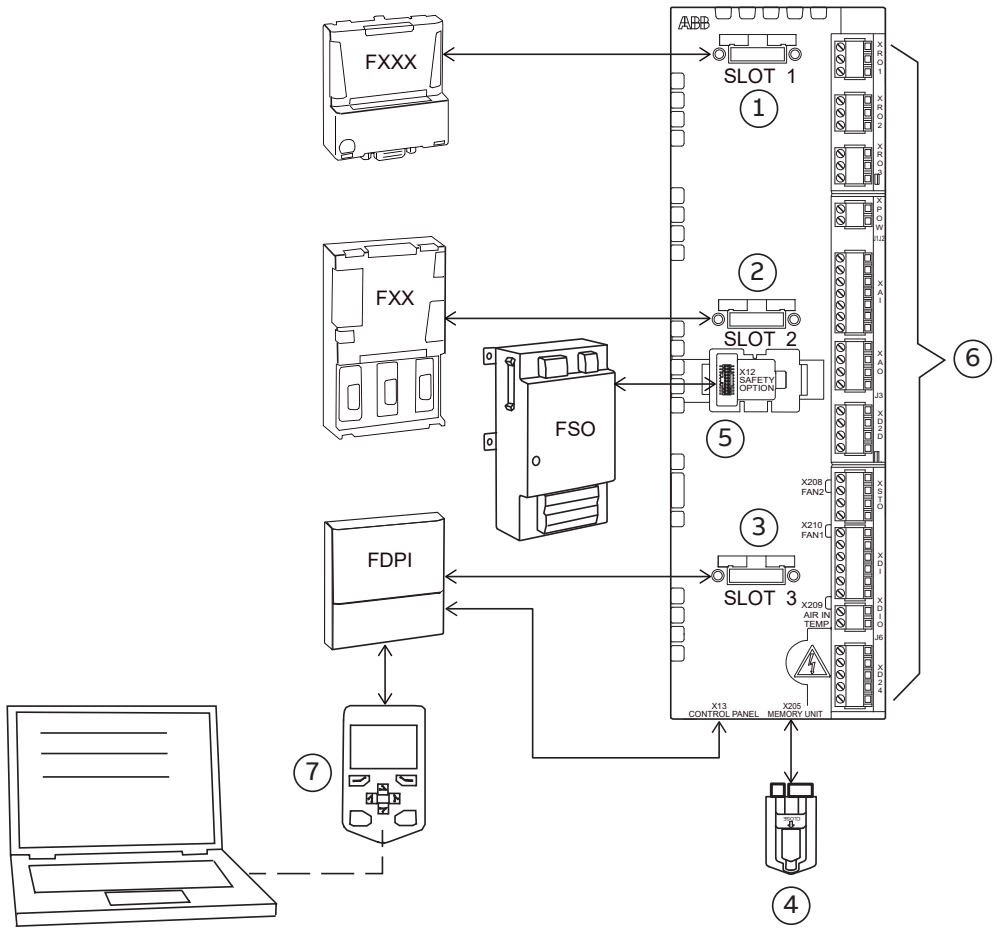


1 2 3	Option modules can be inserted into slots 1, 2 and 3 as follows: **Modules** — **Slots** Analog and digital I/O extension modules [1] — 1, 2, 3 Feedback interface modules — 1, 2, 3 Fieldbus communication modules — 1, 2, 3 FSO safety functions module — 2 (X12) 1) When installed into slot 3 of a ZCU-14 control unit, the module will extend over the edge. ABB recommends that you use slot 1 or 2 instead whenever possible.
4	Memory unit
5	Connector for FSO safety functions module (X12). The module reserves slot 2 when connected.
6	I/O terminal blocks
7	Control panel

Overview of the control connections of the UCU control unit

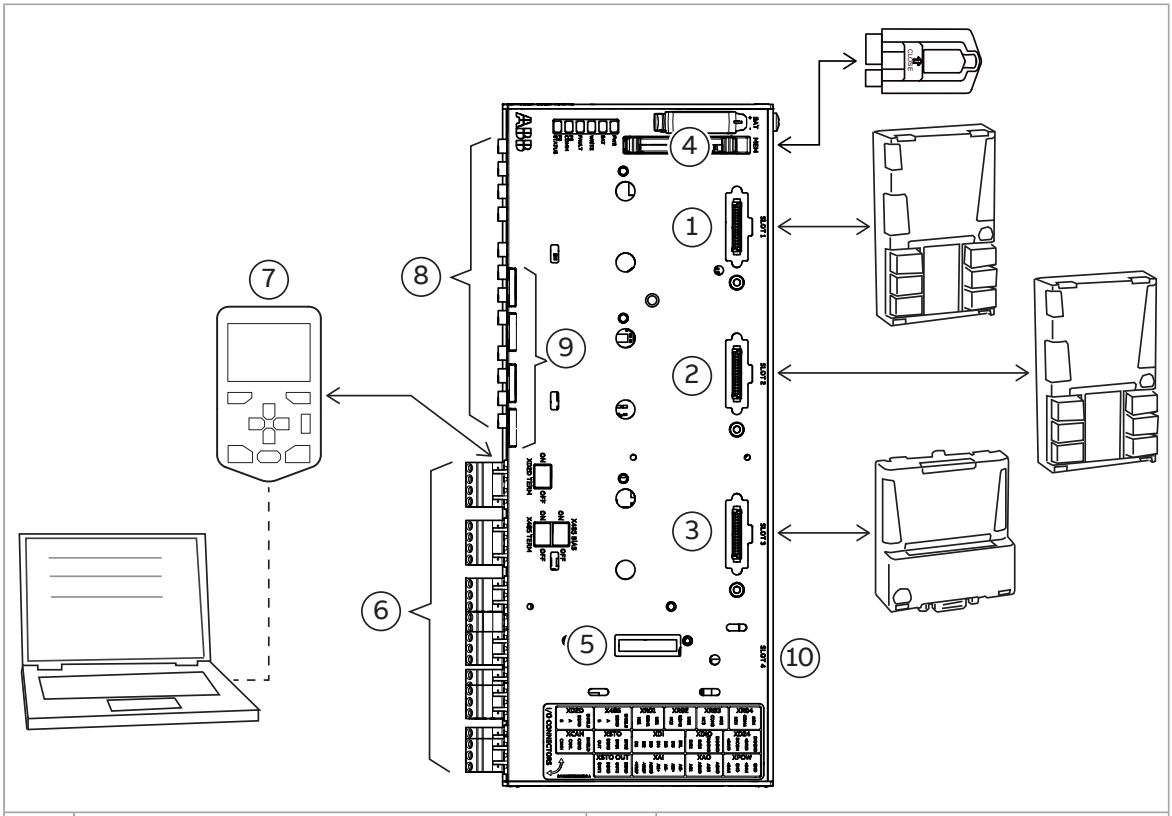

1 2 3	Analog and digital I/O extension modules and fieldbus communication modules can be inserted into slots 1, 2 and 3. For F-type modules with USCA-02 adapter.	7	Control panel
4	Memory unit	8	Fiber optic links to power modules (inverter, supply, brake or converter)
5	Slot 4 for RDCO module	9	Ethernet ports
6	Terminal blocks	10	Safety option interface. Only in use for the inverter units.

Overview of the control connections of the BCU control unit

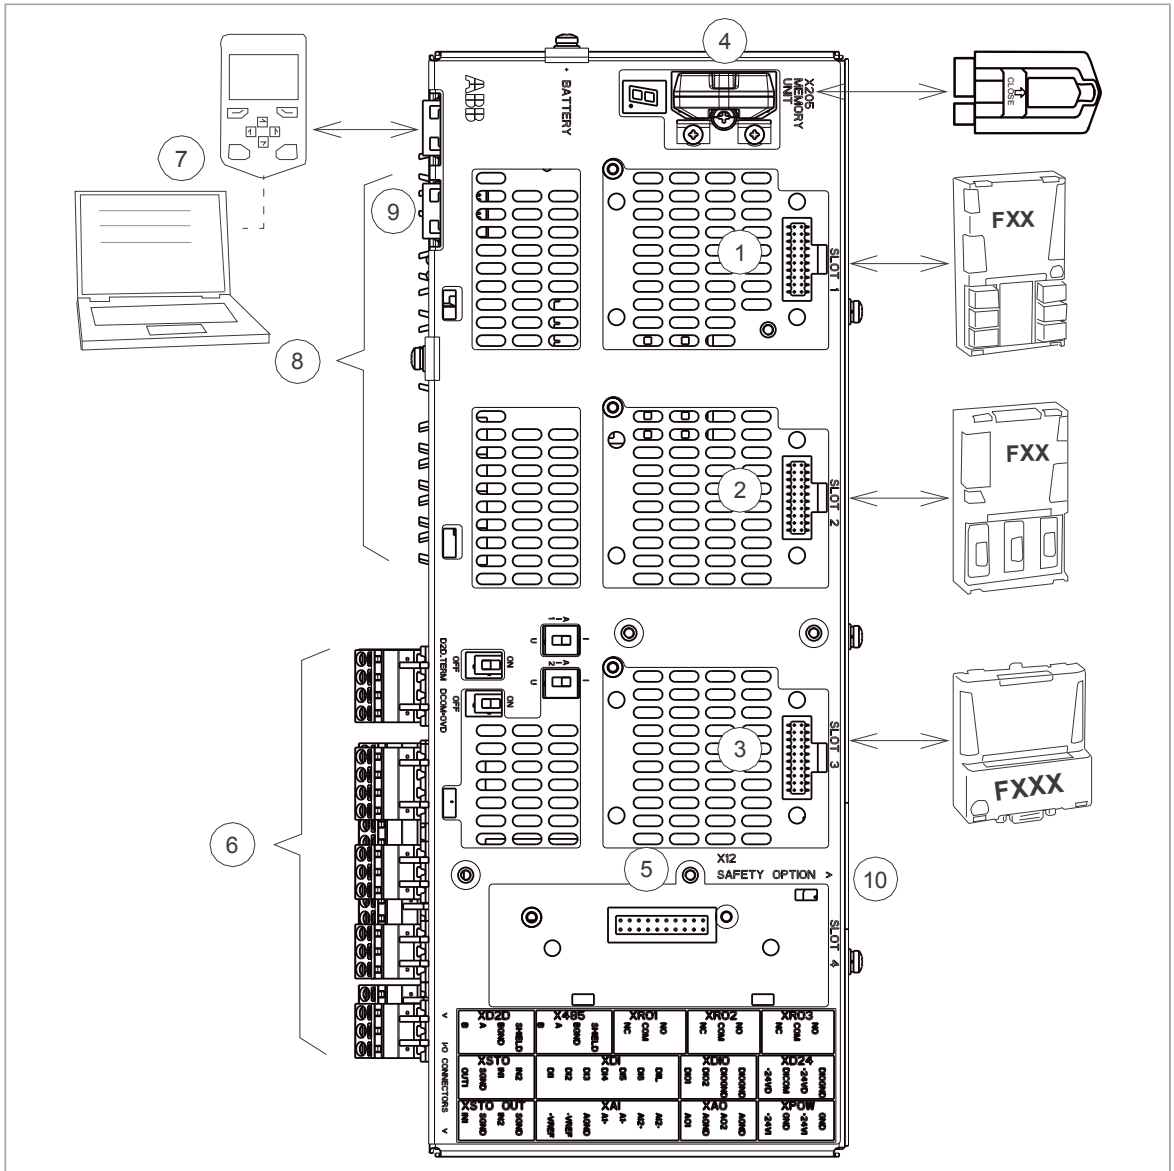

1 2 3	Analog and digital I/O extension modules and fieldbus communication modules can be inserted into slots 1, 2 and 3.	7	Control panel
4	Memory unit	8	Fiber optic links to power modules (inverter, supply, brake or converter)
5	Slot 4 for RDCO module	9	Ethernet port. Not in use.
6	Terminal blocks.	10	Safety option interface. Only in use for the inverter units.

Control panel

The ACS-AP-W or ACS-AP-I control panel is the user interface of the inverter unit, providing the essential controls such as Start/Stop/Direction/Reset/Reference, and the parameter settings for the control program.

The control panel can be mounted on the cabinet door using a DPMP-01 or DPMP-02 mounting platform (available separately).

With frame R1i…R5i inverter modules, the panel can be mounted on the panel holder on the cover of the module.

One control panel can be used to control several inverter units through a panel link provided that each unit is equipped with panel holder or an FDPI-02 module.

Note: A control panel is required for the commissioning of an ACS880 drive system, even if the Drive Composer PC tool is used.

For details on the control panel, refer to ACS-AP-I, -S, -W and ACH-AP-H, -W Assistant control panels user's manual (3AUA0000085685 [English]).


Control by PC tools


There is a USB connector on the front of the panel that can be used to connect a PC to the drive. When a PC is connected to the control panel, the control panel keypad is disabled.


Type designation label

Each module has a type designation label attached to it. The label contains information on the specifications and configuration of the module. The first digits express the basic construction, for example “ACS880-104-0100A-3”. Any optional selections are given thereafter, separated by plus signs. There is an additional label for frame R8i multiples.

Examples of the labels are shown below.

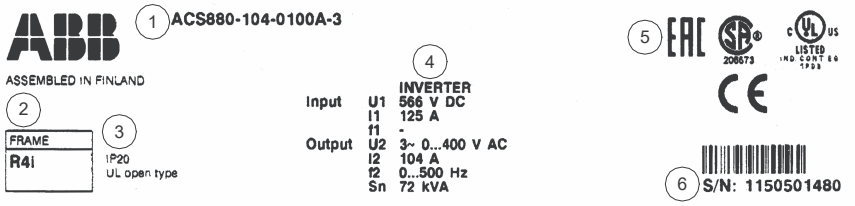

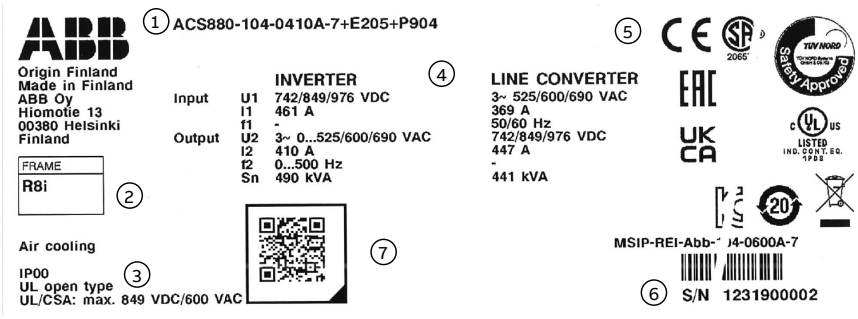

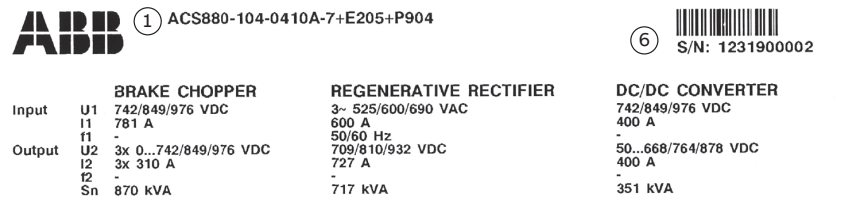

1	Type designation.
2	Frame size.
3	Degree of protection; additional UL/CSA specifications.
4	Ratings. The labels show ratings for inverter module (INVERTER), IGBT supply module (LINE CONVERTER), brake chopper module (BRAKE CHOPPER), regenerative rectifier module (REGENERATIVE RECTIFIER) and DC/DC converter module (DC/DC CONVERTER).
5	Valid markings.
6	Serial number. The first digit refers to the manufacturing plant. The next four digits indicate manufacturing year and week respectively (yyww). The remaining digits complete the serial number so that there are no two units with the same number.
7	Product information

Type designation key

Type designation describes the composition of the module in short. The complete designation code is divided in subcodes:

- The first digits form the basic code. It describes the basic construction of the module. The fields in the basic code are separated by hyphens.
- The plus codes follow the basic code. Each plus code starts with an identifying letter (common for the whole product series), followed by descriptive digits. The plus codes are separated by plus signs.

The subcodes are described below.

Code	Description
Basic codes	
ACS880	Product series
104	Construction: Inverter, supply, converter or brake module.
Size	
xxxxx	Refer to the ratings table in the technical data.
Voltage range	
3	513…566 V DC. This is indicated in the type designation label as typical input voltage level (566 V DC).
5	513…707 V DC. This is indicated in the type designation label as typical input voltage levels (566/679/707 V DC).
7	709…976 V DC. This is indicated in the type designation label as typical input voltage levels (742/849/976 V DC).
Option codes (plus codes)	
C132	Marine type approval
C183	Internal heating element
C188	Direct-on-line (DOL) cooling fan
C249	Frames R6i and R7i: Interface for optical fiber cable connection for the control unit
E205	Internal d*u*/d*t* filtering
F272	Internal charging circuit
G304	115 V auxiliary voltage supply
N8010	Drive application programming
P942	Retrofit version of frame R8i (mechanically compatible with ACS800 R8i)
P967	Module variant with capability for increased switching frequency
V112	Module auxiliary and fan power supply connector change
V992	Frames R6i and R7i: Hardware version added to product offering during 2023.

3

Moving and unpacking the module

Contents of this chapter

This chapter gives basic information on moving, unpacking and lifting the modules.

Moving and lifting the transport package

Move the transport package by a pallet truck or lift. Lift the transport package in a horizontal position. Use soft lifting slings.

Unpacking

- **Frames R1i...R5i**

The module is delivered in a corrugated cardboard box. The module and its parts (such as grounding/clamp plates, terminal blocks, etc.) are placed in the different compartments of the box.

1. Remove any banding and lift off the cover of the box.
2. Lift the module out of the box.
3. Check all the compartments in the box for accessories.

   Note: Some parts may be placed in a compartment directly underneath the module.

Dispose of or recycle the packaging according to the local regulations.

- **Frames R6i...R8i**

The module is delivered on a wooden base, boxed in corrugated cardboard. The cardboard box is tied to the base with PET bands.

WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur.

1. Cut off the bands.
2. Lift off the cardboard box.
3. Remove any filling material.
4. Cut open the plastic wrapping of the module.
5. Lift off the module.
6. Check that there are no signs of damage.

Dispose of or recycle the packaging according to the local regulations.

Lifting the unpacked modules

Lift the unpacked module only by its lifting eyes.

Moving the unpacked modules

WARNING!
For general safety instructions for moving the module, refer to ACS880 multidrives cabinets and modules safety instructions (3AUA0000102301 [English]).

4

Cabinet construction

Contents of this chapter

This chapter gives instructions on how to install the modules and additional equipment into a cabinet.

For general instructions, see Drive modules cabinet design and construction instructions (3AUA0000107668 [English]).

Limitation of liability

The installation must always be designed and made according to applicable local laws and regulations. ABB does not assume any liability whatsoever for any installation which breaches the local laws and/or other regulations. Furthermore, if the recommendations given by ABB are not followed, the drive may experience problems that the warranty does not cover.

- **North America**

Installations must be compliant with NFPA 70 (NEC)[1)] and/or Canadian Electrical Code (CE) along with state and local codes for your location and application.

[1)] National Fire Protection Association 70 (National Electric Code).

General

Refer to the technical data for module-specific cooling requirements and allowed mounting orientations.

Installation and maintenance of the control unit

Refer to the hardware manual of the control unit:

Manual	Code
BCU-02/12/22 hardware manual	3AUA0000113605 (English)
UCU-22, -23, -24 hardware manual	3AXD50000817726 (English)

Installation examples

This section contains cabinet construction example(s). Each example presents the cubicle with the power module(s) and related main circuit components. These examples do not show the installation and connections of the control unit, or other components in control circuit or auxiliary power supply circuit.

Each example includes a table that lists:

- installation stages of different equipment in the order in which the installation into the enclosure should be done
- instruction code of the step-by-step instructions
- equipment kit code
- kit ordering code.

You can find the kit-specific assembly drawings, step-by-step instructions and kit information on the Internet. Go to https://sites-apps.abb.com/sites/lvacdrivesengineeringsupport/content. If needed, contact your local ABB representative.


The example includes also cabinet assembly drawings that show each stage listed in the table. More detailed steps of each stage are described in the kit-specific assembly drawings. The tightening torques are listed in the kit-specific assembly drawings and in the technical data in the hardware manual.

For general instructions, see Drive modules cabinet design and construction instructions (3AUA0000107668 [English]).

WARNING!
Remove the code labels attached to mechanical parts such as busbars, shrouds and sheet metal parts before installation. They may cause bad electrical connections, or, after peeling off and collecting dust in time, cause arcing or block the cooling air flow.

R1i...R4i modules in a 400 mm wide Rittal VX25 enclosure

A maximum of four frame R1i or R2i modules, or two frame R3i or R4i modules can be fitted into a 400 mm wide VX25 enclosure, but the number can be reduced by optional equipment.

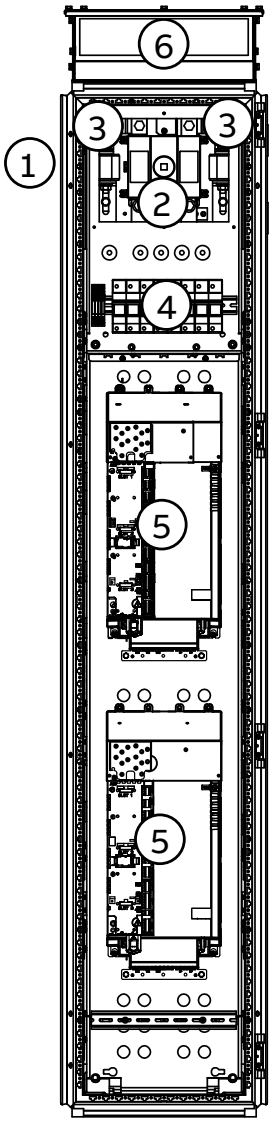


1	DC input
2	DC switch/disconnector for all inverter modules
3	Main DC fuses
4	DC fuse disconnectors for each inverter module
5	Inverter modules
6	Air outlet with exhaust fan


Installation stages

#	Installation stage	Instruction code	Kit code	Kit ordering code
1	Common parts:			
	Baying parts	3AXD50000336340	-	-
	PE busbars	3AXD50000336104	-	-
	Divider panel	3AXD50000336692	-	-
	DC bus support kit	3AXD50000333639	A-468-X-001-VX	3AXD50000333387
2	Bottom plate	-	-	-
3	Mounting plate (IEC)	3AXD50000444588	-	-
	Mounting plate (UL)	3AXD50000003890	-	-
4	DC busbars (IEC)	3AXD50000453108	A-4-1234-272-VX	3AXD50000474493
	DC busbars (UL)	3AXD50000003895	A-4-1234-274	3AXD50000003918
5	Mounting plate shrouds	3AXD50000450060	A-4-1234-403-VX	3AXD50000456772
6	Inverter modules and air guides:			
	R1i	3AUA0000114397	A-468-1-422	3AUA0000114398
	R2i	3AUA0000114397	A-468-2-423	3AUA0000114330
	R3i	3AUA0000114397	A-468-3-424	3AUA0000114404
	R4i	3AUA0000114397	A-468-4-425	3AUA0000114405
7	du/dt filters	3AXD50000458721	-	See AC-side components (page 280)


Overview of kits

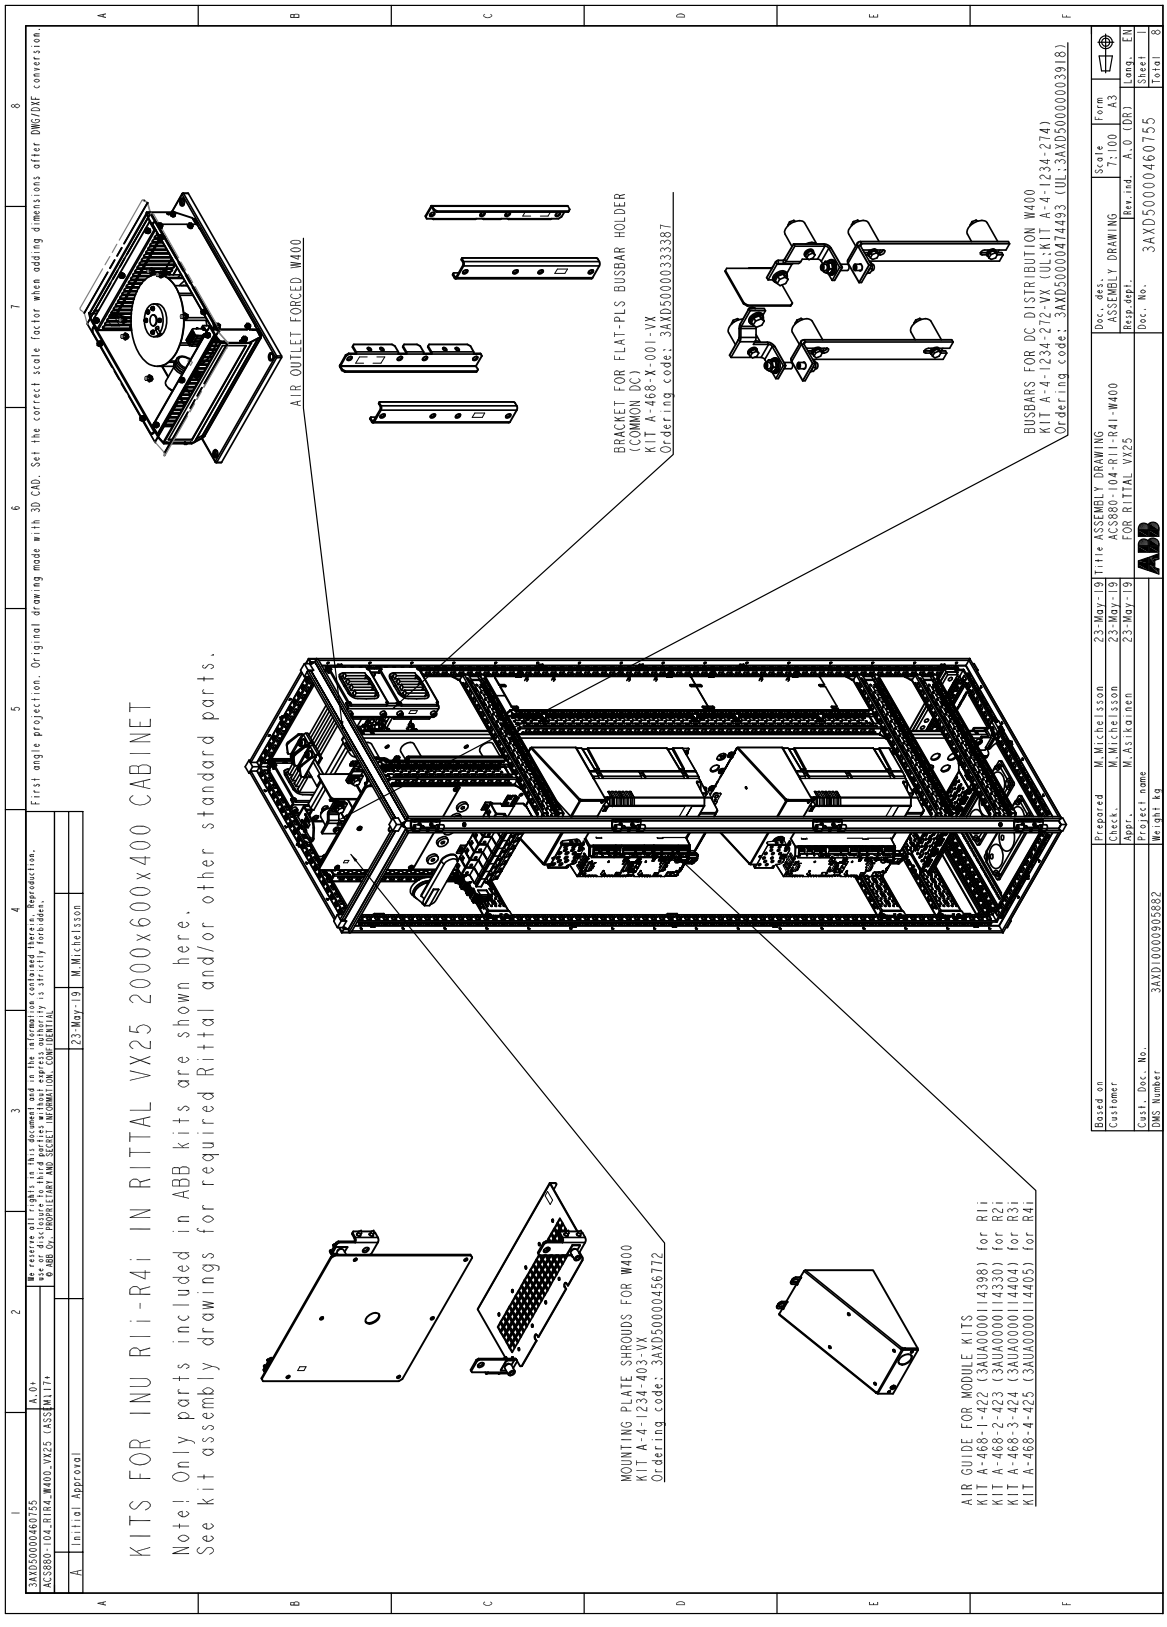


Stage 1: Installation of common parts

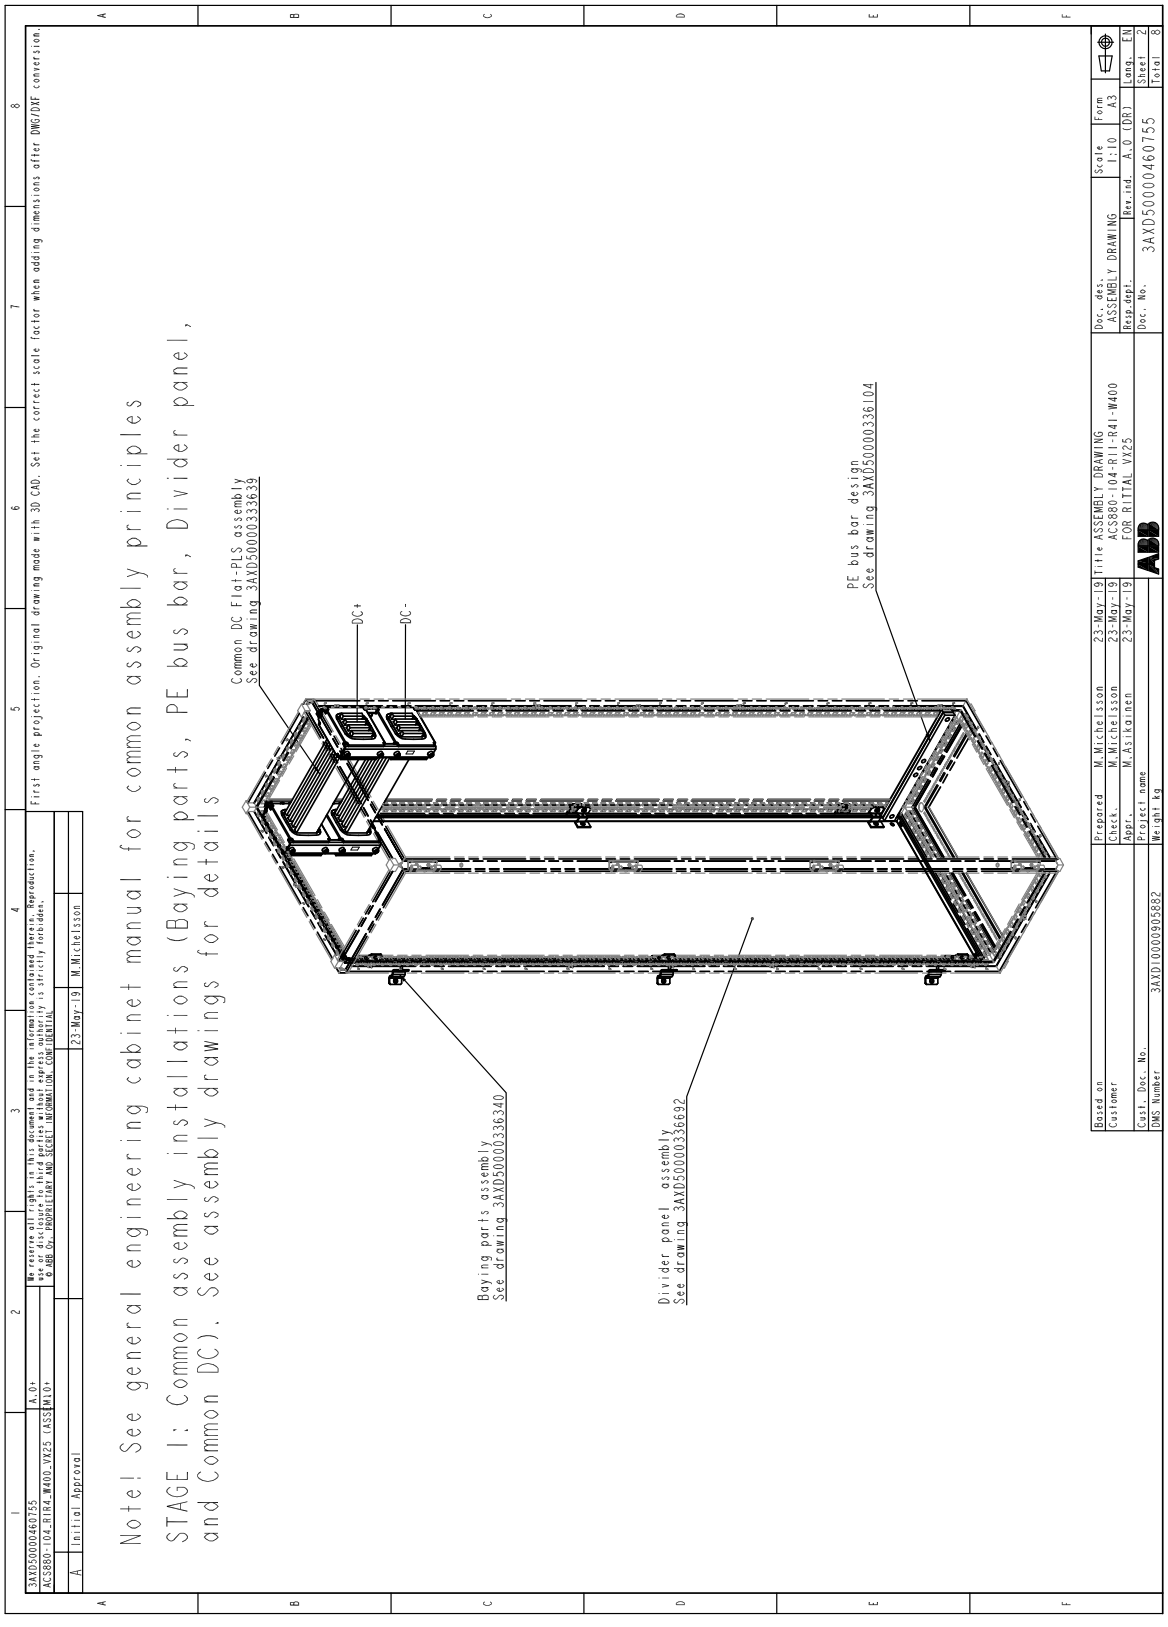


Stage 2: Installation of bottom plate

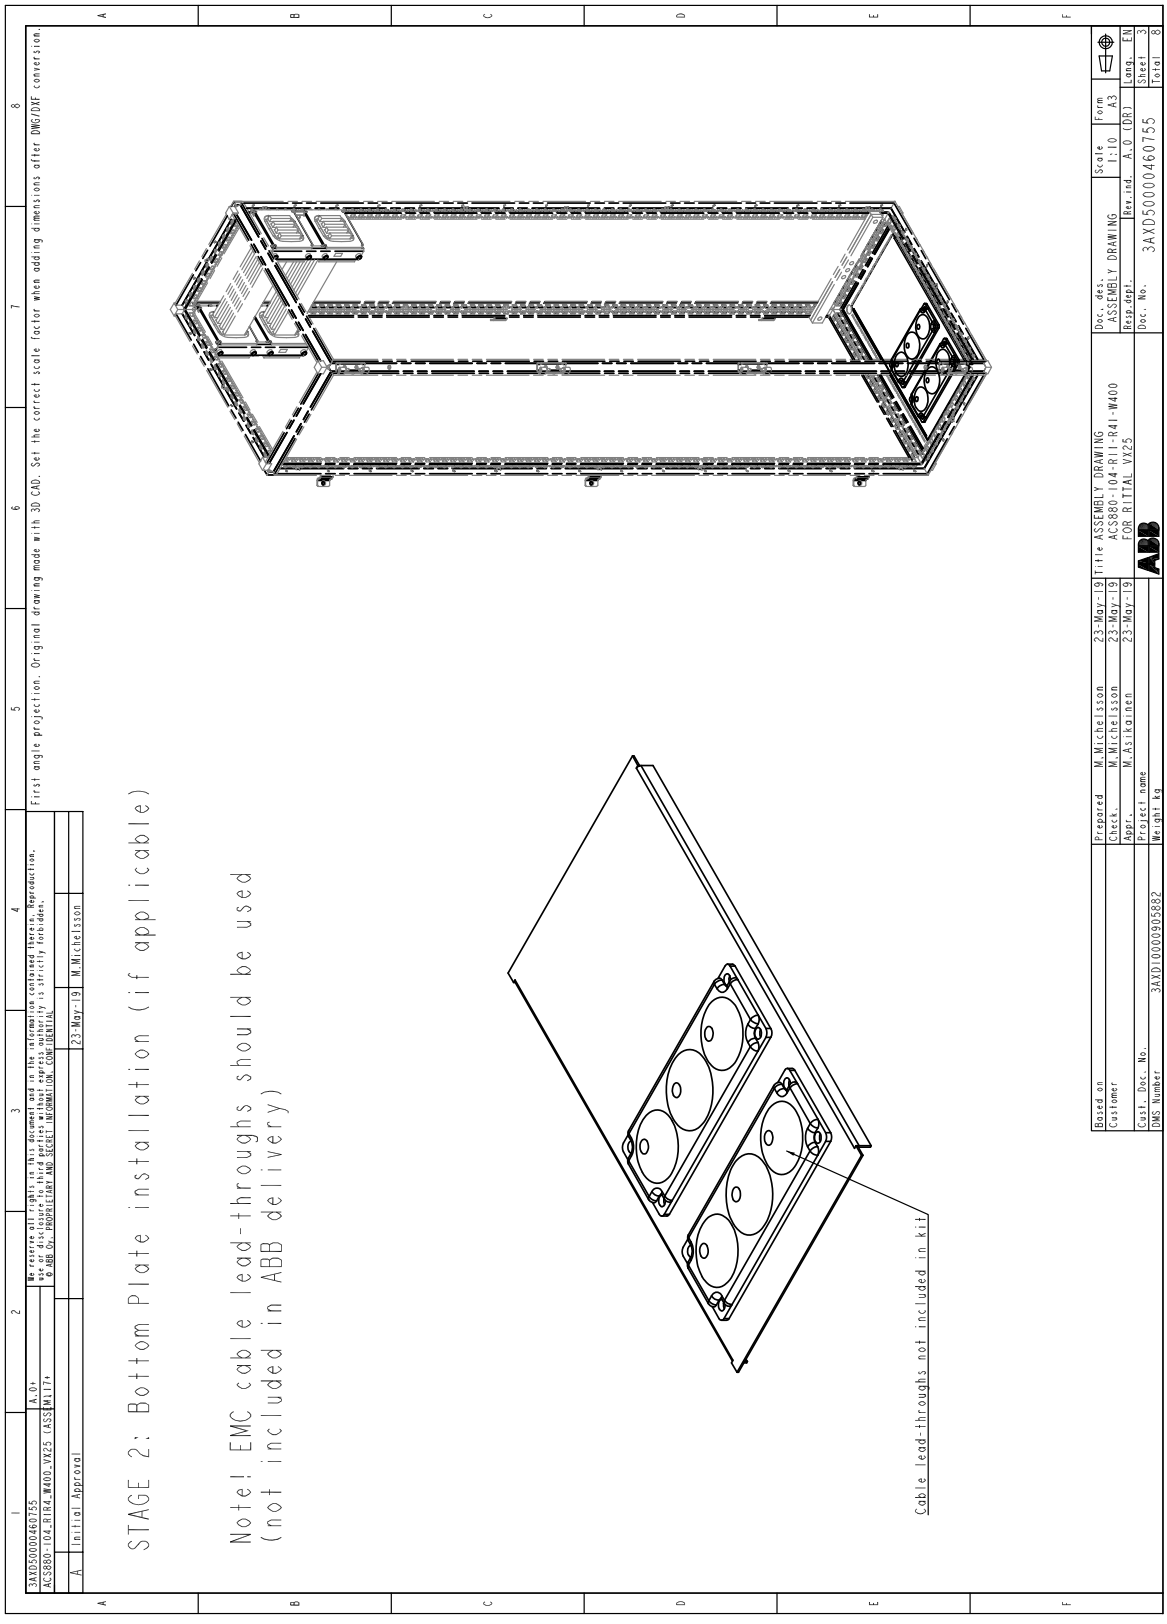


Stage 3: Installation of mounting plate

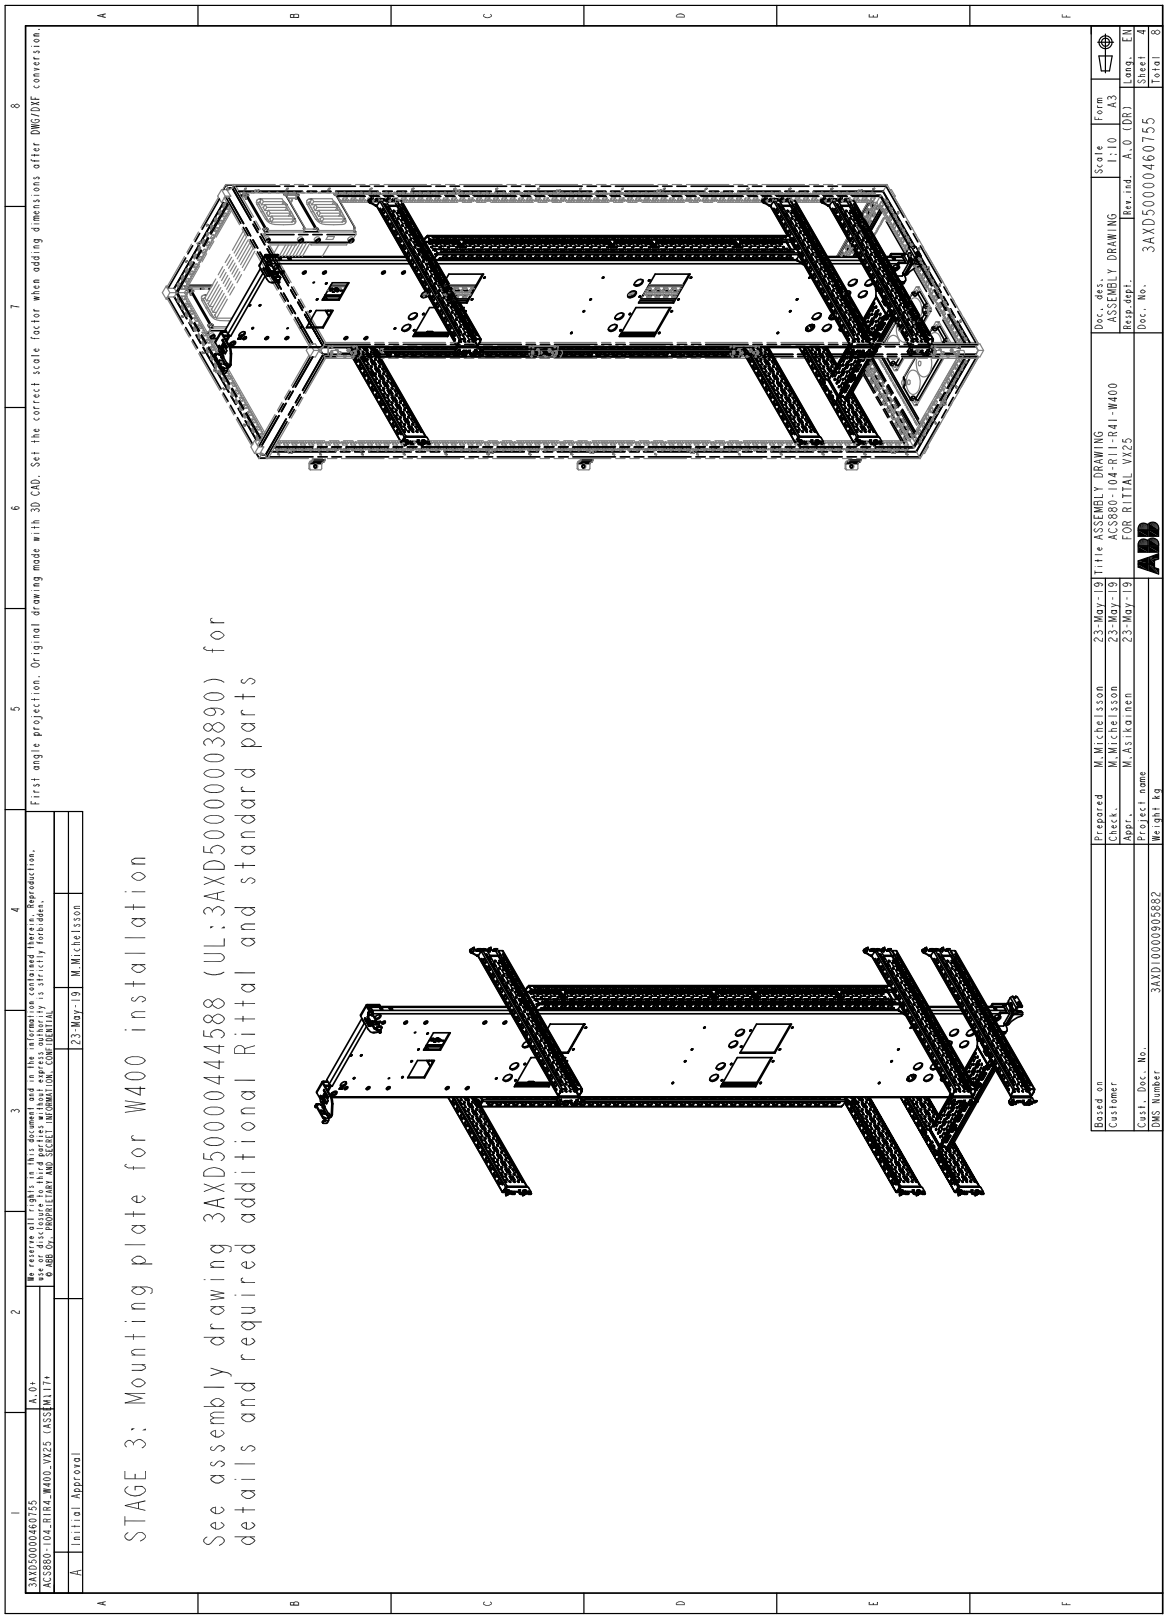


Stage 4: Installation of DC busbars

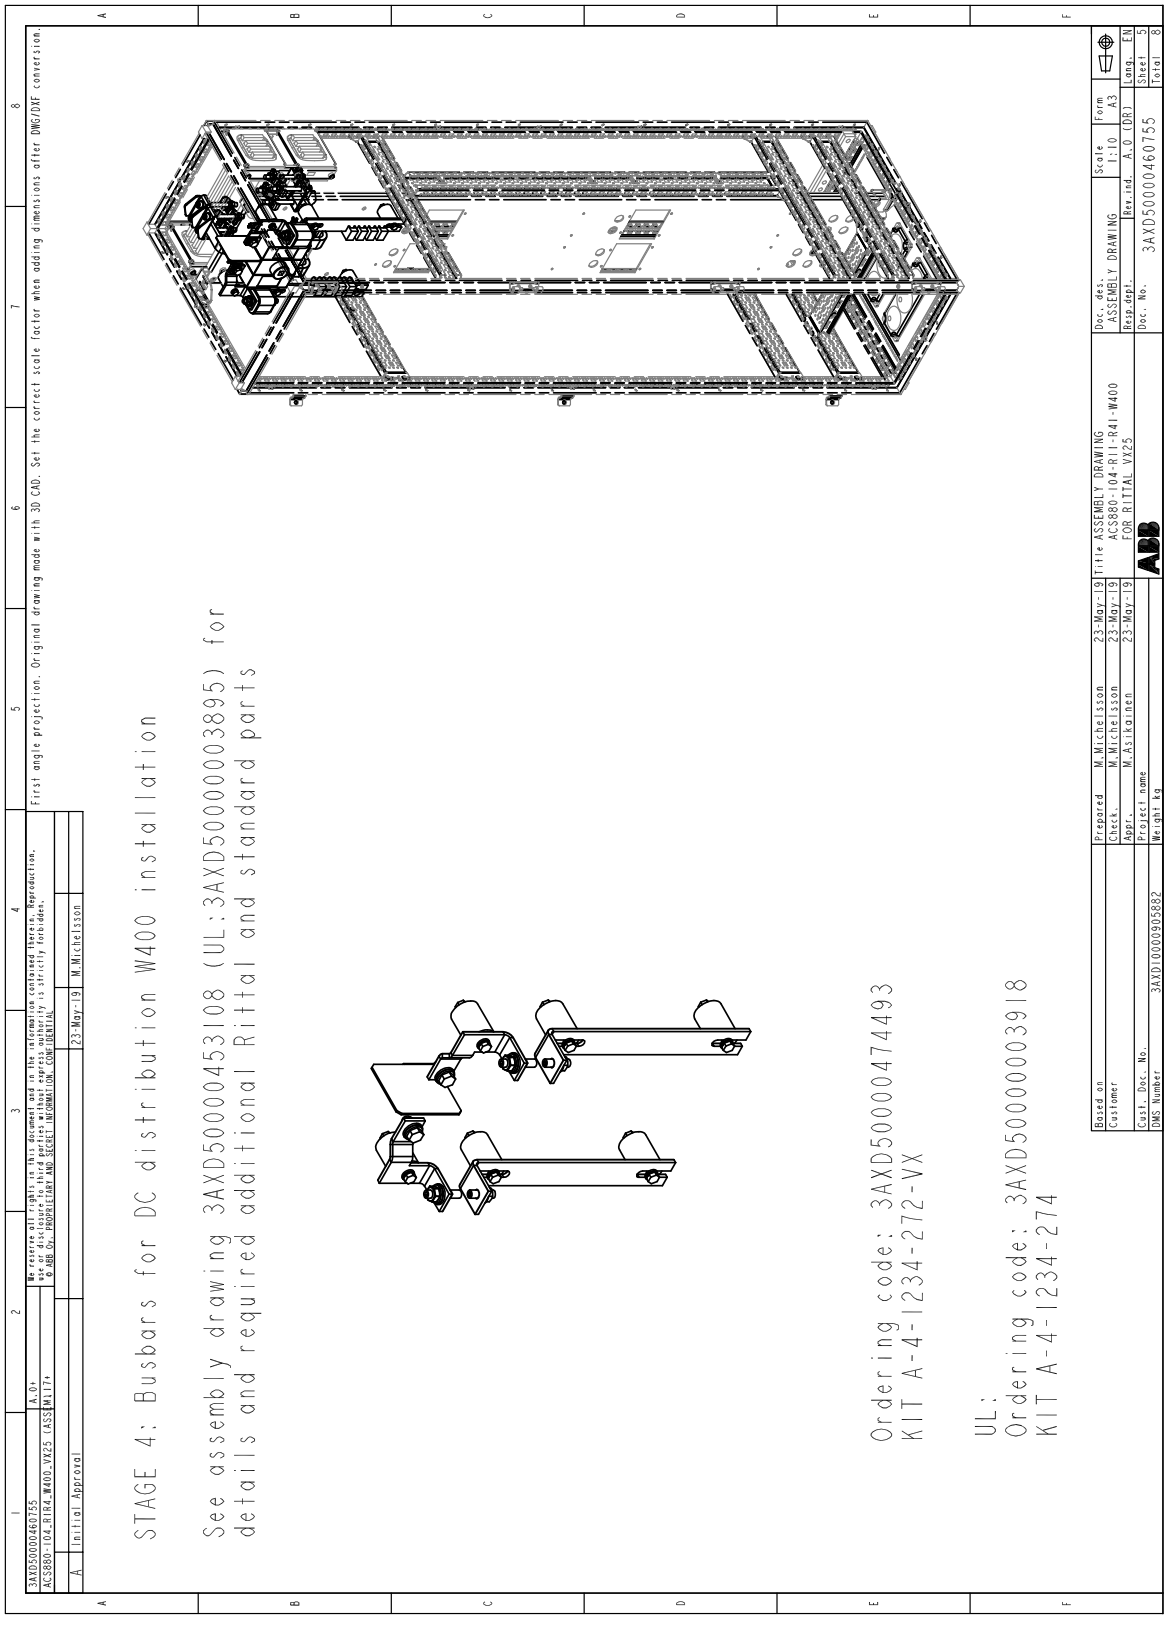


Stage 5: Installation of mounting plate shrouds

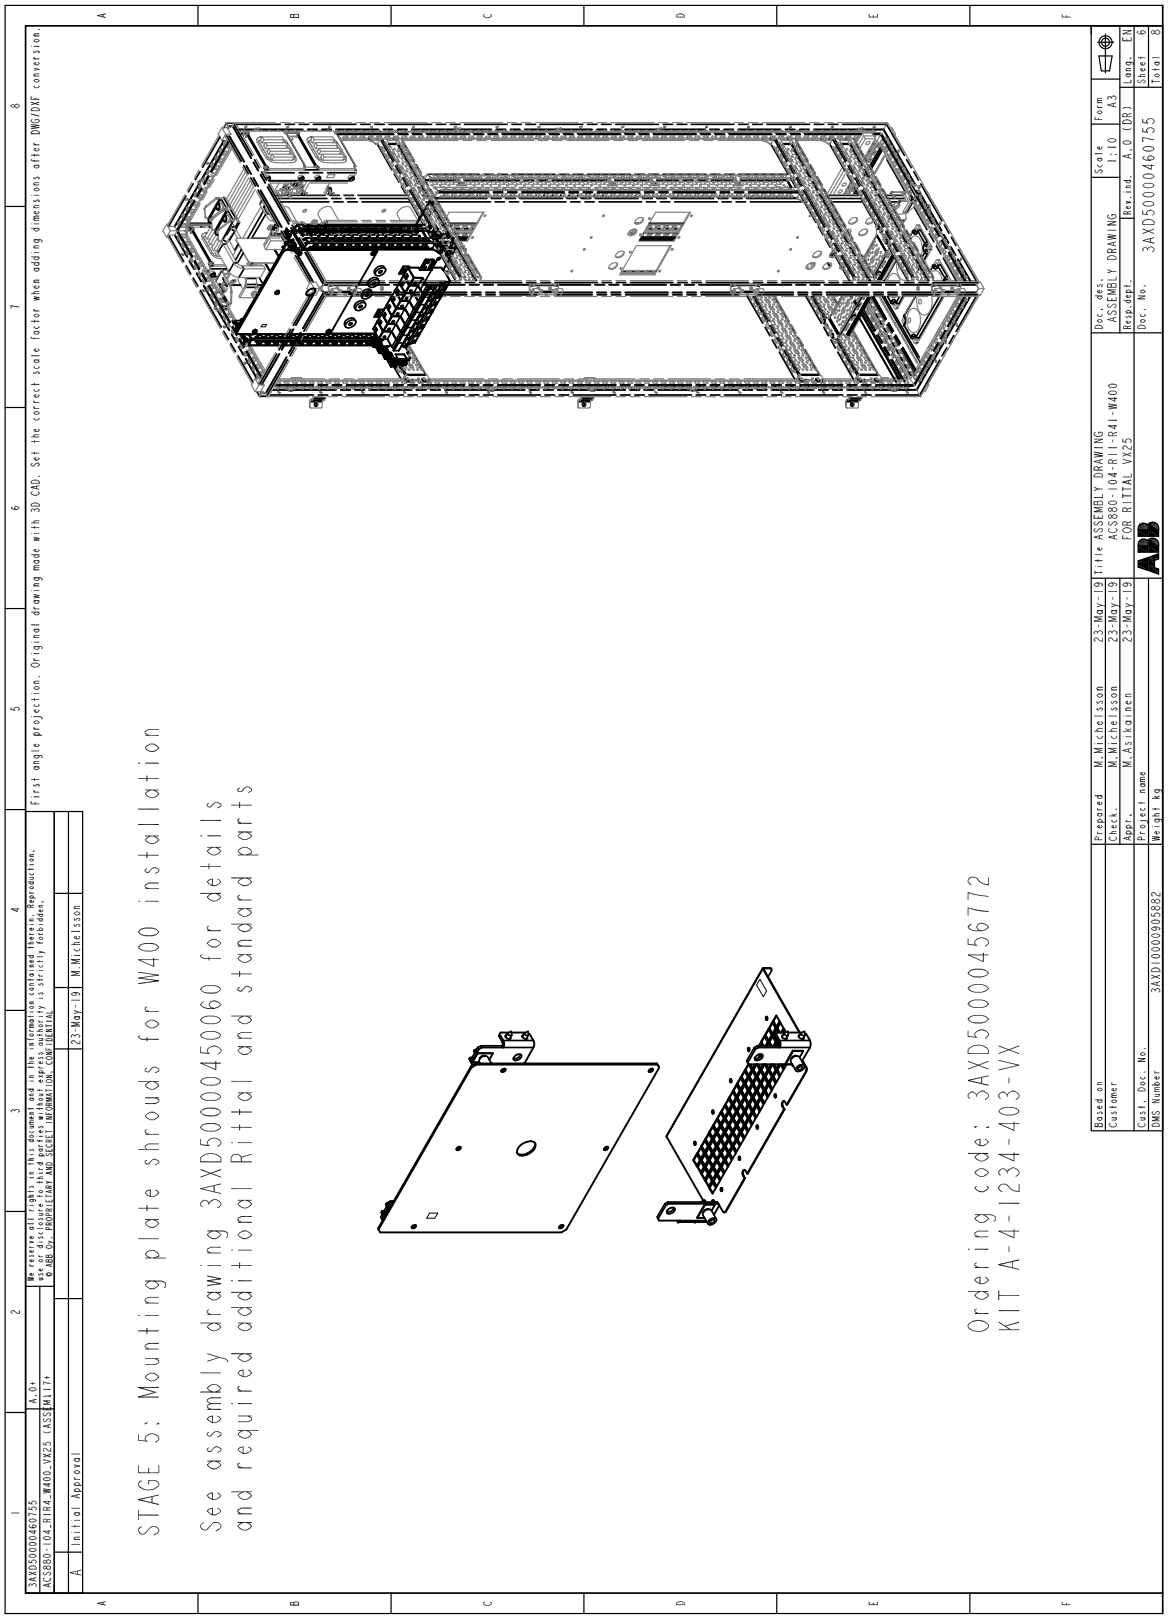

Stage 6: Installation of inverter modules and air guides

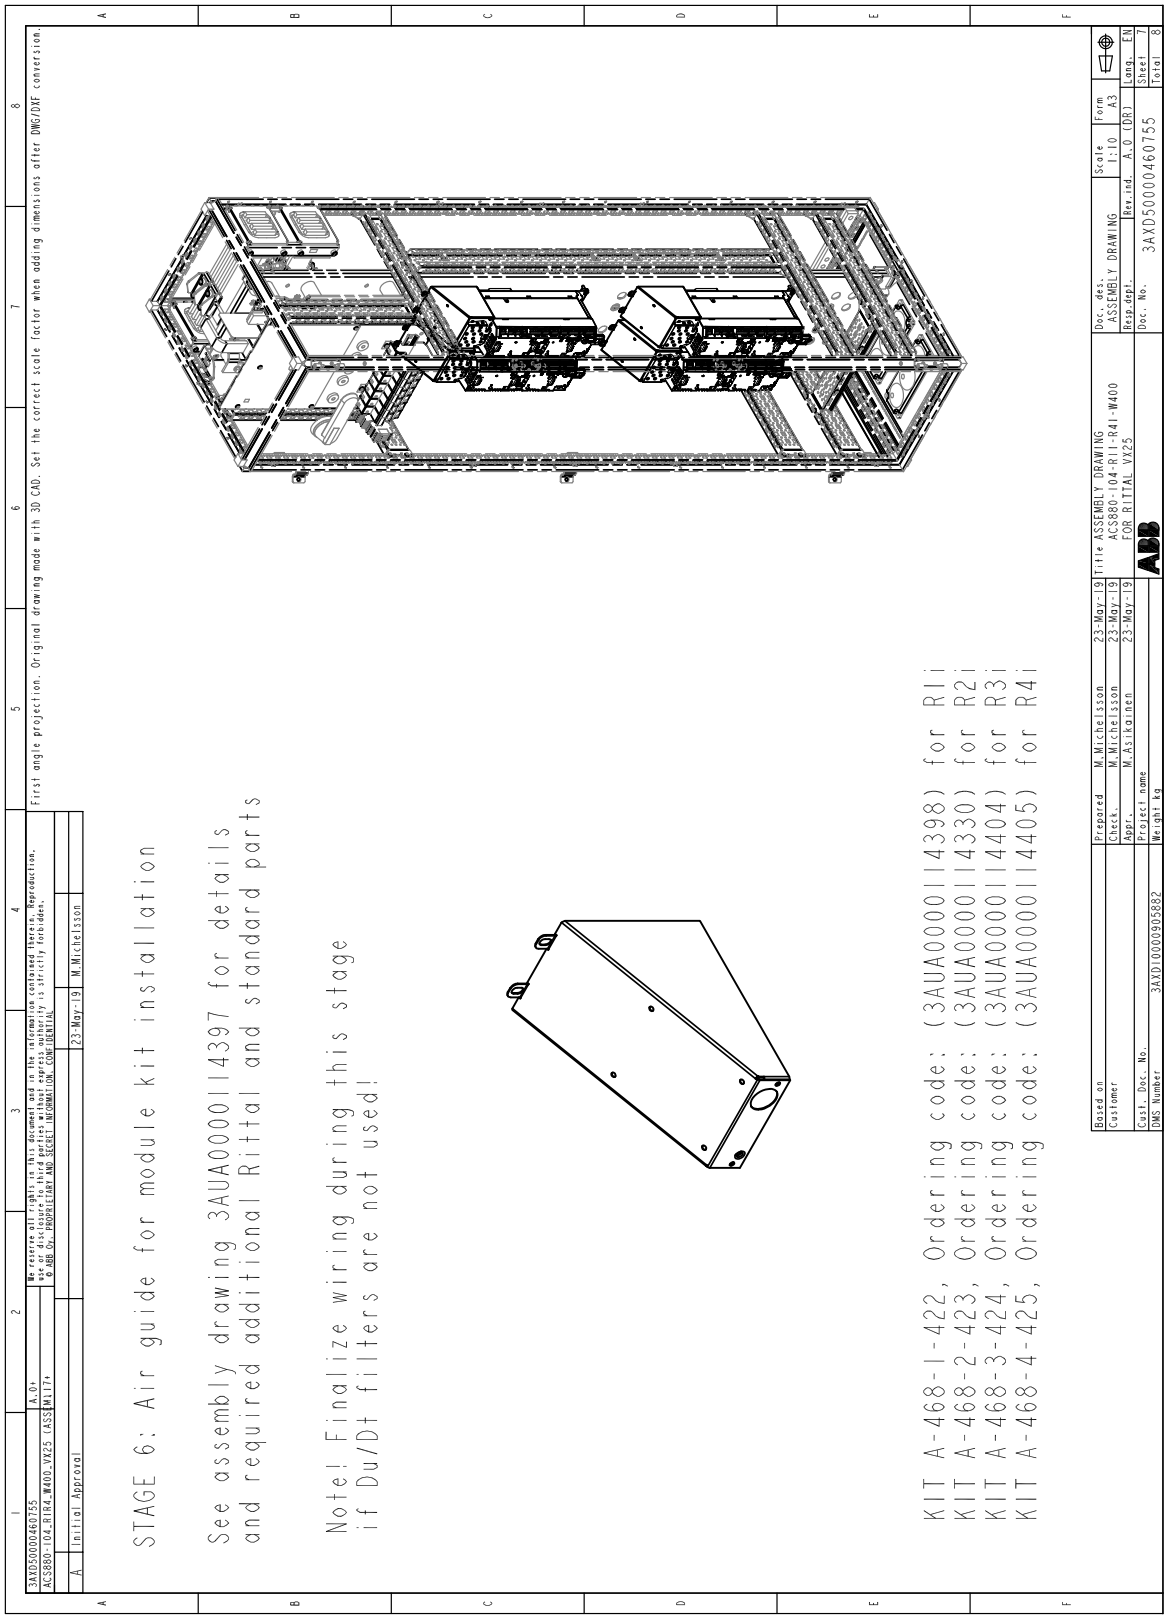


Stage 7: Installation of du/dt filters

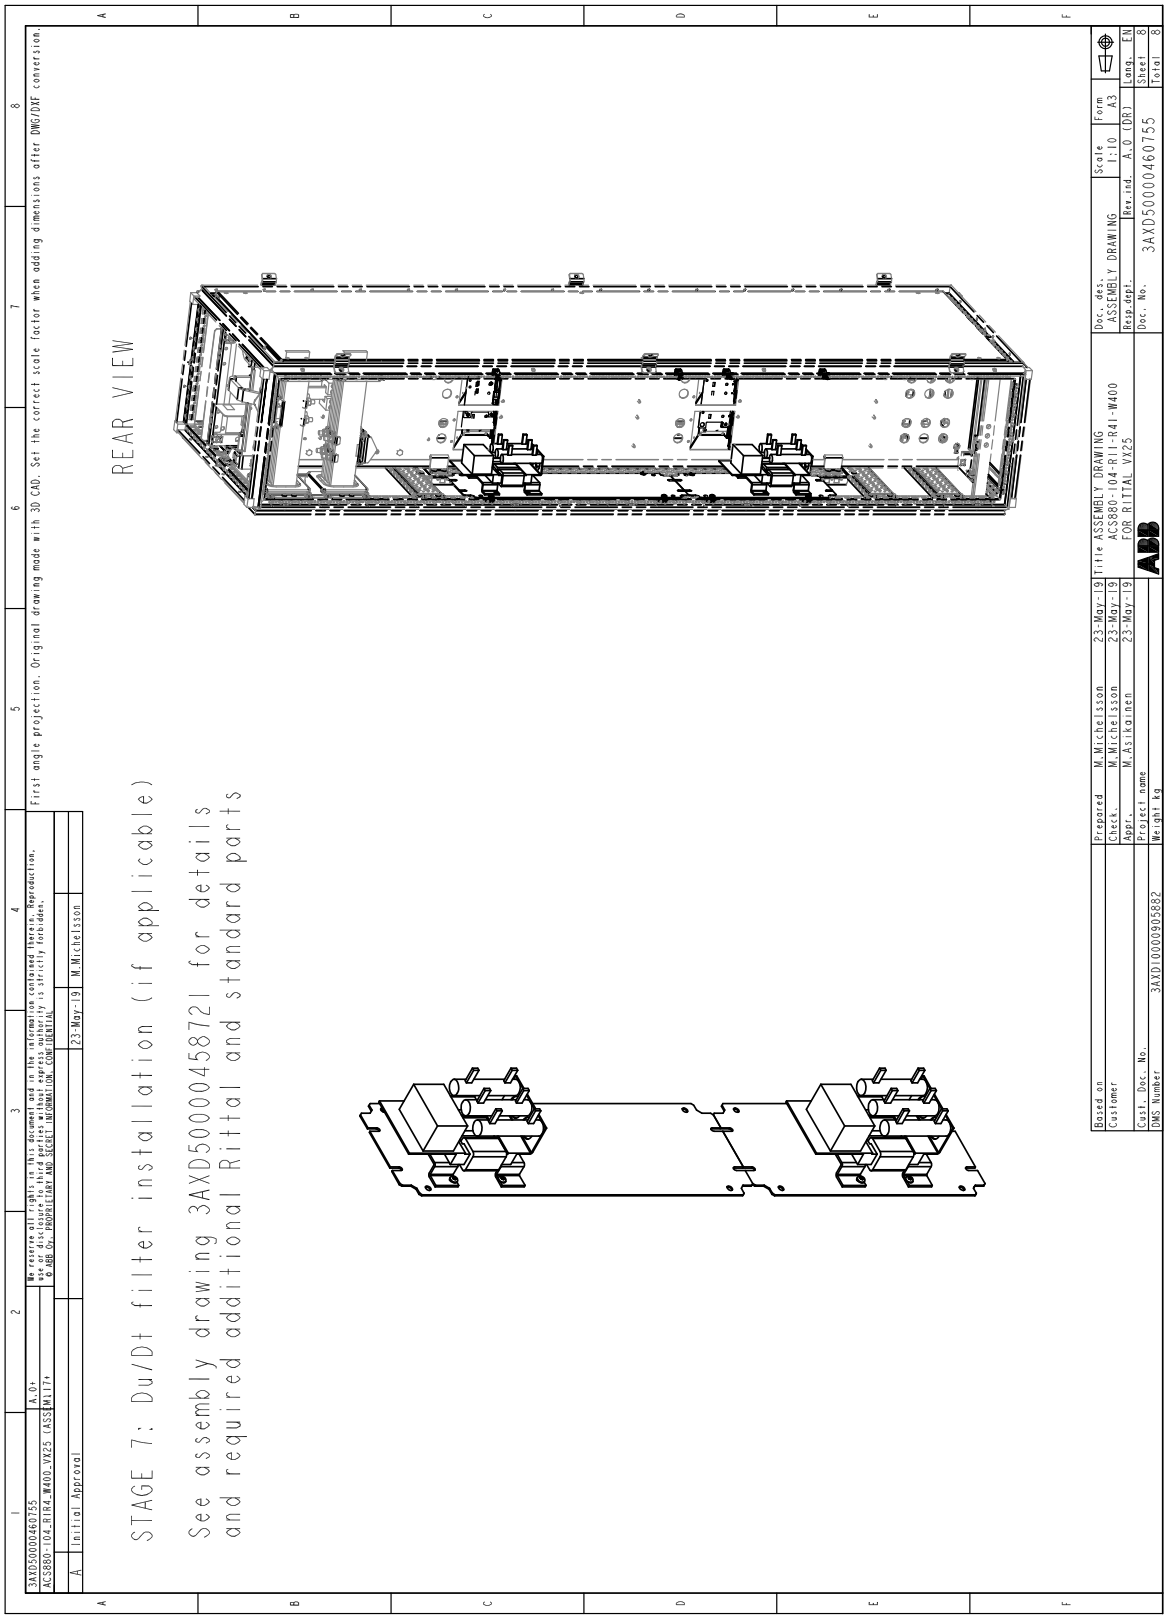

R1i...R4i modules in a 600 mm wide Rittal VX25 enclosure

A maximum of eight frame R1i or R2i modules, or four frame R3i or R4i modules can be fitted into a 600 mm wide VX25 enclosure, but the number can be reduced by optional equipment.

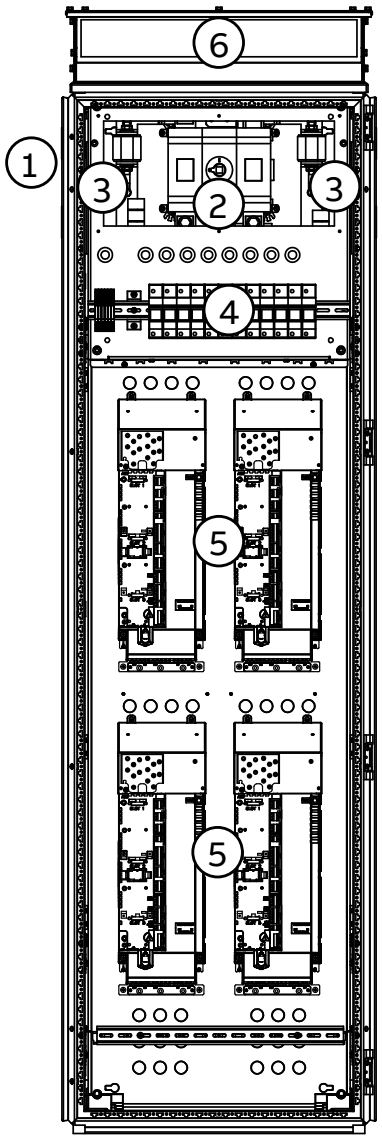


Description
Cubicle including: 1. DC input 2. DC switch/disconnector for all inverter modules 3. Main DC fuses 4. DC fuse disconnector for each inverter 5. Inverter modules 6. Air outlet with exhaust fan


Installation stages

#	Installation stage	Instruction code	Kit code	Kit ordering code
1	Common parts:			
	Baying parts	3AXD50000336340	-	-
	PE busbars	3AXD50000336104	-	-
	Divider panel	3AXD50000336692	-	-
	DC bus support kit	3AXD50000333639	A-468-X-001-VX	3AXD50000333387
2	Bottom plate	-	-	-
3	Mounting plate	3AXD50000468195	-	-
4	DC busbars	3AXD50000460779	A-6-1234-271-VX	3AXD50000475964
5	Mounting plate shrouds	3AXD50000461691	A-6-1234-402-VX	3AXD50000456819
6	Inverter modules and air guides:			
	R1i	3AUA0000114397	A-468-1-422	3AUA0000114398
	R2i	3AUA0000114397	A-468-2-423	3AUA0000114330
	R3i	3AUA0000114397	A-468-3-424	3AUA0000114404
	R4i	3AUA0000114397	A-468-4-425	3AUA0000114405
7	du/dt filters	3AXD50000471713	-	See AC-side components (page 280)


Overview of kits

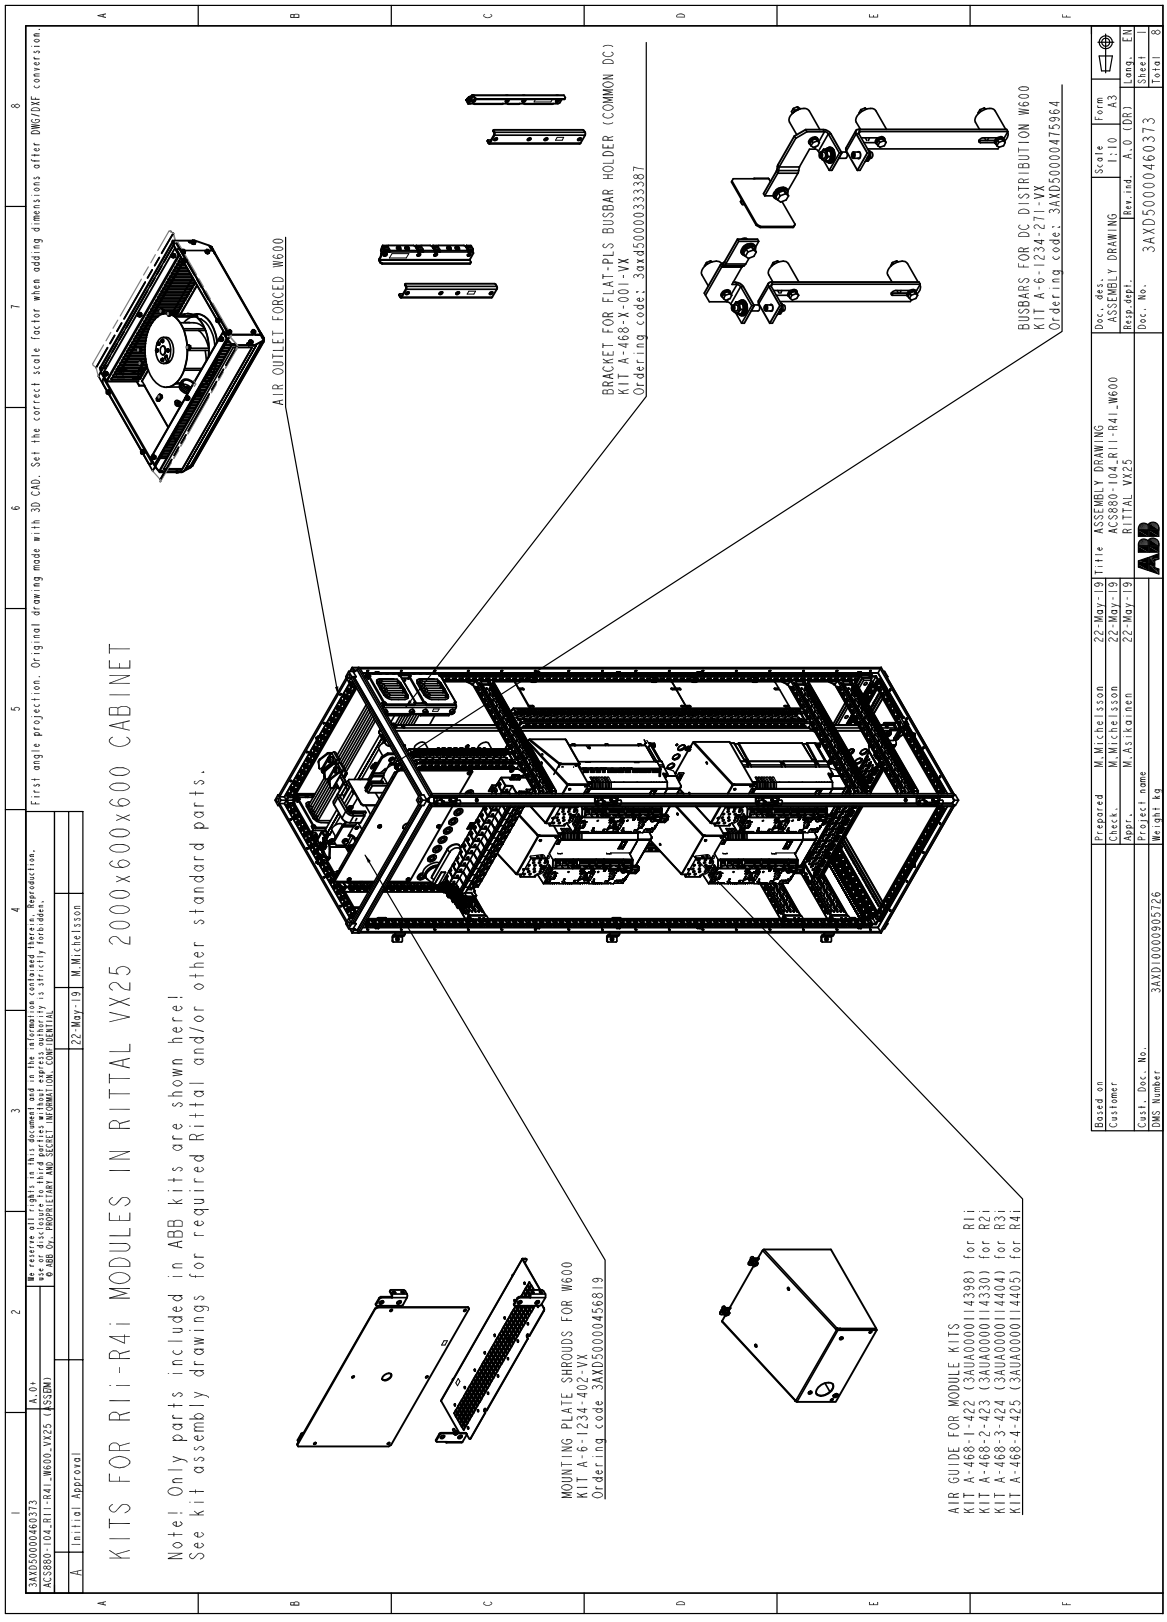


Stage 1: Instalation of common parts

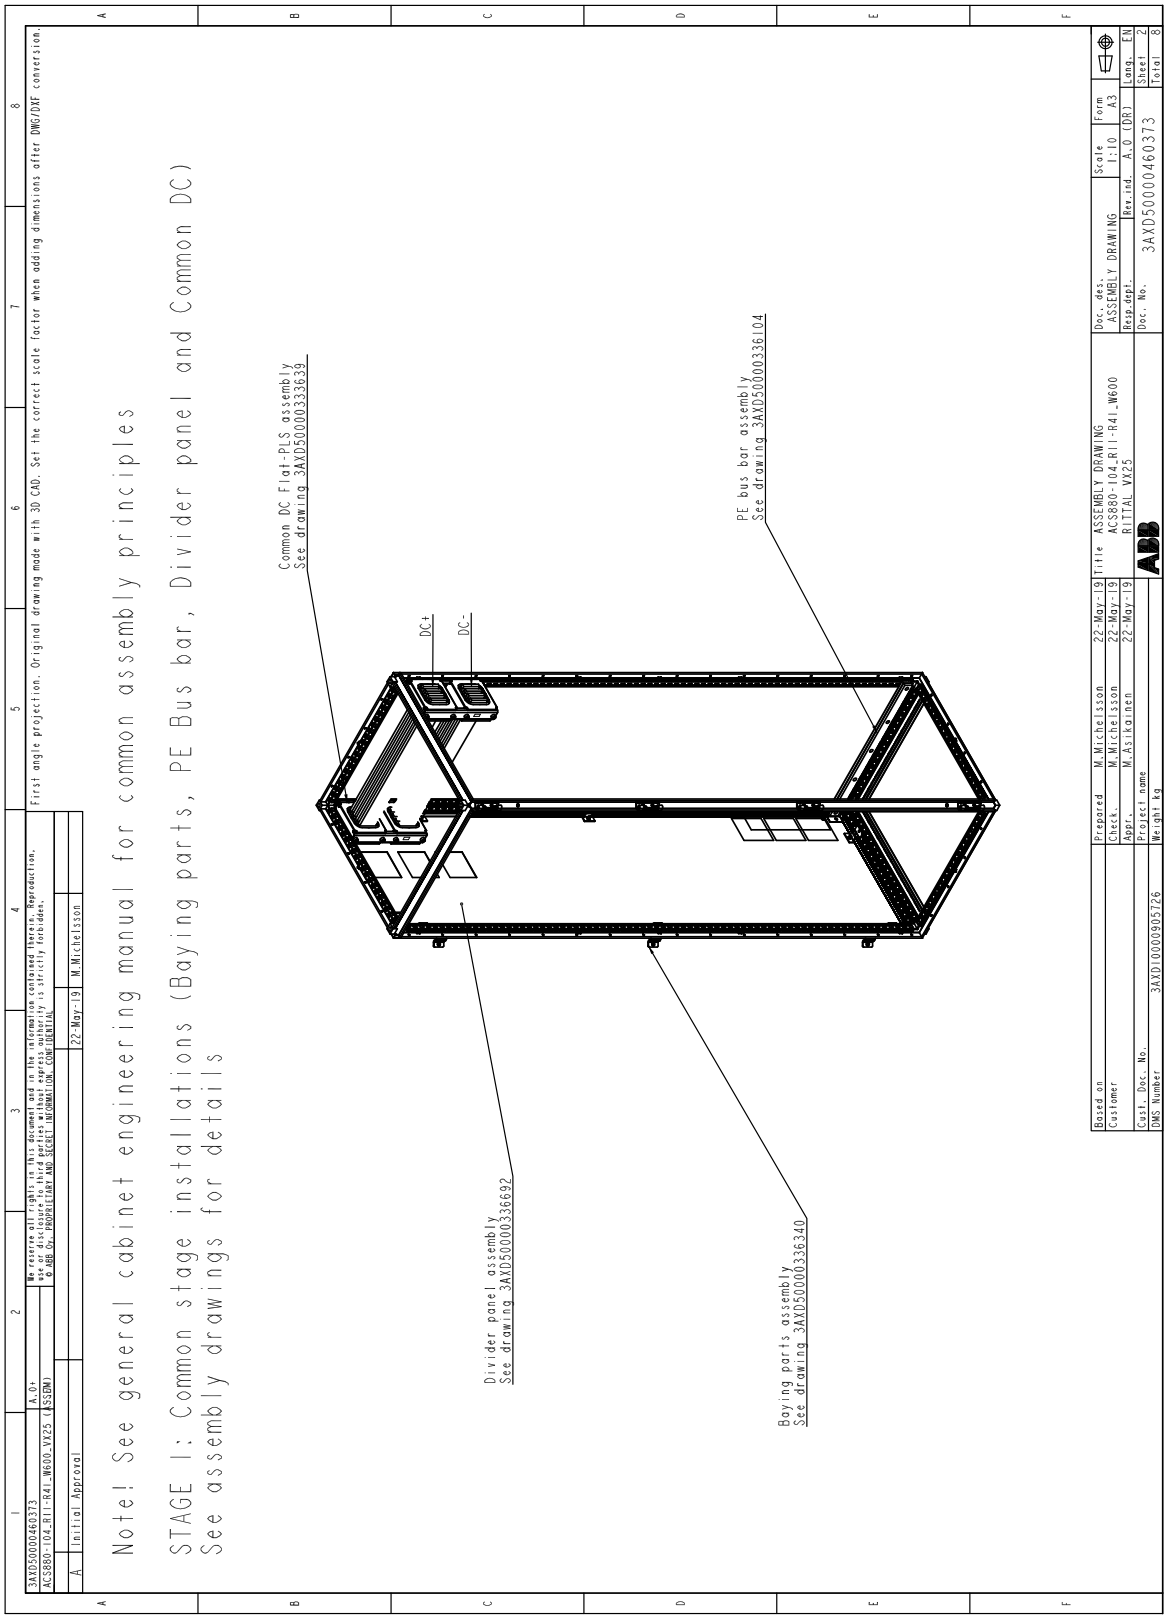


Stage 2: Installation of bottom plate

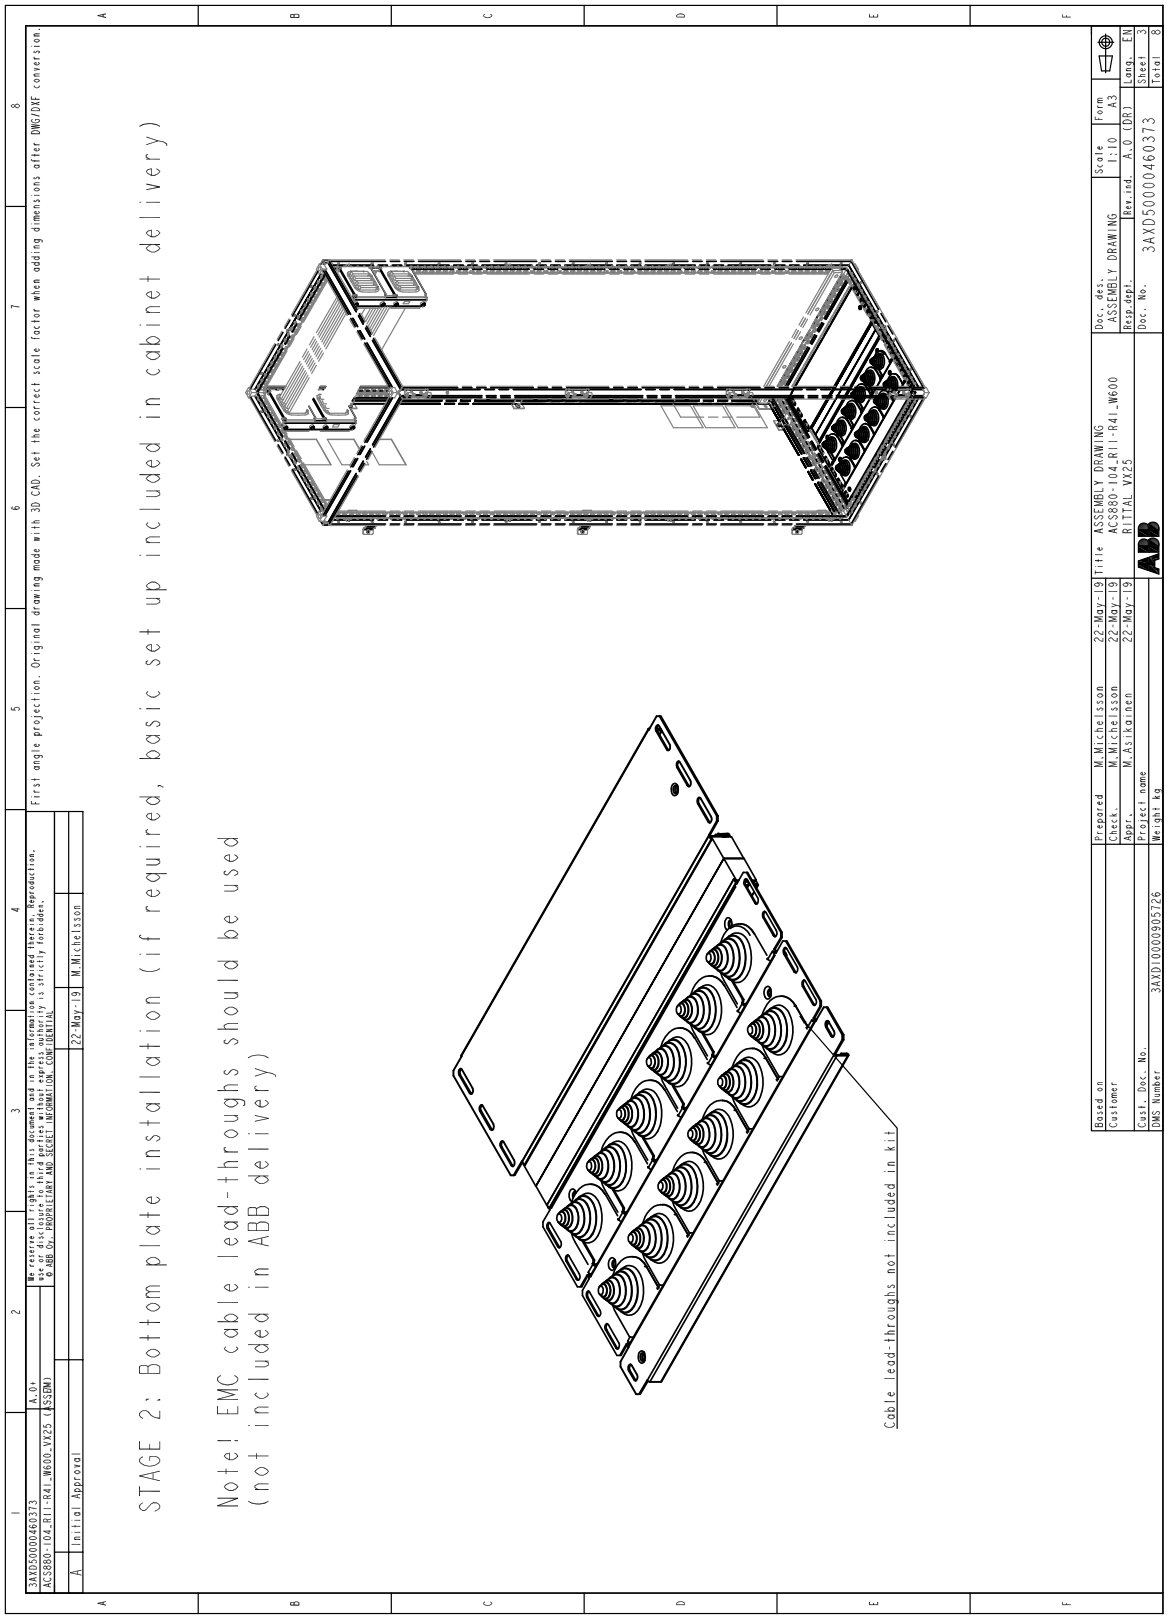


Stage 3: Installation of mounting plate

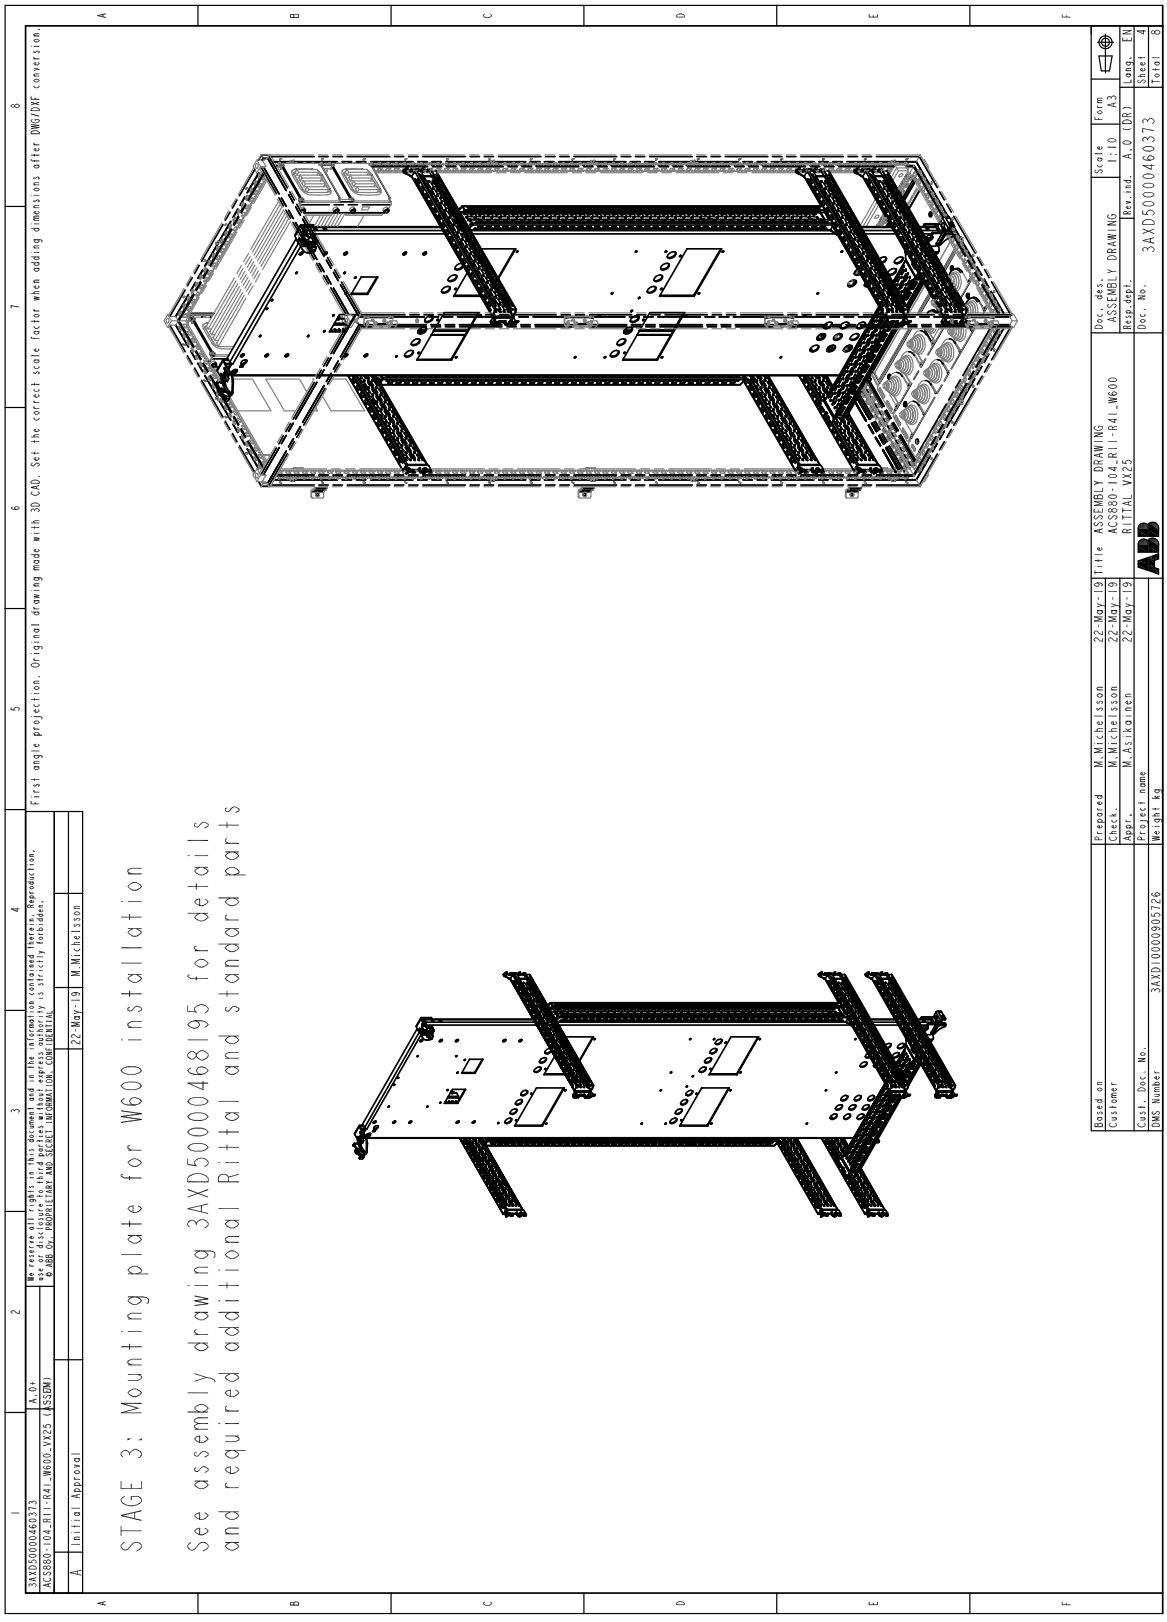


Stage 4: Installation of DC busbars

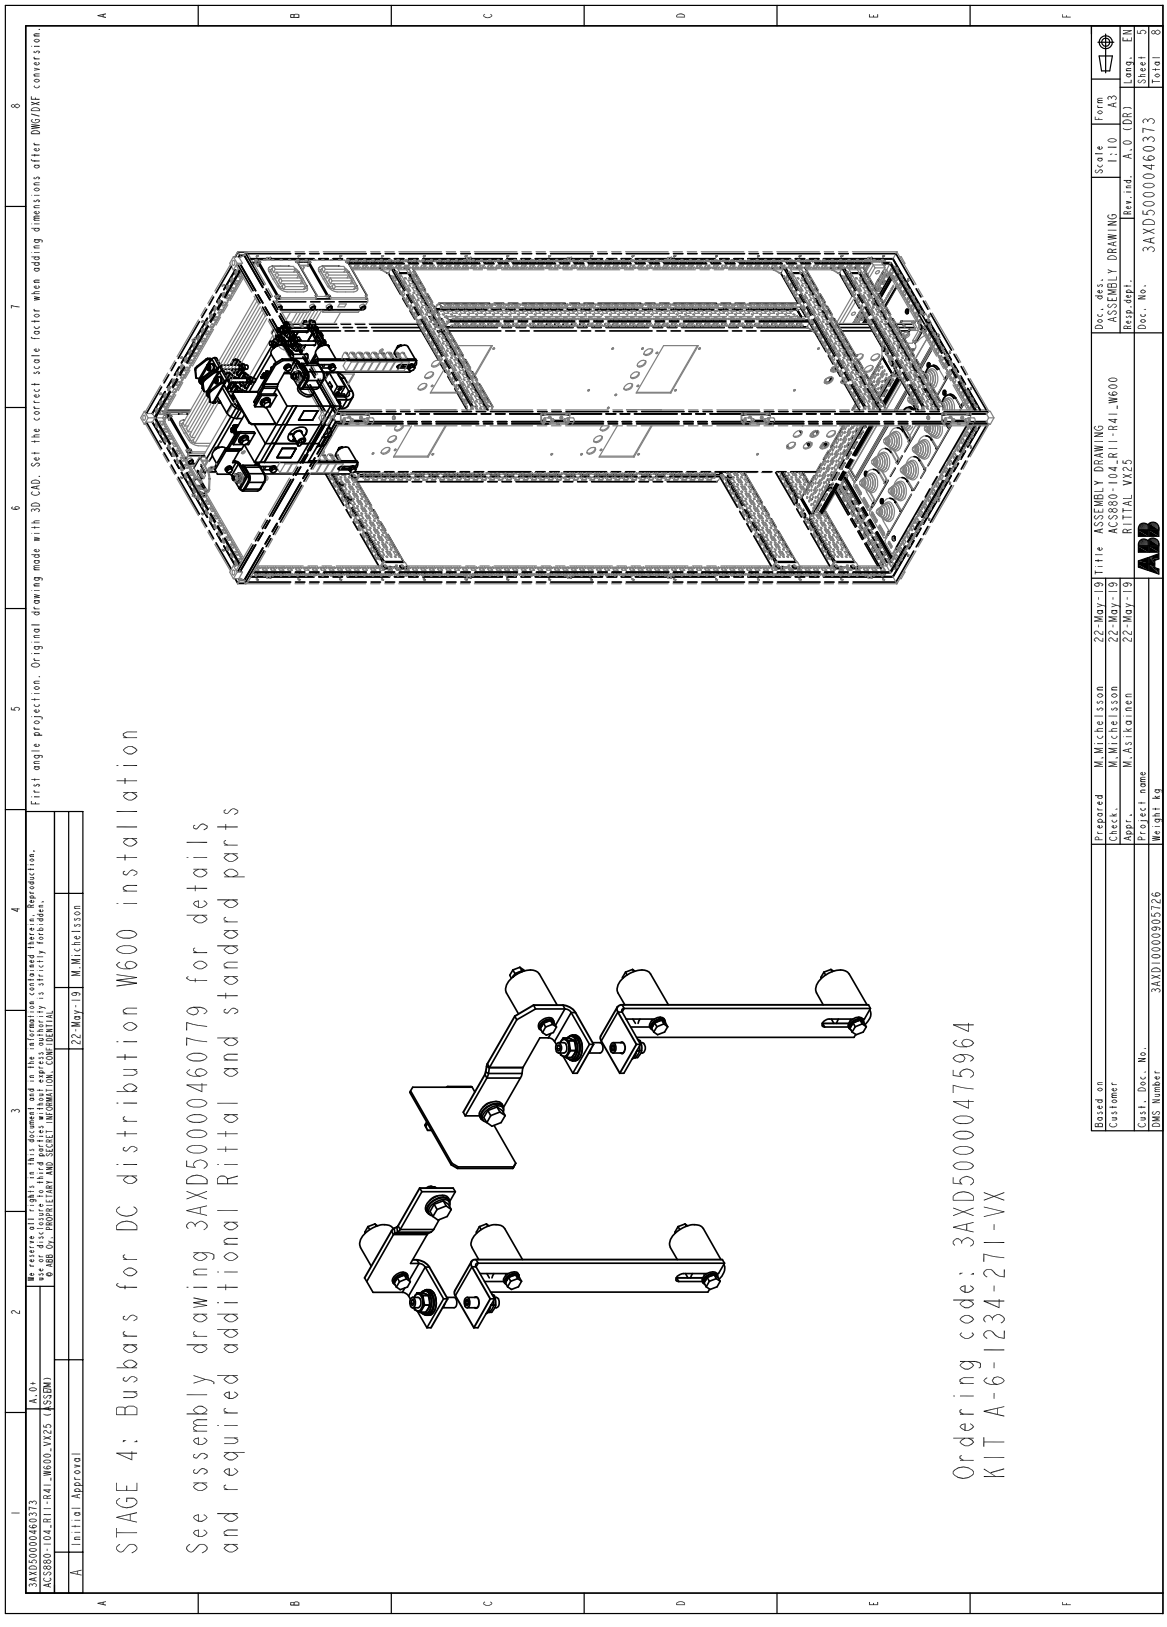


Stage 5: Installation of mounting plate shrouds

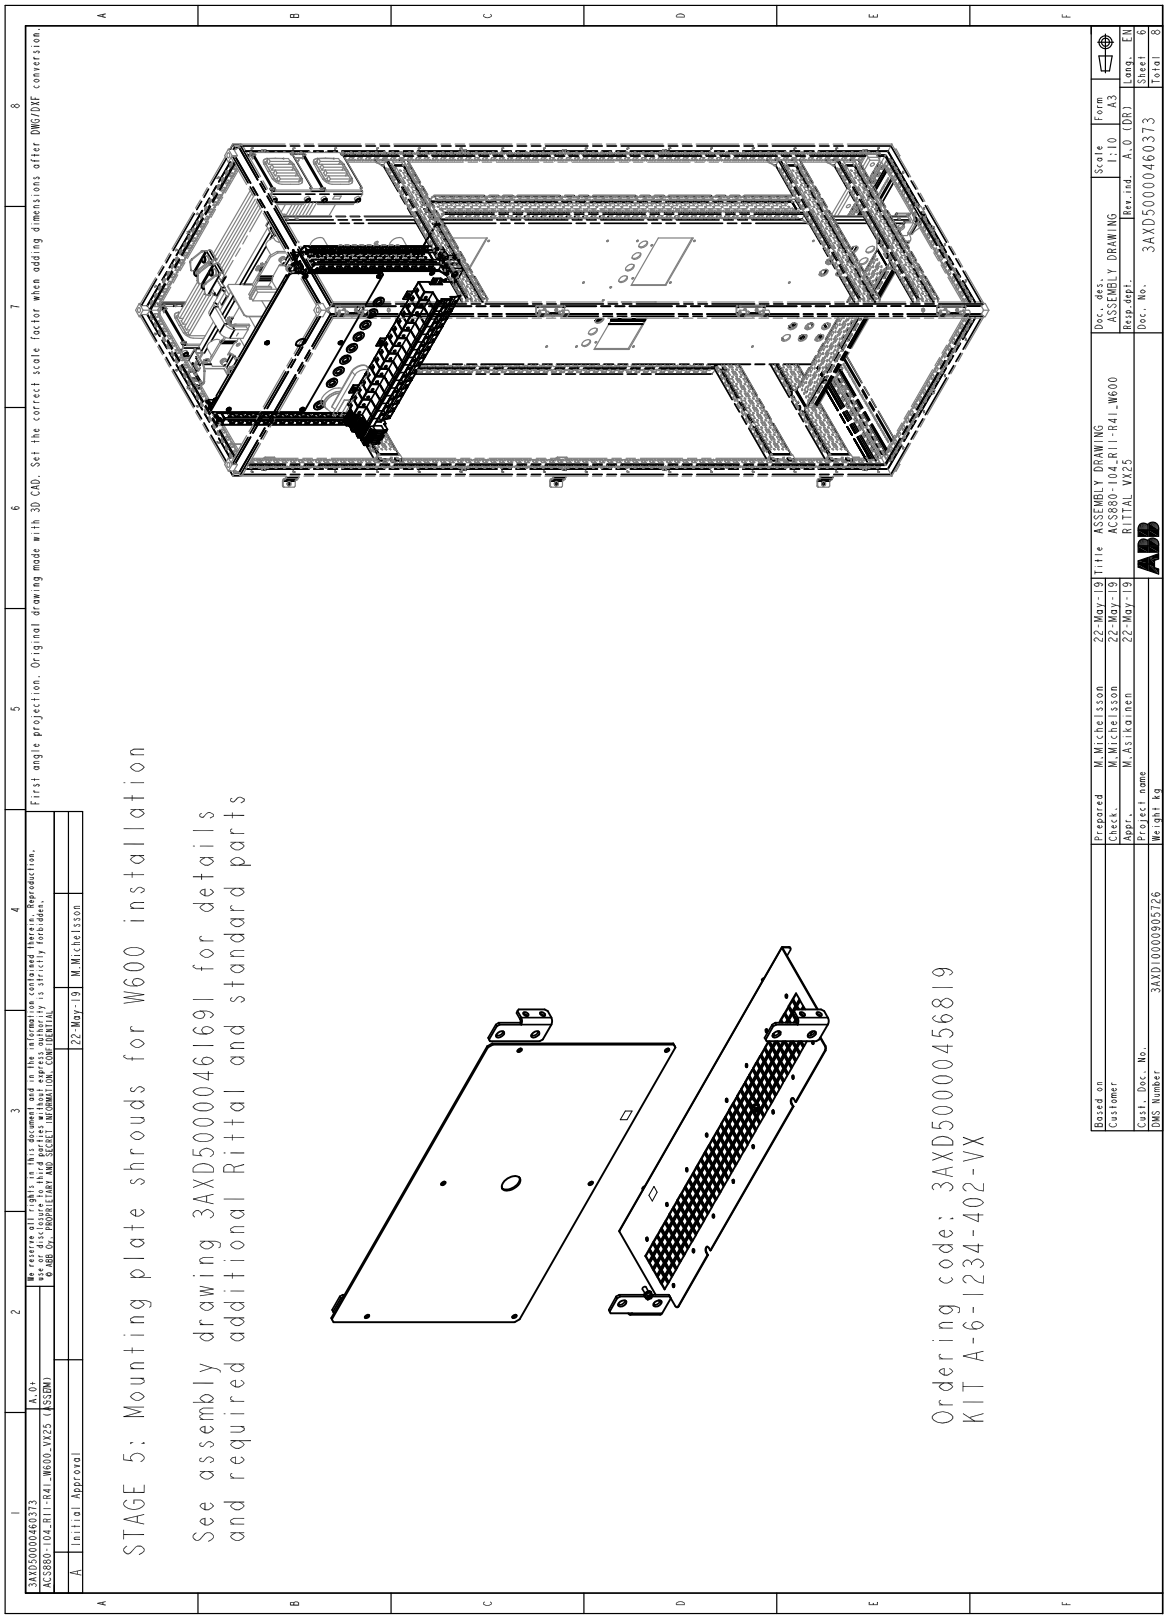

Stage 6: Installation of inverter modules and air guides

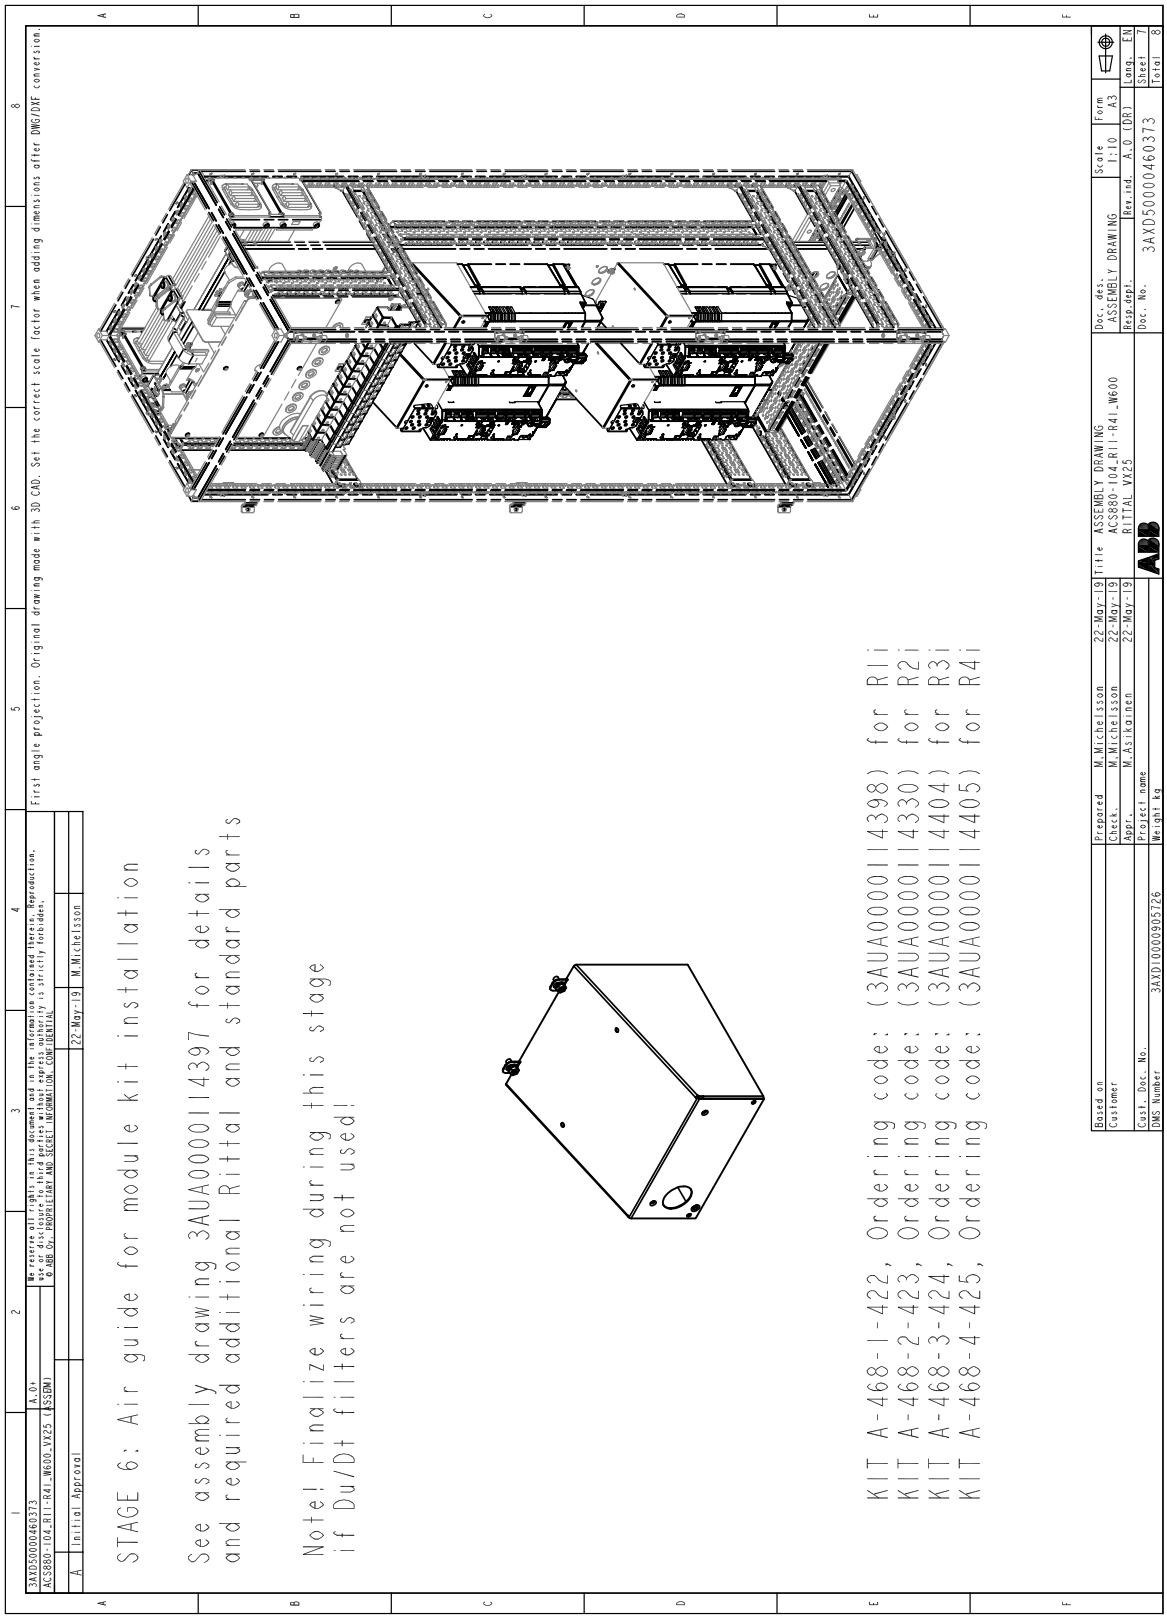


Stage 7: Installation of du/dt filter

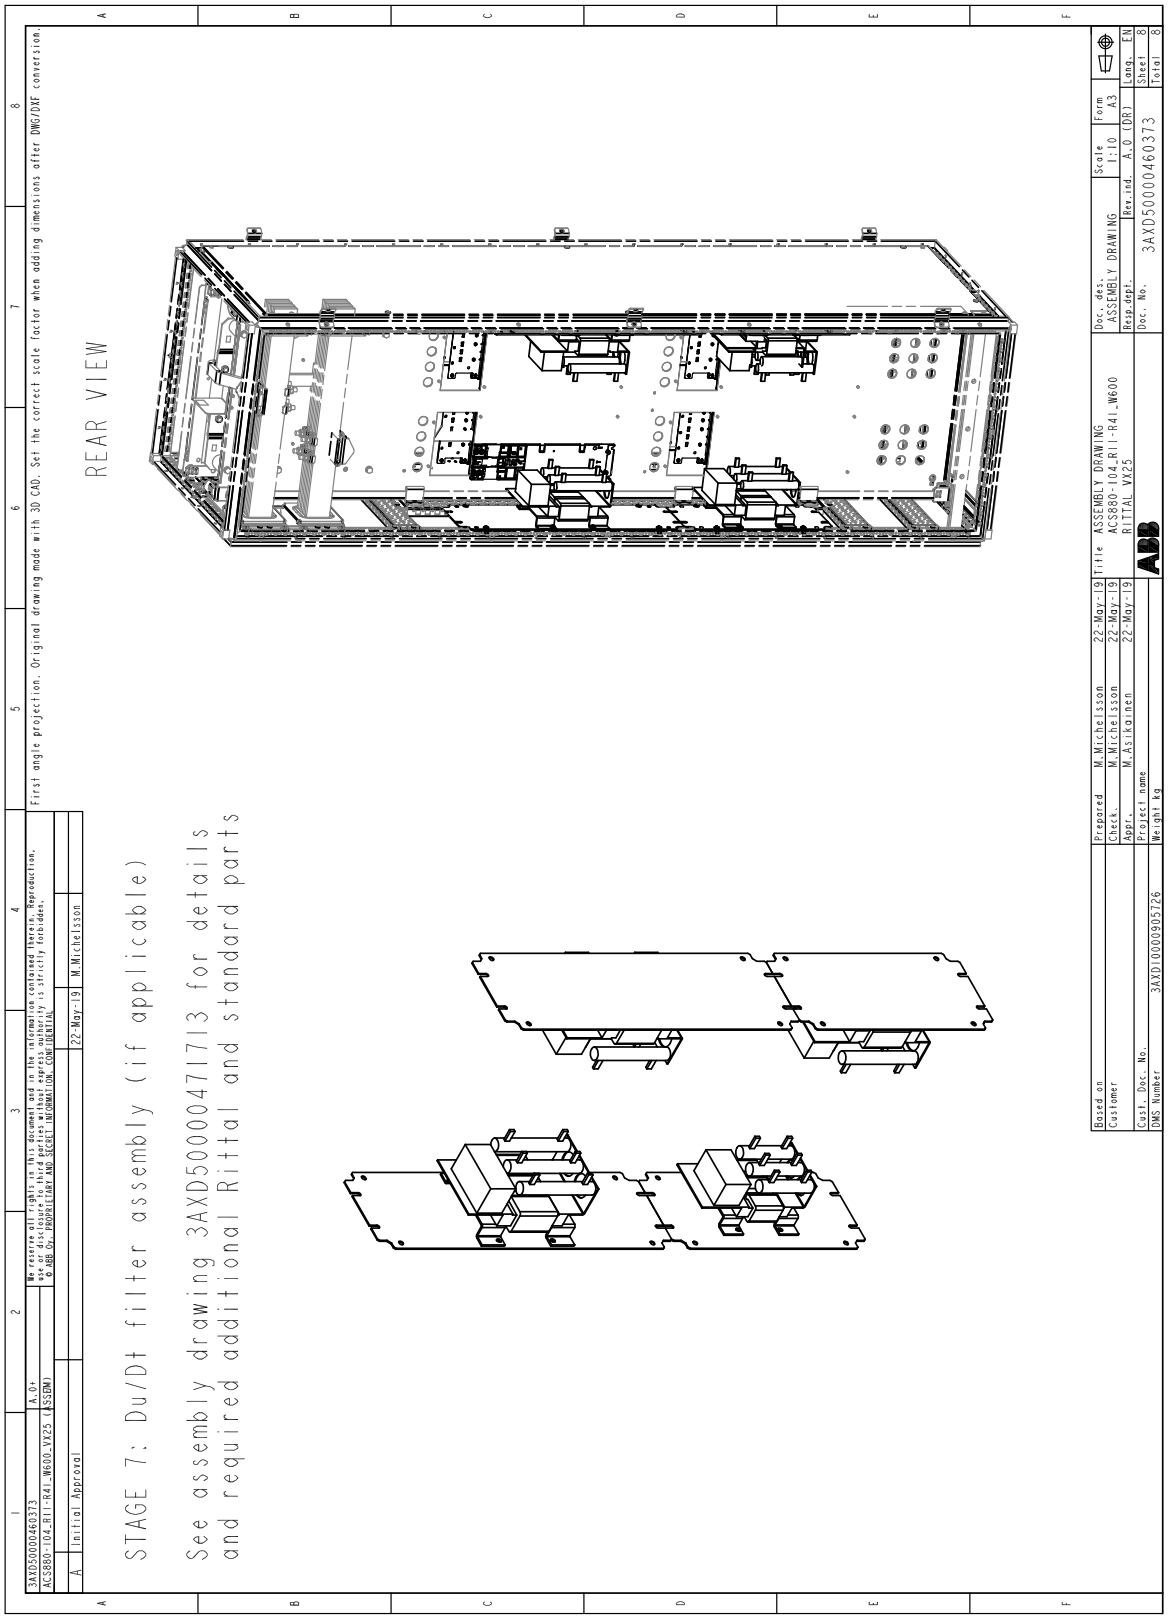

R1i...R4i modules in a 800 mm wide Rittal VX25 enclosure

A maximum of twelve frame R1i or R2i modules, or six frame R3i or R4i modules can be fitted into a 800 mm wide VX25 enclosure, but the number can be reduced by optional equipment.

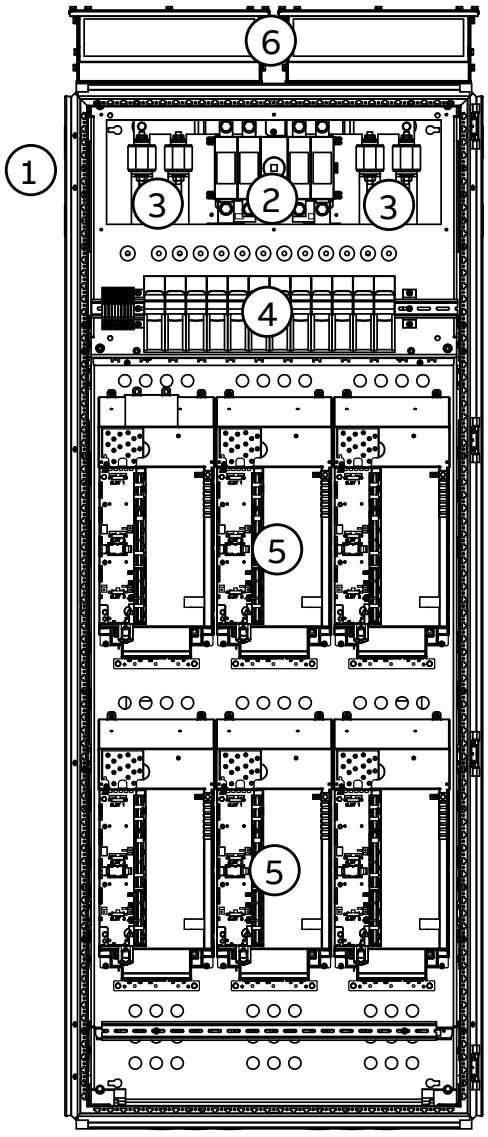


Description
Cubicle including: 1. DC input 2. DC switch/disconnector for all inverter modules 3. Main DC fuses 4. DC fuse disconnectors for each inverter module 5. Inverter modules 6. Air outlet with exhaust fan


Installation stages

#	Installation stage	Instruction code	Kit code	Kit ordering code
1	Common parts:			
	Baying parts	3AXD50000336340	-	-
	PE busbars	3AXD50000336104	-	-
	Divider panel	3AXD50000336692	-	-
	DC bus support kit	3AXD50000333639	A-468-X-001-VX	3AXD50000333387
2	Bottom plate	-	-	-
3	Mounting plate	3AXD50000474158	-	-
4	DC busbars	3AXD50000474516	A-8-1234-273-VX	3AXD50000475933
5	Mounting plate shrouds	3AXD50000474882	A-8-1234-404-VX	3AXD50000475926
6	Inverter modules and air guides:			
	R1i	3AUA0000114397	A-468-1-422	3AUA0000114398
	R2i	3AUA0000114397	A-468-2-423	3AUA0000114330
	R3i	3AUA0000114397	A-468-3-424	3AUA0000114404
	R4i	3AUA0000114397	A-468-4-425	3AUA0000114405
7	du/dt filters	3AXD50000475810	-	See AC-side components (page 280)


Overview of kits

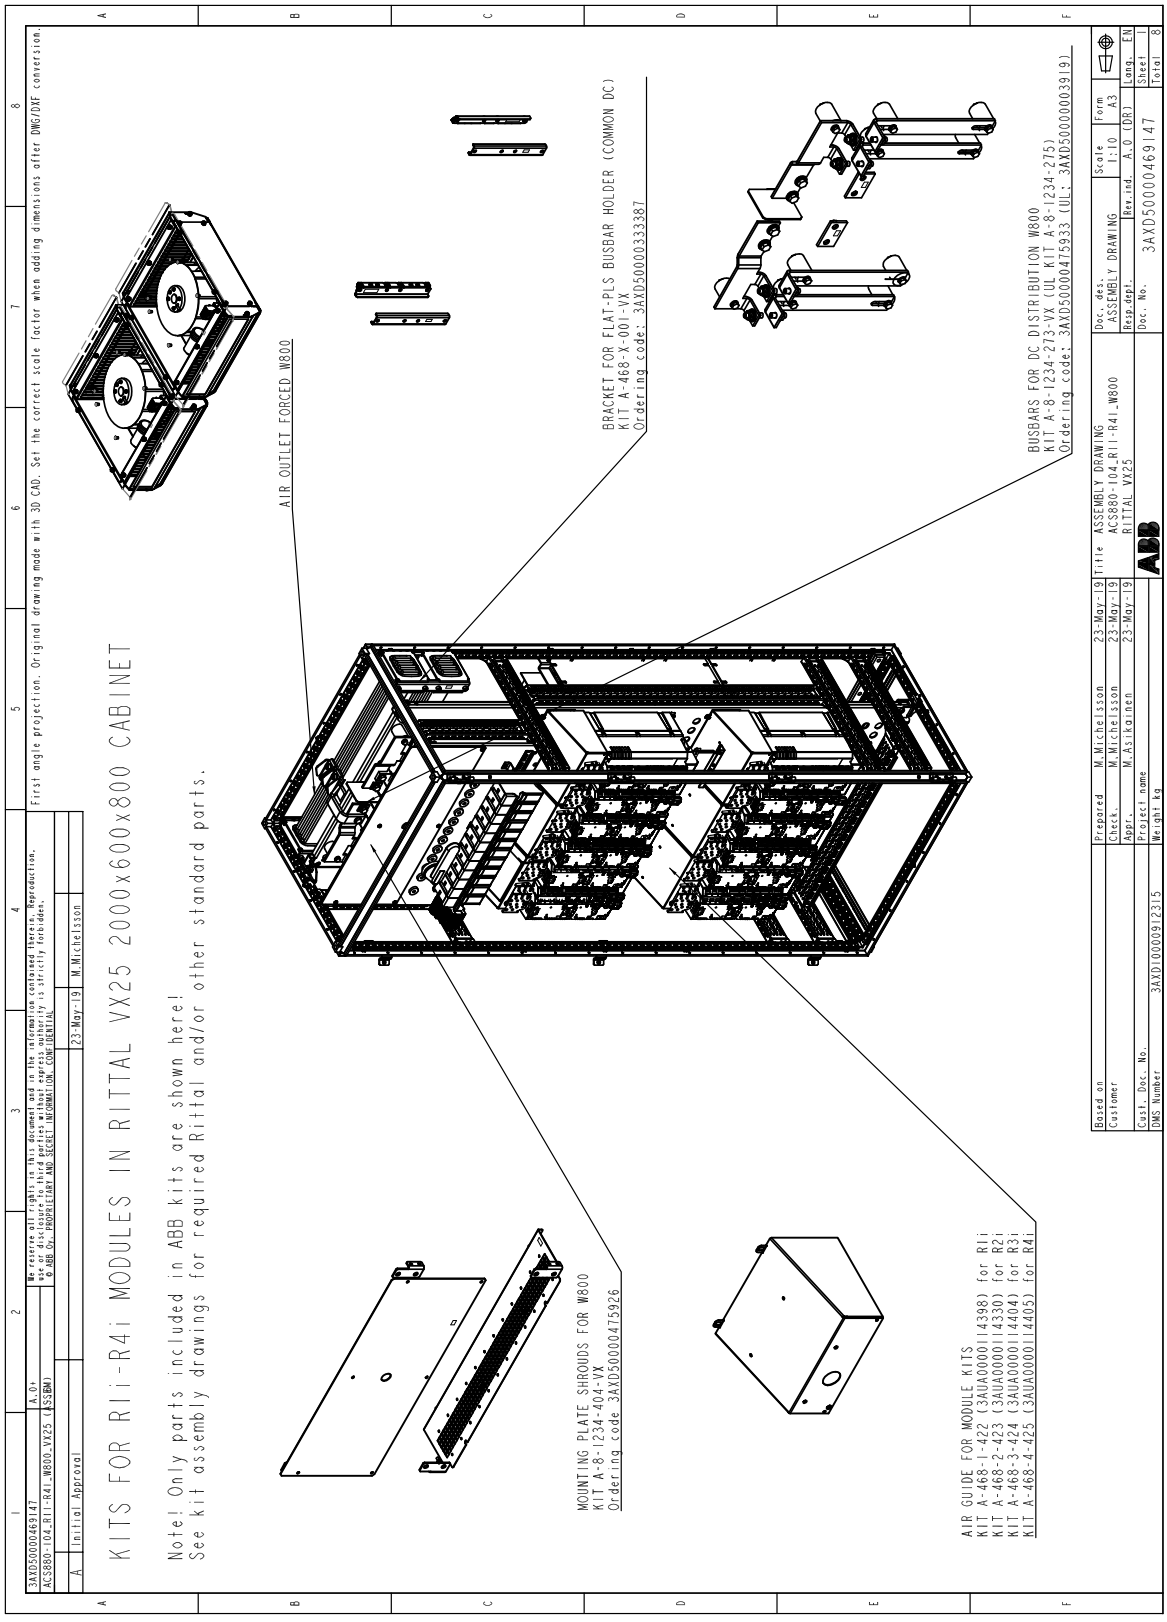


Stage 1: Installation of common parts

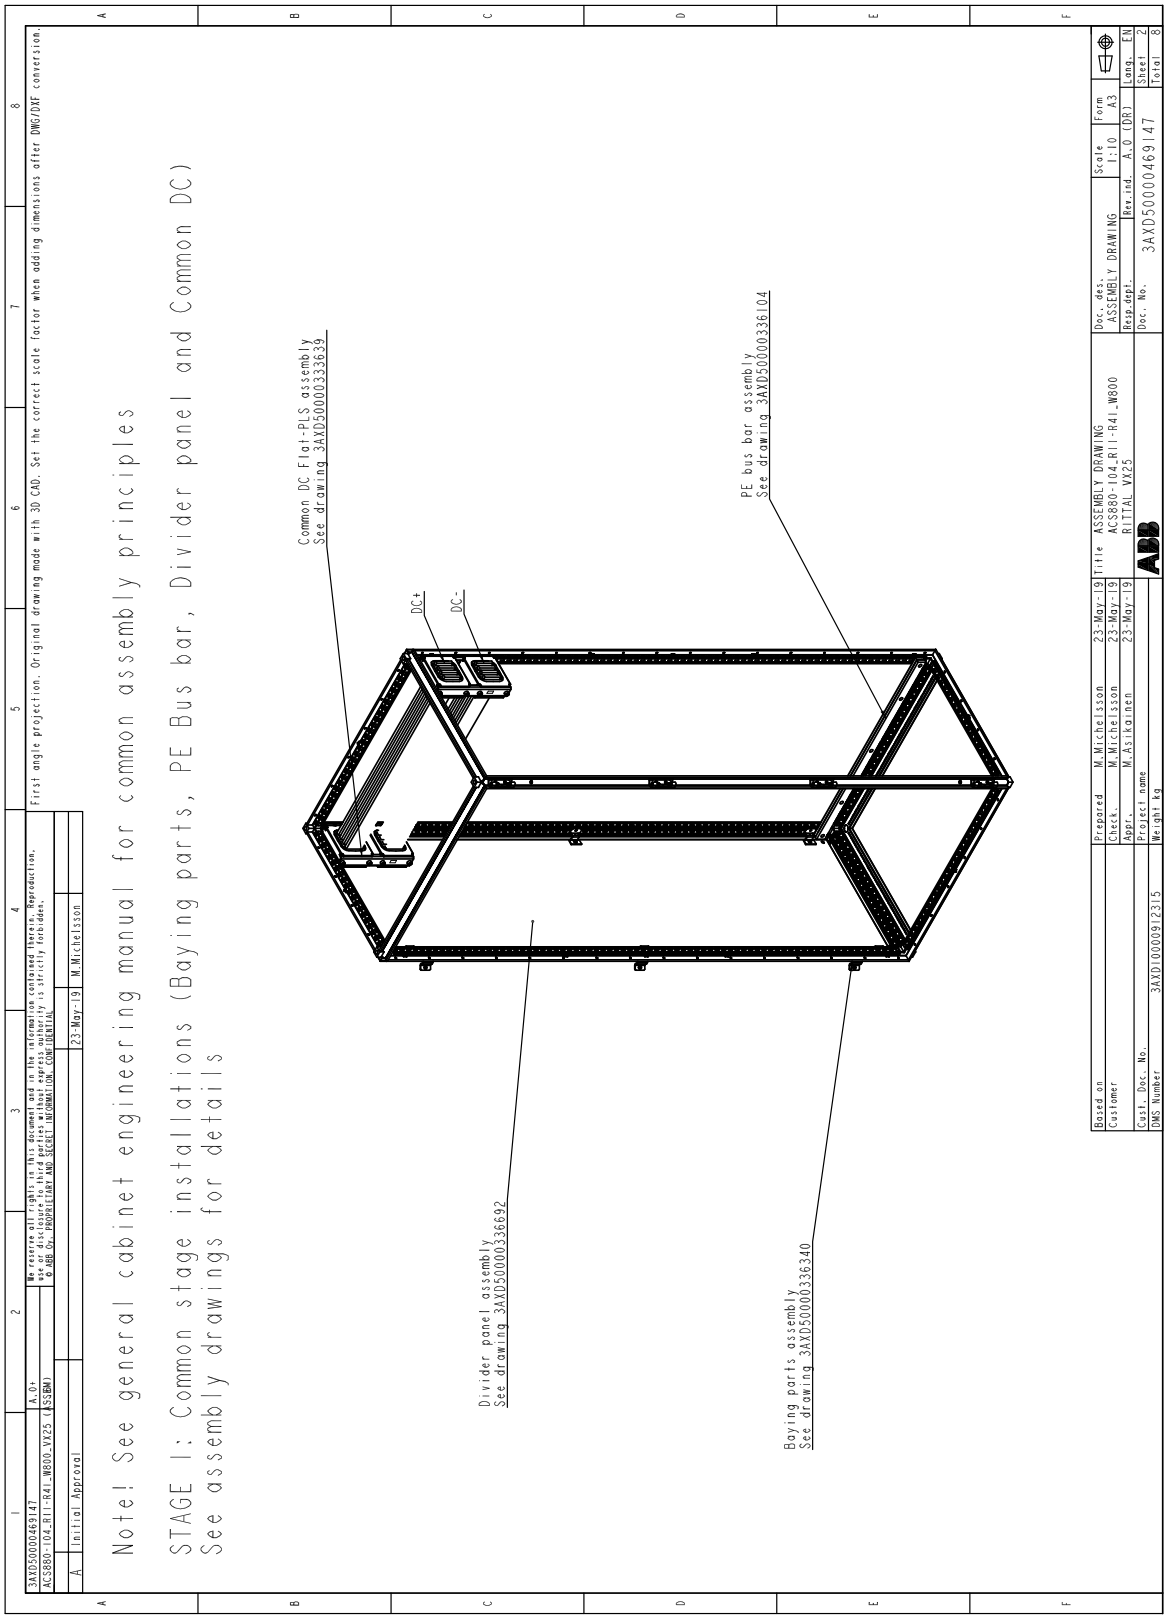


Stage 2: Installation of bottom plate

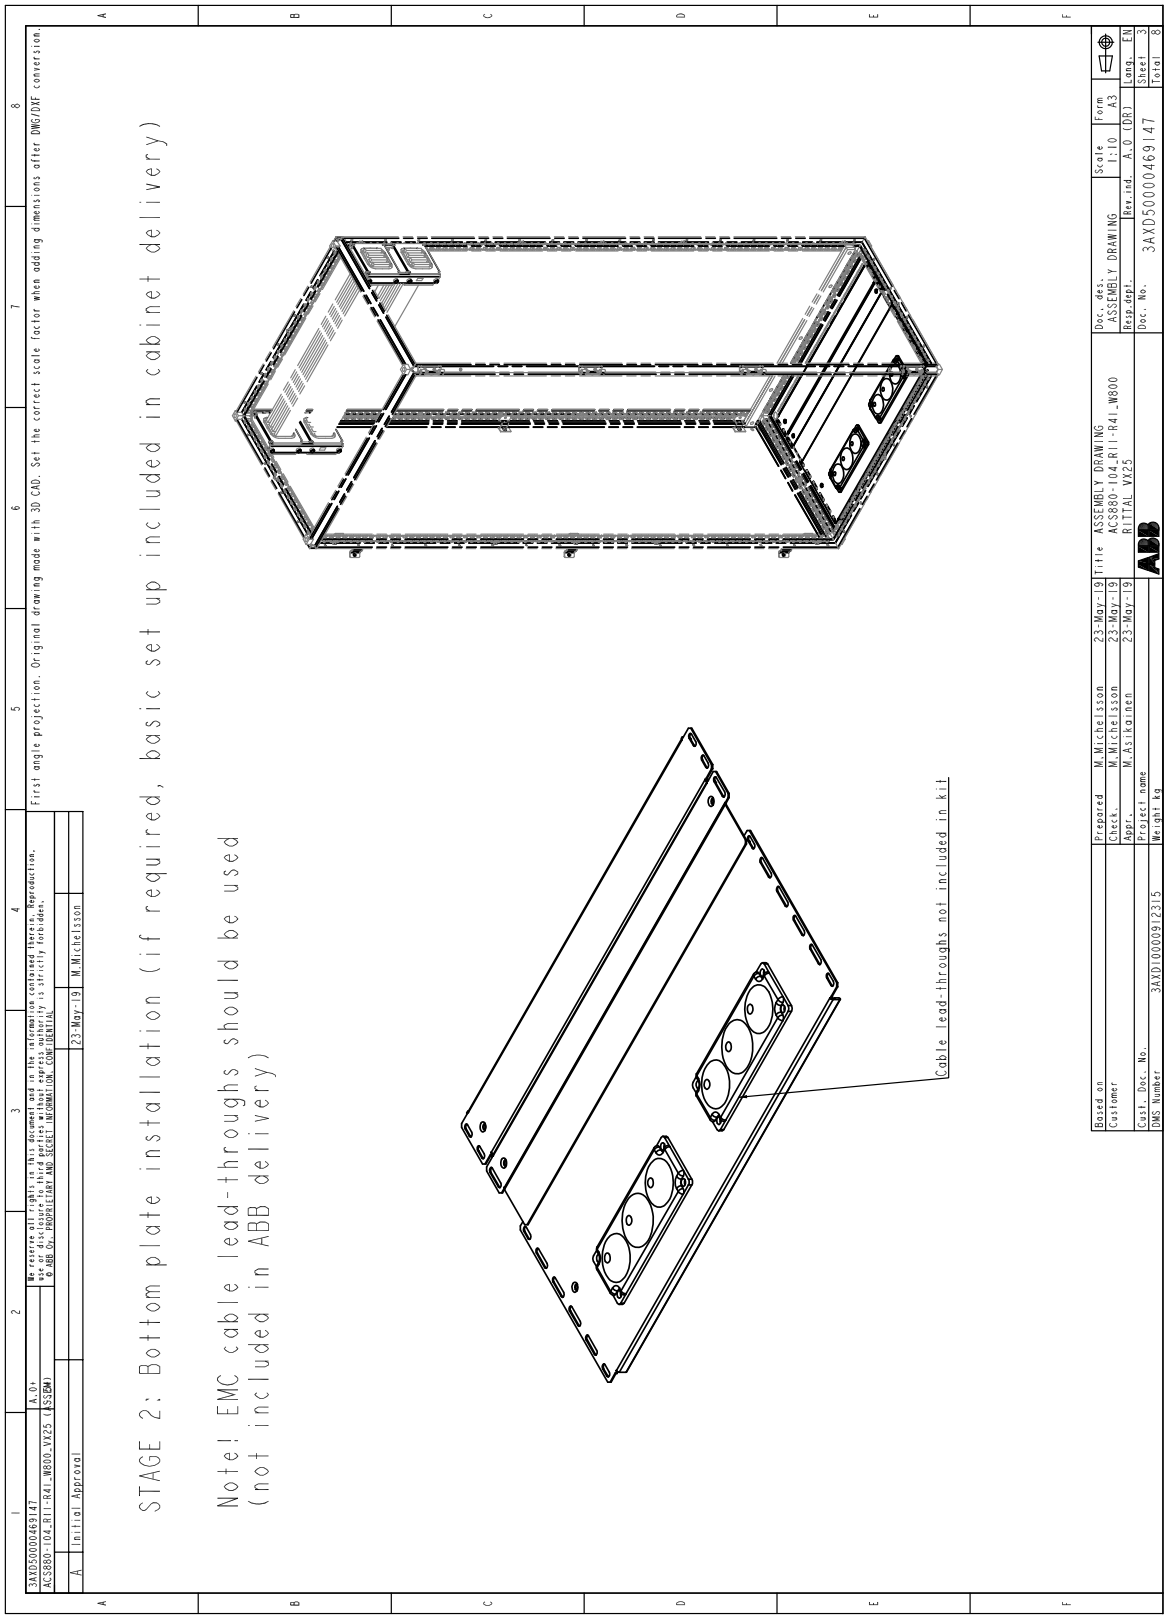


Stage 3: Installation of mounting plate

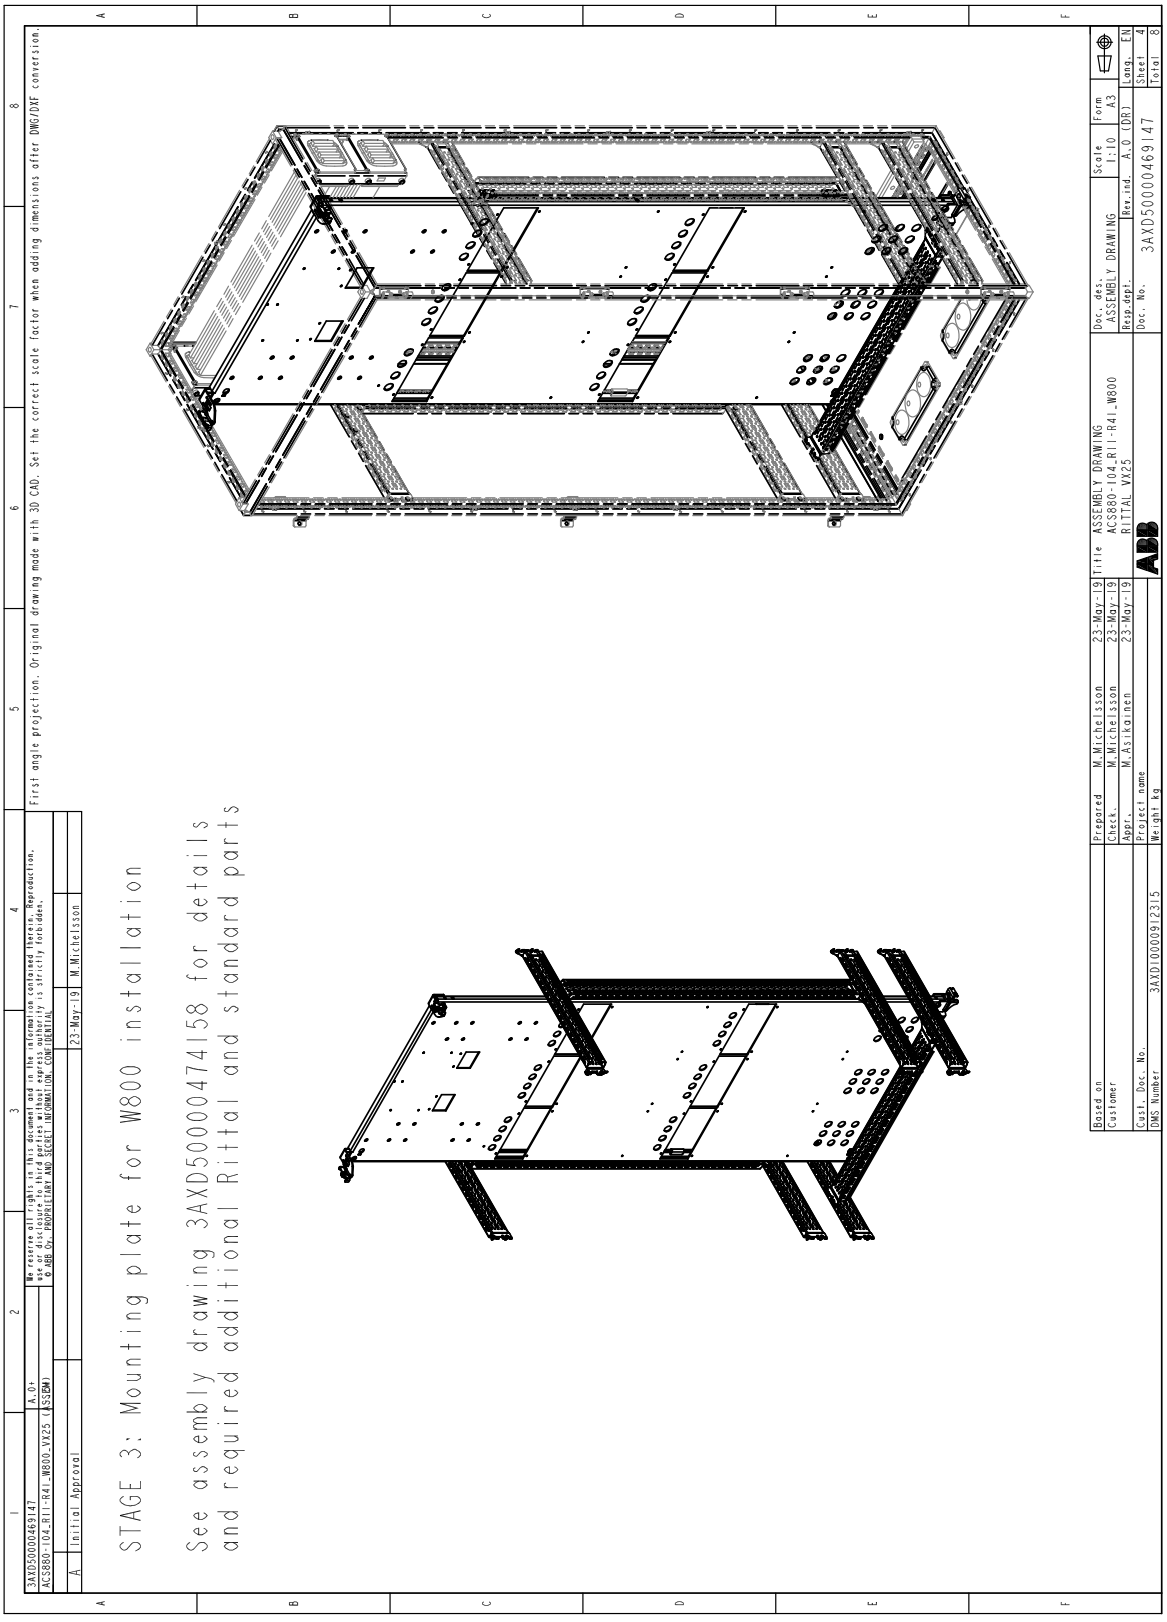


Stage 4: Installation of DC busbars

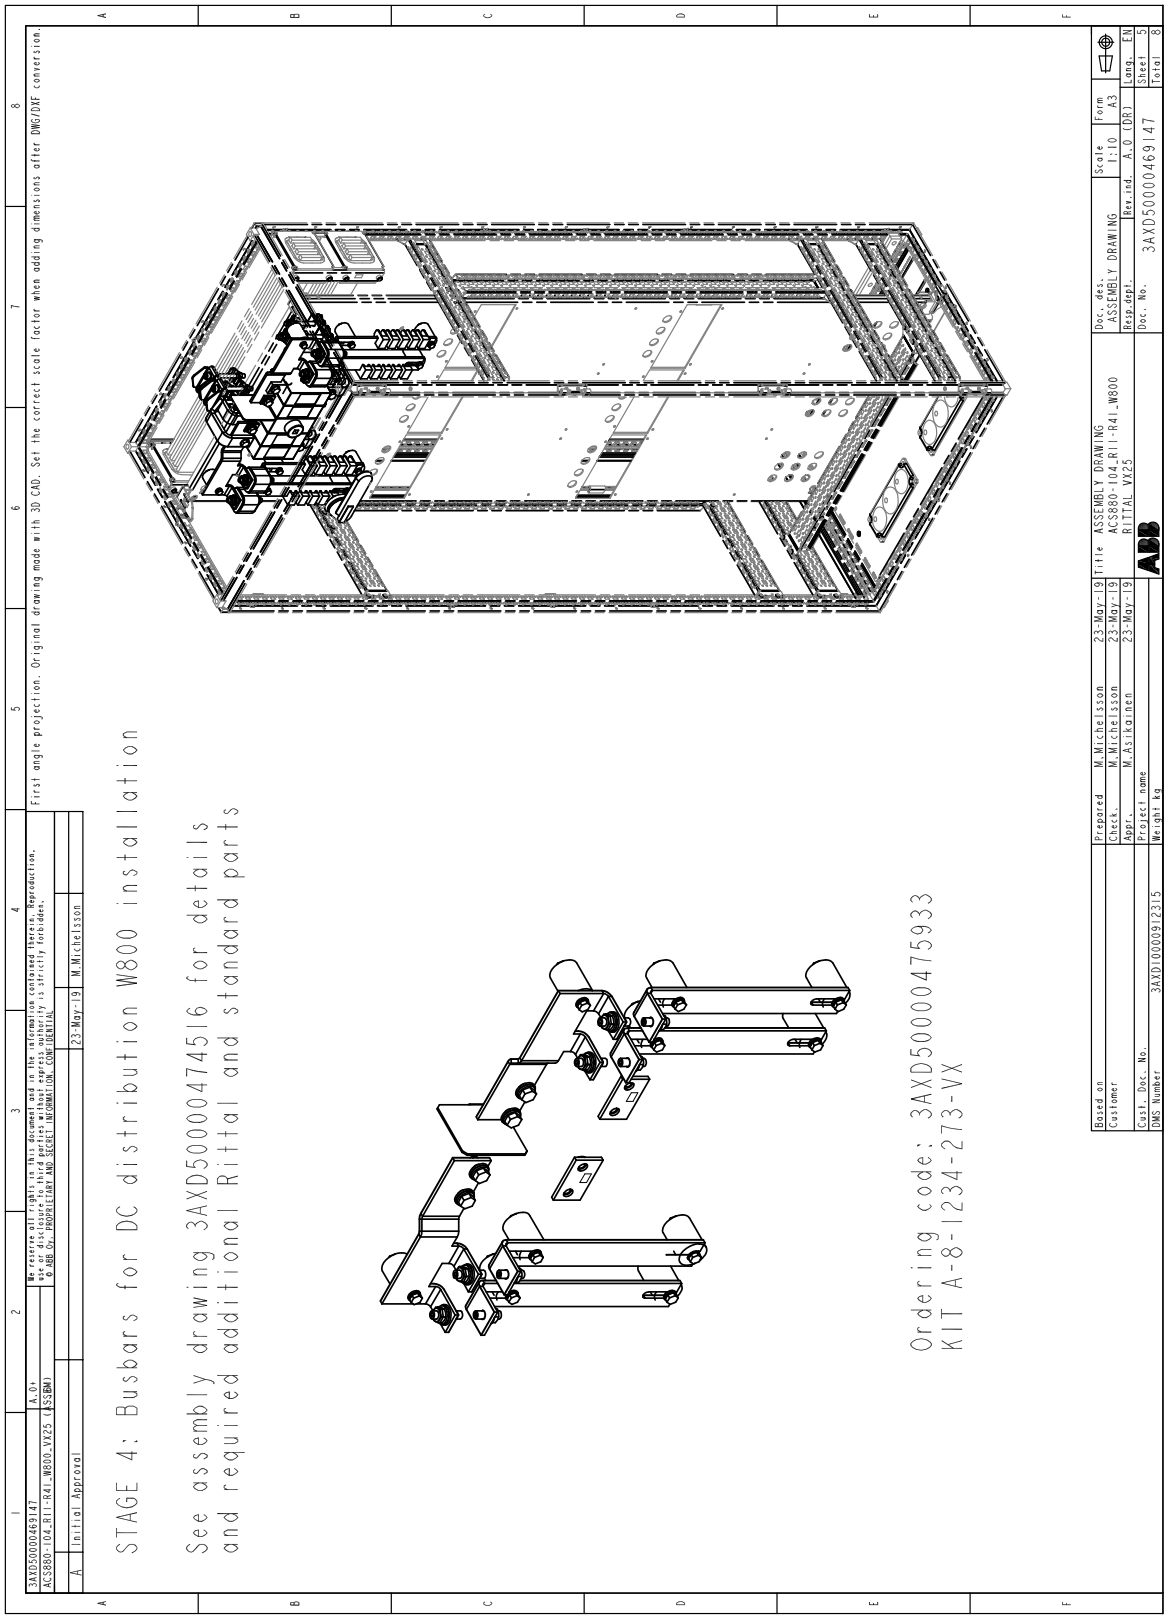


Stage 5: Installation of mounting plate shrouds

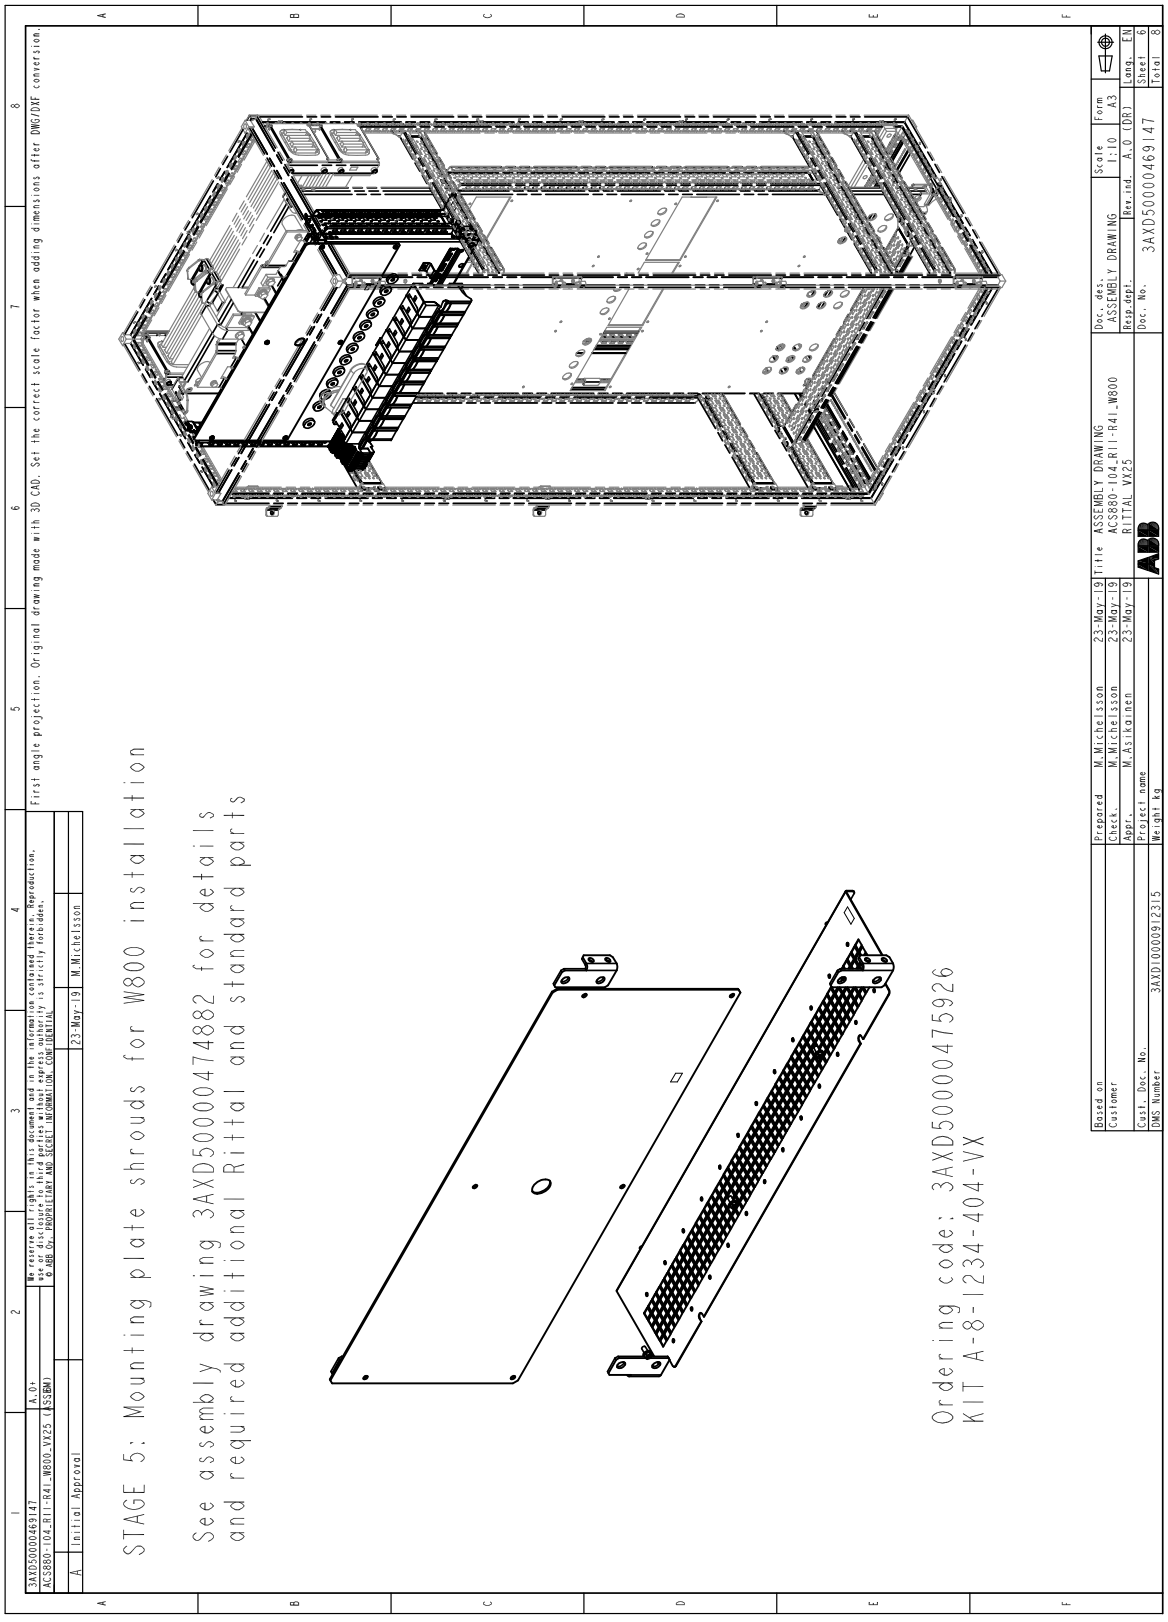


Stage 6: Installation of inverter modules and air guides

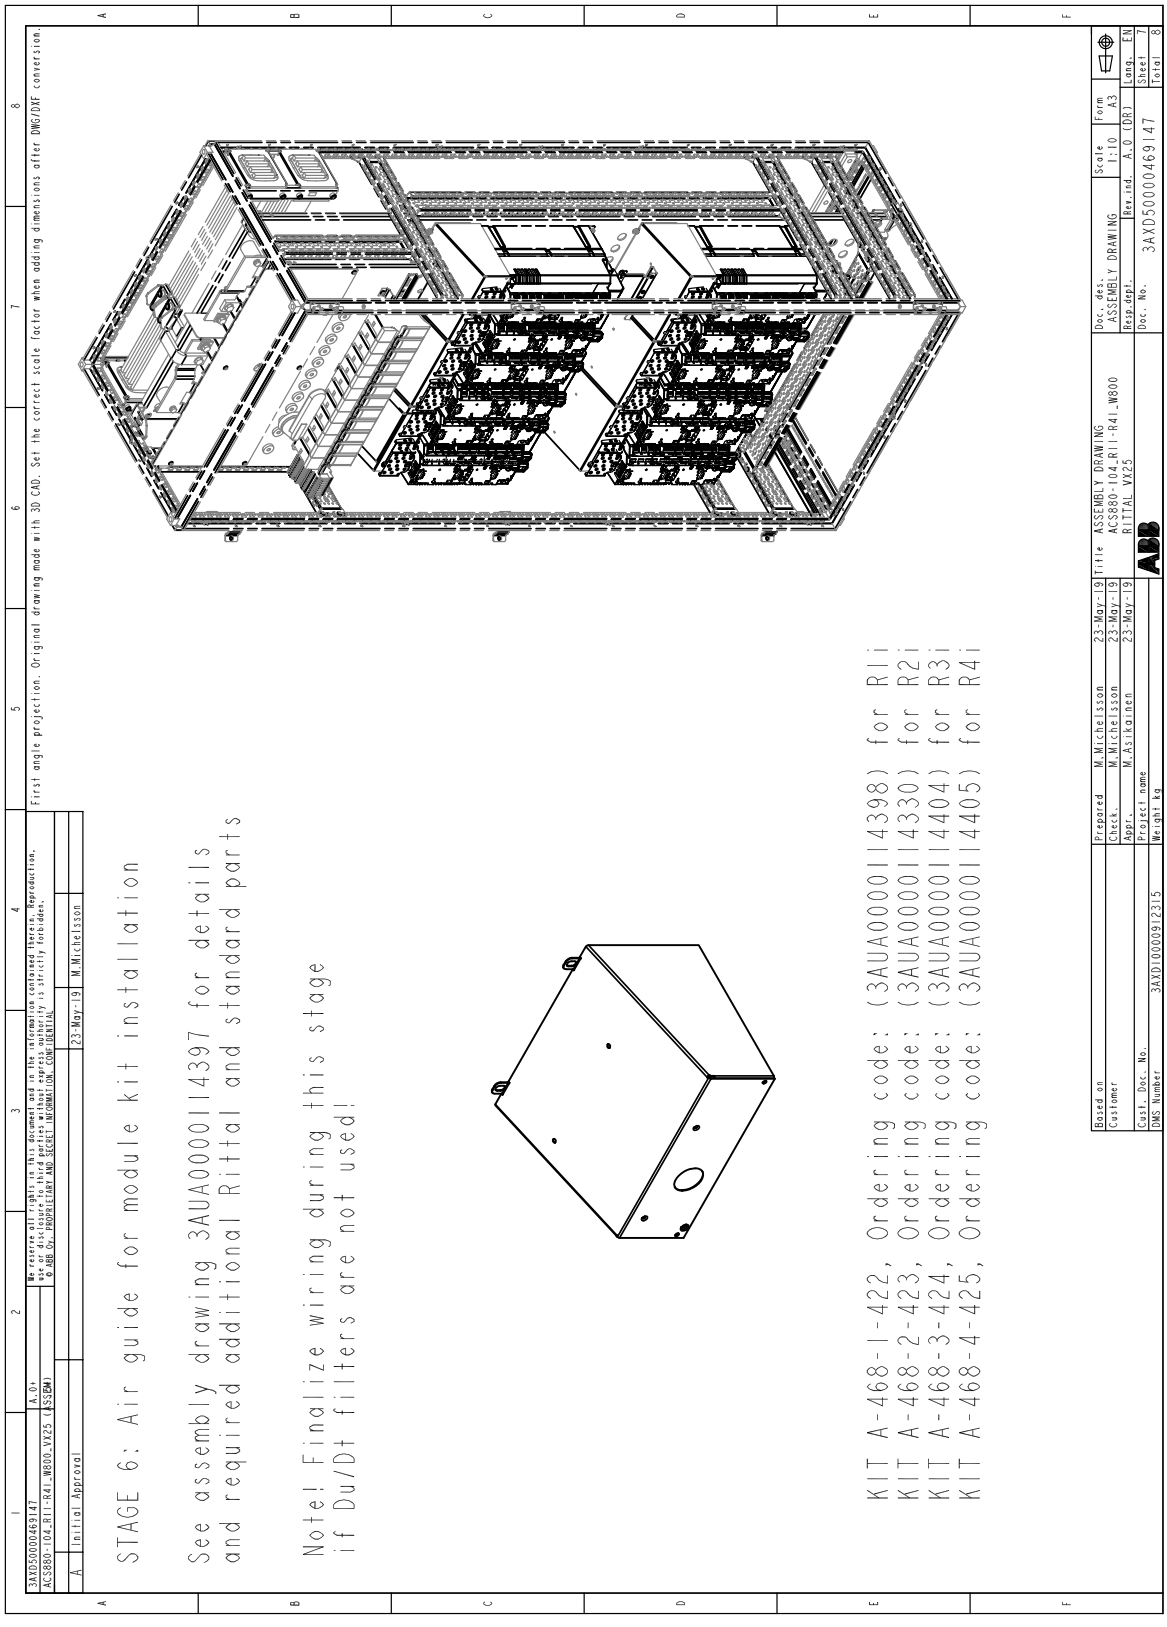

Stage 7: Installation of du/dt filters

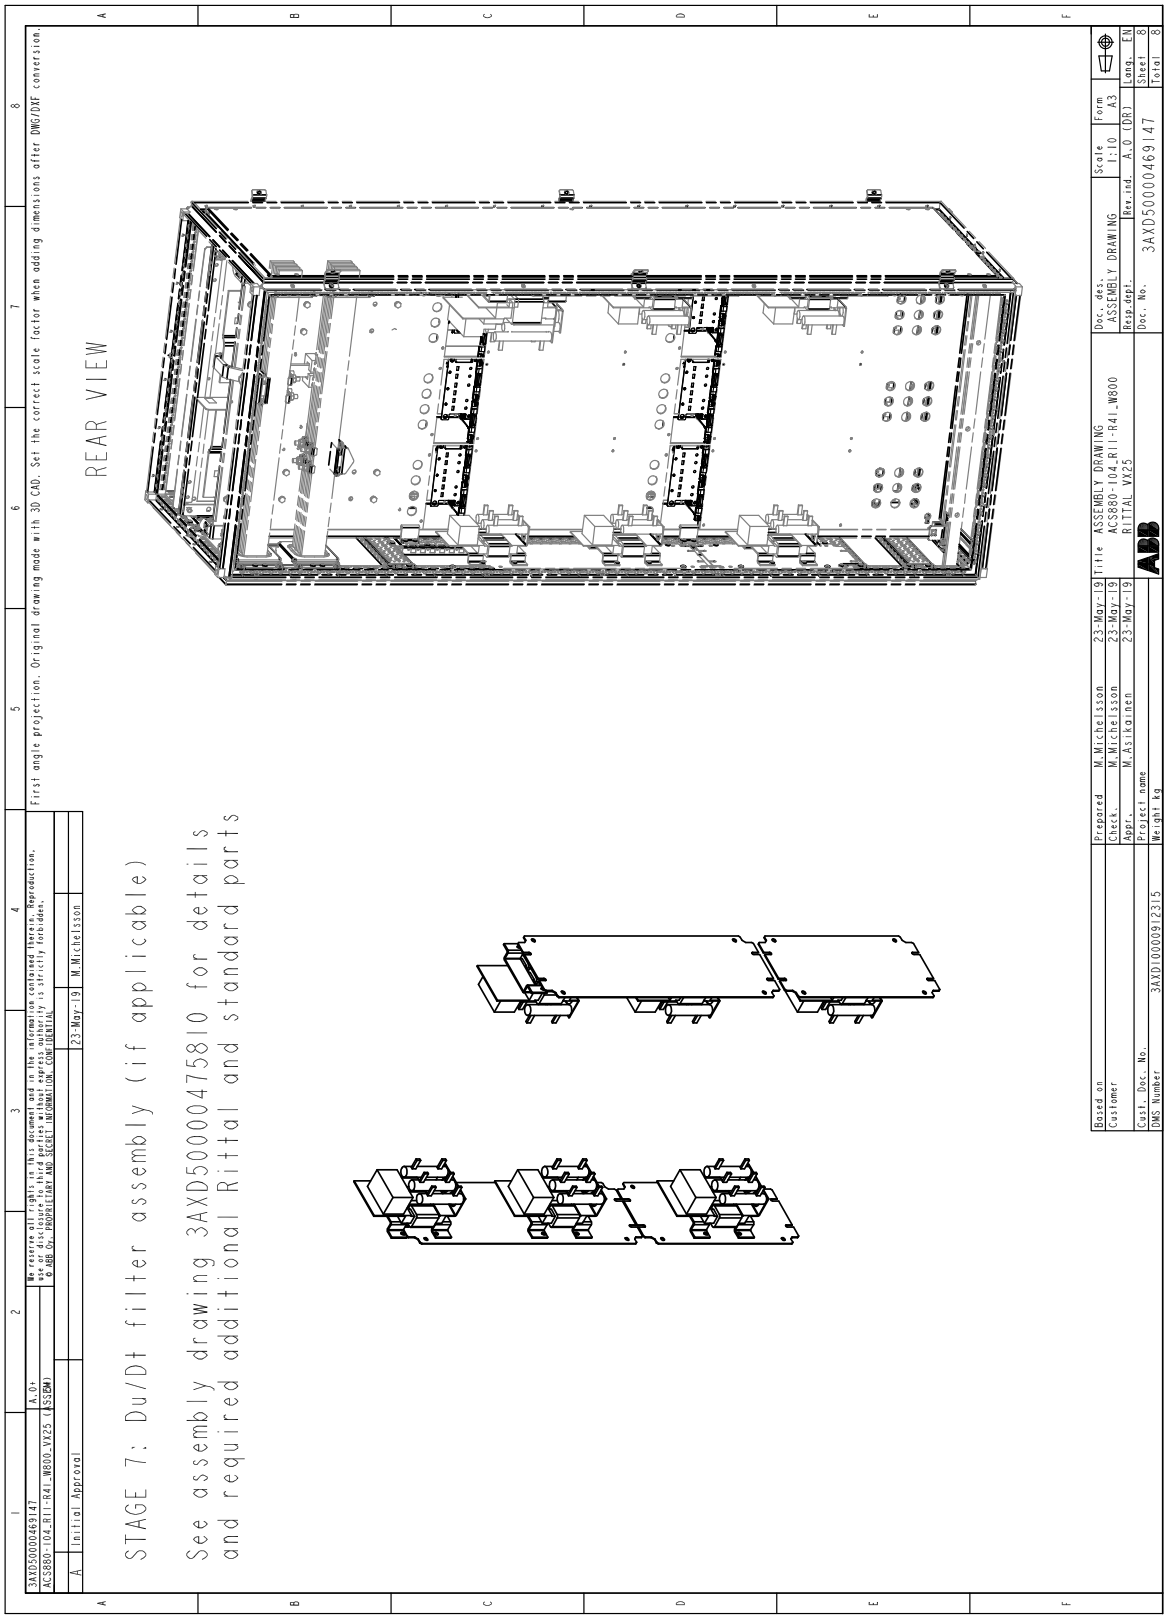

R5i modules in a 400 mm wide Rittal VX25 enclosure

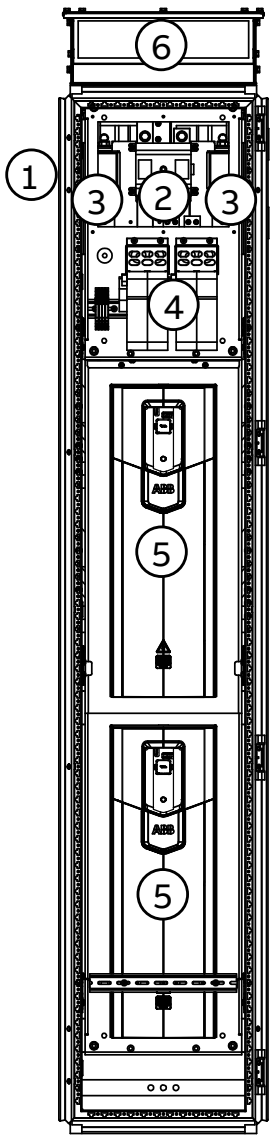


Description
Cubicle including: 1. DC input 2. DC switch/disconnector for all inverter modules 3. Main DC fuses 4. DC fuse disconnectors for each inverter module 5. Inverter modules 6. Air outlet with exhaust fan


Installation stages

#	Installation stage	Instruction code	Kit code	Kit ordering code
1	Common parts:			
	Baying parts	3AXD50000336340	-	-
	PE busbars	3AXD50000336104	-	-
	Divider panel	3AXD50000336692	-	-
	DC bus support kit	3AXD50000333639	A-468-X-001-VX	3AXD50000333387
2	Bottom plate	-	-	-
3	Mounting plate	3AXD50000455188	-	-
4	DC busbars	3AXD50000458110	A-4-5-276-VX	3AXD50000456802
5	Mounting plate shrouds	3AXD50000450060	A-4-1234-403-VX	3AXD50000456772
	Fuse base shroud	3AXD50000458424	A-X-5-356-VX	3AXD50000456796
6	Inverter modules	-	-	-
7	du/dt filters	3AXD50000462094	-	See AC-side components (page 280)


Overview of kits

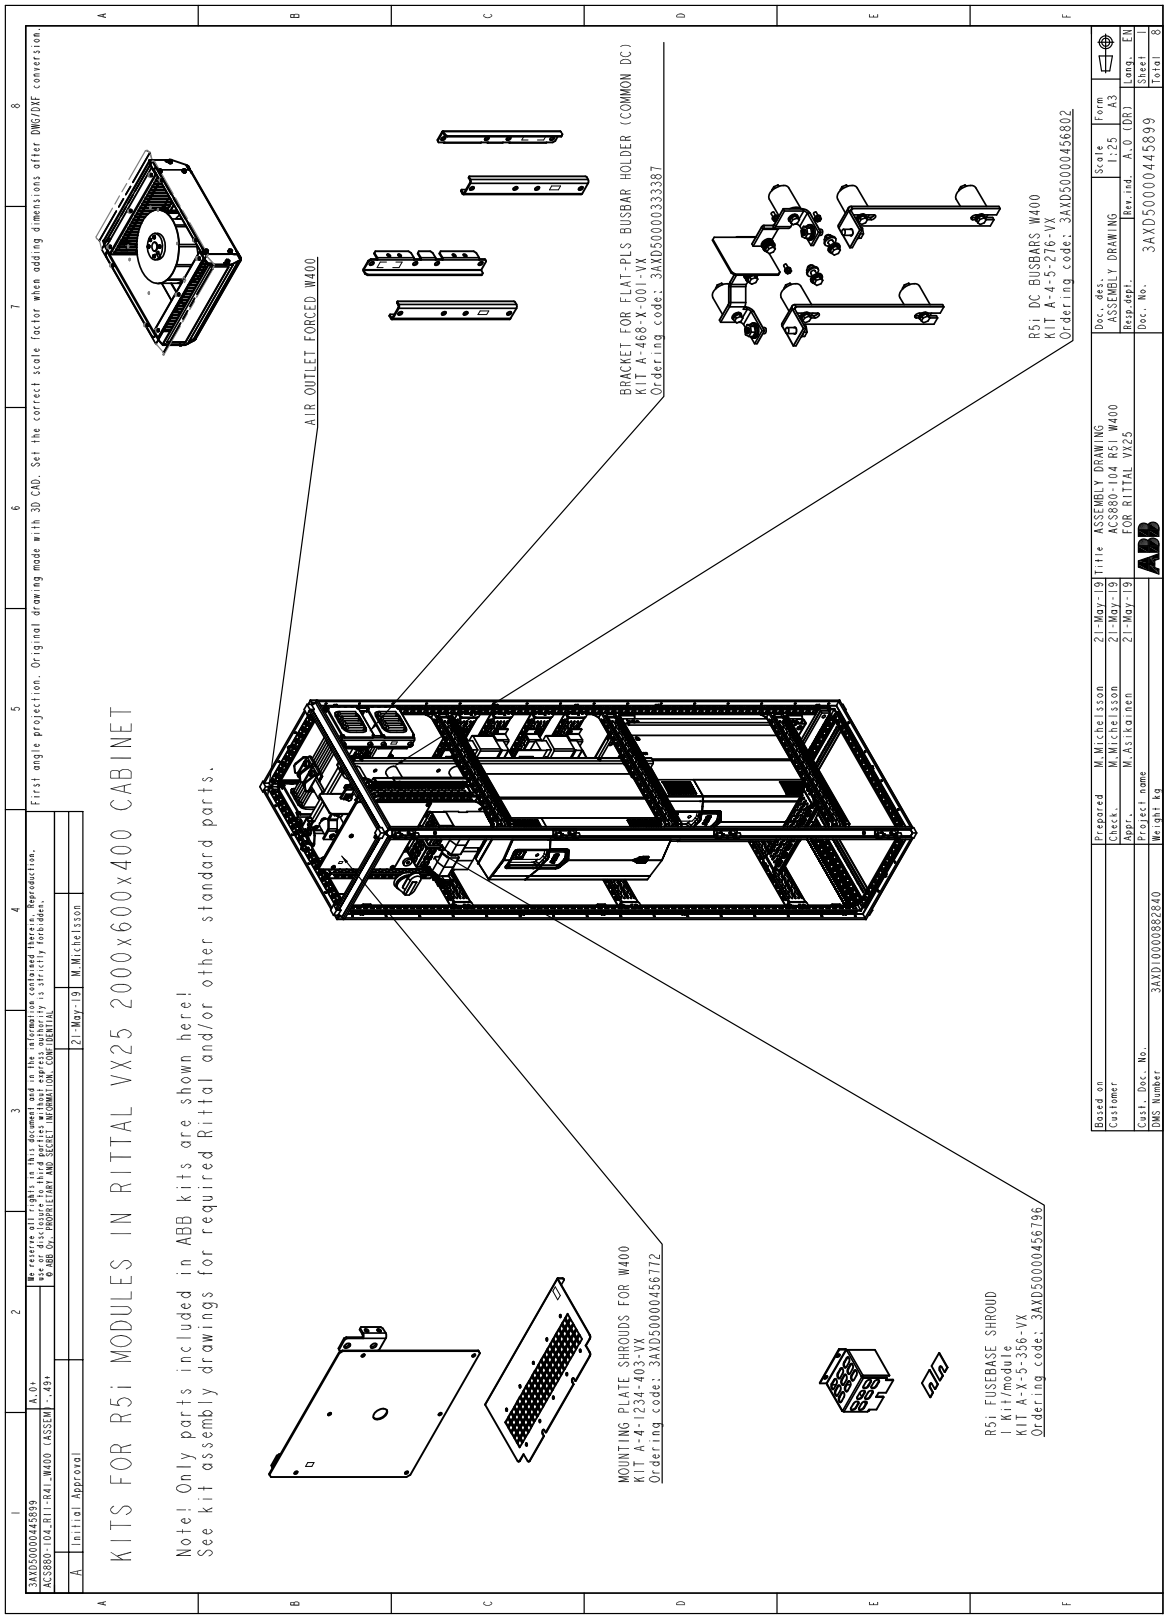


Stage 1: Installation of common parts

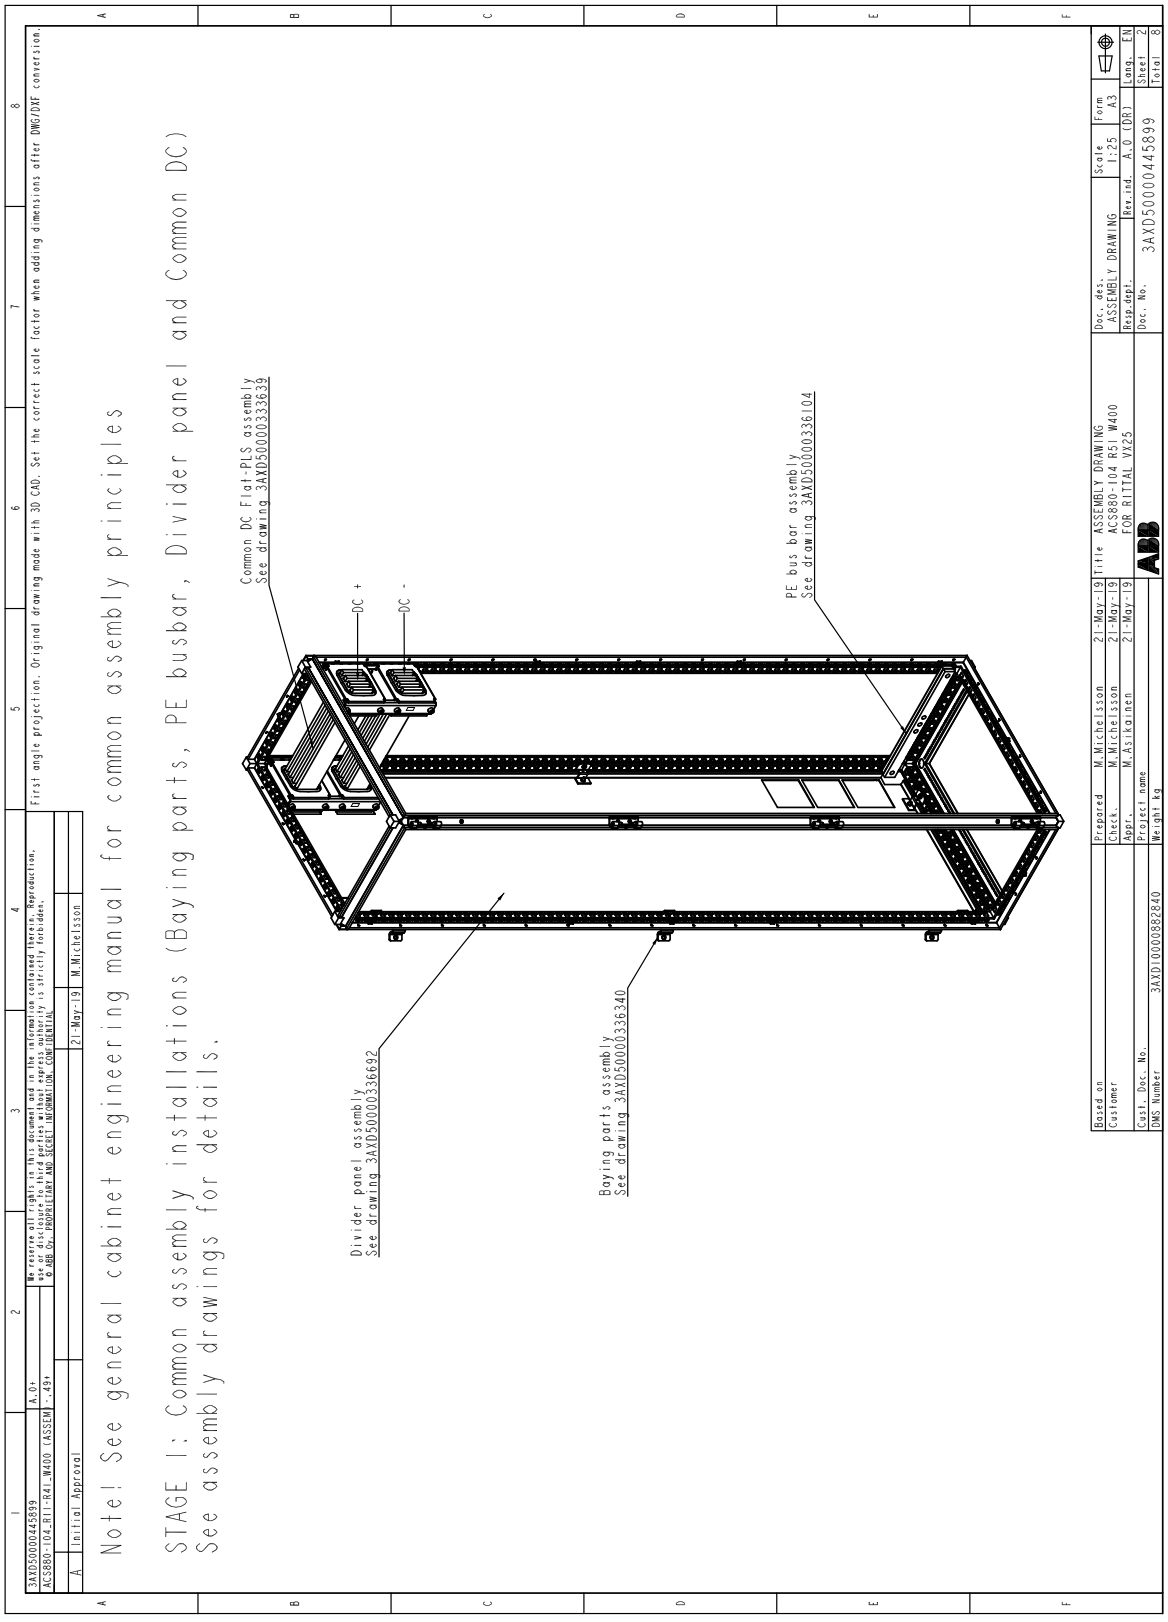


Stage 2: Installation of bottom plate

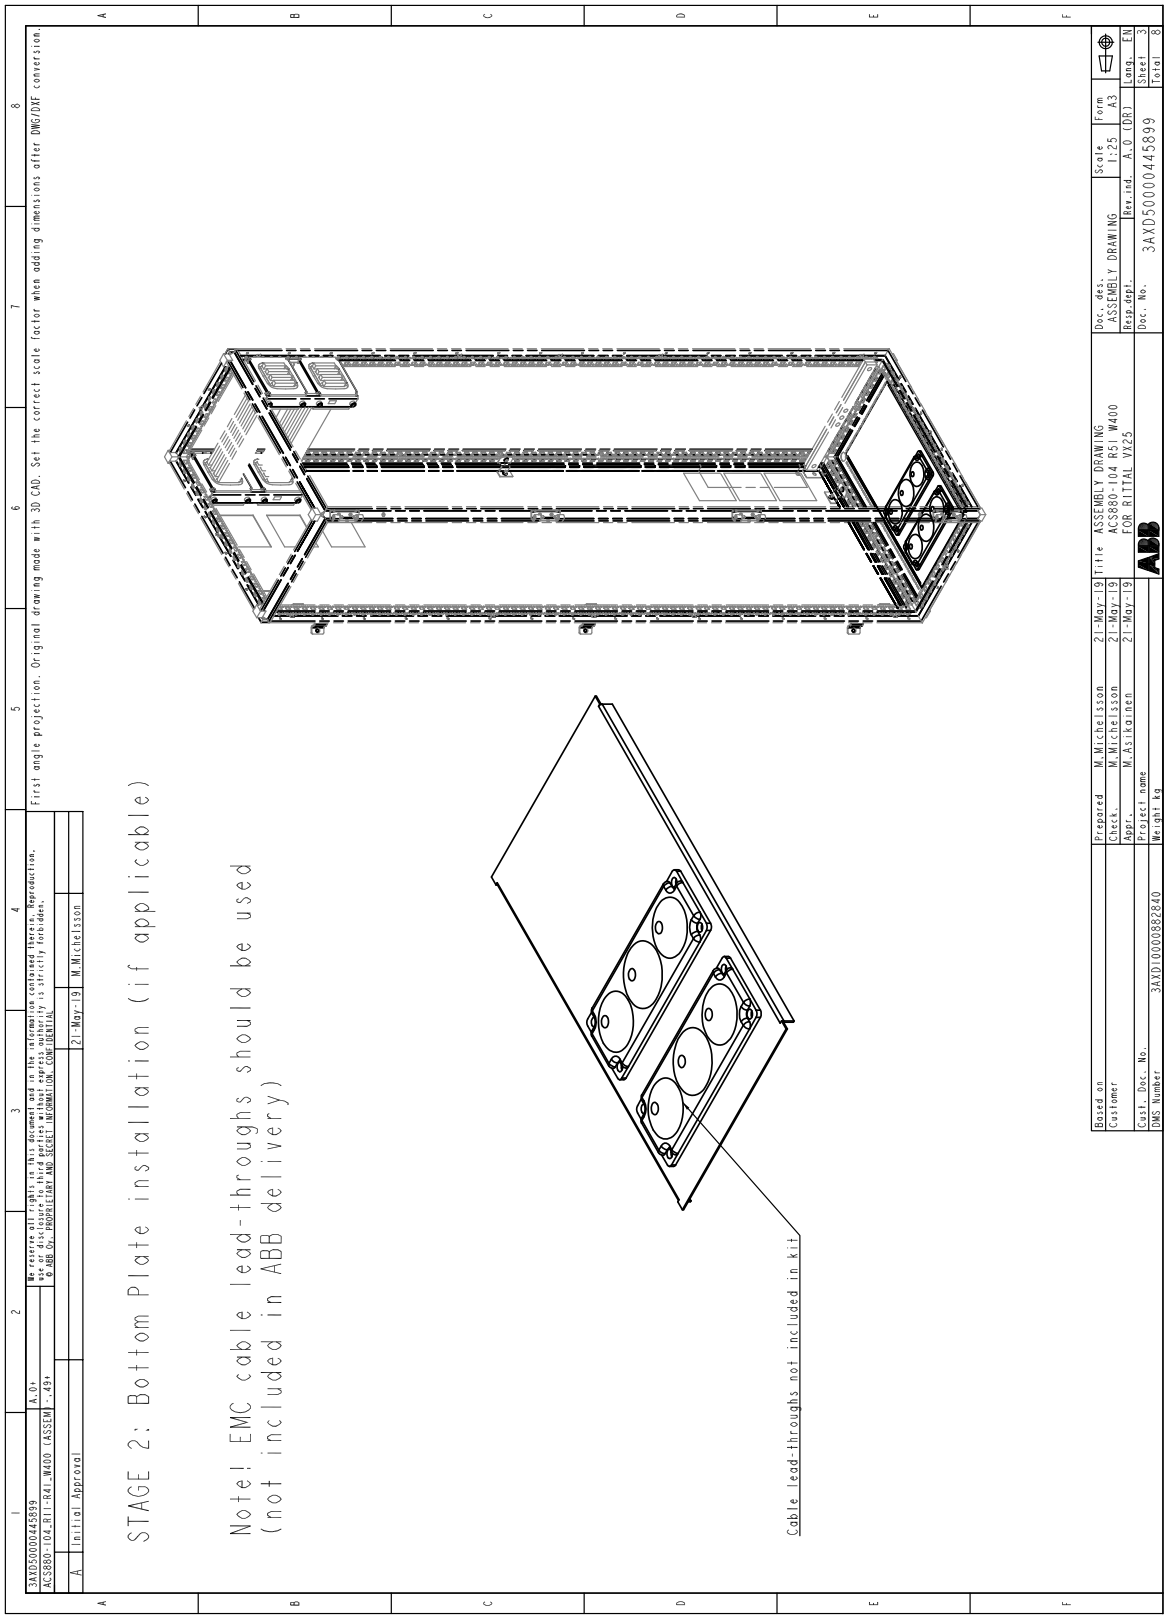


Stage 3: Installation of inverter module mounting plate

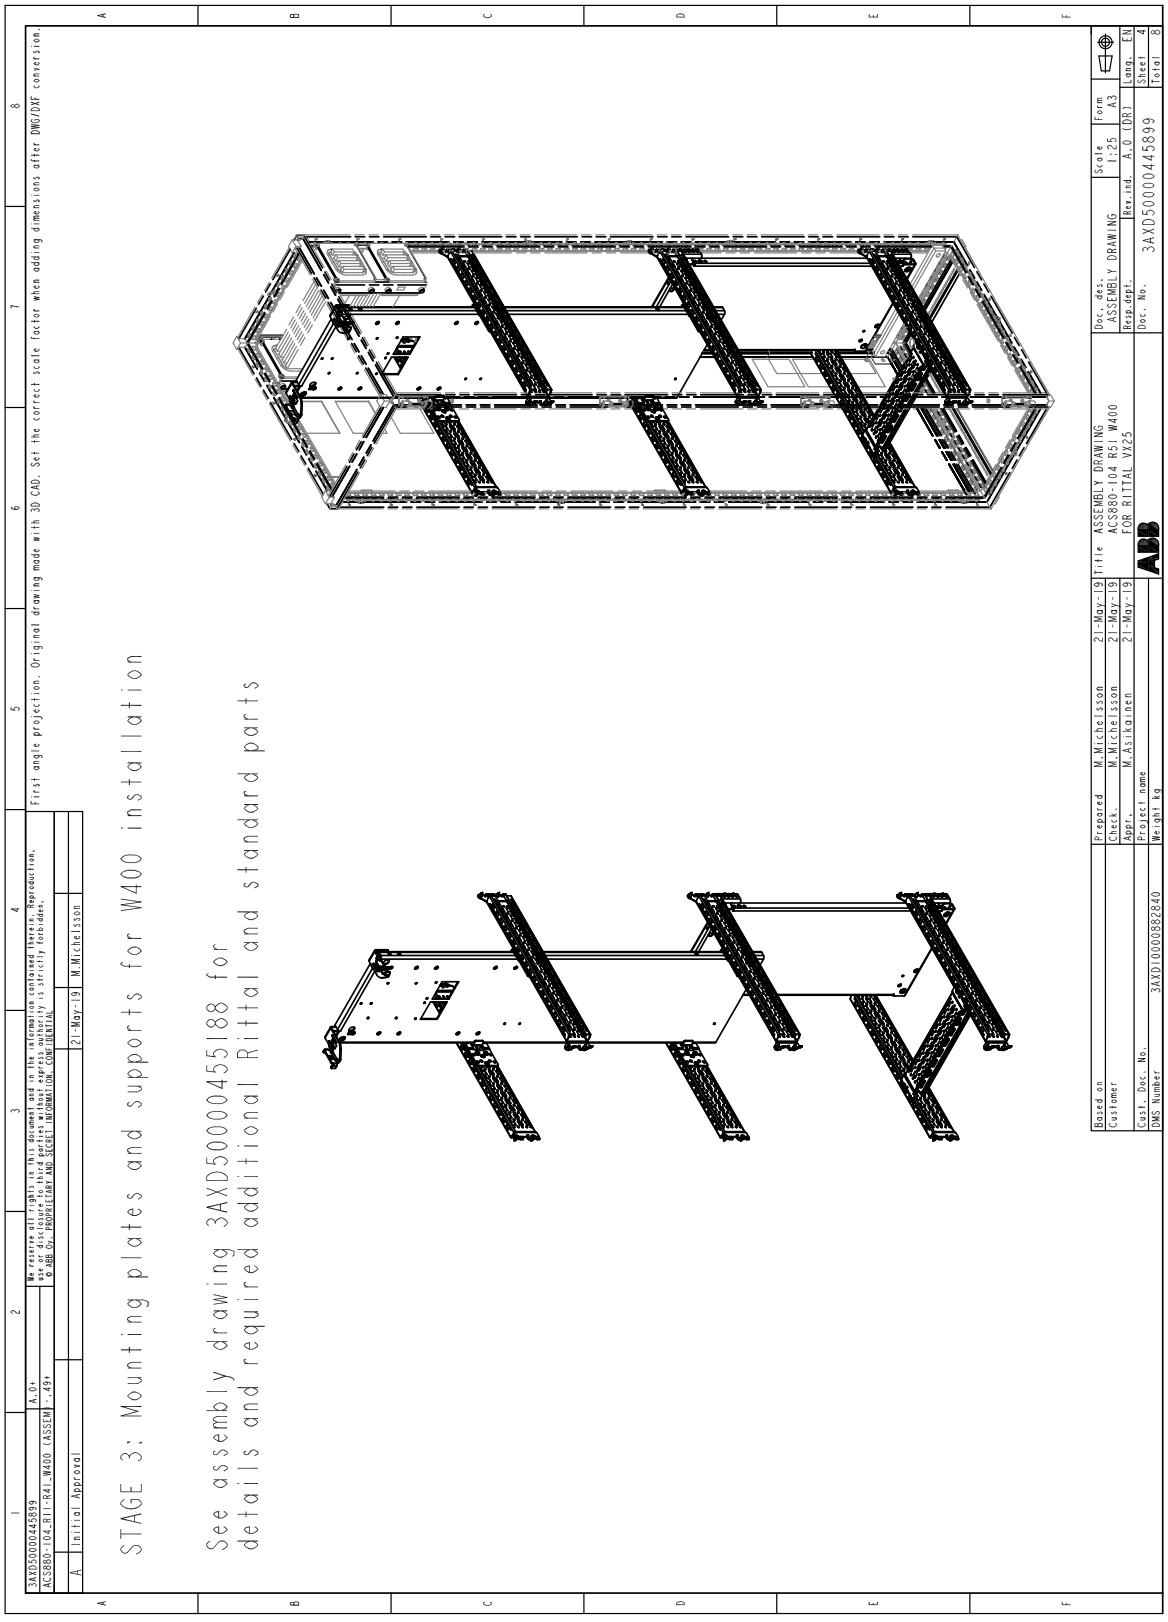


Stage 4: Installation of DC busbars

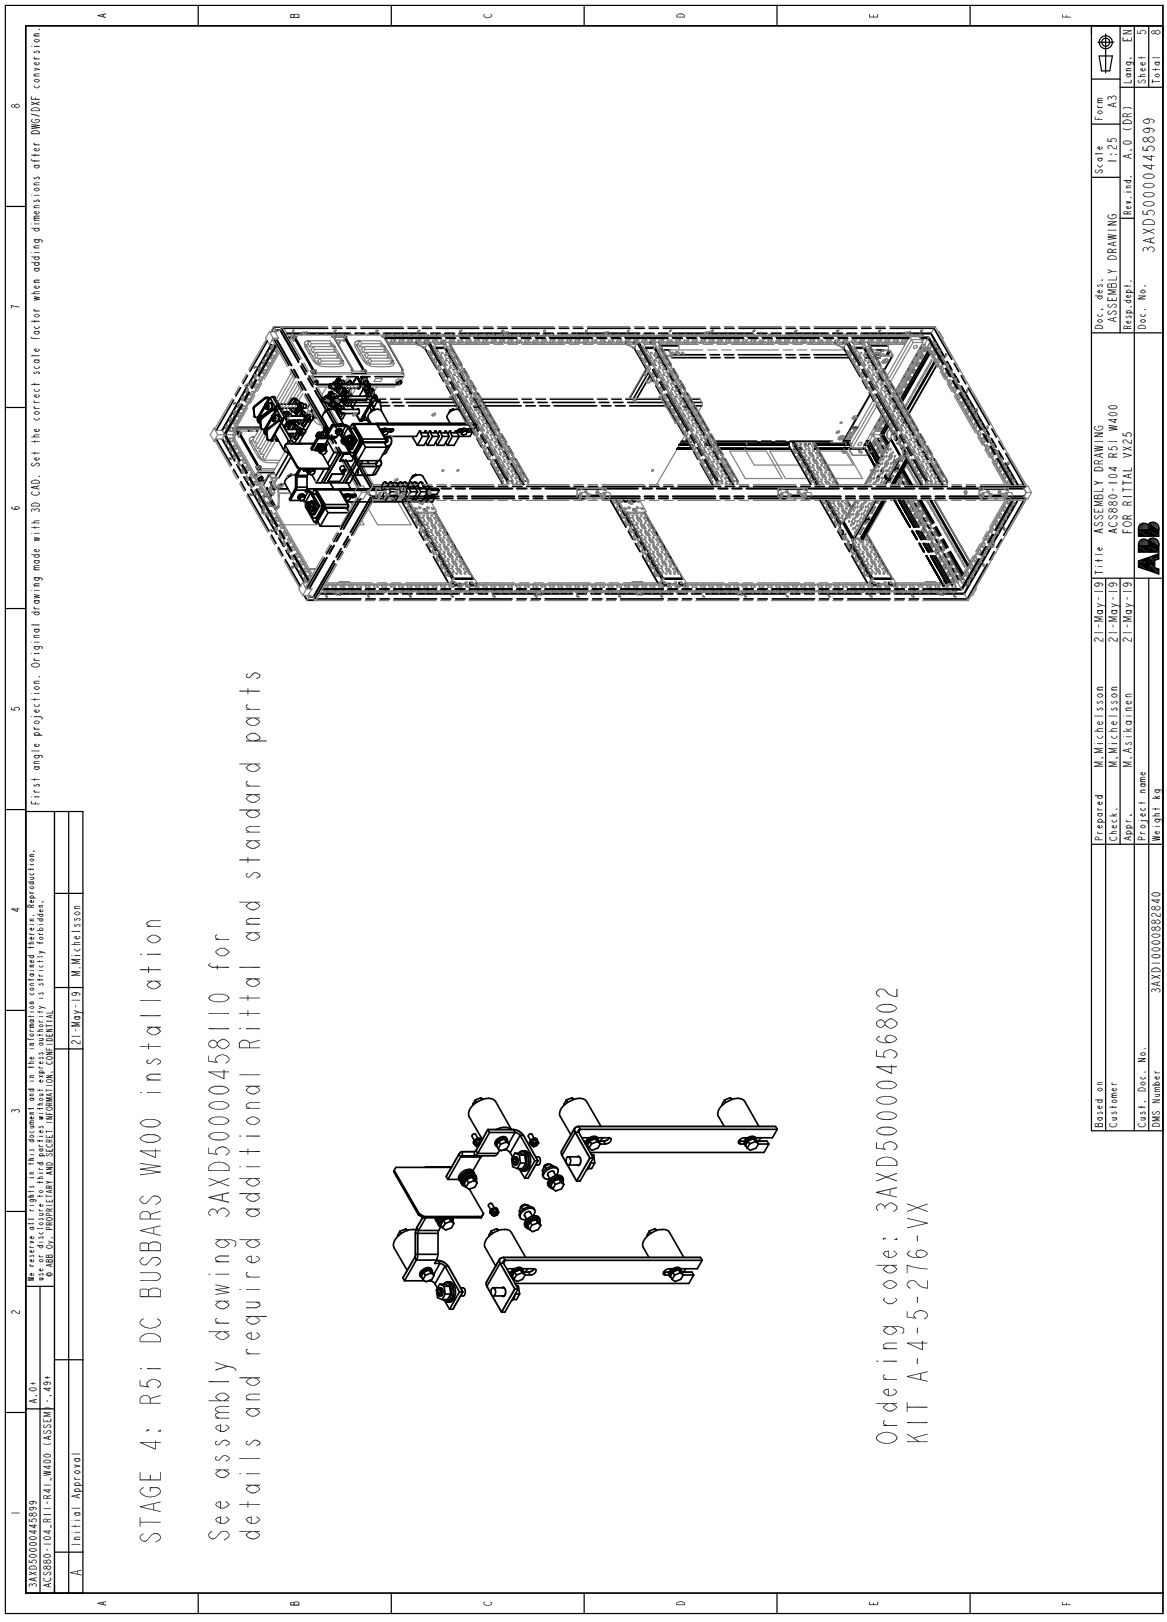


Stage 5: Installation of front mounting plate

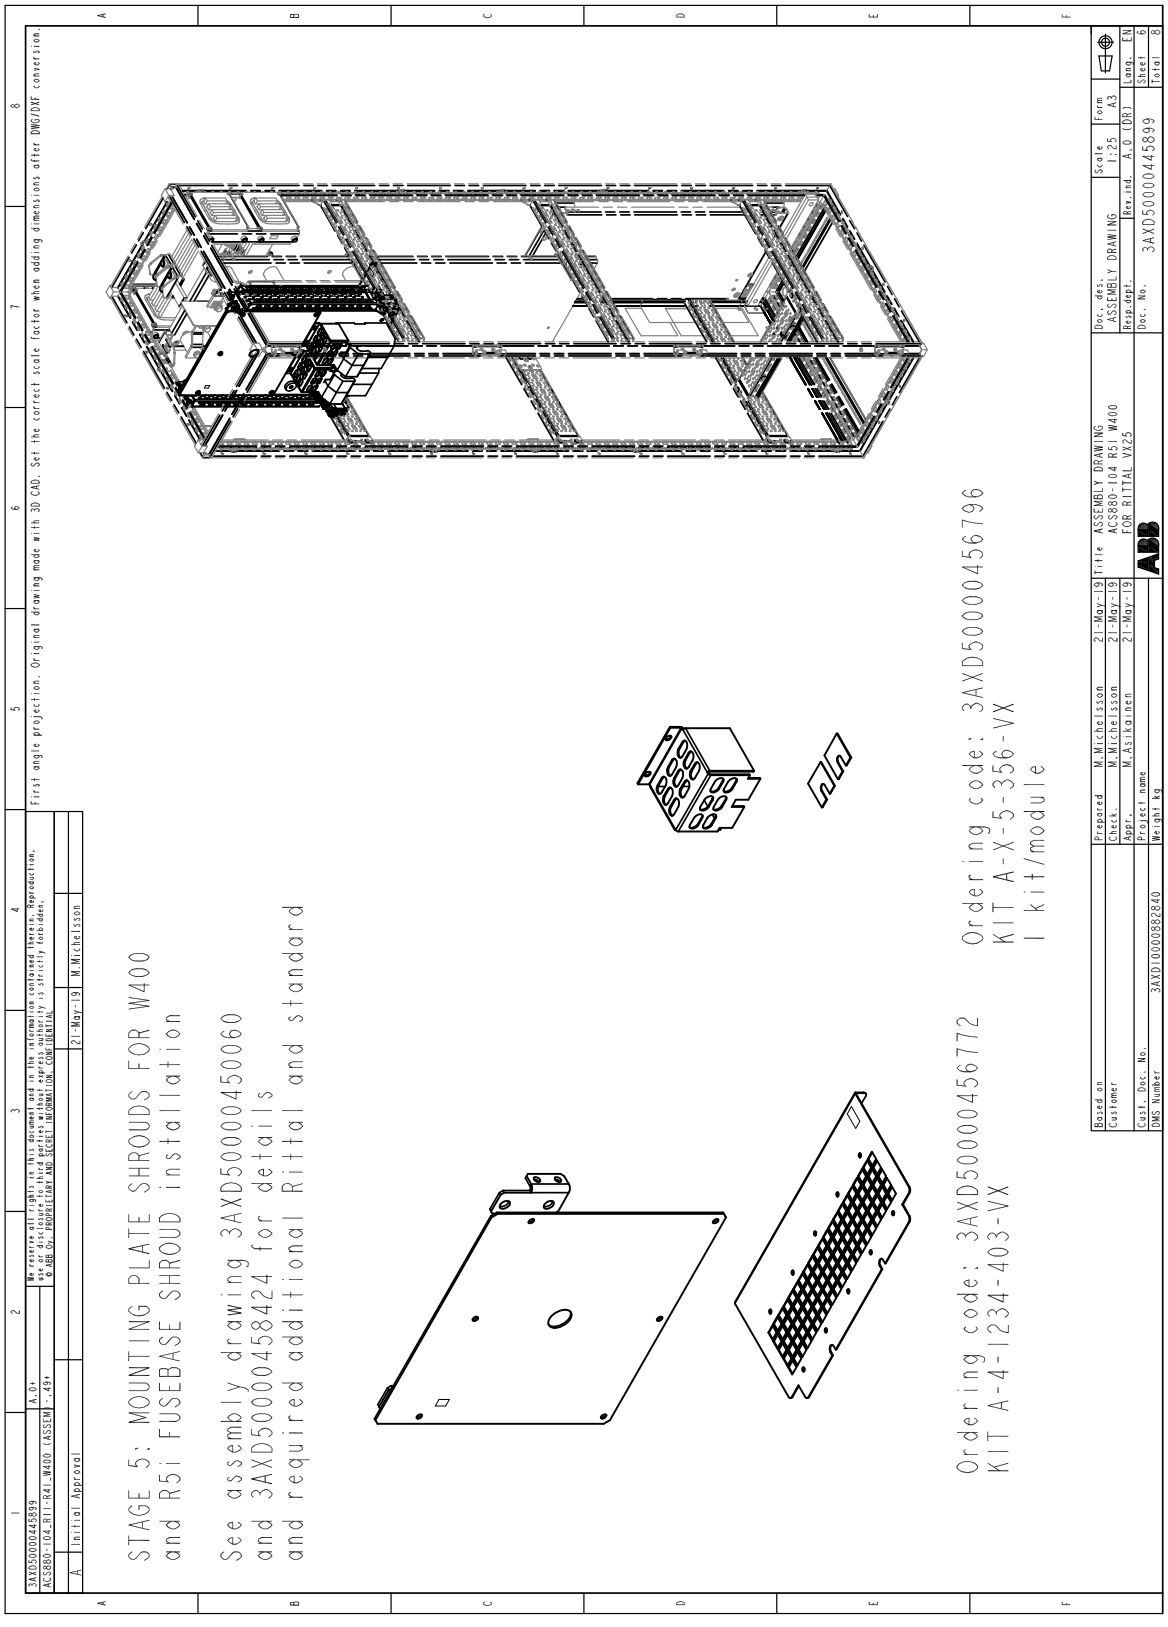


Stage 6: Installation of inverter modules

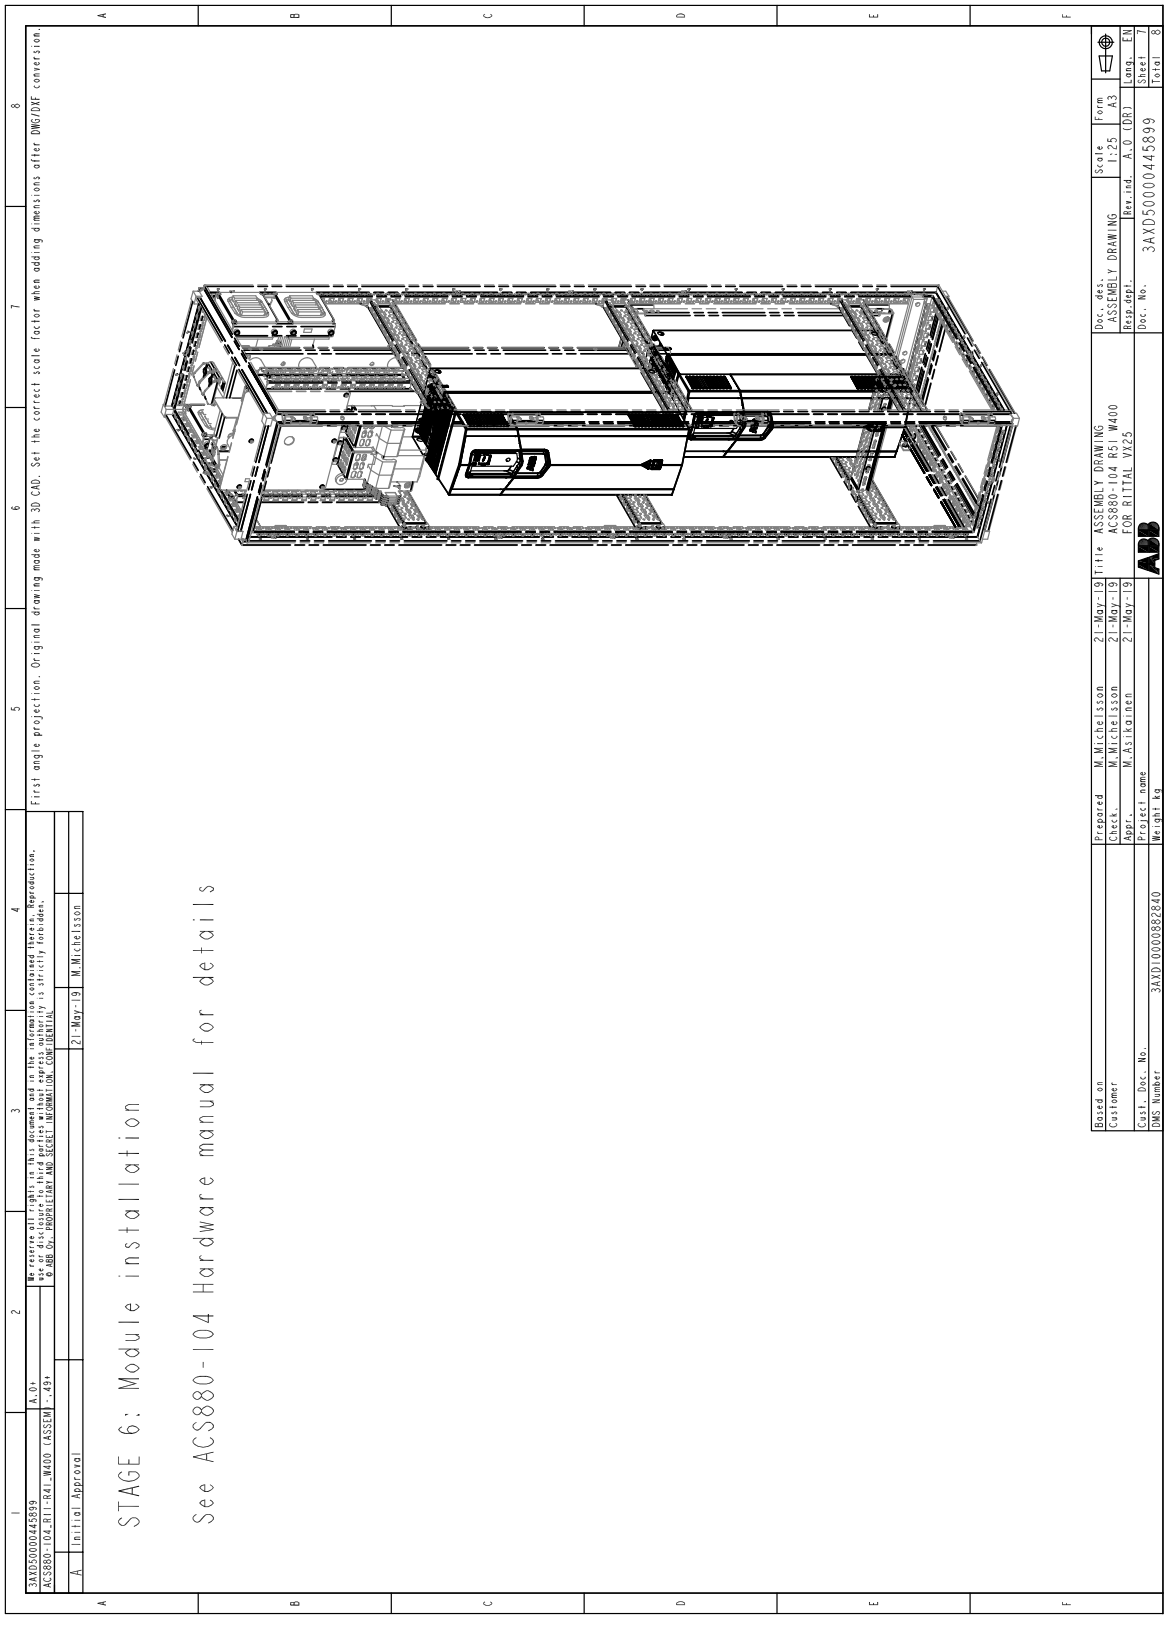

Stage 7: Installation of du/dt filters

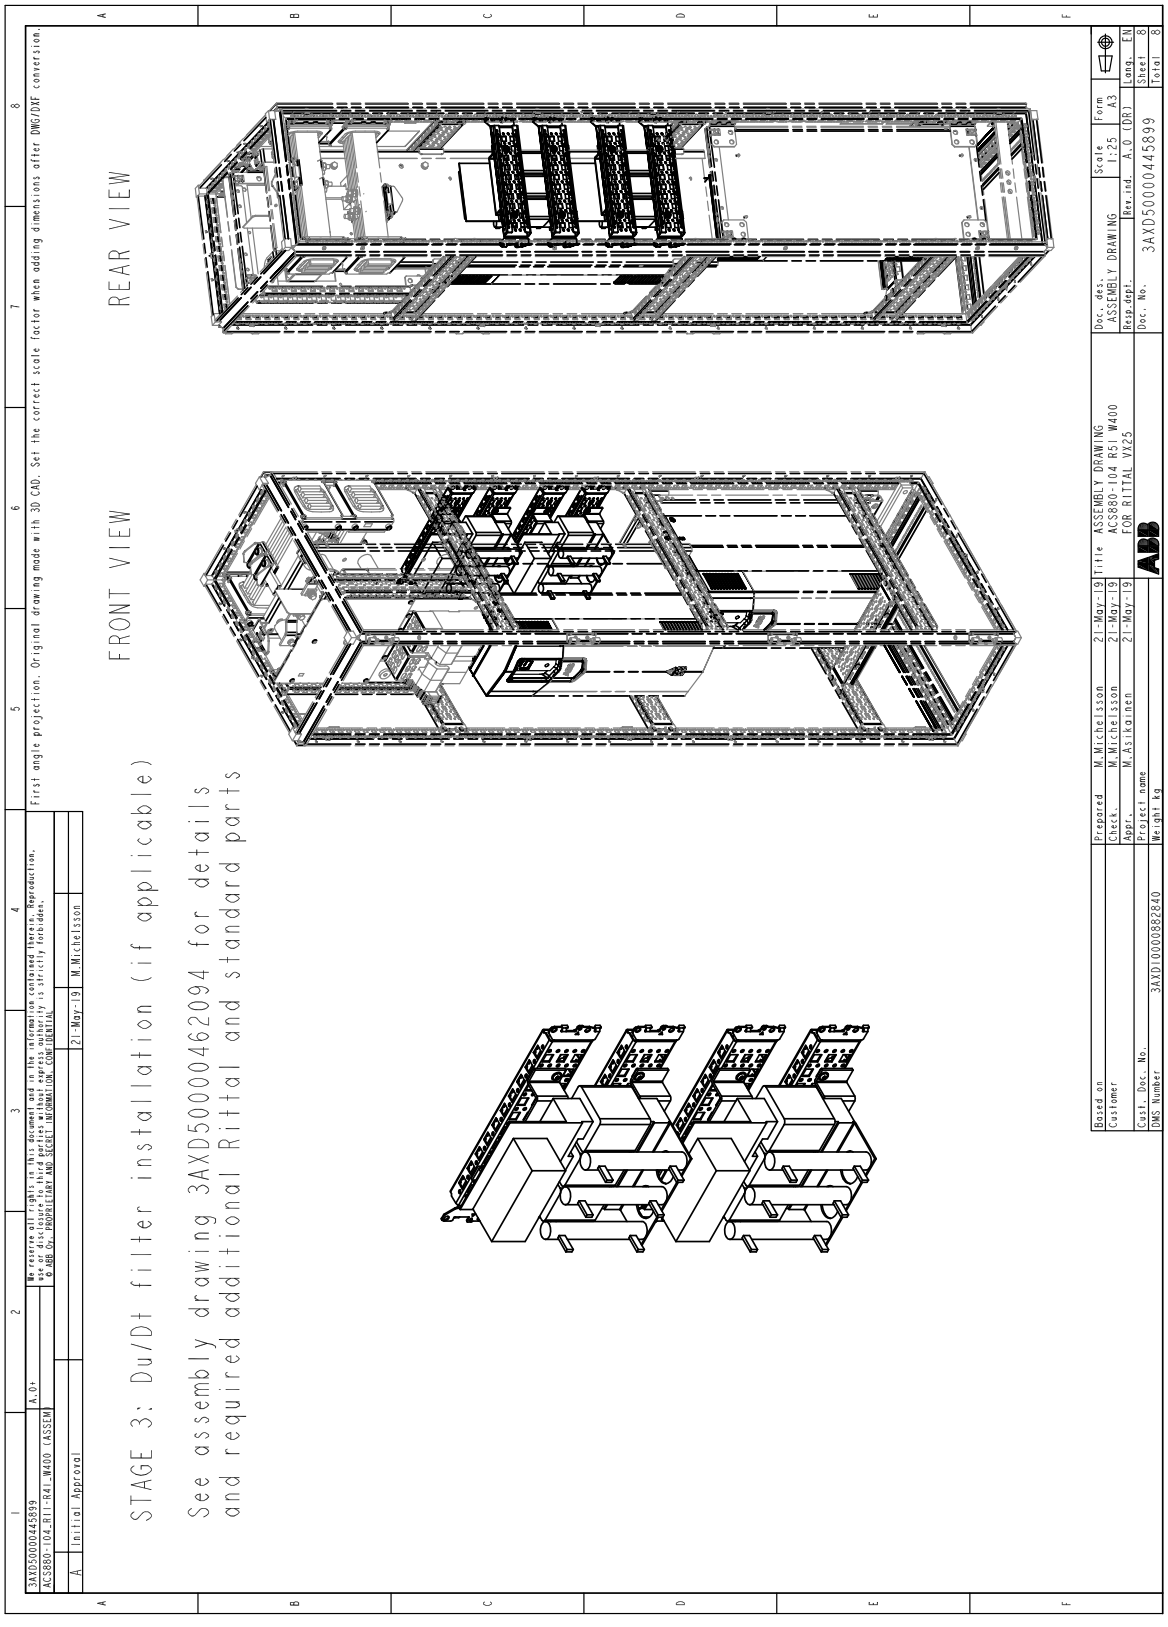

R5i modules in a 600 mm wide Rittal VX25 enclosure

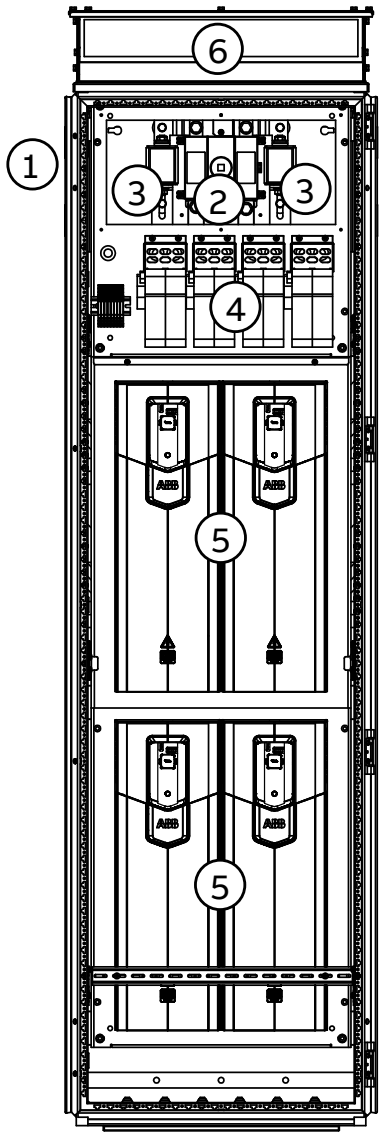


Description
Cubicle including: 1. DC input 2. DC switch/disconnector for all inverter modules 3. Main DC fuses 4. DC fuse disconnectors for each inverter module 5. Inverter modules 6. Air outlet with exhaust fan


Installation stages

#	Installation stage	Instruction code	Kit code	Kit ordering code
1	Common parts:			
	Baying parts	3AXD50000336340	-	-
	PE busbars	3AXD50000336104	-	-
	Divider panel	3AXD50000336692	-	-
	DC bus support kit	3AXD50000333639	A-468-X-001-VX	3AXD50000333387
2	Bottom plate	-	-	-
3	Mounting plate	3AXD50000455188	-	-
4	DC busbars	3AXD50000461332	A-6-5-277-VX	3AXD50000456826
5	Mounting plate shrouds	3AXD50000461691	A-6-1234-402-VX	3AXD50000456819
	Fuse base shroud	3AXD50000458424	A-X-5-356-VX	3AXD50000456796
6	Inverter modules	-	-	-
7	du/dt filters	3AXD50000462094	-	See AC-side components (page 280)


Overview of kits

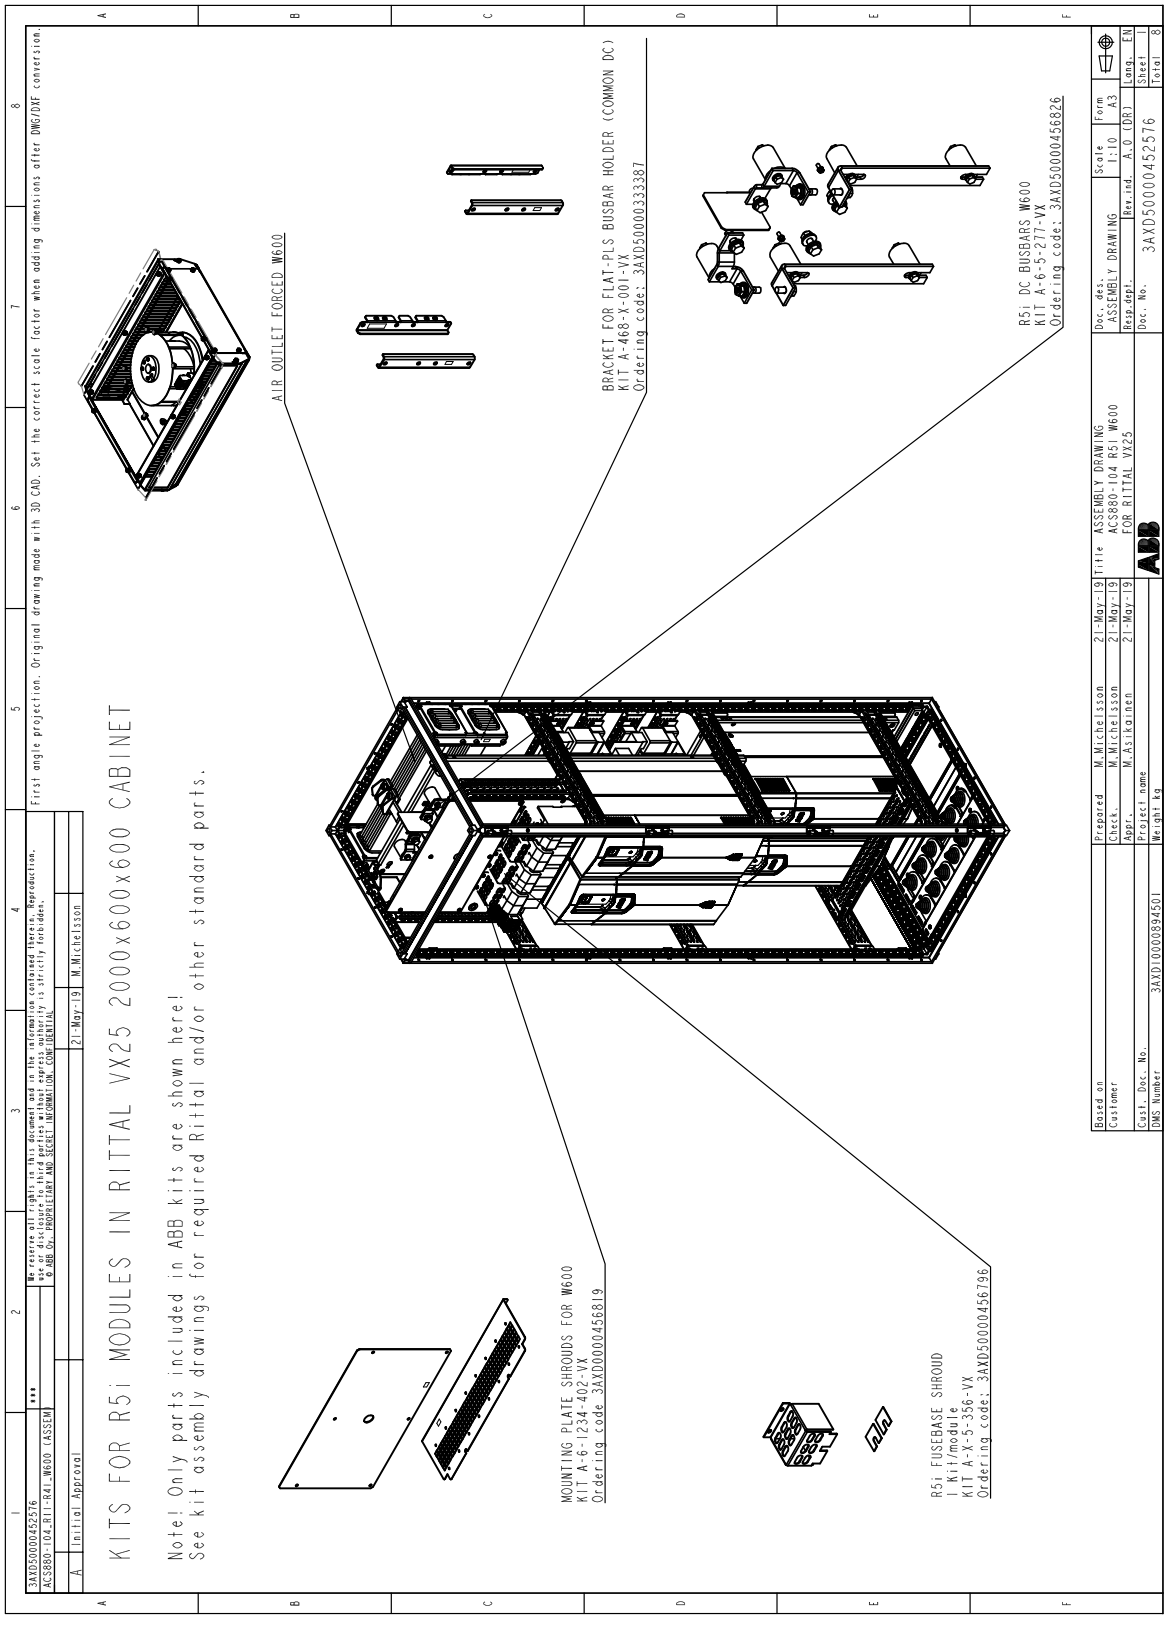


Stage 1: Installation of common parts

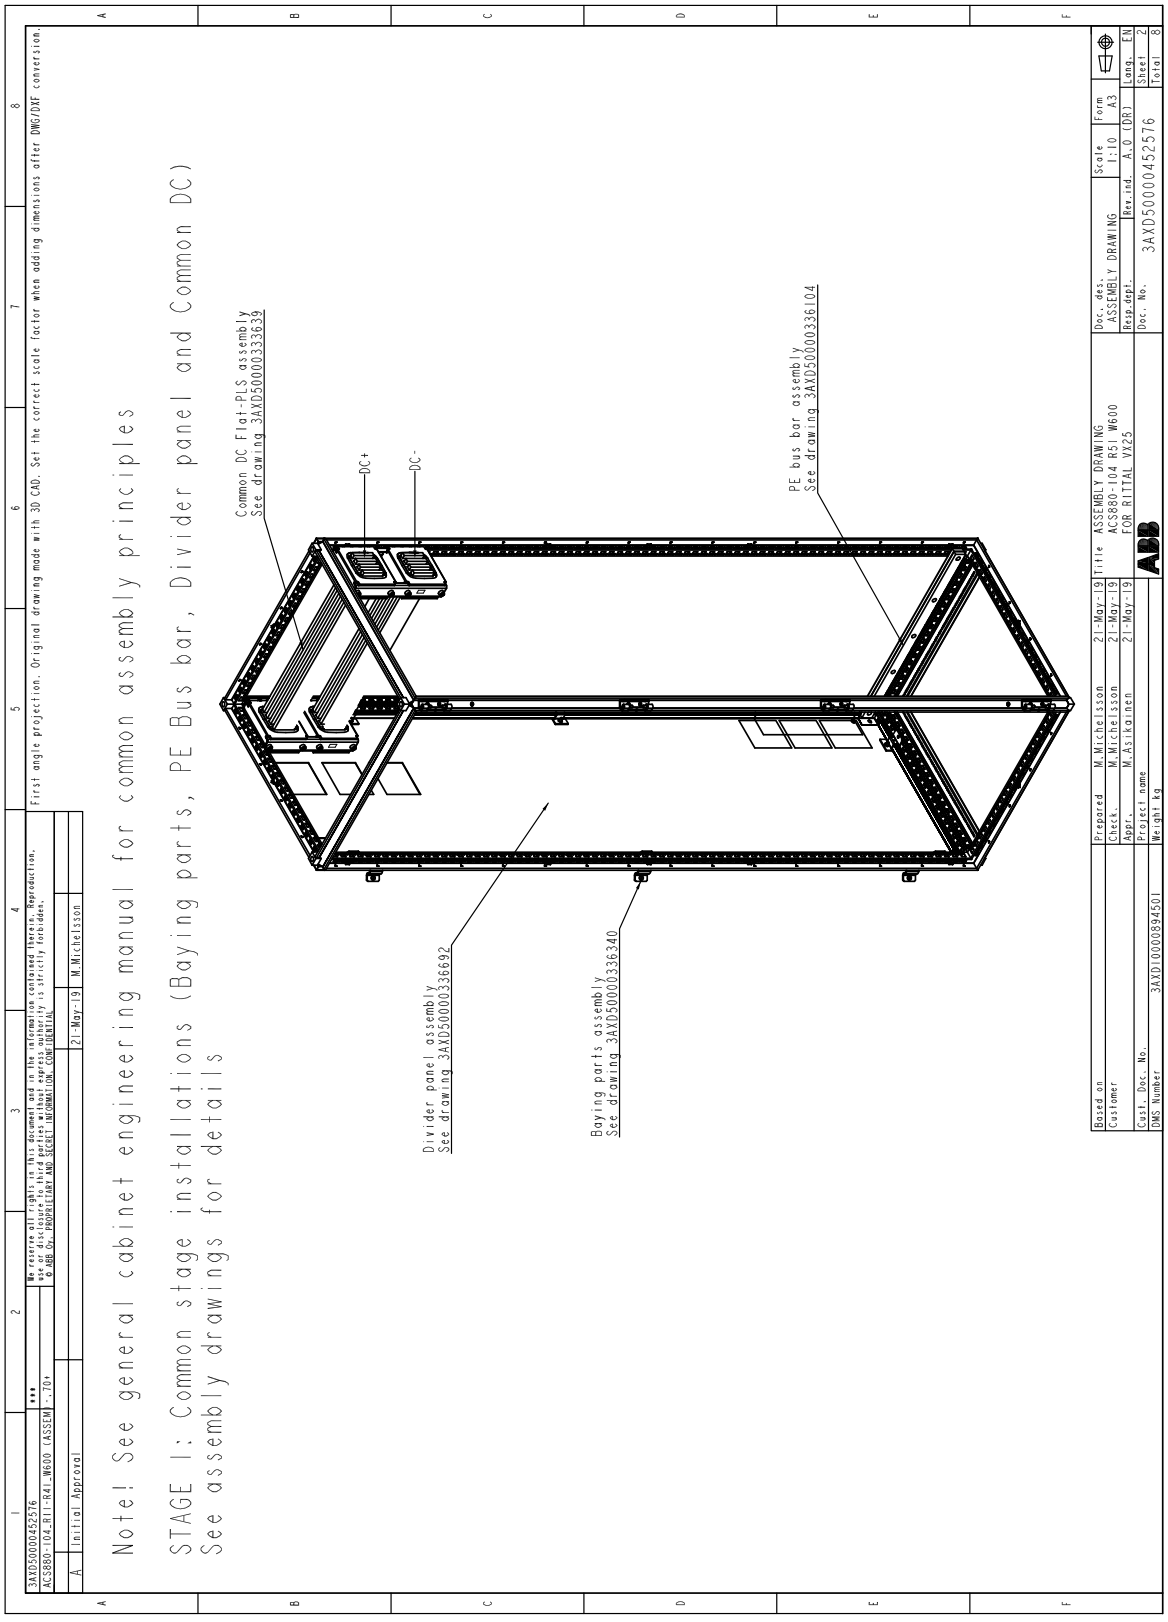


Stage 2: Installation of bottom plate

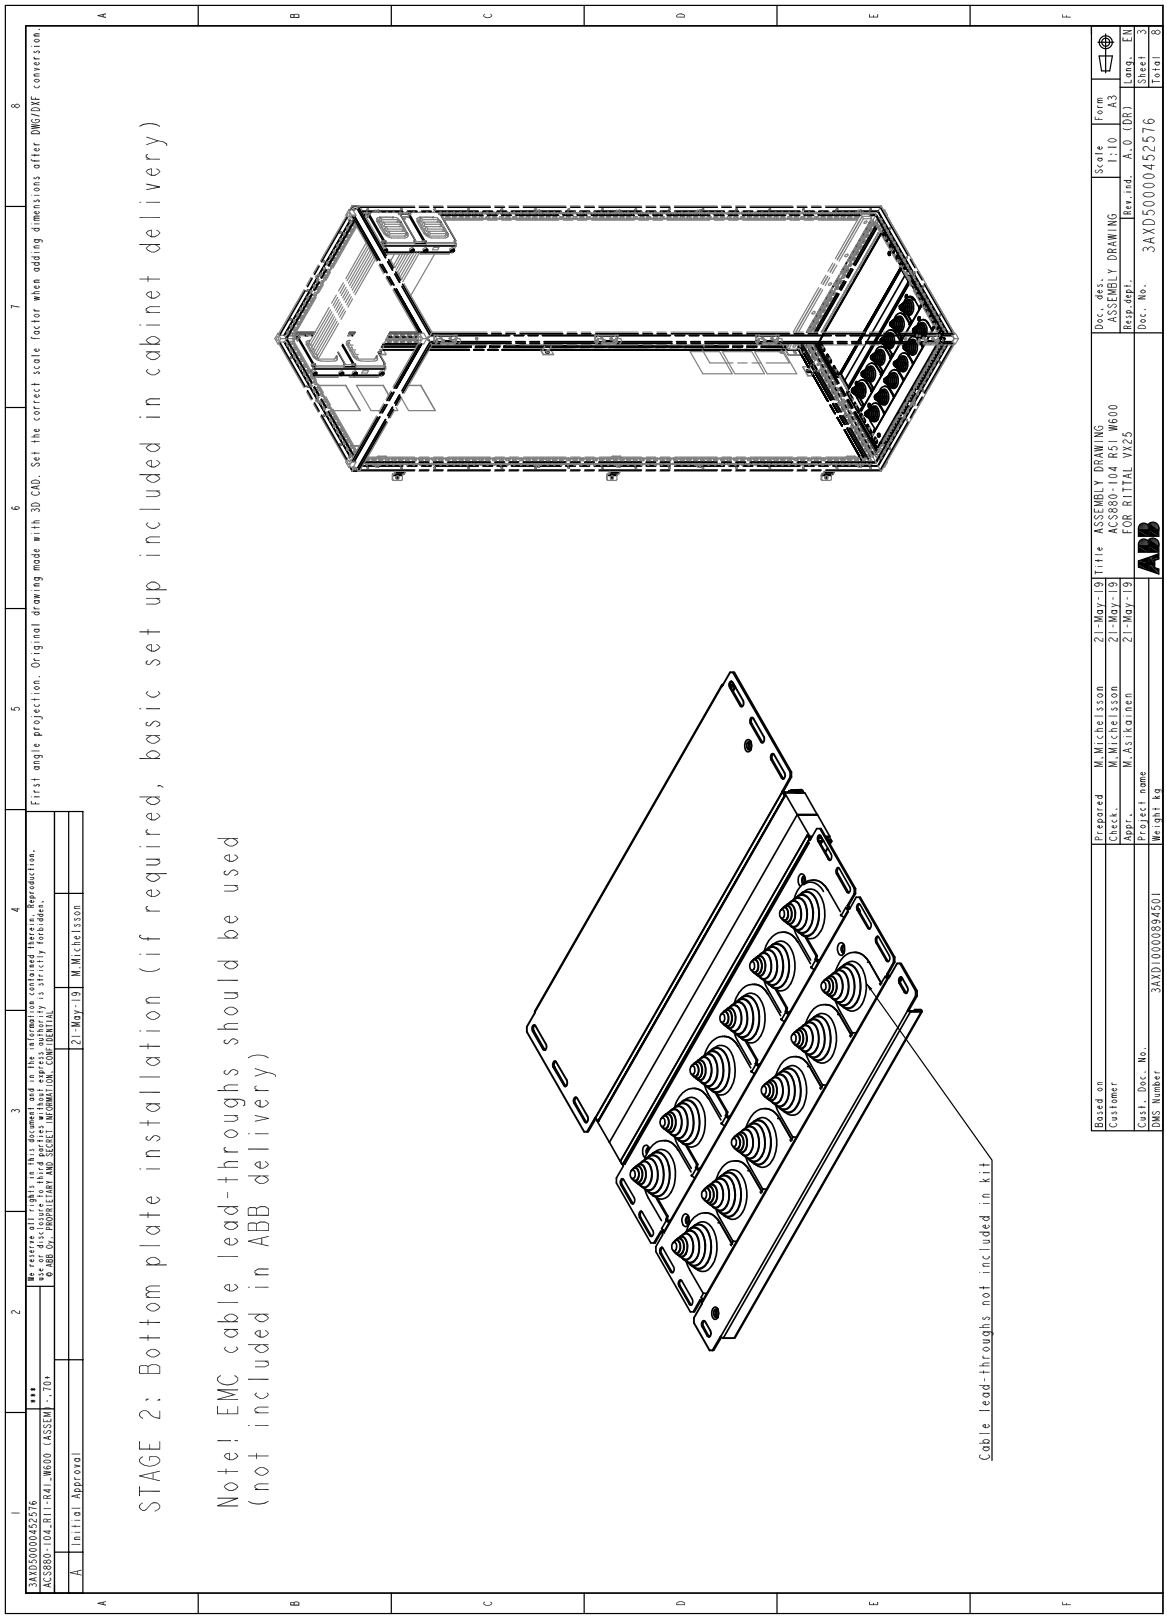


Stage 3: Installation of inverter module mounting plate

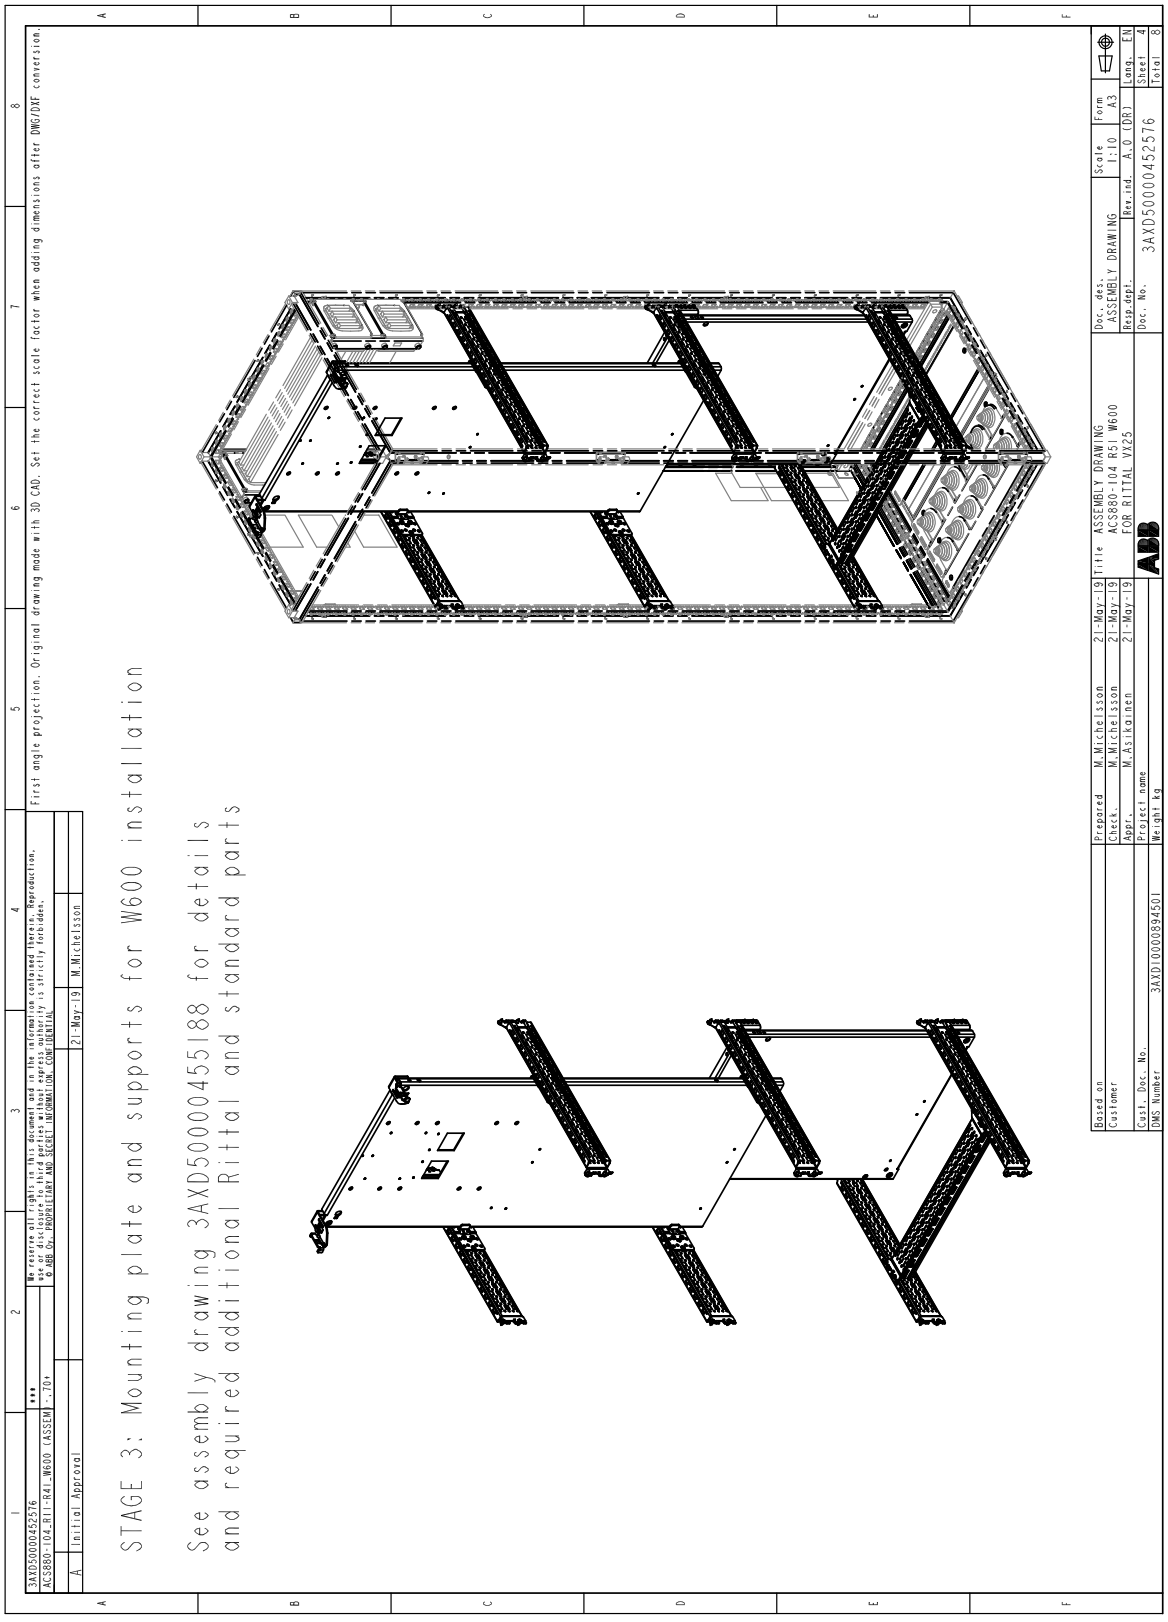


Stage 4: Installation of DC busbars

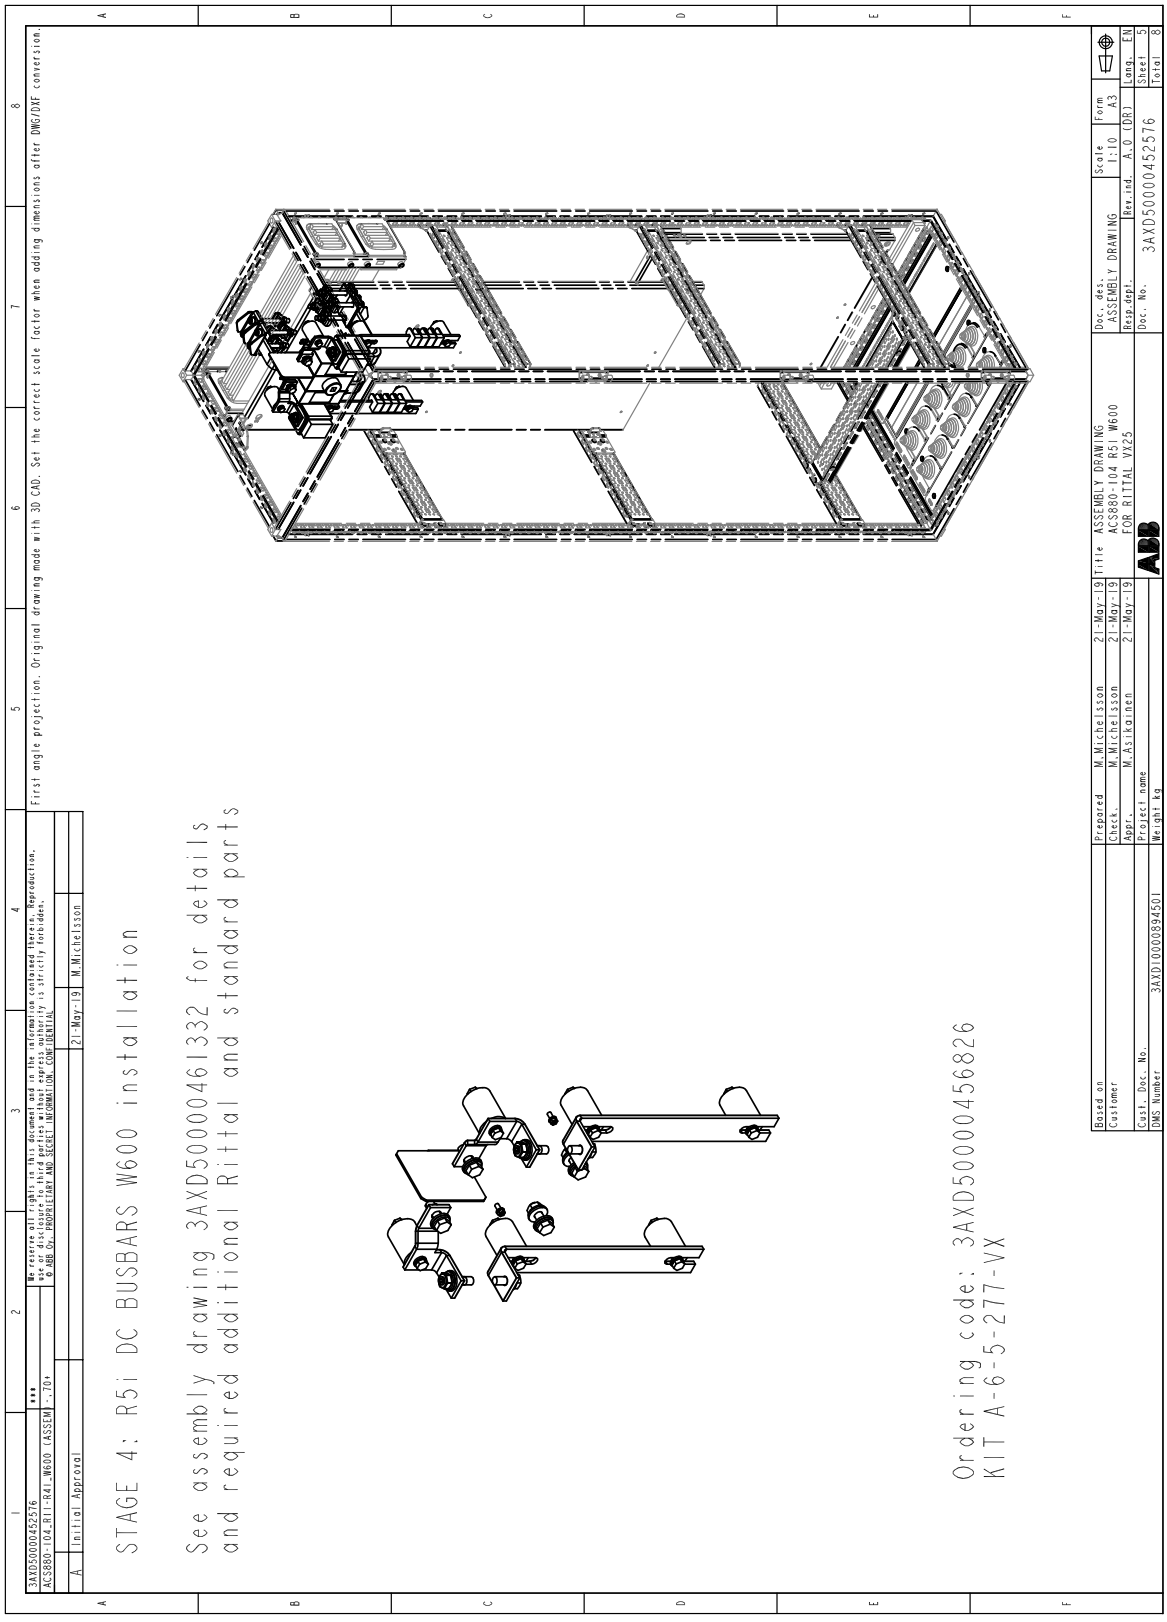


Stage 5: Installation of front mounting plate

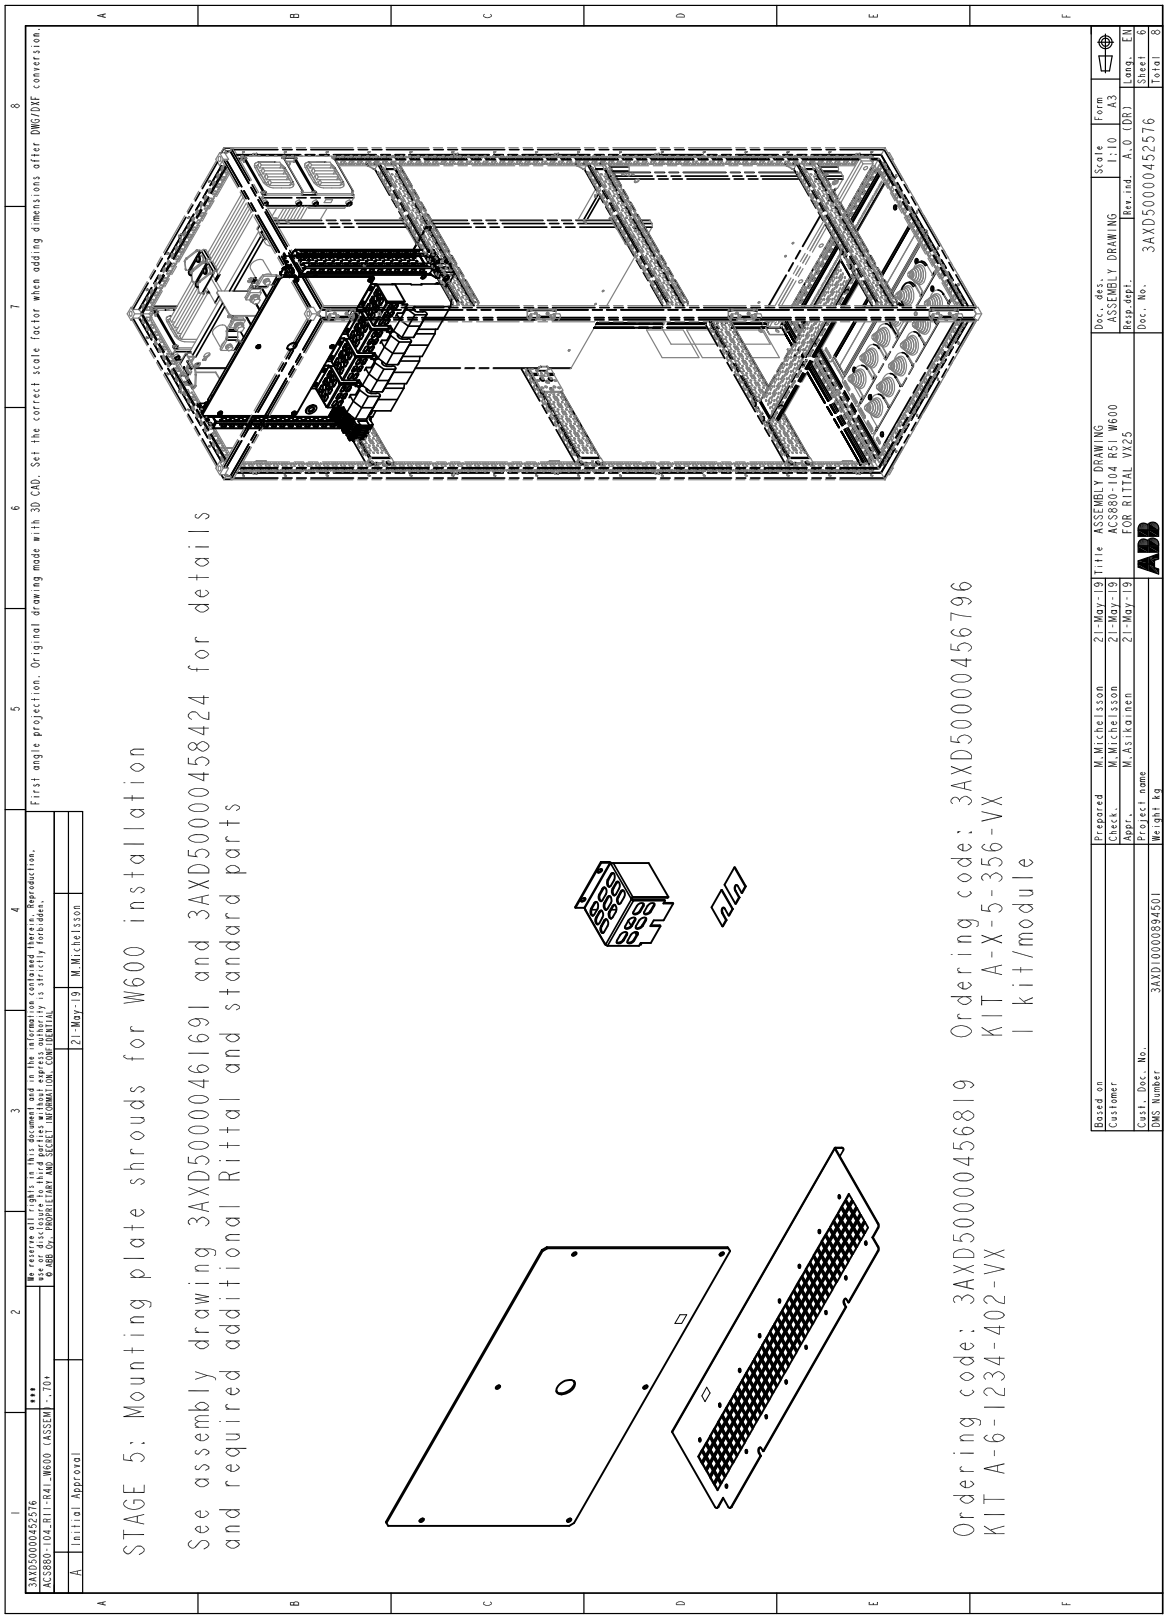


Stage 6: Installation of inverter modules

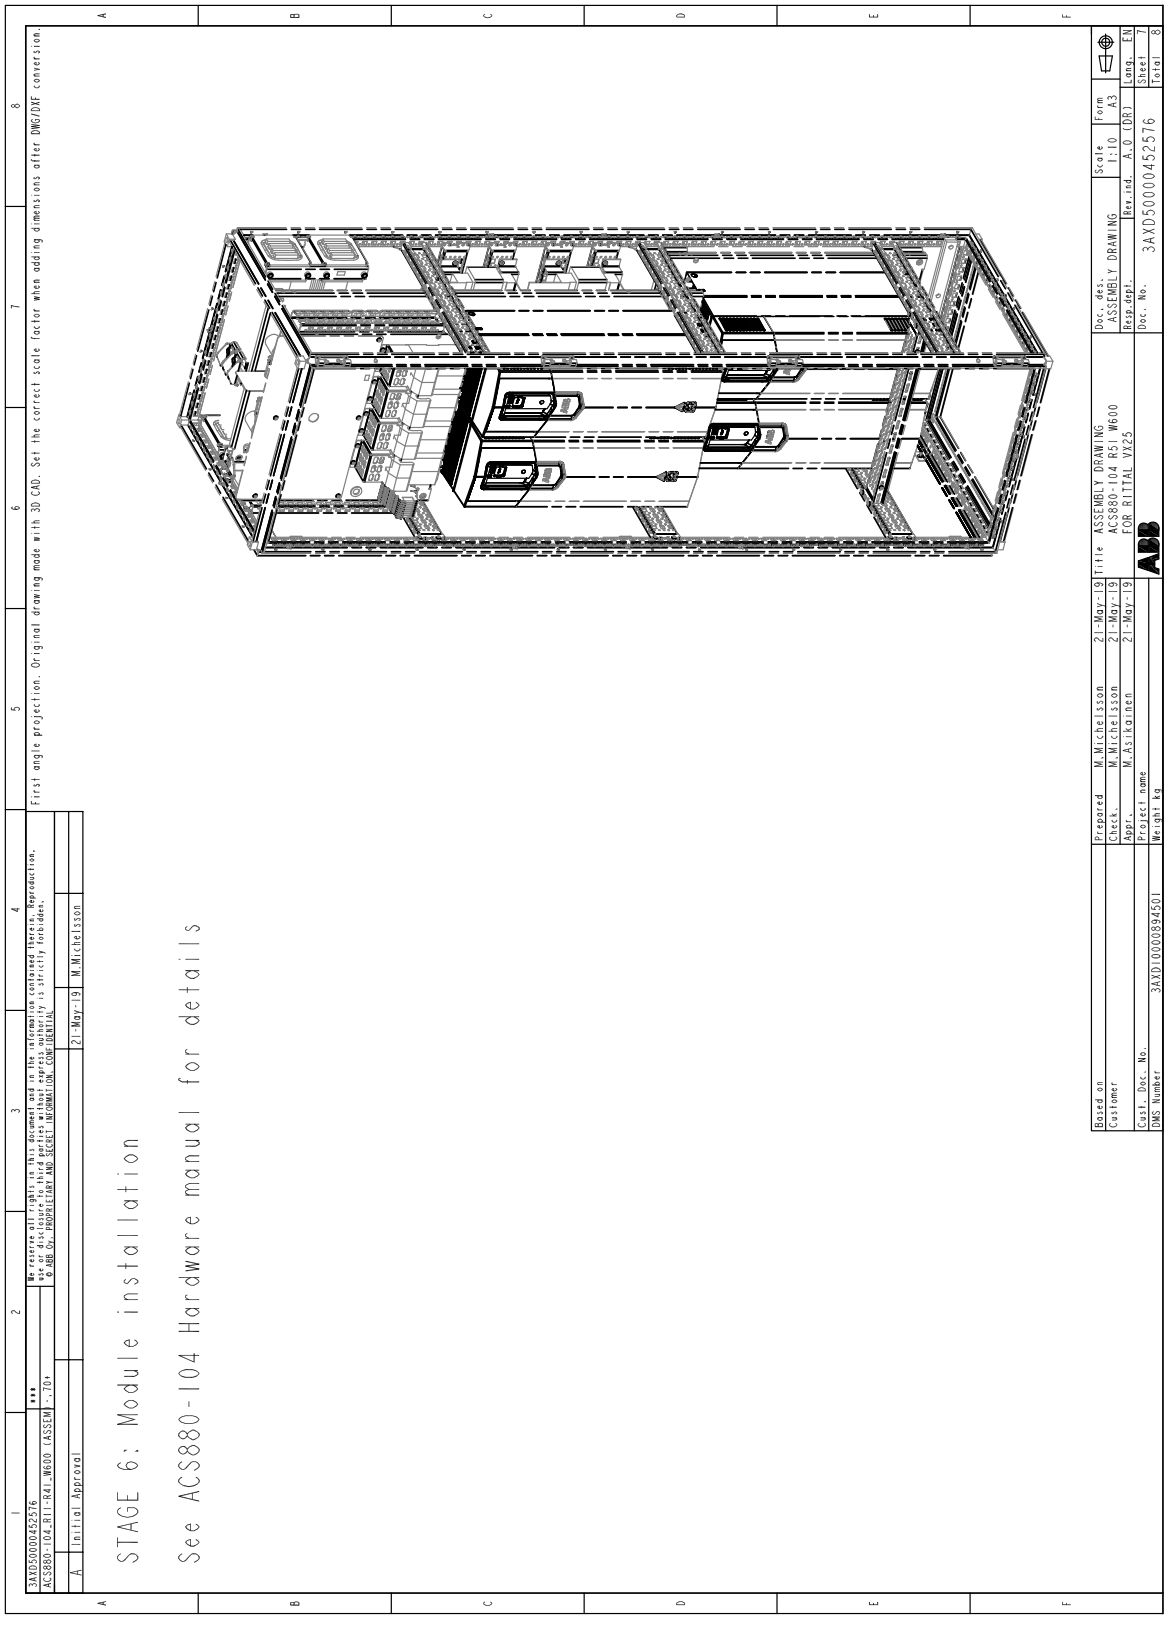

Stage 7: Installation of du/dt filters

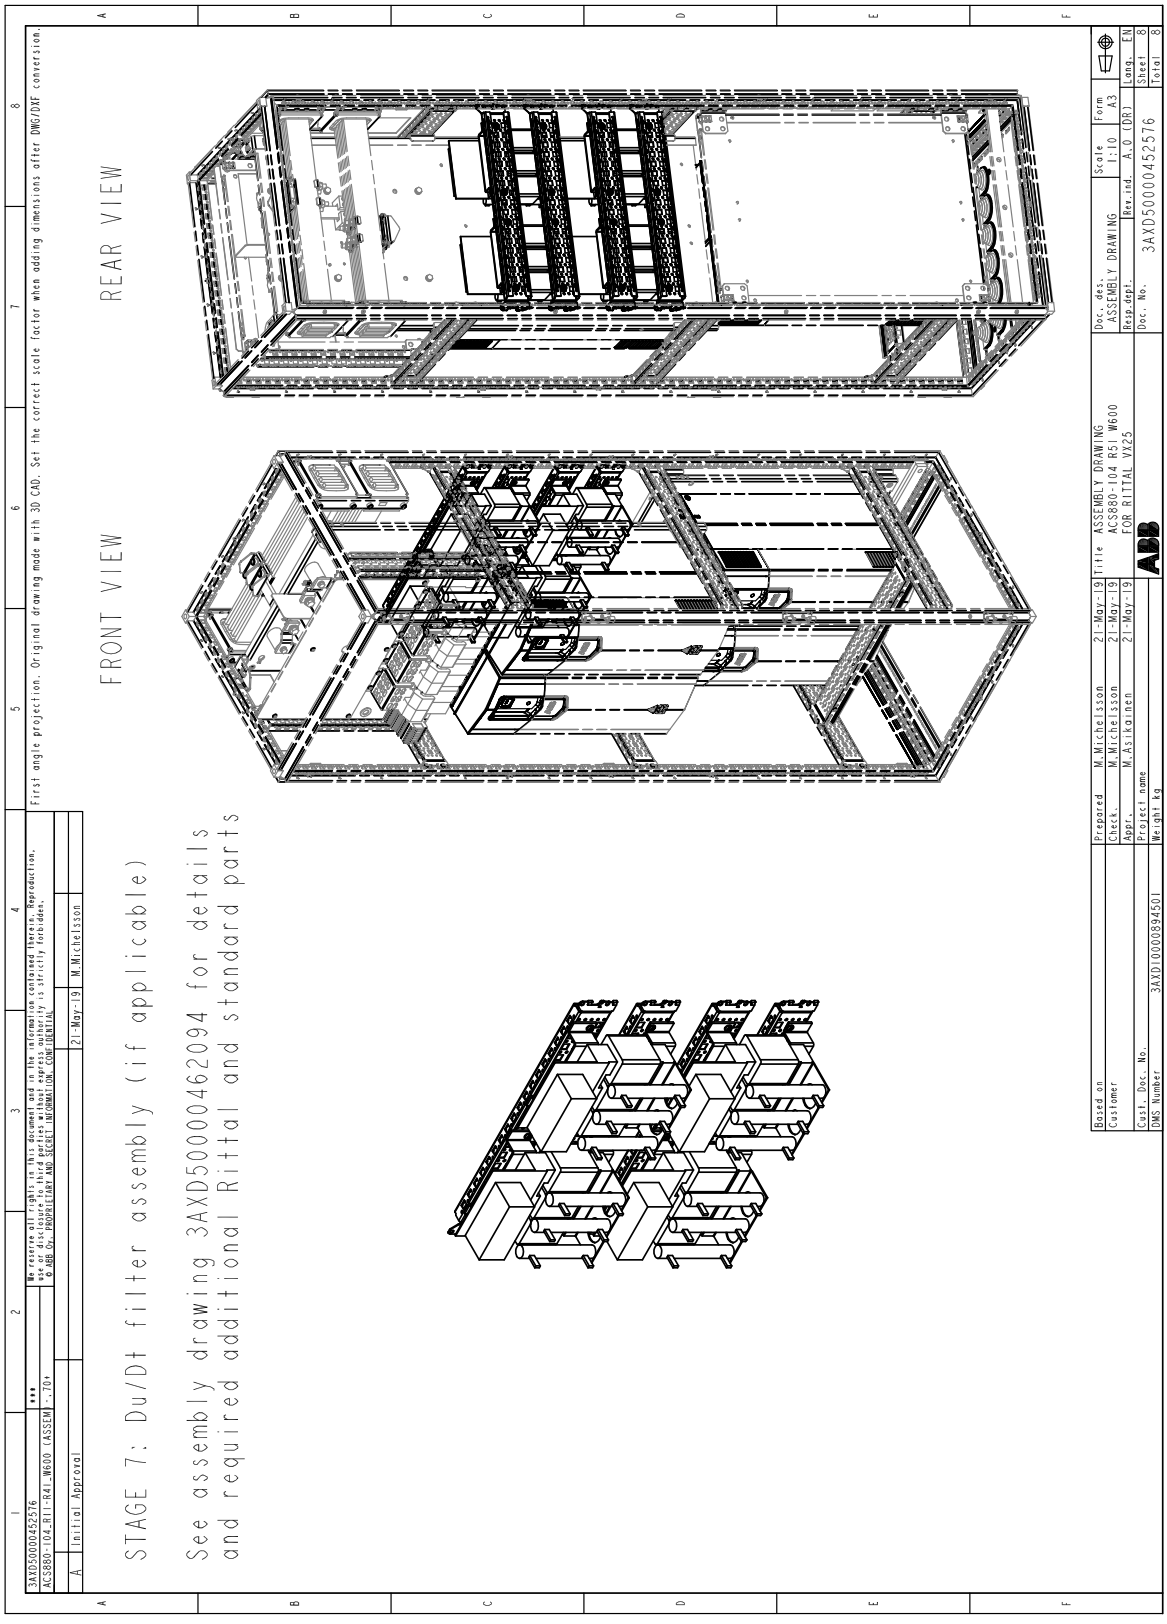

One R6i/R7i module in a 400 mm wide Rittal VX25 enclosure

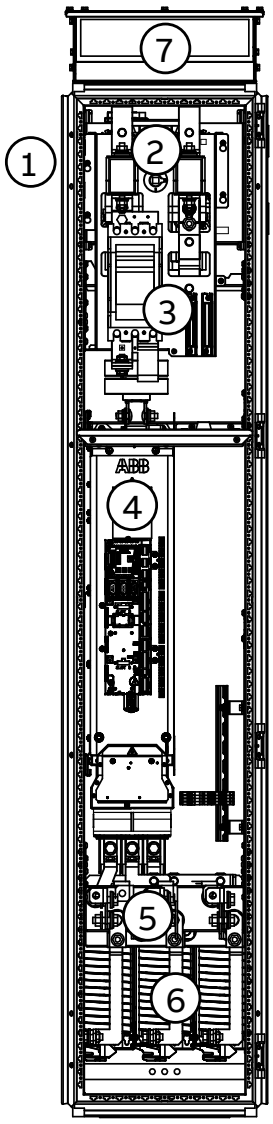


Description
Cubicle including: 1. DC bus 2. DC switch/disconnector and DC fuses 3. Charging contactor and resistors (frame R7i only) 4. Inverter module 5. AC output 6. du/dt filters (optional) 7. Air outlet


Installation stages

#	Installation stage	Instruction code	Kit code	Kit ordering code
1	Common parts:			
	Baying parts	3AXD50000336340	-	-
	PE busbars	3AXD50000336104	-	-
	Divider panel	3AXD50000336692	-	-
	DC busbars	3AXD50000333639	A-468-X-001-VX	3AXD50000333387
2	Bottom plate	-	-	-
3	Support beams	3AXD50000452934	-	-
4	DC busbars and charging components:			
	R6i without DC switch	3AXD50000444489	A-4-67-283-VX	3AXD50000459094
	R6i with DC switch (IEC)	3AXD50000445202	A-4-6-281-VX	3AXD50000459100
	R6i with DC switch (UL)	3AXD50000445325	A-4-6-285-VX	3AXD50000459117
	R7i without DC switch or charging	3AXD50000444489	A-4-67-283-VX	3AXD50000459094
	R7i without DC switch, with charging	3AXD50000445097	A-4-7-282-VX	3AXD50000459063
	R7i (400/500 V) with DC switch and charging	3AXD50000445257	A-4-7-280-VX	3AXD50000459056
	R7i (690 V) with DC switch and charging	3AXD50000445356	A-4-7-286-VX	3AXD50000459070
	R7i (690 V) without DC switch, with charging	3AXD50000445332	A-4-7-287-VX	3AXD50000459087
5	Common mode filters (filters not included in kit)	3AXD50000444304	A-4-67-241-VX	3AXD50000458509
6 A	AC busbars without output (du/dt) filters	3AXD50000452798	A-4-67-181-VX	3AXD50000459032
6 B	AC busbars with output (du/dt) filters	3AXD50000452439	A-4-67-186-VX	3AXD50000459049
7	Inverter module installation parts	3AXD50000453337	A-4-67-302-VX	3AXD50000459018
8	Shroud brackets	3AXD50000453252	A-4-67-350-VX	3AXD50000458493


Overview of kits

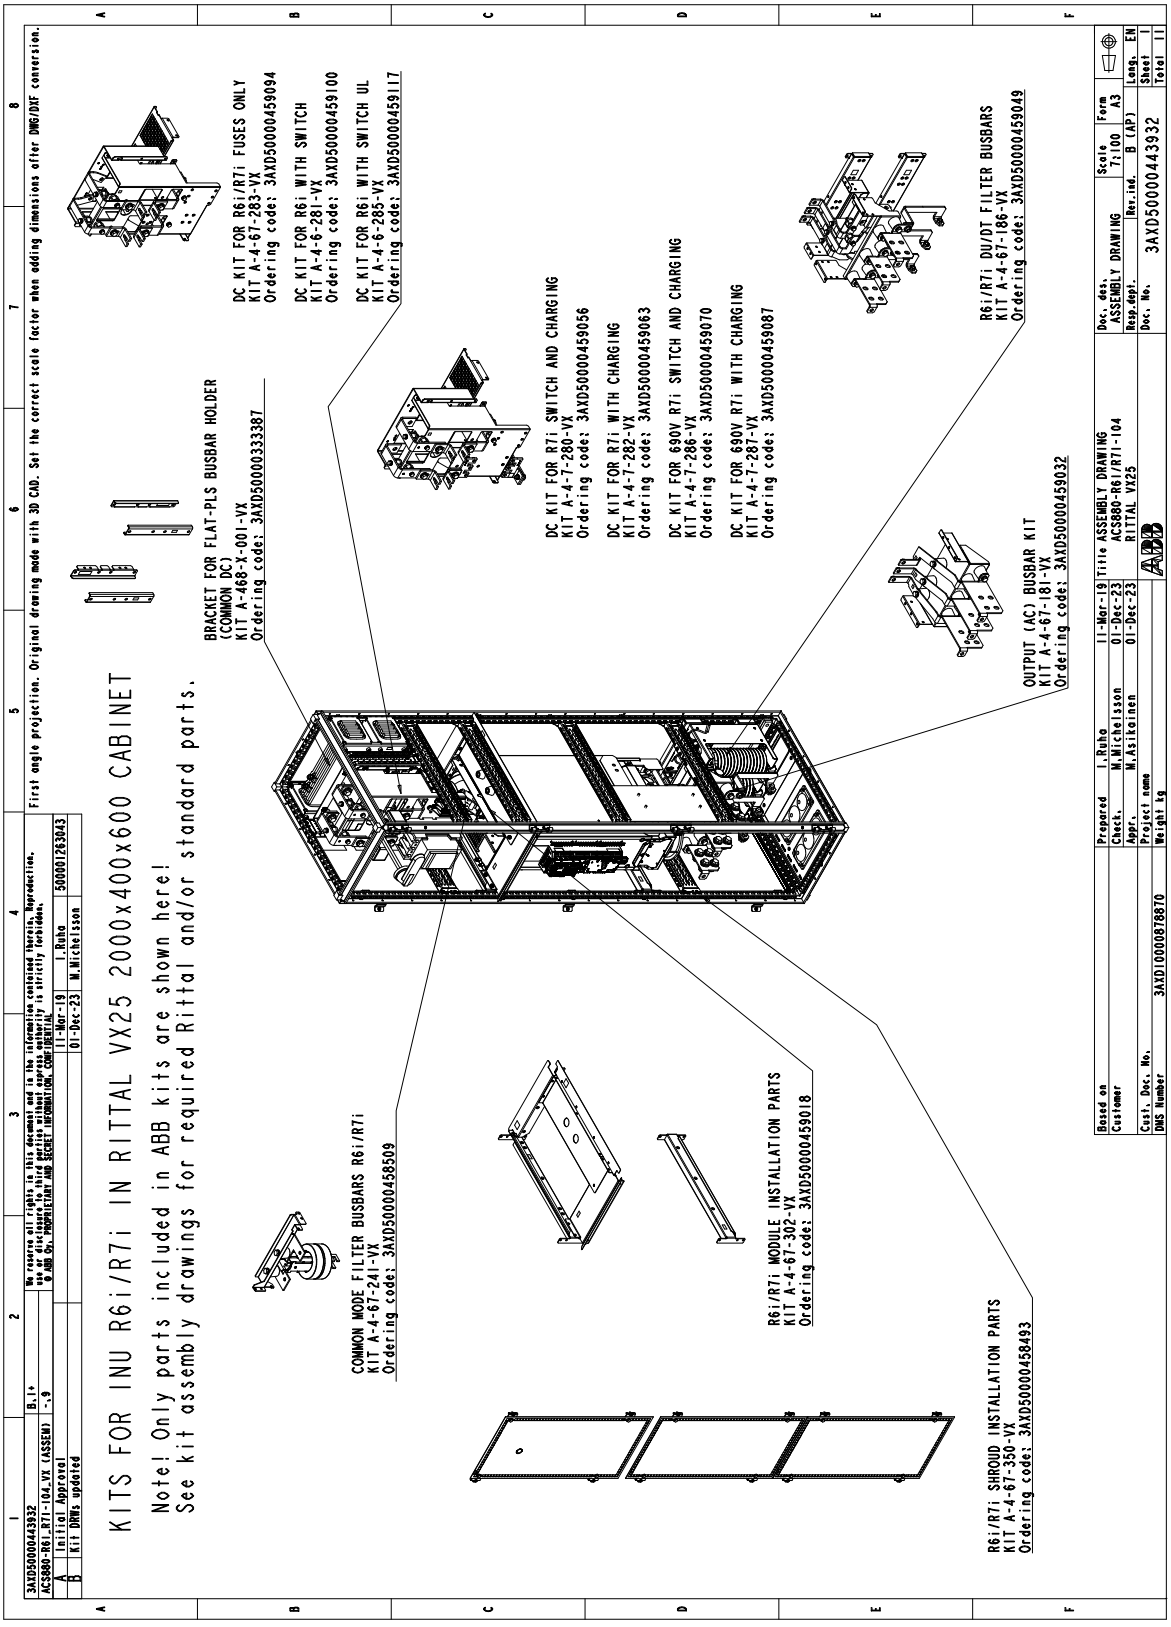


Stage 1: Installation of common parts

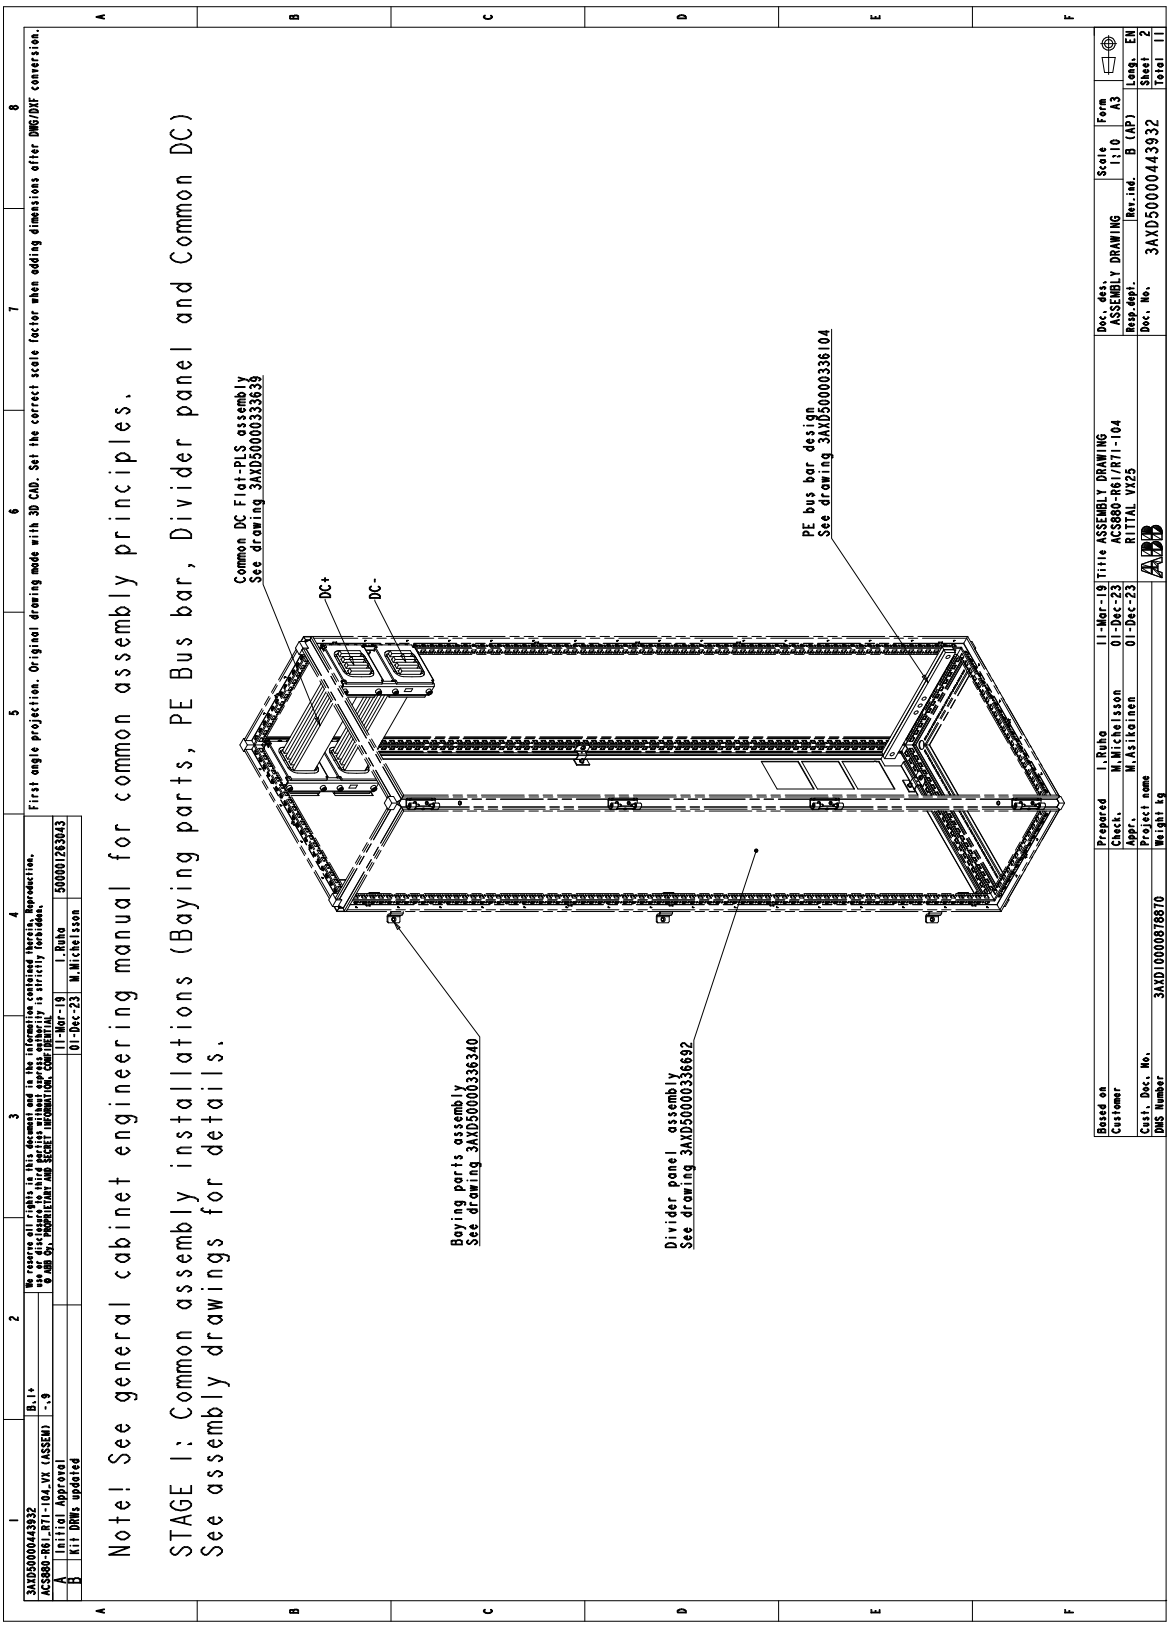


Stage 2: Installation of bottom plate

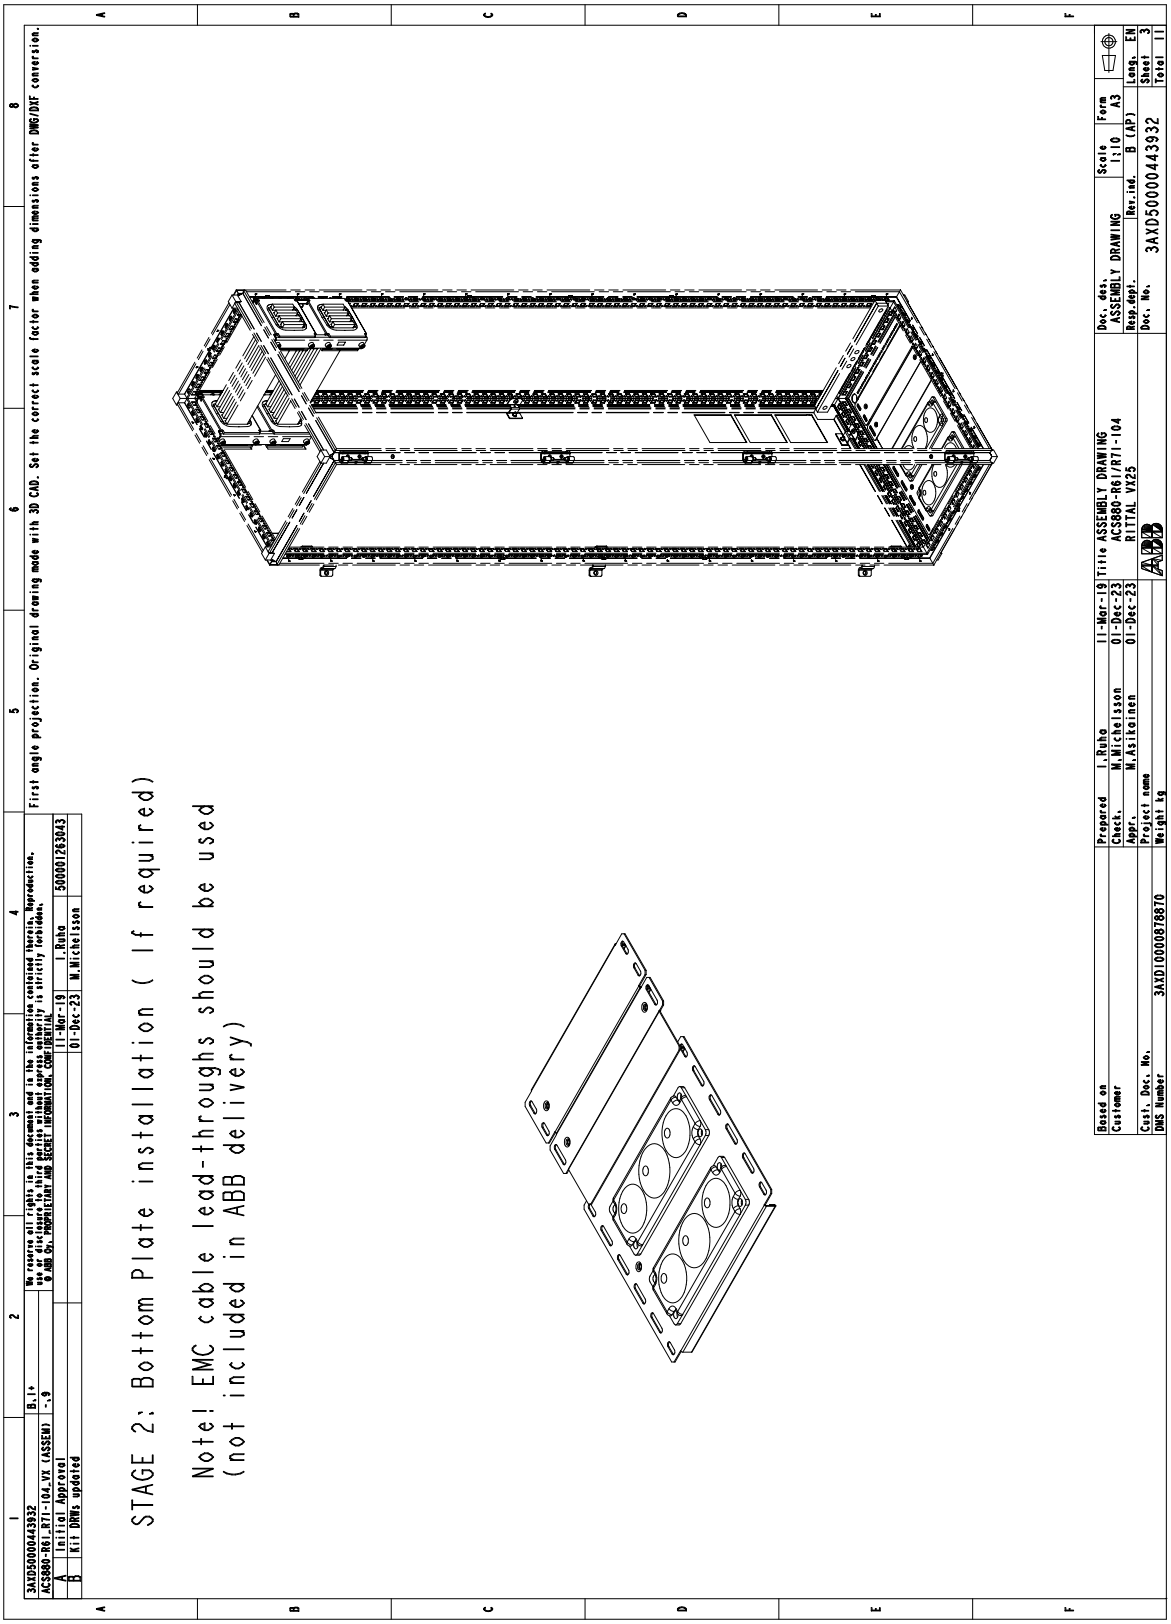


Stage 3: Installation of support beams

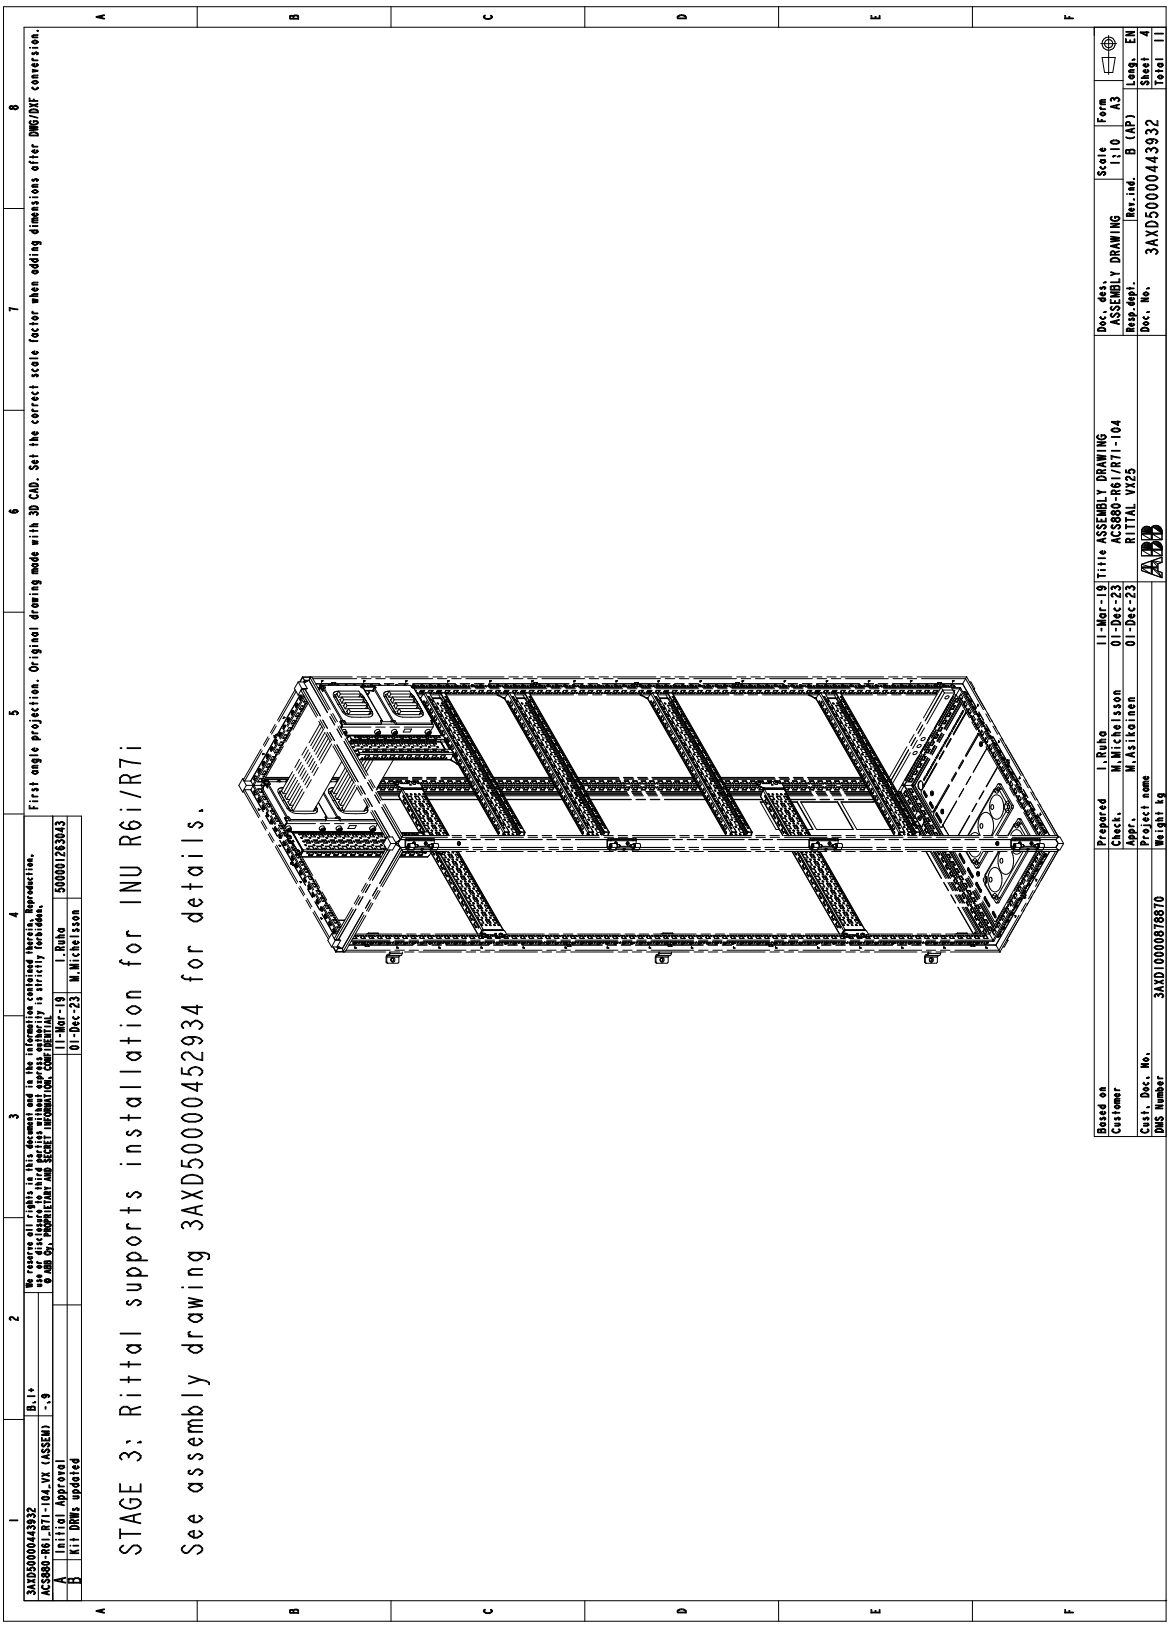


Stage 4 (R6i): Installation of DC busbars and charging components

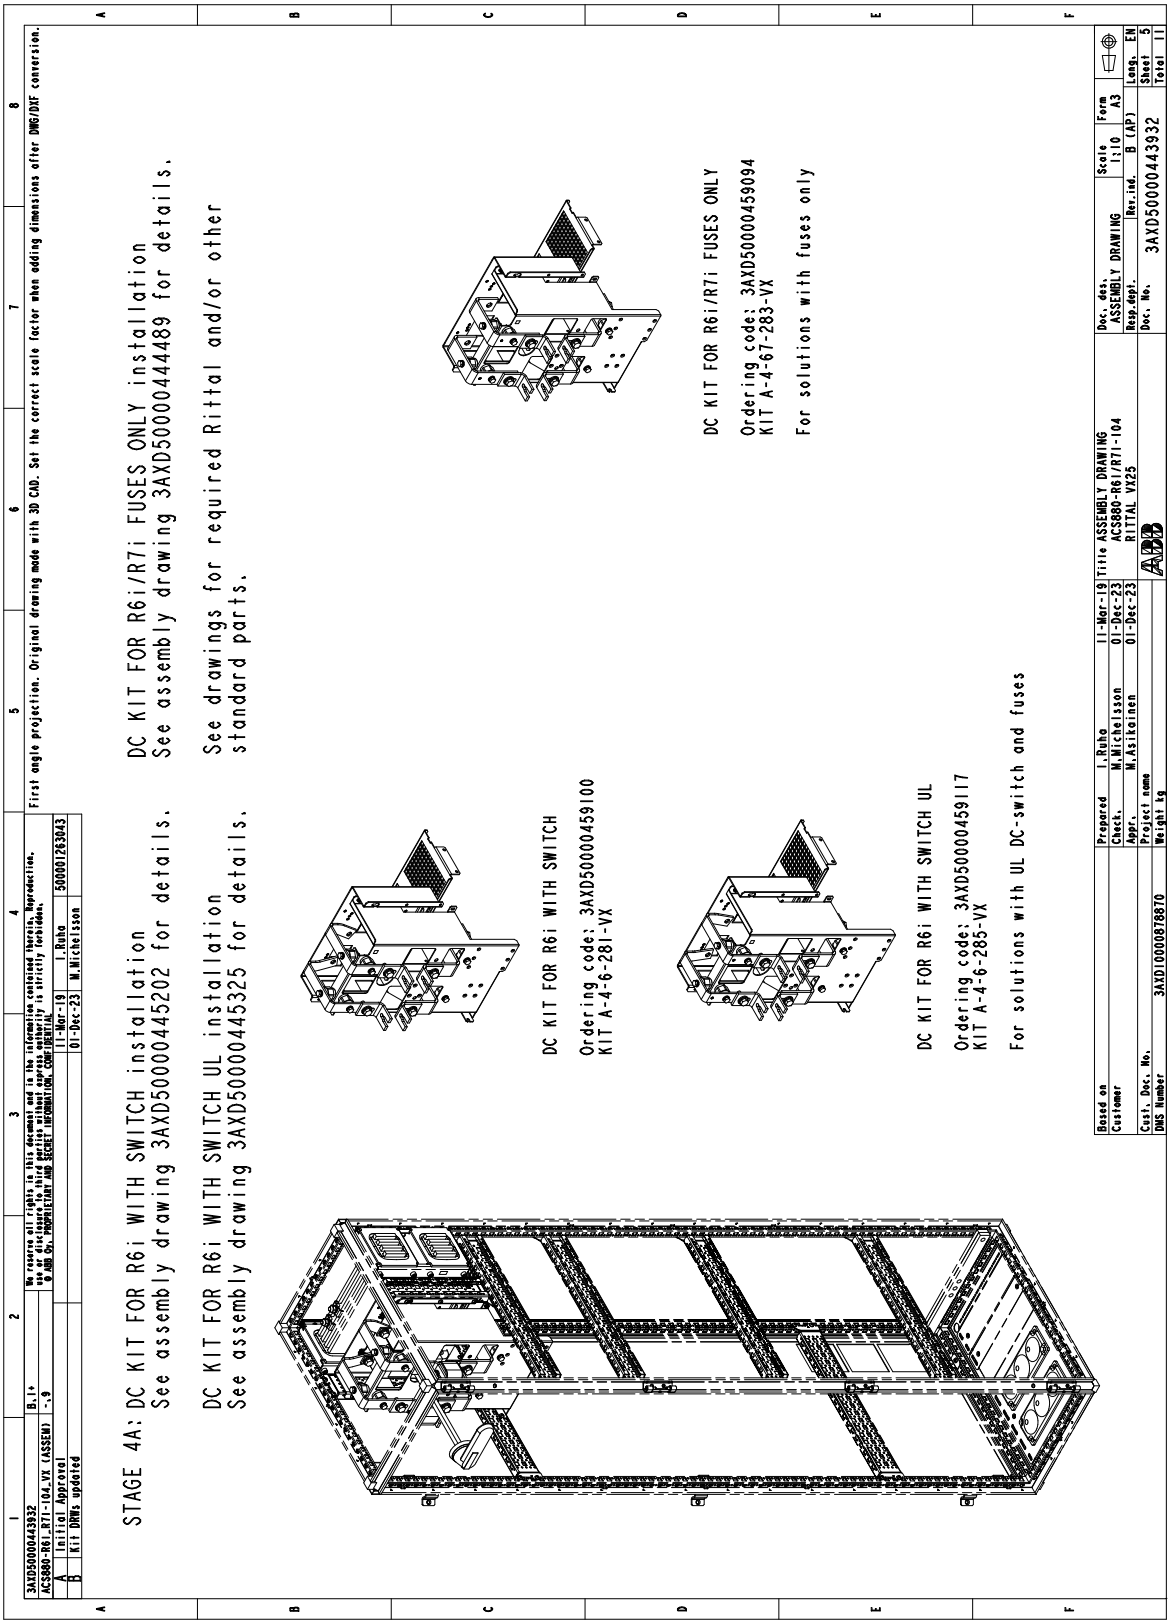


Stage 4 (R7i): Installation of DC busbars and charging components

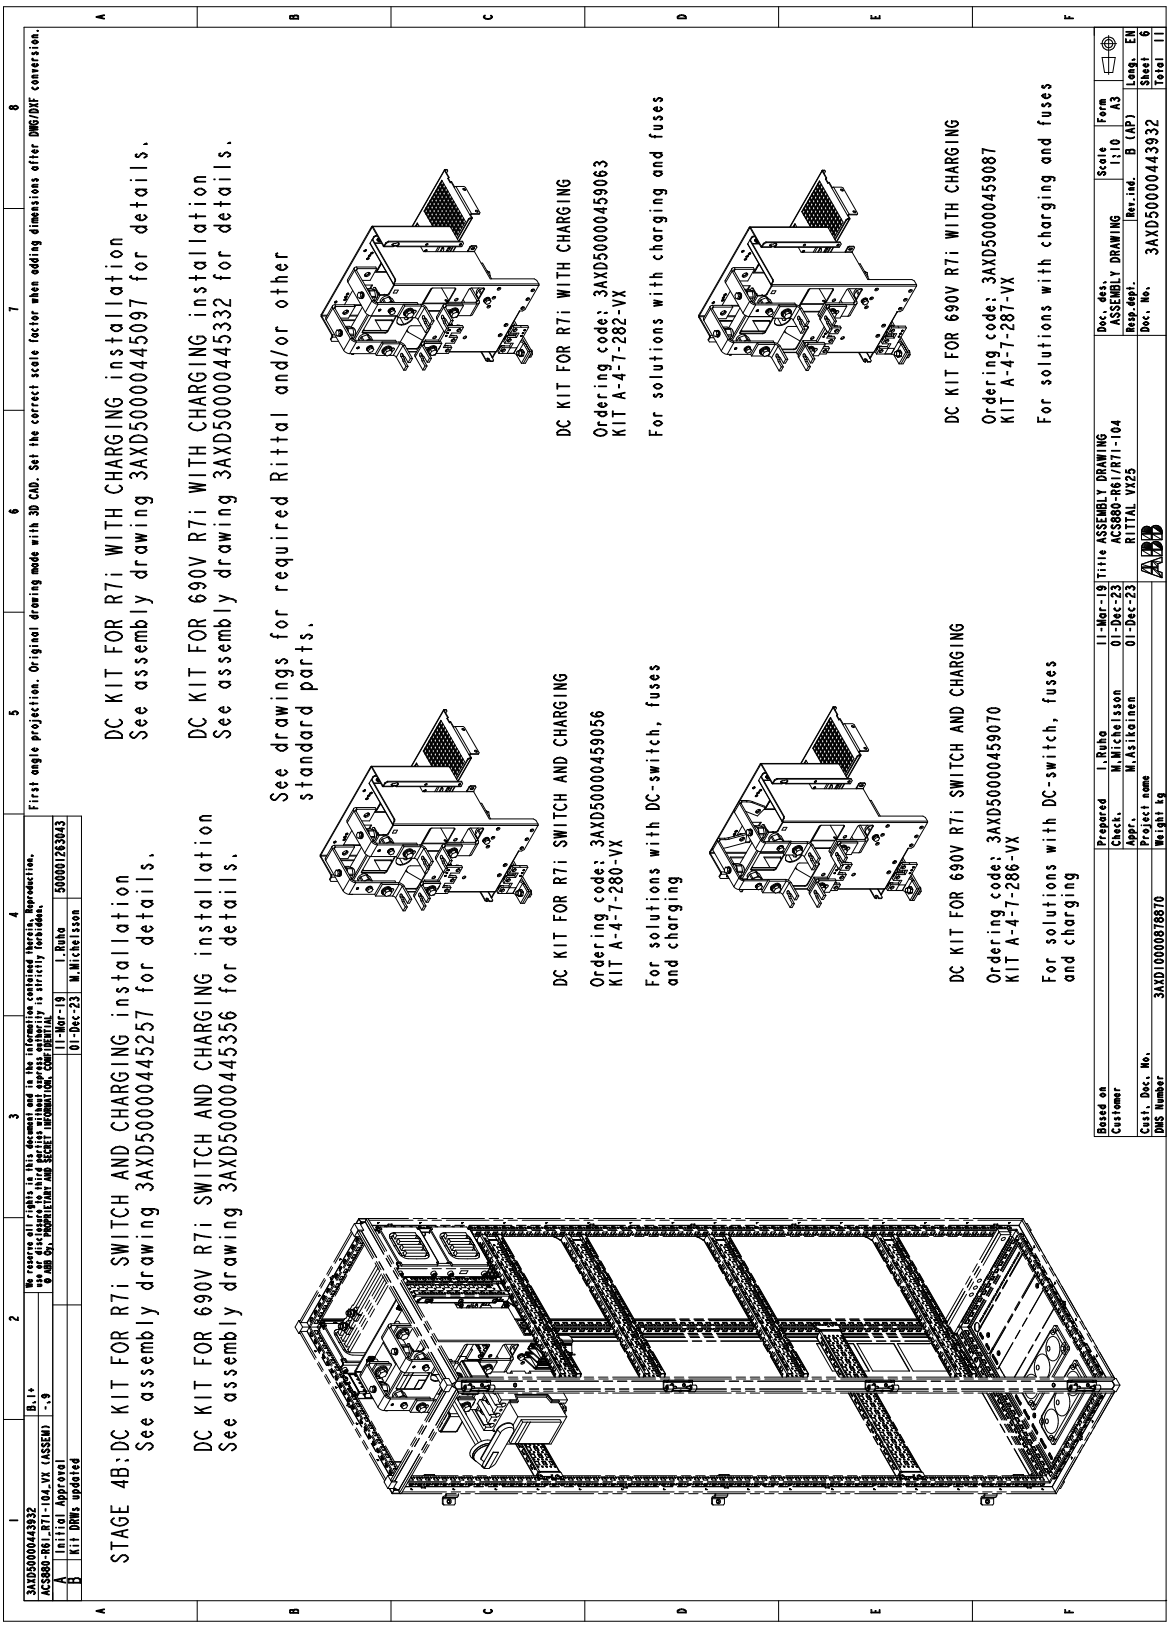


Stage 5: Installation of common mode filters

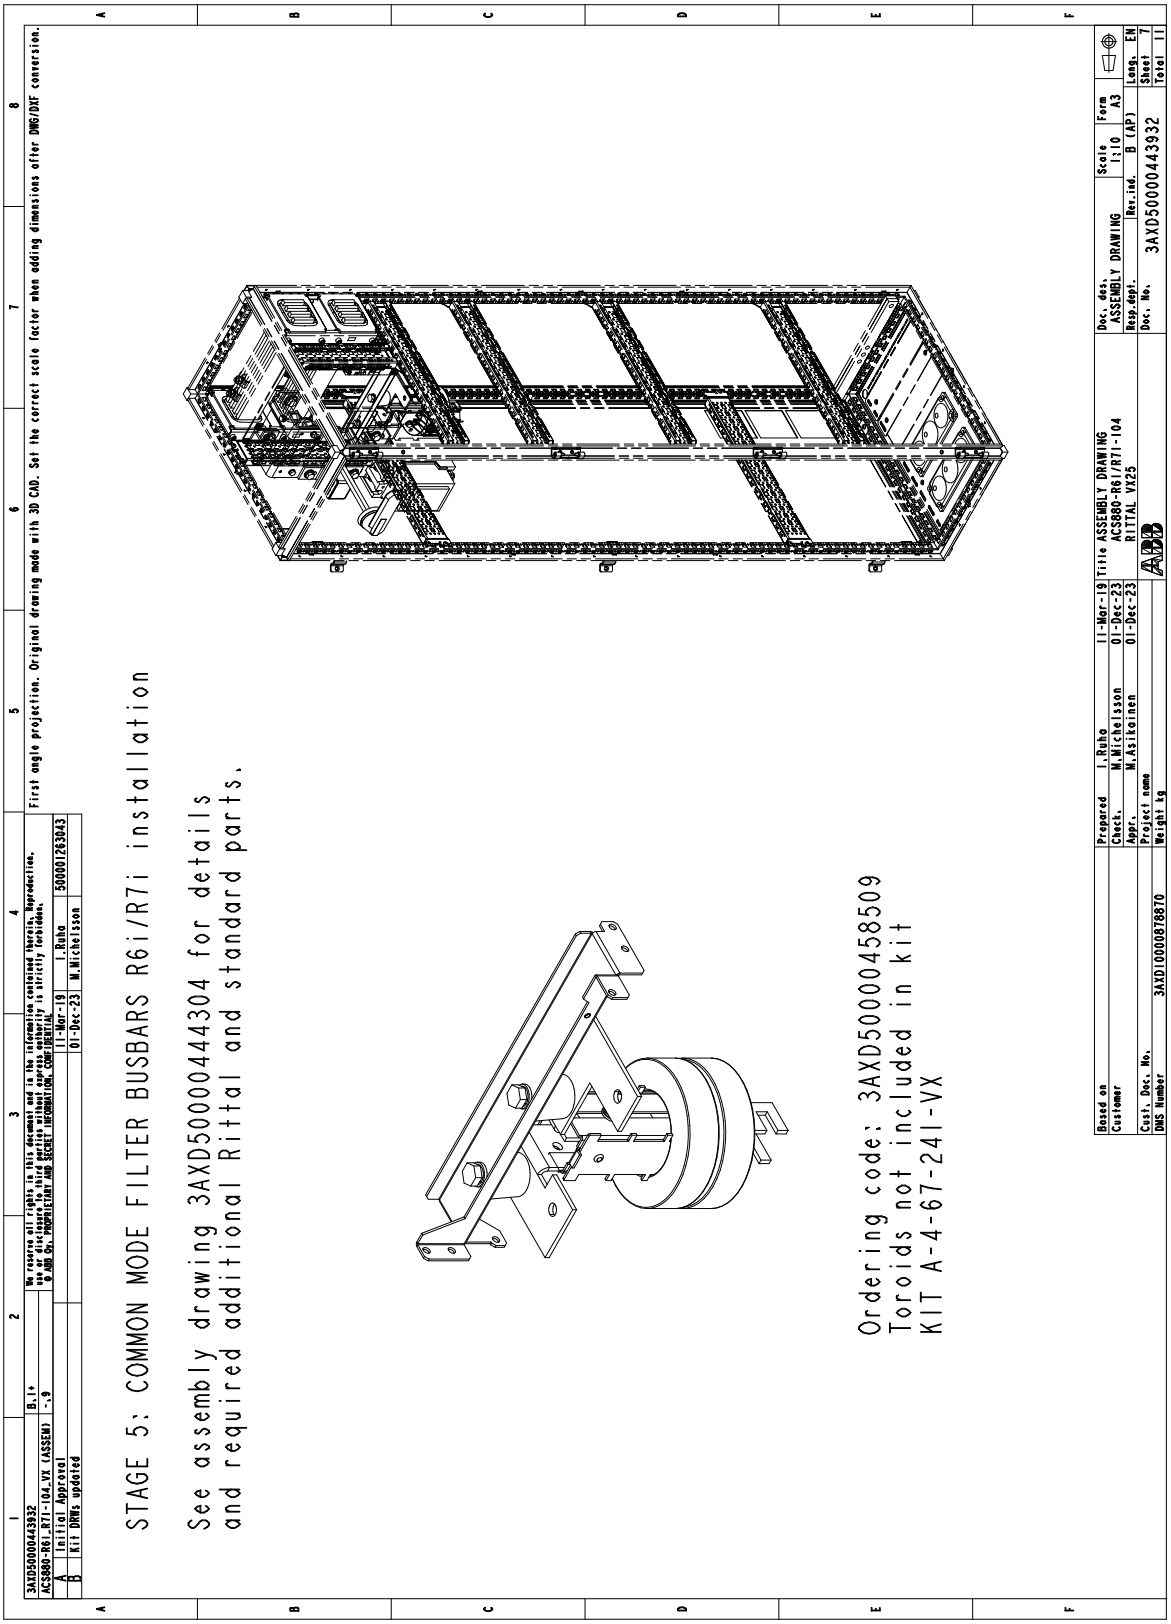


Stage 6 A: Installation of AC busbars (without du/dt filters)

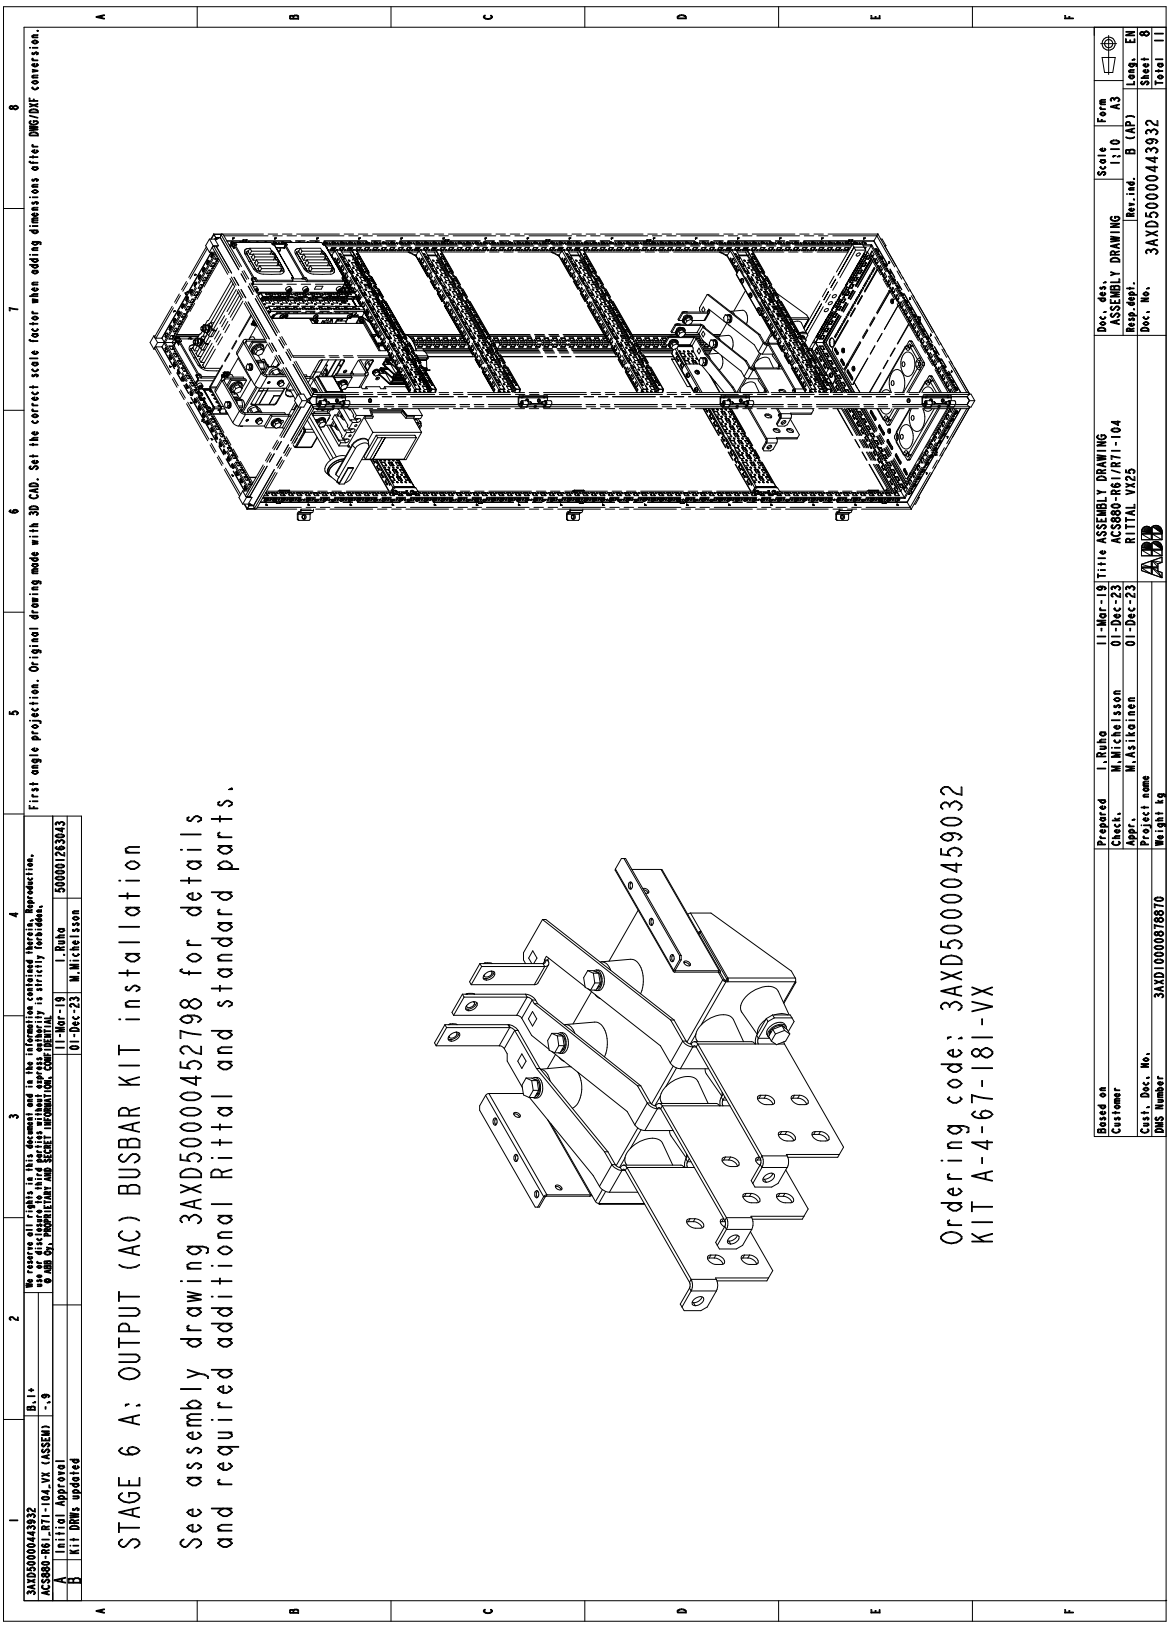


Stage 6 B: Installation of AC busbars (with du/dt filters)

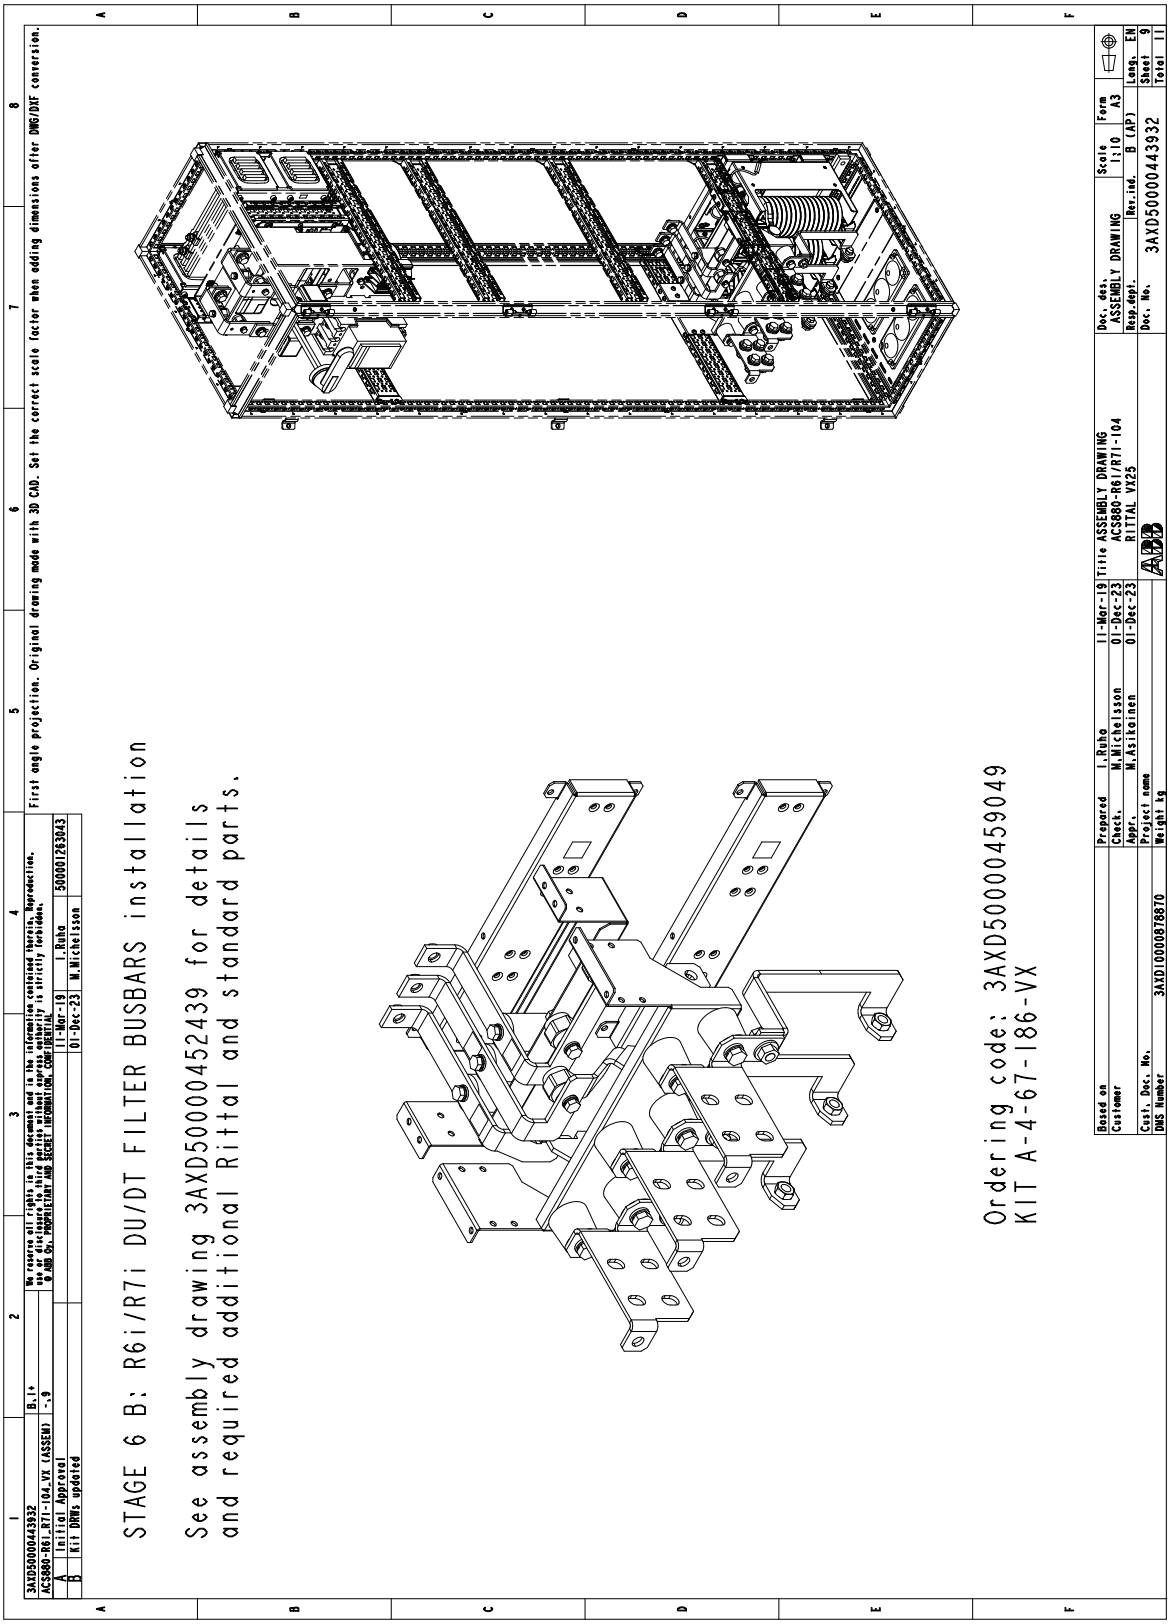

Stage 7: Installation of inverter module

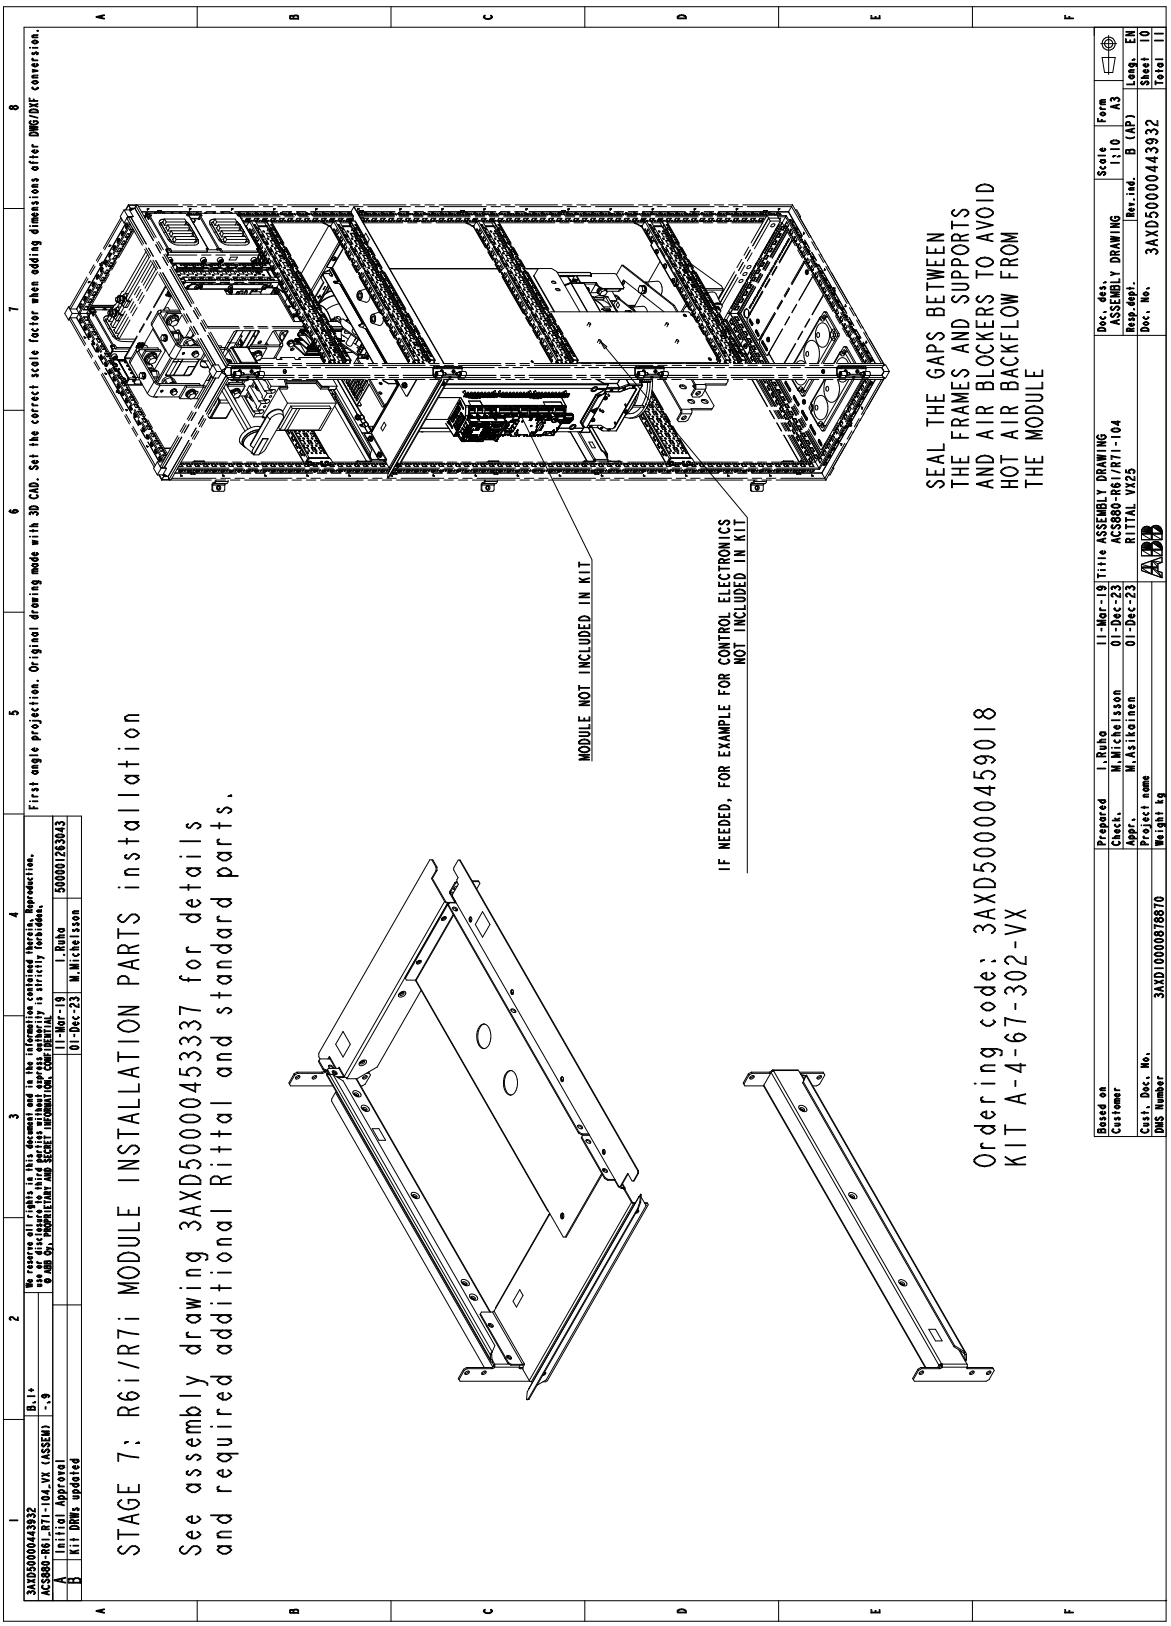

Stage 8: Installation of shrouding brackets

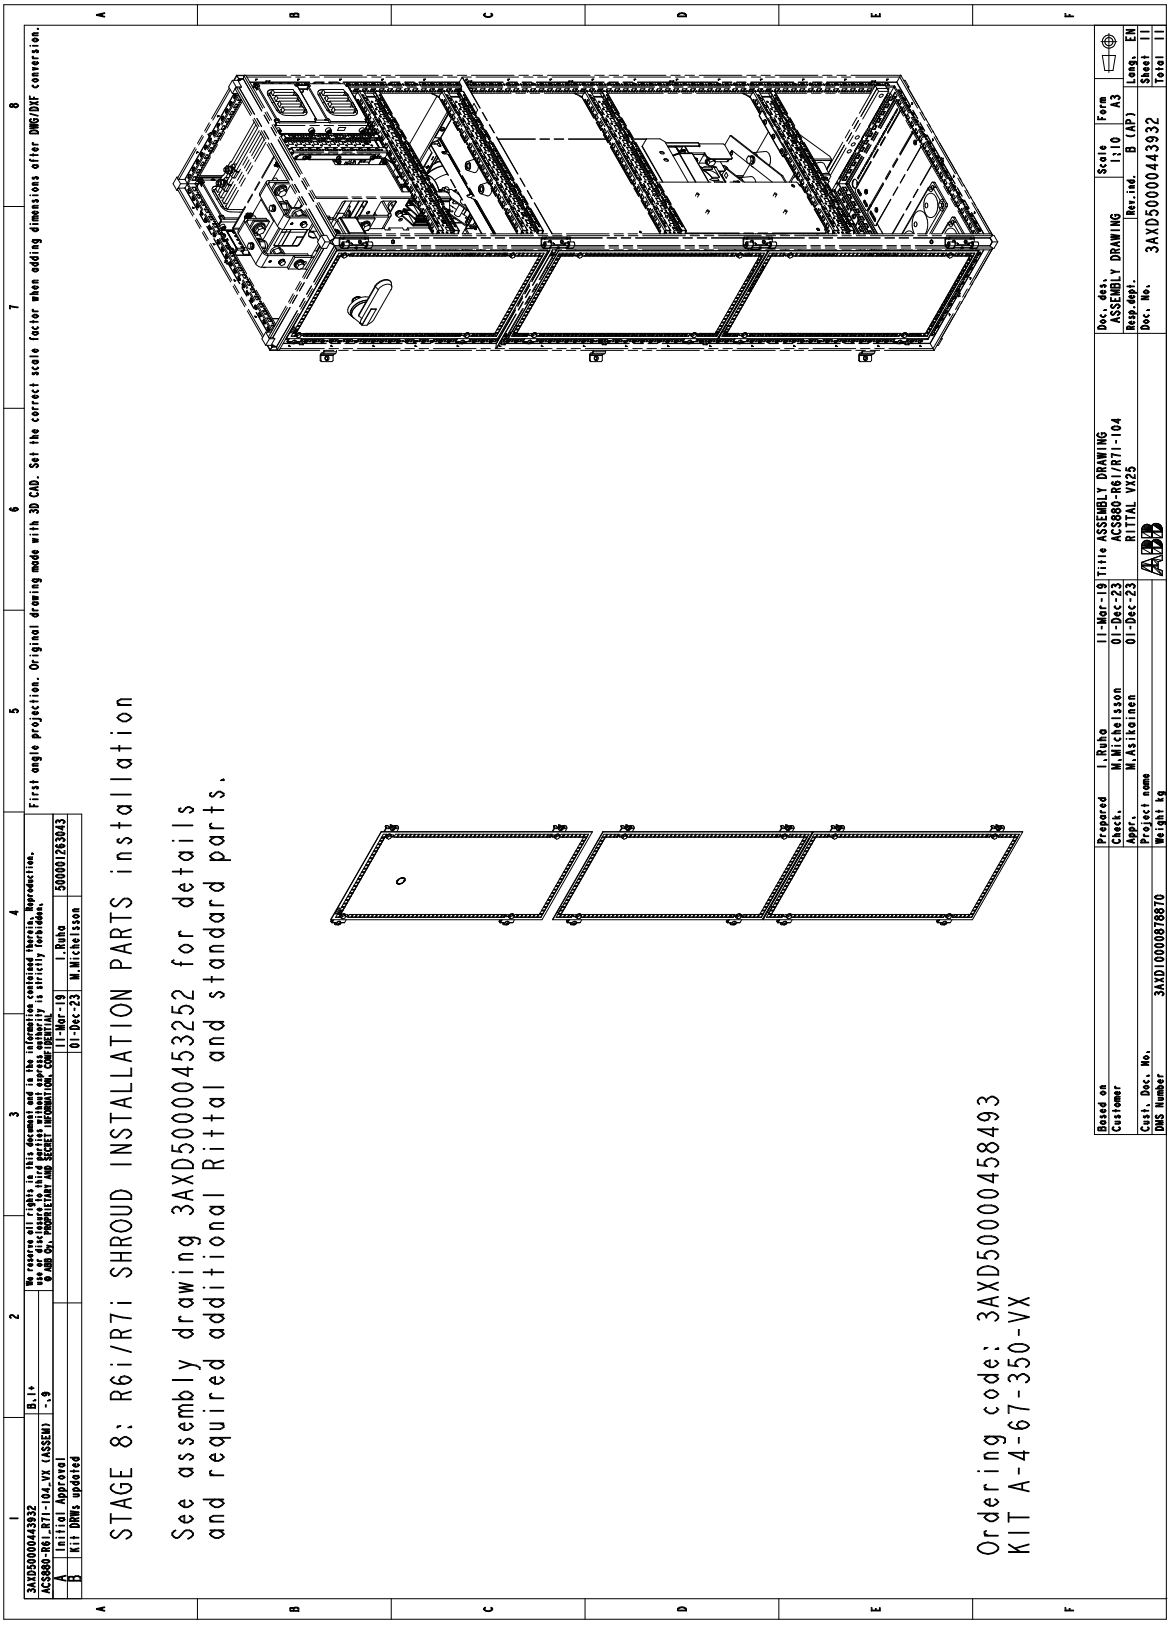


One R6i/R7i module in a 400 mm wide generic enclosure

Parts installed	Instruction code	Kit code	Kit ordering code
R6i with DC switch (IEC)	3AXD50000445202	A-4-6-281-VX	3AXD50000459100
R6i with DC switch (UL)	3AXD50000445325	A-4-6-285-VX	3AXD50000459117
R7i without DC switch, with charging	3AXD50000445097	A-4-7-282-VX	3AXD50000459063
R7i (400/500 V) with DC switch and charging	3AXD50000445257	A-4-7-280-VX	3AXD50000459056
R7i (690 V) with DC switch and charging	3AXD50000445356	A-4-7-286-VX	3AXD50000459070
R7i (690 V) without DC switch, with charging	3AXD50000445332	A-4-7-287-VX	3AXD50000459087
Common mode filters (filters not included in kit)	3AXD50000444304	A-4-67-241-VX	3AXD50000458509
Generic common mode filter kit	3AXD50000023500	A-0-67-244	3AXD50000023329
AC busbars without output (du/dt) filters	3AXD50000452798	A-4-67-181-VX	3AXD50000459032
AC busbars with output (du/dt) filters	3AXD50000452439	A-4-67-186-VX	3AXD50000459049


1	2	3	4	5	6	7	8
3AXD50001111687	A.0+	We reserve all rights in this document and in the information contained therein. Reproduction, use or disclosure to third parties without express authority is strictly forbidden. © ABB Oy. PROPRIETARY AND SECRET INFORMATION. CONFIDENTIAL		First angle projection. Original drawing made with 3D CAD. Set the correct scale factor when adding dimensions after DWG/DXF conversion.			
ACS880-R6i_R7i-104_VX (ASSEM)	-.8						
A	Initial Approval		23-Oct-23	M.Michelsson			

KITS FOR INU R6i/R7i IN GENERIC CABINET

Note! Only parts included in ABB kits are shown here!
See kit assembly drawings for required standard parts.



GENERIC COMMON MODE R6i/R7i KIT FOR ACS880
KIT A-0-67-244
Ordering code 3AXD50000023329

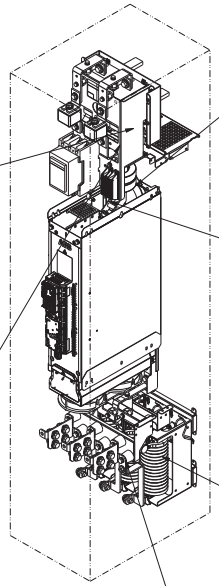


DC KIT FOR R6i WITH SWITCH
KIT A-4-6-281-VX
Ordering code: 3AXD50000459100

DC KIT FOR R6i WITH SWITCH UL
KIT A-4-6-285-VX
Ordering code: 3AXD50000459117



COMMON MODE FILTER BUSBARS R6i/R7i
KIT A-4-67-241-VX
Ordering code: 3AXD50000458509

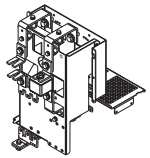


DC KIT FOR R7i SWITCH AND CHARGING
KIT A-4-7-280-VX
Ordering code: 3AXD50000459056


DC KIT FOR R7i WITH CHARGING
KIT A-4-7-282-VX
Ordering code: 3AXD50000459063

DC KIT FOR 690V R7i SWITCH AND CHARGING
KIT A-4-7-286-VX
Ordering code: 3AXD50000459070

DC KIT FOR 690V R7i WITH CHARGING
KIT A-4-7-287-VX
Ordering code: 3AXD50000459087

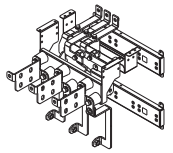


R6i/R7i DU/DT FILTER BUSBARS
KIT A-4-67-186-VX
Ordering code: 3AXD50000459049

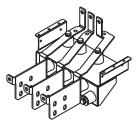

OUTPUT (AC) BUSBAR KIT
KIT A-4-67-181-VX
Ordering code: 3AXD50000459032

Based on		Prepared	M.Michelsson	23-Oct-23	Title ASSEMBLY DRAWING	Doc. des.	Scale 7:100 Form A3
Customer		Check.	M.Koskinen	23-Oct-23	ACS880-R6i/R7i-104	ASSEMBLY DRAWING	
		Appr.	M.Asikainen	23-Oct-23	GENERIC	Resp.dept.	Rev.ind. A (AP) Lang. EN
Cust. Doc. No.		Project name			ABB	Doc. No. 3AXD50001111687	Sheet 1
DMS Number	3AXD10002045273	Weight kg					Total 1

One R8i module in a 400 mm wide Rittal VX25 enclosure

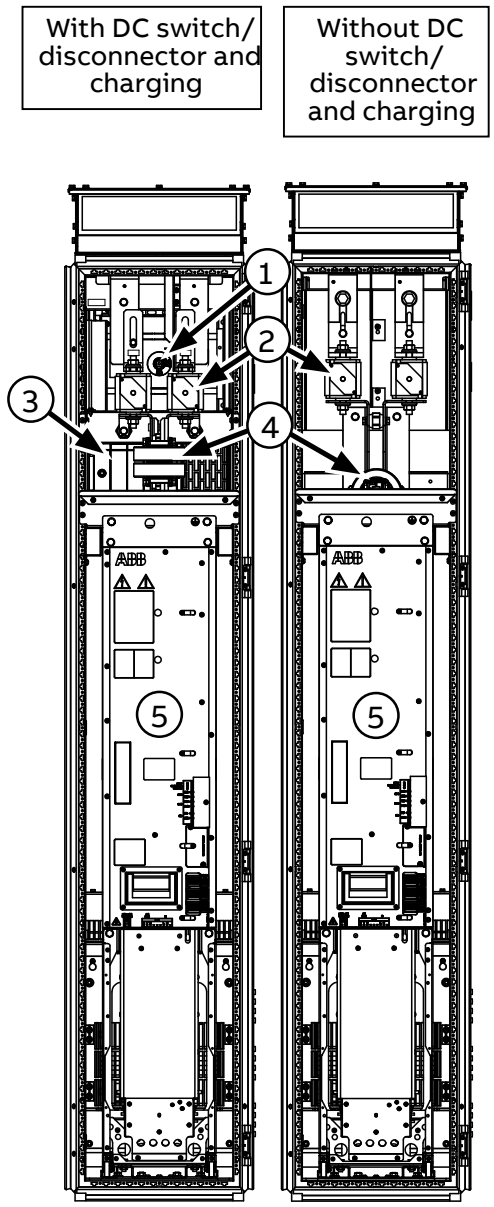


Description
Cubicle including: 1. DC switch/disconnector (obscured) 2. DC fuses 3. Charging switch 4. Common mode filters 5. Inverter module


Installation stages

#	Installation stage	Instruction code	Kit code	Kit ordering code
1	Common parts:			
	Baying parts	3AXD50000336340	-	-
	PE busbar	3AXD50000336104	-	-
	Divider panel	3AXD50000336692	-	-
	DC busbars	3AXD50000333639	A-468-X-001-VX	3AXD50000333387
2 A	DC connection 1 of 2 (from DC bus to DC fuses) without DC switch/charging:			
	Busbar assembly	3AXD50000345151	A-4-8-252-VX	3AXD50000337415
	Busbars	3AXD50000345915	A-46-8-206-VX	3AXD50000337446
2 B	DC connection 1 of 2 (from DC bus to DC fuses) with DC switch/charging:			
	DC switch/charging mechanics	3AXD50000342501	A-4-8-288-VX	3AXD50000337439
	Busbar assembly	3AXD50000345236	A-4-8-290-VX	3AXD50000337422
	Busbars	3AXD50000345458	A-46-8-207-VX	3AXD50000337453
3	Module mechanical installation parts, lead-throughs:			
	Module top/bottom guides	3AXD50000335152	A-4-8-310-VX	3AXD50000337071
	Lead-throughs	3AXD50000004817	A-468-8-441	3AXD50000004385
4 A	Quick connector, output (AC) busbars (cable connection):			
	Quick connector	3AUA0000118667	A-468-8-100	3AUA0000119227
	Busbars and shrouds	3AXD50000343492	A-4-8-132-VX	3AXD50000337477
4 B	Quick connector, output (AC) busbars (common AC output busbar connection):			
	Quick connector	3AUA0000118667	A-468-8-100	3AUA0000119227
	Busbars and shrouds	3AXD50000343928	A-4-8-140-VX	3AXD50000337088
5 A	DC connection 2 of 2 (from DC fuses to inverter module) without DC switch/charging:			
	DC connection flanges	3AXD50000028384	A-468-8-246	3AXD50000028403
	DC busbars with common mode filters (filters not included in kit)	3AXD50000028418	A-468-8-235	3AXD50000028401
5 B	DC connection 2 of 2 (from DC fuses to inverter module) with DC switch/charging:			
	DC connection flanges	3AXD50000043466	A-468-8-248	3AXD50000044553
	DC busbars with common mode filters (filters not included in kit)	3AXD50000043411	A-468-8-247	3AXD50000044551
6	Shrouding	3AXD50000335169	A-4-8-359-VX	3AXD50000337484
7	Inverter module	-	-	-


Overview of kits

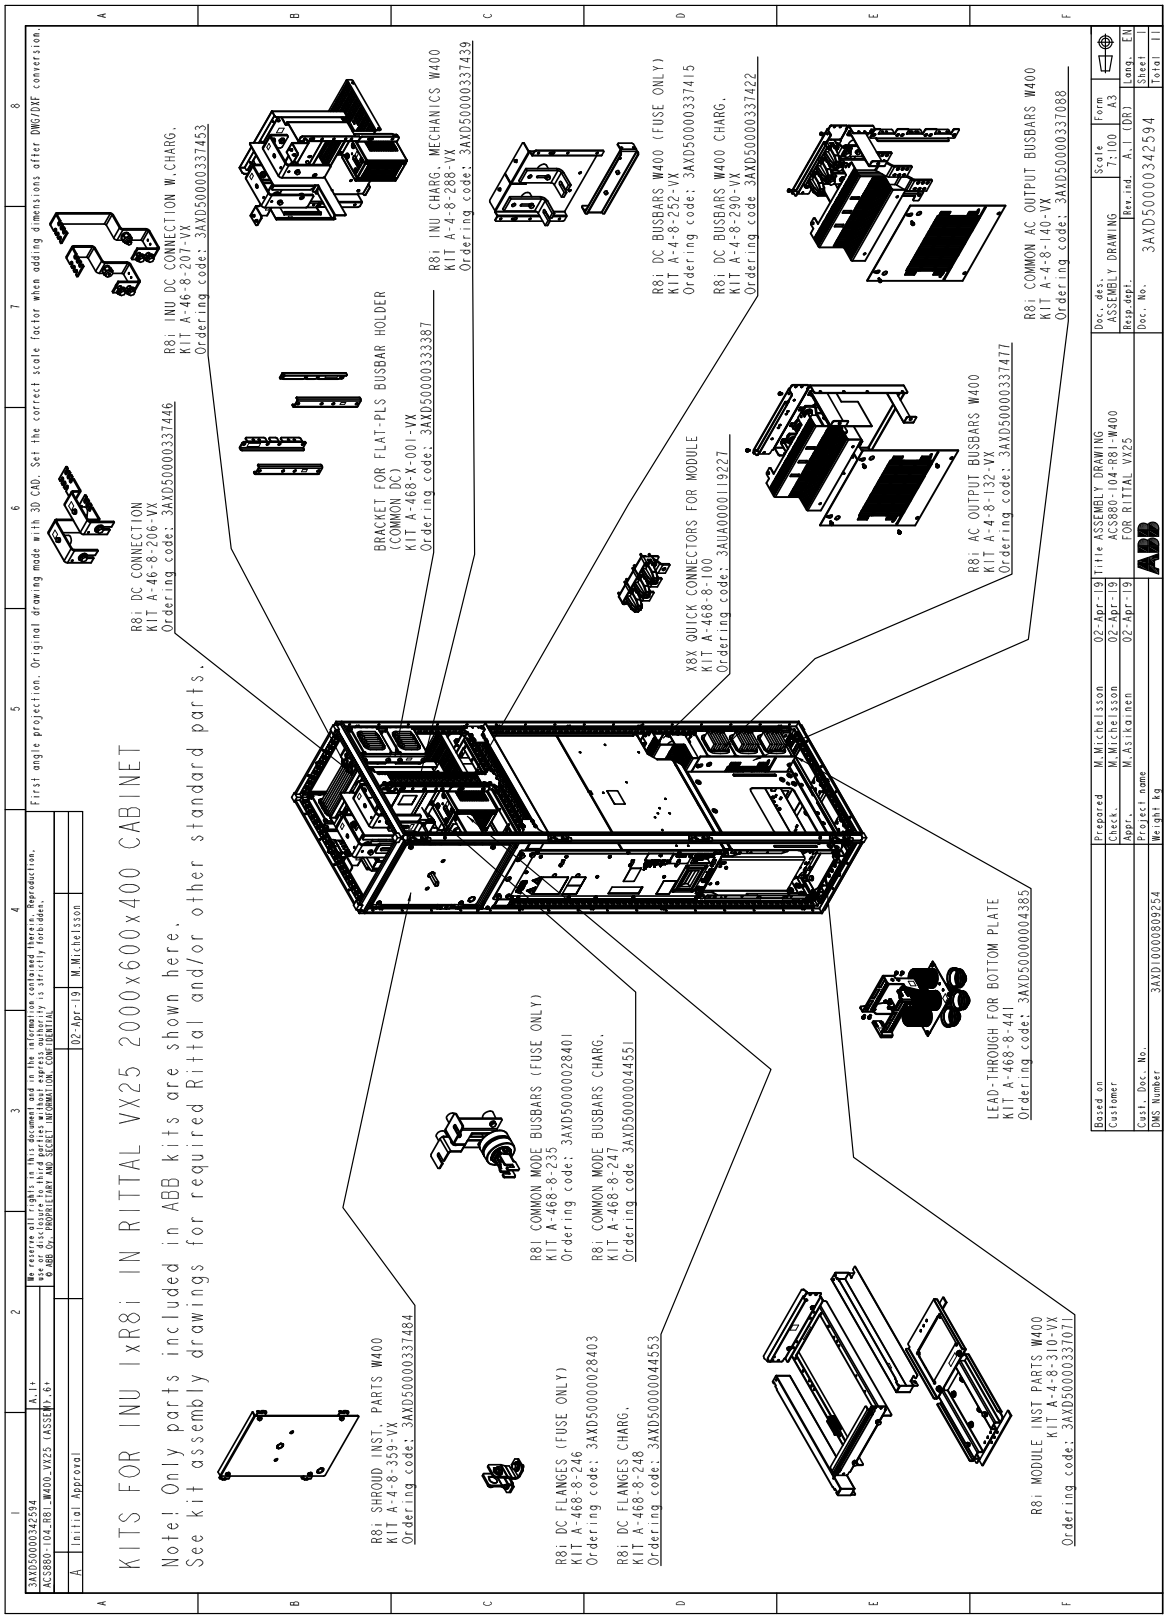


Stage 1: Installation of common parts

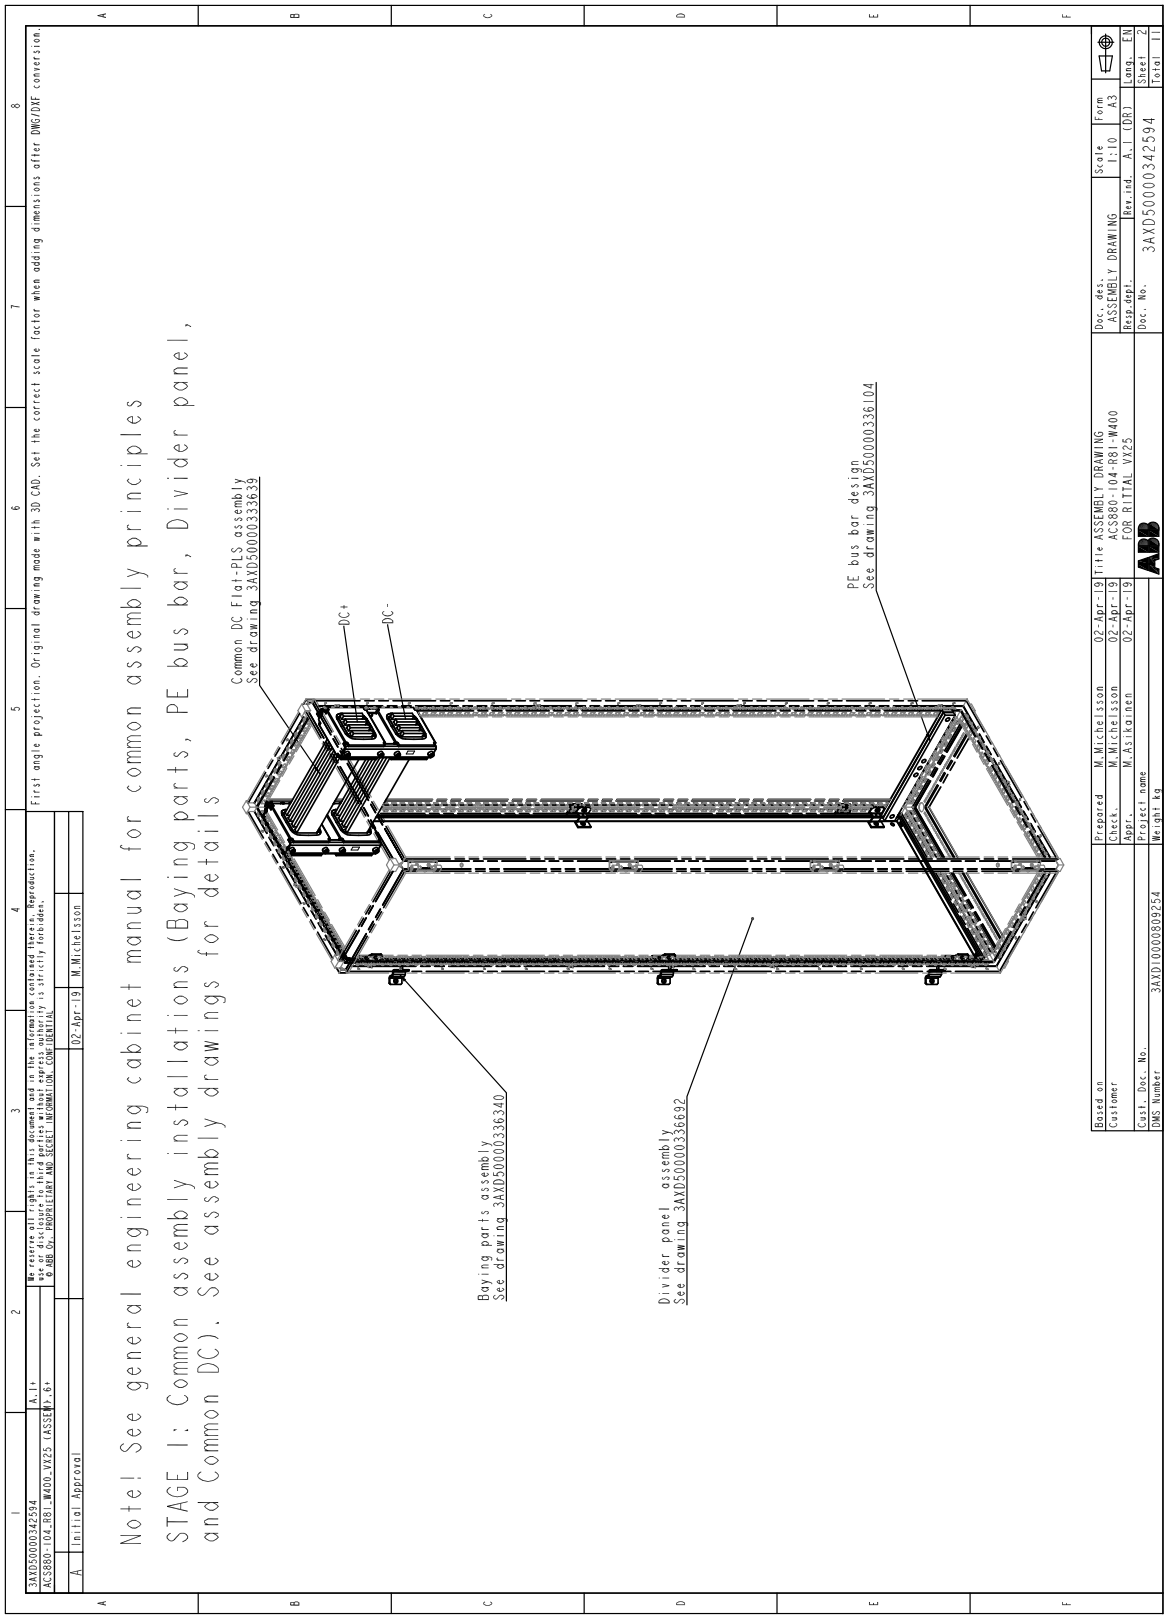


Stage 2 A: Installation of DC busbars (1) (without DC switch/charging)

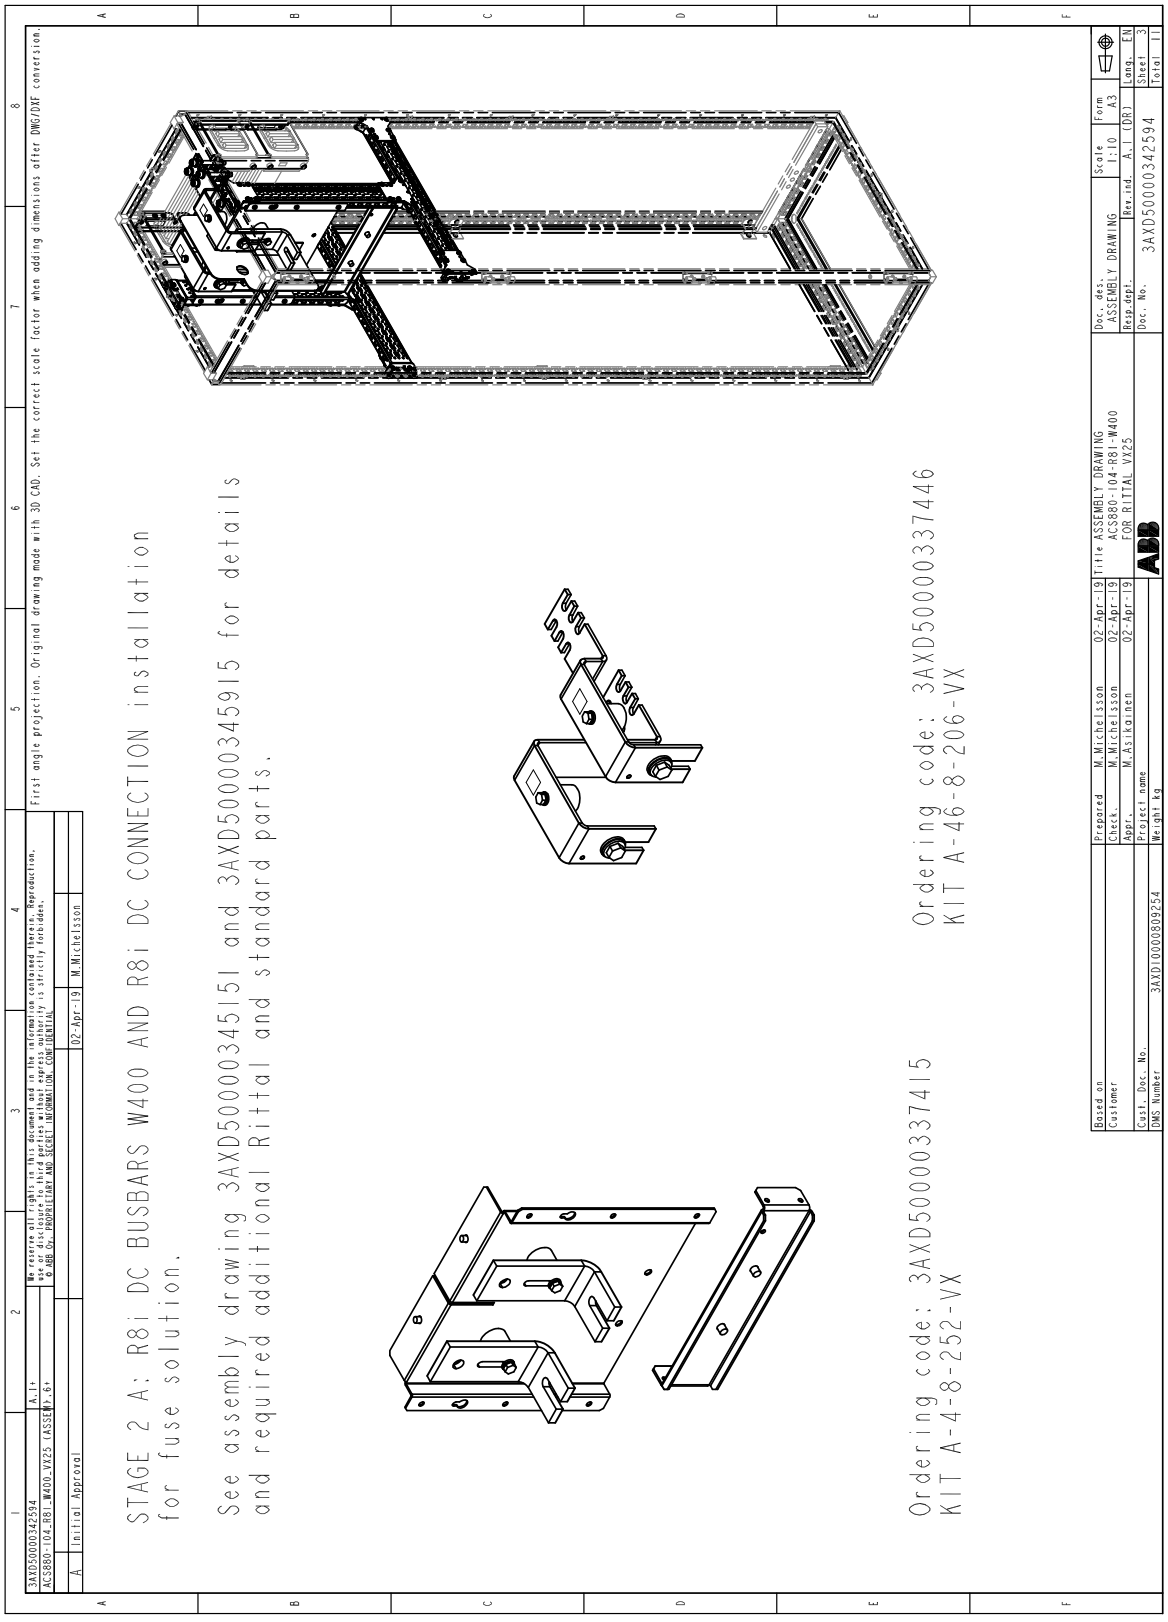


Stage 2 B: Installation of DC busbars (1) (with DC switch/charging)

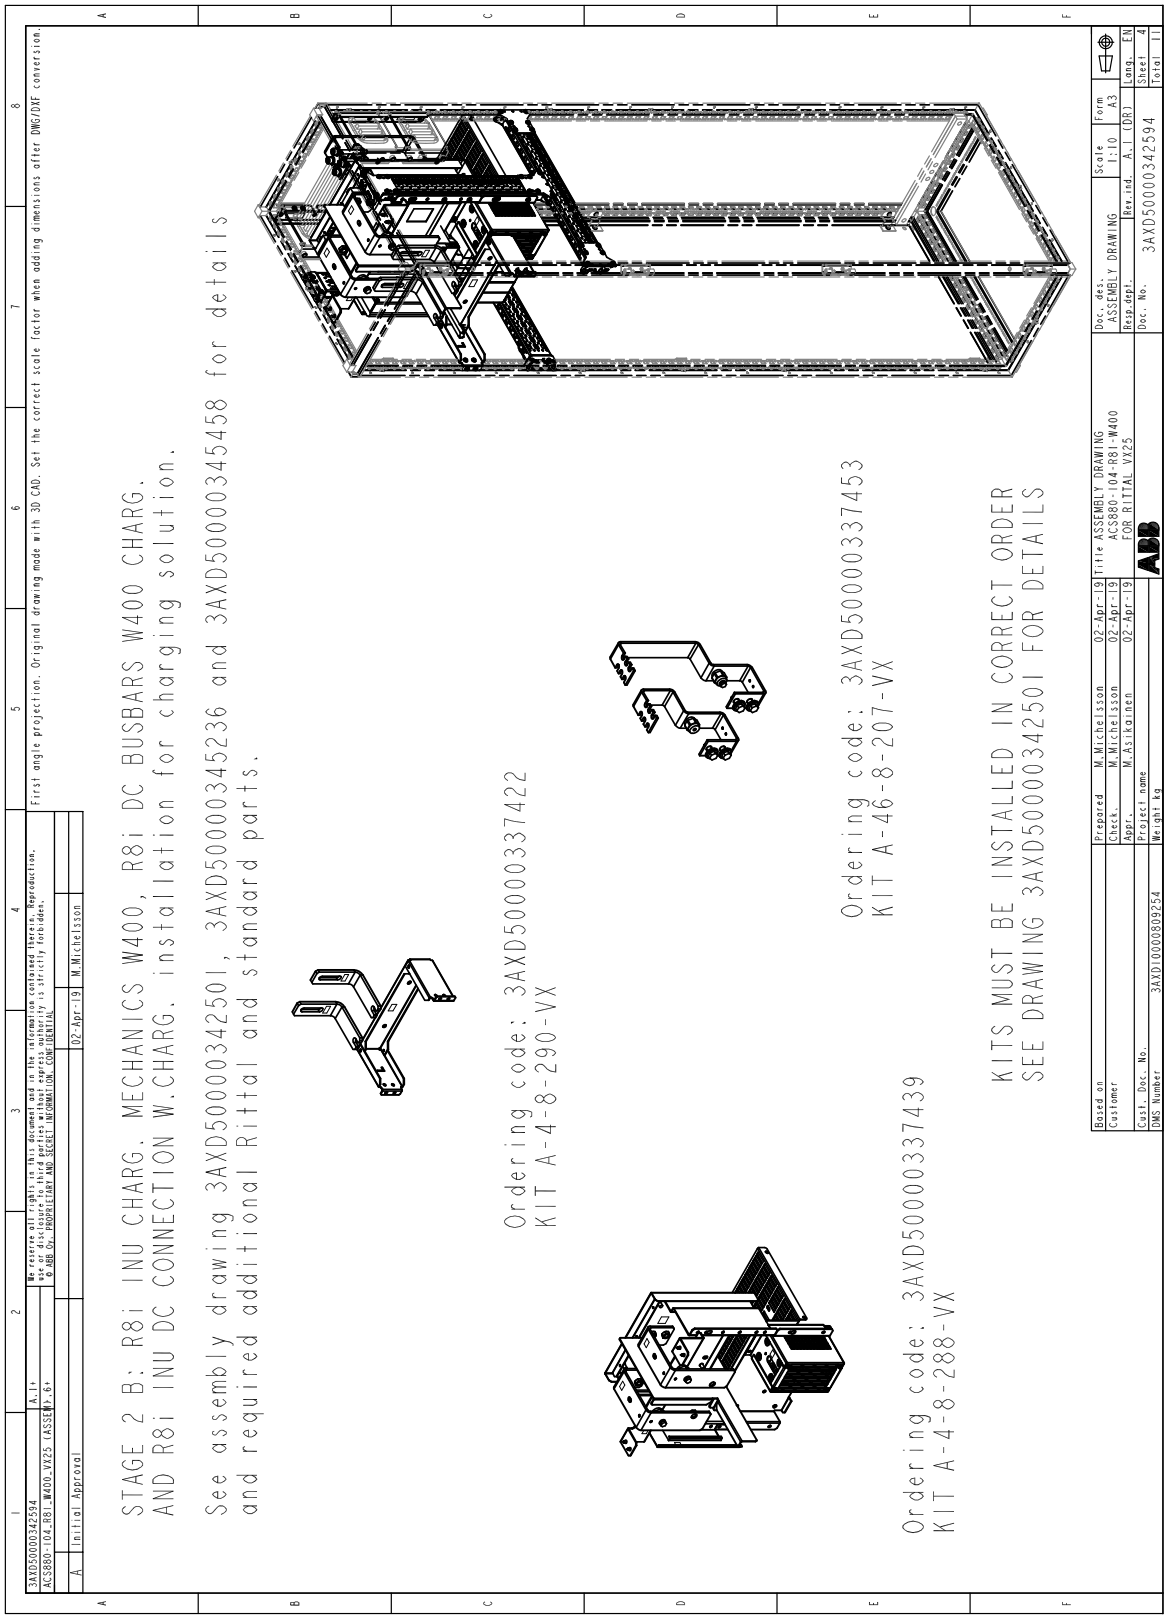


Stage 3: Installation of module installation parts and lead-throughs

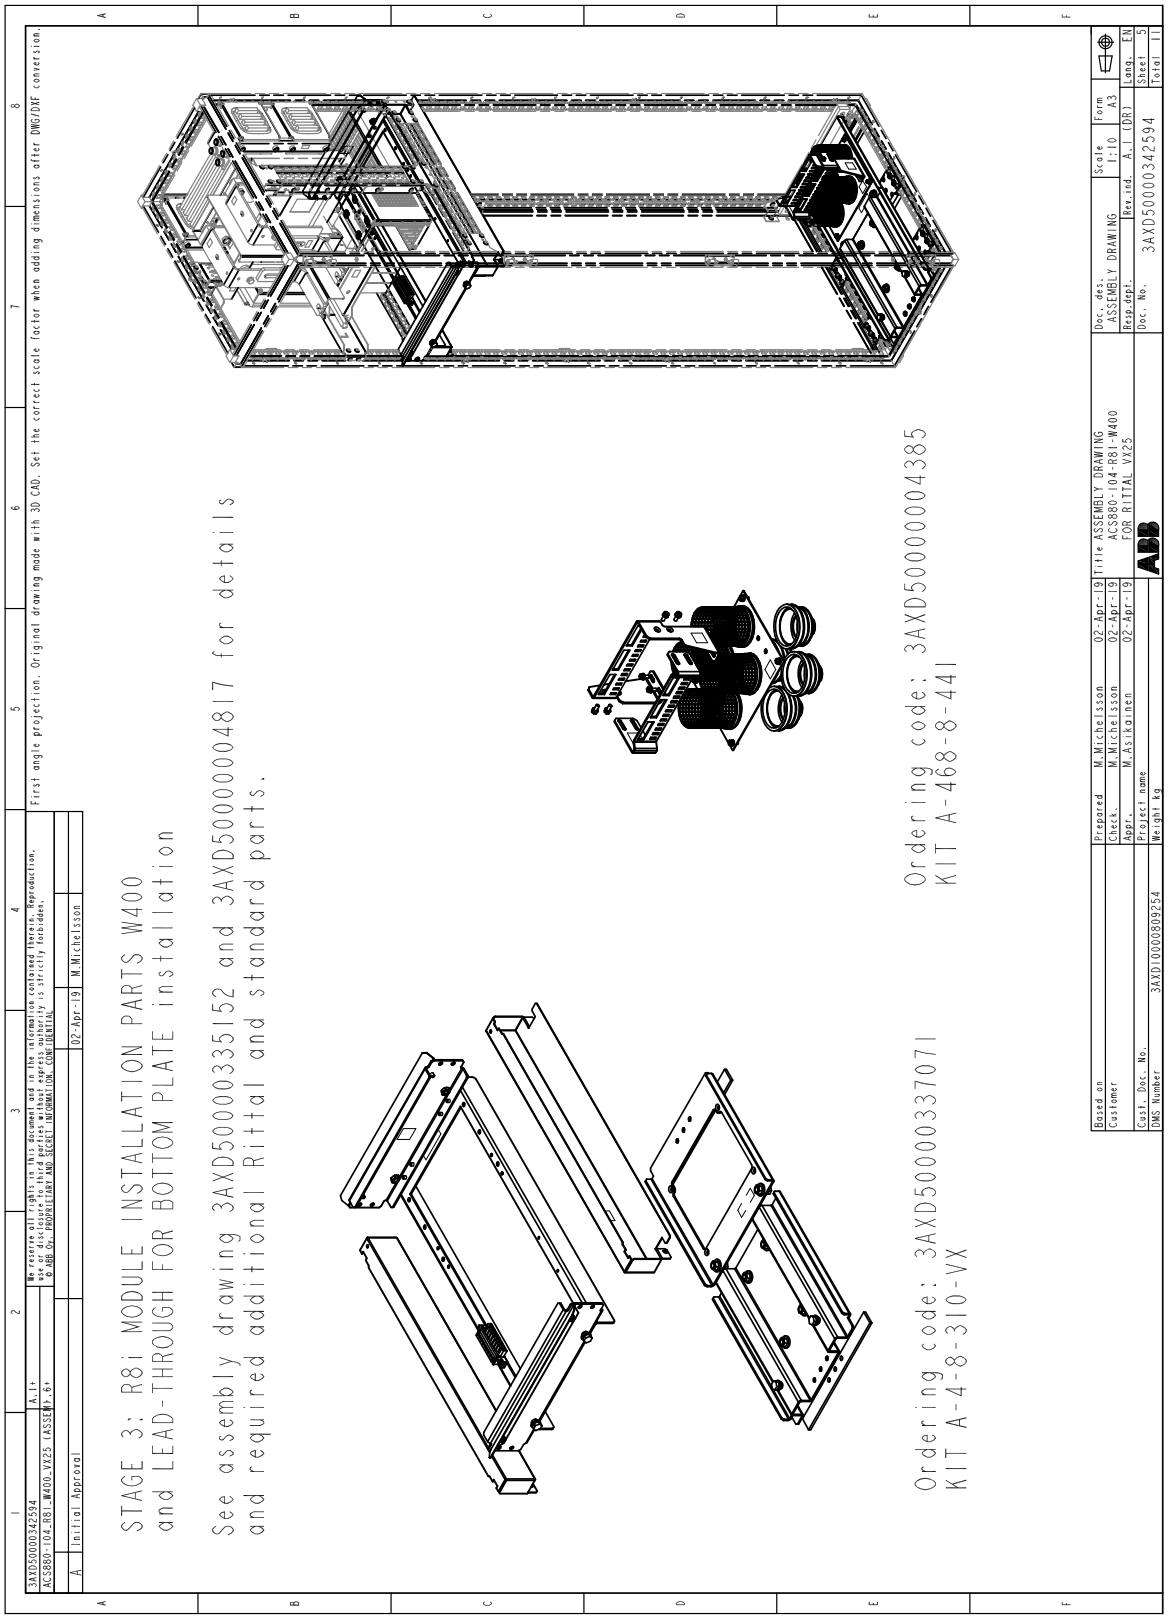


Stage 4 A: Installation of quick connector and output (AC) busbars (cable connection)

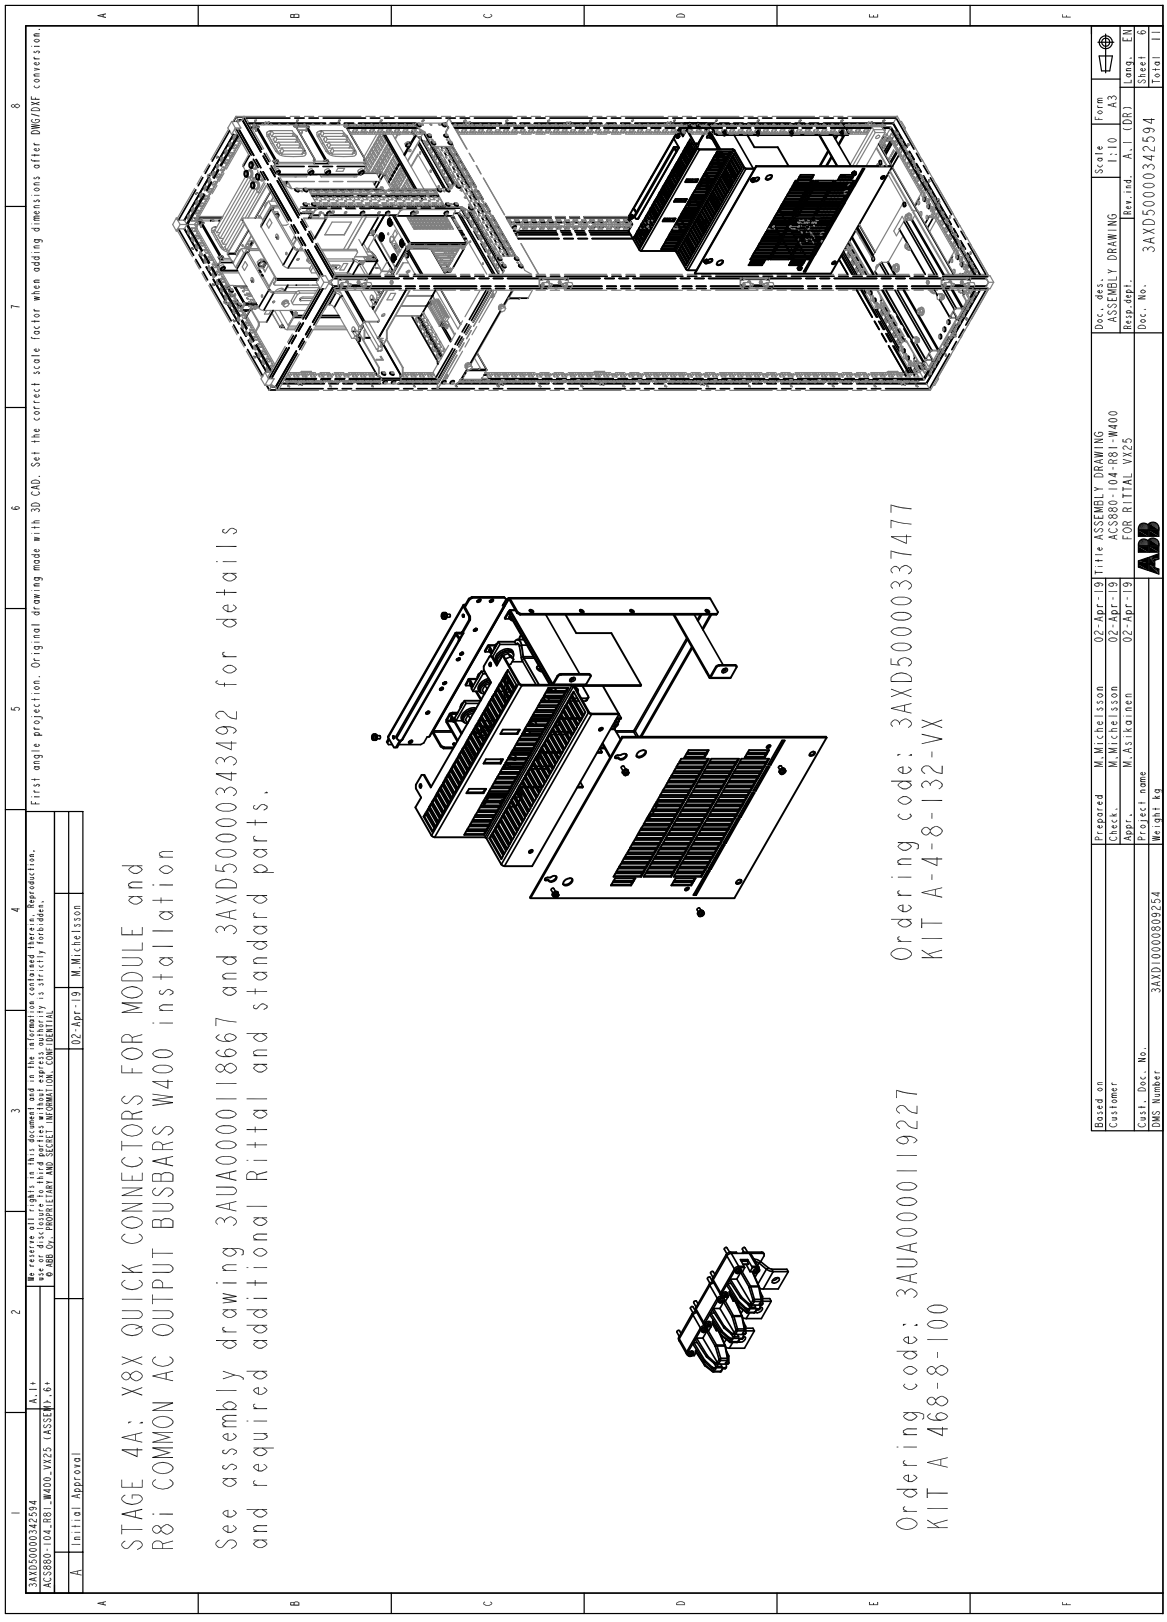


Stage 4 B: Installation of quick connector and output (AC) busbars (common AC output busbar connection)

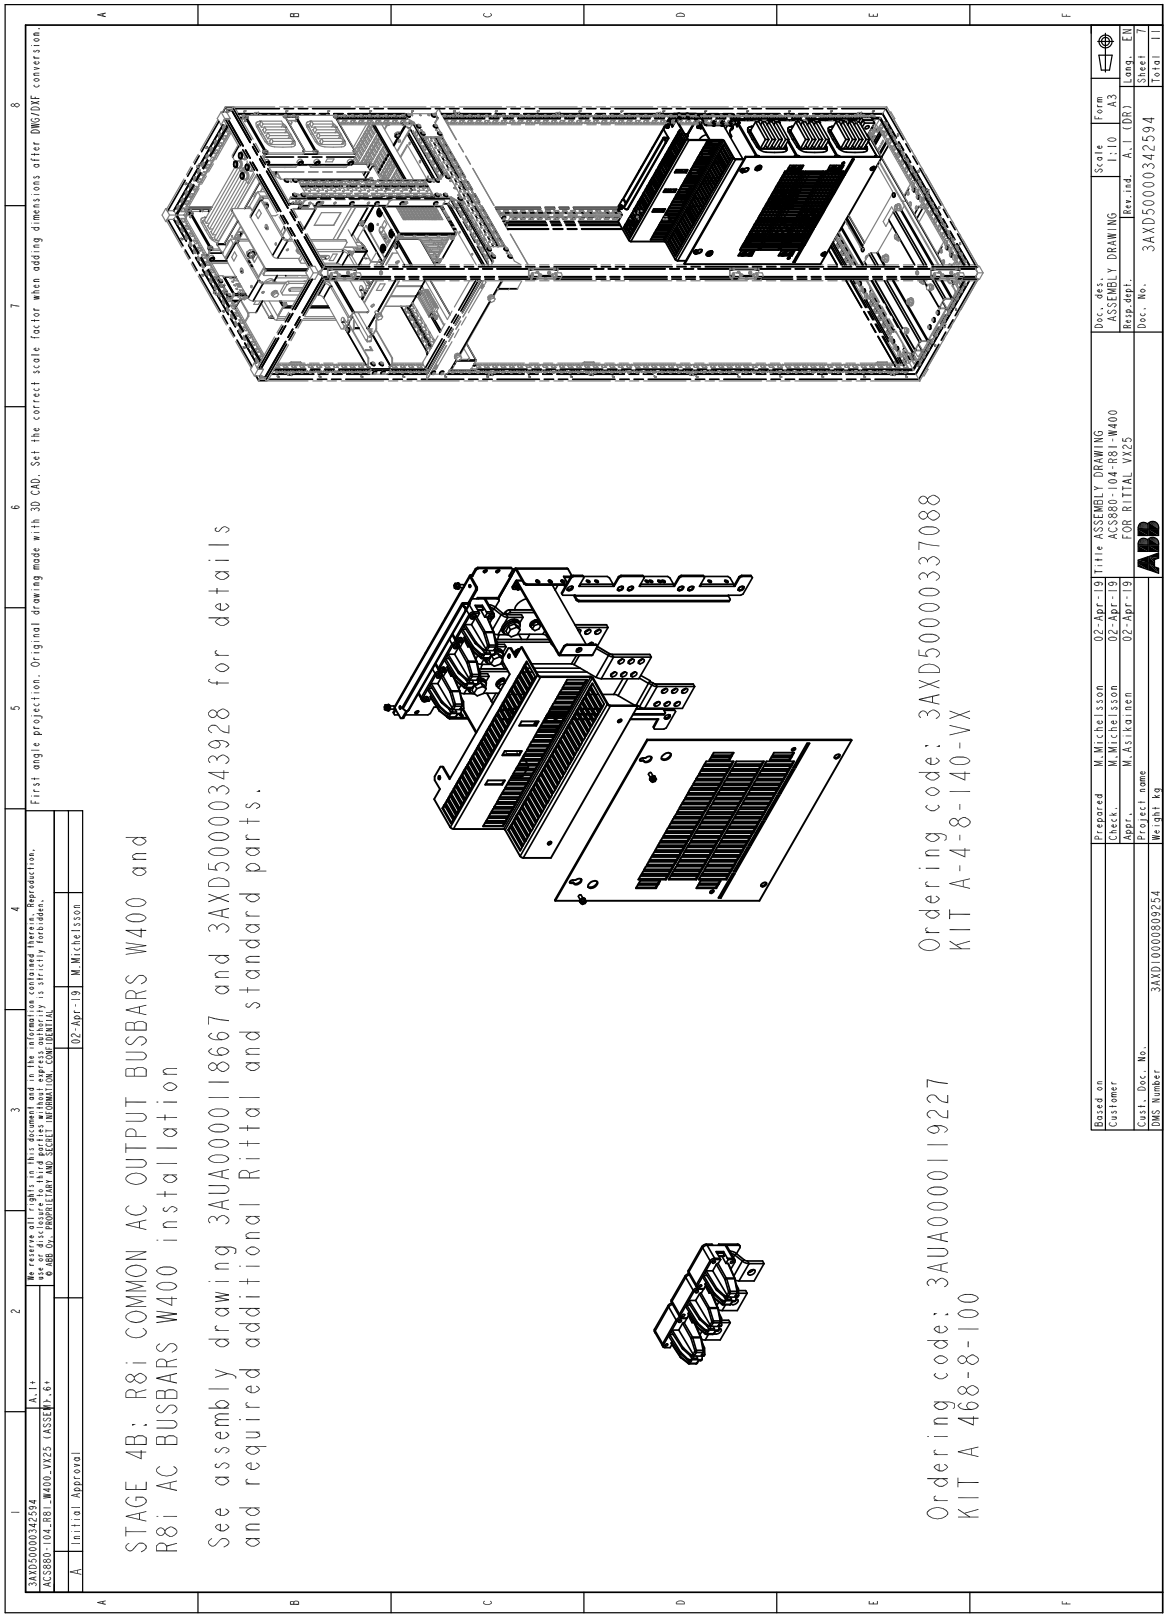


Stage 5 A: Installation of DC busbars (2) (without DC switch/charging)

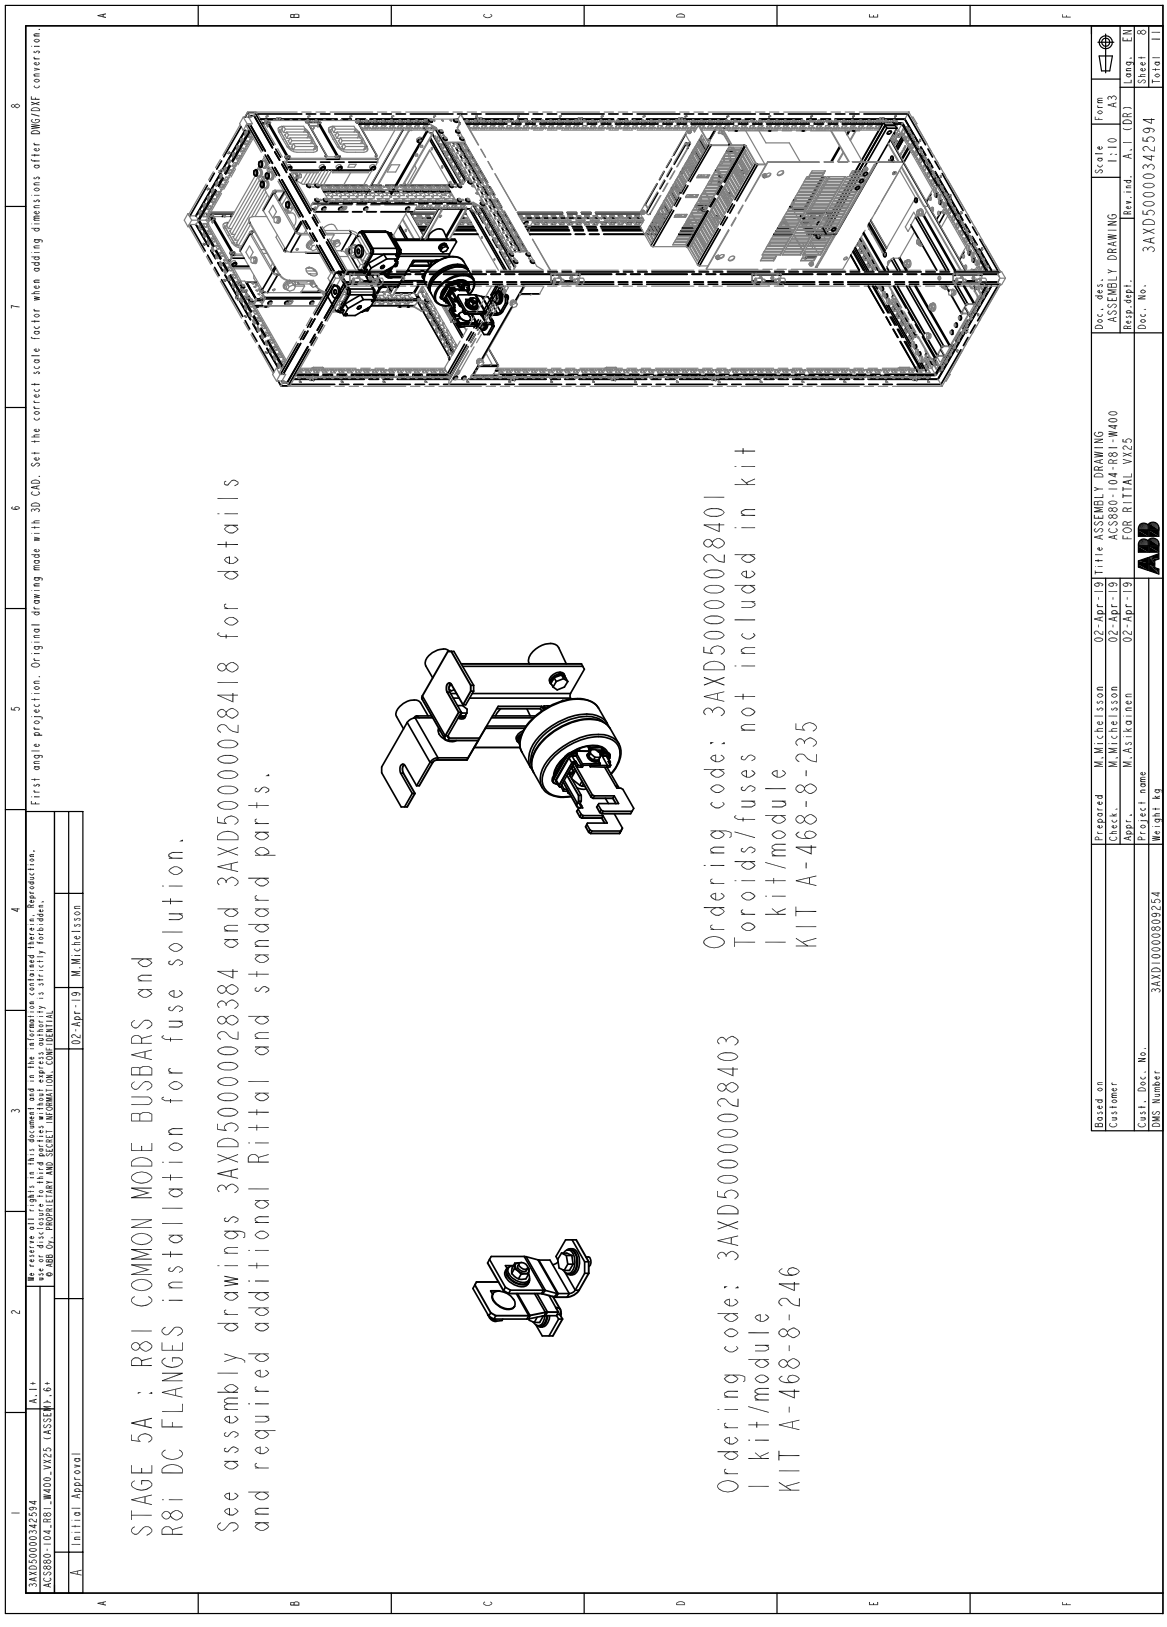


Stage 5 B: Installation of DC busbars (2) (with DC switch/charging)

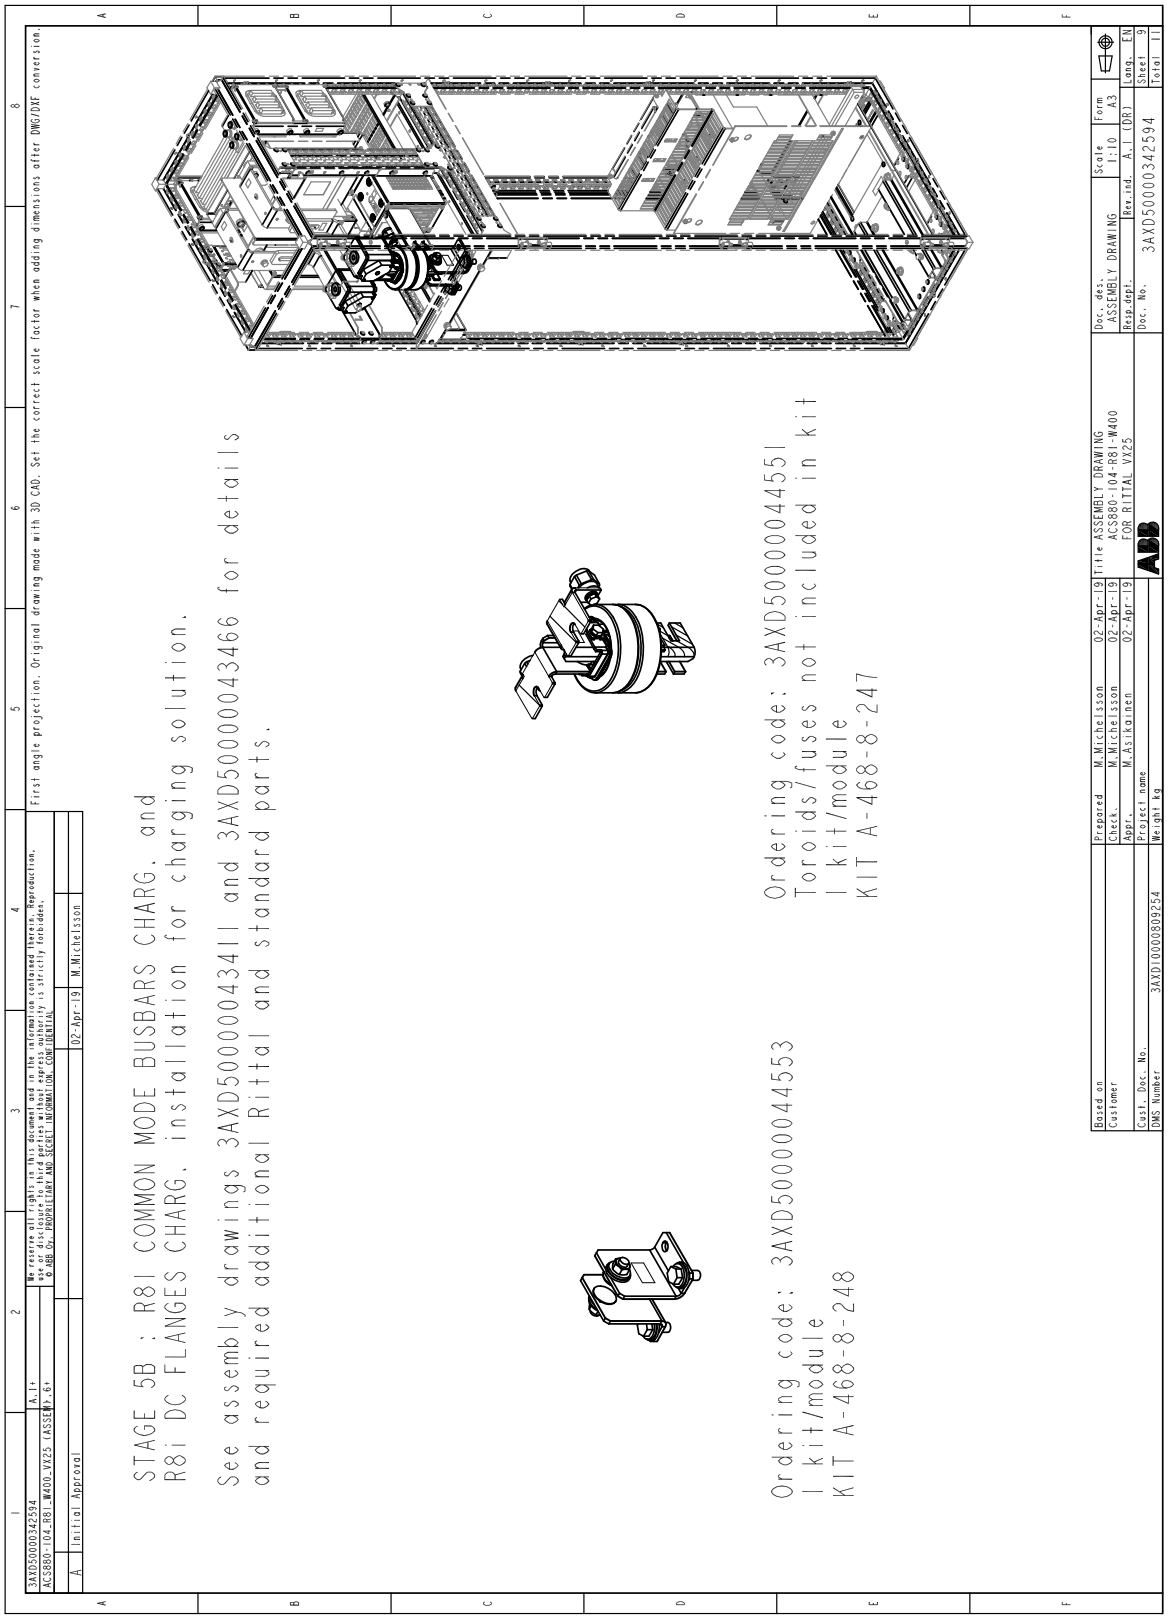


Stage 6: Installation of shrouding

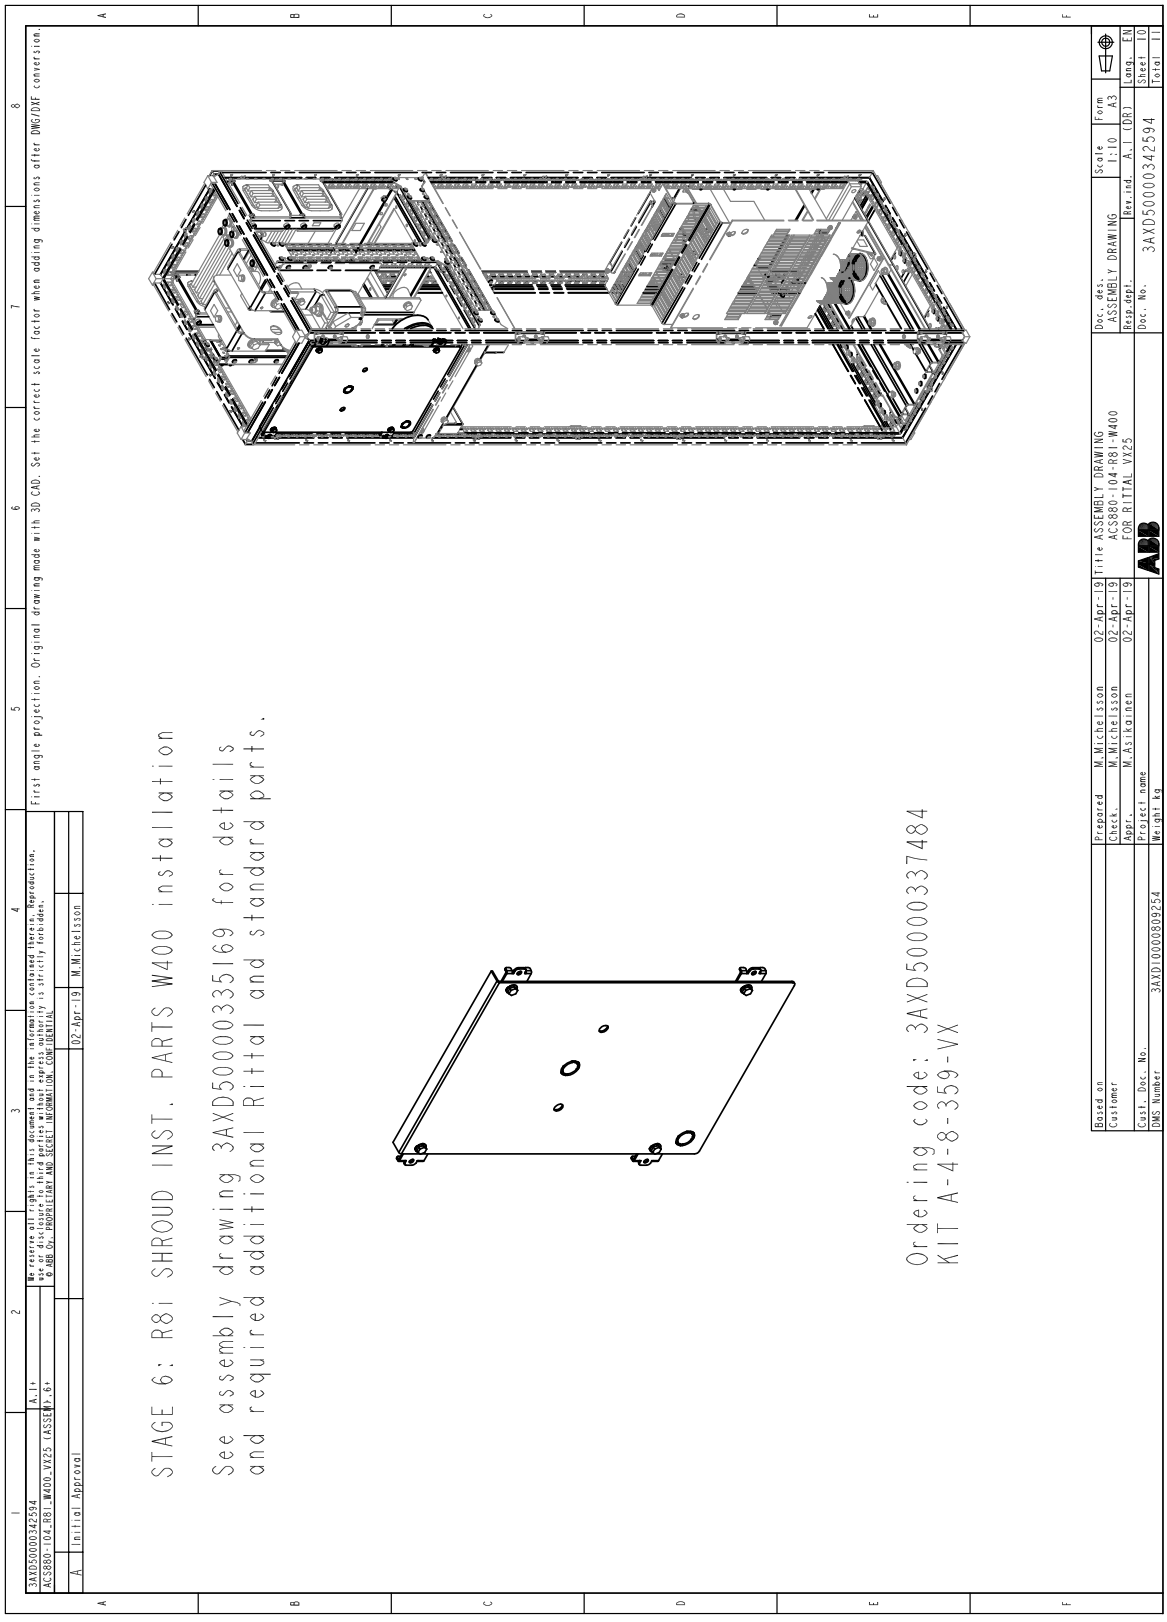

Stage 7: Installation of inverter module

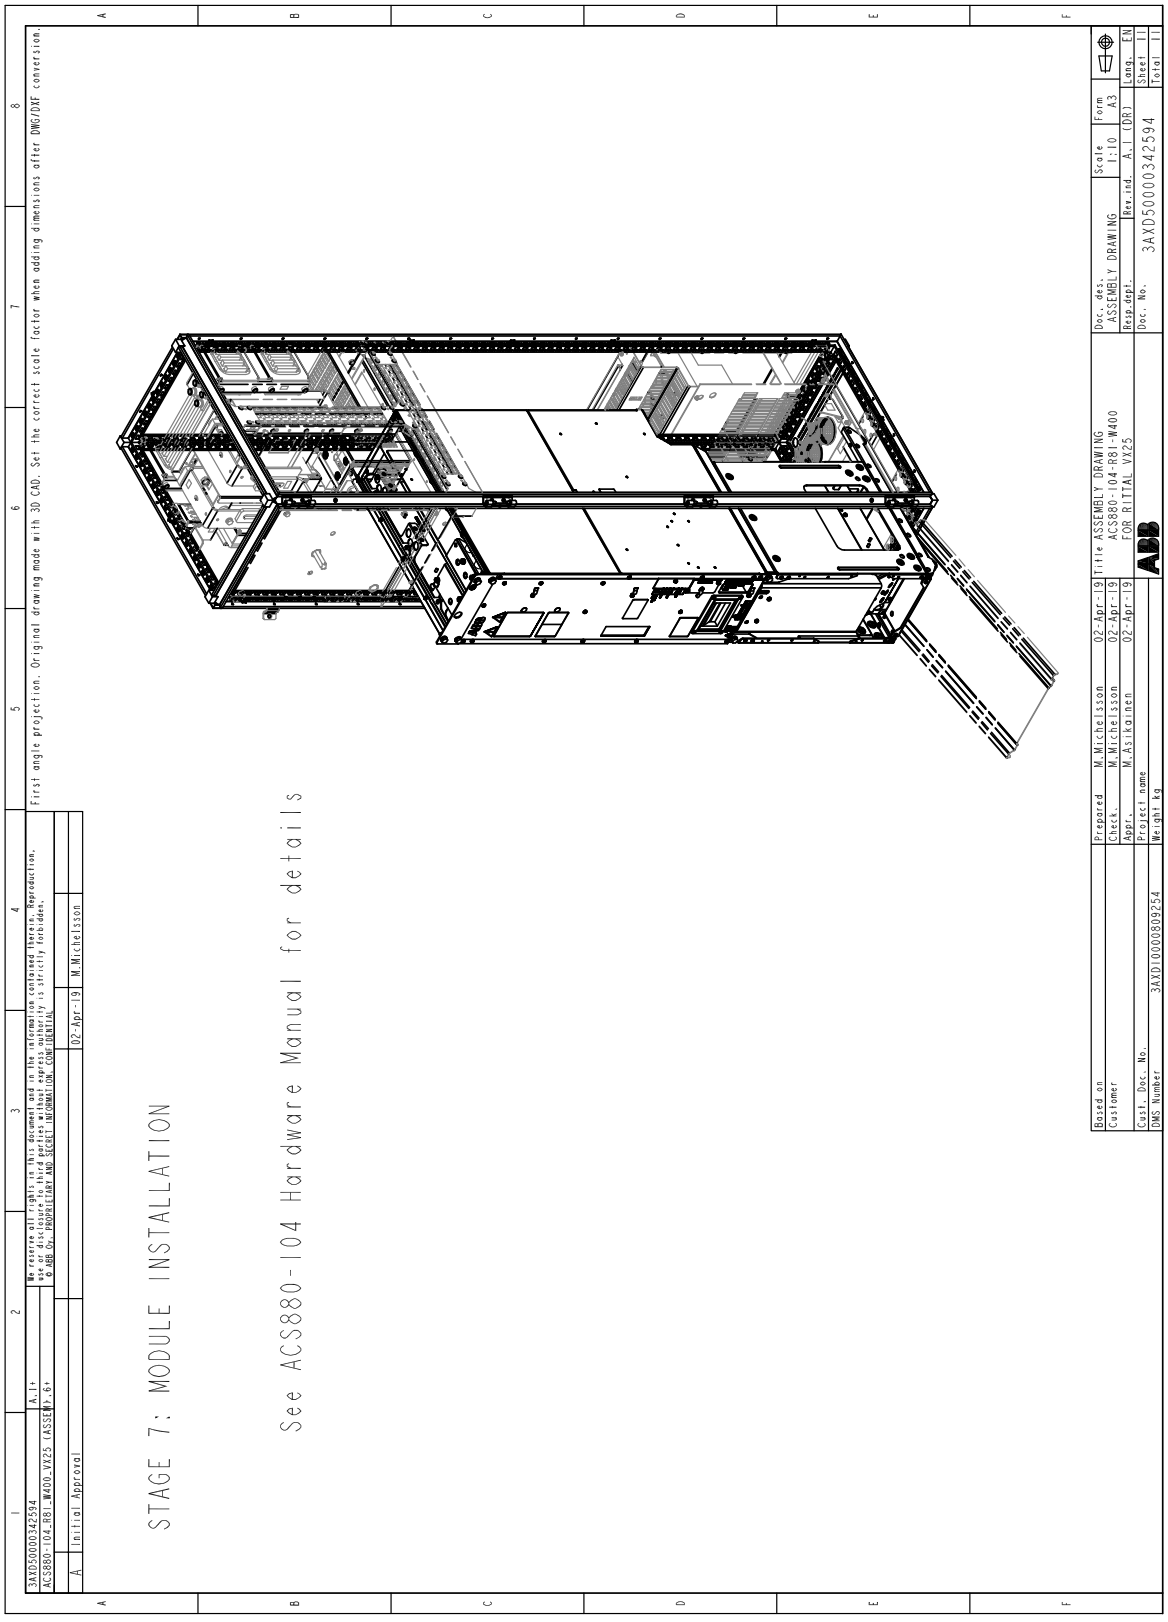

Two R8i modules in a 600 mm wide Rittal VX25 enclosure

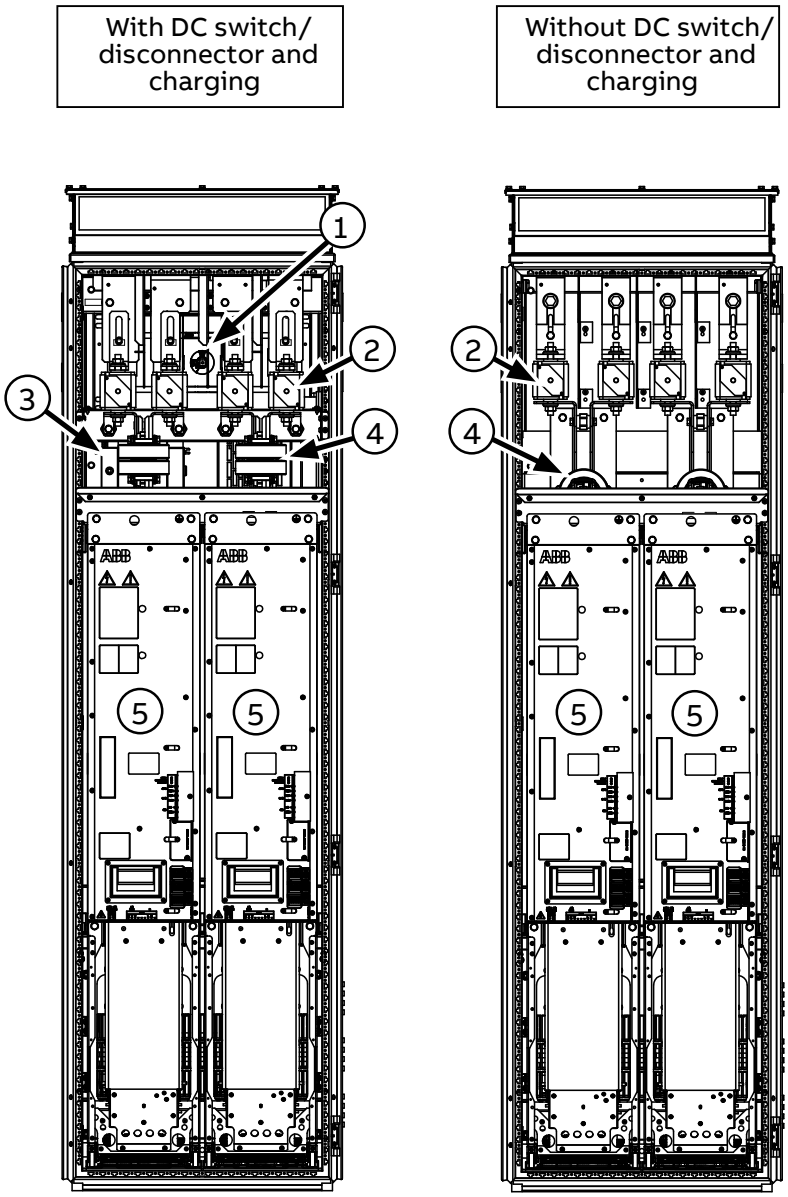


Description
Cubicle including: 1. DC switch/disconnector (obscured) 2. DC fuses 3. Charging switch 4. Common mode filters 5. Inverter module

Installation stages


#	Installation stage	Instruction code	Kit code	Kit ordering code
1	Common parts:			
	Baying parts	3AXD50000336340	-	-
	PE busbar	3AXD50000336104	-	-
	Divider panel	3AXD50000336692	-	-
	DC busbars	3AXD50000333639	A-468-X-001-VX	3AXD50000333387
2 A	DC connection 1 of 2 (from DC bus to DC fuses) without DC switch/charging:			
	Busbar assembly	3AXD50000342471	A-6-8-255-VX	3AXD50000337521
	Busbars	3AXD50000345915	A-46-8-206-VX	3AXD50000337446
2 B	DC connection 1 of 2 (from DC bus to DC fuses) with DC switch/charging:			
	DC switch/charging assembly	3AXD50000342860	A-6-8-289-VX	3AXD50000337545
	Busbar assembly	3AXD50000342983	A-6-8-291-VX	3AXD50000337538
	Busbars	3AXD50000345458	A-46-8-207-VX	3AXD50000337453
3	Module mechanical installation parts, lead-throughs:			
	Module top/bottom guides	3AXD50000345052	A-6-8-309-VX	3AXD50000337514
	Lead-throughs	3AXD50000004817	A-468-8-441	3AXD50000004385
4 A	Quick connector, output (AC) busbars (cable connection without bridging):			
	Quick connector	3AUA0000118667	A-468-8-100	3AUA0000119227
	Busbars and shrouds	3AXD50000345526	A-6-8-133-VX	3AXD50000337569
4 B	Quick connector, output (AC) busbars (cable connection with bridging):			
	Quick connector	3AUA0000118667	A-468-8-100	3AUA0000119227
	Busbars and shrouds	3AXD50000345632	A-6-8-134-VX	3AXD50000337576
4 C	Quick connector, output (AC) busbars (common AC output busbar connection):			
	Quick connector	3AUA0000118667	A-468-8-100	3AUA0000119227
	Busbars and shrouds	3AXD50000346196	A-6-8-141-VX	3AXD50000337552
5 A	DC connection 2 of 2 (from DC fuses to inverter module) without DC switch/charging:			
	DC connection flanges	3AXD50000028384	A-468-8-246	3AXD50000028403
	DC busbars with common mode filters	3AXD50000028418	A-468-8-235	3AXD50000028401
5 B	DC connection 2 of 2 (from DC fuses to inverter module) with DC switch/charging:			
	DC connection flanges	3AXD50000043466	A-468-8-248	3AXD50000044553

#	Installation stage	Instruction code	Kit code	Kit ordering code
	DC busbars with common mode filters (filters not included in kit)	3AXD50000043411	A-468-8-247	3AXD50000044551
6	Shrouding	3AXD50000335022	A-6-8-360-VX	3AXD50000337378
7	Inverter module	-	-	-


Overview of kits

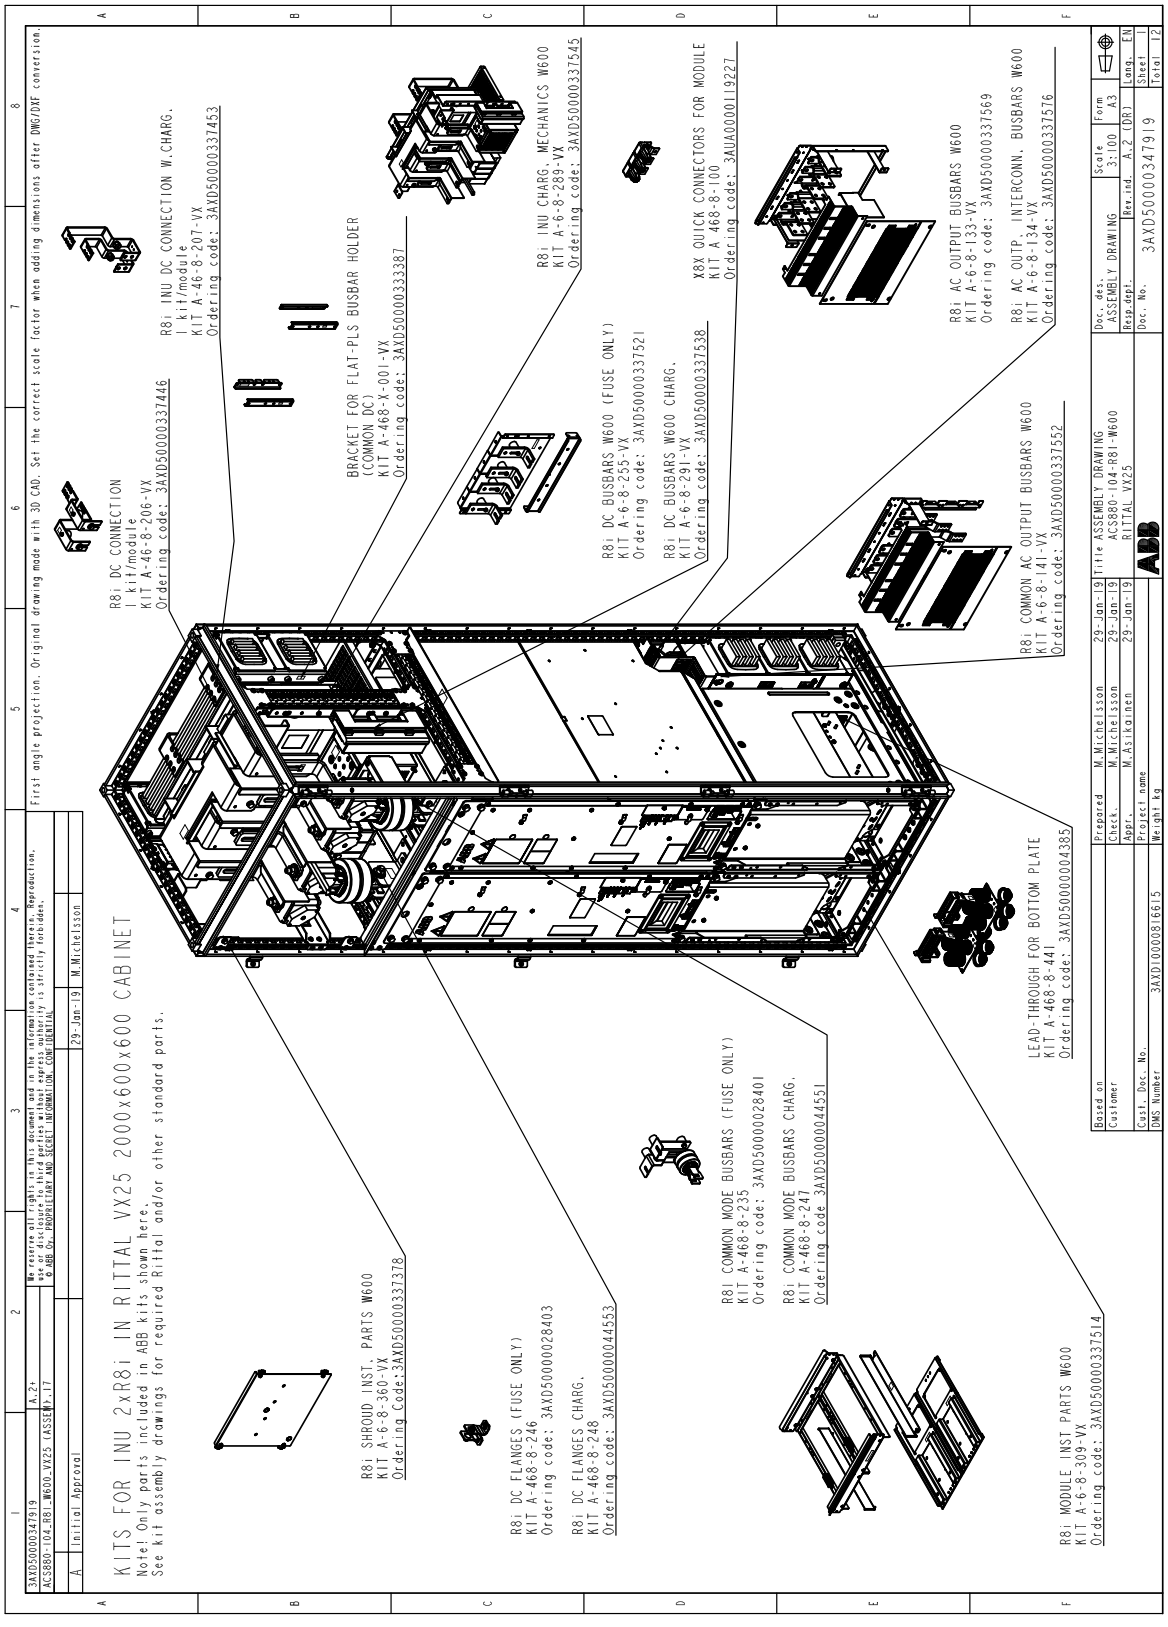


Stage 1: Installation of common parts

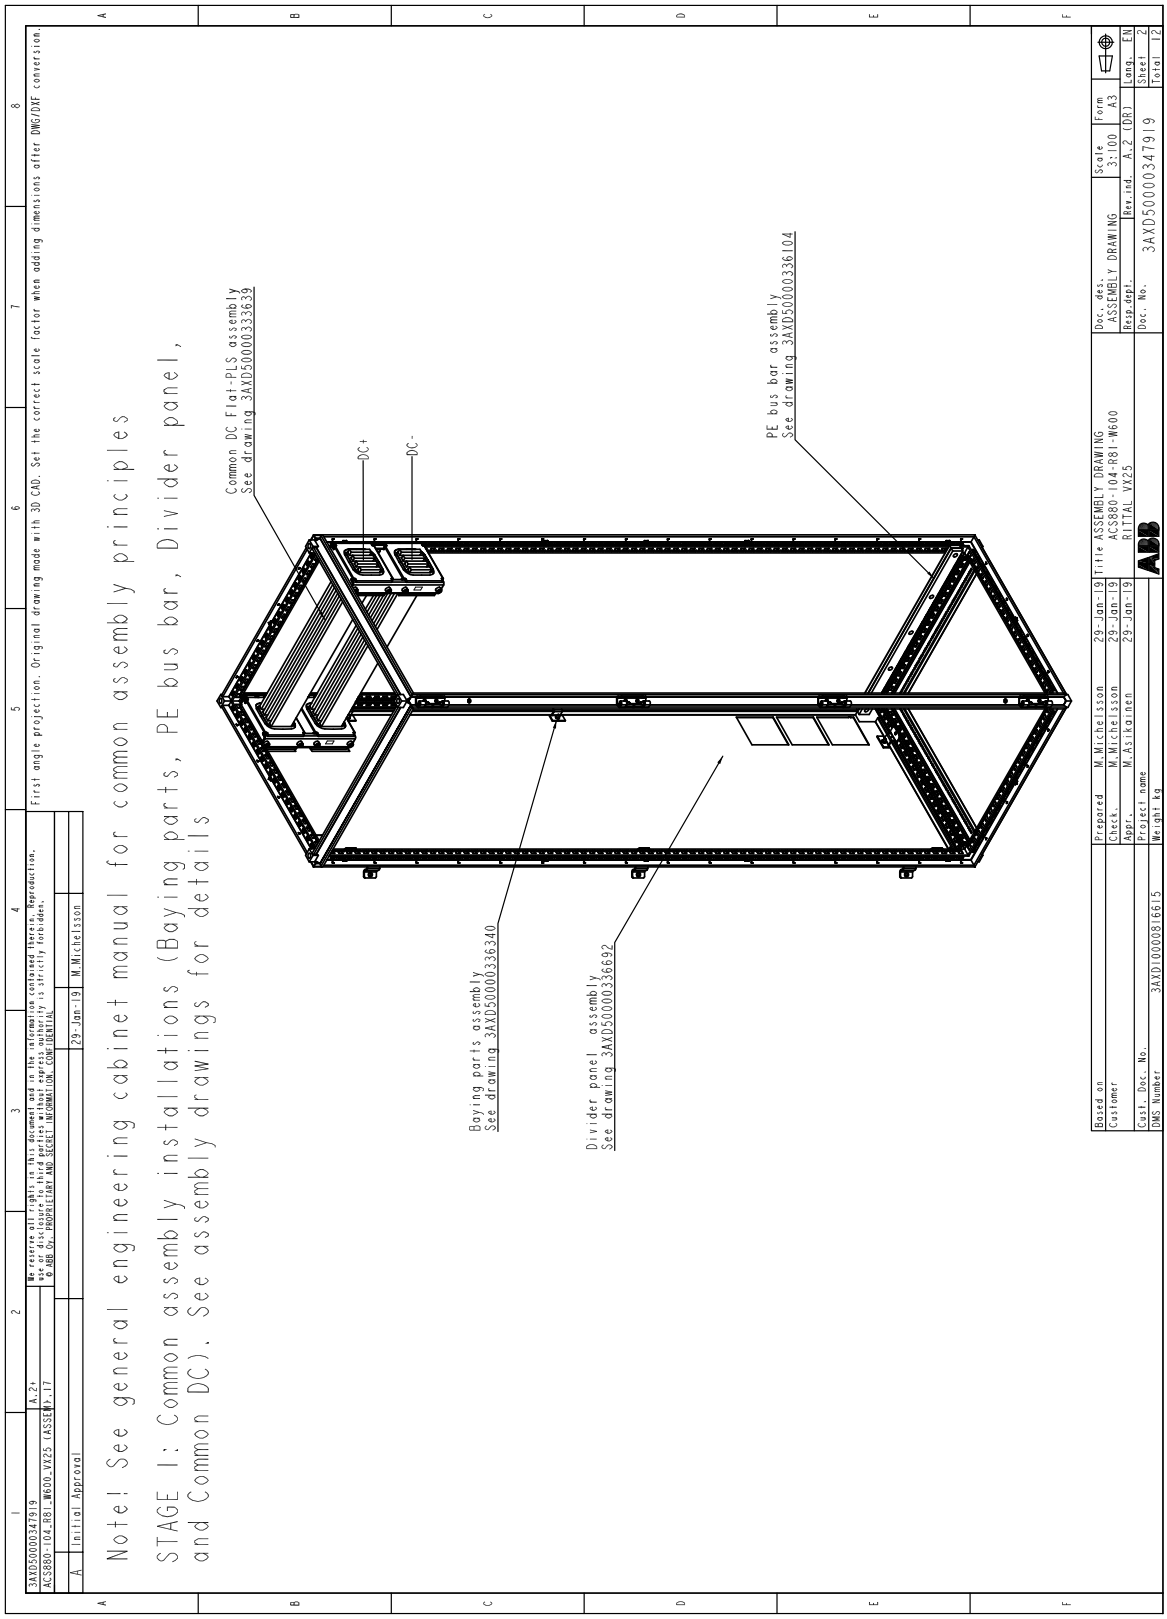


Stage 2 A: Installation of DC busbars (1) (without DC switch/charging)

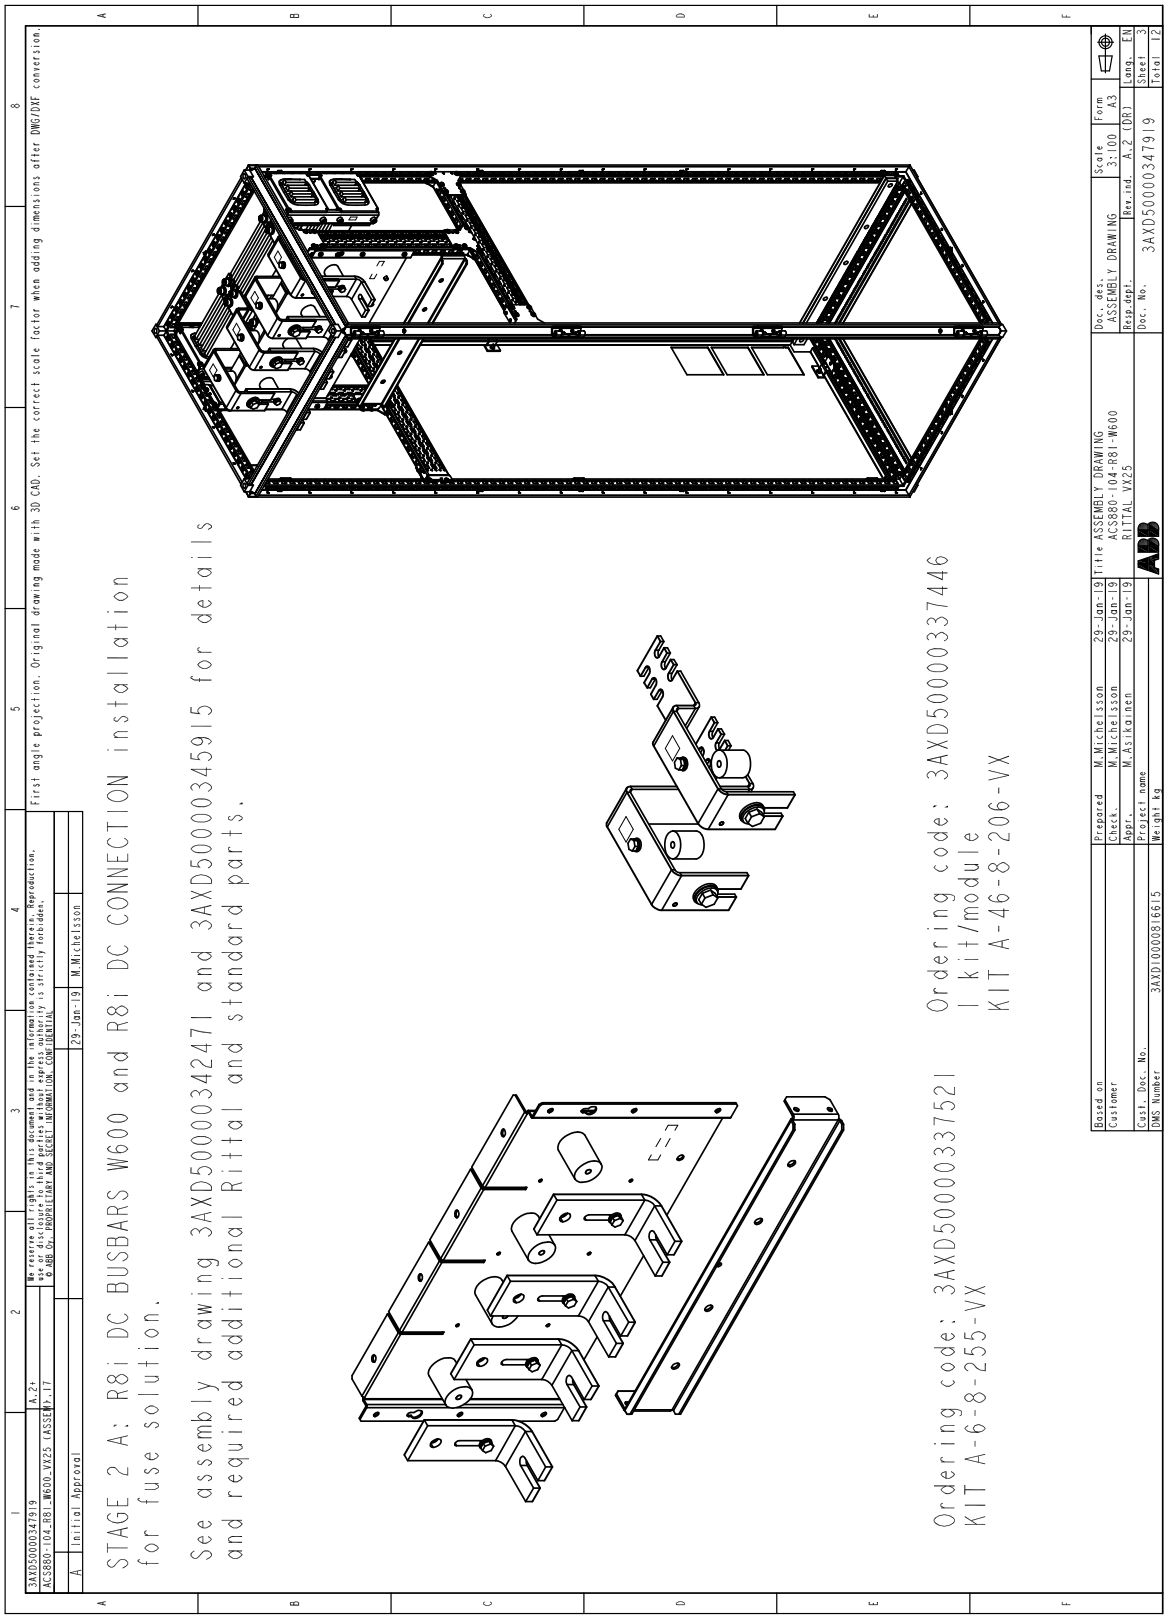


Stage 2 B: Installation of DC busbars (1) (with DC switch/charging)

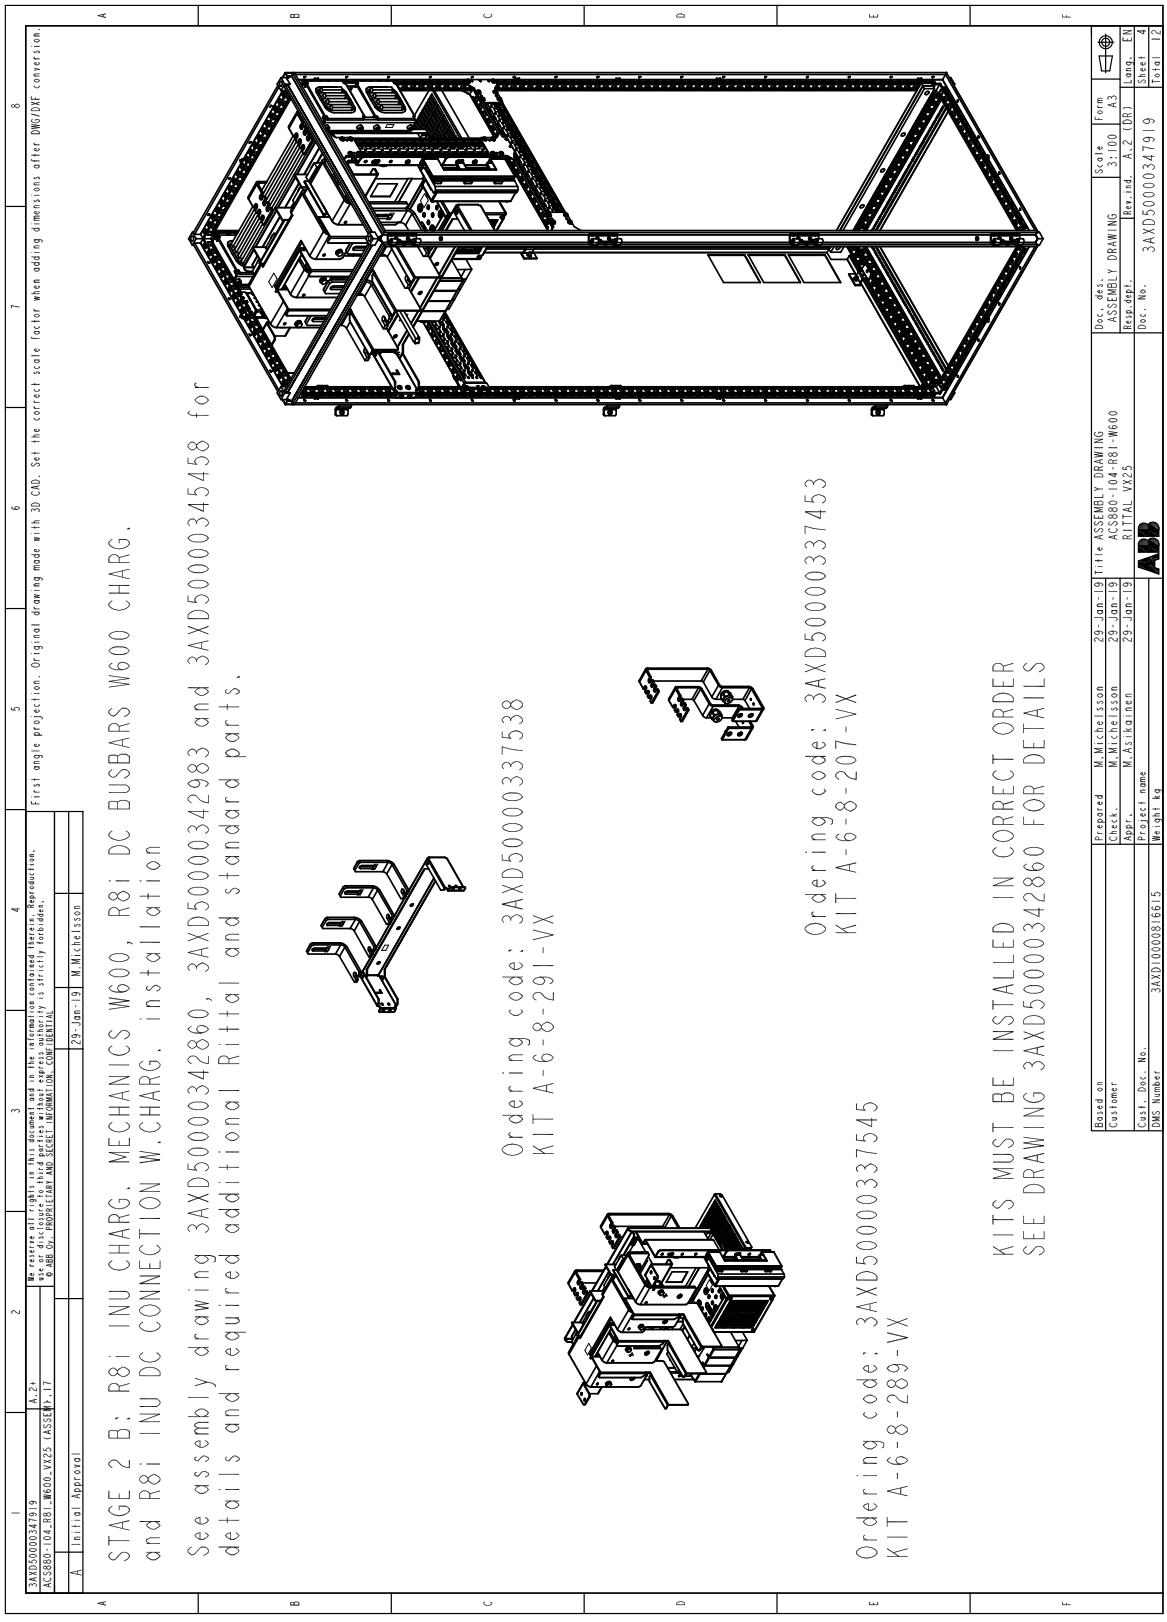


Stage 3: Installation of module installation parts and lead-throughs

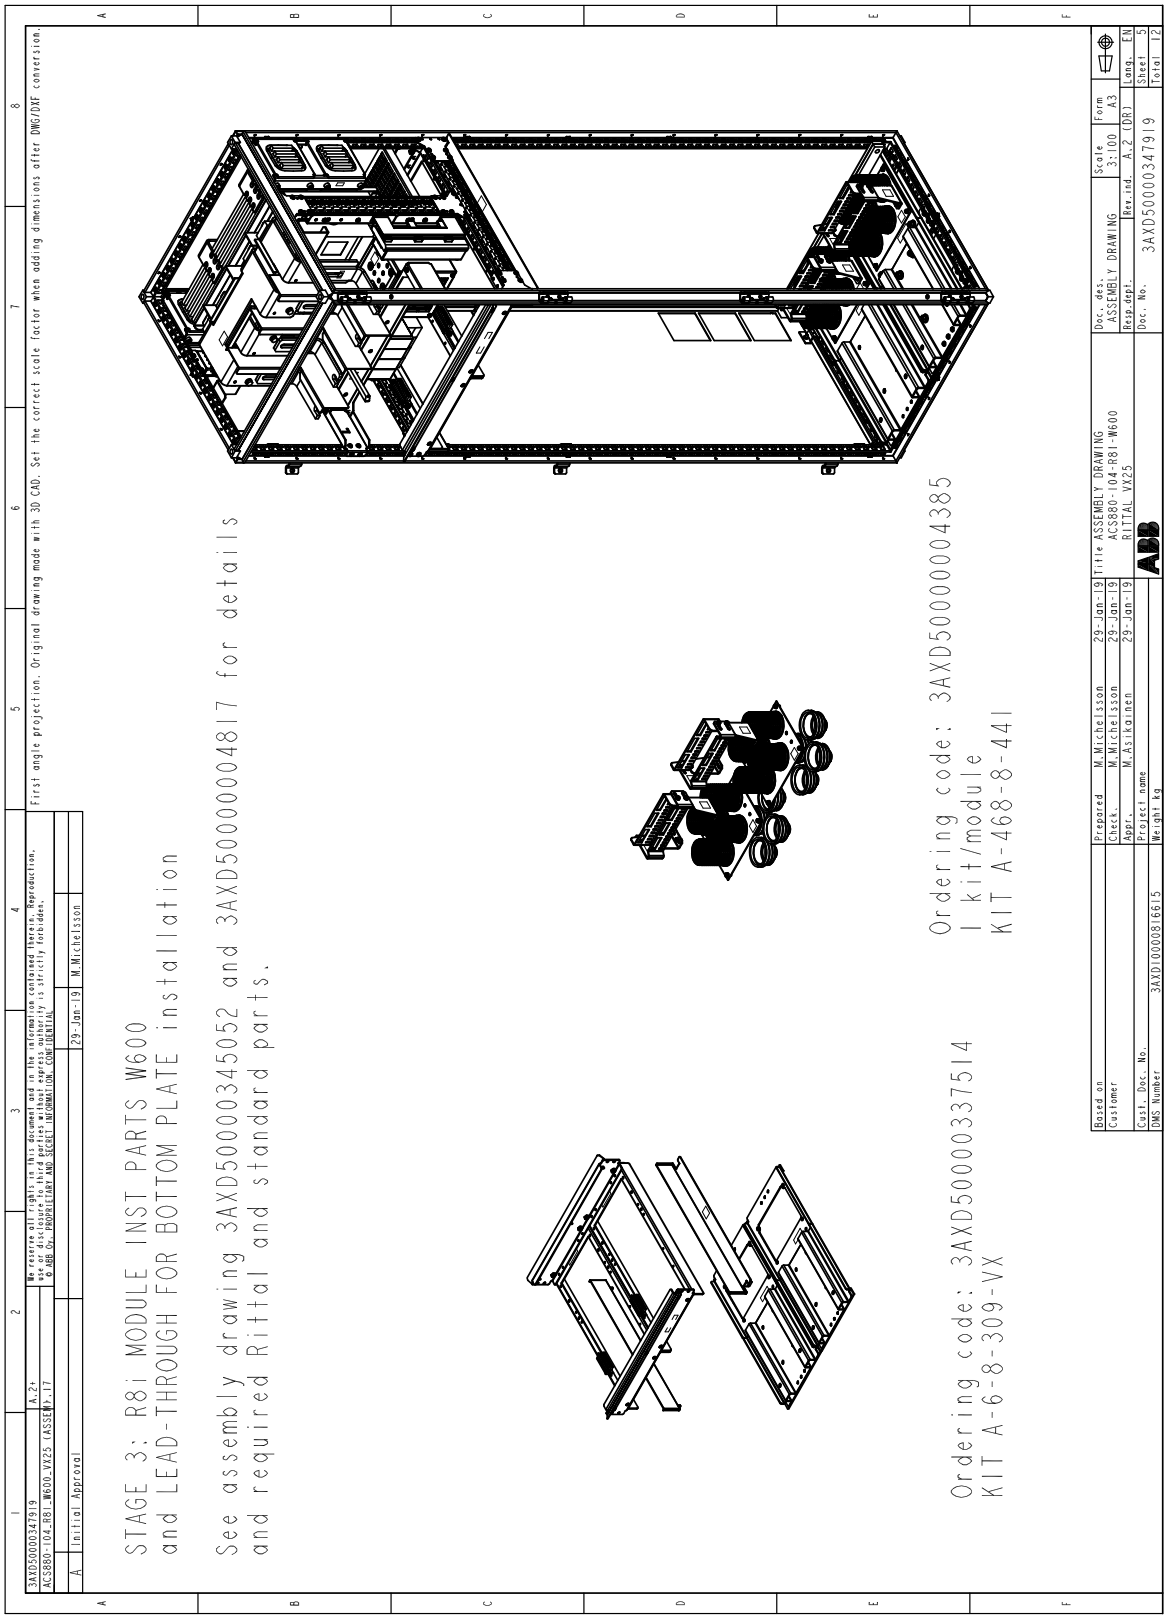


Stage 4 A: Installation of quick connector and output (AC) busbars (cable connection)

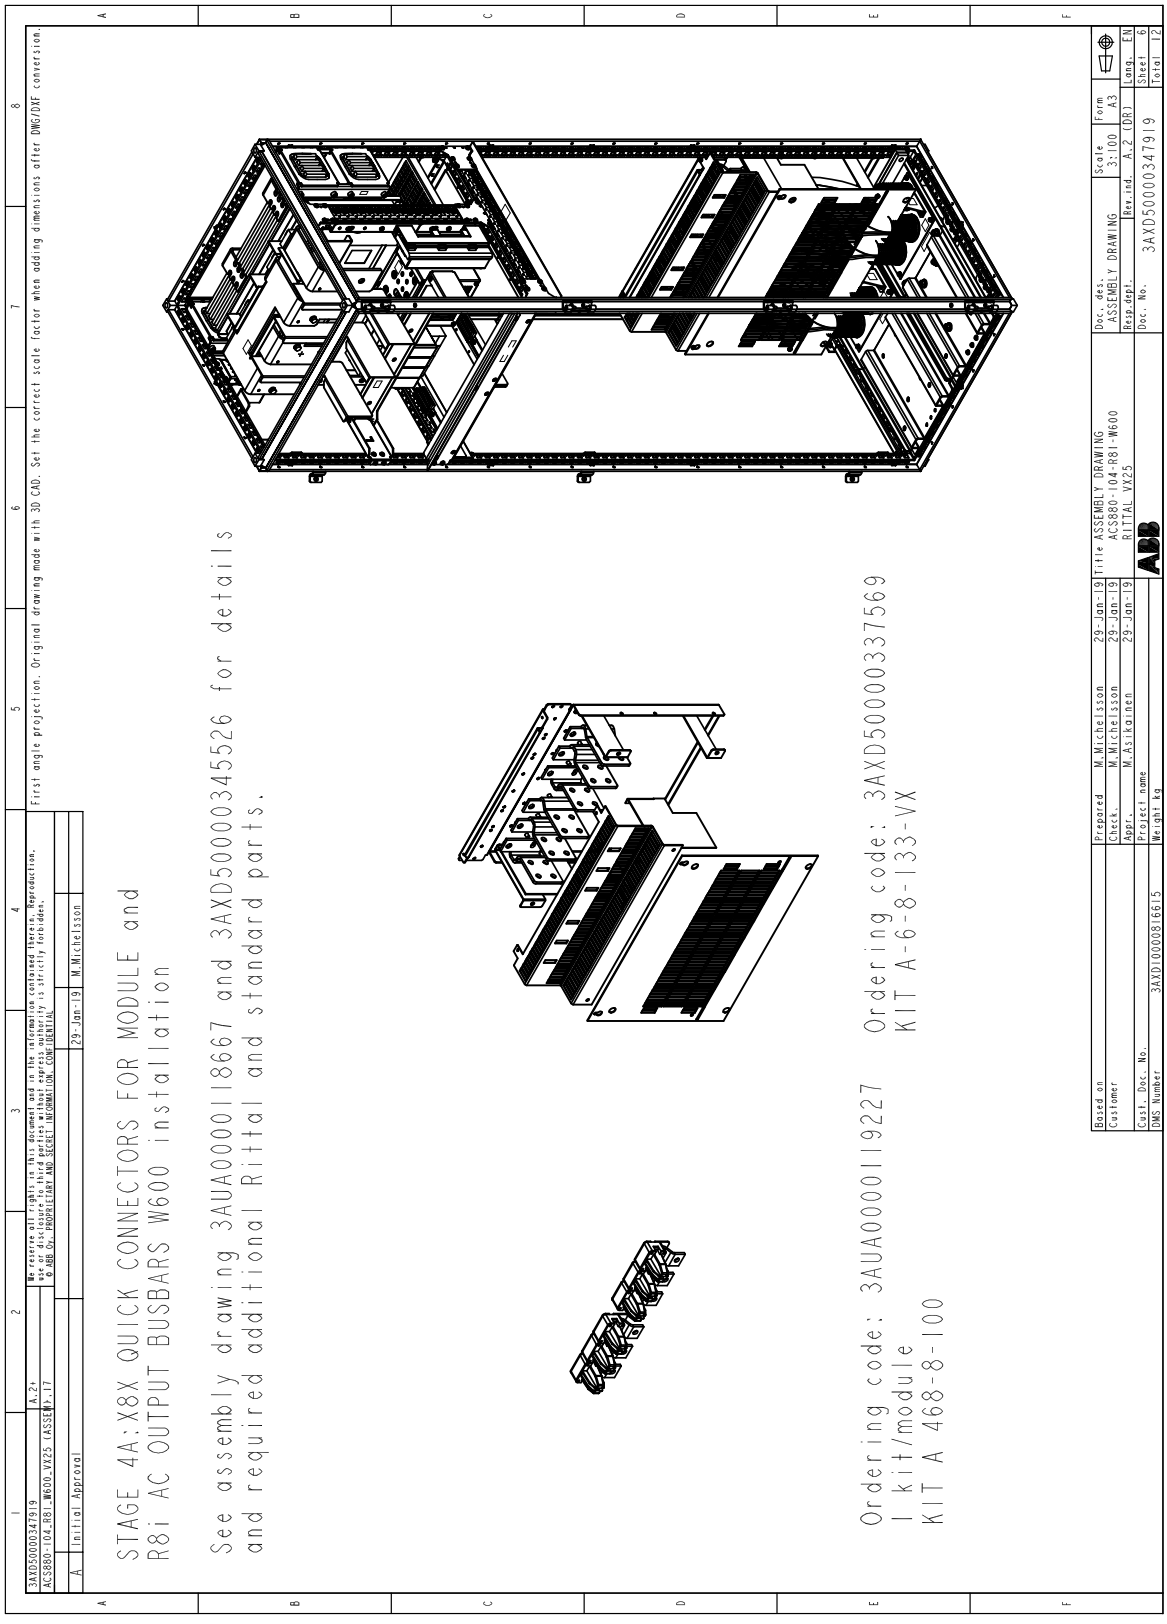


Stage 4 B: Installation of quick connector and output (AC) busbars (cable connection with bridging)

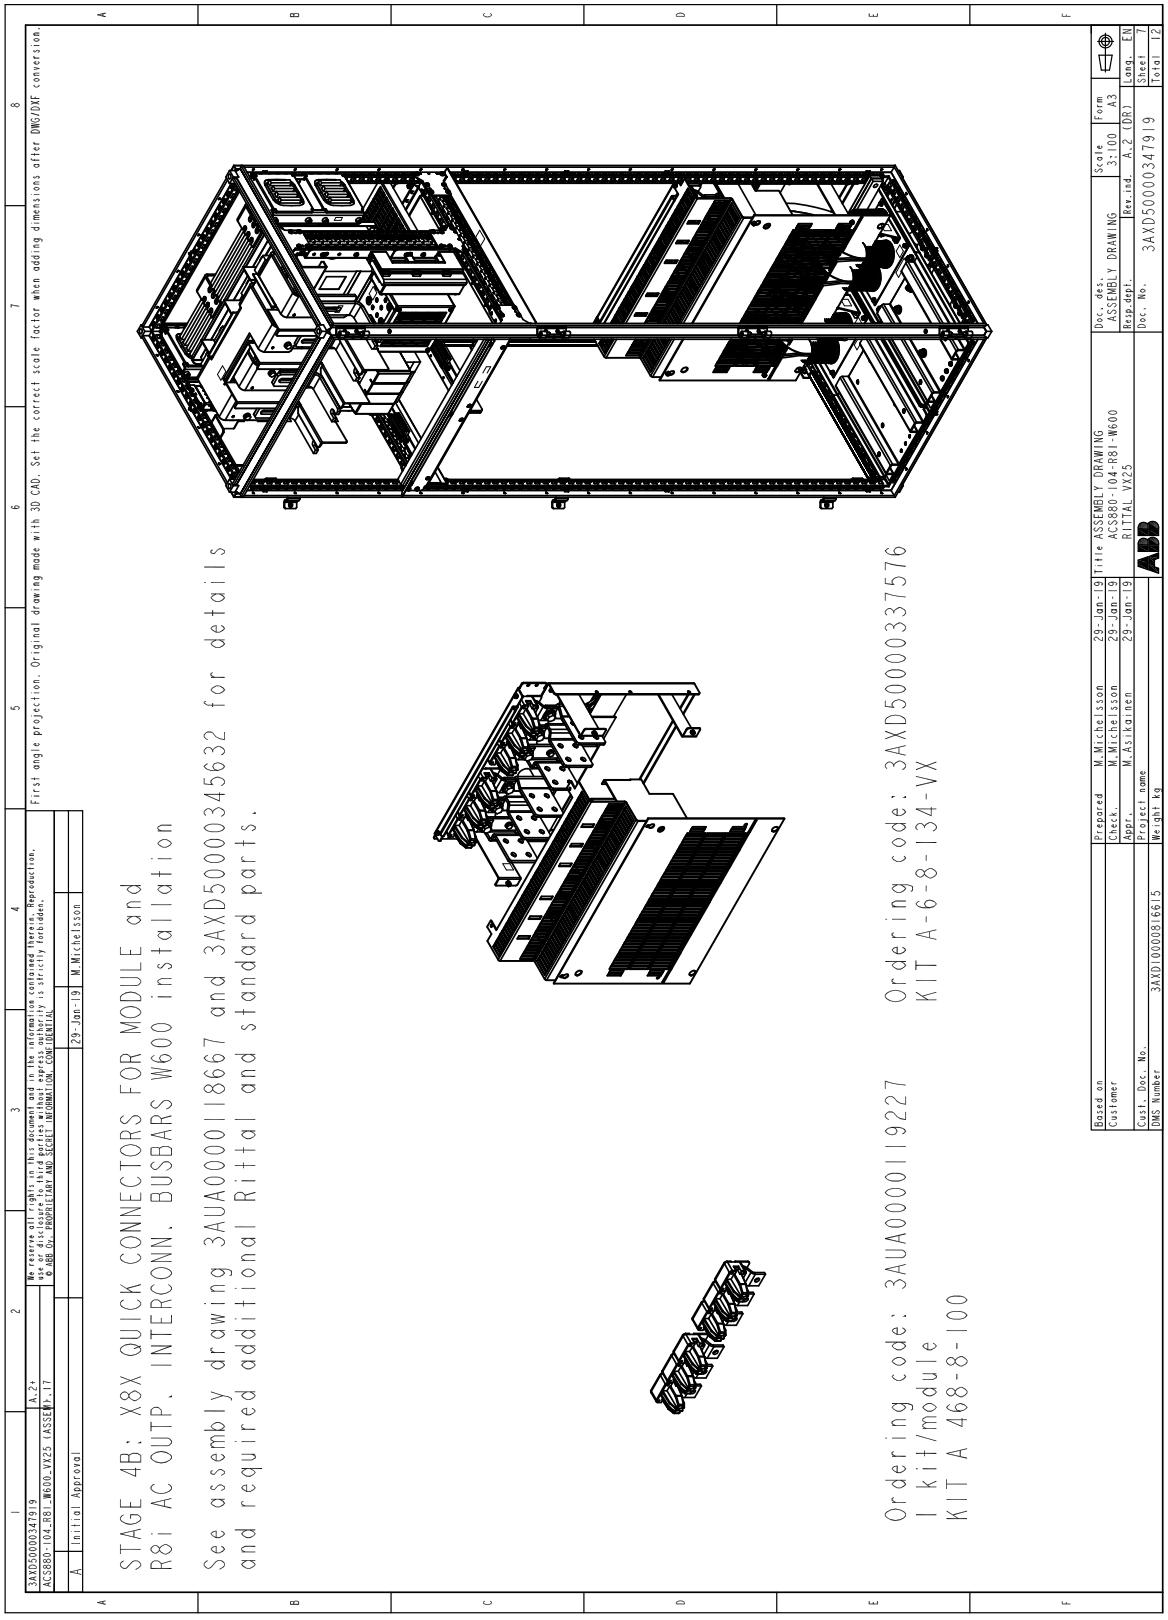


Stage 4 C: Installation of quick connector and output (AC) busbars (common AC output busbar connection)

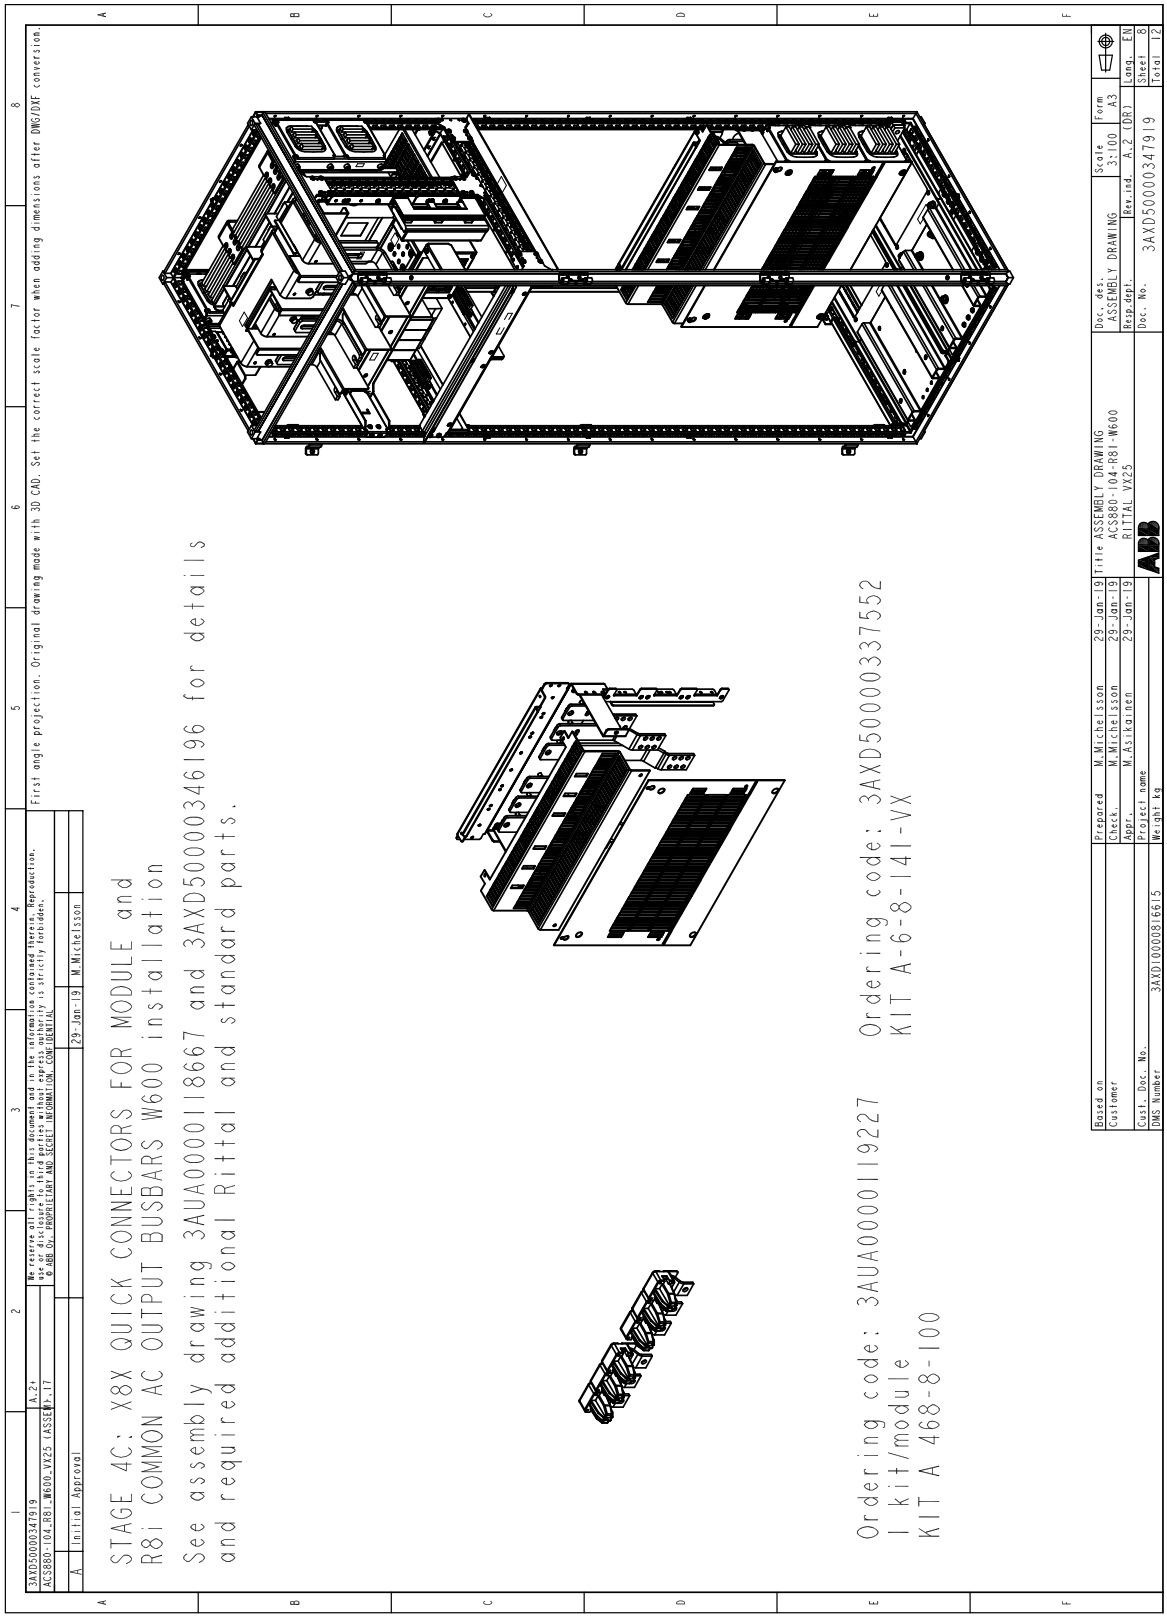


Stage 5 A: Installation of DC busbars (2) (without DC switch/charging)

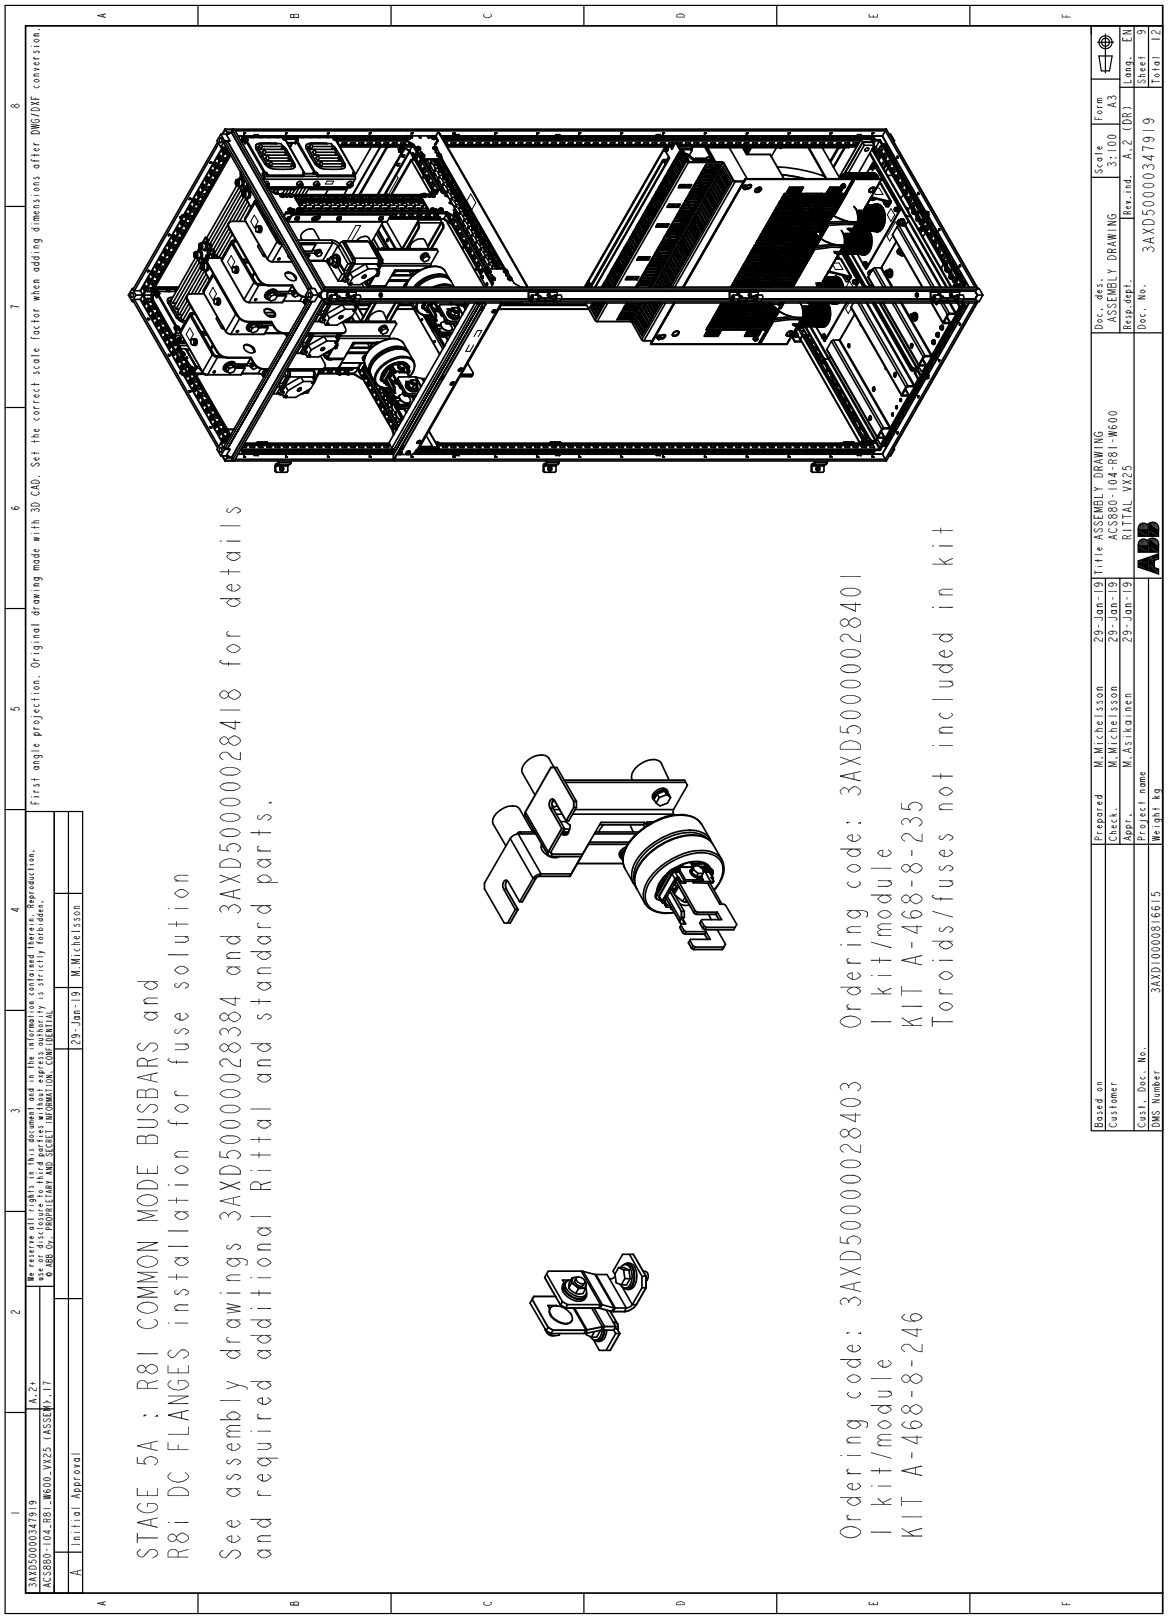


Stage 5 B: Installation of DC busbars (2) (with DC switch/charging)

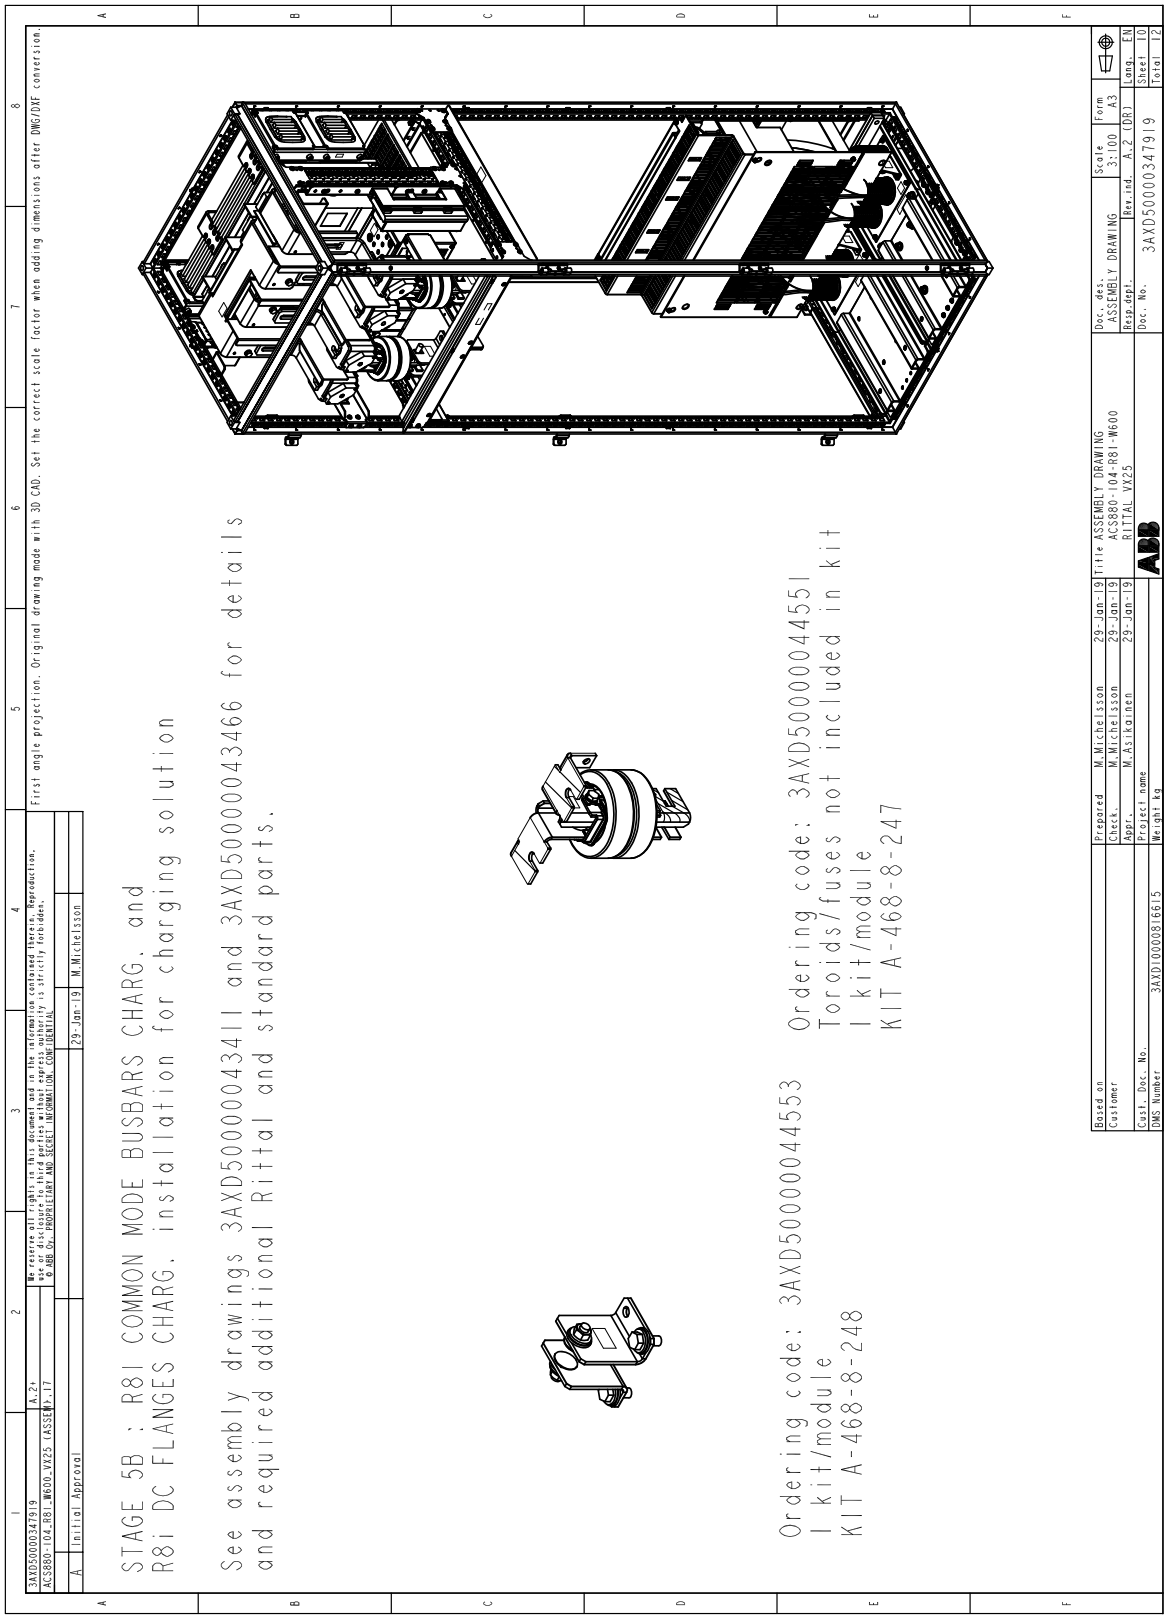

Stage 6: Installation of shrouding

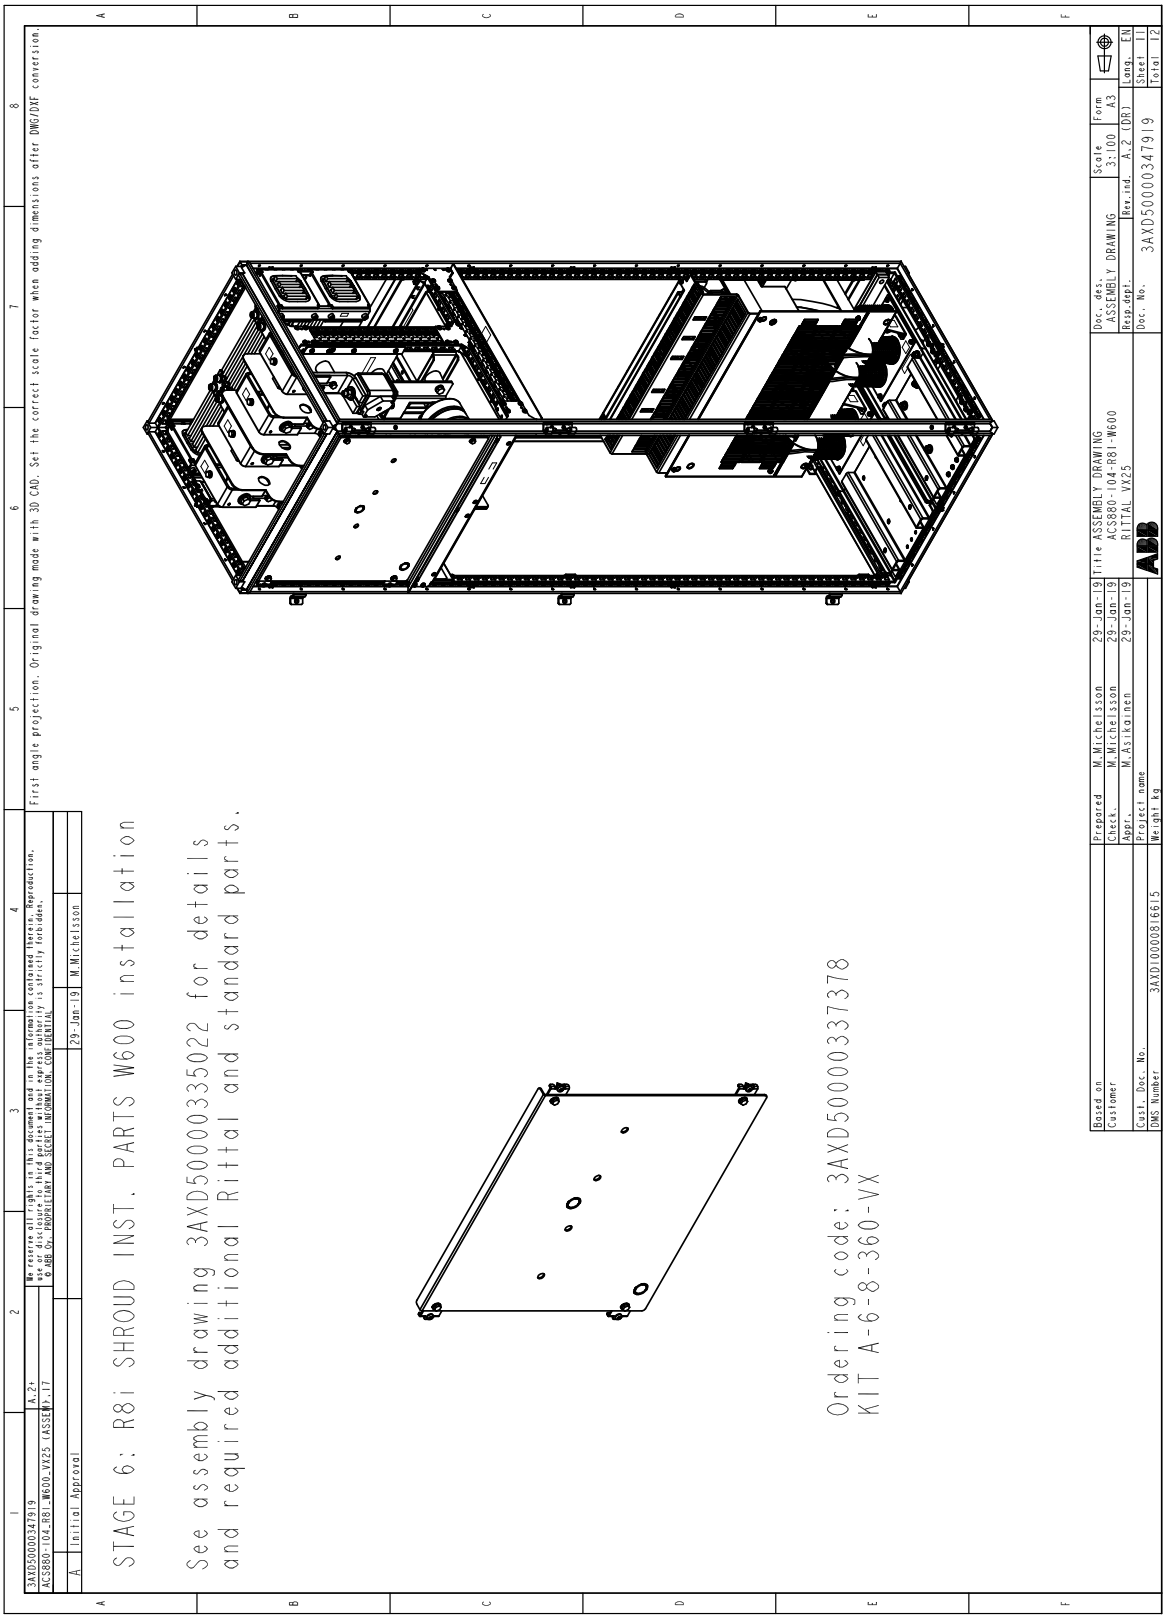

Stage 7: Installation of inverter modules

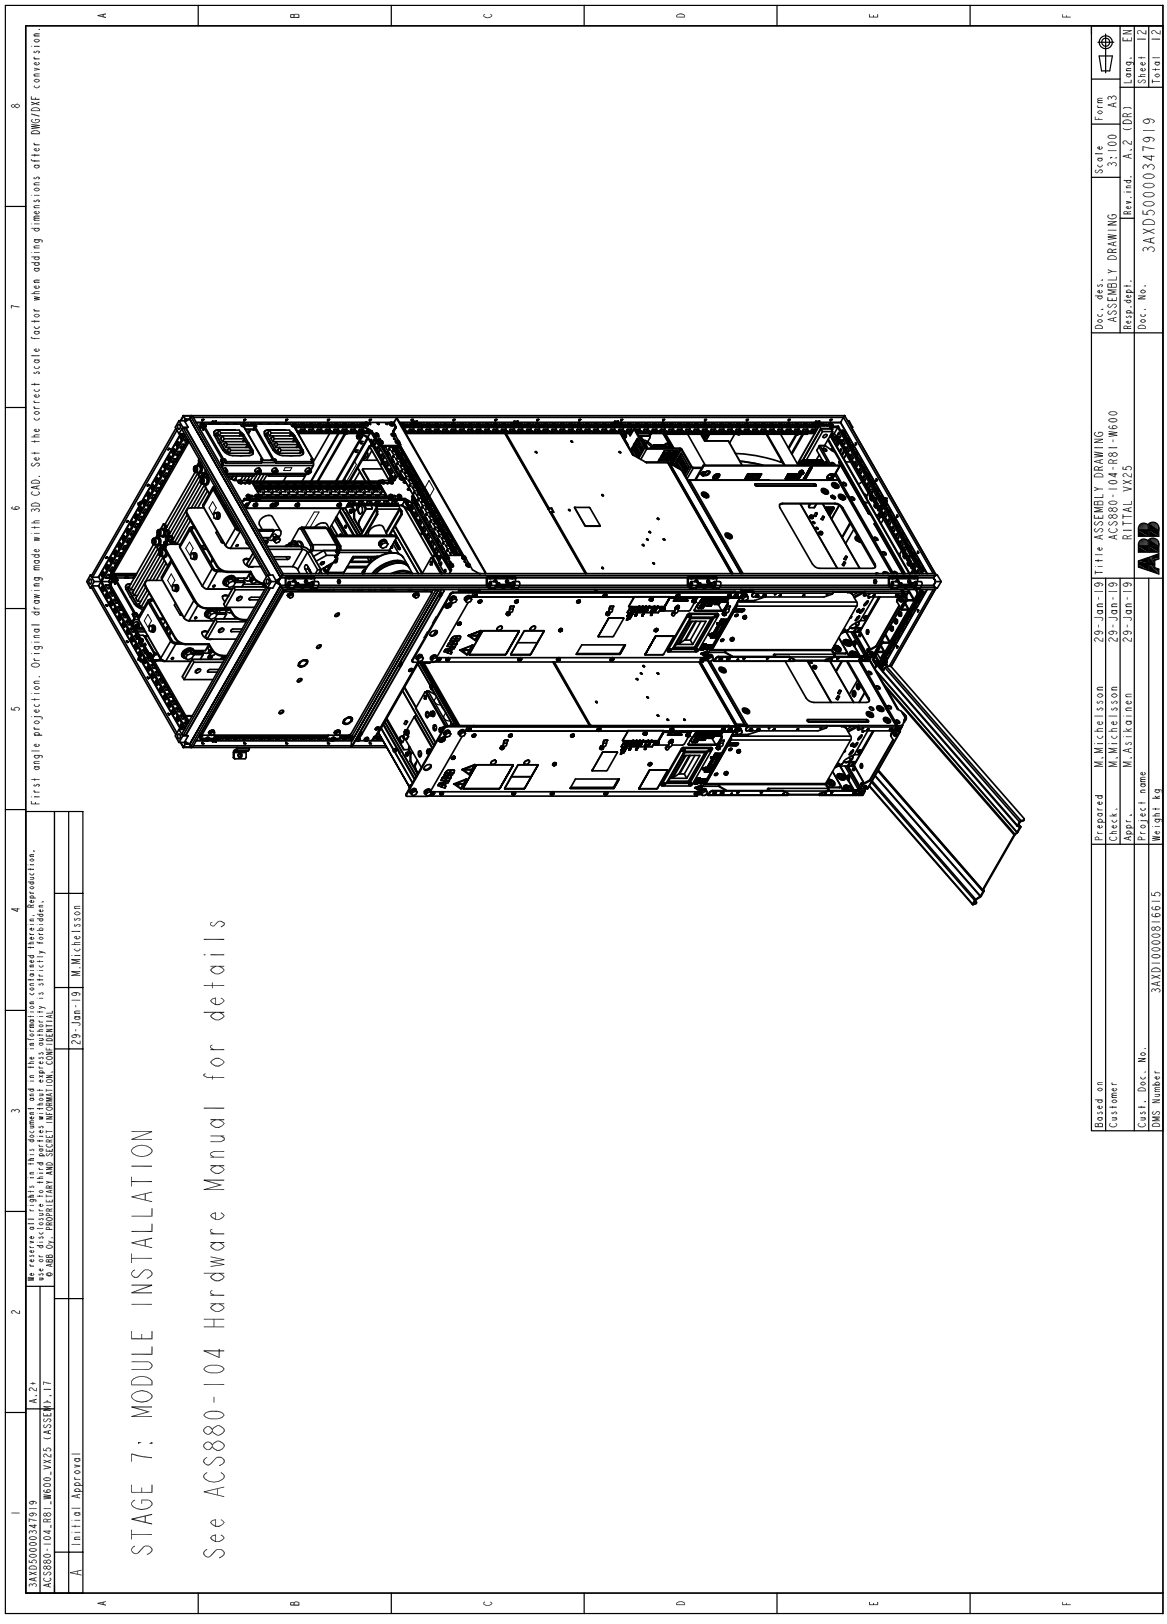


One R8i module in a 400 mm wide generic enclosure

Parts installed	Instruction code	Kit code	Kit ordering code
DC switch/charging mechanics (optional)	3AXD50000043644	A-4-8-292	3AXD50000044559
DC busbars (without DC switch/charging):			
Busbar assembly	3AXD50000006441	A-4-8-256	3AXD50000006418
DC busbars with common mode filters (filters not included in kit)	3AXD50000028418	A-468-8-235	3AXD50000028401
DC connection flanges	3AXD50000028384	A-468-8-246	3AXD50000028403
DC busbars (with DC switch/charging):			
Busbar assembly	3AXD50000043686	A-4-8-295	3AXD50000044582
DC busbars with common mode filters (filters not included in kit)	3AXD50000043411	A-468-8-247	3AXD50000044551
DC connection flanges	3AXD50000043466	A-468-8-248	3AXD50000044553
Module mechanical installation parts, lead-throughs:			
Module top/bottom guides	3AXD50000005874	A-4-8-315	3AXD50000005875
Lead-throughs	3AXD50000004817	A-468-8-441	3AXD50000004385
Quick connector, output (AC) busbars:			
Quick connector	3AUA0000118667	A-468-8-100	3AUA0000119227
Busbars and shrouds	3AXD50000006497	A-4-8-135	3AXD50000006435
Inverter module	-	-	-
Shrouding	-	-	-

3AXD50000009694	D.1+	We reserve all rights in this document and in the information contained therein. Reproduction, use or disclosure to third parties without express authority is strictly forbidden. © ABB Oy. PROPRIETARY AND SECRET INFORMATION. CONFIDENTIAL				First angle projection. Original drawing made with 3D CAD. Set the correct scale factor when adding dimensions after DWG/DXF conversion.	
ACS880-04_R8i_W400_GEN (ASSEM)	-.24						
C	Views updated		05-Jun-15	J.Lindqvist	500000658488		
D	Charging kits updated		31-Oct-16	M.Michelsson			

KITS FOR INU 1xR8i IN GENERIC 2000x600x400 CABINET

Note! Only parts included in ABB kits are shown here!
See kit assembly drawings for required other standard parts.

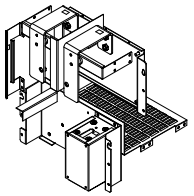


R8i INU GENERIC CHARG, MECHANICS W400
KIT A-4-8-292
Ordering code: 3AXD50000044559



R8i COMMON MODE BUSBARS (FUSE ONLY)
KIT A-468-8-235
Ordering code: 3AXD50000028401

R8i COMMON MODE BUSBARS CHARG
KIT A-468-8-247
Ordering code: 3AXD50000044551



R8i GENERIC DC BUSBARS W400 (FUSE ONLY)
KIT A-4-8-256
Ordering code: 3AXD50000006418

R8i GEN DC BUSBARS W400 CHARG,
KIT A-4-8-295
Ordering code: 3AXD50000044582




R8i DC FLANGES (FUSE ONLY)
KIT A-468-8-246
Ordering code: 3AXD50000028403


R8i DC FLANGES CHARG,
KIT A-468-8-248
Ordering code: 3AXD50000044553




X8X QUICK CONNECTORS FOR MODULE
KIT A-468-8-100
Ordering code: 3AUA0000119227

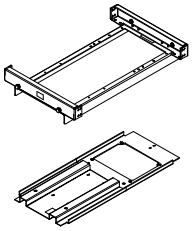

R8i GENERIC MODULE INSTALL PARTS W400
KIT A-4-8-315
Ordering code: 3AXD50000005875



LEAD-THROUGH FOR BOTTOM PLATE
KIT A-468-8-441
Ordering code: 3AXD50000004385

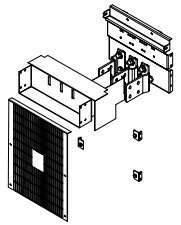

R8i GENERIC AC OUT BUSBARS W400
KIT A-4-8-135
Ordering code: 3AXD50000006435

Based on		Prepared	J.Lindqvist	18-Nov-13	Title ASSEMBLY DRAWING	Doc. des. ASSEMBLY DRAWING	Scale 2:25 / Form A3
Customer		Check.	M.Michelsson	31-Oct-16	ACS880-104-R8i W400 GENERIC		
		Appr.	R.Ekström	31-Oct-16		Resp.dept.	Rev.ind. D (AP) / Lang. EN
Cust. Doc. No.		Project name				Doc. No. 3AXD50000009694	Sheet 1
DMS Number	3AXD10000264818	Weight kg					Total 1

Two R8i modules in a 600 mm wide generic enclosure

Parts installed	Instruction code	Kit code	Kit ordering code
DC switch/charging mechanics (optional)	3AXD50000043784	A-6-8-293	3AXD50000044560
DC busbars (without DC switch/charging):			
Busbar assembly	3AXD50000006447	A-6-8-257	3AXD50000006444
DC busbars with common mode filters (filters not included in kit)	3AXD50000028418	A-468-8-235	3AXD50000028401
DC connection flanges	3AXD50000028384	A-468-8-246	3AXD50000028403
DC busbars (with DC switch/charging):			
Busbar assembly	3AXD50000043737	A-6-8-296	3AXD50000044583
DC busbars with common mode filters (filters not included in kit)	3AXD50000043411	A-468-8-247	3AXD50000044551
DC connection flanges	3AXD50000043466	A-468-8-248	3AXD50000044553
Module mechanical installation parts, lead-throughs:			
Module top/bottom guides	3AXD50000005864	A-6-8-311	3AXD50000005876
Lead-throughs	3AXD50000004817	A-468-8-441	3AXD50000004385
Quick connector, output (AC) busbars:			
Quick connector	3AUA0000118667	A-468-8-100	3AUA0000119227
Busbars and shrouds (without bridging)	3AXD50000006489	A-6-8-136	3AXD50000006491
Busbars and shrouds (with bridging)	3AXD50000006505	A-6-8-138	3AXD50000006493
Inverter module	-	-	-
Shrouding	-	-	-

3AXD50000009683	C.2+	We reserve all rights in this document and in the information contained therein. Reproduction, use or disclosure to third parties without express authority is strictly forbidden. © ABB Oy. PROPRIETARY AND SECRET INFORMATION. CONFIDENTIAL					
ACS880-04_R8i_W600_GEN (ASSEM)	A.15						
B	Views updated		08-Jun-15	J.Lindqvist	500000658683		
C	Charging kits updated		31-Oct-16	M.Michelsson			

First angle projection. Original drawing made with 3D CAD. Set the correct scale factor when adding dimensions after DWG/DXF conversion.

KITS FOR INU 2xR8i IN GENERIC 2000x600x600 CABINET

Note! Only parts included in ABB kits are shown here!
See kit assembly drawings for details.



R8i COMMON MODE BUSBARS (FUSE ONLY)
KIT A-468-8-235
Ordering code: 3AXD50000028401

R8i COMMON MODE BUSBARS CHARG.
KIT A-468-8-247
Ordering code: 3AXD50000044551


1 kit/module




R8i DC FLANGES (FUSE ONLY)
KIT A-468-8-246
Ordering code: 3AXD50000028403


R8i DC FLANGES CHARG.
KIT A-468-8-248
Ordering code: 3AXD50000044553

1 kit/module




R8i GENERIC MODULE INSTALL PARTS W600
KIT A-6-8-311
Ordering code: 3AXD50000005876

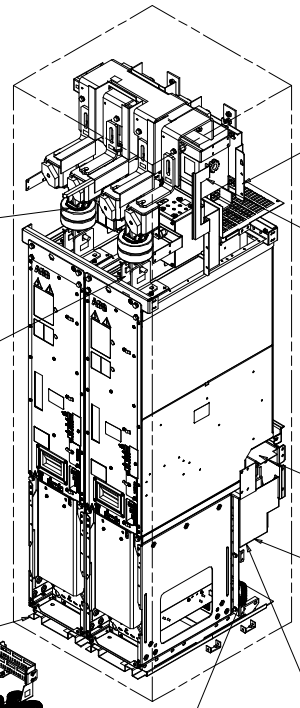

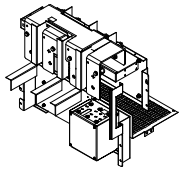

R8i INU GENERIC CHARG. MECHANICS W600
KIT A-6-8-293
Ordering code: 3AXD50000044560

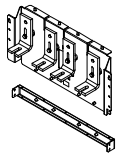


R8i GENERIC DC BUSBARS W600 (FUSE ONLY)
KIT A-6-8-257
Ordering code: 3AXD50000006444


R8i GEN DC BUSBARS W600 CHARG.
KIT A-6-8-296
Ordering info: 3AXD50000044583




X8X QUICK CONNECTORS FOR MODULE
1 kit/module
KIT A-468-8-100
Ordering code: 3AUA0000119227

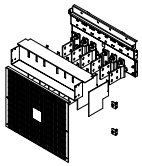

R8i GENERIC AC OUT BUSBARS W600
KIT A-6-8-136
Ordering code: 3AXD50000006491



LEAD-THROUGH FOR BOTTOM PLATE
1 kit/module
KIT A-468-8-441
Ordering code: 3AXD50000004385

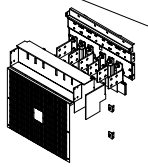

R8i GENERIC AC OUT INT. CON. B.BARS W600
KIT A-6-8-138
Ordering code: 3AXD50000006493

Based on		Prepared	J.Lindqvist	18-Nov-13	Title ASSEMBLY DRAWING	Doc. des. ASSEMBLY DRAWING	Scale 2:25 / Form A3
Customer		Check.	M.Michelsson	31-Oct-16	ACS880-104-R8i W600 GENERIC		
		Appr.	R.Ekström	31-Oct-16		Resp.dept.	Rev.ind. C (AP) / Lang. EN
Cust. Doc. No.		Project name				Doc. No. 3AXD50000009683	Sheet 1
DMS Number	3AXD10000264655	Weight kg					Total 1

Three R8i modules in a 800 mm wide generic enclosure


Parts installed	Instruction code	Kit code	Kit ordering code
DC switch/charging mechanics (optional)	3AXD50000044586	A-8-8-294	3AXD50000044581
DC busbars (without DC switch/charging):			
Busbar assembly	3AXD50000006455	A-8-8-258	3AXD50000006450
DC busbars with common mode filters (filters not included in kit)	3AXD50000028418	A-468-8-235	3AXD50000028401
DC connection flanges	3AXD50000028384	A-468-8-246	3AXD50000028403
DC busbars (with DC switch/charging):			
Busbar assembly	3AXD50000044574	A-8-8-297	3AXD50000044584
DC busbars with common mode filters (filters not included in kit)	3AXD50000043411	A-468-8-247	3AXD50000044551
DC connection flanges	3AXD50000043466	A-468-8-248	3AXD50000044553
Module mechanical installation parts, lead-throughs:			
Module top/bottom guides	3AXD50000005848	A-8-8-312	3AXD50000005877
Lead-throughs	3AXD50000004817	A-468-8-441	3AXD50000004385
Quick connector, output (AC) busbars:			
Quick connector	3AUA0000118667	A-468-8-100	3AUA0000119227
Busbars and shrouds (without bridging)	3AXD50000006503	A-8-8-137	3AXD50000006492
Busbars and shrouds (with bridging)	3AXD50000006498	A-8-8-139	3AXD50000006494
Inverter module	-	-	-
Shrouding	-	-	-


3AXD50000009670	C.1+	We reserve all rights in this document and in the information contained therein. Reproduction, use or disclosure to third parties without express authority is strictly forbidden. © ABB Oy. PROPRIETARY AND SECRET INFORMATION. CONFIDENTIAL					
ACS880-04_R8I_W800_GEN (ASSEM) -.16							
B	Views updated		08-Jun-15	J.Lindqvist	500000658752		
C	Charging kits updated		31-Oct-16	M.Michelsson			

First angle projection. Original drawing made with 3D CAD. Set the correct scale factor when adding dimensions after DWG/DXF conversion.

KITS FOR INU 3xR8i IN GENERIC 2000x600x800 CABINET

Note! Only parts included in ABB kits are shown here!
See kit assembly drawings for required Rittal and/or other standard parts.

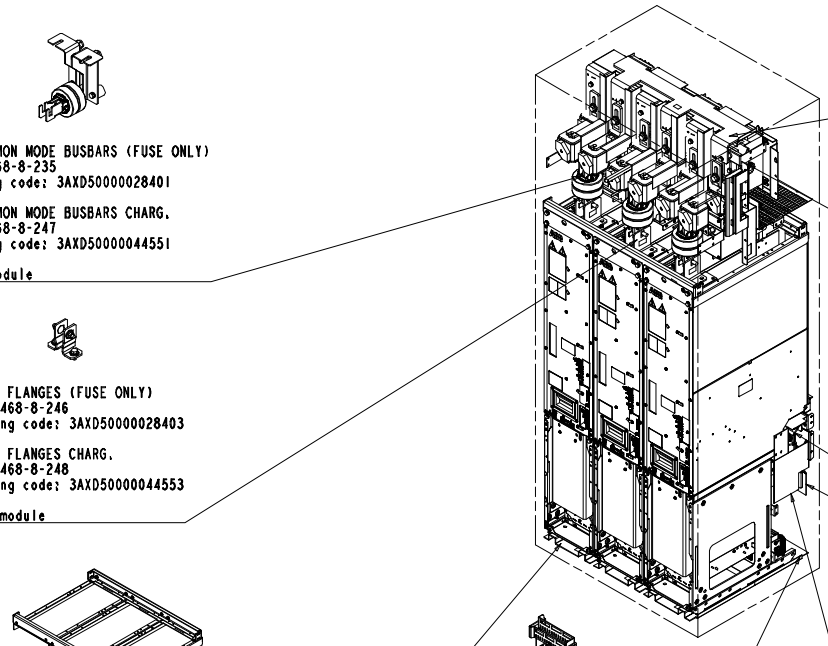

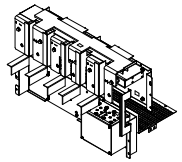


R8i INU GENERIC CHARG. MECHANICS W800
KIT A-8-8-294
Ordering code: 3AXD50000044581

R8I COMMON MODE BUSBARS (FUSE ONLY)
KIT A-468-8-235
Ordering code: 3AXD50000028401

R8i COMMON MODE BUSBARS CHARG.
KIT A-468-8-247
Ordering code: 3AXD50000044551

1 kit/module

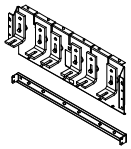

R8i GENERIC DC BUSBARS W800 (FUSE ONLY)
KIT A-8-8-258
Ordering code: 3AXD50000006450

R8i GEN DC BUSBARS W800 CHARG.
KIT A-8-8-297
Ordering code: 3AXD50000044584


R8i DC FLANGES (FUSE ONLY)
KIT A-468-8-246
Ordering code: 3AXD50000028403

R8i DC FLANGES CHARG.
KIT A-468-8-248
Ordering code: 3AXD50000044553


1 kit/module




X8X QUICK CONNECTORS FOR MODULE
1 kit/module
KIT A-468-8-100
Ordering code: 3AUA0000119227

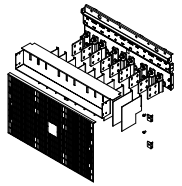


R8i GENERIC AC OUT BUSBARS W800
KIT A-8-8-137
Ordering code: 3AXD50000006492

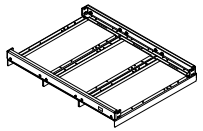




R8i GENERIC MODULE INSTALL PARTS W800
KIT A-8-8-312
Ordering code: 3AXD50000005877




LEAD-THROUGH FOR BOTTOM PLATE
1 kit/module
KIT A-468-8-441
Ordering code: 3AXD50000004385

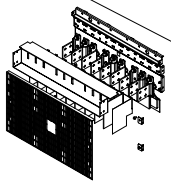

R8i GENERIC AC OUT INT. CON. B.BARS W800
KIT A-8-8-139
Ordering code: 3AXD50000006494

Based on		Prepared	J.Lindqvist	18-Nov-13	Title ASSEMBLY DRAWING	Doc. des. ASSEMBLY DRAWING	Scale 1:100 / Form A3
Customer		Check.	M.Koskinen	31-Oct-16	ACS880-104-R8I W800 GENERIC		
		Appr.	M.Asikainen	31-Oct-16		Resp.dept.	Rev.ind. C (AP) / Lang. EN
Cust. Doc. No.		Project name				Doc. No. 3AXD50000009670	Sheet 1 / Total 1
DMS Number	3AXD10000264639	Weight kg					


One BLHF filter in a 600 mm wide Rittal VX25 enclosure

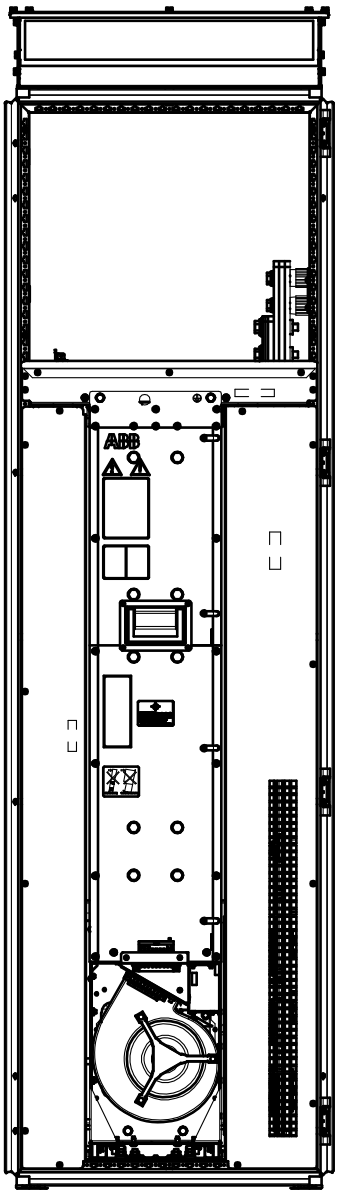


Installation stages

#	Installation stage	Instruction code	Kit code	Kit ordering code
1	Common parts:			
	Baying parts	3AXD50000336340	-	-
	PE busbar	3AXD50000336104	-	-
	Divider panel	3AXD50000336692	-	-
2	Module installation parts:			
	Module top/bottom guides	3AXD50000883684	A-6-8-335-VX	3AXD50000883080
3	AC busbars and AC input busbars installation:			
	AC busbars	3AXD50000887231	A-6-8-112-VX	3AXD50000883103
	AC input busbars	3AXD50000887347	A-6-8-118-VX	3AXD50000885053
4	Filter module, AC flanges and shrouds installation:			
	AC flanges	3AXD50000884216	A-X-8-149	3AXD50000883219
	Shrouds	3AXD50000887286	A-6-8-362-VX	3AXD50000883226


Overview of kits

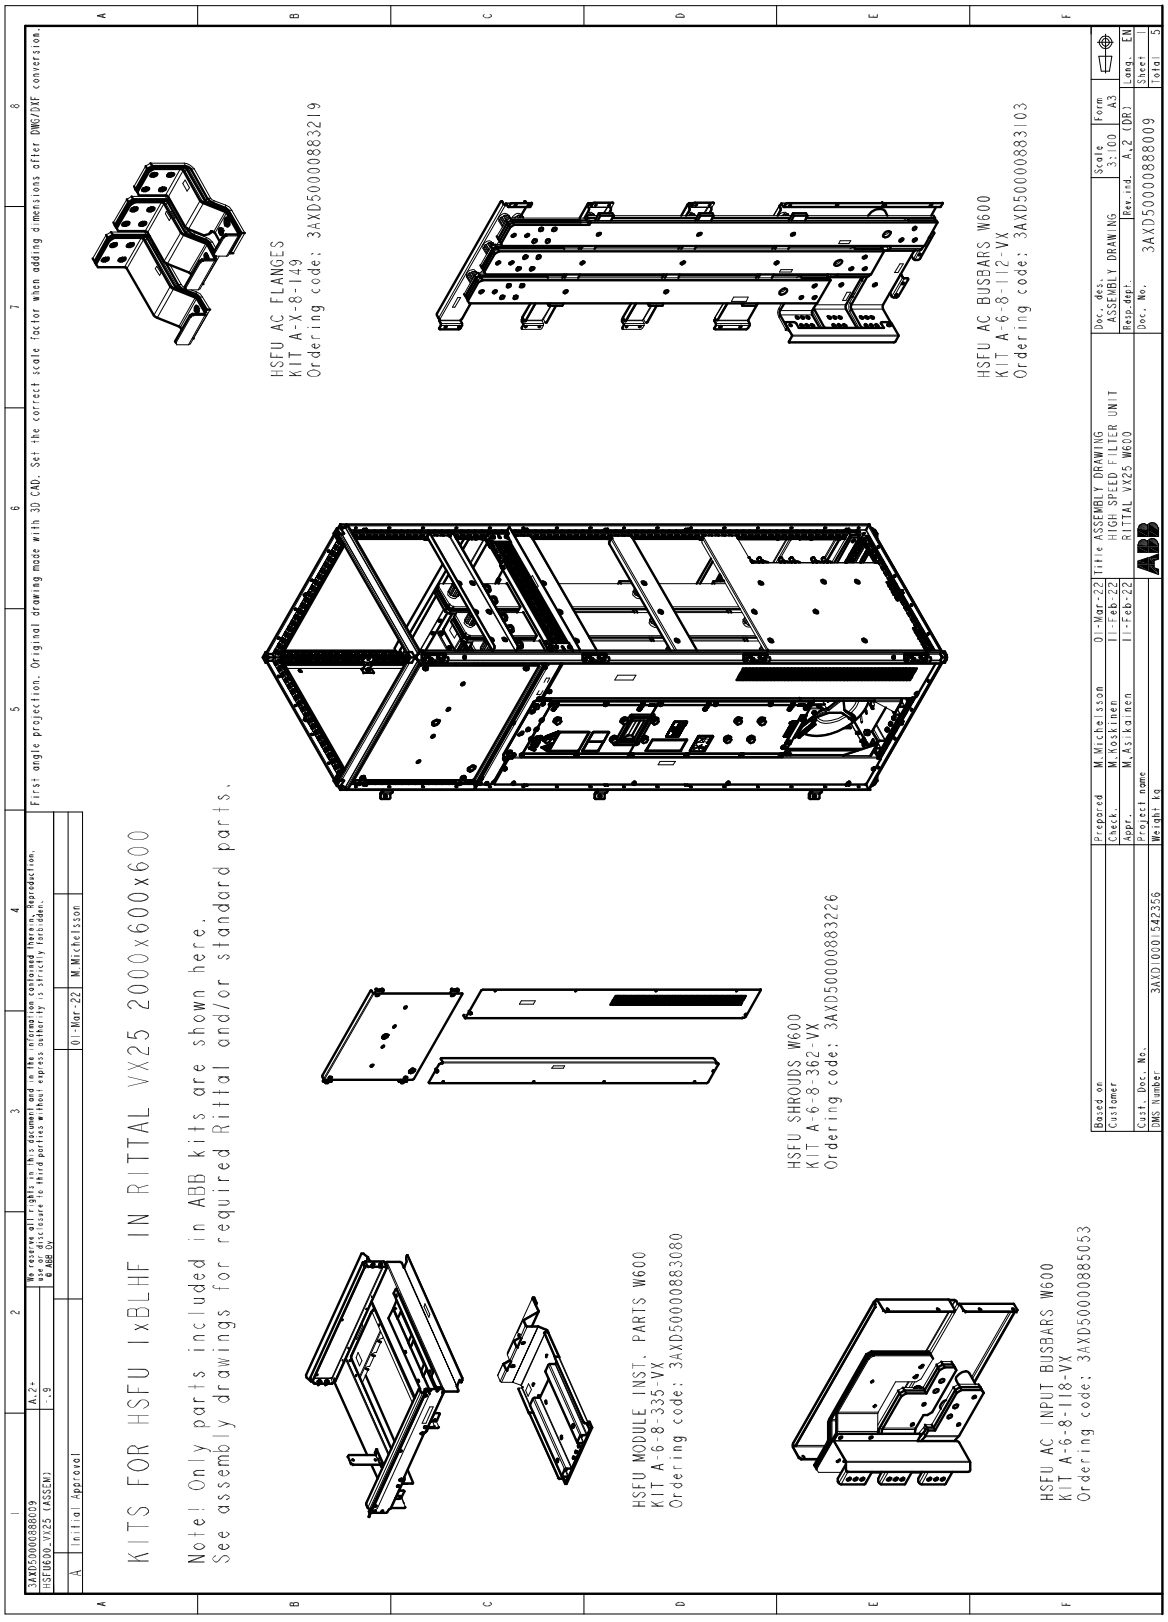


Stage 1: Installation of common parts

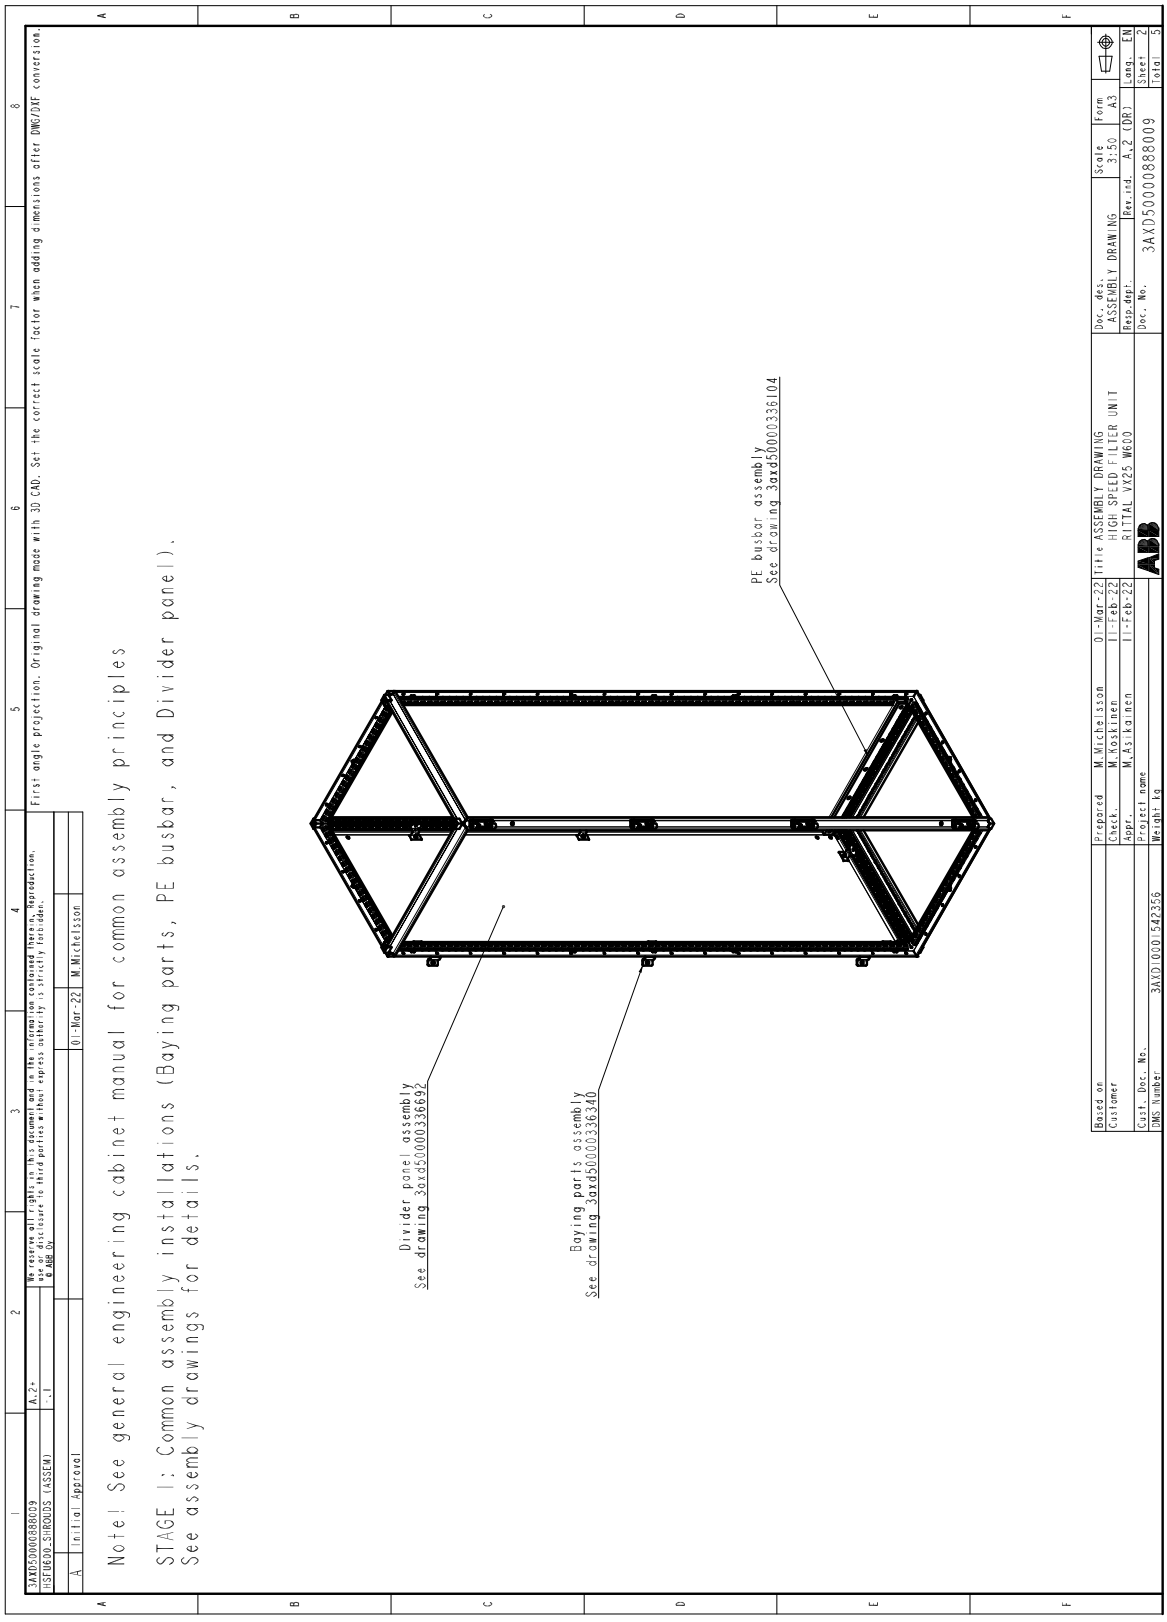


Stage 2: Installation of module installation parts

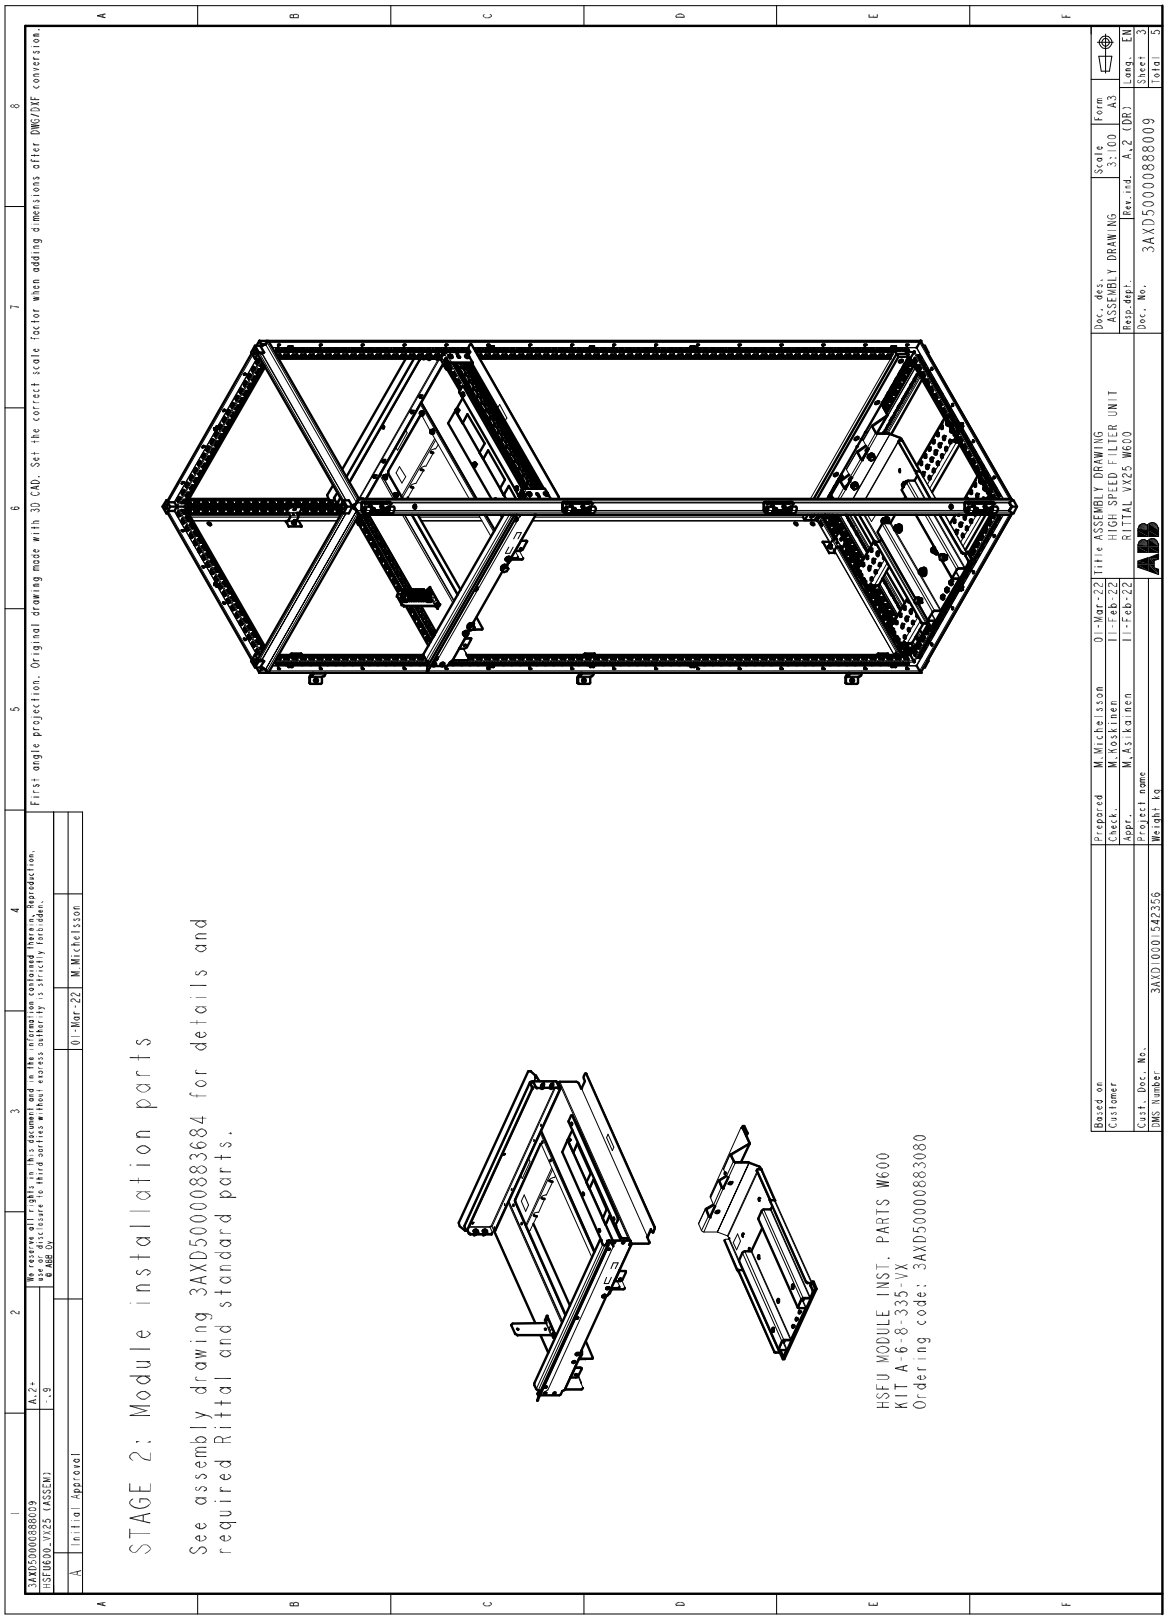


Stage 3: Installation of AC busbars and AC input busbars

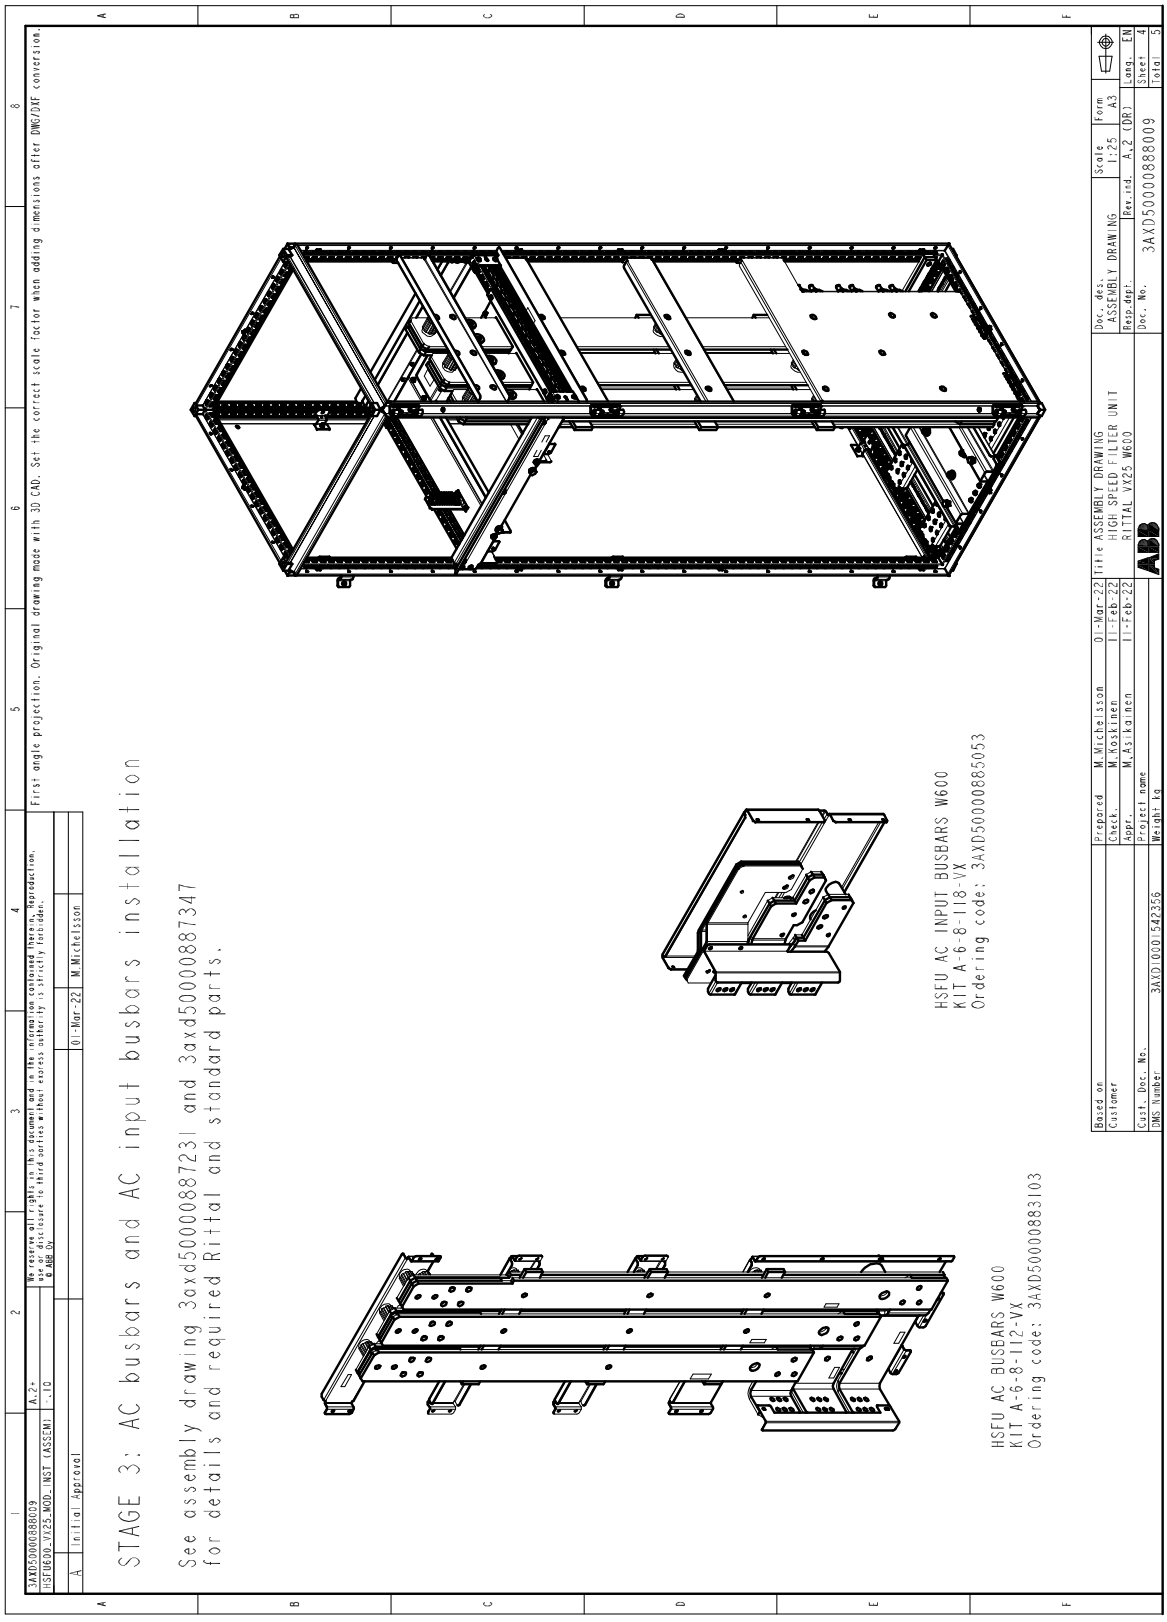

Stage 4: Installation of filter module, AC flanges and shrouds

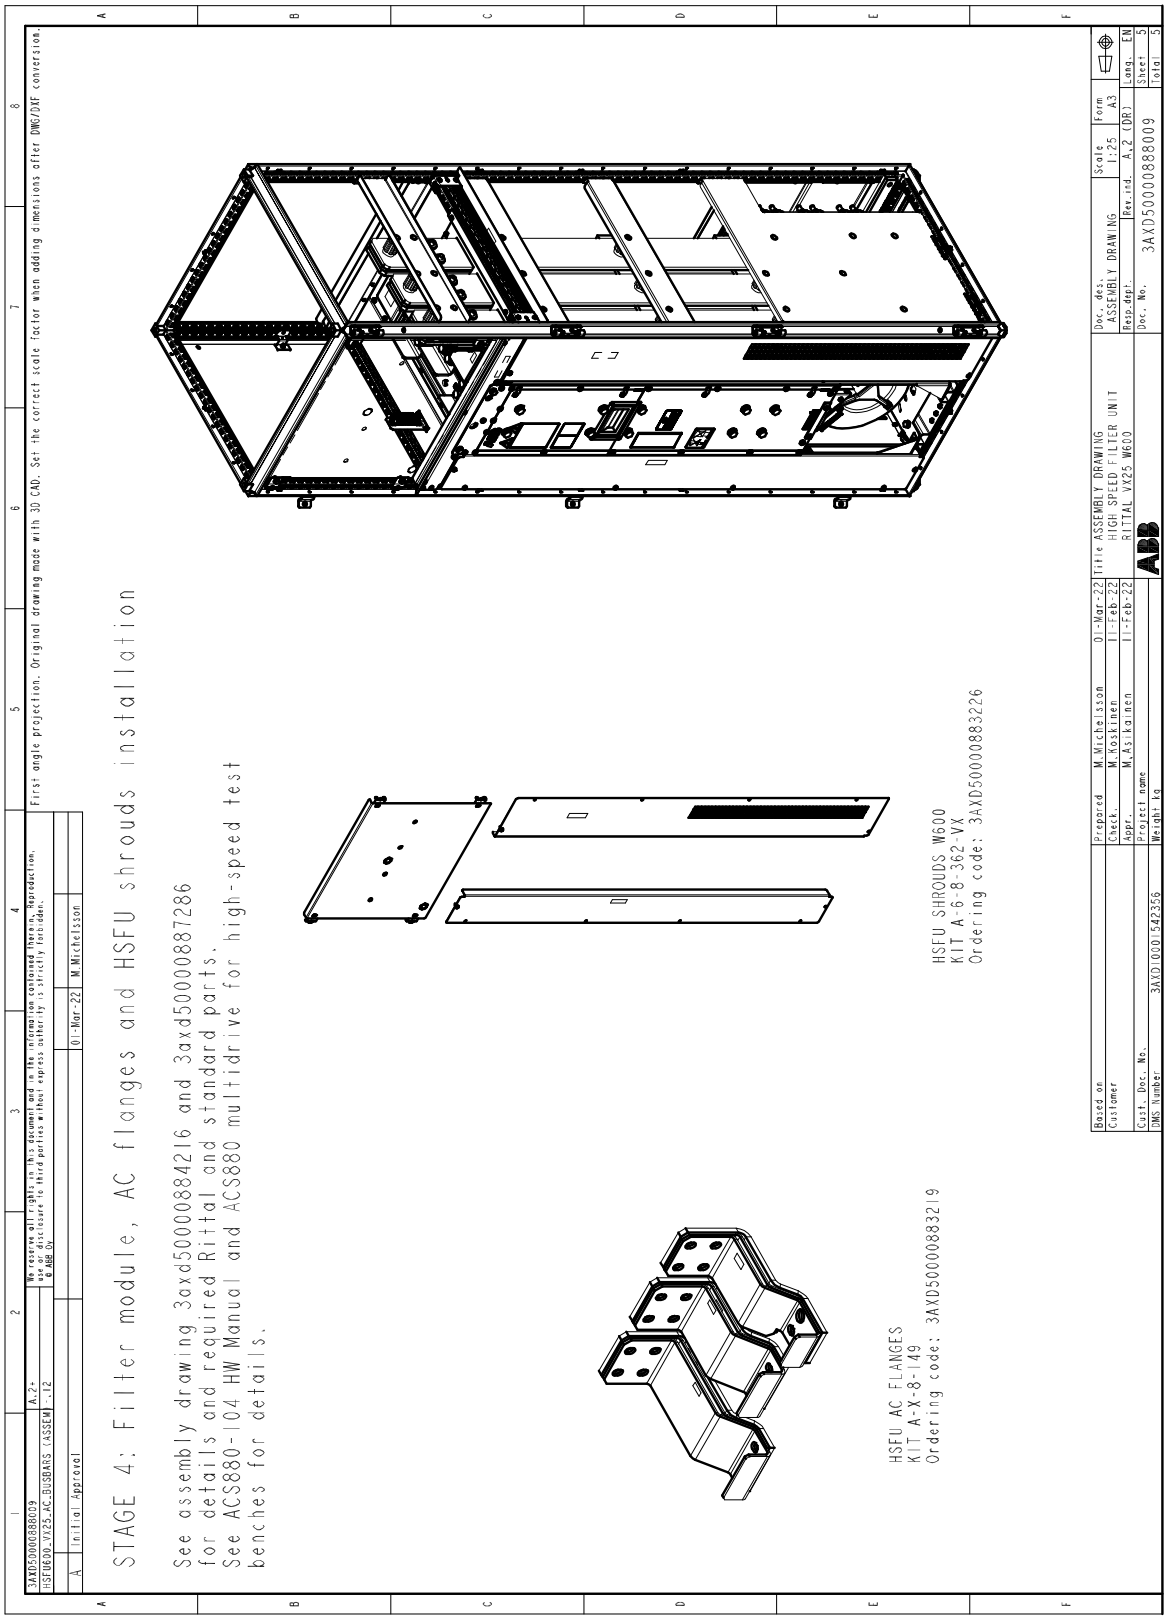


Two BLHF filters in a 800 mm wide Rittal VX25 enclosure

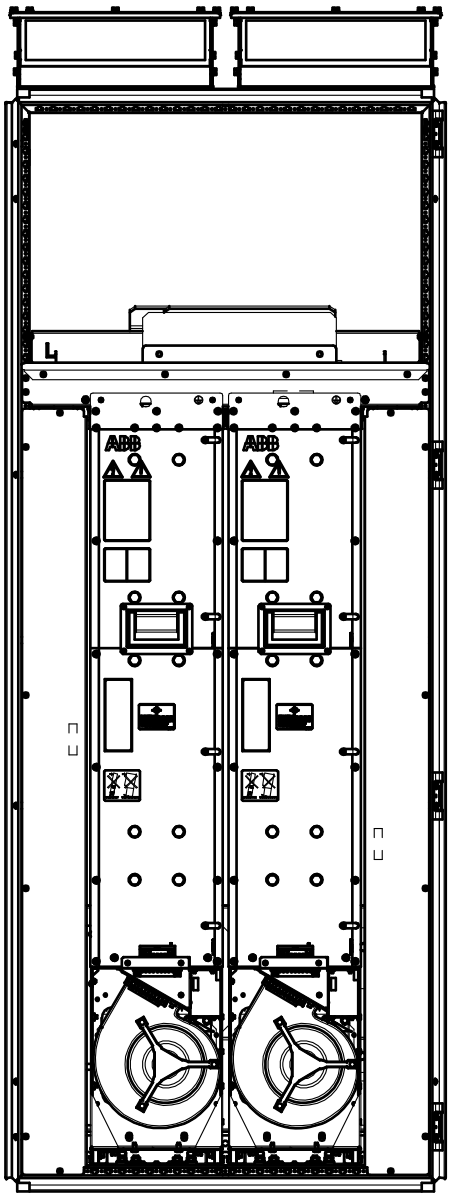


Installation stages

#	Installation stage	Instruction code	Kit code	Kit ordering code
1	Common parts:			
	Baying parts	3AXD50000336340	-	-
	PE busbar	3AXD50000336104	-	-
	Divider panel	3AXD50000336692	-	-
2	Module installation parts:			
	Module top/bottom guides	3AXD50000887408	A-8-8-336-VX	3AXD50000883233
3	AC busbars installation:			
	AC busbars	3AXD50000887569	A-8-8-113-VX	3AXD50000883257
4	Filter module, AC connection busbars and shrouds installation:			
	AC connection busbars	3AXD50000887576	A-8-8-116-VX	3AXD50000883264
	Shrouds	3AXD50000888016	A-8-8-363-VX	3AXD50000883271


Overview of kits

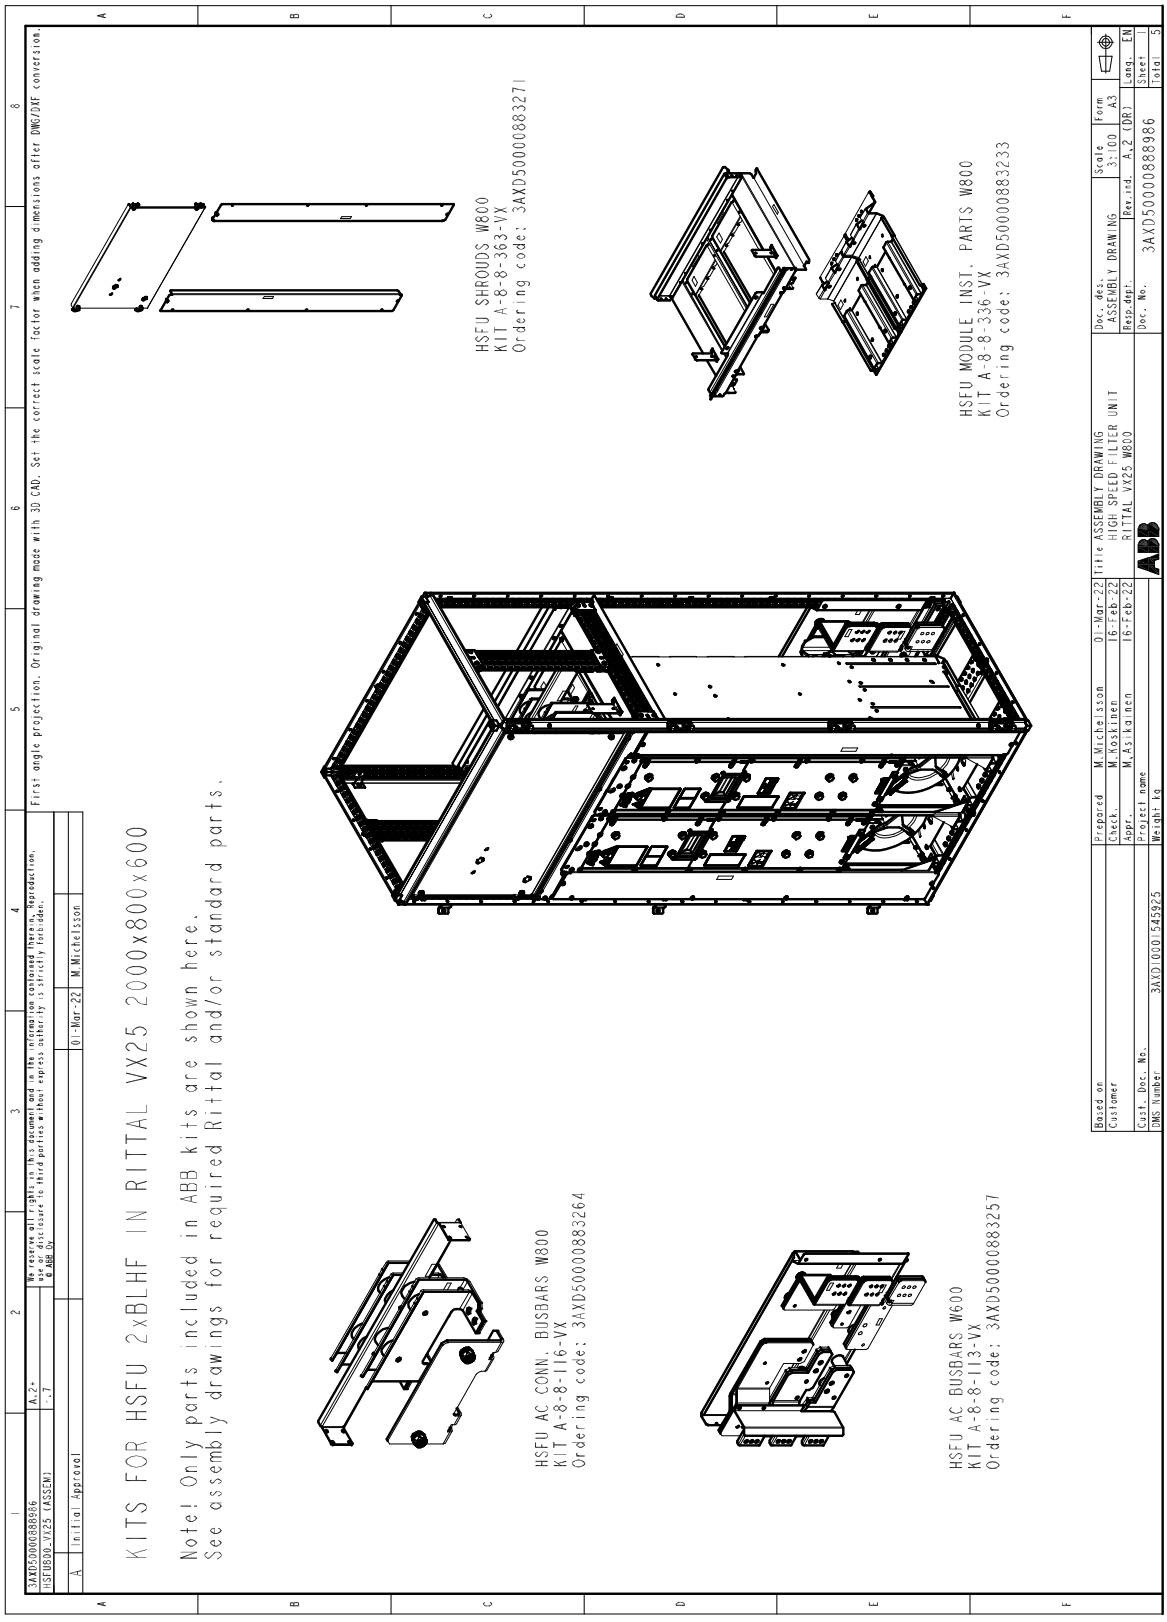


Stage 1: Installation of common parts

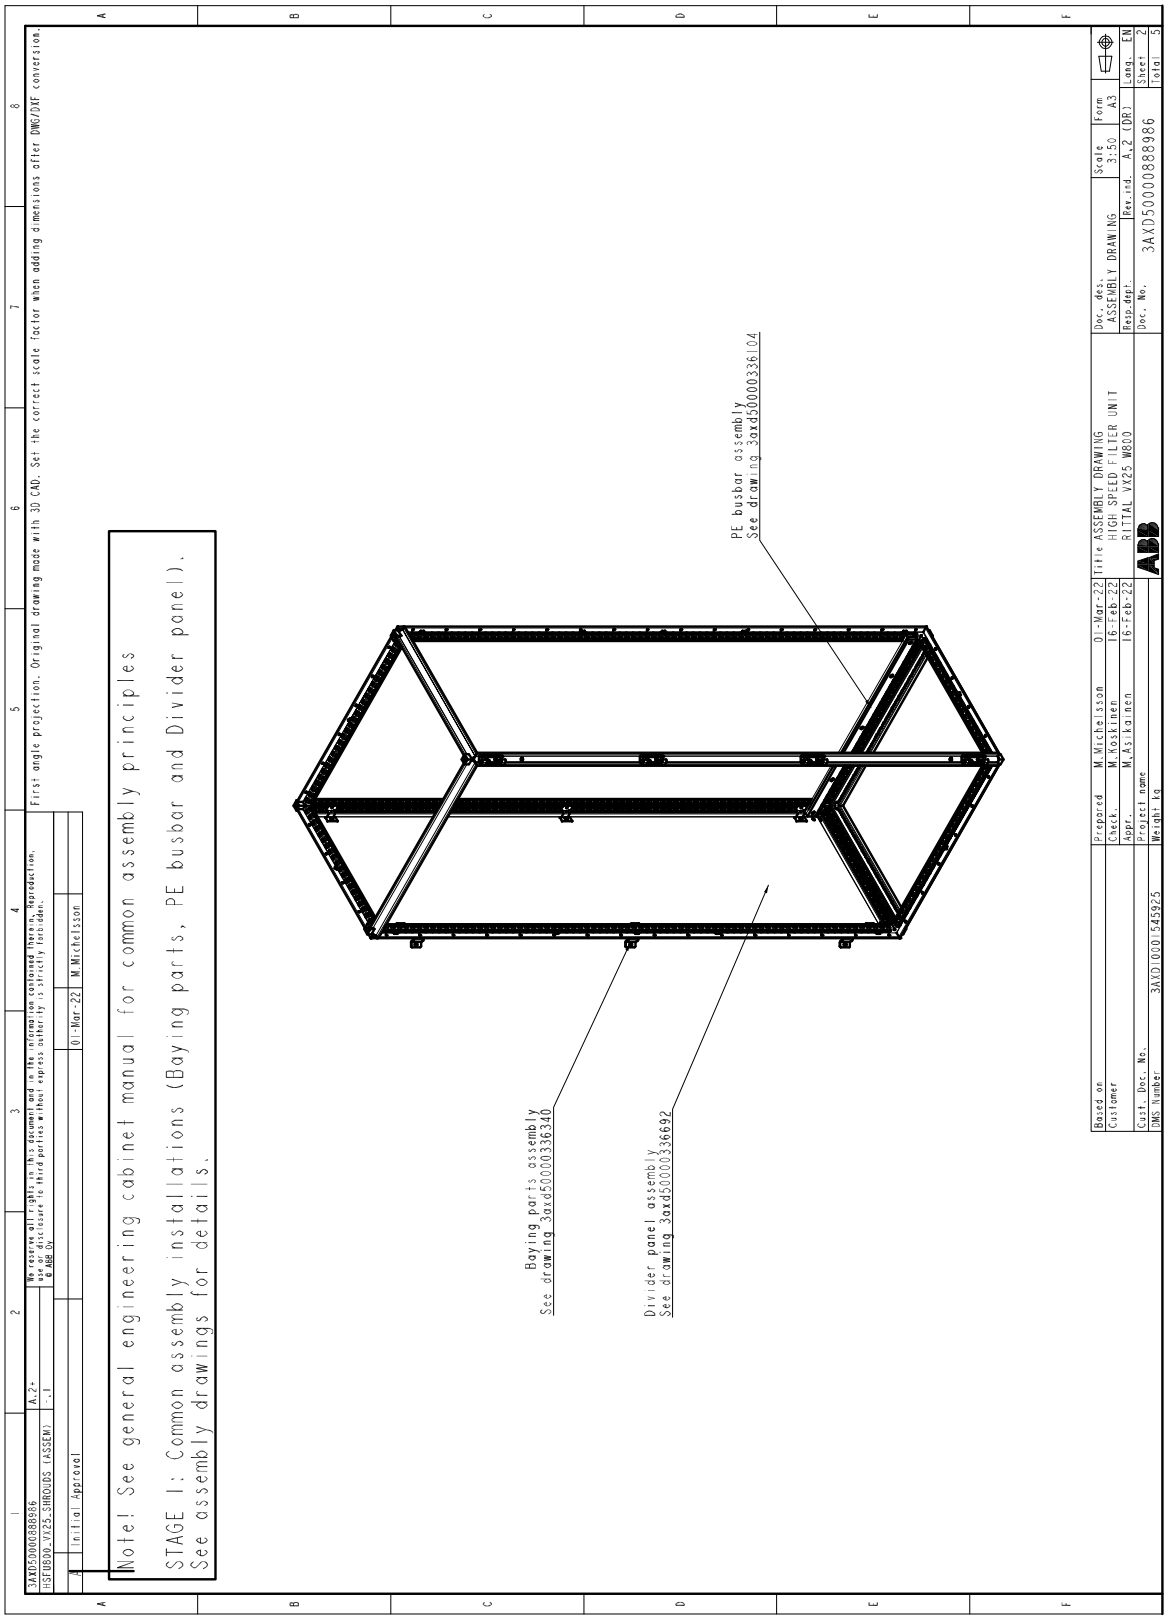


Stage 2: Installation of module installation parts

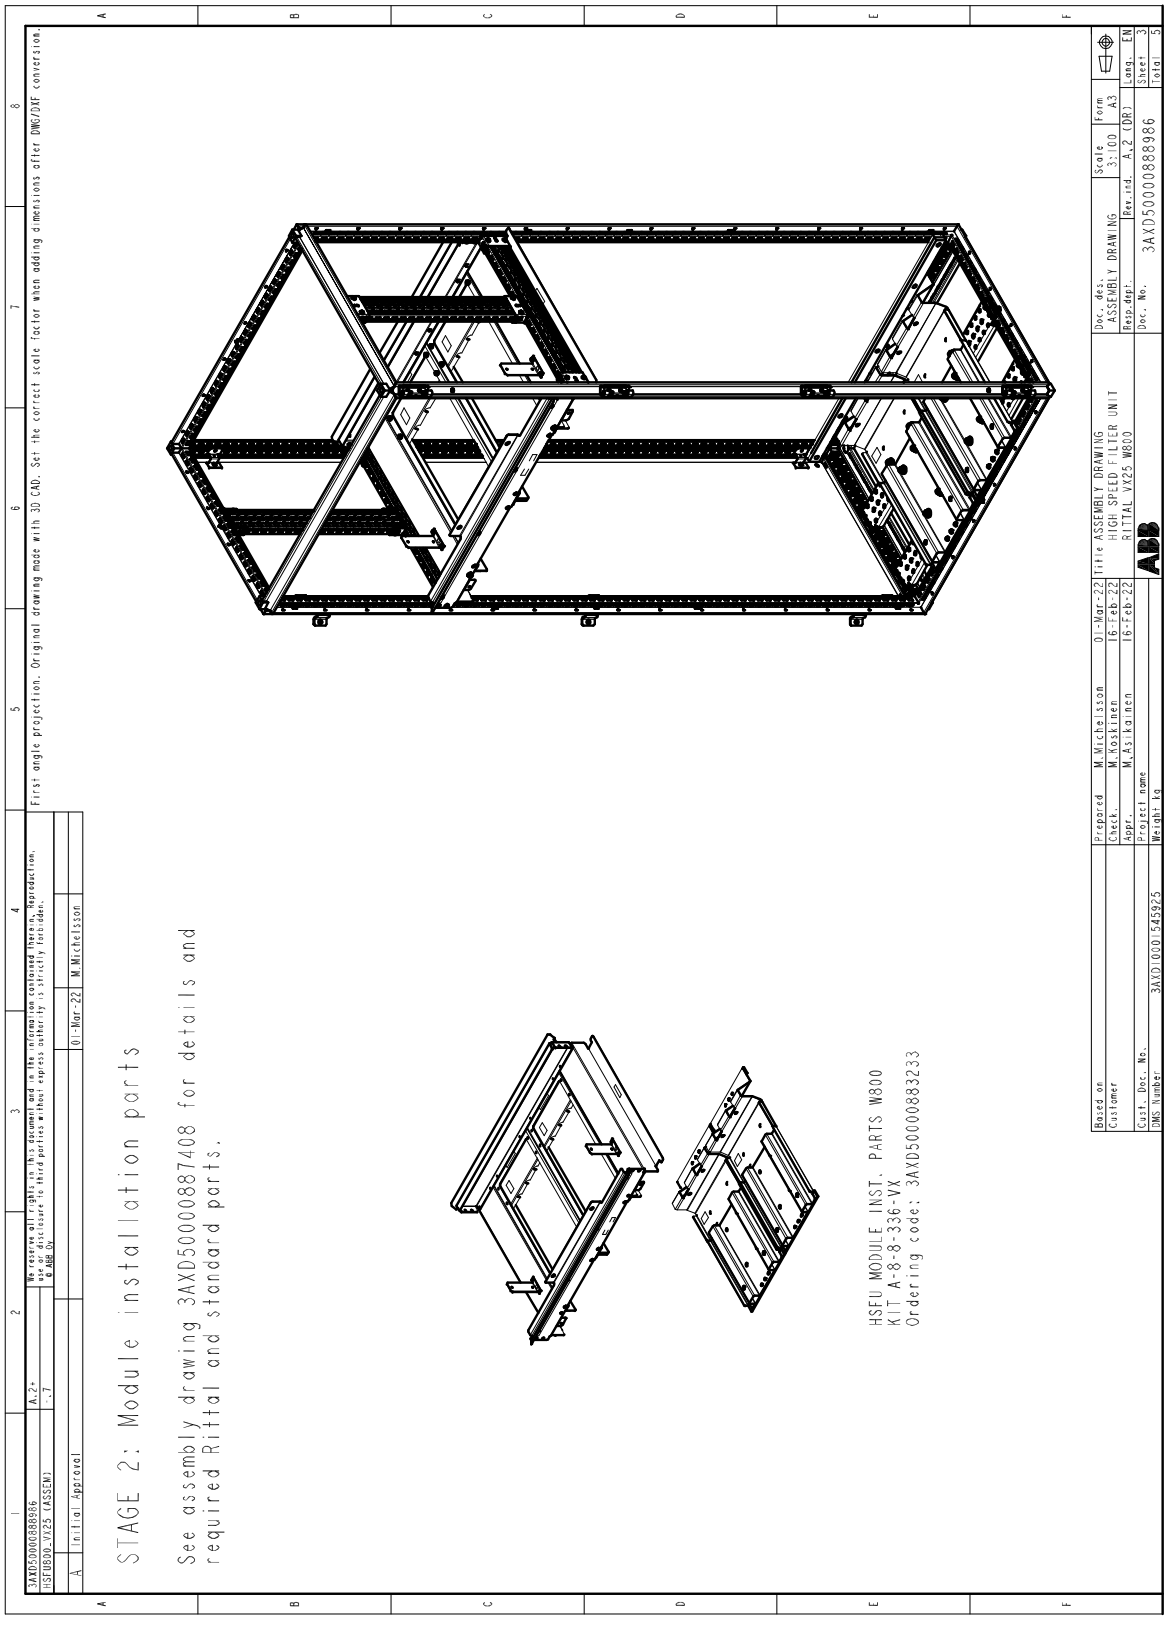

Stage 3: Installation of AC busbars

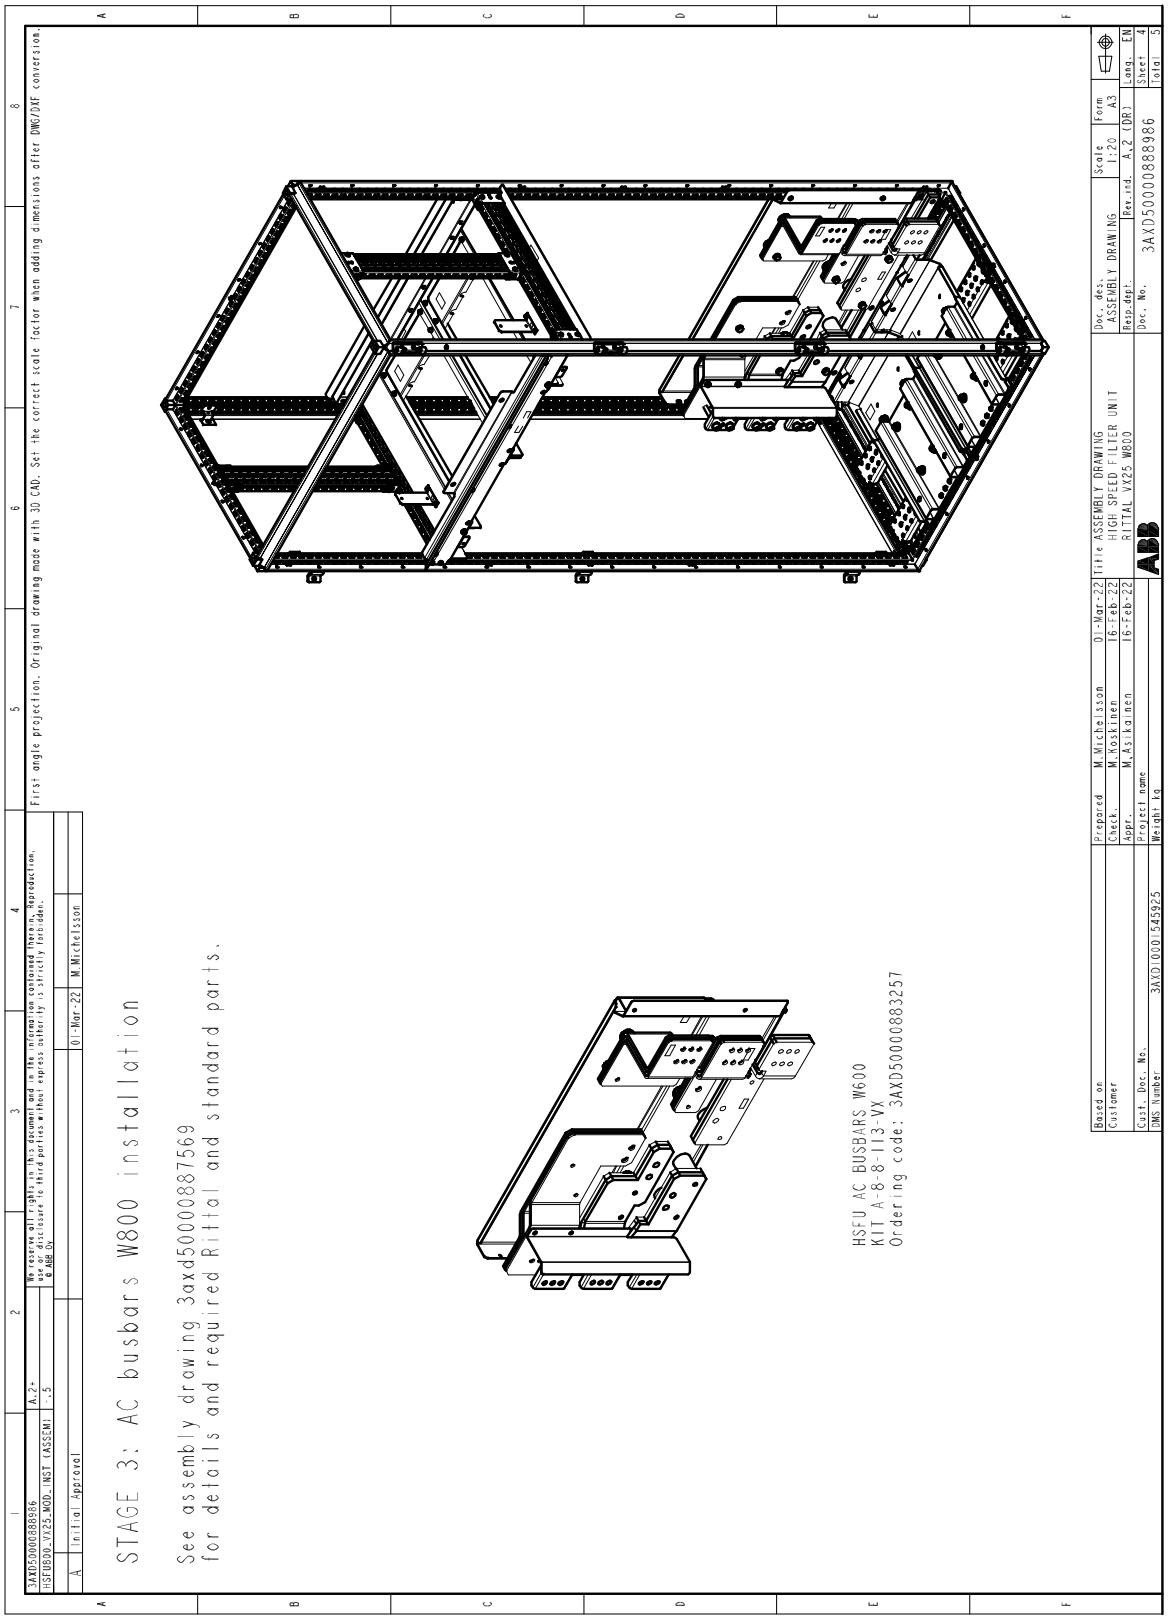

Stage 4: Installation of filter module, AC connection busbars and shrouds

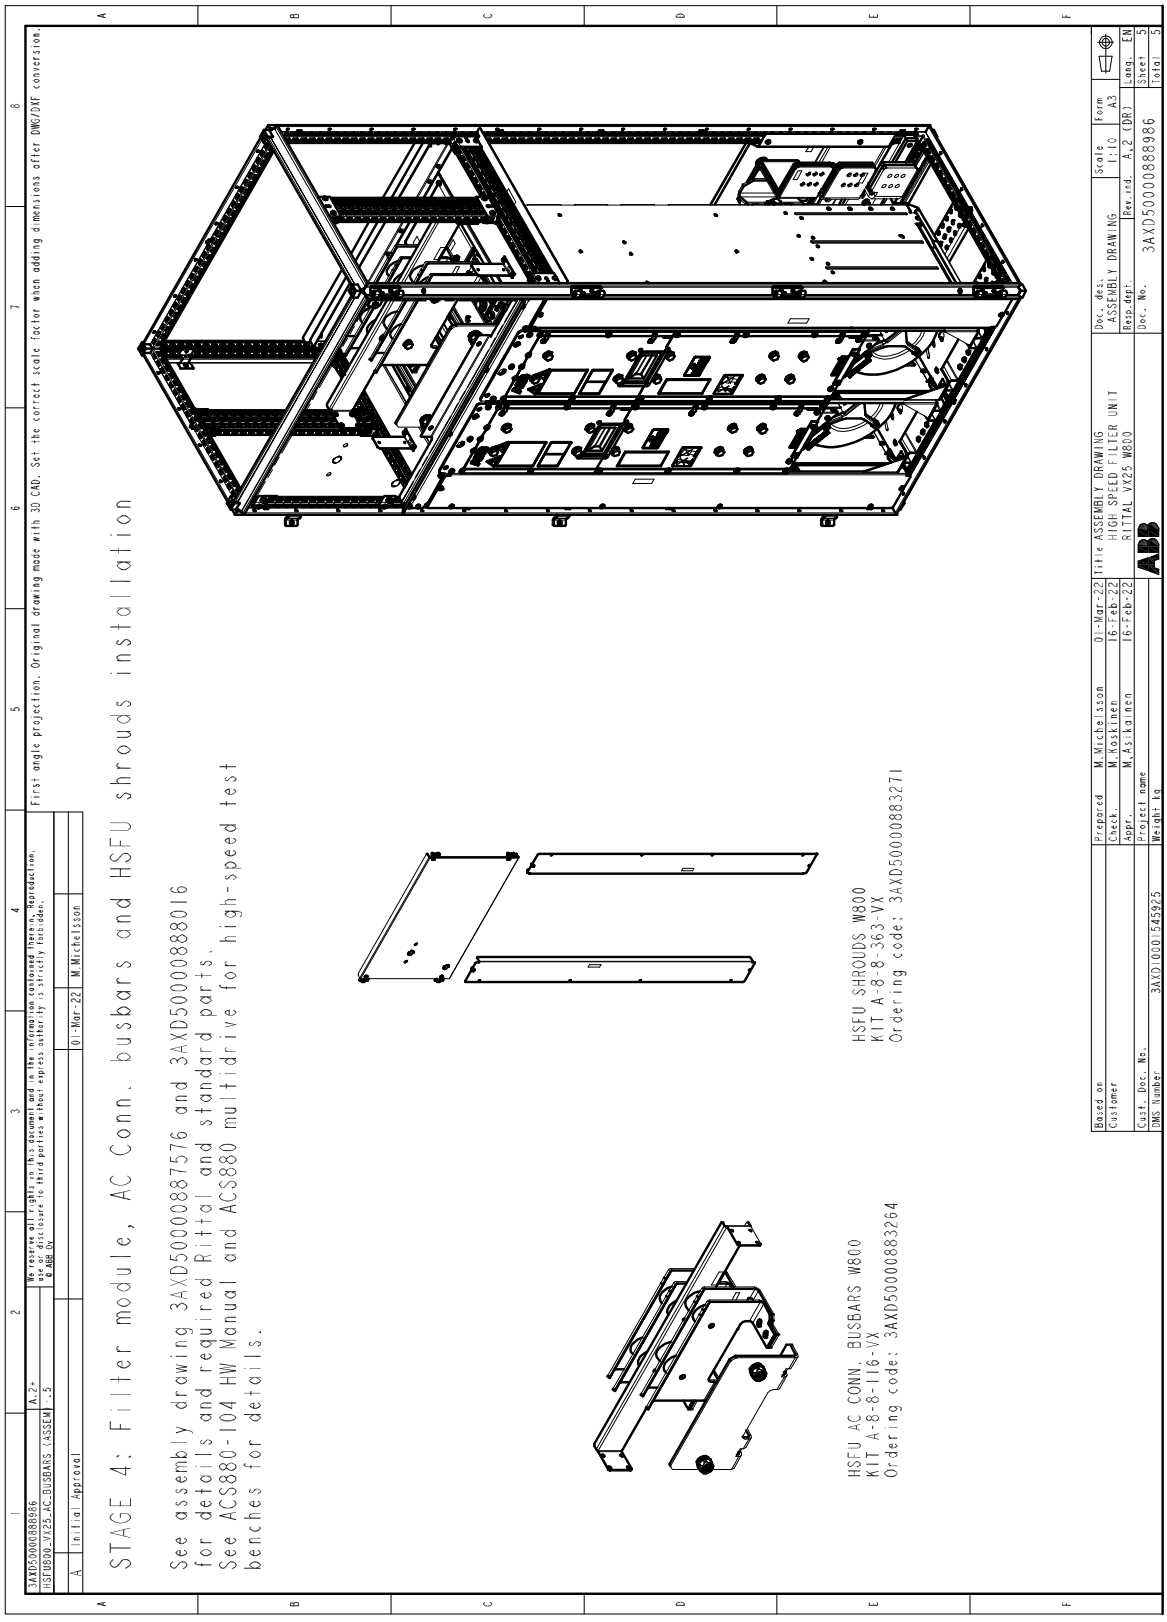


One BLHF filter in a 600 mm wide generic enclosure

Parts installed	Instruction code	Kit code	Kit ordering code
Module top/bottom guides	3AXD50000887224	A-6-8-337	3AXD50000883288
AC flanges	3AXD50000884216	A-X-8-149	3AXD50000883219
AC input busbars	3AXD50000887323	A-6-8-119	3AXD50000885060
AC busbars	3AXD50000887330	A-6-8-114	3AXD50000883295


3AXD50000889020	A.0+	We reserve all rights in this document and in the information contained therein. Reproduction, use or disclosure to third parties without express authority is strictly forbidden. © ABB Oy			First angle projection. Original drawing made with 3D CAD. Set the correct scale factor when adding dimensions after DWG/DXF conversion.		
HSFU600_GENERIC (ASSEM)	-.4						
A	Initial Approval		01-Mar-22	M.Michelsson			

KITS FOR HSFU 1xBLHF IN GENERIC 2000x600x600 CABINET


Note! Only parts included in ABB kits are shown here.
See assembly drawings for required Rittal and/or standard parts.

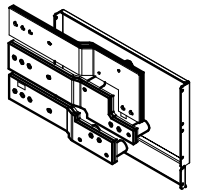


HSFU AC INPUT BUSBARS W600 GEN
KIT A-6-8-119
Ordering code: 3AXD50000885060

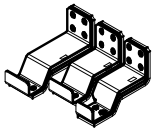


HSFU AC FLANGES
KIT A-X-8-149
Ordering code: 3AXD50000883219

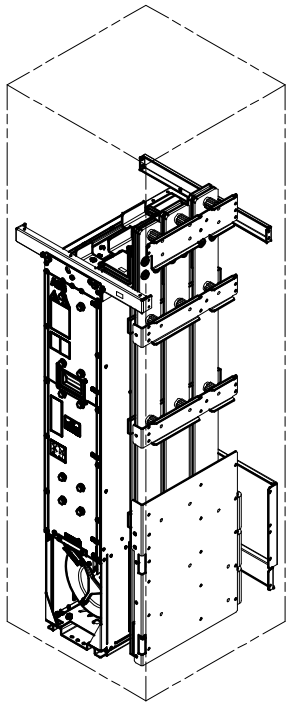

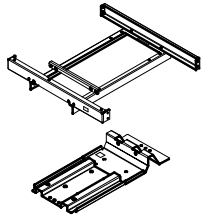

HSFU MODULE INST. PARTS W600 GEN
KIT A-6-8-337
Ordering code: 3AXD50000883288

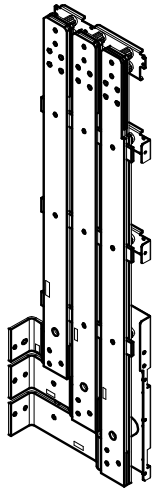

HSFU AC BUSBARS W600 GEN
KIT A-6-8-114
Ordering code: 3AXD50000883295

Based on	Prepared	M.Michelsson	01-Mar-22	Title ASSEMBLY DRAWING	Doc. des.	Scale	Form
Customer	Check.	M.Koskinen	16-Feb-22	HIGH SPEED FILTER UNIT	ASSEMBLY DRAWING	1:25	A3
	Appr.	M.Asikainen	16-Feb-22	GENERIC W600	Resp.dept.	Rev.ind. A.0 (DR)	Lang. EN
Cust. Doc. No.	Project name			ABB	Doc. No. 3AXD50000889020		Sheet 1
DMS Number 3AXD10001545817	Weight kg						Total 1


Two BLHF filters in a 800 mm wide generic enclosure

Parts installed	Instruction code	Kit code	Kit ordering code
Module top/bottom guides	3AXD50000887071	A-8-8-338	3AXD50000883318
AC busbars	3AXD50000887316	A-8-8-115	3AXD50000883332
AC connection busbars	3AXD50000887088	A-8-8-117	3AXD50000883349


3AXD50000889037	A.0+	We reserve all rights in this document and in the information contained therein. Reproduction, use or disclosure to third parties without express authority is strictly forbidden. © ABB Oy			First angle projection. Original drawing made with 3D CAD. Set the correct scale factor when adding dimensions after DWG/DXF conversion.		
HSFU800_GENERIC (ASSEM)	-.3+						
A	Initial Approval		01-Mar-22	M.Michelsson			


KITS FOR HSFU 2xBLHF IN GENERIC 2000x800x600 CABINET

Note! Only parts included in ABB kits are shown here.
See assembly drawings for required Rittal and/or standard parts.

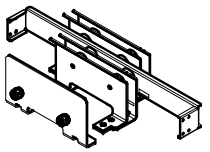


HSFU AC CONN. BUSBARS W800 GEN
KIT A-8-8-117
Ordering code: 3AXD50000883349

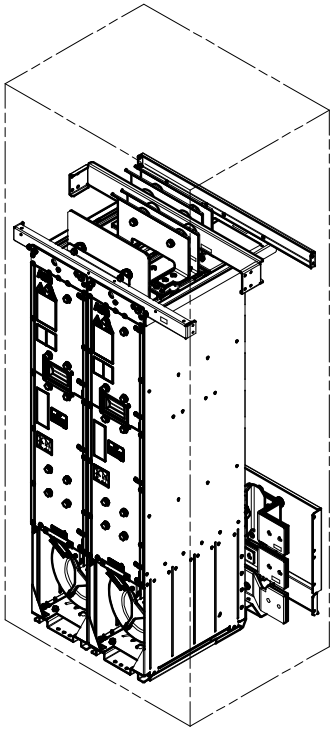

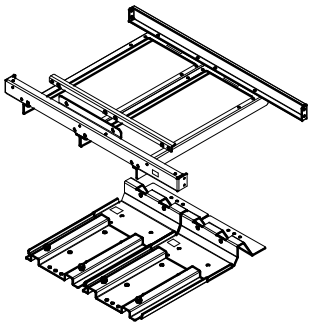

HSFU MODULE INST. PARTS W800 GEN
KIT A-8-8-338
Ordering code: 3AXD50000883318

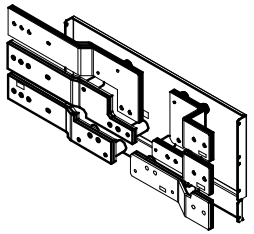

HSFU AC BUSBARS W800 GEN
KIT A-8-8-115
Ordering code: 3AXD50000883332

Based on	Prepared	M.Michelsson	01-Mar-22	Title ASSEMBLY DRAWING	Doc. des.	Scale	Form
Customer	Check.	M.Koskinen	16-Feb-22	HIGH SPEED FILTER UNIT	ASSEMBLY DRAWING	1:25	A3
	Appr.	M.Asikainen	16-Feb-22	GENERIC W800	Resp.dept.	Rev.ind.	A.0 (DR)
Cust. Doc. No.	Project name			ABB	Doc. No.		Lang. EN
DMS Number 3AXD10001545857	Weight kg				3AXD50000889037		Sheet 1
							Total 1

5

Electrical installation

Contents of this chapter

The wiring diagrams in this chapter are simplified presentations. For details, see the example circuit diagrams included in the manual.

Note: The instructions do not cover all possible cabinet constructions.

Safety and liability

The installation must always be designed and made according to applicable local laws and regulations. ABB does not assume any liability whatsoever for any installation which breaches the local laws and/or other regulations. Furthermore, if the recommendations given by ABB are not followed, the drive system may experience problems that the warranty does not cover.

Electrical safety precautions

These electrical safety precautions are for all persons who do work on the drive, motor cable or motor.

This procedure gives information on how to de-energize the drive and make it safe to do work on it. The procedure does not include all possible drive configurations.



WARNING!
Obey these instructions. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do electrical installation or maintenance work. Do these steps before you do installation or maintenance work.

1. Prepare for the work.
   - Make sure that you have a work order.
   - Do an on-site risk assessment or job hazard analysis.
   - Make sure that you have the correct tools available.
   - Make sure that the workers are qualified.
   - Select the correct personal protective equipment (PPE).
   - Stop the drive and motor(s).
2. Clearly identify the work location and equipment.
3. Disconnect all possible voltage sources. Make sure that connection is not possible. Lock out and tag out.
   - If the drive is equipped with a DC/DC converter unit or a DC feeder unit: Open the disconnecting device of the energy storage connected to the unit. The disconnecting device is outside the drive cabinet. Then open the DC switch-disconnector [Q11] of the unit.
   - Open the main disconnecting device of the drive.
   - Open the charging switch if it is present.
   - Open the disconnector of the supply transformer. (The main disconnecting device in the drive cabinet does not disconnect the voltage from the AC input power busbars of the drive cabinet.)
   - Open the auxiliary voltage switch-disconnector (if it is present), and all other possible disconnecting devices that isolate the drive from dangerous voltage sources.
   - If there is a permanent magnet motor connected to the drive, disconnect the motor from the drive with a safety switch or by other means.
   - Open the main isolating device of the drive.
   - Disconnect all dangerous external voltages from the control circuits.
   - After you disconnect power from the drive, wait 5 minutes to let the intermediate circuit capacitors discharge before you continue.
4. Protect other energized parts in the work location against contact and take special precautions when close to bare conductors.
5. Measure that the installation is de-energized. Use a high-quality voltage tester. If the measurement requires that you remove shrouding or other cabinet structures, obey the local laws and regulations applicable to live electrical work. This includes, but is not limited to, electric shock and arc protection.
   - Before and after you measure the installation, verify the operation of the voltage tester on a known voltage source.
   - Make sure that the voltage between the input power terminals of the drive (L1, L2, L3) and the grounding (PE) busbar is zero.

- Make sure that the voltage between the output power terminals of the drive (U, V, W) and the grounding (PE) busbar is zero.
  Important! Repeat the measurement with the DC voltage setting of the voltage tester. Measure between each phase and ground. There is a risk of dangerous DC voltage charging due to leakage capacitances of the motor circuit. This voltage can remain charged for a long time after the drive power-off. The measurement discharges the voltage.
- Make sure that the voltage between the drive DC busbars and the grounding (PE) busbar is zero.
- If the drive is equipped with a DC/DC converter unit or a DC feeder unit: Make sure that the voltage between the energy storage terminals of the unit (ES+ and ES-) and the grounding (PE) busbar is zero.

6. Install temporary grounding as required by the local regulations.
7. Ask for a permit to work from the person that is responsible for the electrical installation work.

General notes

Printed circuit boards



WARNING!
Use ESD wristband when you handle printed circuit boards. Do not touch the boards unnecessarily. The boards are sensitive to electrostatic discharge.

Handling fiber optic cables



WARNING!
Obey these instructions. If you ignore them, damage to the equipment can occur.

- Handle the fiber optic cables with care.
- When you disconnect the fiber optic cables, always hold the connector, not the cable.
- Do not touch the ends of the fibers. They are sensitive to dirt.
- Do not bend the fiber optic cables too tightly. The minimum allowed bend radius is 35 mm (1.4 in).

Measuring the insulation

Measuring the insulation resistance of the drive




WARNING!
Do not do voltage withstand or insulation resistance tests on the drive. The tests can cause damage to the drive. Every drive is tested for insulation between the main circuit and the chassis at the factory. Also, there are voltage-limiting circuits inside the drive which cut down the testing voltage automatically.

Measuring the insulation resistance of the motor and motor cable

WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

1. Do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Make sure that the motor cable is disconnected from the drive output terminals.
3. Measure the insulation resistance between each phase conductor and the protective earth conductor. Use a measuring voltage of 1000 V DC. The insulation resistance of an ABB motor must be more than 100 Mohm (reference value at 25 °C [77 °F]). For the insulation resistance of other motors, refer to the manufacturer's instructions.

   Note: Moisture inside the motor reduces the insulation resistance. If you think that there is moisture in the motor, dry the motor and do the measurement again.

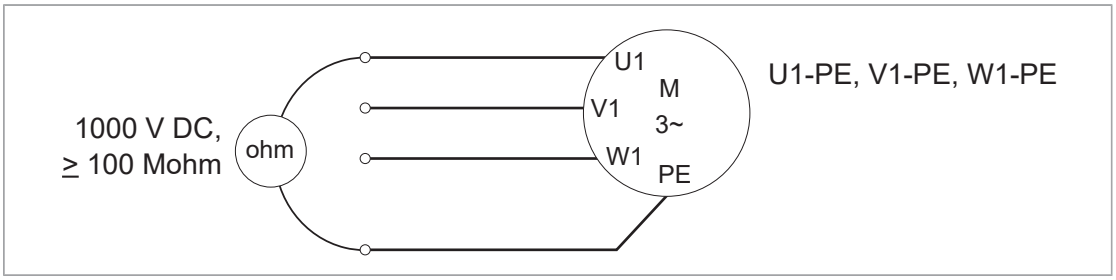


Brake resistor assembly

See section Checking the insulation of the brake resistor assembly (page 409).

Power connections – Frames R1i...R5i

A simplified diagram of the power connections is presented below.

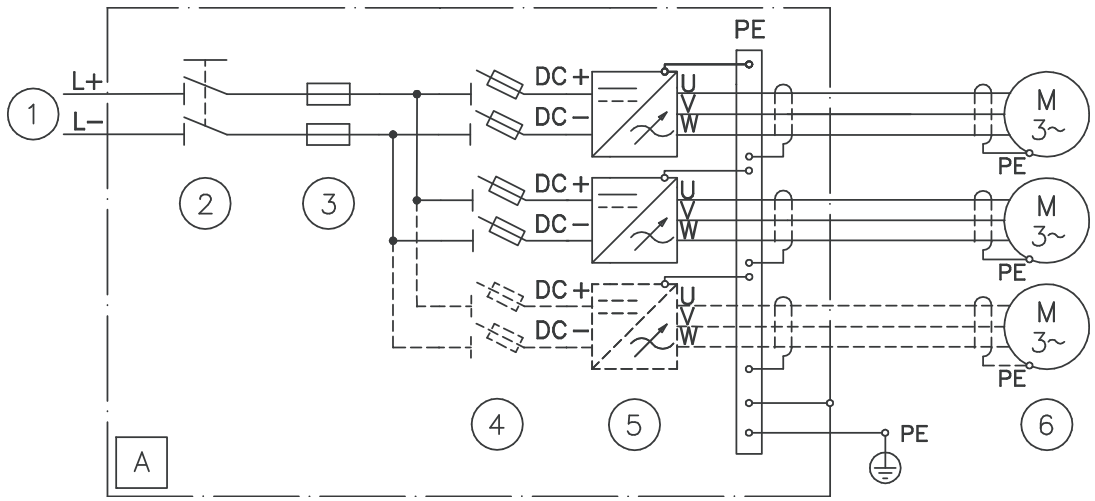

A	Inverter cubicle
1	DC supply
2	DC switch/disconnector for all inverter modules
3	Main DC fuses
4	DC fuse disconnectors for each inverter module
5	Inverter modules
6	Motors

Connection procedure

Frames R1i...R4i: On IT (ungrounded) systems and corner-grounded TN systems, remove the varistor screw (if present) from the inverter module. The screw is labelled VAR and it is located close to the power terminals.

Frames R1i and R2i


WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

1. Run the output (motor) cable into the cubicle through a cable gland or grommet. In case a grounding cable gland is available, remove the outer jacket of the cable where it passes through the cable gland.
2. Cut the input (DC) and output cables to suitable length and strip the ends of the individual conductors.
3. Twist the shield strands of the output cable together to form a separate conductor and crimp a ring terminal onto it. Do the same for the input cable if it is a shielded type.

4. Connect the conductors to the terminal blocks. Connect the cable shields to grounding terminals near the terminal blocks.
5. Secure the cables inside and outside the cabinet mechanically.
6. Tighten the cable gland if present.
7. Connect the motor cable.

Frames R3i...R5i

1. Run the output (motor) cable into the cubicle through a cable gland or grommet. 360° grounding of the cable shield is recommended to suppress interference. In case a grounding cable gland is available, remove the outer jacket of the cable where it passes through the cable gland.
2. Remove the shrouds covering the terminals of the inverter module.
3. Cut the input (DC) and output cables to suitable length and strip the ends of the individual conductors.
4. Twist the shield strands of the output cable together to form a separate conductor. Crimp a suitable ring terminal onto the end, and cover the remaining bare screen with tape as shown below. Do the same for the input cable if it is a shielded type.

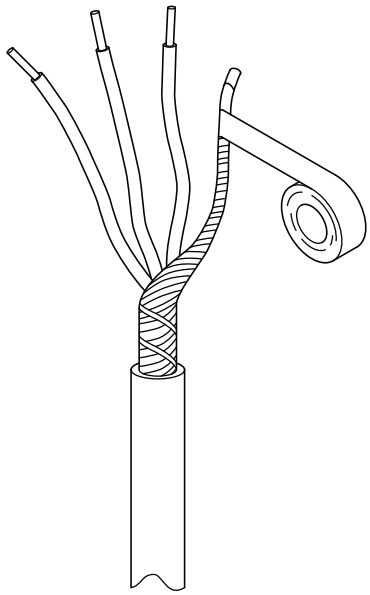


5. Insert the conductors to the terminals and tighten the Allen screw. Note that the original screw lugs can be replaced by crimp ring terminals connected directly to the connection post. Make note of the order and orientation of the washers on the connection post.
6. Connect the cable shields to ground near the terminals.
7. Reinstall the terminal covers.
8. Secure the cables inside and outside the cabinet mechanically.
9. Tighten the cable gland if present.
10. Connect the motor cable.

Power connections – Frames R6i...R8i


Simplified diagrams of the power connections are presented below.

R6i inverter module

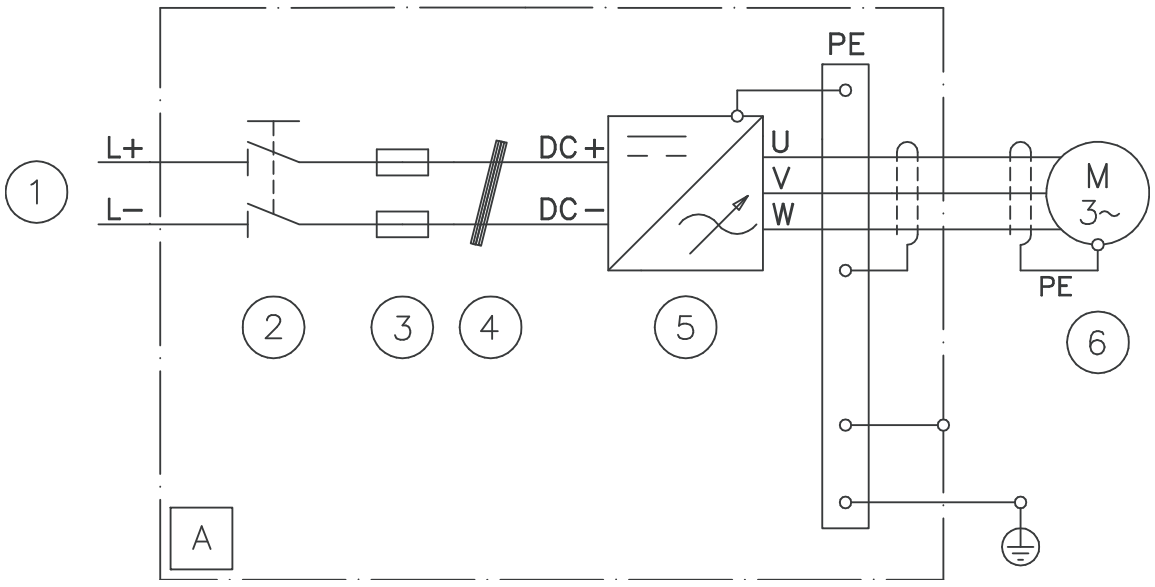

A	Inverter cubicle
1	DC supply
2	DC switch/connector
3	DC fuses
4	Common mode filter
5	Inverter module
6	Motor


R7i inverter module

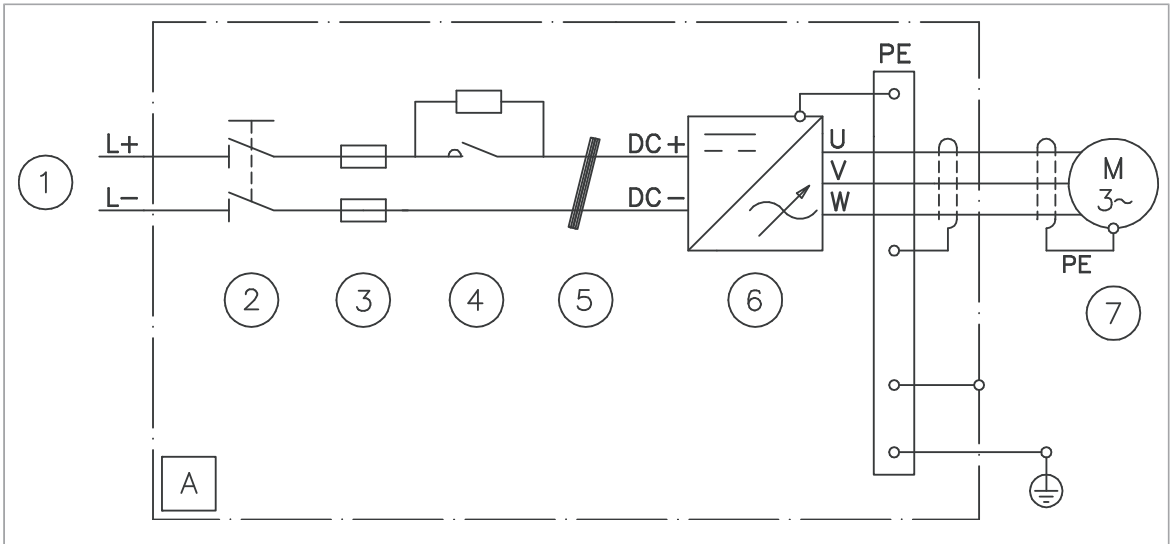

A	Inverter cubicle
1	DC supply
2	DC switch/connector
3	DC fuses
4	Charging circuit (contactor and resistors)
5	Common mode filter
6	Inverter module
7	Motor


R8i inverter module

R8i inverter module

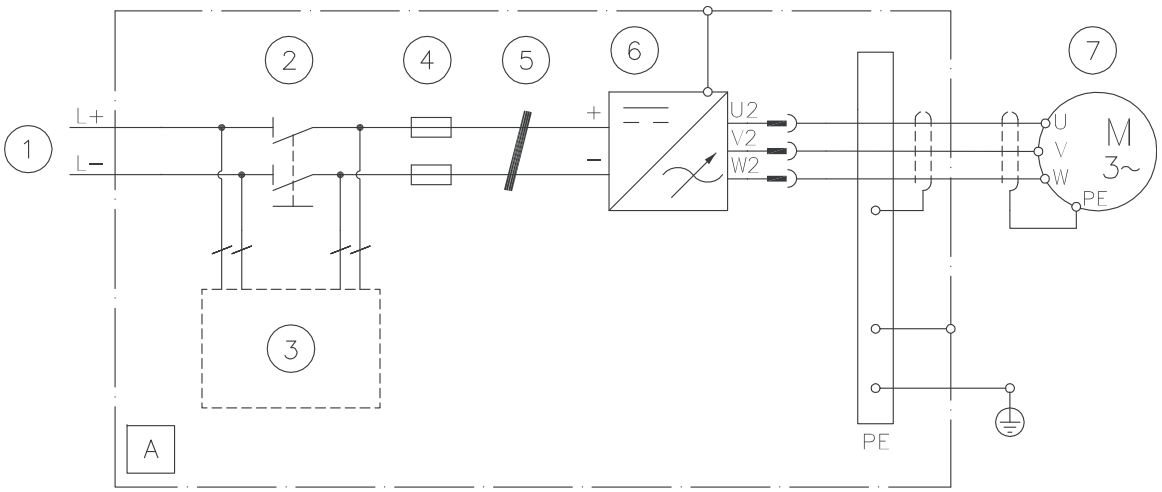

A	Inverter cubicle
1	DC supply
2	DC switch-disconnector
3	Charging circuit (fuses, resistors, charging controller)
4	DC fuses
5	Common mode filter
6	Inverter module
7	Motor

2×R8i inverter unit

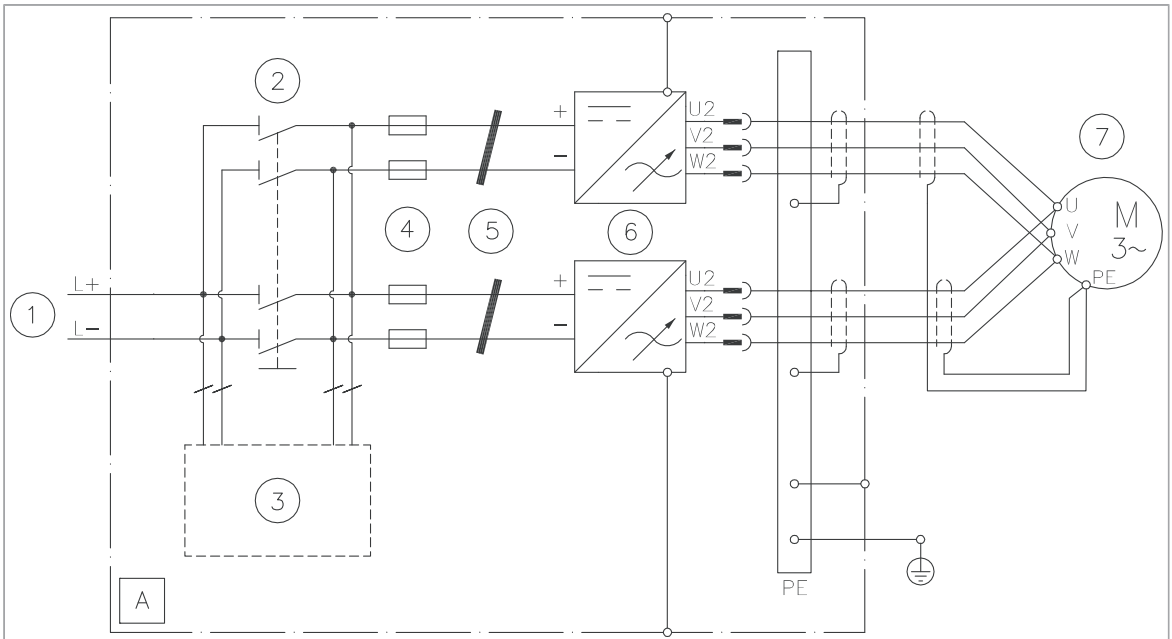

A	Inverter cubicle
1	DC supply
2	DC switch-disconnector
3	Charging circuit (fuses, resistors, charging controller)
4	DC fuses
5	Common mode filters
6	Inverter modules
7	Motor

Connection procedure


WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Ground the inverter modules by the top edge of the front plate. The grounding point is marked on the module. Connect the front plate to the frame support bracket with screws. The bracket should have a galvanic connection to the PE busbar through the cabinet frame.

   Note:

   - If the cabinet frame is painted (such as with Rittal enclosures), it is important to make sure that a good galvanic connection to ground (PE busbar) is achieved. You can, for example, remove the paint from the connection points and use star washers.
   - The connection to ground merely through the mounting screws and the cabinet chassis is not always good enough. To ensure the continuity of the protective bonding circuit, you can connect the modules to the cabinet PE busbar with a copper busbar or cable. The inductance and impedance of the PE conductor must be rated according to permissible touch voltage appearing under fault conditions (so that the fault point voltage will not rise excessively when a ground fault occurs).
     See ACS880 multidrives cabinets and modules electrical planning instructions (3AUA0000102324 [English]).
3. Do the connections between the components inside the cabinet (if not yet done).
4. Put the output (motor) cable into the cubicle through a cable gland or grommet. Ground the cable shield 360° to suppress interference. In case a grounding cable gland is available, remove the outer jacket of the cable where it passes through the cable gland, refer to Cable entry kit (page 330).
5. Cut the output cable to suitable length and strip the ends of the individual conductors.


6. Twist the shield strands of the output cable together to form a separate conductor and wrap tape around it as shown.

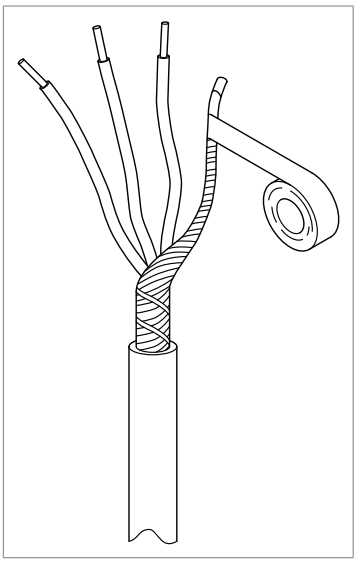

7. Crimp suitable cable lugs to the conductors as well as the twisted shield. Connect the phase conductors to the output busbars. Connect the cable shield to a PE busbar.
8. Secure the cables inside and outside the cabinet mechanically.
9. Tighten the cable gland if present.

Grounding the motor cable shield at the motor end


For minimum radio-frequency interference, ground the cable shield 360° at the cable entry of the motor terminal box.

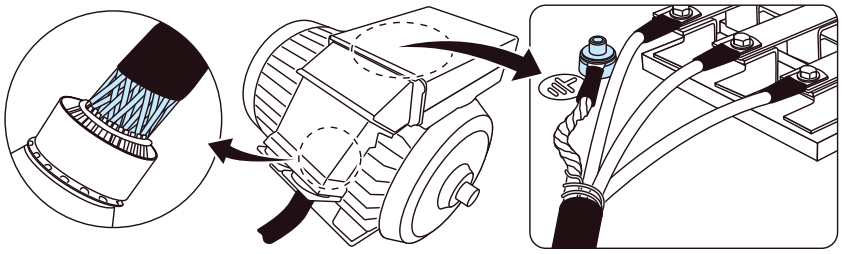


Installing the BLHF filter

Remove the fan of the BLHF filter module. For instructions, see ACS880 multidrive for high-speed test benches supplement (3AXD50000818013 [English]). Push the BLHF filter module into its place. Connect the filter AC busbars (behind the filter module) with six bolts to the busbars on the cabinet frame. Reinstall the fan of the BLHF filter module.


Bottom connection of the BLHF filter

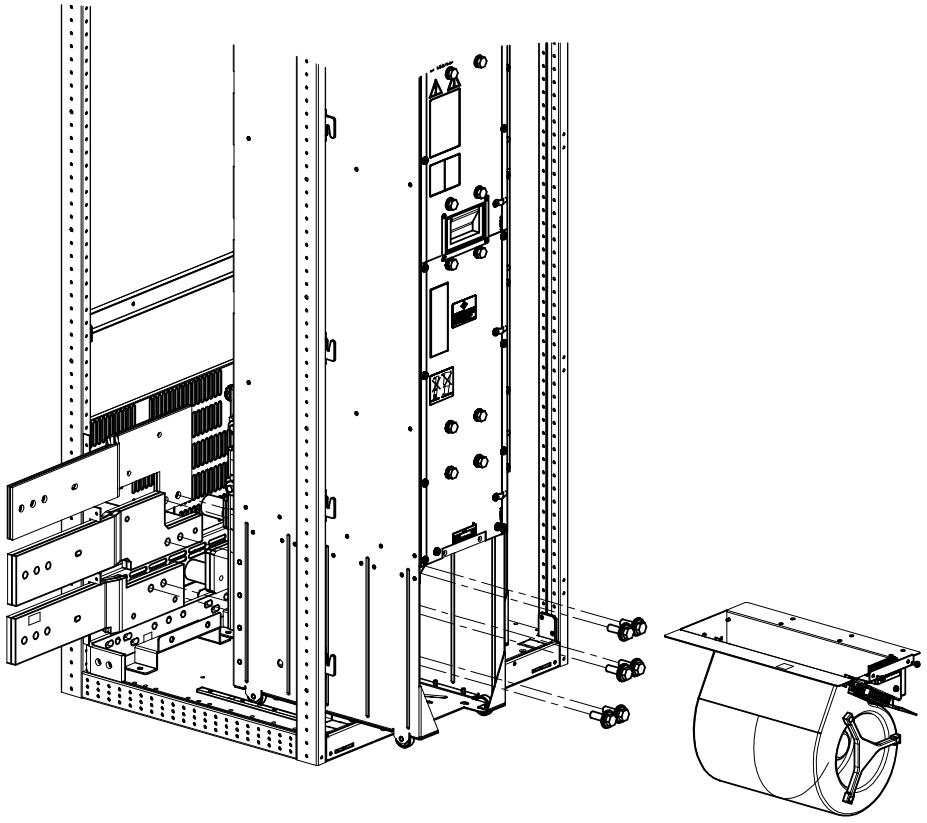

Top connection of the 1×BLHF filter

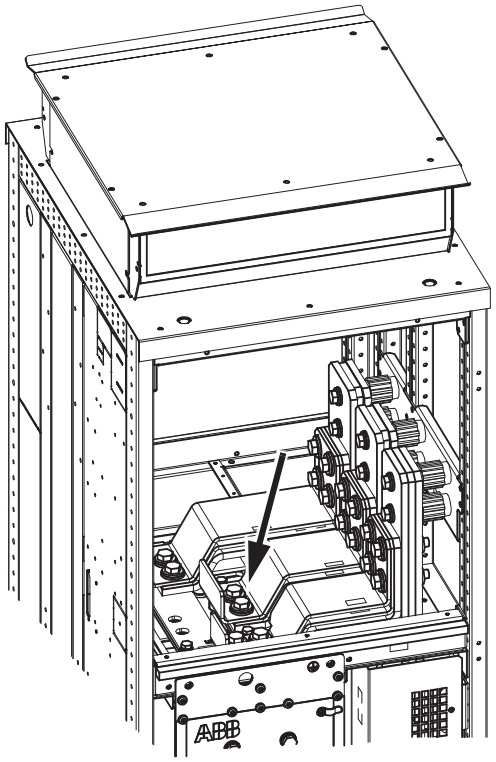

Top connection of the 2×BLHF filter

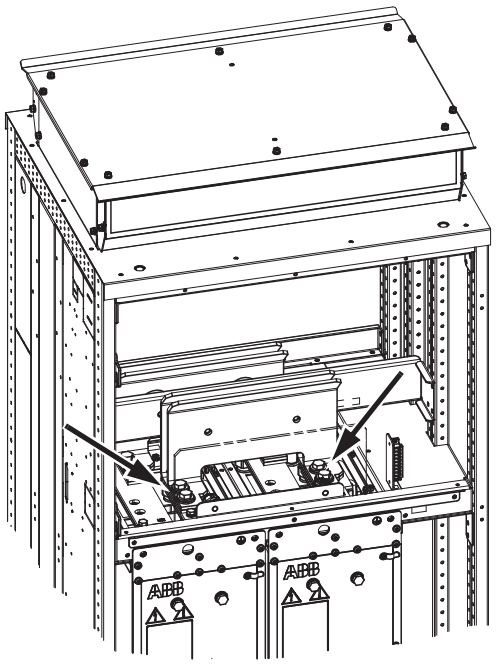

Replacing ACS800 R8i modules with ACS880 R8i modules

ACS880 R8i modules can be ordered with option +P942 for mechanical compatibility with ACS800 R8i modules. A dimension drawing is presented on Frame R8i with option +P942 (page 427).


The following procedure explains the additional wiring changes that are required.

WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.


1. Replace the inverter module(s).

   Note: The DC fuses (F11.xx) and common mode filters (R11.xx) at the input of each inverter module need not be changed if the output currents of the inverter module(s) remain unchanged.
2. If needed, connect an auxiliary voltage supply of 230 V AC 50 Hz (standard) or 115 V AC 60 Hz (with option +G304) to X50:4…5 on the module to power the BDPS (internal power supply of the module) even when the DC link is not live.
3. Replace the RDCU control unit with a BCU-x2 inverter control unit with a sufficient number of inverter module connections. Connect the control unit to a 24 V DC power supply. (ABB recommends an external power supply for an inverter unit consisting of parallel-connected modules; with a single-module configuration, connectors X53:1 and X53:2 on the module can be used.)
4. Connect the BCU to the inverter module(s) using fiber optic cables. In case of parallel-connected modules, remove the existing APBU branching unit.
5. If the module is equipped with option +C188 (direct-on-line cooling fan), connect a 3-phase 400 V 50/60 Hz (or 320 V 60 Hz) supply to X50:1…3.
6. If the inverter unit is equipped with a DC switch/disconnector and charging controller, connect terminals V50 and V60 of the inverter module to the charging controller using fiber optic cables.


   Note: With an ACS880 R8i module used with the ACS800 charging circuit, only one charging cycle in five minutes is allowed.

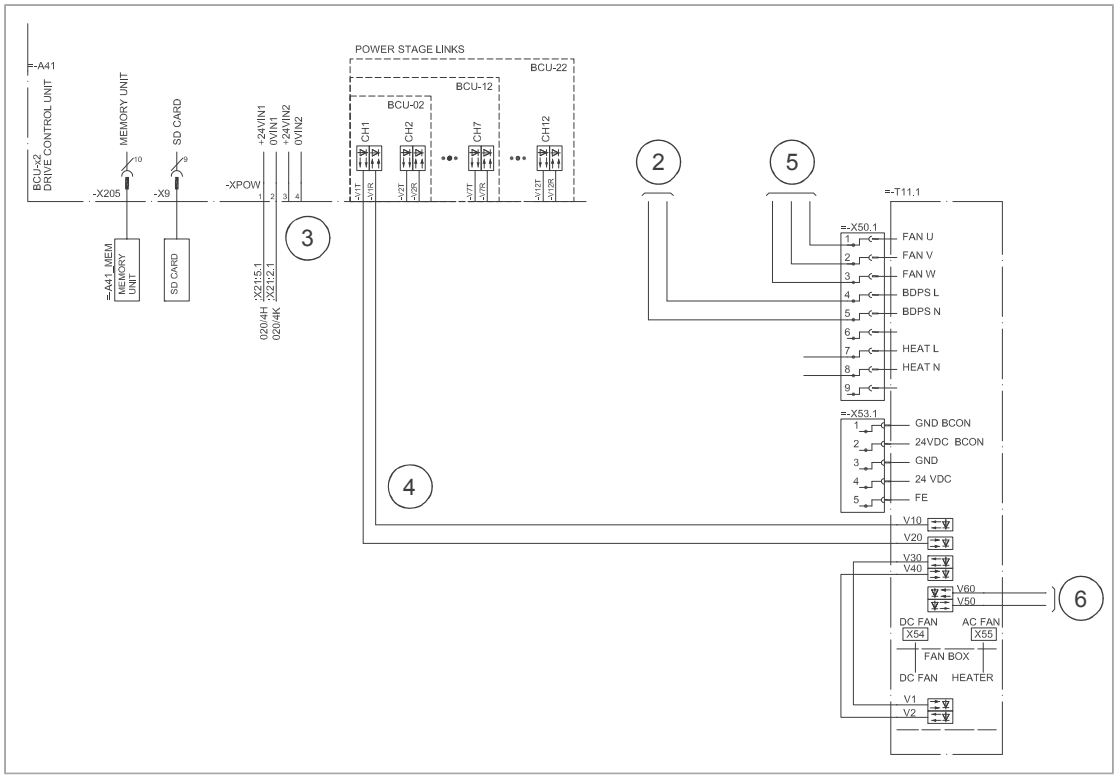


7. On the BCU control unit, connect the DIIL input to a +24VD terminal.

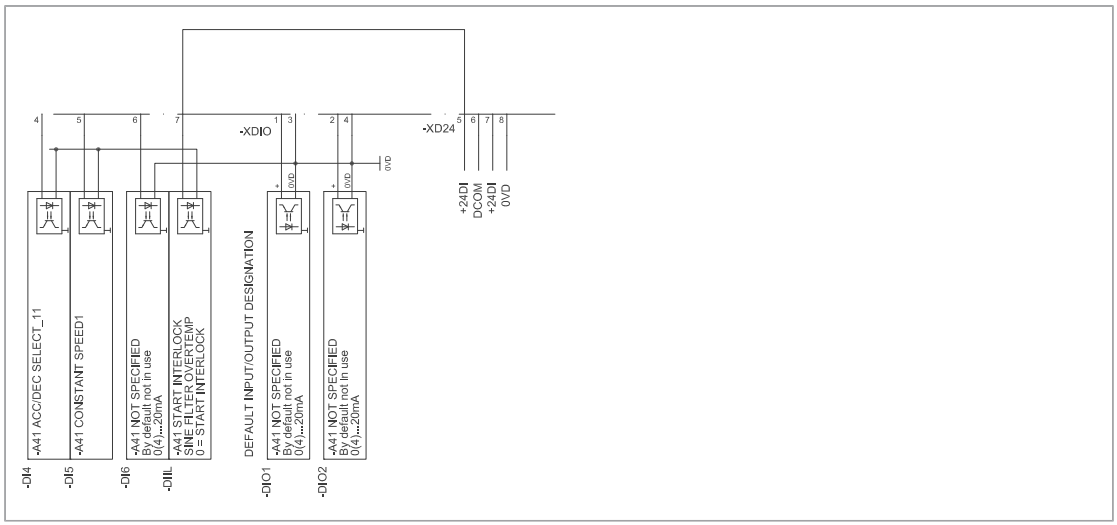


8. If the Safe torque off (STO) function is to be used, remove the jumper connection between X52 and X53 on each module. Wire the STO link to all inverter modules of the inverter unit. Connect the device triggering the STO function to the BCU control unit.

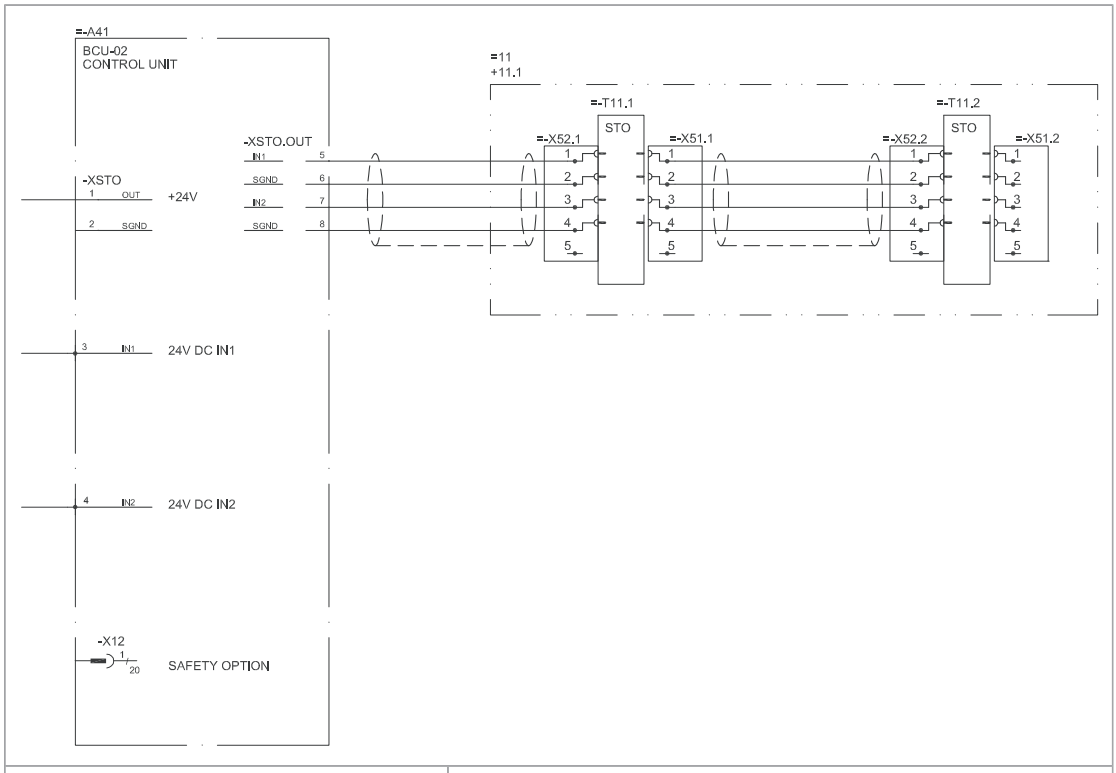


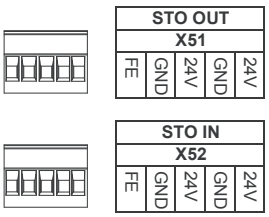	STO signal forwarding output to next inverter module (if present) STO signals from BCU control unit

9. Connect an ACS-AP-x control panel to X13 on the BCU control unit.

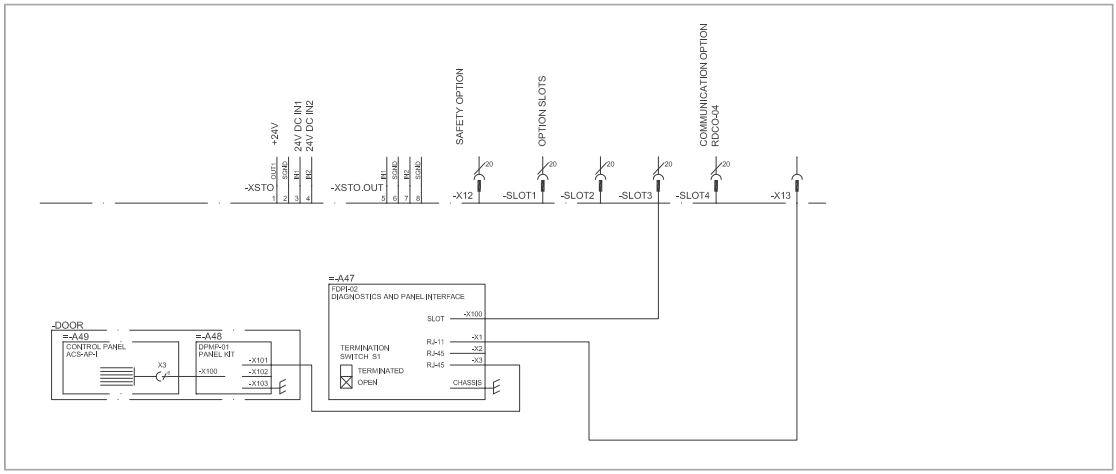

10. If the modules are equipped with option +C183 (heating elements), connect a 230/115 V AC (50/60 Hz) supply to X50:7…8.

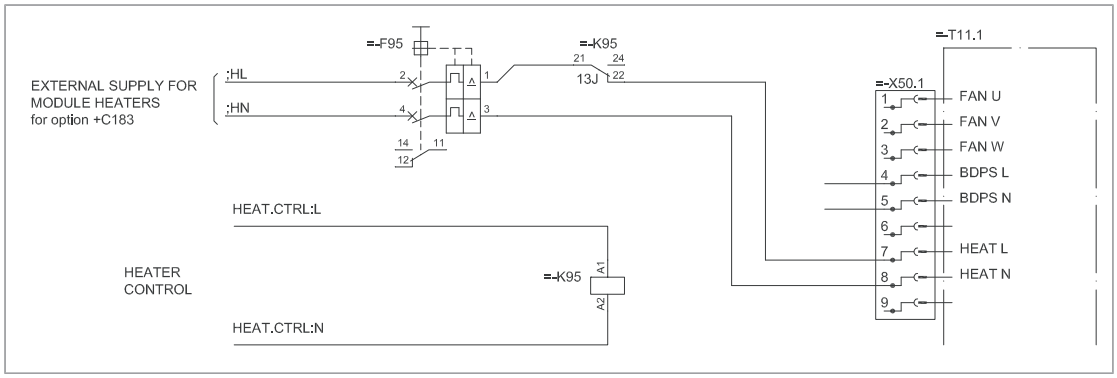
EXTERNAL SUPPLY FOR
MODULE HEATERS
for option +C183
:HL
:HN
=-F95
2
4
1
3
14
12
11
=-K95
21
24
13J
22
=-T11.1
=-X50.1
1
2
3
4
5
6
7
8
9
FAN U
FAN V
FAN W
BDPS L
BDPS N
HEAT L
HEAT N
HEAT.CTRL:L
HEATER
CONTROL
=-K95
A1
A2
HEAT.CTRL:N

Connecting the control cables


For technical data and default I/O connections of the control unit, see chapter Control unit.

WARNING!
Obey these instructions. If you ignore them, injury or death, or damage to the equipment can occur.

If you are not a qualified electrical professional, do not do installation or maintenance work.

Do these steps before you begin any installation or maintenance work.


1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Remove shrouding to access the cable entries and trunking inside the cubicle.
3. Run the control cables into the cubicle. If possible, arrange for a 360° grounding of the cable shield at the cable entry.
   If the outer surface of the shield is non-conductive, turn the shield inside out as shown below and wrap copper foil around the cable to keep the shielding continuous. Do not cut the grounding wire (if present).

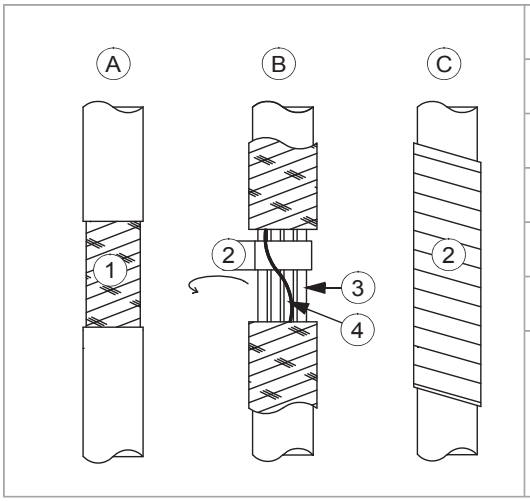

A	Stripped cable
B	Conductive surface of the shield exposed
C	Stripped part covered with copper foil
1	Cable shield
2	Copper foil
3	Shielded twisted pair
4	Grounding wire

4. Run the cables to the control unit (or other connection point). Use the existing trunking wherever possible.
5. (Only when running the cable to the inverter module) The inverter control units have a clamp plate attached. Remove the outer sheathing of the cable at one of the clamps on the plate. Tighten the clamp onto the bare cable shield.
6. Cut the cables to suitable length.

7. Strip the cable ends and conductors. When connecting to the drive I/O, also remove the shield along with the outer sheathing, and use electrical tape or shrink tubing to contain the strands. Elsewhere, twist the outer shield strands into a bundle, crimp a lug onto it and connect it to the nearest chassis grounding point.

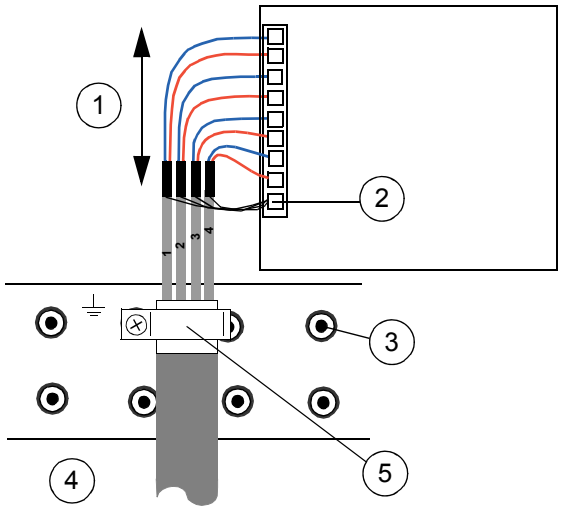

1	Keep as short as possible
2	SHIELD*
3	If no dedicated “shield” connector is provided, ground the inner cable shields to the chassis.
4	At the other end of the cable, leave the shield unconnected, or connect it to ground via a capacitor with a value of a few nanofarads.
5	Where grounding clamps are not available, twist the shield strands into a bundle, crimp a lug terminal onto it and fasten the lug to the chassis. Secure the cable into place with eg. cable ties.

8. Connect the conductors to appropriate terminals.
9. Install any shrouds removed earlier.

Installing option modules

Installing an I/O extension, fieldbus adapter or pulse encoder option module

Refer to the option module manual. For installation on the UCU-22…24 control unit, refer to UCU-22, -23 and -24 control units hardware manual (3AXD50000817726 [English]). For installation on the BCU-02, BCU-12 or BCU-22 control unit, refer to BCU-02, -12 and -22 control units Hardware manual (3AUA0000113605 [English]).

Installing an FSO safety functions module onto UCU or BCU control unit

Refer to FSO-12 safety functions module user's manual or FSO-21 safety functions module user’s manual. For installation on the UCU-22…24 control unit, refer to UCU-22, -23 and -24 control units hardware manual (3AXD50000817726 [English]). If you install the module onto BCU-02, BCU-12 or BCU-22 control unit, refer to BCU-02, -12 and -22 control units Hardware manual (3AUA0000113605 [English]).


Installing an FSO safety functions module onto ZCU control unit

WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

WARNING!
Use ESD wristband when you handle printed circuit boards. Do not touch the boards unnecessarily. The boards are sensitive to electrostatic discharge.

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. The FSO module comes with alternative bottom plates for mounting on different control units. Replace the bottom plate of the FSO module if necessary.
3. Connect the data cable to control unit connector X12.
4. Put the FSO module into its position on SLOT 2 of the control unit. Attach the FSO module by the bottom plate with four screws.
5. Torque the FSO module electronics grounding screw to 1.2 N·m (10.6 lbf·in).

   Note: The screw tightens the connections and grounds the FSO module. It is essential for fulfilling the EMC requirements and for proper operation of the FSO module.
6. Connect the other end of the data cable to connector X110 on the FSO module.
7. Connect the STO cable to FSO module connector X111 and to control unit connector XSTO.
8. Connect the power supply wires to the FSO module terminal X112.
9. Connect any user-defined signal cables to the FSO module according to the application requirements. Refer to the FSO module user's manual.

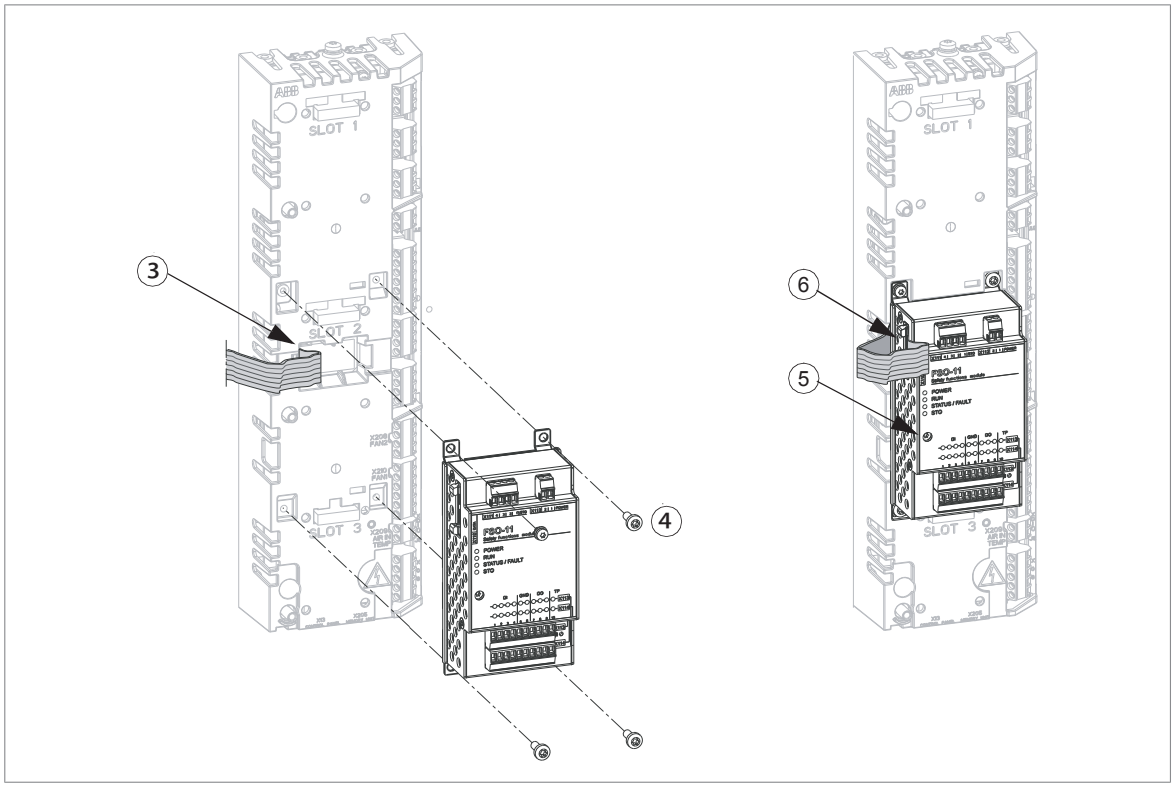


Mounting kit for FSO safety functions module

To reserve the slots of the control unit for other modules, you can install the FSO module separately from the control unit using mounting kit 3AXD50000025495 (A-X-X-279). The kit contains:

- parts for mounting the FSO module onto a DIN rail nearby the control unit
- parts for mounting the FSO module onto the grounding/clamping plate of a ZCU-14 control unit
- longer cables for connecting the FSO module to the control unit
- installation instructions (assembly drawing).

The illustration below shows the FSO module installed onto a DIN rail.

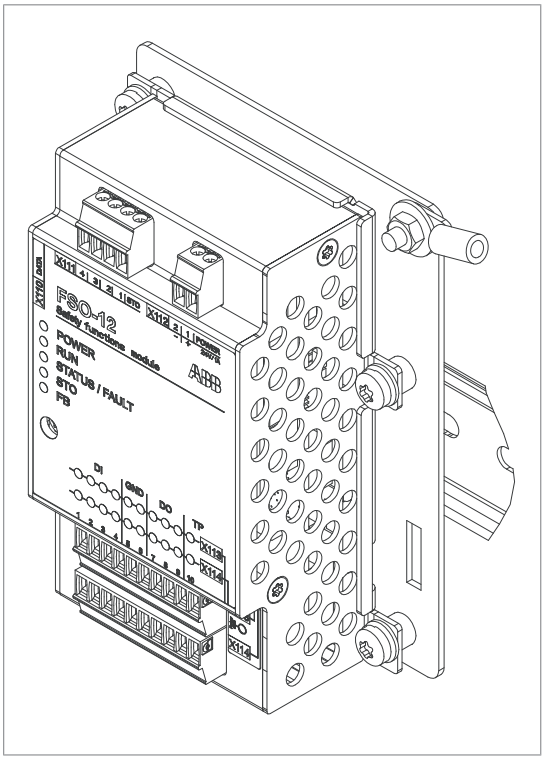

Installing the FSPS-21 PROFIsafe safety functions module

To install the FSPS-21 PROFIsafe safety functions module onto the drive control unit, refer to FSPS-21 PROFIsafe safety functions module user's manual (3AXD50000158638 [English]).

Installing the FSCS-21 CIP Safety™ functions module


To install the FSCS-21 CIP Safety™ functions module onto the drive control unit, refer to FSCS-21 CIP Safety™ functions module user's manual (3AXD50001065478 [English]).

Connecting a PC

WARNING!
Do not connect the PC directly to the control panel connector of the control unit. It can cause damage.

A PC (with, for example, the Drive Composer PC tool) can be connected as follows:

1. To connect a control panel to the unit, either
   - insert the control panel into the panel holder or platform, or
   - use an Ethernet (eg, Cat 5e) networking cable.
2. Remove the USB connector cover on the front of the control panel.
3. Connect an USB cable (Type A to Type Mini-B) between the USB connector on the control panel (3a) and a free USB port on the PC (3b).
4. The panel will display an indication whenever the connection is active.
5. Refer to the documentation of the PC tool for setup instructions.

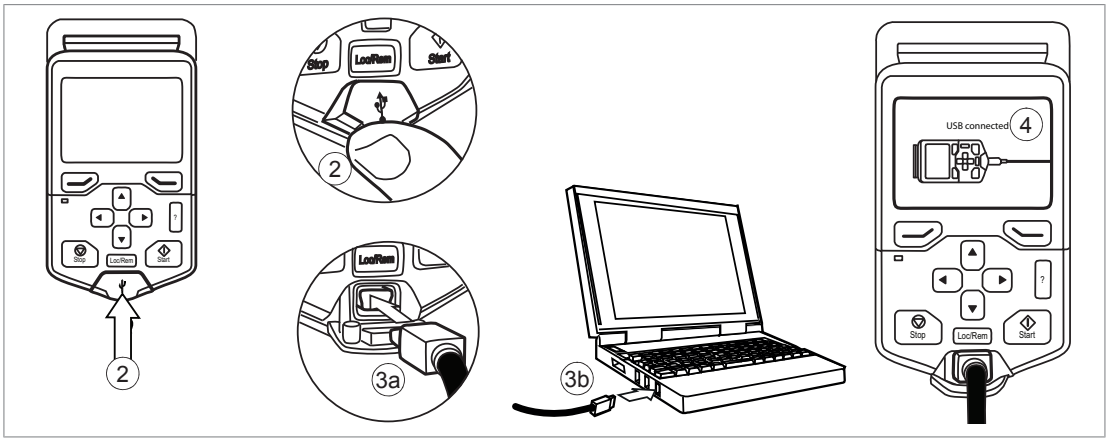

Panel bus (control of several units from one control panel)

One control panel (or PC) can be used to control several drives (or inverter units, supply units etc.) by constructing a panel bus. This is done by daisy-chaining the panel connections of the drives. Some drives have the necessary (twin) panel connectors in the control panel holder; those that do not require the installation of an FDPI-02 module (available separately). For further information, see the hardware description and FDPI-02 diagnostics and panel interface user's manual (3AUA0000113618 [English]).

The maximum allowed length of the cable chain is 100 m (328 ft).

Do the steps in section Electrical safety precautions (page 172) before you start the work.

1. Connect the panel to one drive using an Ethernet (for example Cat 5e) cable.
   - Use Menu - Settings - Edit texts - Drive to give a descriptive name to the drive
   - Use parameter 49.01* to assign the drive with a unique node ID number
   - Set other parameters in group 49* if necessary
   - Use parameter 49.06* to validate any changes.


   *The parameter group is 149 with supply (line-side), brake or DC/DC converter units.


   Repeat the above for each drive.
2. With the panel connected to one unit, link the units using Ethernet cables.
3. Switch on the bus termination on the drive that is farthest from the control panel in the chain.
   - With drives that have the panel mounted on the front cover, move the terminating switch into the outer position.
   - With the FDPI-02 module and BCU-02 control unit: move termination switch S1 on the FDPI-02 module into the TERMINATED position.
   - With the FDPI-02 module and UCU-22…24 control unit: move termination switch S1 on the FDPI-02 module into the OPEN position. Move control panel connection termination switch XPAN TERM on the UCU-22…24 control unit to ON position.

   Make sure that bus termination is off on all other drives.
4. On the control panel, switch on the panel bus functionality (Options - Select drive - Panel bus). The drive to be controlled can now be selected from the list under Options - Select drive.


If a PC is connected to the control panel, the drives on the panel bus are automatically displayed in the Drive Composer PC tool.

With twin connectors in the control panel holder:

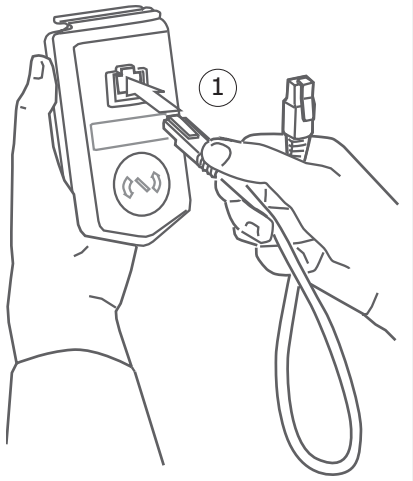

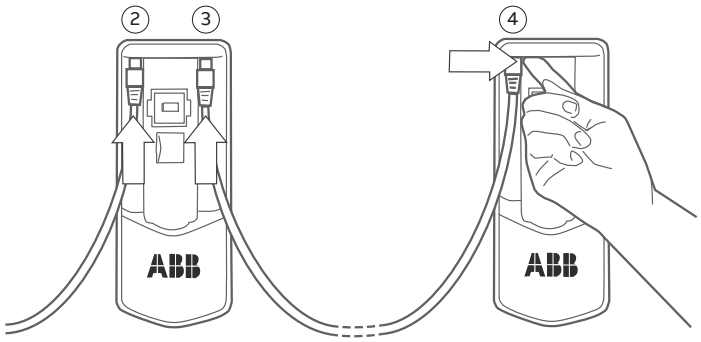

With FDPI-02 modules and BCU control unit:

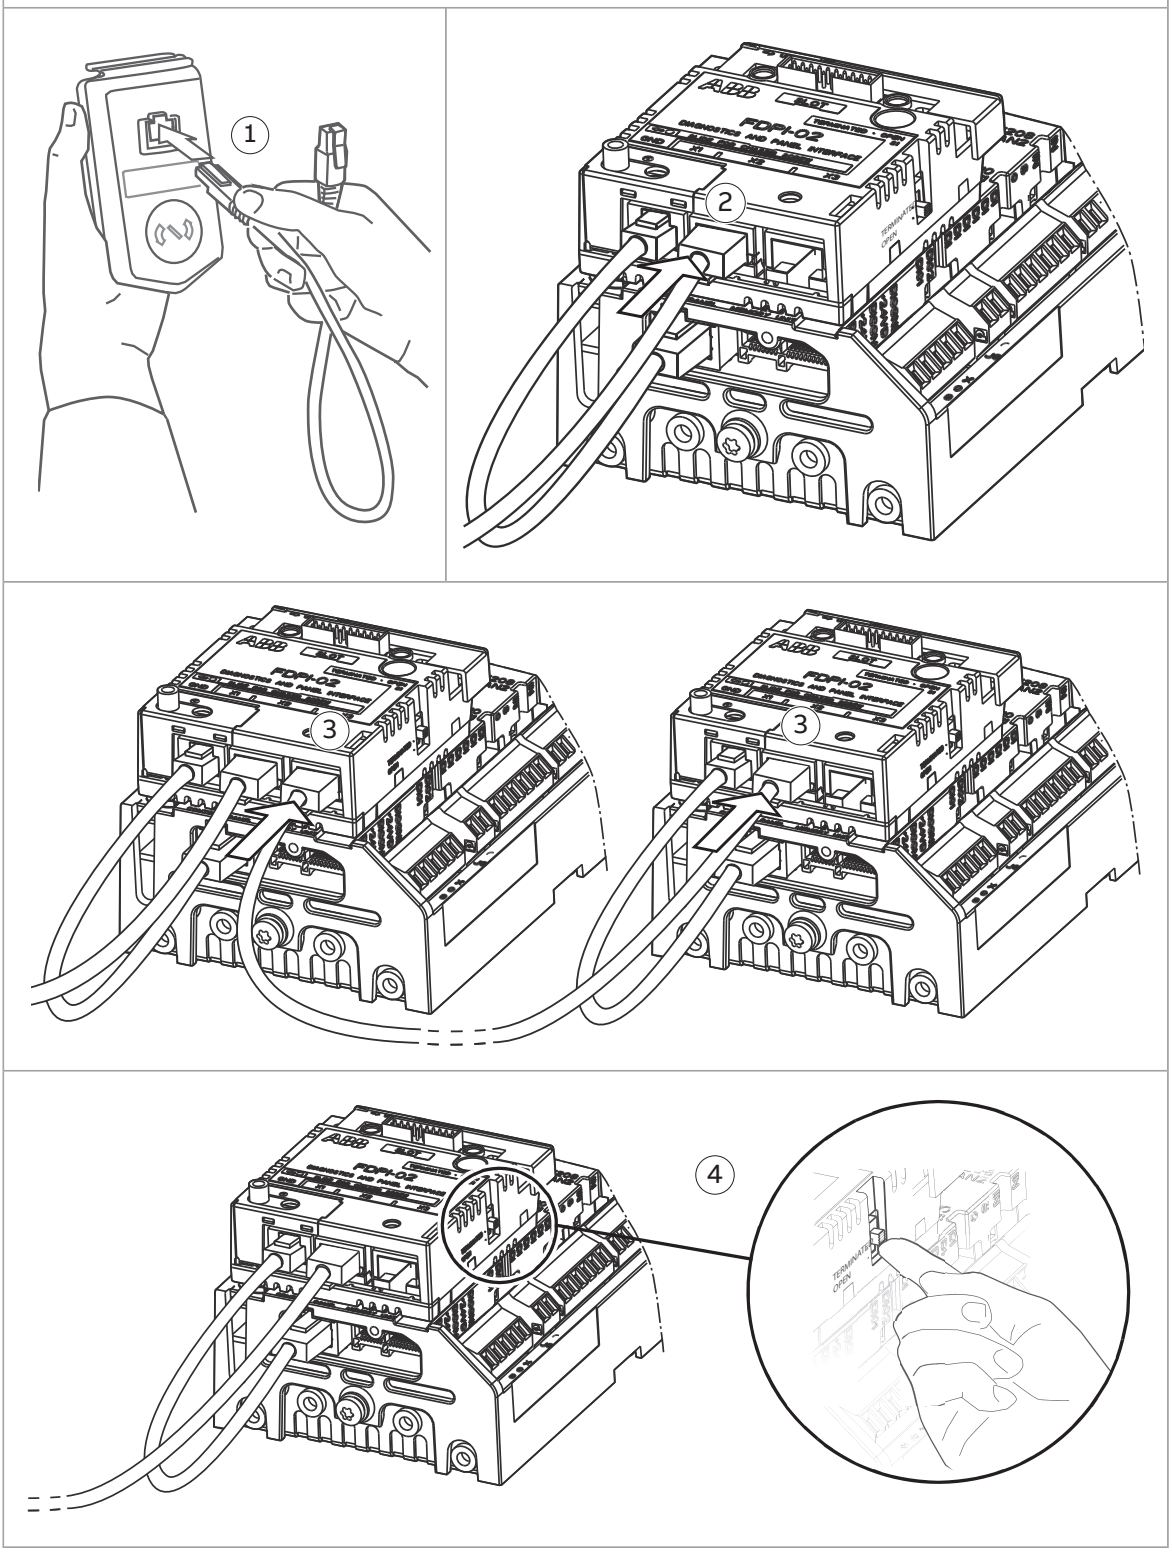

6

Control unit (UCU)

Contents of this chapter

This chapter


- gives information on the connections of the control unit, and
- has the specifications of the inputs and outputs of the control unit.

General

The UCU control units are used for controlling power modules (drive, inverter, supply, converter, etc) via fiber optic links. UCU-22 has two, UCU-23 has eight and UCU-24 has 14 power module connections. The UCU control units have integrated branching unit functionality for collecting and storing real-time data from the power modules to help fault tracing and analysis. The data is stored on a memory card which can be analyzed by ABB service personnel.


Layout

The figures below show an example UCU-24 control unit.

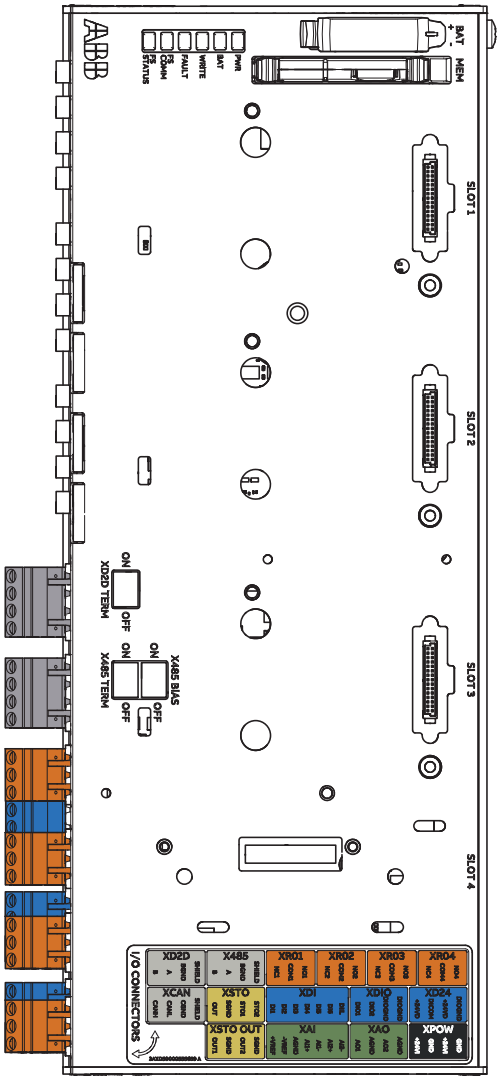


	Description
I/O	I/O terminals
SLOT 1	I/O extension, encoder interface or fieldbus adapter module connection. For F-type modules with USCA-02 adapter.
SLOT 2	
SLOT 3	
SLOT 4	RDCO-0x DDCS communication option module connection
MEM	UMU-01 memory unit connection. Data logger microSDHC memory card for inverter module communication is inside the memory unit.
BAT	Holder for real-time clock battery (BR2032)
XD2D TERM	Termination switches for drive-to-drive link (XD2D)
X485 TERM	RS-485 link termination switch
X485 BIAS	RS-485 link bias switch.
DICOM= DIOGND	Ground selection. Determines whether DICOM is separated from DIOGND (ie. the common reference for the digital inputs floats). Refer to the ground isolation diagram.

LED	Description
PWR	When the PWR LED is on, the voltage supply is sufficient.
BAT	When the BAT LED is on, the real-time clock battery voltage is higher than 2.5 V. If the LED is off, replace the battery.
WRITE	When the WRITE LED is on, writing to microSDHC memory card is in progress. Do not remove the microSDHC memory card.
FAULT	The control program has generated a fault. Refer to the firmware manual.
FS COMM	Reserved.
FS STATUS	Reserved.

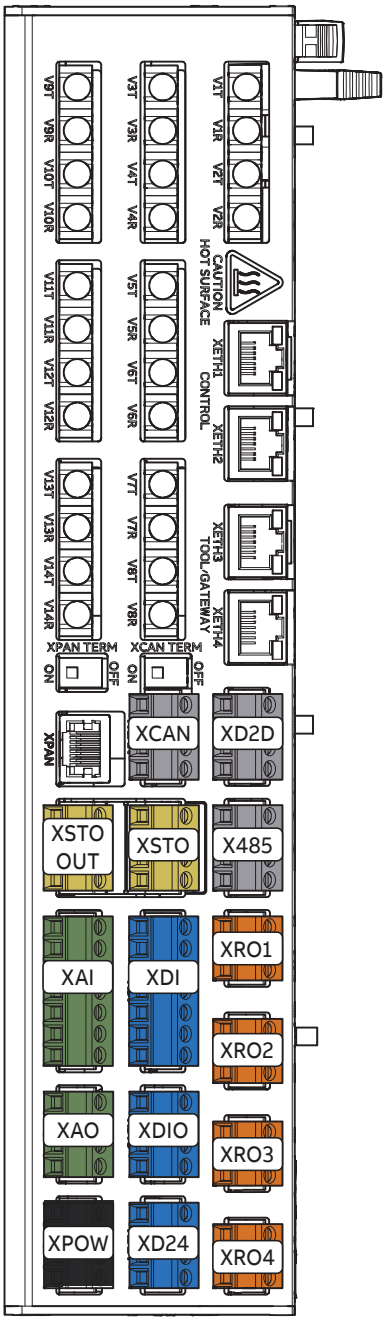

	Description
XAI	Analog input
XAO	Analog output
XCAN	Not in use
XCAN TERM	CAN bus termination switch
XDI	Digital input
XDIO	Digital input/output
XD2D	Drive-to-drive link
XD24	+24 V output (for digital input)
XETH1	Ethernet ports for fieldbus, internal switch
XETH2	
XETH3	Ethernet ports for tool communication, internal switch
XETH4	
XPAN	Control panel connection
XPAN TERM	Panel bus termination switch
XPOW	External power input
XRO1	Relay output RO1
XRO2	Relay output RO2
XRO3	Relay output RO3
XRO4	Relay output RO4, reserved.
XSTO	Safe torque off connection (input signals)
XSTO OUT	Safe torque off connection (to inverter modules)
X485	RS-485 link
V1T/V1R … V14T/V14R	Fiber optic connections to converter modules (VxT = transmitter, VxR = receiver)

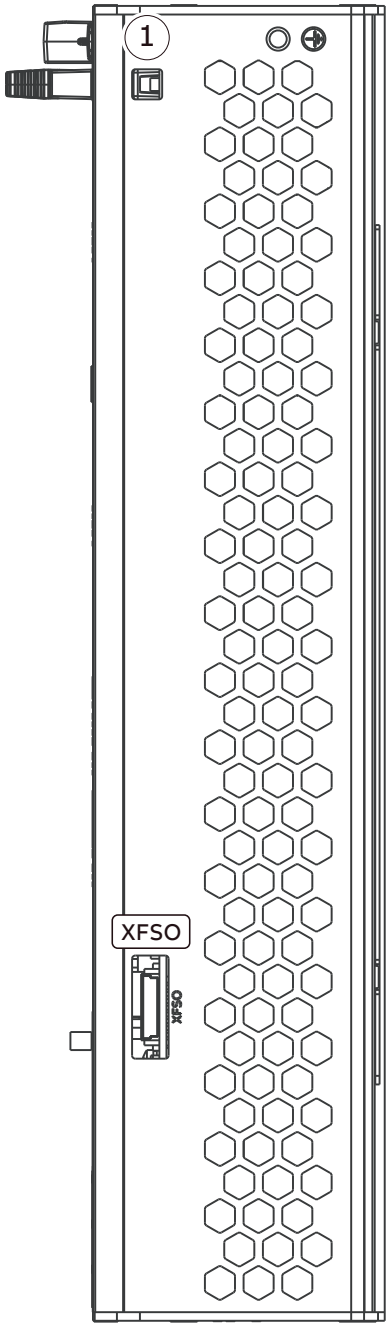

	Description
XFSO	Optional connection for FSO safety functions module (supported only in inverter units)
1	Humidity and temperature measurements

Default I/O diagram of the inverter control unit

This diagram shows the default control connections of the inverter control unit. The ACS880 primary control program is in use.


Terminal			Description	
XD2D			Drive-to-drive link	
1 2 3 4	1	B	Not in use by default	
	2	A		
	3	BGND		
	4	SHIELD		
ON 1	XD2D.TERM		Drive-to-drive link termination switch	
X485			RS485 connection	
5 6 7 8	5	B	Not in use by default	
	6	A		
	7	BGND		
	8	SHIELD		
ON 1	X485 BIAS		X485 bias selection switch	
ON 1	X485 TERM		X485 termination switch	
XCAN			CAN bus	
9 10 11 12	9	CANH	Not supported	
	10	CANL		
	11	CGND		
	12	SHIELD	Control cable shield	
1 ON	XCAN TERM		CANopen termination switch	
XRO1			Relay output 1	
11 12 13	11	NC1	Norm. closed	XRO1: Ready (Energized = Ready) 250 V AC / 30 V DC, 2 A
	12	COM1	Common	
	13	NO1	Norm. open	
XRO2			Relay output 2	
21 22 23	21	NC2	Norm. closed	XRO2: Running (Energized = Running) 250 V AC / 30 V DC, 2 A
	22	COM2	Common	
	23	NO2	Norm. open	
XRO3			Relay output 3	
31 32 33	31	NC3	Norm. closed	XRO3: Fault (-1) (Energized = No fault) 250 V AC / 30 V DC, 2 A
	32	COM3	Common	
	33	NO3	Norm. open	

Terminal			Description	
XRO4			Relay output 4	
41 42 43	41	NC4	Norm. closed	XRO4: Not supported 250 V AC / 30 V DC, 2 A
	42	COM4	Common	
	43	NO4	Norm. open	
XSTO			Safe torque off input connection	
1 2 3 4	1	OUT	XSTO: STO1 and STO2 are connected to OUT at the factory. To enable start and operation, STO1 and STO2 must be connected to OUT. Refer to chapter The Safe torque off function (page 379).	
	2	SGND		
	3	STO1		
	4	STO2		
XSTO OUT			Safe torque off output connection (to inverter modules)	
5 6 7 8	5	OUT1	XSTO OUT: Safe torque off output to inverter modules	
	6	SGND		
	7	OUT2		
	8	SGND		
XDI			Digital inputs	
1 2 3 4 5 6 7	1	DI1	Stop (0) / Start (1)	
	2	DI2	Forward (0) / Reverse (1)	
	3	DI3	Reset	
	4	DI4	Acceleration & deceleration select [1)]	
	5	DI5	Constant speed 1 select (1 = on) [2)]	
	6	DI6	Not in use by default.	
	7	DIIL	Run enable. DIIL is connected to XD24:5 at the factory. [3)]	
XDIO			Digital input/outputs	
1 2 3 4	1	DIO1	Output: Ready	
	2	DIO2	Output: Running	
	3	DIOGND	Digital input/output ground	
	4	DIOGND	Digital input/output ground	
XD24			Auxiliary voltage output	
5 6 7 8	5	+24VD	+24 V DC 200 mA [4)]	
	6	DICOM	Digital input ground	
	7	+24VD	+24 V DC 200 mA [4)]	
	8	DIOGND	Digital input/output ground	
	DICOM=DIOGND		Ground selection switch. Determines whether DICOM is separated from DIOGND (ie, common reference for digital inputs floats). ON: DICOM connected to DIOGND. OFF: DICOM and DIOGND separate.	

Terminal			Description
XAI			Analog inputs, reference voltage output
1 2 3 4 5 6 7	1	+VREF	10 V DC, R_L 1…10 kohm
	2	-VREF	-10 V DC, R_L 1…10 kohm
	3	AGND	Ground
	4	AI1+	Speed reference. 0(2)…10 V, R_{in} > 200 kohm [5]
	5	AI1-	
	6	AI2+	Not in use by default. 0(4)…20 mA, R_{in} = 100 ohm [6]
	7	AI2-	
XAO			Analog outputs
1 2 3 4	1	AO1	Motor speed rpm 0 … 20 mA, R_L < 500 ohm
	2	AGND	
	3	AO2	Motor current 0 … 20 mA, R_L < 500 ohm
	4	AGND	
XPOW			External power input
1 2 3 4	1	+24VI	19…32 V DC, 1.5…2.9 A (depends on the load and supply voltage) External power input Two supplies can be connected to the control unit for redundancy.
	2	GND	
	3	+24VI	
	4	GND	
XFSO			Safety functions module connection. Support depends on the control program. Refer to the firmware manual.
XETH1			Ethernet ports for fieldbus. Support depends on the control program. Refer to the firmware manual.
XETH2			
XETH3			Ethernet ports for tool communication. Support depends on the control program. Refer to the firmware manual.
XETH4			
XPAN			Control panel connection
	XPAN TERM		Control panel connection termination switch. Used for panel bus configuration.
MEM			Memory unit connection

1) 0 = Acceleration/deceleration ramps defined by parameters 23.12/23.13 in use.
1 = Acceleration/deceleration ramps defined by parameters 23.14/23.15 in use.
2) Constant speed 1 is defined by parameter 22.26.
3) The DIIL input is configured to stop the unit when the input signal is removed. This input does not have a SIL or PL classification.
4) Total load capacity of these outputs is 4.8 W (200 mA at 24 V) minus the power taken by DIO1 and DIO2.
5) Current [0(4)…20 mA, R_{in} = 100 ohm] or voltage [0(2)…10 V, R_{in} > 200 kohm]. Change of setting requires reboot of control unit.
6) Current [0(4)…20 mA, R_{in} = 100 ohm] or voltage [0(2)…10 V, R_{in} > 200 kohm]. Change of setting requires reboot of control unit.

This is an I/O connection example for the inverter control unit.

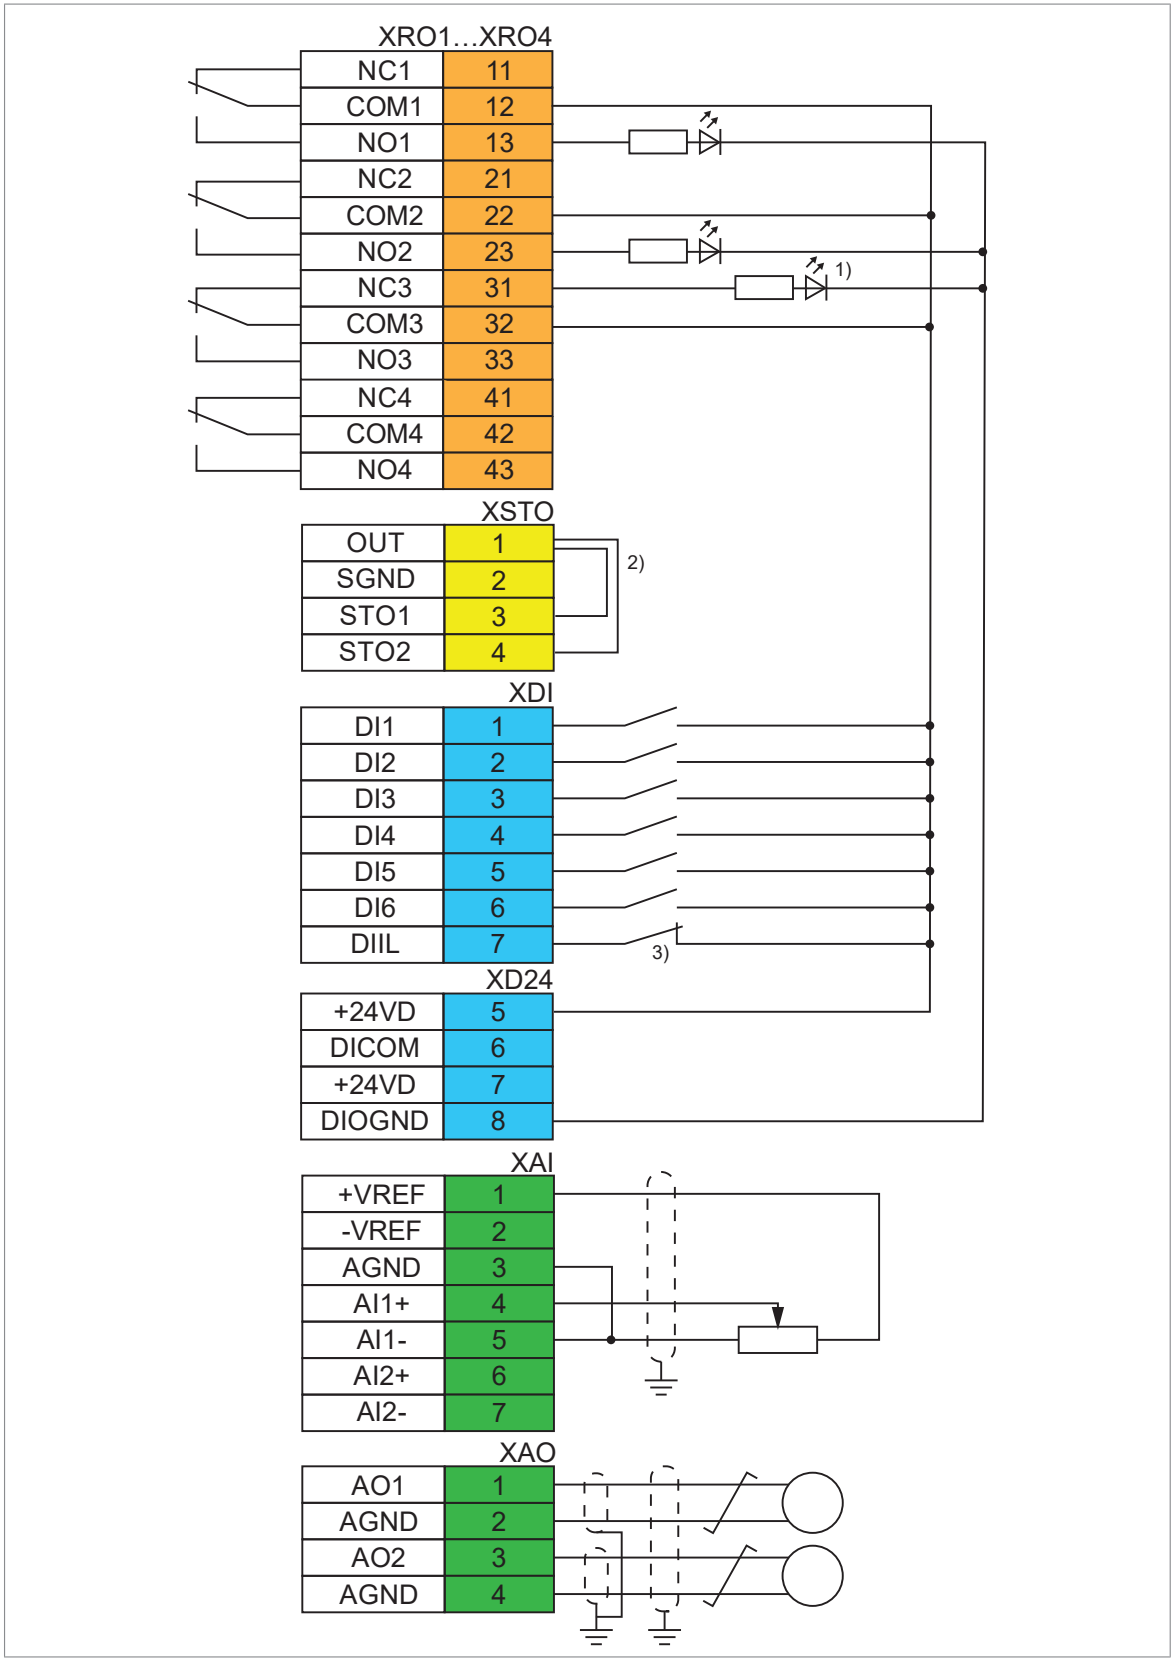

1) Fault
2) Connected at the factory. If necessary, you can connect a safety device (eg, a safety relay) to the XSTO terminal.
3) DIIL is connected to XD24:5 at the factory.

Additional information on the connections

Connecting motor temperature sensors to the drive

Refer to the electrical planning instructions.

Power supply for the control unit (XPOW)

Connect a power supply to the control unit through terminal block XPOW.

Refer to the control unit connector data for the current and voltage ratings of the power supply.

Connect an additional external power supply to the free +24 V and GND terminals of the XPOW terminal block if:

- the control unit must be kept operational during input power breaks, for example, because of continuous fieldbus communication
- immediate restart is necessary after a power break (that is, no control unit power-up delay is permitted).

Digital interlock (DIIL)

Digital interlock input (DIIL) terminal is originally intended for interlock signals that stop the drive/unit when necessary. In the ACS880 primary control program, DIIL terminal is the source for the run enable signal by default. The inverter unit or drive cannot start, or it stops when there is no DIIL signal. In other control programs (and units), the default use of the DIIL terminal varies. Refer to firmware manual for more information.

Note: This input is **not** SIL or PL classified.

Control panel connection (XPAN)

The XPAN connector can be used to connect an assistant control panel or FDPI-02 diagnostics and panel interface unit to the control unit. With FDPI-02, it is possible to connect one control panel to two or more control units in a chain topology, also known as a panel bus. For more information, refer to FDPI-02 diagnostics and panel interface user's manual (3AUA0000113618 [English]).

The XPAN TERM switch sets the termination for the panel bus. Must be set to ON if there is no panel bus, or if the control unit is the last one in a panel bus. On intermediate units in a panel bus, set termination to OFF (1).

The XD2D connector

The XD2D connector has an RS-485 connection that can be used for


- basic master/follower communication with one master drive/unit and multiple followers
- fieldbus control through the embedded fieldbus interface (EFB)
- drive-to-drive (D2D) communication implemented by application programming.

Refer to the firmware manual for the availability of these features and related parameter settings.

Terminate the bus on the units at the ends of the drive-to-drive link. Disable bus termination on the intermediate units.

Use a shielded twisted-pair cable for data, and another pair or a wire for signal ground (nominal impedance 100…165 ohm, for example Belden 9842). For the best immunity, use high quality cable. Keep the cable as short as possible. Avoid unnecessary loops and parallel runs near power cables such as motor cables.

The following diagram shows the wiring between control units.

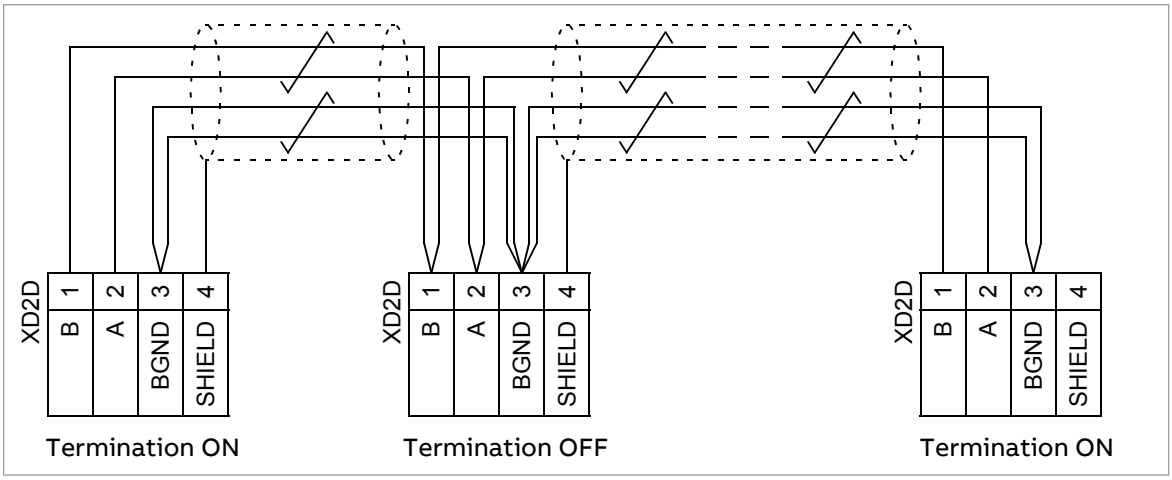

Safe torque off (XSTO, XSTO OUT)

Refer to chapter The Safe torque off function.

The XSTO input only acts as a true Safe torque off input on the inverter control unit. De-energizing the STO input terminals of other control units (supply, DC/DC converter, or brake unit) stops the unit but does not constitute a SIL/PL classified safety function.

Safety functions module connection (XFSO)

In drives or inverter units with a compatible control program, an optional FSO safety functions module can be connected to the XFSO connector. The control program in supply, brake, and DC/DC converter units does not support the FSO module.

Before you connect an FSO module to the XFSO connector, make sure that the control board revision is compatible with the FSO module. For more information, refer to the applicable FSO module user's manual.

Note: Inverter modules that have a sticker with the text “No FSO support” are not compatible with the FSO safety functions module.


MicroSDHC memory card slot

The control unit has an on-board data logger that collects real-time data from the power modules to help fault tracing and analysis. The data is stored onto the microSDHC memory card inserted into the UMU-01 memory unit and can be analyzed by ABB service personnel.

Connector data


The wire size accepted by all screw terminals (for both stranded and solid wire) is 0.5 … 2.5 mm^2 (22…12 AWG). Connector pitch is 5 mm.

Maximum tightening torque of the screw terminals is 0.45 N·m (4 lbf·in).

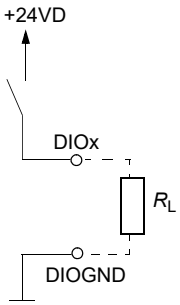Power supply (XPOW)	19…32 V DC, 2.9 A External power input. Two supplies can be connected to the control unit for redundancy.
Relay outputs XRO1…XRO4	250 V AC / 30 V DC, 2 A Protected by varistors
+24 V output (XD24:2 and XD24:4)	Total load capacity of these outputs is 4.8 W (200 mA / 24 V) minus the power taken by DIO1 and DIO2.
Digital inputs DI1…DI6 (XDI:1…XDI:6)	24 V logic levels: “0” < 5 V, “1” > 15 V R_{in}: 2.0 kohm Input type: NPN/PNP (DI1…DI5), PNP (DI6) Hardware filtering: 0.04 ms, digital filtering up to 8 ms I_{max}: 15 mA (DI1…DI5), 5 mA (DI6)
Start interlock input DIIL (XDI:7)	24 V logic levels: "0" < 5 V, "1" > 15 V R_{in}: 2.0 kohm Input type: NPN/PNP Hardware filtering: 0.04 ms, digital filtering up to 8 ms
Digital inputs/outputs DIO1 and DIO2 (XDIO:1 and XDIO:2) Input/output mode selection by parameters. DIO1 can be configured as a frequency input (0…100 kHz with hardware filtering of 4 microseconds) for 24 V level square wave signal (sinusoidal or other wave form cannot be used). In some control programs, DIO2 can be configured as a 24 V level square wave frequency output. Refer to the firmware manual, parameter group 11.	As inputs: 24 V logic levels: "0" < 5 V, "1" > 15 V. R_{in}: 2.0 kohm. Filtering: 1 ms. As outputs: Total output current from +24VD is limited to 200 mA 
Reference voltage for analog inputs +VREF and -VREF (XAI:1 and XAI:2)	10 V ±1% and -10 V ±1%, R_{load} 1…10 kohm Maximum output current: 10 mA
Analog inputs AI1 and AI2 (XAI:4 … XAI:7). Current/voltage input mode selection by parameters 12.15 AI1 unit selection and 12.25 AI2 unit selection	Current input: -20…20 mA, R_{in} = 100 ohm Voltage input: -10…10 V, R_{in} > 200 kohm Differential inputs, common mode range ±30 V Sampling interval per channel: 0.25 ms Hardware filtering: 0.25 ms Resolution: 11 bit + sign bit Inaccuracy: 1% of full scale range
Analog outputs AO1 and AO2 (XAO)	0…20 mA, R_{load} < 500 ohm Frequency range: 0…500 Hz Resolution: 11 bit + sign bit Inaccuracy: 2% of full scale range

XD2D connector	Physical layer: RS-485 Transmission rate: 8 Mbit/s Cable type: Shielded twisted-pair cable with a twisted pair for data and a wire or another pair for signal ground (nominal impedance 100 … 165 ohm, for example Belden 9842) Maximum length of link: 50 m (164 ft) Termination by switch
RS-485 connection (X485)	Physical layer: RS-485 Cable type: Shielded twisted-pair cable with a twisted pair for data and a wire or another pair for signal ground (nominal impedance 100 … 165 ohm, for example Belden 9842) Maximum length of link: 50 m (164 ft) Termination and bias by switch (X485 TERM and X485 BIAS)
CAN connection (XCAN)	Termination by switch (XCAN TERM) This connection is not supported by the firmware.
Safe torque off connection (XSTO)	Input voltage range: -3…30 V DC Logic levels: "0" < 5 V, "1" > 17 V. **Note:** For the unit to start, both connections must be “1”. This applies to all control units (including drive, inverter, supply, brake, DC/DC converter etc. control units), but SIL/PL classified Safe torque off functionality is only achieved through the XSTO connector of the drive/inverter control unit. Current consumption (continuous) per STO channel: • Frames R1i…R4i: 56 mA • Frame R5i: 21 mA • Frames R6i…R7i: 41.5 mA • Frames R6i…R7i with option +V992: 10 mA • Frame R8i: 10 mA. The number of parallel inverter modules does not have an effect on the current consumption. EMC (immunity) according to IEC 61326-3-1 and IEC 61800-5-2 See also chapter The Safe torque off function (page 379).
Safe torque off output (XSTO OUT)	To STO connector of inverter module.
Control panel connection (XPAN)	Connector: RJ-45 Cable length < 50 m (164 ft) Termination by switch (XPAN TERM)
Fieldbus Ethernet connection with internal switch (XETH1 and XETH2)	Connector: RJ-45 Cable type: minimum requirement CAT5e
microSDHC memory card slot (microSDHC CAR)	Memory card type: microSDHC (minimum of class 4 speed grade) Supported memory size: 4 GB…32 GB
Battery	Real-time clock battery type: BR2032
The terminals of the control unit fulfill the Protective Extra Low Voltage (PELV) requirements. The PELV requirements of a relay output are not fulfilled if a voltage higher than 48 V is connected to the relay output.	

Ground isolation diagram

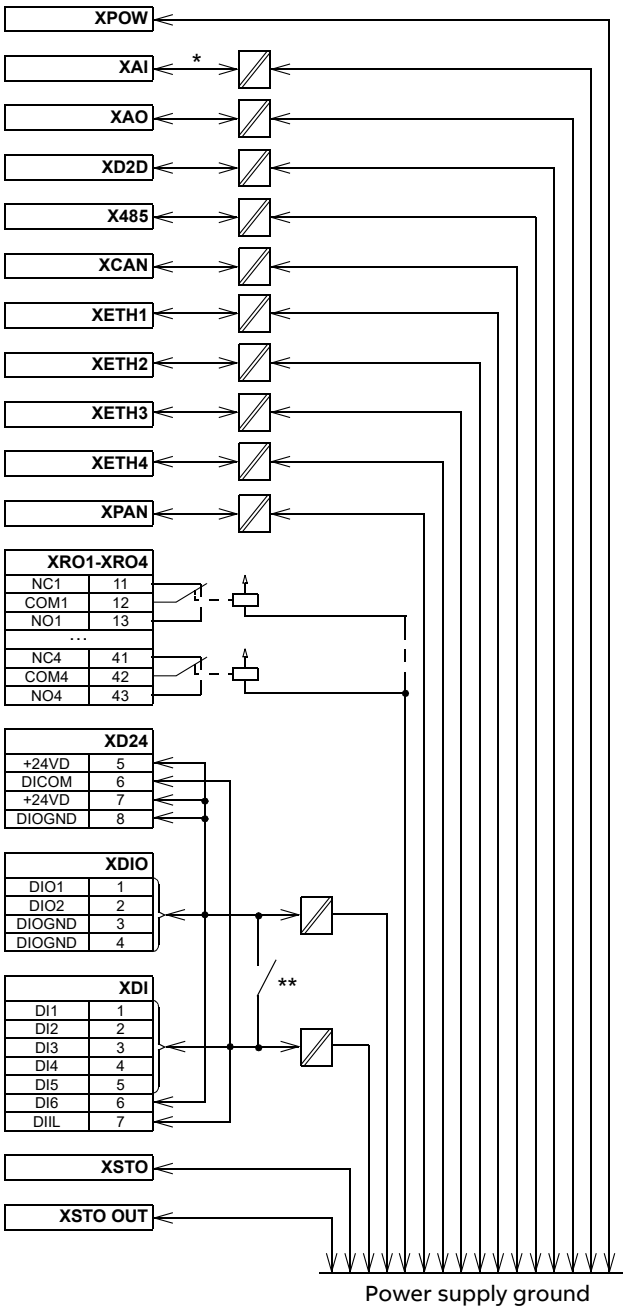

*The maximum common mode voltage between each AI input and AGND is ±30 V.

****Ground selector (DICOM=DIOGND) settings**

DICOM=DIOGND: ON All digital inputs share a common ground (DICOM connected to DIOGND). This is the default setting.
DICOM=DIOGND: OFF Ground of digital inputs DI1…DI5 and DIIL (DICOM) is isolated from DIO signal ground (DIOGND). Isolation voltage 50 V.

Other information

Refer to UCU-22, UCU-23 and UCU-24 control units hardware manual (3AXD50000817726 [English]).

7

Control unit (BCU, ZCU)

Contents of this chapter

This chapter


- gives information on the connections of the control unit, and
- has the specifications of the inputs and outputs of the control unit.

General

The control unit controls the inverter unit. The control unit is connected to the inverter module(s) through fiber optic cables.


The type of control unit depends on the inverter unit type and ordered options.

ZCU-12 layout

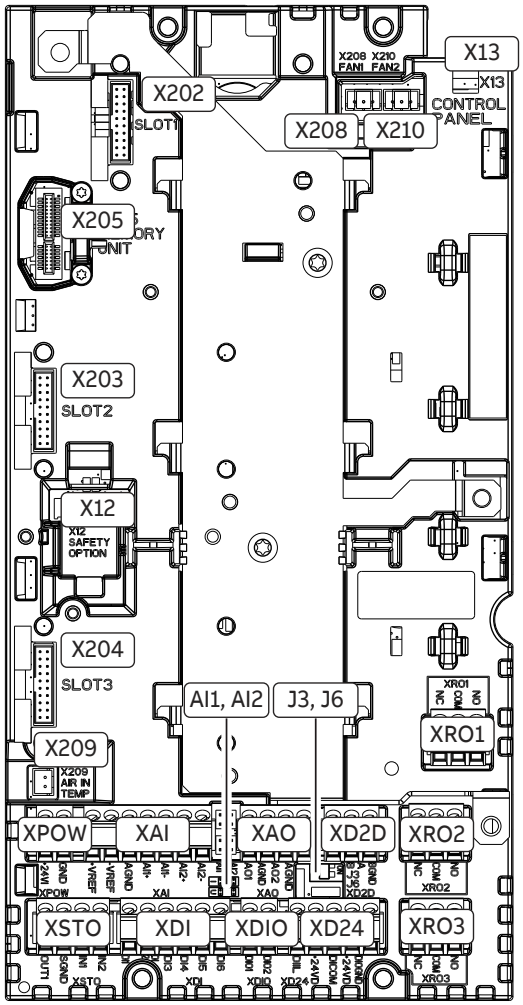



	Description
XAI	Analog inputs
XAO	Analog outputs
XDI	Digital inputs
XDIO	Digital input/outputs
XD24	Digital input interlock (DIIL) and +24 V output
XD2D	Drive-to-drive link
XPOW	External power input
XRO1	Relay output RO1
XRO2	Relay output RO2
XRO3	Relay output RO3
XSTO	Safe torque off connection
X12	Connection for FSO safety functions module
X13	Control panel connection
X202	Option slot 1
X203	Option slot 2
X204	Option slot 3
X205	Memory unit connection (memory unit inserted in the picture)
X208	Cooling fan 1 connection
X209	Connection for ambient temperature sensor (at air inlet). Connected at the factory.
X210	Cooling fan 2 connection
AI1, AI2	Current/Voltage selection jumpers (J1, J2) for analog inputs
J3	Drive-to-drive link termination switch (J3)
J6	Common digital input ground selection switch (J6)






ZCU-14 layout

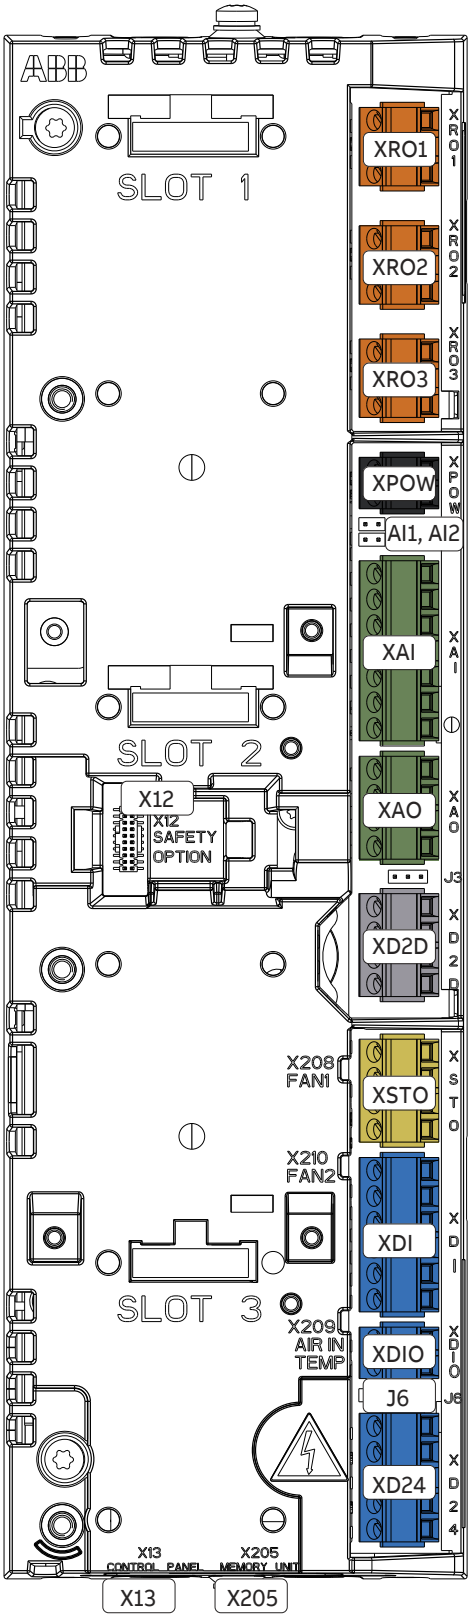

	Description
XPOW	External power input
XAI	Analog inputs
XAO	Analog outputs
XD2D	Drive-to-drive link
XRO1	Relay output RO1
XRO2	Relay output RO2
XRO3	Relay output RO3
XD24	Digital input interlock (DIIL) and +24 V output
XDIO	Digital input/outputs
XDI	Digital inputs
XSTO	Safe torque off connection (inverter unit only). **Note:** This connection only acts as a true Safe torque off input when the ZCU is controlling an inverter unit. When the ZCU is controlling a supply unit, de-energizing the inputs will stop the unit but will not constitute a true safety function.
X12	Connection for FSO safety functions module (inverter unit only).
X13	Control panel connection
X202	Option slot 1
X203	Option slot 2
X204	Option slot 3
X205	Memory unit connection (memory unit inserted in the drawing)
AI1, AI2	Voltage/Current selection jumpers (AI1, AI2) for analog inputs
J3	Drive-to-drive link termination switch (J3)
J6	Common digital input ground selection jumper (J6).

Default I/O diagram of the inverter control unit (ZCU)

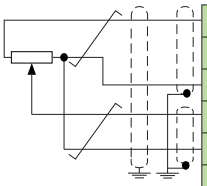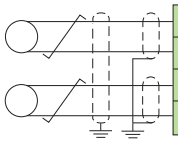
Connection	Term	Description
XPOW External power input		
1 +24VI 2 GND	+24VI GND	24 V DC, 2 A min. (without optional modules)
XAI Reference voltage and analog inputs		
 1 +VREF 2 -VREF 3 AGND 4 AI1+ 5 AI1- 6 AI2+ 7 AI2- AI2:I AI1:I AI2:U AI1:U	+VREF	10 V DC, R_L 1…10 kohm
	-VREF	-10 V DC, R_L 1…10 kohm
	AGND	Ground
	AI1+ AI1-	**Speed reference** 0(2)…10 V, R_{in} > 200 kohm [1)]
	AI2+ AI2-	By default not in use. 0(4)…20 mA, R_{in} = 100 ohm [1)]
	AI1 (ZCU-12) J1 (ZCU-14)	Current (I) / voltage (U) selection jumper for AI1
	AI2 (ZCU-12) J2 (ZCU-14)	Current (I) / voltage (U) selection jumper for AI2
XAO Analog outputs		
 1 AO1 2 AGND 3 AO2 4 AGND	AO1 AGND	**Motor speed rpm** 0…20 mA, R_L < 500 ohm
	AO2 AGND	**Motor current** 0…20 mA, R_L < 500 ohm
XD2D Drive-to-drive link		
ZCU-12: 1 B 2 A 3 BGND ZCU-14: 1 B 2 A 3 BGND 4 Shield	B A BGND Shield (ZCU-14 only)	Master/follower, drive-to-drive or embedded fieldbus connection
	J3	Drive-to-drive link termination

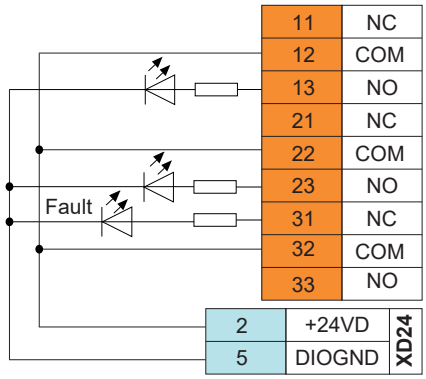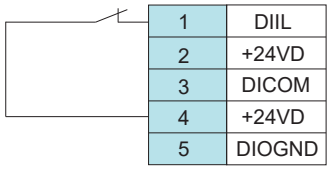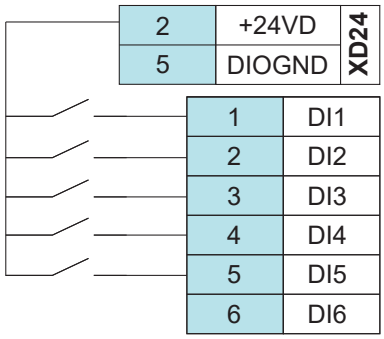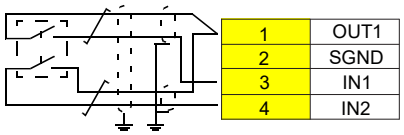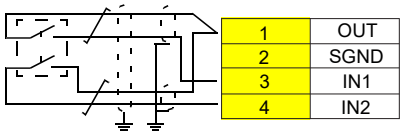Connection	Term	Description
XRO1, XRO2, XRO3 Relay outputs		
	NC COM NO	**Ready run** 250 V AC / 30 V DC 2 A
	NC COM NO	**Running** 250 V AC / 30 V DC 2 A
	NC COM NO	**Fault (-1)** 250 V AC / 30 V DC 2 A
XD24 Auxiliary voltage output, digital interlock		
	DIIL	Run enable
	+24VD	+24 V DC 200 mA [2]
	DICOM	Digital input ground
	+24VD	+24 V DC 200 mA [2]
	DIOGND	Digital input/output ground
XDIO Digital input/outputs		
	DIO1	Output: Ready run
	DIO2	Output: Running
	J6	Ground selection [3]
XDI Digital inputs		
	DI1	Stop (0) / Start (1)
	DI2	Forward (0) / Reverse (1)
	DI3	Reset
	DI4	Acc/Dec time select [4]
	DI5	Constant speed 1 (1 = On) [5]
	DI6	By default, not in use.
 (ZCU-12)  (ZCU-14)	OUT1 (ZCU-12) OUT (ZCU-14)	Safe torque off circuits must be closed for the drive to start. [6]
	SGND	
	IN1	
	IN2	
X12	Safety options connection	
X13	Control panel connection	


Connection	Term	Description
X205	Memory unit connection	

1) Current [0(4)…20 mA, R_{in} = 100 ohm] or voltage [0(2)…10 V, R_{in} > 200 kohm] input selected by jumper. Change of setting requires reboot of control unit.
2) Total load capacity of these outputs is 4.8 W (200 mA at 24 V) minus the power taken by DIO1 and DIO2.
3) Determines whether DICOM is separated from DIOGND (ie. common reference for digital inputs floats; in practice, selects whether the digital inputs are used in current sinking or sourcing mode). See also ZCU ground isolation diagram (page 229). DICOM=DIOGND ON: DICOM connected to DIOGND. OFF: DICOM and DIOGND separate.
4) 0 = Acceleration/deceleration ramps defined by parameters *23.12*/*23.13* in use. 1 = Acceleration/deceleration ramps defined by parameters *23.14*/*23.15* in use.
5) Constant speed 1 is defined by parameter *22.26*.
6) See chapter The Safe torque off function (page 379).

Layout (BCU)

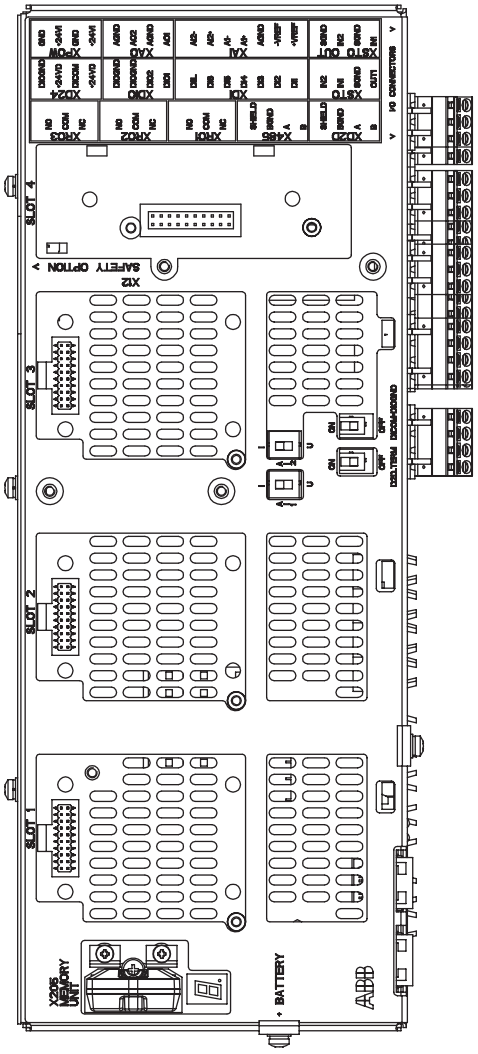

	Description
I/O	I/O terminals (see following diagram)
SLOT 1	I/O extension, encoder interface or fieldbus adapter module connection. (This is the sole location for an FDPI-02 diagnostics and panel interface.)
SLOT 2	I/O extension, encoder interface or fieldbus adapter module connection
SLOT 3	I/O extension, encoder interface, field-bus adapter or FSO safety functions module connection
SLOT 4	RDCO DDCS communication option module connection
X205	Memory unit connection
BATTERY	Holder for real-time clock battery (BR2032)
AI1	Mode selector for analog input AI1 (I = current, U = voltage)
AI2	Mode selector for analog input AI2 (I = current, U = voltage)
D2D TERM	Termination switch for drive-to-drive link (D2D)
DICOM= DIOGND	Ground selection. Determines whether DICOM is separated from DIOGND (ie. the common reference for the digital inputs floats). See the ground isolation diagram.
7-segment display Multicharacter indications are displayed as repeated sequences of characters	
o	(“U” is indicated briefly before “o”.) Control program running
U	Control program startup in progress
E	(Flashing) Firmware cannot be started. Memory unit missing or corrupted
F	Firmware download from PC to control unit in progress
2	At power-up, the display may show short indications of eg. “1”, “2”, “b” or “U”. These are normal indications immediately after power-up. If the display ends up showing any other value than those described, it indicates a hardware failure.

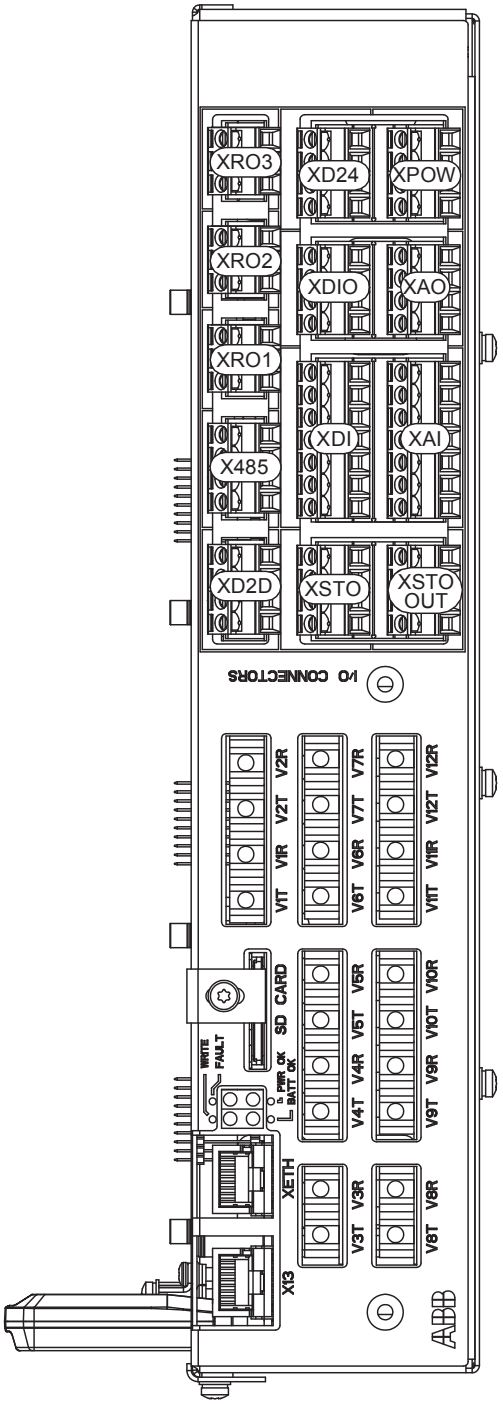

	Description
XAI	Analog inputs
XAO	Analog outputs
XDI	Digital inputs, Digital input interlock (DIIL)
XDIO	Digital input/outputs
XD2D	Drive-to-drive link
XD24	+24 V output (for digital inputs)
XETH	Ethernet port – Not in use
XPOW	External power input
XRO1	Relay output RO1
XRO2	Relay output RO2
XRO3	Relay output RO3
XSTO	Safe torque off connection (input signals)
XSTO OUT	Safe torque off connection (to inverter modules)
X12	(On the opposite side) Optional connection for FSO safety functions module (supported only in inverter units)
X13	Control panel, PC connection through the control panel
X485	Not in use by default
V1T/V1R, V2T/V2R	Fiber optic connection to modules 1 and 2 (VxT = transmitter, VxR = receiver)
V3T/V3R … V7T/V7R	Fiber optic connection to modules 3…7 (BCU-12 and BCU-22 only) (VxT = transmitter, VxR = receiver)
V8T/V8R … V12T/V12R	Fiber optic connection to modules 8…12 (BCU-22 only) (VxT = transmitter, VxR = receiver)
SD CARD	Data logger memory card for inverter module communication
BATT OK	Real-time clock battery voltage is higher than 2.8 V. If the LED is off when the control unit is powered, replace the battery.
FAULT	The control program has generated a fault. See the firmware manual of the supply/inverter unit.
PWR OK	Internal voltage is sufficient
WRITE	Writing to memory card in progress. Do not remove the memory card.

Default I/O diagram of the inverter control unit (BCU)

This diagram shows the default control connections of the inverter control unit. The ACS880 primary control program is in use.

Terminal			Description	
XD2D			Drive-to-drive link	
1 2 3 4	1	B	Not in use by default	
	2	A		
	3	BGND		
	4	Shield		
ON OFF	D2D.TERM		Drive-to-drive link termination switch	
X485			RS485 connection	
5 6 7 8	5	B	Not in use by default	
	6	A		
	7	BGND		
	8	Shield		
XRO1, XRO2, XRO3			Relay outputs	
11 12 13 21 22 23 31 32 33	11	NC	Norm. closed	XRO1: Ready (Energized = Ready) 250 V AC / 30 V DC, 2 A
	12	COM	Common	
	13	NO	Norm. open	
	21	NC	Norm. closed	XRO2: Running (Energized = Running) 250 V AC / 30 V DC, 2 A
	22	COM	Common	
	23	NO	Norm. open	
	31	NC	Norm. closed	XRO3: Fault (-1) (Energized = No fault) 250 V AC / 30 V DC, 2 A
	32	COM	Common	
	33	NO	Norm. open	
XSTO			Safe torque off input connection	
1 2 3 4	1	OUT	XSTO: IN1 and IN2 are connected to OUT at the factory. To enable start and operation, IN1 and IN2 must be connected to OUT. Refer to chapter The Safe torque off function (page 379).	
	2	SGND		
	3	IN1		
	4	IN2		
XSTO OUT			Safe torque off output connection (to inverter modules)	
5 6 7 8	5	IN1	XSTO OUT: Safe torque off output to inverter modules	
	6	SGND		
	7	IN2		
	8	SGND		

Terminal			Description
XDI			Digital inputs
1 2 3 4 5 6 7	1	DI1	Stop (0) / Start (1)
	2	DI2	Forward (0) / Reverse (1)
	3	DI3	Reset
	4	DI4	Acceleration & deceleration select [1]
	5	DI5	Constant speed 1 select (1 = on) [2]
	6	DI6	Not in use by default.
	7	DIIL	Run enable. DIIL is connected to XD24:5 at the factory. [3]
XDIO			Digital input/outputs
1 2 3 4	1	DIO1	Output: Ready
	2	DIO2	Output: Running
	3	DIOGND	Digital input/output ground
	4	DIOGND	Digital input/output ground
XD24			Auxiliary voltage output
5 6 7 8	5	+24VD	+24 V DC 200 mA [4]
	6	DICOM	Digital input ground
	7	+24VD	+24 V DC 200 mA [4]
	8	DIOGND	Digital input/output ground
ON OFF	DICOM=DIOGND		Ground selection switch. Determines whether DICOM is separated from DIOGND (ie, common reference for digital inputs floats). ON: DICOM connected to DIOGND. OFF: DICOM and DIOGND separate.
XAI			Analog inputs, reference voltage output
1 2 3 4 5 6 7	1	+VREF	10 V DC, R_L 1 … 10 kohm
	2	-VREF	-10 V DC, R_L 1 … 10 kohm
	3	AGND	Ground
	4	AI1+	Speed reference. 0(2)…10 V, R_{in} > 200 kohm [5]
	5	AI1-	
	6	AI2+	Not in use by default. 0(4)…20 mA, R_{in} = 100 ohm [6]
	7	AI2-	
– ⊃	AI1		AI1 current/voltage selection switch
– ⊃	AI2		AI2 current/voltage selection switch
XAO			Analog outputs
1 2 3 4	1	AO1	Motor speed rpm 0 … 20 mA, R_L < 500 ohm
	2	AGND	
	3	AO2	Motor current 0 … 20 mA, R_L < 500 ohm
	4	AGND	
XPOW			External power input
1 2 3 4	1	+24VI	24 VDC (±10%), 2 A External power input Two supplies can be connected to the control unit for redundancy.
	2	GND	
	3	+24VI	
	4	GND	

Terminal	Description
X12	Safety functions module connection. Not in use by default.
X13	Control panel connection
X205	Memory unit connection

1) 0 = Acceleration/deceleration ramps defined by parameters 23.12/23.13 in use.
1 = Acceleration/deceleration ramps defined by parameters 23.14/23.15 in use.

2) Constant speed 1 is defined by parameter 22.26.


3) The DIIL input is configured to stop the unit when the input signal is removed. This input does not have a SIL or PL classification.

4) Total load capacity of these outputs is 4.8 W (200 mA at 24 V) minus the power taken by DIO1 and DIO2.

5) Current [0(4)…20 mA, R_{in} = 100 ohm] or voltage [0(2)…10 V, R_{in} > 200 kohm] input selected by switch AI1. Change of setting requires reboot of control unit.

6) Current [0(4)…20 mA, R_{in} = 100 ohm] or voltage [0(2)…10 V, R_{in} > 200 kohm] input selected by switch AI2. Change of setting requires reboot of control unit.

This is an I/O connection example for the inverter control unit.

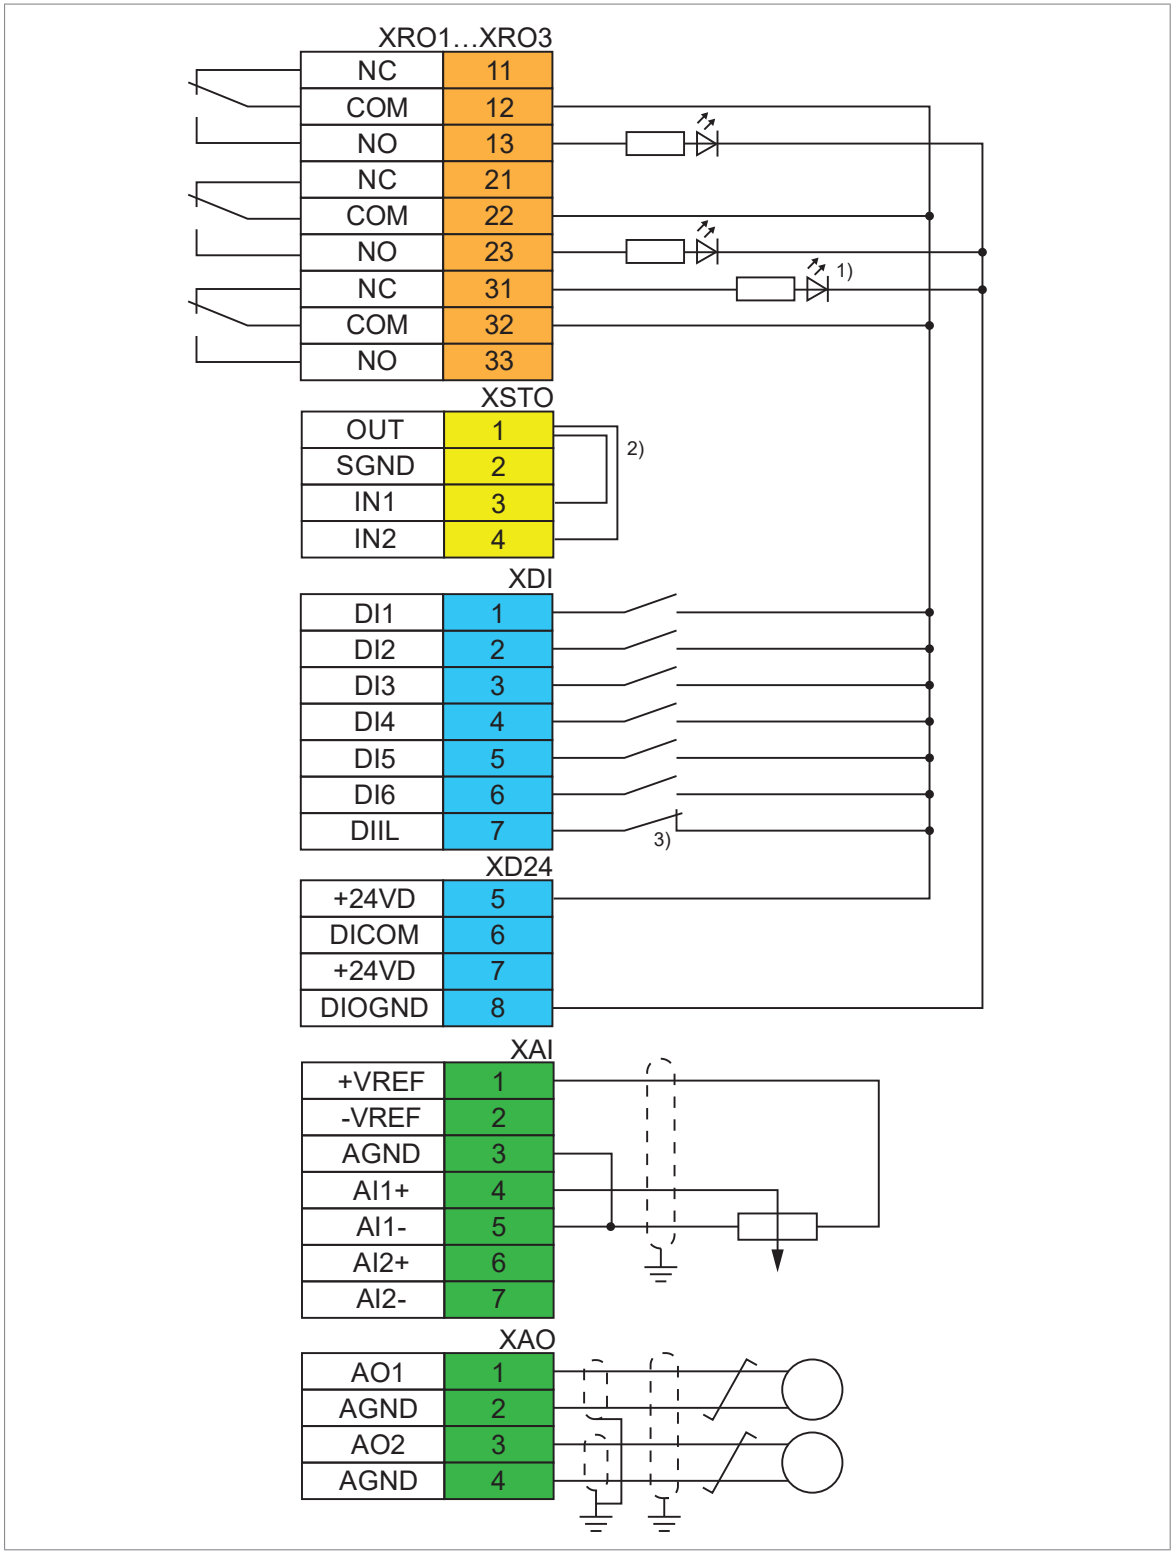

1) Fault

2) Connected at the factory. If necessary, you can connect a safety device (for example, a safety relay) to the XSTO terminal.

3) DIIL is connected to XD24:5 at the factory.

Additional information on the connections

Connecting motor temperature sensors to the drive

Refer to the electrical planning instructions.

Power supply for the control unit (XPOW)

Connect a power supply to the control unit through terminal block XPOW.

Refer to the control unit connector data for the current and voltage ratings of the power supply.

Connect an additional external power supply to the free +24 V and GND terminals of the XPOW terminal block if:

- the control unit must be kept operational during input power breaks, for example, because of continuous fieldbus communication
- immediate restart is necessary after a power break (that is, no control unit power-up delay is permitted).

Digital interlock (DIIL)

Digital interlock input (DIIL) terminal is originally intended for interlock signals that stop the drive/unit when necessary. In the ACS880 primary control program, DIIL terminal is the source for the run enable signal by default. The inverter unit or drive cannot start, or it stops when there is no DIIL signal. In other control programs (and units), the default use of the DIIL terminal varies. Refer to firmware manual for more information.

Note: This input is **not** SIL or PL classified.

The XD2D connector

The XD2D connector provides an RS-485 connection that can be used for


- basic master/follower communication with one master drive and multiple followers,
- fieldbus control through the embedded fieldbus interface (EFB), or
- drive-to-drive (D2D) communication implemented by application programming.

See the firmware manual for the related parameter settings.

Terminate the bus on the units at the ends of the drive-to-drive link. Disable bus termination on the intermediate units.


Use a shielded twisted-pair cable for data, and another pair or a wire for signal ground (nominal impedance 100…165 ohm, for example Belden 9842). For the best immunity, ABB recommends high quality cable. Keep the cable as short as possible. Avoid unnecessary loops and parallel runs near power cables such as motor cables.

The diagram that follows shows the wiring of the drive-to-drive link. The diagram is applicable to ZCU-12 control units.

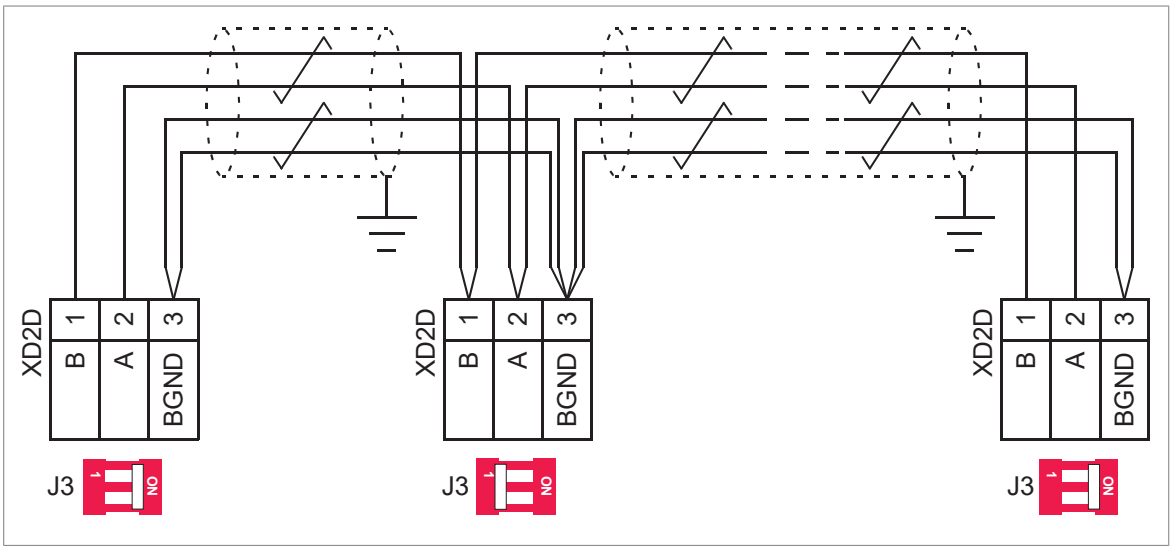

The diagram that follows shows the wiring of the drive-to-drive link. The diagram is applicable to these control units:

- BCU-02/12/22
- ZCU-14

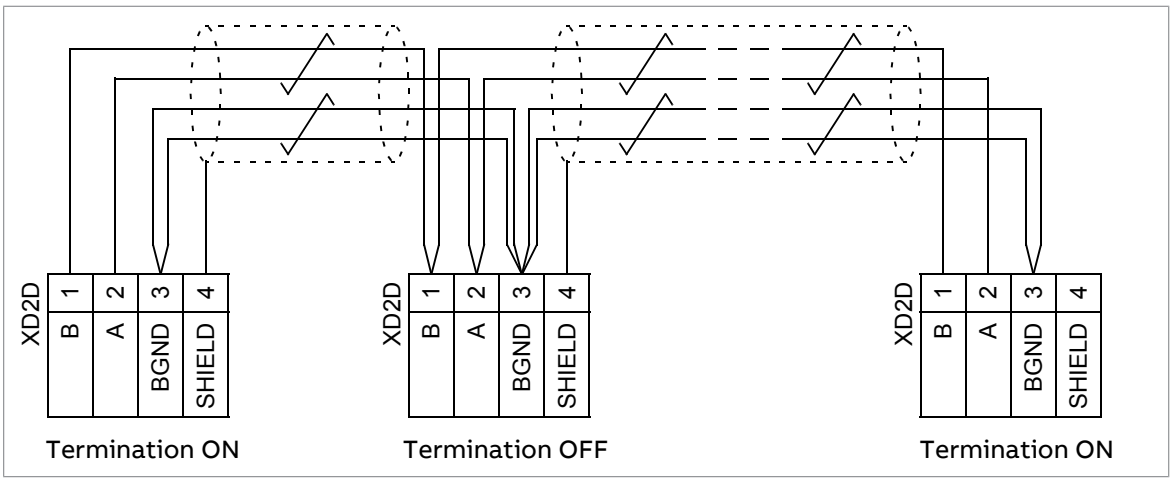

Safe torque off (XSTO, XSTO OUT)

Refer to chapter The Safe torque off function.

The XSTO input only acts as a true Safe torque off input on the inverter control unit. De-energizing the STO input terminals of other control units (supply, DC/DC converter, or brake unit) stops the unit but does not constitute a SIL/PL classified safety function.

Safety functions module connection (X12)

In drives or inverter units with a compatible control program, an optional FSO safety functions module can be connected to the X12 connector. The control program in supply, brake, and DC/DC converter units does not support the FSO safety functions module.

For more information on the FSO safety functions module, refer to the applicable FSO module user's manual.

Note: Inverter modules and control units that have a sticker with the text “No FSO support” are not compatible with the FSO safety functions module.

SDHC memory card slot


The control unit has an on-board data logger that collects real-time data from the power modules to help fault tracing and analysis. The data is stored onto the SDHC memory card inserted into the SD CARD slot and can be analyzed by ABB service personnel.

Connector data

The wire size accepted by all screw terminals (for both stranded and solid wire) is 0.5 … 2.5 mm^2 (22…12 AWG). Connector pitch is 5 mm.


The maximum tightening torque for screw terminals is:

- 0.45 N·m (4 lbf·in) for BCU control units
- 0.5 N·m (5 lbf·in) for ZCU control units.

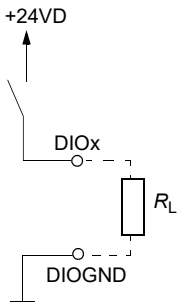Power supply (XPOW)	24 V DC (±10%), 2 A (BCU) 24 V DC (±10%), 2 A (ZCU) External power input. Two supplies can be connected to the BCU control unit for redundancy.
Relay outputs RO1…RO3 (XRO1…XRO3)	250 V AC / 30 V DC, 2 A Protected by varistors
+24 V output (XD24:5 and XD24:7)	Total load capacity of these outputs is 4.8 W (200 mA / 24 V) minus the power taken by DIO1 and DIO2.
Digital inputs DI1…DI6 (XDI:1…XDI:6)	24 V logic levels: “0” < 5 V, “1” > 15 V R_{in}: 2.0 kohm (DI1…DI5) Input type: NPN/PNP (DI1…DI5), PNP (DI6) Hardware filtering: 0.04 ms, digital filtering up to 8 ms I_{max}: 15 mA (DI1…DI5), 5 mA (DI6)
Start interlock input DIIL (XD24:1 [ZCU], XDI:7 [BCU])	24 V logic levels: "0" < 5 V, "1" > 15 V R_{in}: 2.0 kohm Input type: NPN/PNP Hardware filtering: 0.04 ms, digital filtering up to 8 ms
Digital inputs/outputs DIO1 and DIO2 (XDIO:1 and XDIO:2) Input/output mode selection by parameters. DIO1 can be configured as a frequency input (0…16 kHz with hardware filtering of 4 microseconds) for 24 V level square wave signal (sinusoidal or other wave form cannot be used). In some control programs, DIO2 can be configured as a 24 V level square wave frequency output. Refer to the firmware manual, parameter group 11.	As inputs: 24 V logic levels: "0" < 5 V, "1" > 15 V. R_{in}: 2.0 kohm. Filtering: 1 ms. As outputs: Total output current from +24VD is limited to 200 mA 
Reference voltage for analog inputs +VREF and -VREF (XAI:1 and XAI:2)	10 V ±1% and -10 V ±1%, R_{load} 1…10 kohm Maximum output current: 10 mA
Analog inputs AI1 and AI2 (XAI:4 … XAI:7). Current/voltage input mode selection by jumpers (ZCU) or switches (BCU)	Current input: -20…20 mA, R_{in} = 100 ohm Voltage input: -10…10 V, R_{in} > 200 kohm Differential inputs, common mode range ±30 V Sampling interval per channel: 0.25 ms Hardware filtering: 0.25 ms Resolution: 11 bit + sign bit Inaccuracy: 1% of full scale range

Analog outputs AO1 and AO2 (XAO)	0…20 mA, R_{load} < 500 ohm Frequency range: 0…300 Hz (ZCU), 0…500 Hz (BCU) Resolution: 11 bit + sign bit Inaccuracy: 2% of full scale range
XD2D connector	Physical layer: RS-485 Transmission rate: 8 Mbit/s Cable type: Shielded twisted-pair cable with a twisted pair for data and a wire or another pair for signal ground (nominal impedance 100 … 165 ohm, for example Belden 9842) Maximum length of link: 50 m (164 ft) Termination by jumper (ZCU) or switch (BCU)
RS-485 connection (X485 [BCU])	Physical layer: RS-485 Cable type: Shielded twisted-pair cable with a twisted pair for data and a wire or another pair for signal ground (nominal impedance 100 … 165 ohm, for example Belden 9842) Maximum length of link: 50 m (164 ft)
Safe torque off connection (XSTO)	Input voltage range: -3…30 V DC Logic levels: "0" < 5 V, "1" > 17 V. **Note:** Both circuits must be closed to enable start and operation (IN1 and IN2 must be connected to OUT). This applies to all control units (including drive, inverter, supply, brake, DC/DC converter etc. control units), but SIL/PL classified Safe torque off functionality is only achieved through the XSTO connector of the drive/inverter control unit. Current consumption (continuous) per STO channel: • Frames R1i…R4i: 56 mA • Frame R5i: 21 mA • Frames R6i…R7i: 41.5 mA • Frames R6i…R7i with option +V992: 25 mA • Frame R8i with BCU control unit: 66 mA per parallel inverter module EMC (immunity) according to IEC 61326-3-1 and IEC 61800-5-2 See also chapter The Safe torque off function (page 379).
Safe torque off output (XSTO OUT) (BCU control units only)	To STO connector of inverter module.
Control panel connection (X13)	Connector: RJ-45 Cable length < 100 m (328 ft)
Ethernet connection (XETH [BCU])	Connector: RJ-45 This connection is not supported by the firmware
SDHC memory card slot (SD CARD [BCU])	Memory card type: SDHC Maximum memory size: 4 GB
Battery	Real-time clock battery type: BR2032
The terminals of the control unit fulfill the Protective Extra Low Voltage (PELV) requirements. The PELV requirements of a relay output are not fulfilled if a voltage higher than 48 V is connected to the relay output.	

BCU ground isolation diagram

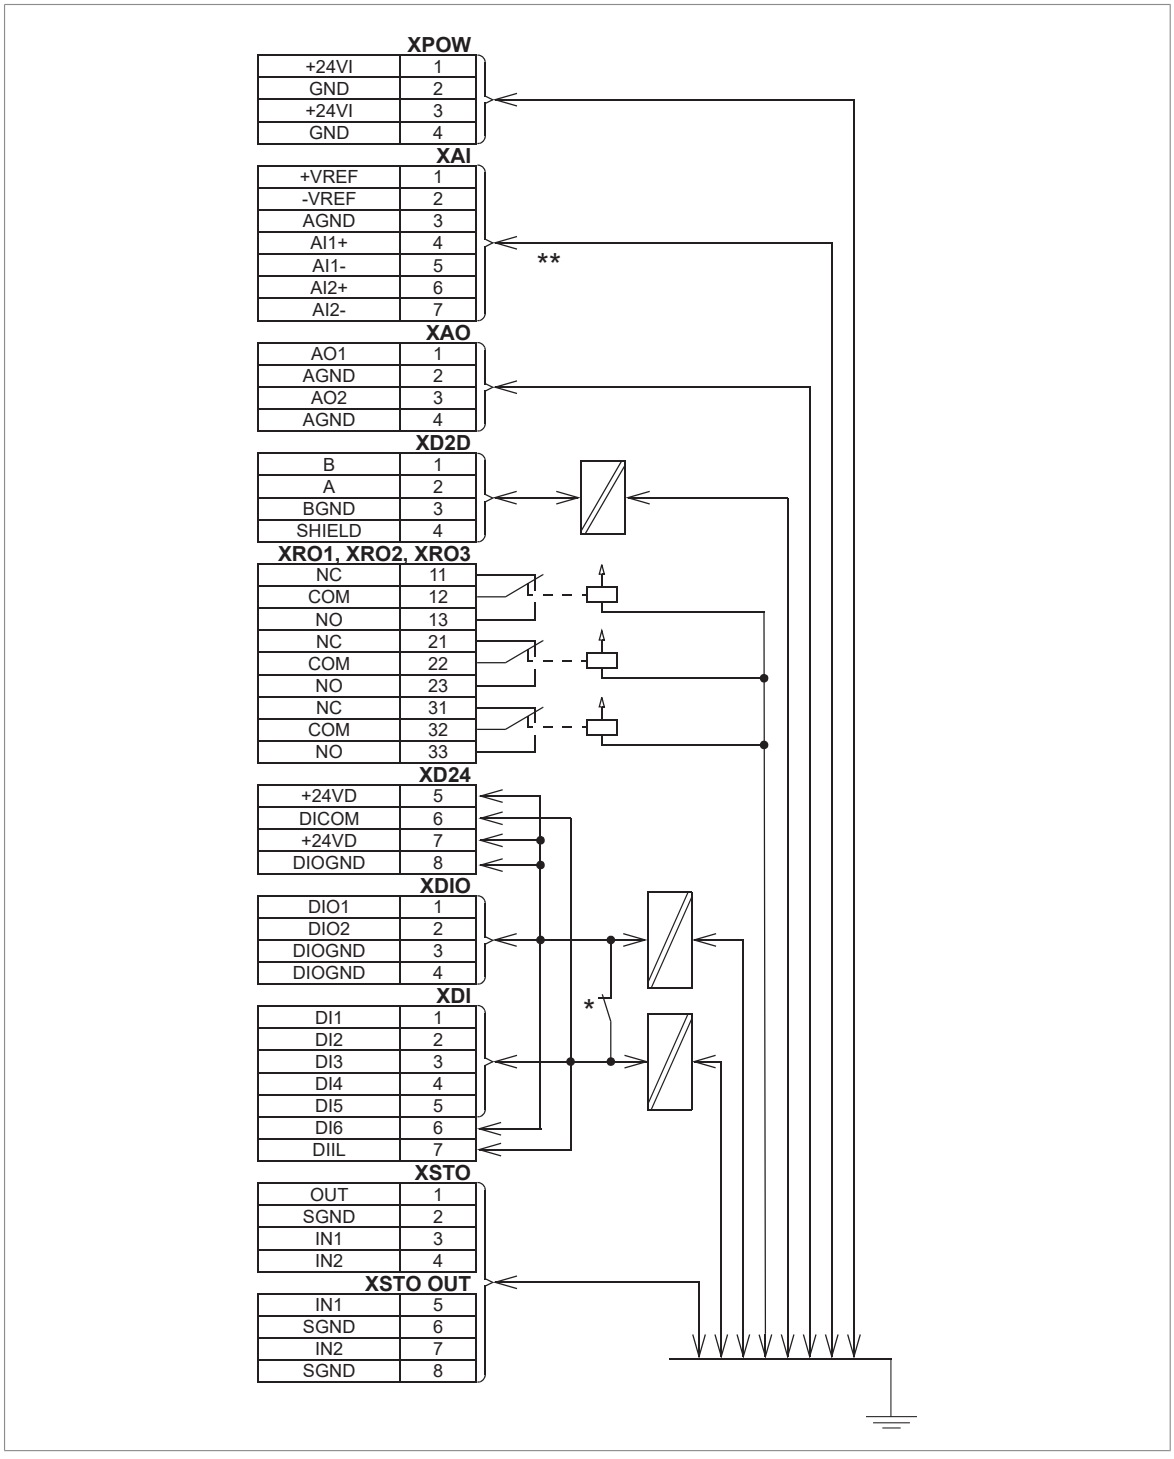


*Ground selector (DICOM=DIOGND) settings

DICOM=DIOGND: ON All digital inputs share a common ground (DICOM connected to DIOGND). This is the default setting.
DICOM=DIOGND: OFF Ground of digital inputs DI1…DI5 and DIIL (DICOM) is isolated from DIO signal ground (DIOGND). Isolation voltage 50 V.

**The maximum common mode voltage between each AI input and AGND is +30 V

ZCU ground isolation diagram

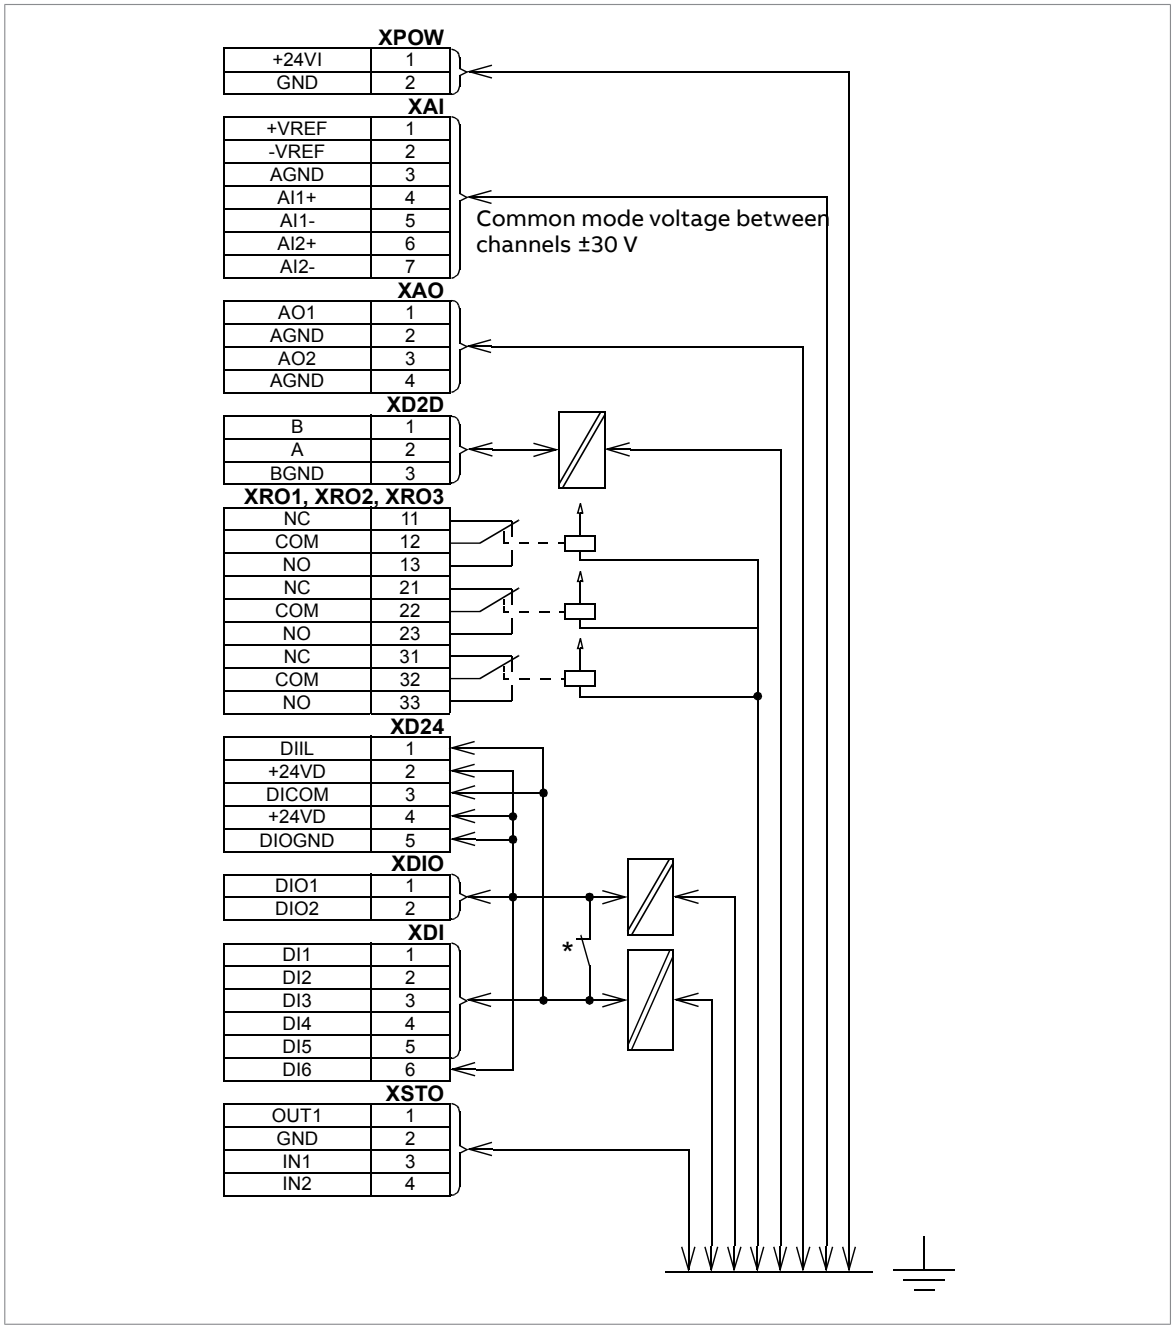

* Ground selector (J6) settings

(ZCU-12)

• (ZCU-14)

All digital inputs share a common ground (DICOM connected to DIOGND). This is the default setting.

(ZCU-12)

• (ZCU-14)

Ground of digital inputs DI1…DI5 and DIIL (DICOM) is isolated from DIO signal ground (DIOGND). Isolation voltage 50 V.

Other information

Refer to BCU-02, BCU-12 and BCU-22 control units hardware manual (3AUA0000113605 [English]).

8

Installation checklist

Contents of this chapter

This chapter contains a checklist for the mechanical and electrical installation of the drive.

Checklist

Examine the mechanical and electrical installation of the drive before start-up. Go through the checklist together with another person.



WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.



WARNING!
Do the steps in section Electrical safety precautions (page 172) before you start the work.

Make sure that ...	☑
The ambient operating conditions meet the drive ambient conditions specification and enclosure rating (IP code).	☐
The supply voltage matches the nominal input voltage of the drive. Refer the type designation label.	☐
The insulation resistance of the input power cable, motor cable and motor is measured according to local regulations and the manuals of the drive.	☐
The drive cabinet is attached to the floor, and if necessary due to vibration etc, also by its top to the wall or roof.	☐
The drive module is fastened properly to the enclosure.	☐
The cooling air can flow freely in and out of the drive. Air recirculation inside the cabinet is not possible (air baffle plates are installed, or there is another air guiding solution).	☐
If the drive is connected to a network other than a symmetrically grounded TN-S system: You have done all the required modifications (for example, you may need to disconnect the EMC filter or ground-to-phase varistor) See the electrical installation instructions in the supply unit manual.	☐
The enclosures of the equipment in the cabinet have proper galvanic connection to the cabinet protective earth (ground) busbar; The connection surfaces at the fastening points are bare (unpainted) and the connections are tight, or separate grounding conductors have been installed.	☐
The main circuit connections inside the drive cabinet correspond to the circuit diagrams.	☐
The control unit has been connected. See the circuit diagrams.	☐
Appropriate AC fuses and main disconnecting device are installed.	☐
There is an adequately sized protective earth (ground) conductor(s) between the drive and the switchboard, the conductor is connected to correct terminal, and the terminal is tightened to the correct torque. Grounding has also been measured according to the regulations.	☐
If the drive is equipped with a DC/DC-converter unit: There is an adequately sized protective earth (ground) conductor between the energy storage and the DC/DC-converter, the conductor is connected to the correct terminal, and the terminal is tightened to the correct torque. Proper grounding has also been measured according to the regulations.	☐
If the drive is equipped with a DC/DC-converter unit: The energy storage cable is connected to the correct terminals of the DC/DC-converter and energy storage, and the terminals are tightened to the correct torque.	☐
If the drive is equipped with a DC/DC-converter unit: The energy storage is equipped with fuses for protecting the energy storage cable in a cable short-circuit situation.	☐
If the drive is equipped with a DC/DC-converter unit: The energy storage is equipped with a disconnecting device.	☐
The input power cable is connected to the correct terminals, the phase order is correct, and the terminals are tightened to the correct torque.	☐
There is an adequately sized protective earth (ground) conductor between the motor and the drive. The conductor is connected to the correct terminal, and the terminal is tightened to the correct torque. Grounding has also been measured according to the regulations.	☐
The motor cable is connected to the correct terminals, the phase order is correct, and the terminals are tightened to the correct torque.	☐
The motor cable is routed away from other cables.	☐
No power factor compensation capacitors are connected to the motor cable.	☐
If an external brake resistor is connected to the drive: There is an adequately sized protective earth (ground) conductor between the brake resistor and the drive, and the conductor is connected to the correct terminal, and the terminals are tightened to the correct torque. Grounding has also been measured according to the regulations.	☐
If an external brake resistor is connected to the drive: The brake resistor cable is connected to the correct terminals, and the terminals are tightened to the correct torque.	☐

Make sure that ...	☑
If an external brake resistor is connected to the drive: The brake resistor cable is routed away from other cables.	☐
The control cables are connected to the correct terminals, and the terminals are tightened to the correct torque.	☐
If a drive bypass connection will be used: The direct-on-line contactor of the motor and the drive output contactor are either mechanically and/or electrically interlocked, that is, they cannot be closed at the same time. A thermal overload device must be used for protection when bypassing the drive. Refer to local codes and regulations.	☐
There are no tools, foreign objects or dust from drilling inside the drive.	☐
The area in front of the drive is clean: the drive cooling fan cannot draw any dust or dirt inside.	☐
The terminal box cover of the motor is in place. Cabinet shrouds are in place and doors are closed.	☐
The motor and the driven equipment are ready for power-up.	☐

9

Start-up

Contents of this chapter

This chapter contains the start-up procedure of the inverter.

Note: These instructions do not cover all possible cabinet constructions. Always refer to the delivery-specific circuit diagrams when proceeding with the start-up.



WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

Note: The customer is fully responsible for implementing and testing the functional safety circuits according to the relevant legislation and acceptance testing regulations. The functional safety option manuals give examples on implementing the safety circuits in ACS880 multidrives. For information on the Safe torque off function, see chapter The Safe torque off function (page 379).

Start-up procedure

Tasks	☑
Safety	
WARNING! Obey the safety instructions during the start-up procedure. See ACS880 multidrives cabinets and modules safety instructions (3AUA0000102301 [English]) and Electrical safety precautions (page 172).	☐
Checks/Settings with no voltage connected	
Check the mechanical and electrical installation.	☐
Make sure that the insulation resistance of the assembly has been checked. See Measuring the insulation (page 173).	☐
The supply unit of the drive system has been set up according to the instructions in its manuals.	☐
The supply unit is off, and the drive system has been isolated from the supply network.	☐
Check that any circuit breakers and protection switches in the cooling fan supply circuit are closed. Refer to the circuit diagrams.	☐
Check the following data for each inverter unit and note down any deviations from delivery documents.	
• Motor, pulse encoder and cooling fan rating plate data correspond to the values in the motor list.	☐
• Motor temperature method: Pt100, PTC, KTY84, other?	☐
• Motor fan of separately ventilated motors. Check the current, the overcurrent protection setting and the functioning of the fan output control circuit.	☐
• Direction of motor rotation.	☐
• Maximum and minimum speeds, fixed speeds.	☐
• Speed scaling factor, gear ratio, roll diameter, etc.	☐
• Acceleration and deceleration times.	☐
• Inertia compensation.	☐
• Operating modes, stop mode, emergency stop mode, etc.	☐
For start-up of the module variant with capability for increased switching frequency (option +P967), see ACS880 multidrive for high-speed test benches supplement (3AXD50000818013 [English]).	☐
Connecting voltage to the auxiliary circuits	
Disconnect any auxiliary voltage (230 or 115 V AC) cables that lead from the terminal blocks to the outside of the equipment and have not yet been checked. Also disconnect any uncompleted wiring.	☐
Disconnect the communication link between the drive system and any overriding system.	☐
Make sure the main contactor/breaker cannot be switched on inadvertently by remote control.	☐
Be ready to trip the main breaker of the supply transformer in case something abnormal occurs.	☐
Ensure all cabinet doors are closed.	☐
Close the main breaker of the supply transformer. This will energize the input terminals of the drive system.	☐
Close the auxiliary voltage switch (if present).	☐
Checks with auxiliary voltage connected	

Tasks	☑
Check that the cooling fans rotate freely in the right direction, and the air flows up. **Note:** • Speed-controlled cooling fans of frame R8i modules (ie. without option +C188) will not rotate until the DC voltage to the module is connected. • Depending on the wiring of the drive system and the type of inverter modules, it may be necessary to have the supply unit powered before the fans are started. If so, check the cooling fans after powering the supply unit.	☐
Set the parameters for each inverter unit. Refer to the firmware manual and/or start-up guide of the control program. You can also use the start-up assistant if available in the particular control program. In addition to the parameter settings required by the application, make the following settings:	
• Set 31.23 Wiring or earth fault to “No action”.	☐
• Set 95.04 Control board supply according to how the inverter control unit is powered.	☐
• Edit 95.08 DC switch monitoring if necessary (ie. with R1i…R7i modules equipped with a DC switch/disconnector).	☐
• Edit 95.09 Fuse switch control if necessary (ie. with R8i modules without a DC switch/disconnector and charging controller).	☐
• With R8i modules with option +C188 (direct-on-line cooling fan), set bit 14 of 95.20 HW options word 1.	☐
• With parallel-connected R8i modules, select the inverter unit type in parameter 95.31 Parallel connection rating id. You can filter the list using parameter 95.30.	☐
• Reboot the control unit either by cycling the power, or by parameter 96.08 Control board boot. **Note:** Frames R6i and R7i with option +C249 (BCU or UCU control unit) require an additional control board reboot after module is powered up.	☐
Powering up the inverter unit	
Close the cabinet doors.	☐
Make sure that it is safe to connect voltage to the drive system. Ensure that: • nobody is working on the unit or circuits that have been wired from outside into the cabinets • cover of the motor terminal box is on.	☐
Close the main disconnecting device of the drive system. **WARNING!** When connecting voltage to the supply unit, the DC busbars will become live, as will all the inverters connected to the DC bus. **WARNING!** Inverter units with a DC switch-disconnector: Some types of inverter module may be energized through a charging circuit even when the DC switch-disconnector is open or the DC fuses are removed. Inverter units without a DC switch-disconnector: If the inverter unit only has DC fuses without a switch fuse, all the inverter units with the DC fuses in place will be energized when the main breaker/contactor closes. To prevent this, remove the fuses from the inverter units which are to remain unenergized before connecting voltage. **When the main breaker/contactor of the supply unit is closed (DC busbars are live), never remove or insert the DC fuses of an inverter unit.** Inverter cubicles with frame R1i…R5i modules: Before closing the main DC switch-disconnector of the cubicle, leave open the fuse disconnectors of those inverter modules that need not be powered at this time. Do not open or close any fuse disconnectors under load.	☐
Inverter units equipped with DC switch-disconnector (or fuse disconnectors): Close the DC switch/disconnector (or fuse disconnectors) of the inverter units that are to be powered up.	☐
Inverter cubicles equipped with main DC switch-disconnector (frames R1i…R5i): Close the main DC switch/disconnector.	☐

Tasks	☑
WARNING! Before closing the main contactor/air circuit breaker, make sure that sufficient inverter power is connected to the intermediate (DC) bus. As a rule of thumb, • the sum power of the inverters connected must be at least 30% of the sum power of all inverters • the sum power of the inverters connected must be at least 30% of the rated power of the brake unit (Pbr.max) (if present). If the above-mentioned rules are not followed, the DC fuses of the connected inverter units may blow, or the brake chopper (if present) may be damaged.	☐
Close the main contactor (or breaker) of the supply unit. The DC bus is now powered, along with all inverters that are connected to it.	☐
Checks with voltage connected to the inverter unit	
Complete the pending ID (motor identification) run. Refer to the firmware manual and/or start-up guide of the control program. **WARNING!** Make sure the motor can be started and rotated as required by the selected ID run mode (parameter 99.13 ID run requested).	☐
Check the rotation direction of the motor.	☐
Check the operation of the pulse encoder (if present). Refer to the user manual of the pulse encoder interface module.	☐
Check the functioning of the emergency stop function from each operating location.	☐
Validate the Safe torque off function. Refer to chapter The Safe torque off function, section Start-up including validation test (page 394). **WARNING!** The safety functions cannot be considered safe until they are validated.	☐
Validate any other safety functions (Emergency stop, Prevention of unexpected start-up, etc.) according to the appropriate procedures. **WARNING!** The safety functions cannot be considered safe until they are validated.	☐
Control from an overriding system	
Disconnect all voltages from the drive system.	☐
Connect the communication link between the overriding system and the inverter unit.	☐
Power up the drive system.	☐
Check the start/stop functions.	☐
Check the references received from the overriding system.	☐
Check the warning/fault words.	☐
Check the reaction of the inverter unit in case of a communication break.	☐
Check the updating intervals of the communication.	☐
Check any other relevant points.	☐

Charging sequence

Frame R8i and multiples: For details on charging sequence, refer to BSFC-02C and BSFC-12C charging controllers hardware manual (3AXD50000027498 [English]).

10

Maintenance

Contents of this chapter

This chapter contains maintenance instructions.

Maintenance intervals

The tables show the maintenance tasks that can be done by the end user. For the ABB Service offering, contact your local ABB Service representative (new.abb.com/contact-centers).

Description of symbols

Action	Description
I	Inspection (visual inspection and maintenance action if needed)
P	Performance of on/off-site work (commissioning, tests, measurements or other work)
R	Replacement

Recommended maintenance intervals after start-up

Maintenance task/object	Years from start-up													
	0	1	2	3	4	5	6	7	8	9	10	11	12	...
Cooling														
Inverter module main cooling fan										R				
Frame R5i auxiliary cooling fan										R				
Frame R8i circuit board compartment fan										R				
Cabinet cooling fan (50 Hz)										R				
Cabinet cooling fan (60 Hz)							R						R	
Batteries														
Control unit battery							R						R	
Control panel battery										R				
Connections and environment														
Air inlet and outlet cleaning (IP22/IP42)		I	I	I	I	I	I	I	I	I	I	I	I	I
Cabinet door filter change (IP54)		R	R	R	R	R	R	R	R	R	R	R	R	R
Checking tightness of cable and busbar terminals. Tightening if needed.		I	I	I	I	I	I	I	I	I	I	I	I	I
Checking ambient conditions (dustiness, corrosion, temperature)		I	I	I	I	I	I	I	I	I	I	I	I	I
Cleaning of heatsinks		I	I	I	I	I	I	I	I	I	I	I	I	I
Quality of supply voltage		P	P	P	P	P	P	P	P	P	P	P	P	P
Spare parts														
Spare parts		I	I	I	I	I	I	I	I	I	I	I	I	I
DC circuit capacitor reforming (spare modules and spare capacitors)		P	P	P	P	P	P	P	P	P	P	P	P	P
Functional safety														
Safety function test	I See the maintenance information of the safety function.													
Safety component expiry (Mission time, T_M)	20 years													
														4FPS10000292961

Note:

- The maintenance and component replacement intervals are based on the assumption that the equipment operates within the specified ratings and ambient conditions. ABB recommends annual drive inspections to ensure the highest reliability and optimum performance.
- Long-term operation near the specified maximum ratings or ambient conditions may require shorter maintenance intervals for certain components. Contact your local ABB Service representative for additional maintenance recommendations.

Maintenance timers and counters

The control program has maintenance timers and counters that can be configured to generate a warning when a pre-defined limit is reached. Each timer/counter can be set to monitor any parameter. This feature is especially useful as a service reminder. For more information, see the firmware manual.

Cleaning

Cleaning the interior of the cabinet



WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.



WARNING!
Use a vacuum cleaner with antistatic hose and nozzle, and wear a grounding wristband. Using a normal vacuum cleaner creates static discharges which can damage circuit boards.

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Open the cabinet door.
3. Clean the interior of the cabinet. Use a vacuum cleaner and a soft brush.
4. Clean the air inlets of the fans and air outlets of the modules (top).
5. Clean the air inlet gratings (if any) on the door.
6. Close the door.

Cleaning the heatsink

The heatsink of the power module (drive, supply, inverter, converter, etc.) pick up dust from the cooling air. This can cause overtemperature warnings and faults. When necessary, clean the heatsink as follows.



WARNING!
Use the required personal protective equipment. Wear protective gloves and long sleeves. Some parts have sharp edges.



WARNING!
Use a vacuum cleaner with antistatic hose and nozzle, and wear a grounding wristband. Using a normal vacuum cleaner creates static discharges which can damage circuit boards.

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Remove the module cooling fan(s). Refer to the separate instructions.
3. Protect the adjacent equipment from dust.

4. Blow dry, clean and oil-free compressed air from bottom to top and simultaneously use a vacuum cleaner at the air outlet to trap the dust.
5. Reinstall the cooling fan.

Cleaning the door air inlets

Follow the instructions of the manufacturer of the cabinet system.


Cleaning the door air inlets (IP20)

Use a vacuum cleaner and brush to clean the grating.

Cleaning the door air inlets (IP22 and IP42)


Check the dustiness of the air inlet meshes. If the dust cannot be removed by vacuum cleaning from outside through the grating holes with a small nozzle, proceed as follows:

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Remove the fasteners at the top of the grating.
3. Lift the grating and pull it away from the door.
4. Vacuum clean or wash the grating on both sides.
5. Reinstall the grating in reverse order.

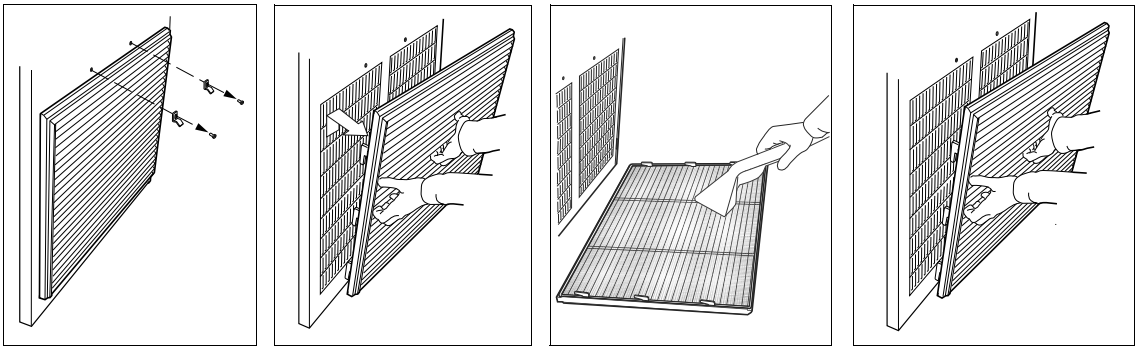

Replacing the inlet door filters (IP54)

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Remove the fasteners at the top of the grating.
3. Lift the grating and pull it away from the door.
4. Remove the air filter mat.
5. Place the new filter mat in the grating the metal wire side facing the door.
6. Reinstall the grating in reverse order.

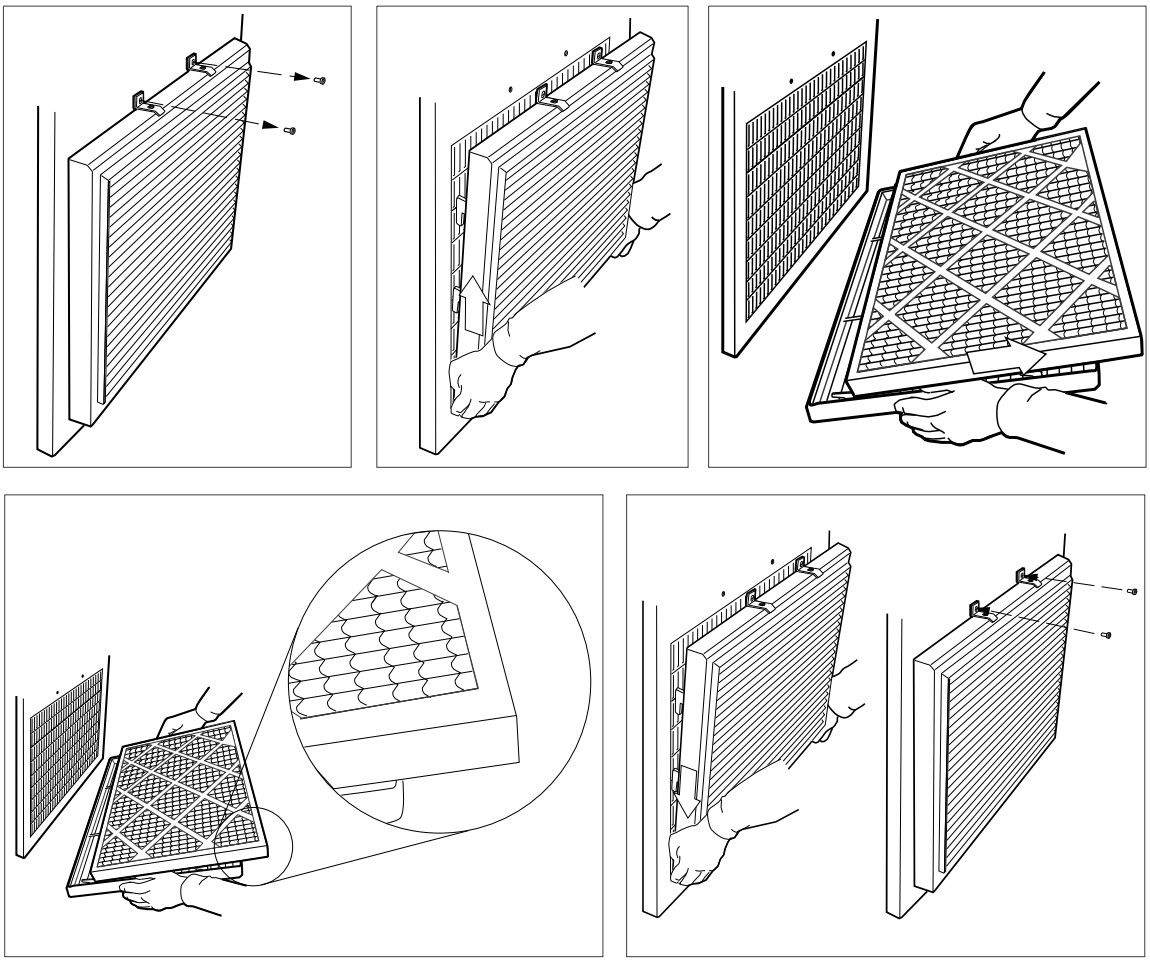

Cooling fans

The lifespan of the cooling fans of the drive depends on running time, ambient temperature and dust concentration. See the firmware manual for the actual signal which indicates the running time of the cooling fan. Reset the running time signal after fan replacement.

Replacement fans are available from ABB. Do not use other than ABB-specified spare parts.


Replacing the module cooling fans

Replacing the R1i and R2i module cooling fan

WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Detach the power cable clamp plate and terminal blocks.
3. Release the retaining clips (arrowed) carefully using a screwdriver.
4. Pull the fan holder out.
5. Disconnect the fan cable.
6. Carefully bend the clips on the fan holder to free the fan.
7. Install new fan in reverse order.

Note: The airflow direction is bottom-to-top. Install the fan so that the arrow on it points up.

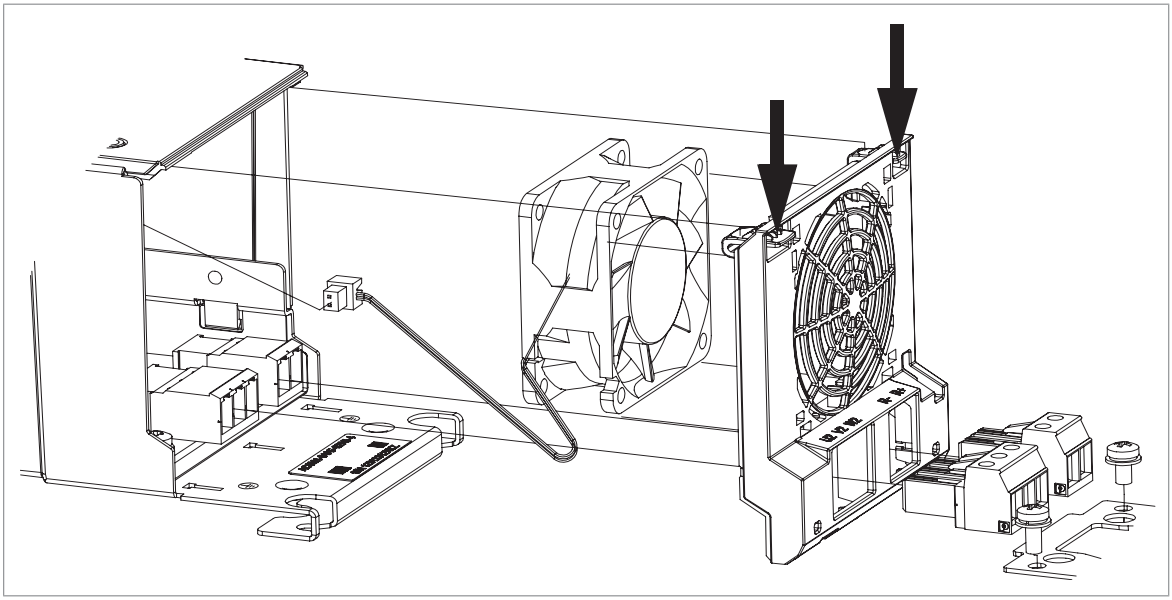


In the drawing, the direction of airflow is from right to left.

Replacing the R3i and R4i module cooling fan

WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. To remove the fan, release the retaining clip (arrowed) carefully using a screwdriver.
3. Pull the fan holder out.
4. Disconnect the fan cable.
5. Carefully bend the clips on the fan holder to free the fan.
6. Install new fan in reverse order.

Note: The airflow direction is bottom-to-top. Install the fan so that the airflow arrow points up.

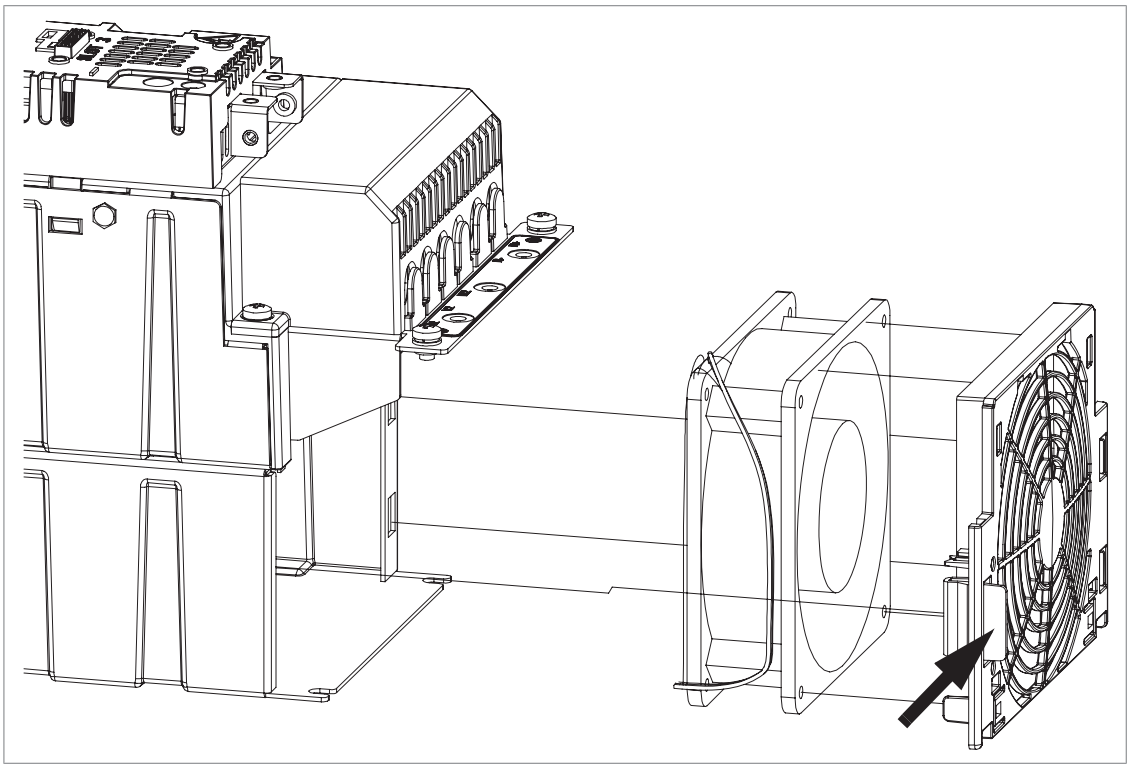

In the picture diretion of airflow is from right to left.

Replacing the R5i module main cooling fan

WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Disconnect the drive from the power line. Lock the main disconnecting device and ensure by measuring that there is no voltage.
3. Lift the fan mounting plate by the front edge.
4. Unplug the power supply wires.
5. Lift the fan assembly off.
6. Install the new fan assembly in reverse order. Make sure that the fan blows up.








Replacing the R5i module auxiliary cooling fan

Frame R5i modules have an auxiliary fan located at the top front of the module.

WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Disconnect the fan from the control unit. Make note of the connector the plug is connected to.
3. Push the two locking tabs gently inwards to release the fan.
4. Remove the fan.
5. Install new fan in reverse order. Make sure that the fan blows up (the arrows on the fan frame and the fan holder point in the same direction).

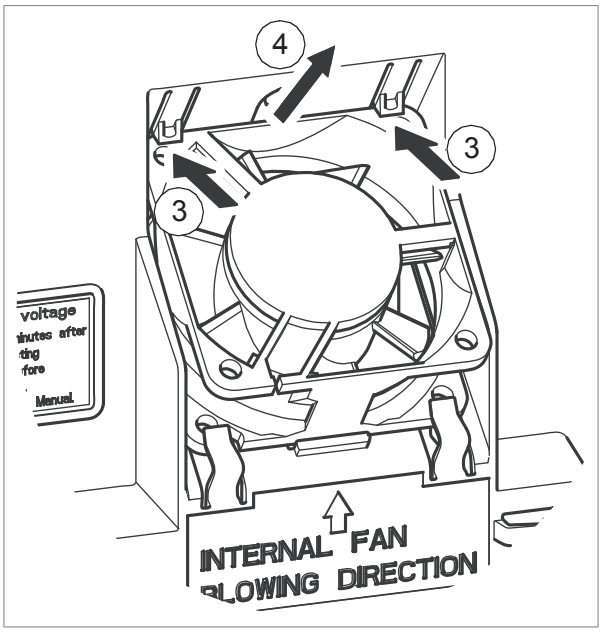

Replacing the R6i and R7i module cooling fan


Frame R6i module has one fan, R7i module has two.

WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

WARNING!
Use the required personal protective equipment. Wear protective gloves and long sleeves. Some parts have sharp edges.

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Open the door. Remove any shrouding in front of the fan unit.
3. Remove the front plate.
4. Remove the two screws that lock the fan unit.
5. Disconnect the power supply wire(s) of the fan(s).
6. To free the fan holder, pull it slightly outwards (about 5 mm), then downwards.
7. Remove the fan(s) from the fan holder.
8. Install new fan(s) in reverse order to the above.

Note: The airflow direction is bottom-to-top. Make sure that the airflow direction arrow on the fan points up.

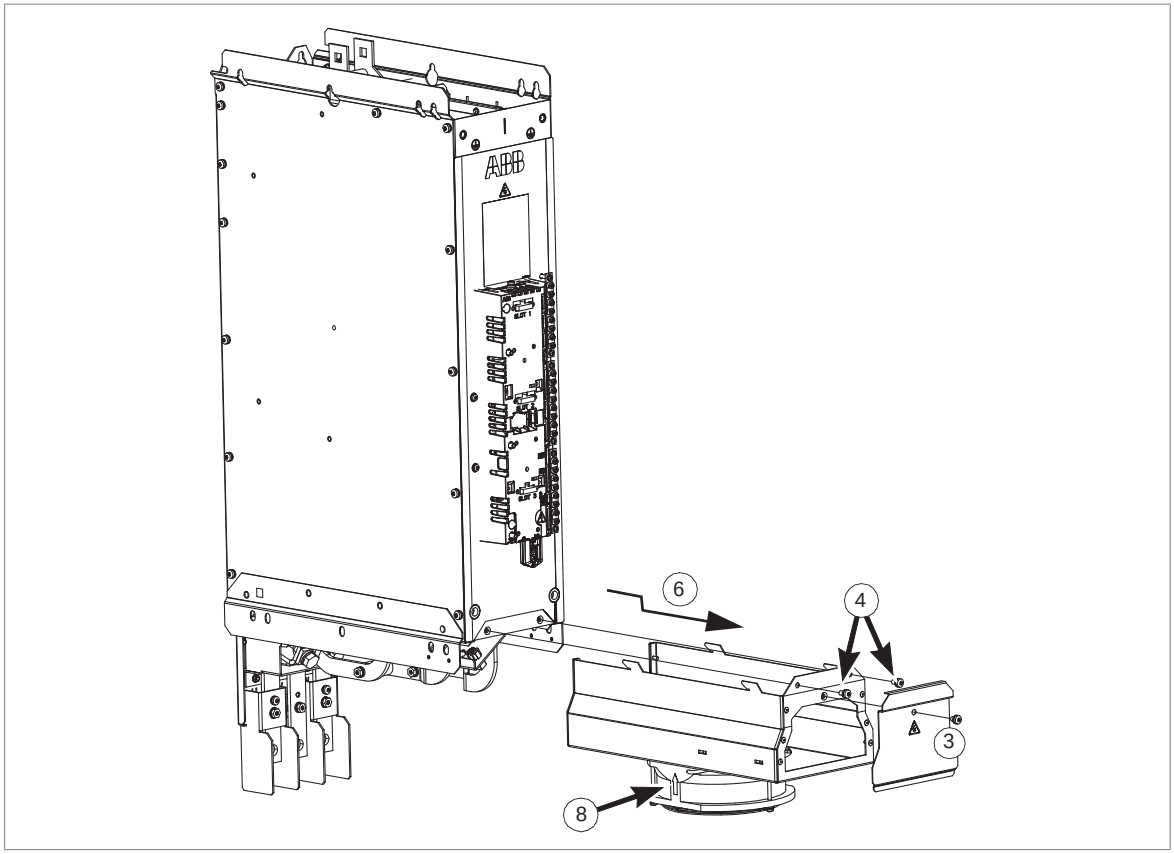

Replacing R8i module cooling fan (speed-controlled version)


The module is equipped with a fan unit that contains two cooling fans.

WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

WARNING!
Use the required personal protective equipment. Wear protective gloves and long sleeves. Some parts have sharp edges.

Before you start replacing the fan kit of the converter module, make sure that the connector at the end of the fan kit cable is compatible with the counterpart in the module. Black connector is compatible only with the black counterpart, and gray connector only with the gray counterpart. If the connectors are not compatible, replace the connector at the end of the fan kit cable. Use the connector in the old fan kit, or order a suitable connector from ABB.

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Open the cubicle door.
3. Remove the shroud in front of the fan (if any).
4. Remove the screws holding the front cover plate. Lift the cover plate somewhat to release it.
5. Disconnect the fan wiring.
6. Remove the unit below the fan.
7. Remove the screws of the fan unit.
8. Pull out the fan unit.
9. Install a new fan in reverse order.

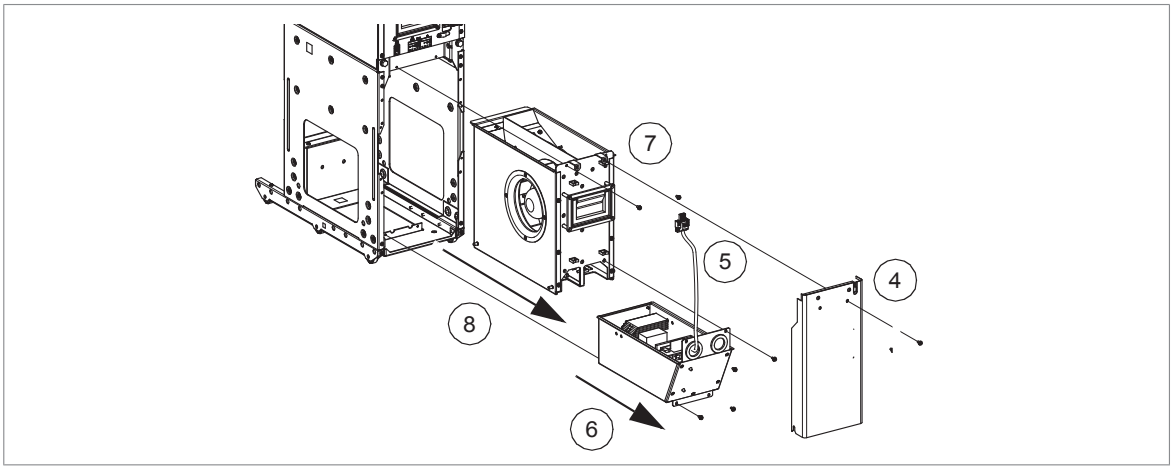

Replacing R8i module cooling fan (direct-on-line version)


WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

WARNING!
Use the required personal protective equipment. Wear protective gloves and long sleeves. Some parts have sharp edges.

Before you start replacing the fan kit of the converter module, make sure that the connector at the end of the fan kit cable is compatible with the counterpart in the module. Black connector is compatible only with the black counterpart, and gray connector only with the gray counterpart. If the connectors are not compatible, replace the connector at the end of the fan kit cable. Use the connector in the old fan kit, or

order a suitable connector from ABB. Refer to Connector replacement guide for ACS880-x04 R8i/D8T, BLCL-2X, BL-2X and BLHF DOL fan (3AXD50001059903 [English]).

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Open the door.
3. Remove the shroud in front of the fan (if any).
4. Remove the screws holding the front cover plate. Lift the cover plate somewhat to release it.
5. Remove the bracket.
6. Disconnect the wiring of the fan unit.
7. Remove the screws of the fan unit.
8. Pull out the fan unit.
9. Disconnect the fan wire from the fan unit.
10. Remove the screws of the fan.
11. Install a new fan in reverse order.

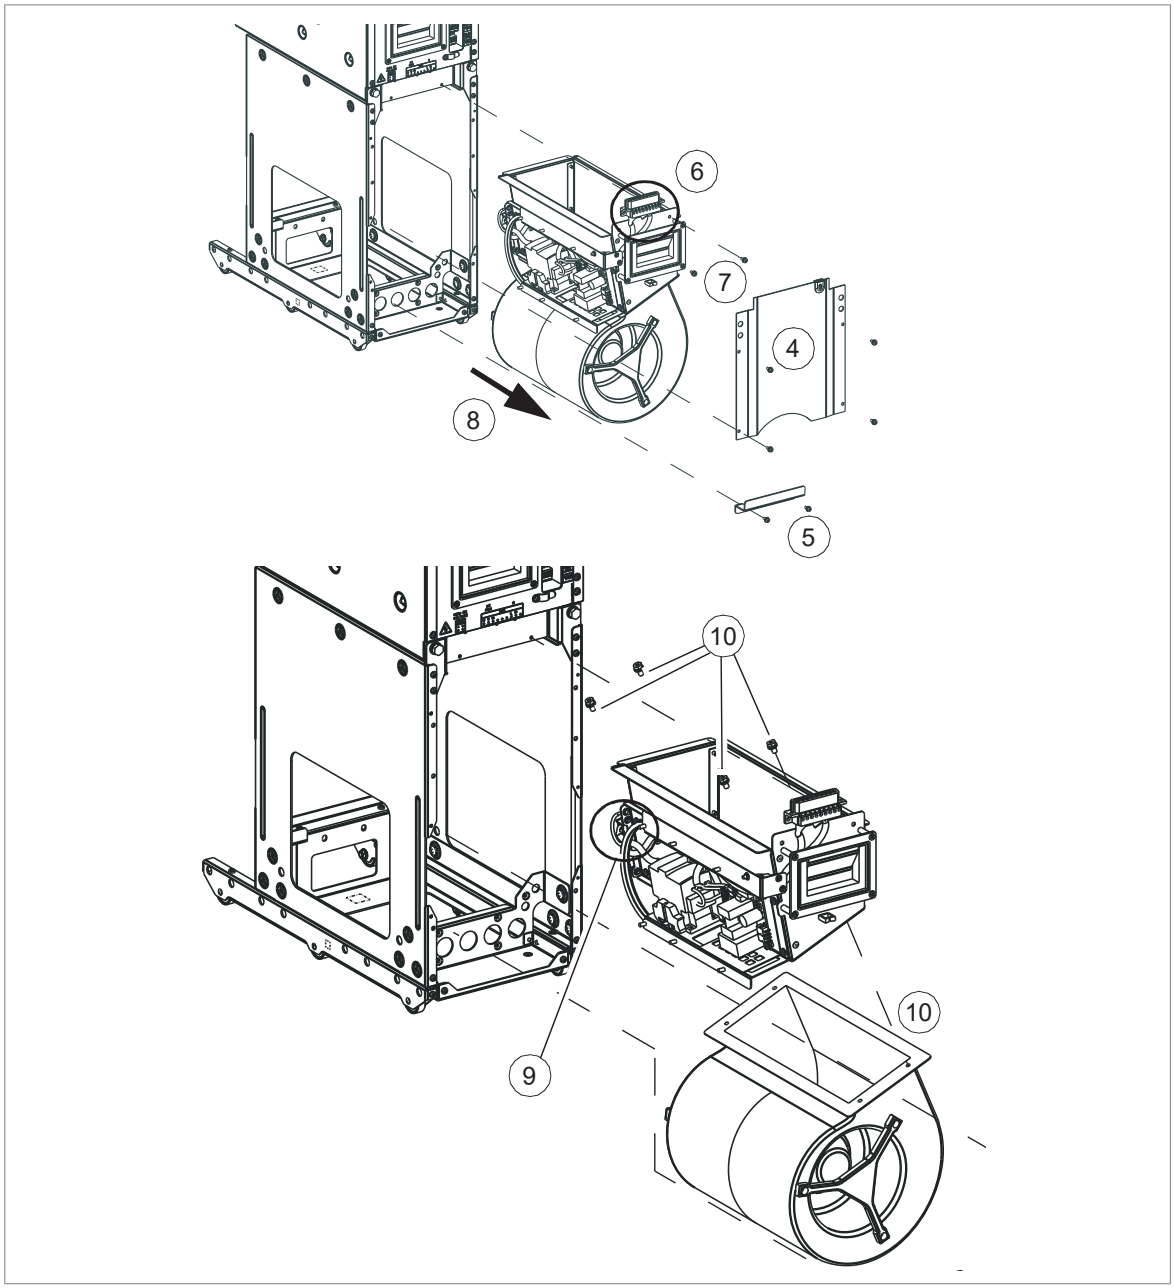

Replacing the circuit board compartment fan


Frame R8i modules are equipped with a fan blowing air through the circuit board compartment.

The fan is accessible from the front of the module.


WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Open the door of the module cubicle.
3. Remove the two M4×12 (T20) screws which lock the fan holder.


4. Pull the fan holder out of the module.
5. Disconnect the fan cable.

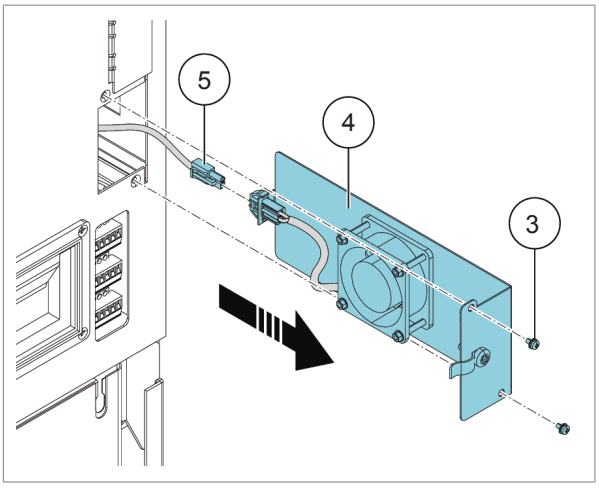


6. Remove the four M3 (5.5 mm) nuts which hold the fan.
7. Remove the fan from the fan holder.

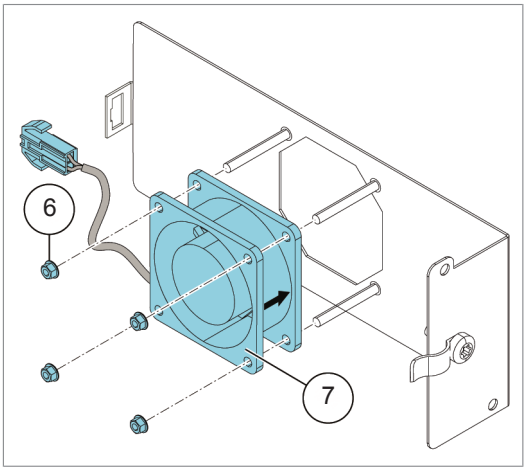

8. Put the fan onto the threaded studs on the fan holder with the airflow direction arrow pointing towards the fan holder.
9. Install and tighten the four nuts removed earlier.

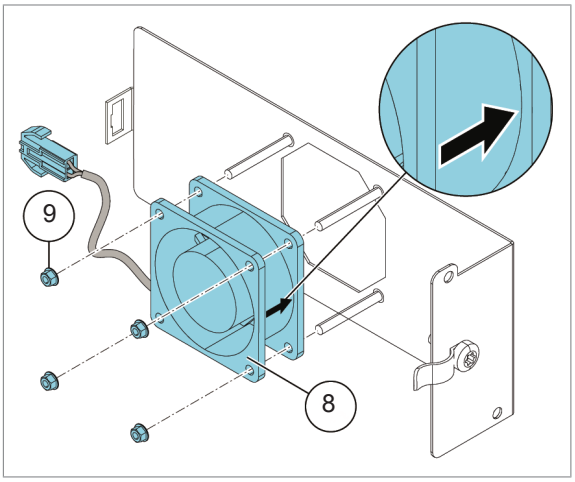

10. Connect the fan cable.
11. Align and push the fan holder into the module.
12. Install and tighten the two M4×12 (T20) screws.

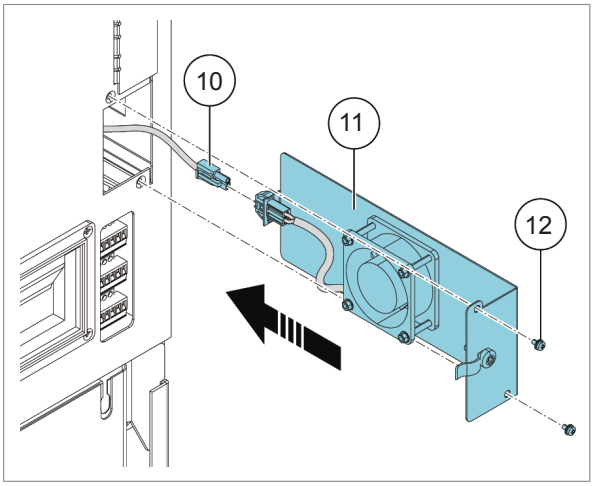

Replacing the cabinet cooling fans

Cabinets with ABB air outlet kits

WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Remove all gratings and filters, and finally remove the plate on top of the outlet. Unscrew all necessary screws securing the fan and remove it. There are several outlet air kit designs available. Refer to the Ordering info chapter. The assembly drawings for each kit are available from ABB or directly from https://sites-apps.abb.com/sites/lvacdrivesengineeringsupport/content.
3. Install new fan in reverse order.

Cabinets with other fan types

WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Follow the instructions of the manufacturer of the air outlet or enclosure system.

Replacing R6i/R7i module


The following procedure describes the replacement of a frame R6i or R7i inverter module.


The procedure applies to the design presented in this manual.


WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.


Refer to the drawings below.

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Disconnect the drive system from the AC power line.
3. Open the cubicle door.
4. Remove the shrouds. Also remove the mounting brackets of the middle shroud (3a) on the left.
5. Remove the two screws holding the fan unit (arrowed). Remove the fan unit by pulling it slightly outwards, then downwards.
6. Remove the mounting screws (arrowed) of the front air baffle. Remove the baffle.
7. Disconnect all control cabling coming to the control unit at the front of the module. Move the cabling aside and tie it out of the way.
8. Disconnect the DC busbars.
9. Disconnect the AC busbars.
10. Pull out the module until the lifting device (or a suitable hoist) can be attached to the lifting eyes at the top of the module (arrowed).
11. Make sure the lifting device is carrying the weight of the module, and pull the module out completely.
12. Install the new module in reverse order to the above.

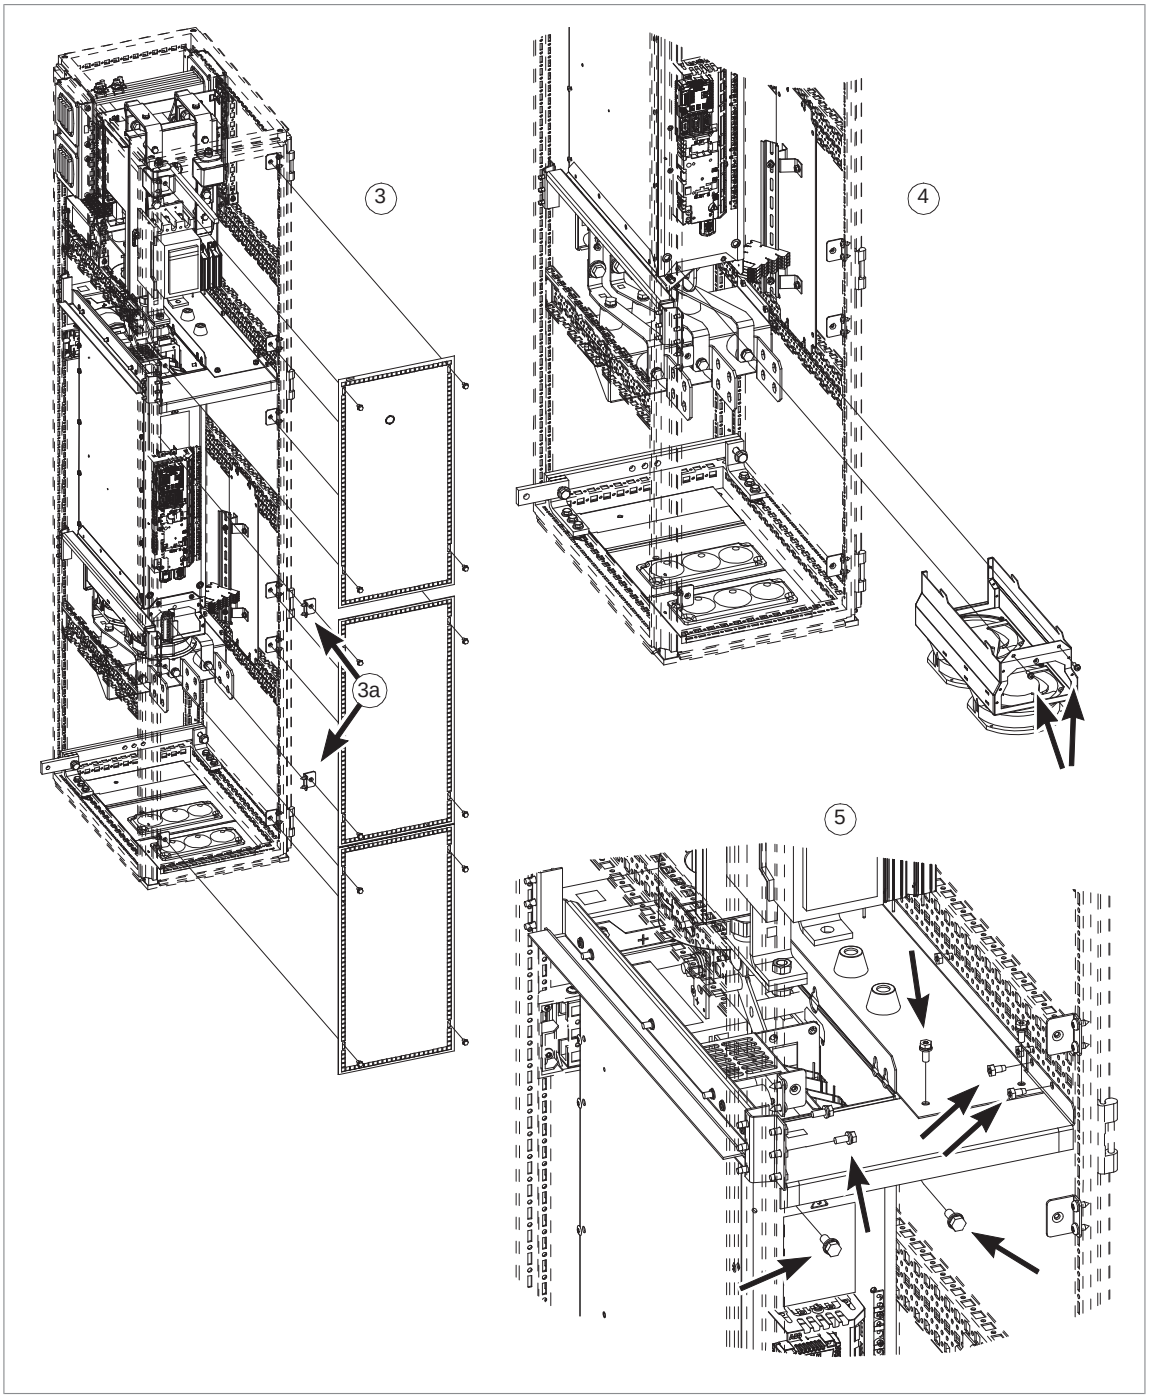
3
3a
4
5

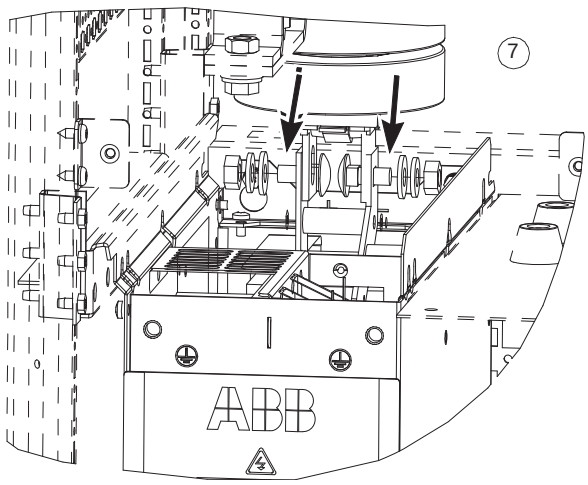
7
ABB

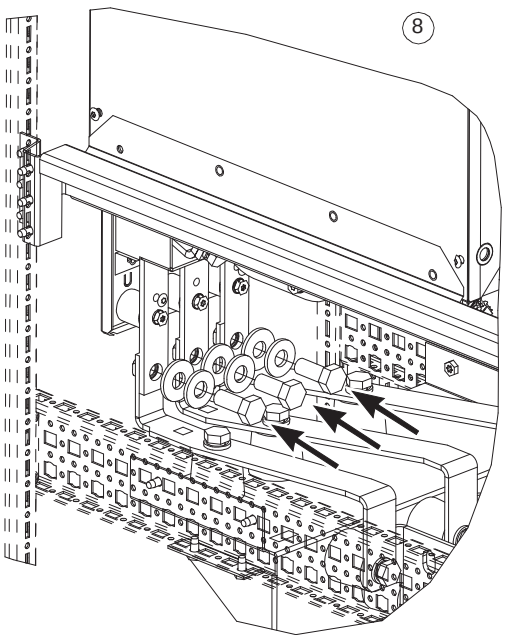
8

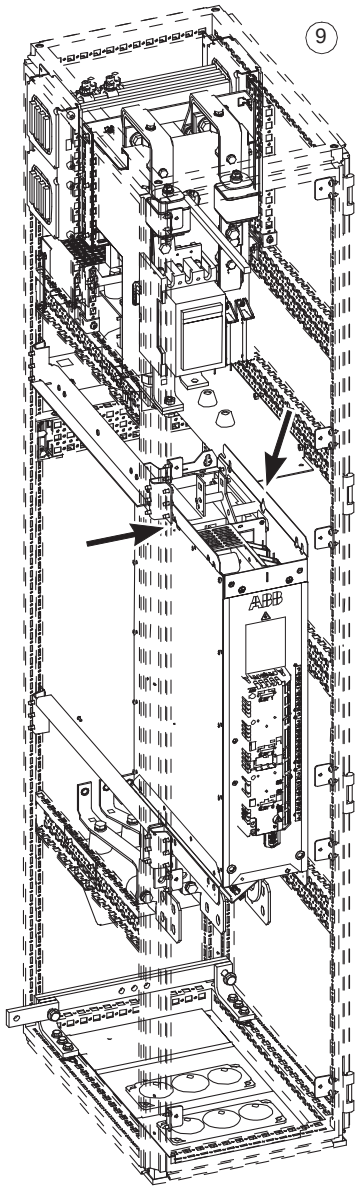

9
ABB


Replacing R8i module

WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

WARNING!

- Do not use the module extraction/installation ramp when the height of the drive cabinet plinth is more than the maximum permitted height.
- Secure the module extraction/installation ramp carefully.
- Push the module into the cabinet and pull it from the cabinet carefully preferably with help from another person. Keep a constant pressure with one foot on the base of the module to prevent the module from falling on its back. Keep your fingers away from the edges of the front flange of the module.

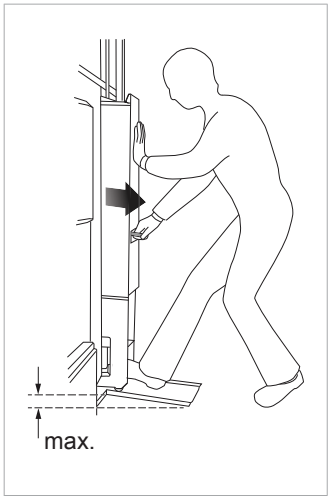

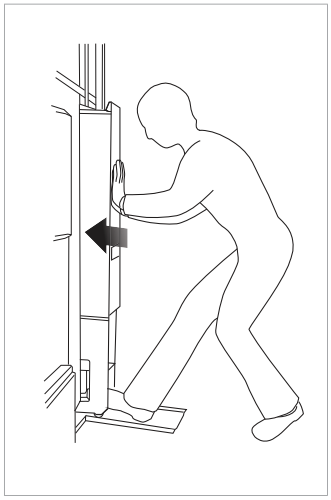



- **WARNING!**
  Do not move the module on its wheels for long distances. It can cause damage to the wheels. Also, there is a risk of the module falling over.
- Be careful when handling a tall module. The module overturns easily because it is heavy and has a high center of gravity. Whenever possible, secure the module with chains. Do not leave an unsupported module unattended especially on a sloping floor.






- Wear protective gloves and long sleeves! Some parts have sharp edges.

Note: Before you start replacing the supply module, make sure that the connector at the end of the auxiliary power supply cable in the cabinet is compatible with the counterpart in the module. Black connector is compatible only with the black counterpart, and gray connector only with the gray counterpart. If the connectors are not compatible, replace the connector in the new module. Use the connector in the old module, or order suitable connector from ABB. Refer to +V112 connector replacement guide for ACS880-x04 R8i/D8T/D7T module change (3AXD50001060015 [English]).

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Open the cubicle door.
3. Remove the shrouds (if any).
4. Unplug the wiring on the front of the module. Unplug the connector (X50) at the top of the module. Move the wires aside.
5. Use a module pull out ramp or other lifting device to remove the module from the cabinet. If the ramp designed for Rittal enclosures is used, install it by placing the hooks of the ramp between the bottom plate and enclosure frame.
6. Remove the two fastening bolts in the DC output busbars. Remove the two fastening screws on the top part of the module.
7. Remove the module fastening screws on the lower part of the module.
8. Pull the module carefully out of the cabinet along the ramp, or use another lifting device to remove the module.
9. Replace the module:
   - Push the module back in and fasten. Tighten the fastening screws of the module to 22 N·m (16.2 lbf·ft) and fastening bolts of the DC input busbars to 70 N·m (51.6 lbf·ft).
   - Reconnect connector X50 at the top of the module.
   - Reconnect the wiring and fiber optic cables to their respective terminals on the front of the module.
   - Remove the module pull-out ramp, attach the shrouds (if any) and close the cabinet doors.

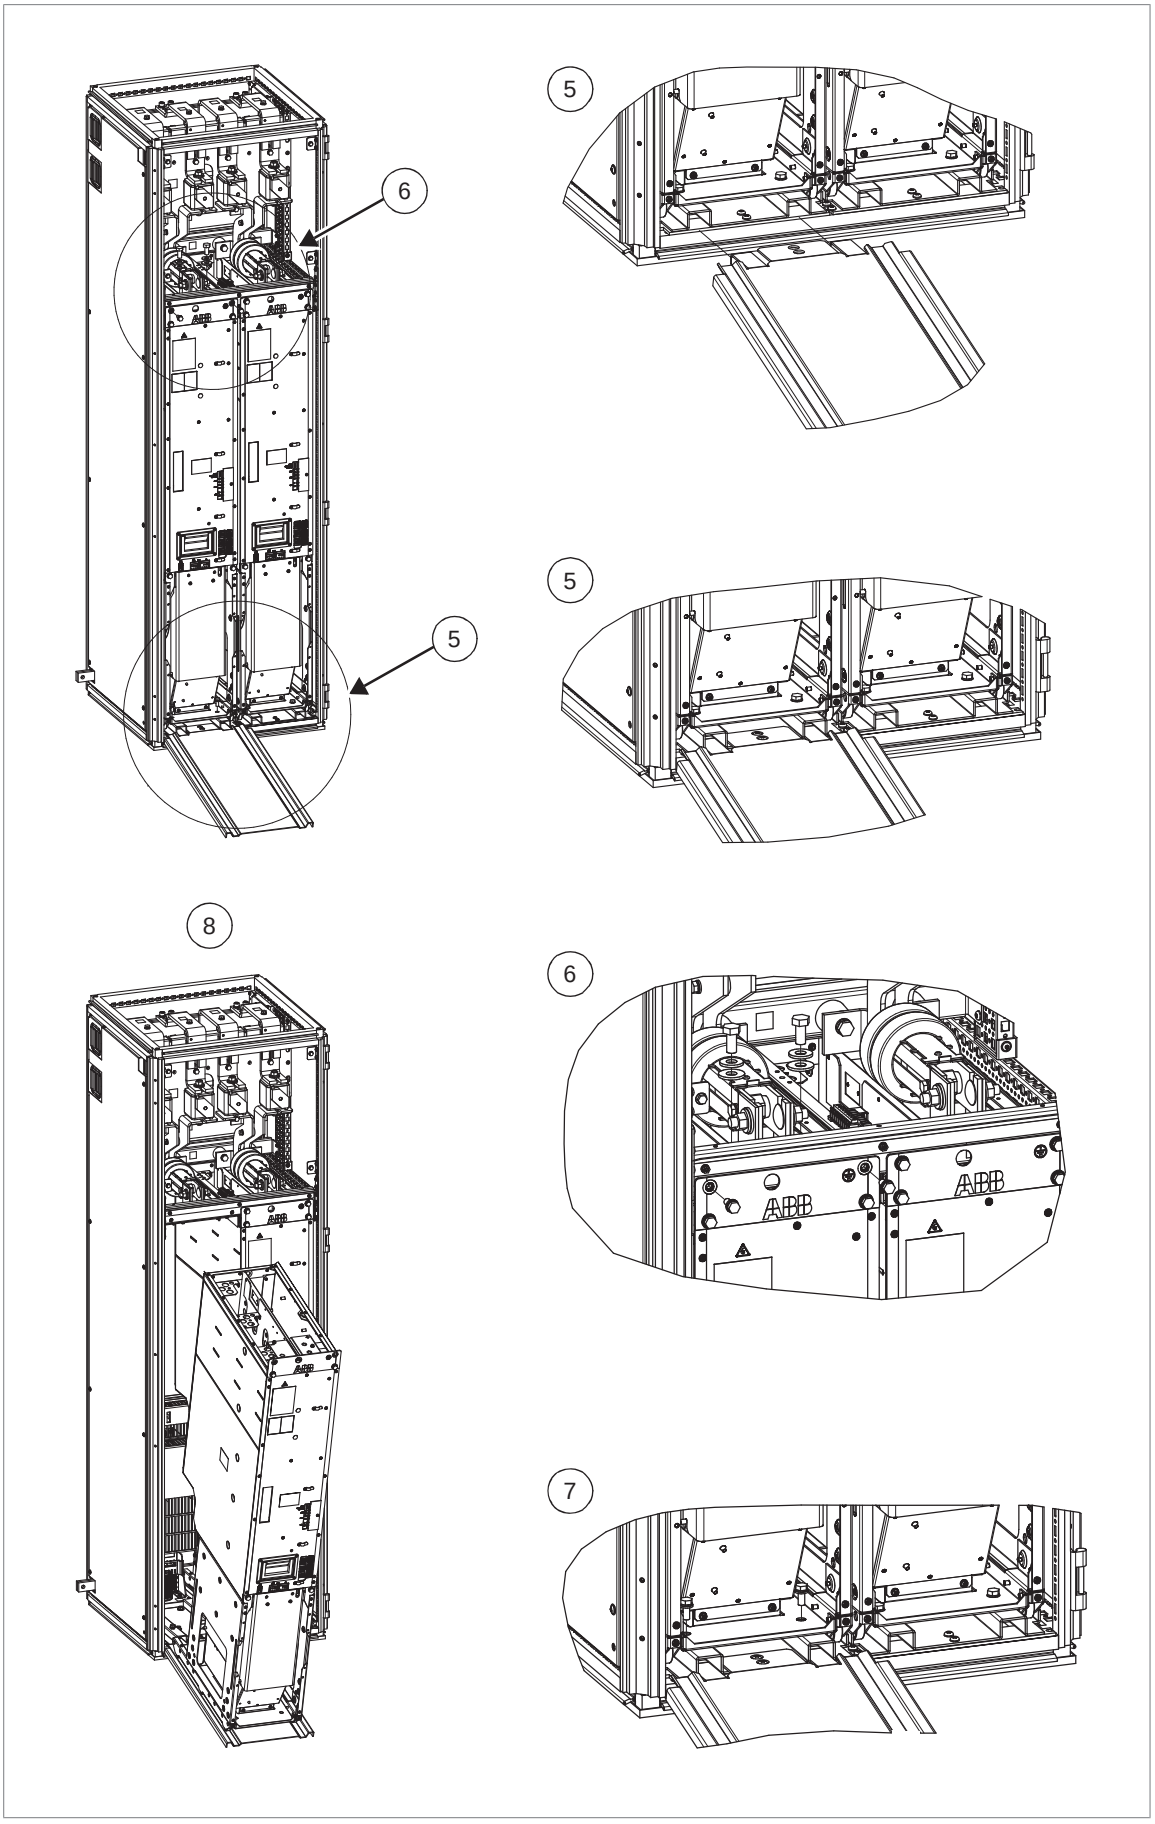
6
5
5
5
8
6
ABB
ABB
7

BLHF filters

For maintenance of BLHF filter, see ACS880 multidrive for high-speed test benches supplement (3AXD50000818013 [English]).

Capacitors

The intermediate DC circuit of the drive contains several electrolytic capacitors. Operating time, load, and surrounding air temperature have an effect on the life of the capacitors. Capacitor life can be extended by decreasing the surrounding air temperature.

Capacitor failure is usually followed by damage to the unit and an input cable fuse failure, or a fault trip. If you think that any capacitors in the drive have failed, contact ABB.

Reforming the capacitors

The capacitors must be reformed if the drive has not been powered (either in storage or unused) for a year or more. The manufacturing date is on the type designation label. For information on reforming the capacitors, refer to Capacitor reforming instructions (3BFE64059629 [English]).

Control units

UCU control unit types

Different variants of the UCU control units are used in ACS880 drives: UCU-22…24. These have a different number of converter module connections but are otherwise identical. The UCU types are interchangeable as long as the number of connections is sufficient. For example, the UCU-24 can be used as a direct replacement for both UCU-22 and UCU-23.


Replacing the memory unit of the UCU control unit

If you replace the control unit, move the memory unit from the old control unit to the new control unit to keep the existing parameter settings.

WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

WARNING!
Do not remove or install the memory unit when the control unit is powered.

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Make sure that the control unit is not powered.
3. Push and hold in the clips on the memory unit. Pull the memory unit out.
4. Push the new memory unit in.

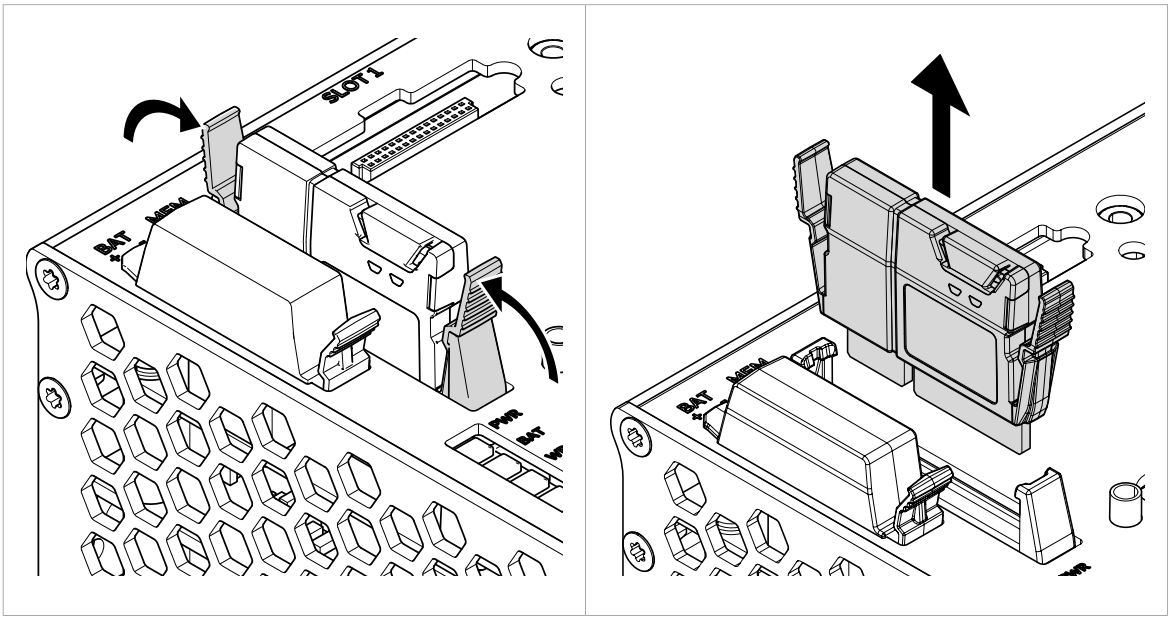


Replacing the UCU control unit battery

When the BAT LED is on, the real-time clock battery voltage is high enough. If the LED is off, replace the battery.

WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Open the battery cover.
3. Replace the battery with a new BR2032 battery. Make sure that the polarity is correct.

   Note: The real-time clock stays set for 2 minutes without battery.
4. Close the battery cover.
5. If necessary, set the real-time clock.
6. Dispose of the old battery according to local disposal rules or applicable laws.

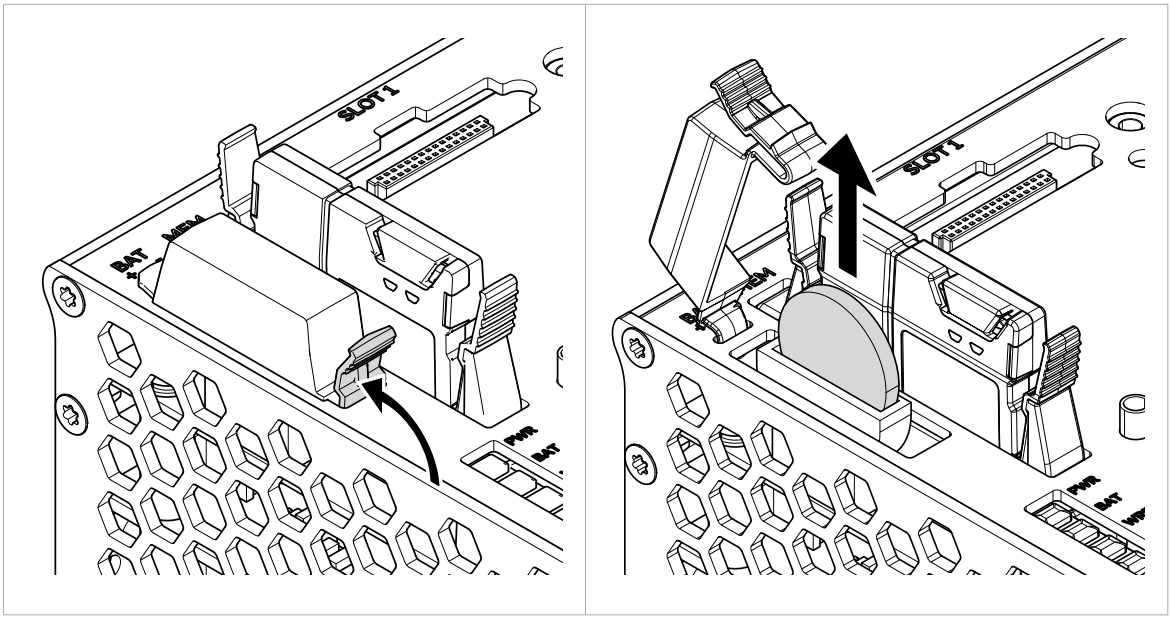


Replacing the microSDHC memory card (UCU-22...24)

WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

For the replacement card type, refer to the technical data.

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Remove the UMU-01 memory unit from the control unit.

3. Open the memory card cover in the memory unit.
4. Push the card to remove it.
5. Install a new card in reverse order.

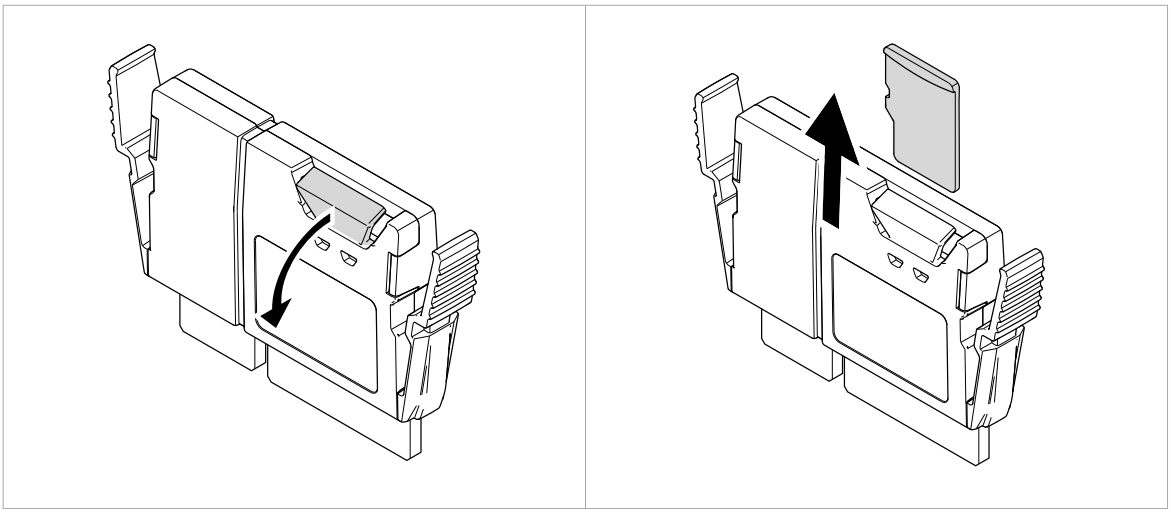

BCU control unit types

There are three variants of the BCU control unit used in ACS880: BCU-02, BCU-12 and BCU-22. These have a different number of converter module connections but are otherwise identical. The BCU types are interchangeable if the number of connections is sufficient and the control program is the same. For example, BCU-22 can be used as a direct replacement for both BCU-02 and BCU-12.


Replacing the memory unit of BCU control unit

If you replace the control unit, move the memory unit from the old control unit to the new control unit to keep the existing parameter settings.

WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

WARNING!
Do not remove or insert the memory unit when the control unit is powered.

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Make sure that the control unit is not powered.
3. Remove the fastening screw and pull the memory unit out.
4. Install a memory unit in reverse order.

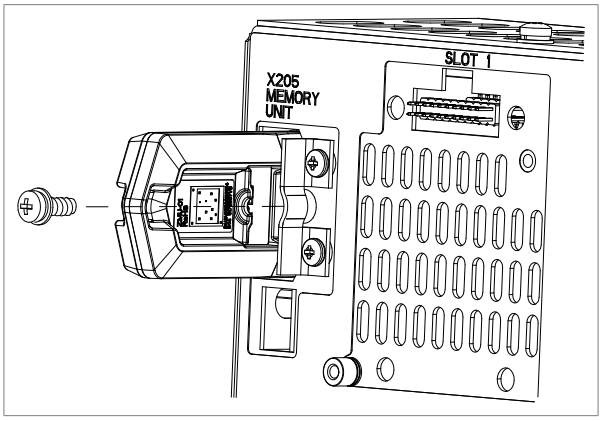


Replacing the BCU control unit battery

WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

Replace the real-time clock battery if the BATT OK LED is off when the control unit is powered.

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Remove the fastening screw.
3. Replace the battery with a new BR2032 battery.
4. If necessary, set the real-time clock.
5. Discard the old battery according to local disposal rules or applicable laws.

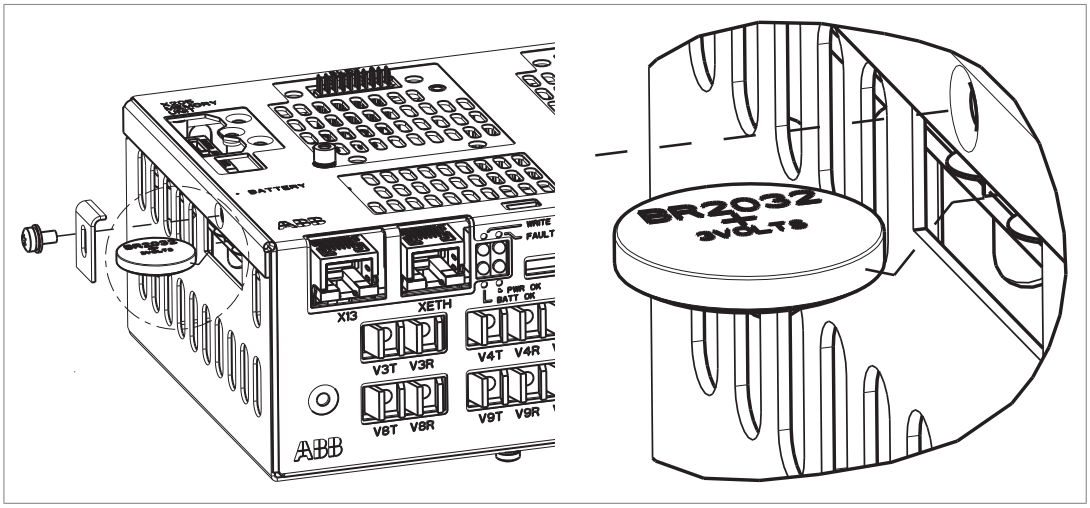

Control panel

Refer to ACS-AP-I, -S, -W Assistant control panels user's manual (3AUA0000085685 [English]).

Refer to ACS-BP-S basic control panels user's manual (3AXD50000032527 [English]).

LEDs and other status indicators

Control panel and panel platform/holder LEDs

The ACS-AP-… control panel has a status LED. The control panel mounting platform or holder has two status LEDs. For status LED indications, see the following table.

Location	LED	Indication
Control panel	Continuous green	The unit operates normally.
	Flickering green	Data is transferred between the PC and the unit through the USB connection of the control panel.
	Flashing green	There is an active warning in the unit.
	Continuous red	There is an active fault in the unit.
	Flashing red	There is a fault that requires the stopping and restarting of the drive/converter/inverter.
	Flashing blue (ACS-AP-W only)	The Bluetooth interface is enabled, in discoverable mode, and ready for pairing.
	Flickering blue (ACS-AP-W only)	Data is transferred through the Bluetooth interface of the control panel.
Control panel mounting platform or holder (with the control panel removed)	Red	There is an active fault in the unit.
	Green	Power supply for the control unit is OK.

LEDs of the BPA-01 board

LED	Color	Indication
24V OUT FAULT	Continuous red	There is a blown fuse within the BPA-01 board and therefore the X2 connector (24V OUT) is not functioning. Replace the BPA-01 board.
INTERNAL POWER OK	Continuous green	Power supply is OK. BPA-01 board is powered and the fiber optic link is functional.

R8i module LEDs

LED	Color	Indication
FAULT	Continuous red	There is an active fault in the module.
ENABLE / STO	Continuous green	The module is ready for use.
ENABLE / STO	Continuous yellow	XSTO connectors are de-energized.
POWER OK	Continuous green	Supply voltage of the internal circuit boards is sufficient (> 21 V).

Activating the reduced run function of the inverter unit

A “reduced run” function is available for inverter units consisting of parallel-connected inverter modules. The function makes it possible to continue operation with limited current even if one (or more) module is out of service, for example, because of maintenance work. In principle, reduced run is possible with only one module, but the physical requirements of operating the motor still apply; for example, the modules remaining in use must be able to provide the motor with enough magnetizing current.

The wiring accessories needed during the procedure are available from ABB.

Starting reduced run operation

WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. If the inverter control unit is powered from the faulty module, connect the control unit to another 24 V DC power supply. We strongly recommend using an external power supply with inverter units consisting of parallel-connected modules.
3. Remove the module to be serviced from its bay.
4. If the STO (Safe torque off) function is in use, install the STO jumper wire set in place of the missing module (unless the module was the last on the chain).
5. Install an air baffle to the top module guide to block the airflow through the empty module bay.
6. In case the inverter unit has a DC switch with a charging circuit, disable the appropriate channel on the charging monitoring unit.
7. Switch on the power to the inverter unit.
8. Enter the number of inverter modules present into parameter 95.13 Reduced run mode.
9. Reset all faults and start the inverter unit. The maximum current is now automatically limited according to the new inverter configuration. A mismatch between the number of detected modules (95.14) and the value set in 95.13 will generate a fault.
10. If the STO function is in use, validate it as described in chapter The Safe torque off function (page 379).

Resuming normal operation

WARNING!
Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

1. Stop the drive and do the steps in section Electrical safety precautions (page 172) before you start the work.
2. Remove the STO (Safe torque off) jumper wire set (if present).
3. Remove the air baffle from the module bay.
4. Reinstall the module into its bay.
5. Reconnect the STO wiring (if used) to the module.
6. In case the inverter unit has a DC switch with a charging circuit, re-enable all channels on the charging monitoring unit.
7. Switch on the power to the inverter unit.
8. Enter “0” into parameter 95.13 Reduced run mode.
9. If the STO function is in use, validate it as described in chapter The Safe torque off function (page 379).

Functional safety components

The mission time of functional safety components is 20 years which equals the time during which failure rates of electronic components remain constant. This applies to the components of the standard Safe torque off circuit as well as any modules, relays and, typically, any other components that are part of functional safety circuits.

The expiry of mission time terminates the certification and SIL/PL classification of the safety function. The following options exist:

- Renewal of the whole drive and all optional functional safety module(s) and components.
- Renewal of the components in the safety function circuit. In practice, this is economical only with larger drives that have replaceable circuit boards and other components such as relays.

Note that some of the components may already have been renewed earlier, restarting their mission time. The remaining mission time of the whole circuit is however determined by its oldest component.

Contact your local ABB service representative for more information.

11

Ordering information

Contents of this chapter

This chapter lists the types and ordering codes of the unit components.

You can find the kit-specific assembly drawings, step-by-step instructions and detailed kit information on the Internet. Go to https://sites-apps.abb.com/sites/lvacdrivesengineeringsupport/content. If necessary, contact your local ABB representative.

Note:

- This chapter only lists the installation accessories available from ABB. All other parts must be sourced from a third party (such as Rittal) by the system integrator. For a listing, refer to the kit-specific installation instructions available at https://sites-apps.abb.com/sites/lvacdrivesengineeringsupport/content. For access, contact your local ABB representative.
- Parts that are labeled suitable for generic enclosures are not designed for any specific enclosure system. These parts are intended as a basis for further engineering, and may require additional parts to be fully usable.
  Installation accessories designed for generic enclosures are in fact designed for an inside width of 50 mm less than the nominal width of the enclosure. For example, a mechanical kit intended for 800 mm wide generic enclosure is designed for an inside width of 750 mm, and will not fit a 800 mm wide Rittal VX25 enclosure.

Kit code key

The kit codes shown in this chapter break down as follows.

The format of the kit code is x-w-s-yyy(-VX), for example, L-6-8-401 where:

- x = cooling method
  - A = air-cooled (some of these kits are also used with liquid-cooled drives)
  - L = liquid-cooled
- w = cabinet width
  - 4 = 400 mm
  - 6 = 600 mm
  - 8 = 800 mm
- s = module frame size / sizes
  - 1 = R1i
  - 2 = R2i
  - 3 = R3i
  - 4 = R4i
  - 5 = R5i
  - 6 = R6i/D6D
  - 7 = R7i/D7D/D7T
  - 8 = R8i/D8D/D8T
  - X = any, or not defined.
- yyy = consecutive numbering
  - 001…099 = Kits related to cabinets, for example, adapter plates

001…019	Common AC- and DC-related kits
020…049	Cabinet mechanics kits
050…059	Swing frame kits

  - 100…199 = Kits related to AC connection, for example, busbars

100…129	Kits with connection to AC
130…149	Kits with connection to module
150…199	Other kits related to AC connection

  - 200…299 = Kits related to DC connection, for example, busbars

200…229	Kits with connection to common DC
230…249	Kits with connection to module
250…299	Other kits related to DC connection

- 300…399 = Kits related to module installation, for example, mechanical supports

300…330	Module supporting kits, basic mechanical support
350…379	Shroud kits

- 400…499 = Other kits

400…419	Fan kits
420…439	Air guides
440…459	Cooling circuit kits


- VX = Kit specifically designed for the Rittal VX25 enclosure system. Many kits without this designation are also used with the VX25 system.

Frames R1i...R4i

Inverter modules

As standard, frame R1i to R4i inverter modules come with a cover that also acts as a control panel holder. The cover is fitted with a panel interface board (ZDPI-01) which enables the construction of a panel bus. The panel bus makes it possible to control several inverter units from a single control panel.



The modules can be ordered without the cover by specifying option code +0J414. (If desired, the panel bus can be constructed using FDPI-02 modules which are available separately.)

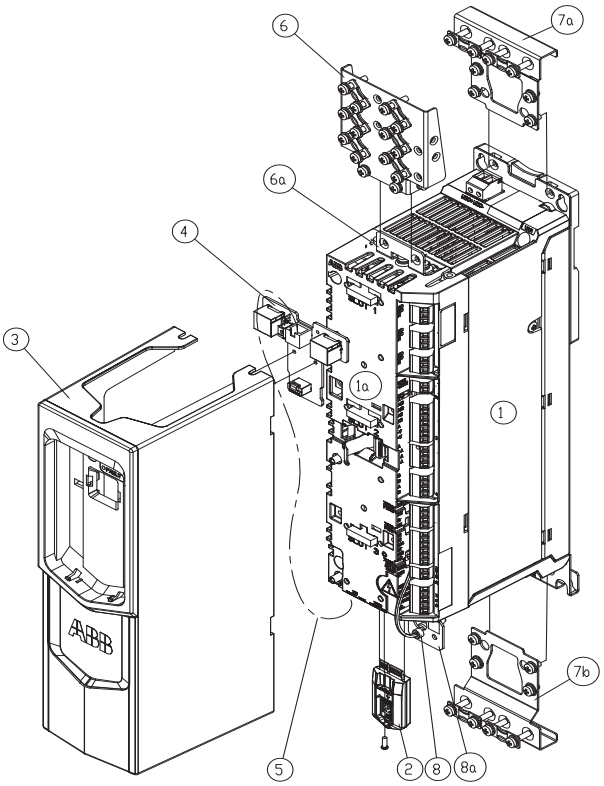Ordering code	Contents
[Module type] For example, **ACS880-104-008A0-3**	• Inverter module (1) with ZCU control unit (1a) • ZMU memory unit (2) with ACS880 primary control program. For availability of other control programs, contact your local ABB representative. • Module cover with control panel holder (3) • ZDPI-01 panel interface board (4) • Cable from ZDPI-01 to control unit (5) • Control cable grounding/strain relief plate (6) with adapter (6a) • Two power cable grounding/strain relief plates (7a, 7b) • Module air temperature sensor (8) with mounting plate (8a) • Cabinet cooling fan wire (connector with a stretch of wire).
[Module type] +0J414 For example, **ACS880-104-008A0-3 +0J414**	• Inverter module (1) with ZCU control unit (1a) • ZMU memory unit (2) with ACS880 primary control program. For availability of other control programs, contact your local ABB representative. • Control cable grounding/strain relief plate (6) with adapter (6a) • Two power cable grounding/strain relief plates (7a, 7b) • Module air temperature sensor (8) with mounting plate (8a) • Cabinet cooling fan wire (connector with a stretch of wire).
[Module type] +N8010 For example, **ACS880-104-008A0-3 +N8010** **ACS880-104-008A0-3 +0J414+N8010**	• ACS880 primary control program with application programmability using function blocks based on the IEC 61131-3 standard. For more information, see Programming manual: Drive application programming (IEC 61131-3) (3AUA0000127808 [English]).
	
For module types, see Ratings.	

Control panel

The control panel is not included with the module but must be ordered separately. One control panel is required for the commissioning of an ACS880 drive system, even if the Drive Composer PC tool is used.

The control panel can be flush mounted on the cabinet door with the help of a door mounting kit. For more information on the control panel, see ACS-AP-I, -S, -W and ACH-AP-H, -W Assistant control panels user's manual (3AUA0000085685 [English]).

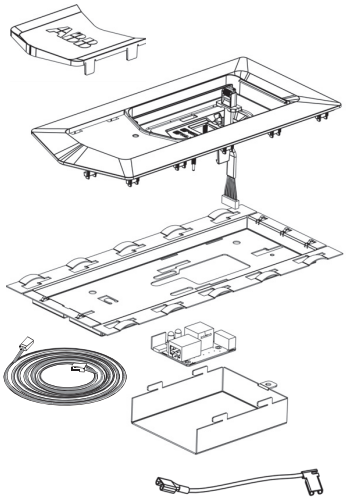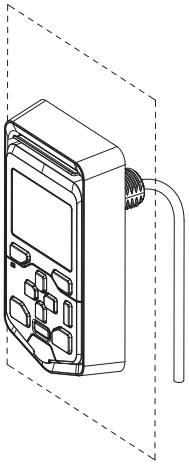Type	Description	Ordering code	Illustration
ACS-AP-W	Control panel with Bluetooth	3AXD50000025965	
DPMP-01	Door mounting kit (IP55)	3AUA0000108878	
DPMP-02	Door mounting kit (IP65)	3AXD50000009374	

For more information on the door mounting kits, such as the contents of the kit, see the installation manuals:

- DPMP-01 mounting platform for control panels installation guide (3AUA0000100140 [English])
- DPMP-02/03 mounting platform for control panels installations guide (3AUA0000136205 [English]).

DC-side components


Frame R1i…R4i inverter modules are connected to the DC bus through individual fuses. The fuses are installed on fuse bases that can be opened under no load. Microswitches are used for monitoring the open/closed state of the fuse bases. The fuse bases specified for frame sizes R3i and R4i include the microswitches as standard; the microswitches must be ordered separately for R1i and R2i fuse bases.

A main DC switch/disconnector and DC fuses for all the modules in the same enclosure can optionally be added. The main DC fuses are typically used to protect against short-circuits in the DC path to the module fuses when a high-power supply unit is used.

DC bus installation parts (for Rittal VX25 enclosures)

The brackets in this kit act as a mounting base for the busbar supports of the Rittal Flat-PLS DC bus and ensure its correct placement and alignment inside the cabinet line-up.

The designs shown in this manual for Rittal VX25 enclosures use the Rittal Flat-PLS busbar system. Make sure that the current in the drive system does not exceed the current-carrying capacity of the busbars.

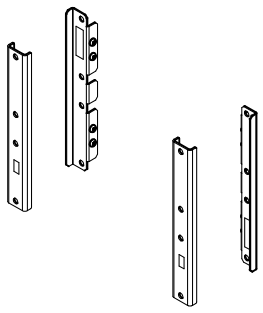Used with …	Qty	Ordering code	Kit code	Illustration
VX25 enclosure	1 kit per cubicle	3AXD50000333387	A-468-X-001-VX	 Instruction code: 3AXD50000333639

Module-specific DC fuses (IEC, UL)

Module type ACS880-104-...		Fuse		Qty	Ordering code
		Type	Data		
004A8-3 006A0-3	003A6-5 004A8-5	FWP-10A14Fa*	10 A, 660 V	2	3AUA0000089115
008A0-3	006A0-5	FWP-15A14Fa*	15 A, 660 V	2	3AUA0000089116
0011A-3	008A0-5	FWP-20A14Fa*	20 A, 660 V	2	3AUA0000089117
0014A-3	0011A-5	FWP-25A14Fa*	25 A, 660 V	2	3AUA0000089118
0018A-3	0014A-5 0018A-5	FWP-32A14Fa*	32 A, 660 V	2	3AUA0000089119
0025A-3	0025A-5	6,921 CP URQ 27x60/50**	50 A, 690 V	2	3AXD50000000189
0035A-3	0030A-5	6,921 CP URQ 27x60/63**	63 A, 690 V	2	3AXD50000000211
0044A-3	0035A-5	6,921 CP URQ 27x60/80**	80 A, 690 V	2	3AXD50000000213
0050A-3	0050A-5	6,921 CP URQ 27x60/100**	100 A, 690 V	2	3AXD50000000215
0061A-3	0061A-5	6,921 CP URQ 27x60/125**	125 A, 690 V	2	3AXD50000000217
0078A-3	0078A-5	6,921 CP URQ 27x60/160**	160 A, 690 V	2	3AXD50000000219
0094A-3 0100A-3	0094A-5	6,921 CP URQ 27x60/200**	200 A, 690 V	2	3AXD50000000221
*Size: 14 × 51 mm **Size: 27 × 60 mm					

Module-specific DC fuse bases (IEC, UL)

Module type ACS880-104-...		Fuse base		Qty	Ordering code
		Type	Data		
004A8-3 … 0018A-3	003A6-5 … 0018A-5	US141 (Z331153F)	14 × 51 mm 50 A, 690 V	2	3AUA0000089224 (fuse base)
				2	3AUA0000089228 (microswitch)
0025A-3 … 0100A-3	0025A-5 … 0094A-5	US271MI (R227600C)	27 × 60 mm 140 A, 800 V	2	3AUA0000089227 (microswitch included)

Main DC switch/disconnector kits

IEC				
Enclosure width	**DC switch/disconnector**		**Qty**	**Ordering code**
	Type	**Data**		
400 mm	OT400E11	2-pole, 400 A	1	3AXD50000000891
600 mm	OT630E11	2-pole, 630 A	1	3AXD50000000892
800 mm	OT400E22	4-pole, 400 A	1	3AXD50000000893

UL				
Enclosure width	**DC switch/disconnector**		**Qty**	**Ordering code**
	Type	**Data**		
400 mm	OT400U11	2-pole, 400 A	1	3AXD50000002764
600 mm	OT600U11	2-pole, 600 A	1	3AXD50000002765
800 mm	OT400U22	4-pole, 400 A	1	3AXD50000002767




Kit contents:




- DC switch/disconnector
- Shaft (12 × 325 mm)
- OHB___J12 handle with off/on indication
- OA1G10 normally-open auxiliary contact block.

Main DC fuses (IEC, UL)

Enclosure width	**DC fuse**		**Qty**	**Ordering code**
	Type	**Data**		
400 mm	170M4413	450 A, 690 V	2	68731623
600 mm	170M4418	800 A, 690 V	2	3AXD50000000250
800 mm	170M4413	450 A, 690 V	4	68731623

Busbars between main DC switch/disconnector and fuses

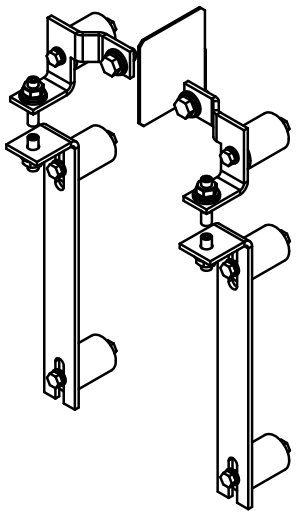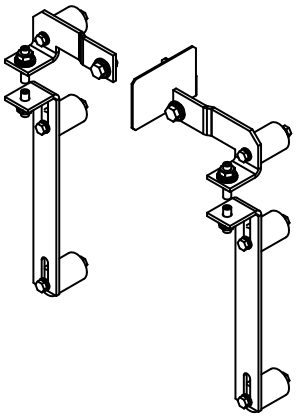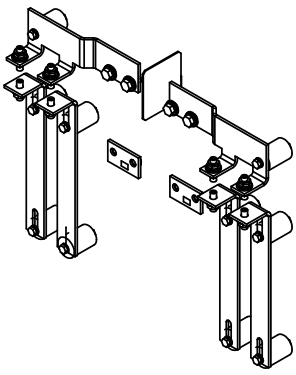Used with...	Qty	Ordering code	Kit code	Illustration
400 mm IEC	1	3AXD50000474493	A-4-1234-272-VX	 Instruction code: 3AXD50000453108
600 mm IEC	1	3AXD50000475964	A-6-1234-271-VX	 Instruction code: 3AXD50000460779
800 mm IEC	1	3AXD50000475933	A-8-1234-273-VX	 Instruction code: 3AXD50000474516

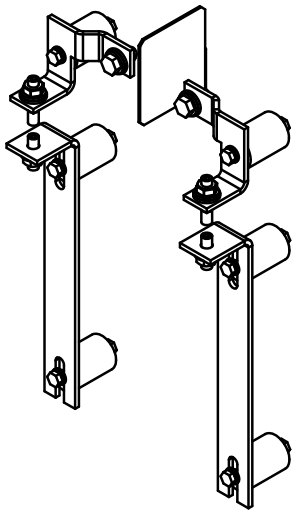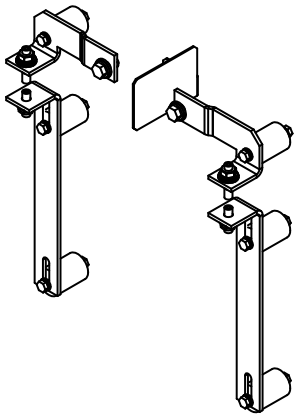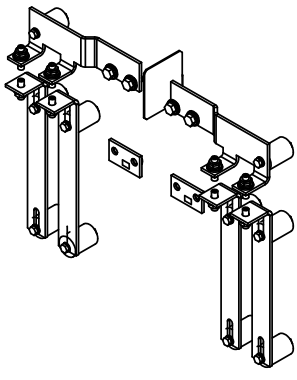Used with...	Qty	Ordering code	Kit code	Illustration
400 mm UL	1	3AXD50000003918	A-4-1234-274	 Instruction code: 3AXD50000003895
600 mm UL	1	3AXD50000475964	A-6-1234-271-VX	 Instruction code: 3AXD50000460779
800 mm UL	1	3AXD50000003919	A-8-1234-275	 Instruction code: 3AXD50000003875

AC-side components

Output (du/dt) filters

For information on the usage of output (du/dt) filters, see ACS880 multidrives cabinets and modules electrical planning instructions (3AUA0000102324 [English]).



Module type ACS880-104-...		Fuse base		Qty	Ordering code
		Type	Data		
004A8-3 006A0-3 008A0-3 0011A-3 0014A-3 0018A-3	003A6-5 004A8-5 006A0-5 008A0-5 0011A-5 0014A-5 0018A-5	NOCH0016-60	I_{RMS}: 15 A L: 150 µH Power loss: 110 W Cable size: 0.2 … 10 mm^2 Connection: M5	1	58982784
0025A-3 0035A-3	0025A-5 0030A-5 0035A-5	NOCH0030-60	I_{RMS}: 28 A L: 140 µH Power loss: 167 W Cable size: 0.5 … 16 mm^2 Connection: M5	1	58982792
0044A-3 0050A-3 0061A-3 0078A-3 0094A-3 0100A-3	0050A-5 0061A-5 0078A-5 0094A-5	NOCH0070-60	I_{RMS}: 65 A L: 115 µH Power loss: 210 W Cable size: 10…35 mm^2 Connection: M6	1	58982806


Mechanical installation accessories

These kits include parts that are required for installing the inverter module in the enclosure.

Mounting plate shroud kits


The plates are installed in front of the main DC switch and fuses. The module-specific fuse disconnectors are installed onto this plate.

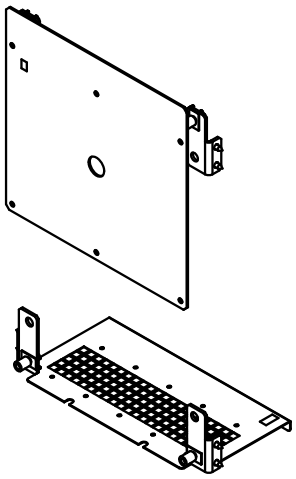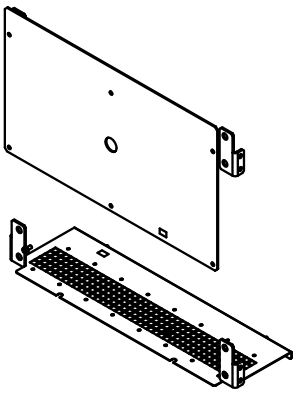Enclosure width	Qty	Ordering code	Kit code	Illustration
400 mm	1	3AXD50000456772	A-4-1234-403-VX	 Instruction code: 3AXD50000450060
600 mm	1	3AXD50000456819	A-6-1234-402-VX	 Instruction code: 3AXD50000461691

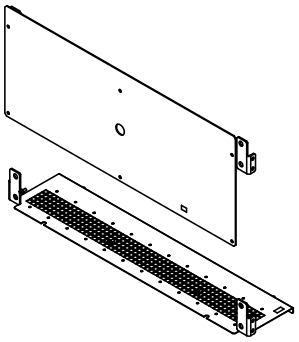Enclosure width	Qty	Ordering code	Kit code	Illustration
800 mm	1	3AXD50000475926	A-8-1234-404-VX	 Instruction code: 3AXD50000474882

Air guide kits

The air guide directs the hot air exiting the inverter module into the hot area at the rear of the cubicle.

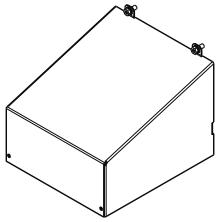Frame size	Qty	Ordering code	Kit code	Illustration
R1i	1	3AUA0000114398	A-468-1-422	 Instruction code: 3AUA0000114397
R2i	1	3AUA0000114330	A-468-2-423	
R3i	1	3AUA0000114404	A-468-3-424	
R4i	1	3AUA0000114405	A-468-4-425	

Frame R5i


Inverter module

As standard, frame R5i inverter modules come with a two-part front cover, the top part of which also acts as a control panel holder. The holder is fitted with a panel interface board (ZDPI-01) which enables the construction of a panel bus. The panel bus makes it possible to control several inverter units from a single control panel.

The modules can be ordered without the front covers by specifying option code +0J414. (If desired, the panel bus can be constructed using FDPI-02 modules which are available separately.)

Ordering code	Contents



[Module type]
For example,
ACS880-104-007A3-7
	• Inverter module (1) with ZCU-12 control unit (2)
	• ZMU memory unit (3) with ACS880 primary control program. For availability of other control programs, contact your local ABB representative.
	• Module front cover, top (4) including
	  • Control panel holder
	  • ZDPI-01 panel interface board
	  • Cable from ZDPI-01 to control unit
	• Module front cover, bottom (5)
	• Cabinet cooling fan wire (connector with a stretch of wire).

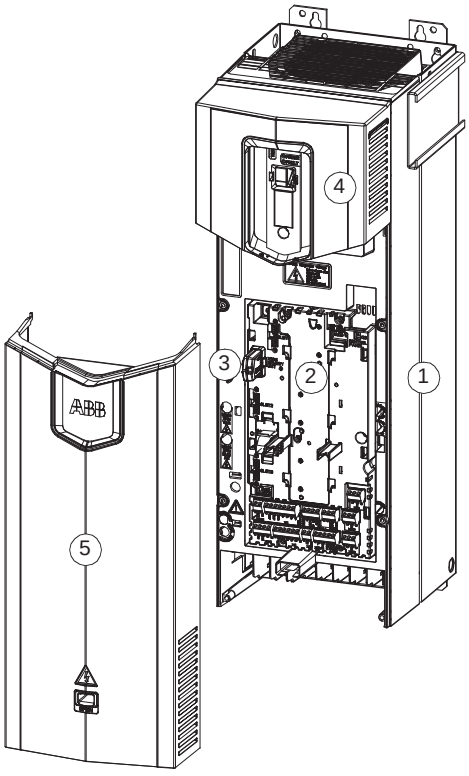[Module type] +C132 For example, **ACS880-104-007A3-7 +C132** **ACS880-104-007A3-7 +C132+0J414**	• Marine type approval. For more information, see ACS880 +C132 marine type-approved drive modules and module packages supplement (3AXD50000037752 [English]).
[Module type] +0J414 For example, **ACS880-104-007A3-7 +0J414**	• Inverter module (1) with ZCU-12 control unit (2) • ZMU memory unit (3) with ACS880 primary control program. For availability of other control programs, contact your local ABB representative. • Cabinet cooling fan wire (connector with a stretch of wire).
[Module type] +N8010 For example, **ACS880-104-007A3-7 +N8010** **ACS880-104-007A3-7 +0J414+N8010**	• ACS880 primary control program with application programmability using function blocks based on the IEC 61131-3 standard. For more information, see Programming manual: Drive application programming (IEC 61131-3) (3AUA0000127808 [English]).
	
For module types, see Ratings.	

Control panel

The control panel is not included with the module but must be ordered separately. One control panel is required for the commissioning of an ACS880 drive system, even if the Drive Composer PC tool is used.

The control panel can be flush mounted on the cabinet door with the help of a door mounting kit. For more information on the control panel, see ACS-AP-I, -S, -W and ACH-AP-H, -W Assistant control panels user's manual (3AUA0000085685 [English]).

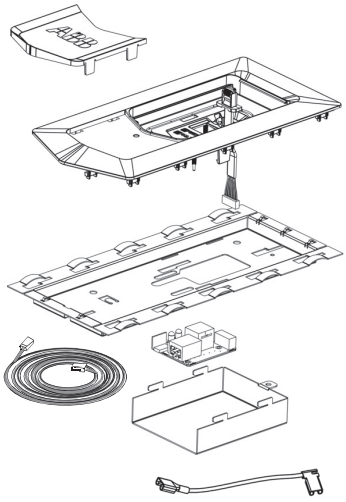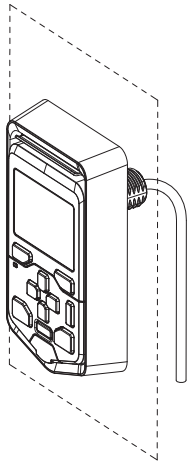Type	Description	Ordering code	Illustration
ACS-AP-W	Control panel with Bluetooth	3AXD50000025965	
DPMP-01	Door mounting kit (IP55)	3AUA0000108878	
DPMP-02	Door mounting kit (IP65)	3AXD50000009374	

For more information on the door mounting kits, such as the contents of the kit, see the installation manuals:

- DPMP-01 mounting platform for control panels installation guide (3AUA0000100140 [English])
- DPMP-02/03 mounting platform for control panels installations guide (3AUA0000136205 [English]).

DC-side components


Frame R5i inverter modules are connected to the DC bus through individual fuses. The fuses are installed on fuse bases that can be opened under no load. Microswitches are used for monitoring the open/closed state of the fuse bases. The fuse bases listed below include the microswitches as standard.

A main DC switch/disconnector and DC fuses for all the modules in the same enclosure can optionally be added. The main DC fuses are typically used to protect against short-circuits in the DC path to the module fuses when a high-power supply unit is used.

DC bus installation parts (for Rittal VX25 enclosures)

The brackets in this kit act as a mounting base for the busbar supports of the Rittal Flat-PLS DC bus and ensure its correct placement and alignment inside the cabinet line-up.

The designs shown in this manual for Rittal VX25 enclosures use the Rittal Flat-PLS busbar system. Make sure that the current in the drive system does not exceed the current-carrying capacity of the busbars.

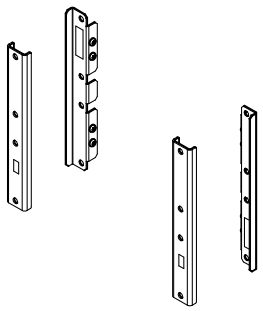Used with ...	Qty	Ordering code	Kit code	Illustration
VX25 enclosure	1 kit per cubicle	3AXD50000333387	A-468-X-001-VX	 Instruction code: 3AXD50000333639

Module-specific DC fuses (IEC, UL)

Module type ACS880-104-...	Fuse		Qty	Ordering code
	Type	Data		
007A3-7 009A8-7 014A2-7 0018A-7	1021 CP URB 27x60/40*	40 A, 1000 V	2	3AUA0000089197
0022A-7 0027A-7 0035A-7 0042A-7 0052A-7	1021 CP URB 27x60/100*	100 A, 1000 V	2	3AUA0000089211
*Size: 27 × 60 mm				

Module-specific DC fuse bases (IEC, UL)

Module type ACS880-104-...	Fuse base		Qty	Ordering code
	Type	Data		
007A3-7 009A8-7 014A2-7 0018A-7 0022A-7 0027A-7 0035A-7 0042A-7 0052A-7	PS272PREMCPS (N220076)	27 × 60 mm 250 A, 1250 V DC	1	3AXD50000012958 (microswitch included)

Main DC switch/disconnector kits

IEC					
Enclosure width	Qty of modules	DC switch/disconnector		Qty	Ordering code
		Type	Data		
400 mm	2 × R5i	OT200E11	2-pole, 200 A	1	3AXD50000015608
600 mm	4 × R5i	OT400E11	2-pole, 400 A	1	3AXD50000001306

UL					
Enclosure width	Qty of modules	DC switch/disconnector		Qty	Ordering code
		Type	Data		
400 mm	2 × R5i	OT200U11	2-pole, 200 A	1	3AXD50000024411
600 mm	4 × R5i	OT400U11	2-pole, 400 A	1	3AXD50000002764


Kit contents:


- DC switch/disconnector
- Shaft (6 × 430 mm for 400 mm enclosure width, 12 × 325 mm for 600 mm enclosure width)
- Handle with off/on indication (OHB65J6 for 400 mm enclosure width, OHB125J12 for 600 mm enclosure width)
- OA1G10 normally-open auxiliary contact block.

Main DC fuses (IEC, UL)

Enclosure width	Qty of modules	Fuse			Qty	Ordering code
		Type	Data	Size		
400 mm	2 × R5i	170M4389	200 A, 1250 V	1	2	3AXD50000010195
600 mm	4 × R5i	170M4393	400 A, 1250 V	1	2	3AUA0000076327

DC busbars (IEC, UL)

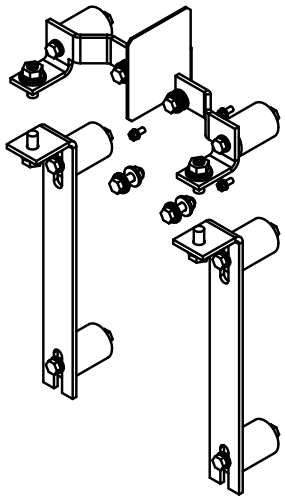Enclosure width	Qty	Ordering code	Kit code	Illustration
400 mm	1	3AXD50000456802	A-4-5-276-VX	 Instruction code: 3AXD50000458110

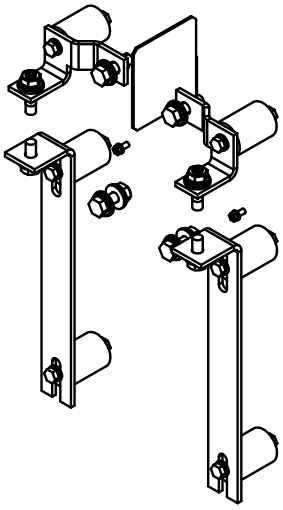Enclosure width	Qty	Ordering code	Kit code	Illustration
600 mm	1	3AXD50000456826	A-6-5-277-VX	 Instruction code: 3AXD50000461332

AC-side components

Output (du/dt) filters

For information on the usage of output (du/dt) filters, see ACS880 multidrives cabinets and modules electrical planning instructions (3AUA0000102324 [English]).



Module type ACS880-104-...	Filter		Qty	Ordering code
	Type	Data		
007A3-7 009A8-7 014A2-7	NOCH0016-60	I_{RMS}: 15 A L: 150 µH Power loss: 110vW Cable size: 0.2 … 10 mm^2 Connection: M5	1	58982784
0018A-7 0022A-7 0027A-7	NOCH0030-60	I_{RMS}: 28 A L: 140 µH Power loss: 167 W Cable size: 0.5 … 16 mm^2 Connection: M5	1	58982792
0035A-7 0042A-7 0052A-7	NOCH0070-60	I_{RMS}: 65 A L: 115 µH Power loss: 210 W Cable size: 10…35 mm^2 Connection: M6	1	58982806

Mechanical installation accessories

These kits include parts that are required for installing the inverter module in the enclosure.



Mounting plate shroud kits

The shrouds are to be attached to the Rittal partial mounting plate mounted in front of the DC switch. The module-specific fuse disconnectors are to be installed onto the vertical plate.

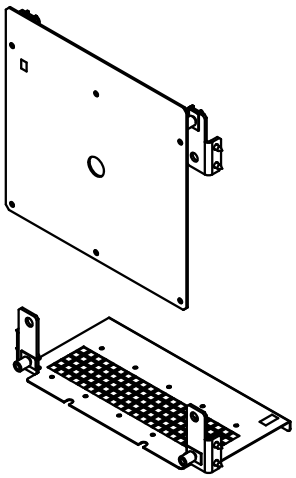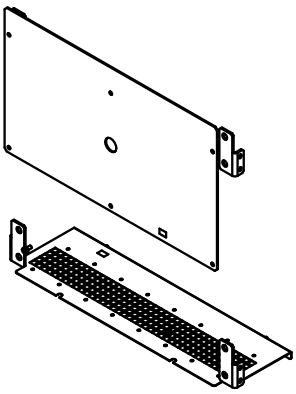Enclosure width	Qty	Ordering code	Kit code	Illustration
400 mm	1	3AXD50000456772	A-4-1234-403-VX	 Instruction code: 3AXD50000450060
600 mm	1	3AXD50000456819	A-6-1234-402-VX	 Instruction code: 3AXD50000461691

Fuse base shroud kit

IP20 protection of the DC fuse bases requires shrouding both above and below. One shroud kit contains the shrouds for each dual fuse base.

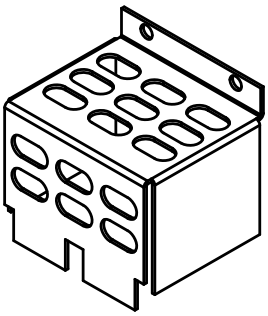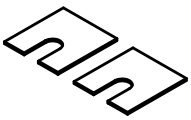Used with...	Qty	Ordering code	Kit code	Illustration
R5i modules installed in 400 or 600 mm wide cubicles	1 per module	3AXD50000456796	A-X-5-356-VX	  Instruction code: 3AXD50000458424

Frames R6i and R7i

Inverter modules

Deliveries of frame R6i and R7i inverter modules include the following items:

Ordering code	Contents
[Module type] For example, ACS880-104-0210A-3	• Inverter module with ZCU control unit • ZMU memory unit with ACS880 primary control program. For availability of other control programs, contact your local ABB representative.
[Module type] +C132 For example, ACS880-104-0210A-3 +C132 ACS880-104-0210A-3 +C132 +F272	• Marine type approval. For more information, see ACS880 +C132 marine type-approved drive modules and module packages supplement (3AXD50000037752 [English]).
[Module type] +F272 For example, ACS880-104-0210A-3 +F272	• Inverter module with ZCU control unit and internal charging circuit (note that R7i requires additional external components) • ZMU memory unit with ACS880 primary control program. For availability of other control programs, contact your local ABB representative.
[Module type] +V992 For example, ACS880-104-0210A-3 +V992 ACS880-104-0210A-3 +V992 +F272	• Inverter module with ZCU control unit (hardware version +V992) • ZMU memory unit with ACS880 primary control program. Note that ACS880 primary control program v3.40 and later versions support option +V992. For availability of other control programs, contact your local ABB representative.
[Module type] +V992 +C249 For example, ACS880-104-0210A-3 +V992 +C249 ACS880-104-0210A-3 +V992 +C249 +F272	• Inverter module with BCU or UCU control unit (hardware version +V992) • BPA power unit adapter mounted onto the module for connection of the control unit. The control unit is to be mounted outside the module. • Memory unit with ACS880 primary control program. Note that ACS880 primary control program v3.40 and later versions support option +V992. For availability of other control programs, contact your local ABB representative.
[Module type] +N8010 For example, ACS880-104-0210A-3 +N8010 ACS880-104-0210A-3 +F272 +N8010	• ACS880 primary control program with application programmability using function blocks based on the IEC 61131-3 standard. For more information, see Programming manual: Drive application programming (IEC 61131-3) (3AUA0000127808 [English]).
For module types, see Ratings.	

Note: The following components are also required to construct a working unit and must be ordered separately:

- An ACS-AP-x control panel is required for the commissioning of an ACS880 drive system, even if the Drive composer PC tool is used.
- Common mode filters.



The other parts listed in this chapter for these frame sizes

- may be required by the application (such as a DC switch/disconnector), or
- make the installation or use of the module easier.

Control panel

The control panel is not included with the module but must be ordered separately. One control panel is required for the commissioning of an ACS880 drive system, even if the Drive Composer PC tool is used.

The control panel can be flush mounted on the cabinet door with the help of a door mounting kit. For more information on the control panel, see ACS-AP-I, -S, -W and ACH-AP-H, -W Assistant control panels user's manual (3AUA0000085685 [English]).

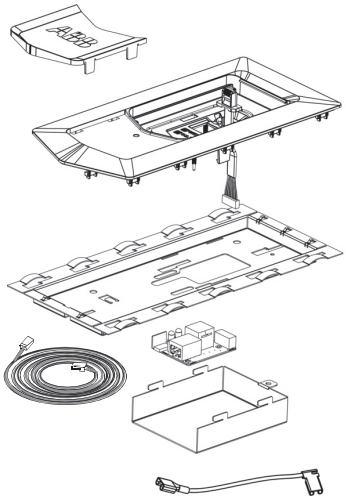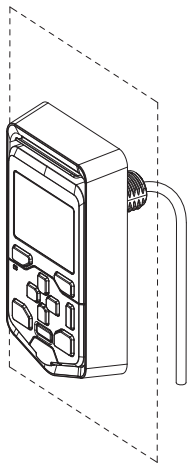Type	Description	Ordering code	Illustration
ACS-AP-W	Control panel with Bluetooth	3AXD50000025965	
DPMP-01	Door mounting kit (IP55)	3AUA0000108878	
DPMP-02	Door mounting kit (IP65)	3AXD50000009374	

For more information on the door mounting kits, such as the contents of the kit, see the installation manuals:

- DPMP-01 mounting platform for control panels installation guide (3AUA0000100140 [English])
- DPMP-02/03 mounting platform for control panels installations guide (3AUA0000136205 [English]).

Control electronics

If frame R6i or R7i module is ordered with option +C249, BCU-02 or UCU control unit kit needs to be ordered. Option +C249 removes ZCU control unit from R6i and R7i modules and replaces it with the interface for fiber optic cable connection, BPA-01 board. BPA-01 board is mounted onto the R6i or R7i module. BCU or UCU control unit can be installed outside the module, and the module can be installed into cabinet that is less than 600 mm in depth. BCU-02 or UCU control unit can control DC voltage which is useful in certain applications (eg. marine applications).

Control unit (BCU)

Frame size	Control unit type	Ordering code
R6i, R7i	BCU-02	3AXD50000003417

Control unit (UCU)

Frame size	Type	Ordering code (for options, see below)
R6i, R7i	UCU-22	ACS880UCU-104-22-0

Ordering code format	Option codes
[Control unit type] + code [+code]… For example, ACS880UCU-104-22-0+N8010	**+N8010:** Application programming

The UCU control unit kit contains:

- UCU control unit with USCA-02 adapters.
- UMU-01 memory unit with the control program.

The following option module is to be installed on the control unit and must be ordered separately if communication between supply and drive units is needed:

- RDCO-04C DDCS communication option module (ordering code: 3AXD50000868056).

Fiber optic cables

Each inverter module is connected to the inverter control unit with a pair of fiber optic cables. If frame R6i or R7i module is ordered with option +C249, fiber optic cables need to be ordered.

The following kits, each contain a pair of plastic fibre optic cables. They are needed in communication between the control unit and the power (inverter/supply/brake/converter) module.

Length	Kit type designation	Ordering code
2 m (6.6 ft)	NLWC-02	58988821
3 m (9.8 ft)	NLWC-03	58948233
5 m (16.4 ft)	NLWC-05	58948250
7 m (23 ft)	NLWC-07	58948268
10 m (32.8 ft)	NLWC-10	58948276

DC-side components

Frame R6i and R7i inverter modules are connected to the DC bus through fuses. The design presented in this manual has flush-end fuse blocks bolted to the DC busbars.

A DC switch/disconnector can be installed if quick isolation of the module from the DC bus is required. One of the auxiliary contacts of the switch is used for monitoring the open/closed state of the switch.

A capacitor charging circuit must be fitted if

- the inverter module is connected to the DC bus through a DC switch/disconnector, or
- the inverter unit is directly connected to the DC bus and the supply unit of the system does not have a charging capability.


If a charging circuit is required, the inverter module is to be ordered using option code +F272. With frame R6i, all charging components are built into the module. R7i modules with option code +F272 require an external charging contactor and resistors, which are included in the DC connection kit for frame R7i.

The common mode filters are mounted onto the busbars that connect to the DC input of the inverter module.

DC bus installation parts (for Rittal VX25 enclosures)

The brackets in this kit act as a mounting base for the busbar supports of the Rittal Flat-PLS DC bus and ensure its correct placement and alignment inside the cabinet line-up.

The designs shown in this manual for Rittal VX25 enclosures use the Rittal Flat-PLS busbar system. Make sure that the current in the drive system does not exceed the current-carrying capacity of the busbars.

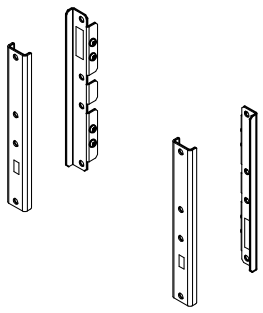Used with ...	Qty	Ordering code	Kit code	Illustration
VX25 enclosure	1 kit per cubicle	3AXD50000333387	A-468-X-001-VX	 Instruction code: 3AXD50000333639

DC fuses

Module type ACS880-104-...	Fuse			Qty	Ordering code
	Type	Data	Size		
0140A-3	170M4410	315 A, 690 V	1	2	3AXD50000000234
0170A-3	170M4412	400 A, 690 V	1	2	3AXD50000000238
0210A-3	170M4413	450 A, 690 V	1	2	68731623
0250A-3	170M4414	500 A, 690 V	1	2	3AXD50000000242
0300A-3	170M4416	630 A, 690 V	1	2	3AXD50000000246
0350A-3	170M4417	700 A, 690 V	1	2	64607383
0110A-5	170M4409	250 A, 690 V	1	2	3AUA0000066038
0140A-5	170M4410	315 A, 690 V	1	2	3AXD50000000234
0170A-5	170M4412	400 A, 690 V	1	2	3AXD50000000238
0200A-5	170M4412	400 A, 690 V	1	2	3AXD50000000238
0240A-5	170M4414	500 A, 690 V	1	2	3AXD50000000242
0300A-5	170M4416	630 A, 690 V	1	2	3AXD50000000246
0340A-5	170M4417	700 A, 690 V	1	2	64607383
0062A-7	170M3392	125 A, 1250 V	1*	2	3AXD50000010198
0082A-7	170M4388	160 A, 1250 V	1	2	3AUA0000114934
0100A-7	170M4389	200 A, 1250 V	1	2	3AXD50000010195
0130A-7	170M4390	250 A, 1250 V	1	2	3AUA0000114933
0140A-7	170M4391	315 A, 1250 V	1	2	3AXD50000010196
0190A-7	170M4392	350 A, 1250 V	1	2	3AXD50000010197
0220A-7	170M4393	400 A, 1250 V	1	2	3AUA0000076327
0270A-7	170M4395	500 A, 1100 V	1	2	3AUA0000114932

Module type ACS880-104-...+V992	Fuse (IEC)			Qty	Ordering code
	Type	Data	Size		
0140A-3	170M4410	315 A, 690 V	1	2	3AXD50000000234
0170A-3	170M4412	400 A, 690 V	1	2	3AXD50000000238
0210A-3	170M4413	450 A, 690 V	1	2	68731623
0250A-3	170M4414	500 A, 690 V	1	2	3AXD50000000242
0300A-3	170M4416	630 A, 690 V	1	2	3AXD50000000246
0350A-3	170M4417	700 A, 690 V	1	2	64607383
0110A-5	170M4409	250 A, 690 V	1	2	3AUA0000066038
0140A-5	170M4410	315 A, 690 V	1	2	3AXD50000000234
0170A-5	170M4412	400 A, 690 V	1	2	3AXD50000000238
0200A-5	170M4412	400 A, 690 V	1	2	3AXD50000000238
0240A-5	170M4414	500 A, 690 V	1	2	3AXD50000000242
0300A-5	170M4416	630 A, 690 V	1	2	3AXD50000000246
0340A-5	170M4417	700 A, 690 V	1	2	64607383
0062A-7	170M3392	125 A, 1250 V	1*	2	3AXD50000010198
0082A-7	170M4388	160 A, 1250 V	1	2	3AUA0000114934
0100A-7	170M4389	200 A, 1250 V	1	2	3AXD50000010195
0130A-7	170M4390	250 A, 1250 V	1	2	3AUA0000114933
0140A-7	170M4391	315 A, 1250 V	1	2	3AXD50000010196
0190A-7	170M4392	350 A, 1250 V	1	2	3AXD50000010197
0220A-7	170M4393	400 A, 1250 V	1	2	3AUA0000076327
0270A-7	170M4395	500 A, 1100 V	1	2	3AUA0000114932

Module type ACS880-104-...+V992	Fuse (UL)			Qty	Ordering code
	Type	Data	Size		
0140A-3	170M4410	315 A, 700 V	1	2	3AXD50000000234
0170A-3	170M4412	400 A, 700 V	1	2	3AXD50000000238
0210A-3	170M4413	450 A, 700 V	1	2	3AXD50001114732
0250A-3	170M4414	500 A, 700 V	1	2	3AXD50000000242
0300A-3	170M4416	630 A, 700 V	1	2	3AXD50000000246
0350A-3	170M4417	700 A, 700 V	1	2	3AXD50001114749
0110A-5	170M4389	200 A, 1300 V	1	2	3AXD50000010195
0140A-5	170M4390	250 A, 1300 V	1	2	3AUA0000114933
0170A-5	170M4391	315 A, 1300 V	1	2	3AXD50000010196
0200A-5	170M4393	400 A, 1300 V	1	2	3AUA0000076327
0240A-5	170M6541	450 A, 1300 V	3	2	63919021
0300A-5	170M6543	550 A, 1300 V	3	2	3AXD50000698752
0340A-5	170M6545	700 A, 1300 V	3	2	63919110
0062A-7	170M3392	125 A, 1300 V	1*	2	3AXD50000010198
0082A-7	170M4388	160 A, 1300 V	1	2	3AUA0000114934
0100A-7	170M4389	200 A, 1300 V	1	2	3AXD50000010195
0130A-7	170M4390	250 A, 1300 V	1	2	3AUA0000114933
0140A-7	170M4391	315 A, 1300 V	1	2	3AXD50000010196
0190A-7	170M4392	350 A, 1300 V	1	2	3AXD50000010197
0220A-7	170M4393	400 A, 1300 V	1	2	3AUA0000076327
0270A-7	170M6543	550 A, 1300 V	3	2	3AXD50000698752

DC switch/disconnector kits

IEC

Module type ACS880-104-...			DC switch/disconnector		Qty	Ordering code
			Type	Data		
0140A-3 0170A-3 0210A-3 0250A-3	0110A-5 0140A-5 0170A-5 0200A-5 0240A-5	0062A-7 0082A-7 0100A-7 0130A-7 0140A-7 0190A-7 0220A-7 0270A-7	OT400E11	2-pole, 400 A	1	3AXD50000001306
0300A-3 0350A-3	0300A-5 0340A-5		OT630E11	2-pole, 630 A	1	3AXD50000001307

UL						
Module type ACS880-104-...			**DC switch/disconnector**		**Qty**	**Ordering code**
			Type	**Data**		
0140A-3 0170A-3 0210A-3 0250A-3	0110A-5 0140A-5 0170A-5 0200A-5 0240A-5	0062A-7 0082A-7 0100A-7 0130A-7 0140A-7 0190A-7 0220A-7 0270A-7	OT400U11	2-pole, 400 A	1	3AXD50000002791
0300A-3 0350A-3	0340A-5 0300A-5		OT600U11	2-pole, 600 A	1	3AXD50000002792

Kit contents:

- DC switch/disconnector
- Shaft (12 × 395 mm)
- OHB___J12 handle with off/on indication
- OA1G10 normally-open auxiliary contact block.

Charging kit (R7i only)


Module type ACS880-104-...			**Qty**	**Ordering code**
0300A-3 0350A-3	0300A-5 0340A-5		1	3AXD50000001328
		0220A-7 0270A-7	1	3AXD50000018982
0300A-3 +V992 0350A-3 +V992	0300A-5 +V992 0340A-5 +V992	0220A-7 +V992 0270A-7 +V992		

Kit contents:



- AF190-30-00-13 charging contactor
- 2 pcs CEL19-10 auxiliary contacts
- 2 pcs 36 ohm charging resistor
- Wire set.





DC connection kit for Rittal VX25 enclosures



This kit contains the busbars from the DC bus towards the module as well as an air guide, mounting plate, insulators and screws. The assembly incorporates the electrical components (such as DC fuses, DC switch/disconnector, and charging components) whenever required; note that the electrical parts are to be ordered separately as detailed above.

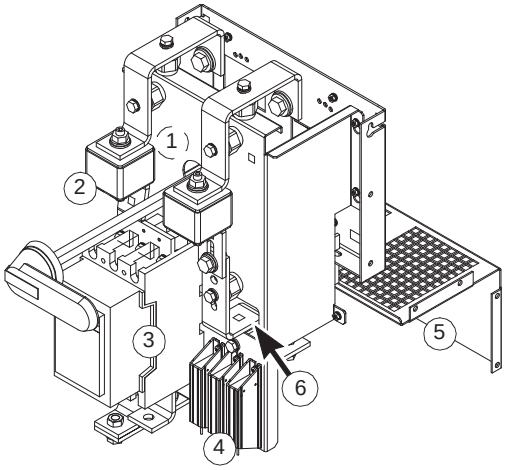

Item	Explanation
1	DC switch/disconnector (obscured by mounting plate)
2	DC fuses
3	Charging contactor (R7i only)
4	Charging resistors (R7i only; two resistors)
5	Air guide
6	Connection to DC busbars

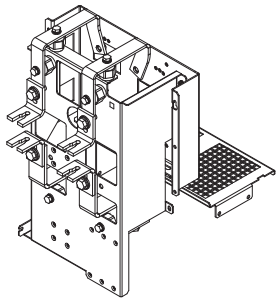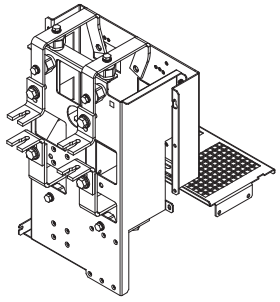
Used with...	Qty	Ordering code	Kit code	Illustration
Frame R6i without DC switch/disconnector	1	3AXD50000459094	A-4-67-283-VX	 Instruction code: 3AXD50000444489
Frame size R6i with DC switch/disconnector (IEC)	1	3AXD50000459100	A-4-6-281-VX	 Instruction code: 3AXD50000445202

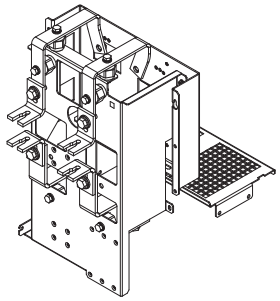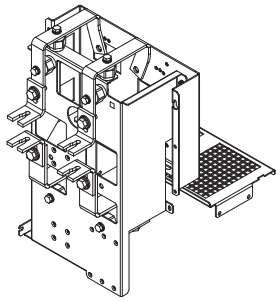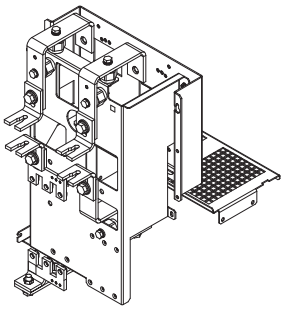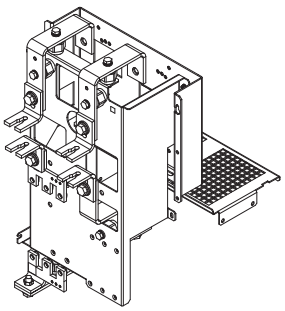Used with...	Qty	Ordering code	Kit code	Illustration
Frame size R6i with DC switch/disconnector (UL)	1	3AXD50000459117	A-4-6-285-VX	 Instruction code: 3AXD50000445325
Frame R7i without DC switch/disconnector or charging circuit	1	3AXD50000459094	A-4-67-283-VX	 Instruction code: 3AXD50000444489
Frame size R7i (400/500 V) without DC switch/disconnector, with charging circuit	1	3AXD50000459063	A-4-7-282-VX	 Instruction code: 3AXD50000445097
Frame size R7i (690 V) without DC switch/disconnector, with charging circuit	1	3AXD50000459087	A-4-7-287-VX	 Instruction code: 3AXD50000445332

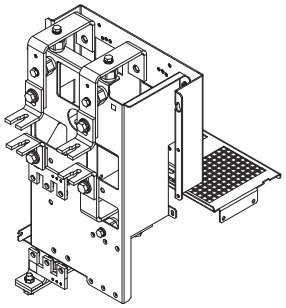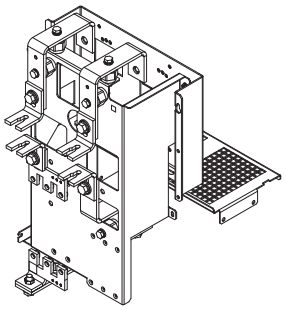Used with...	Qty	Ordering code	Kit code	Illustration
Frame size R7i (400/500 V) with DC switch/disconnector and charging circuit	1	3AXD50000459056	A-4-7-280-VX	 Instruction code: 3AXD50000445257
Frame size R7i (690 V) with DC switch/disconnector and charging circuit	1	3AXD50000459070	A-4-7-286-VX	 Instruction code: 3AXD50000445356


DC busbars with common mode filter holder for Rittal VX25 enclosures

This kit contains the busbars that connect to the DC input of the inverter module. The busbars have a holder for the common mode filters; note that the filters shown in the illustration are not included in the kit.

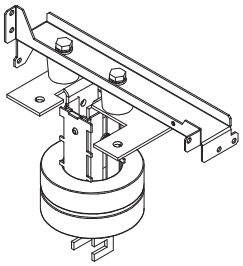Used with...	Qty	Ordering code	Kit code	Illustration
R6i R7i	1	3AXD50000458509	A-4-67-241-VX	 Instruction code: 3AXD50000444304 **Note:** Filters to be ordered separately


DC busbars with fuse and common mode filter holders for generic enclosures

This kit contains the busbars that connect to the DC input of the inverter module. The kit is mounted onto the module. It has screws for cable lug connection as well as a holder for the DC fuses and common mode filters. Note that the fuses and filters are not included in the kit.

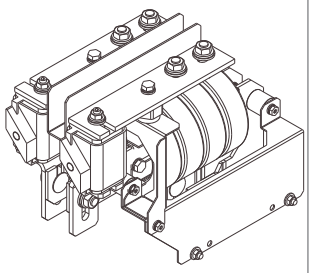Used with...	Qty	Ordering code	Kit code	Illustration
R6i R7i	1	3AXD50000023329	A-0-67-244	 Instruction code: 3AXD50000023500 **Note:** Fuses and filters to be ordered separately

Common mode filters



Common mode filtering reduces bearing currents and is required for electromagnetic compatibility (EMC). The filtering is implemented by installing two toroidal cores onto the DC busbars. The cores must be ordered separately.

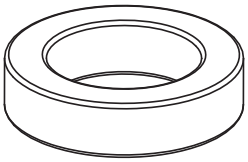Used with	Qty	Ordering code	Kit code	Illustration
All enclosure types	2 per module	3AUA0000032859	-	 Instruction code: 3AUA0000123359

AC-side components


AC busbar kit

This kit contains the busbars for connection of the motor cable. Note that the output (du/dt) filters (if required) are to be ordered separately (see further below).

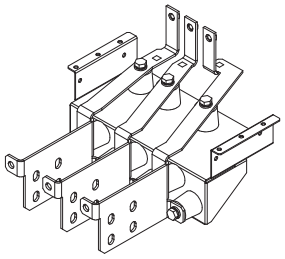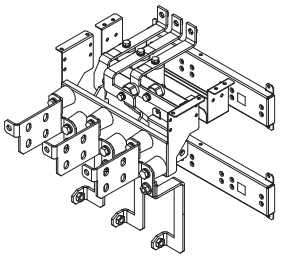Used with...	Qty	Ordering code	Kit code	Illustration
R6i R7i (without output filters)	1	3AXD50000459032	A-4-67-181-VX	 Instruction code: 3AXD50000452798
R6i R7i (with output filters)	1	3AXD50000459049	A-4-67-186-VX	 Instruction code: 3AXD50000452439 **Note:** Filters to be ordered separately

Output (du/dt) filters

For information on the usage of output (du/dt) filters, see ACS880 multidrives cabinets and modules electrical planning instructions (3AUA0000102324 [English]).

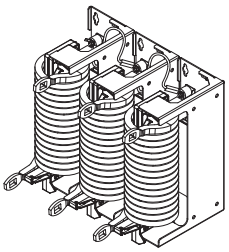
Used with...	Qty	Ordering code	Filter type	Illustration
R6i R7i	1	3AXD50000018892	BOCH-350A-7	 Instruction code: 3AXD50000018989, 3AXD50000027070

Mechanical installation accessories and tools

These kits include parts that are used for installing the inverter module in the Rittal VX25 enclosure.

Inverter module mounting parts

This kit contains the rails on which the inverter module rests, and provides air baffles for blocking unwanted air flow along the sides of the module.

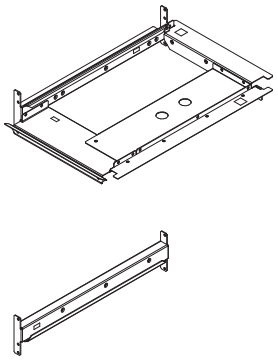
Used with...	Qty	Ordering code	Kit code	Illustration
R6i R7i	1	3AXD50000459018	A-4-67-302-VX	 Instruction code: 3AXD50000453337

Shrouding

Used with...	Qty	Ordering code	Kit code	Illustration
R6i R7i	1	3AXD50000458493	A-4-67-350-VX	 Instruction code: 3AXD50000453252

Lifting device

Use the lifting device when replacing a module in the Rittal VX25 enclosure.

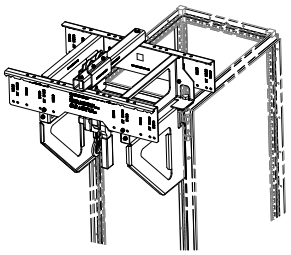Frame	Enclosure	Qty	Ordering code	Illustration
R6i R7i	Rittal VX25	1	3AXD50000439997	 Instruction code: 3AXD50000210268, 3AXD50000439409

Frame R8i and multiples

Inverter modules

Inverter units consisting of frame R8i inverter modules are to be ordered as separate modules. For inverter unit ratings, see the technical data.

Inverter unit		Modules used	
Type	**Frame size**	**Qty**	**Ordering code**
U_N = 400 V			
ACS880-104-0470A-3	R8i	1	ACS880-104-0470A-3
ACS880-104-0640A-3	R8i	1	ACS880-104-0640A-3
ACS880-104-0760A-3	R8i	1	ACS880-104-0760A-3
ACS880-104-0830A-3	R8i	1	ACS880-104-0830A-3
ACS880-104-0900A-3	R8i	1	ACS880-104-0900A-3
ACS880-104-1250A-3	2×R8i	2	ACS880-104-0640A-3 +E205
ACS880-104-1480A-3	2×R8i	2	ACS880-104-0760A-3 +E205
ACS880-104-1760A-3	2×R8i	2	ACS880-104-0900A-3 +E205
ACS880-104-2210A-3	3×R8i	3	ACS880-104-0760A-3 +E205
ACS880-104-2610A-3	3×R8i	3	ACS880-104-0900A-3 +E205
ACS880-104-3450A-3	4×R8i	4	ACS880-104-0900A-3 +E205
ACS880-104-4290A-3	5×R8i	5	ACS880-104-0900A-3 +E205
ACS880-104-5130A-3	6×R8i	6	ACS880-104-0900A-3 +E205
U_N = 500 V			
ACS880-104-0440A-5	R8i	1	ACS880-104-0440A-5
ACS880-104-0590A-5	R8i	1	ACS880-104-0590A-5
ACS880-104-0670A-5	R8i	1	ACS880-104-0670A-5
ACS880-104-0740A-5	R8i	1	ACS880-104-0740A-5
ACS880-104-0810A-5	R8i	1	ACS880-104-0810A-5
ACS880-104-1150A-5	2×R8i	2	ACS880-104-0590A-5 +E205
ACS880-104-1450A-5	2×R8i	2	ACS880-104-0740A-5 +E205
ACS880-104-1580A-5	2×R8i	2	ACS880-104-0810A-5 +E205
ACS880-104-2150A-5	3×R8i	3	ACS880-104-0740A-5 +E205
ACS880-104-2350A-5	3×R8i	3	ACS880-104-0810A-5 +E205
ACS880-104-3110A-5	4×R8i	4	ACS880-104-0810A-5 +E205
ACS880-104-3860A-5	5×R8i	5	ACS880-104-0810A-5 +E205
ACS880-104-4610A-5	6×R8i	6	ACS880-104-0810A-5 +E205

Inverter unit		Modules used	
Type	**Frame size**	**Qty**	**Ordering code**
U_N = 690 V			
ACS880-104-0340A-7	R8i	1	ACS880-104-0340A-7 +E205
ACS880-104-0410A-7	R8i	1	ACS880-104-0410A-7 +E205
ACS880-104-0480A-7	R8i	1	ACS880-104-0480A-7 +E205
ACS880-104-0530A-7	R8i	1	ACS880-104-0530A-7 +E205
ACS880-104-0600A-7	R8i	1	ACS880-104-0600A-7 +E205
ACS880-104-0800A-7	2×R8i	2	ACS880-104-0410A-7 +E205
ACS880-104-1030A-7	2×R8i	2	ACS880-104-0530A-7 +E205
ACS880-104-1170A-7	2×R8i	2	ACS880-104-0600A-7 +E205
ACS880-104-1540A-7	3×R8i	3	ACS880-104-0530A-7 +E205
ACS880-104-1740A-7	3×R8i	3	ACS880-104-0600A-7 +E205
ACS880-104-2300A-7	4×R8i	4	ACS880-104-0600A-7 +E205
ACS880-104-2860A-7	5×R8i	5	ACS880-104-0600A-7 +E205
ACS880-104-3420A-7	6×R8i	6	ACS880-104-0600A-7 +E205

Ordering code format	Option codes
[Module type] +code [+code] … For example, **ACS880-104-0470A-3 +E205 +C132**	For available options, see Type designation key (page 48).

Note: The following components are also required to construct a working inverter unit and must be ordered separately:

- An ACS-AP-x control panel is required for the commissioning of an ACS880 drive system, even if the Drive composer PC tool is used. See section ACS-AP-W control panel below.
- Inverter control unit (see section Inverter control unit below)
- Fiber optic cabling from control unit to each inverter module (see section Fiber optic cables below)
- Common mode filters
- Control circuit plug connectors
- Quick connector.



The other parts listed in this chapter for this frame size

- may be required by the application (such as a DC switch/disconnector), or
- make the installation or use of the module easier.

Control panel

The control panel is not included with the module but must be ordered separately. One control panel is required for the commissioning of an ACS880 drive system, even if the Drive Composer PC tool is used.

The control panel can be flush mounted on the cabinet door with the help of a door mounting kit. For more information on the control panel, see ACS-AP-I, -S, -W and ACH-AP-H, -W Assistant control panels user's manual (3AUA0000085685 [English]).

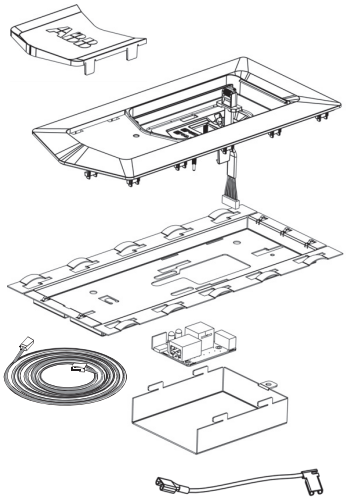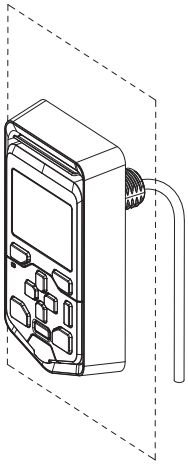Type	Description	Ordering code	Illustration
ACS-AP-W	Control panel with Bluetooth	3AXD50000025965	
DPMP-01	Door mounting kit (IP55)	3AUA0000108878	
DPMP-02	Door mounting kit (IP65)	3AXD50000009374	

For more information on the door mounting kits, such as the contents of the kit, see the installation manuals:

- DPMP-01 mounting platform for control panels installation guide (3AUA0000100140 [English])
- DPMP-02/03 mounting platform for control panels installations guide (3AUA0000136205 [English]).

Control electronics

Control unit (BCU)

One BCU control unit is required per inverter unit. The type of the control unit depends on the number of inverter modules as shown below. The control unit is delivered with a memory unit containing the ACS880 primary control program, optionally with application programmability. For availability of other control programs, contact your local ABB representative.

Frame size	Control unit type	Application program-mability	Ordering code
R8i, 2×R8i	BCU-02	No	3AXD50000003417
		*Yes	3AXD50000011540
3×R8i…6×R8i	BCU-12	No	3AXD50000006340
		*Yes	3AXD50000011541

*Application programmability using function blocks based on the IEC 61131-3 standard. For more information, see Programming manual: Drive application programming (IEC 61131-3) (3AUA0000127808 [English]).

Control unit (UCU)

One UCU control unit is required per inverter unit. The type of the control unit depends on the number of inverter modules as shown below. The control unit is delivered with a memory unit containing the ACS880 primary control program, optionally with application programmability. For availability of other control programs, contact your local ABB representative.

Frame size	Control unit type	Ordering code
R8i, 2×R8i	UCU-22	ACS880UCU-104-22-0
3×R8i…6×R8i	UCU-23	ACS880UCU-104-23-0

Ordering code format	Option codes
[Control unit type] + code [+code]… For example, ACS880UCU-104-22-0+N8010	**+N8010:** Application programming

The UCU control unit kit contains:

- UCU control unit with USCA-02 adapters.
- UMU-01 memory unit with the control program.

The following option module is to be installed on the control unit and must be ordered separately if communication between supply and drive units is needed:

- RDCO-04C DDCS communication option module (ordering code: 3AXD50000868056).

Fiber optic cables

Each frame R8i module is connected to the inverter control unit with a pair of fiber optic cables.

If the inverter unit is equipped with a DC switch/disconnector, each inverter module is also connected to the charging controller by a pair of fiber optic cables.


The following kits, each contain a pair of plastic fibre optic cables. They are needed in communication between the control unit and the power (inverter/supply/brake/converter) module.

Length	Kit type designation	Ordering code
2 m (6.6 ft)	NLWC-02	58988821
3 m (9.8 ft)	NLWC-03	58948233
5 m (16.4 ft)	NLWC-05	58948250
7 m (23 ft)	NLWC-07	58948268
10 m (32.8 ft)	NLWC-10	58948276

Control circuit plug connectors

The control circuit plug for connector X50 is not included in the module kit and you must order it separately.

Note: Plug connectors for X51, X52 and X53 are included in the module kit.

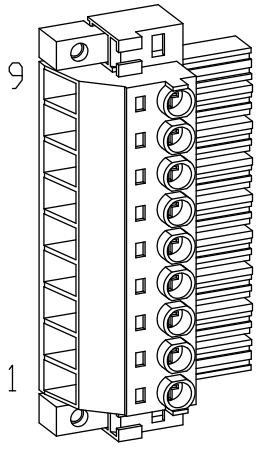Connector	Data	Qty	Ordering code	Illustration
X50 for R8i modules with +V112	BVZ 7.62HP/09/180FC SN BK BX LRP 9-pole (female) 10 mm², 1000 V, 57 A (UL/CSA: 600 V, 40.5 A)	1 per module	3AXD50000960248	

Wire sets for use with the reduced run function

A “reduced run” function (for inverter unit frame sizes 3×R8i and above) makes it possible to continue operation with limited current even if some modules of the inverter unit are out of service. The wire set for the STO connection is available as shown below.

Use	Qty	Ordering code	Data
STO wiring in place of removed inverter module	1 per module	3AXD50000022694	PVC insulation
		3AXD50000022695	Halogen-free insulation

DC-side components

Frame R8i modules are connected to the DC bus through fuses. The design presented in this manual has flush-end fuse blocks bolted to the DC busbars.

A DC switch/disconnector can be installed if quick isolation of the module from the DC bus is required. One of the auxiliary contacts of the switch is used for monitoring the open/closed state of the switch. A capacitor charging circuit is to be installed with the DC switch/disconnector.


Note: A separate capacitor charging circuit must be designed and installed by the customer if the inverter unit is directly connected to the DC bus and the supply unit of the system does not have a charging capability.

The common mode filters are mounted onto the busbars that connect to the DC input of the inverter module.

DC bus installation parts (for Rittal VX25 enclosures)




The brackets in this kit act as a mounting base for the busbar supports of the Rittal Flat-PLS DC bus and ensure its correct placement and alignment inside the cabinet line-up.




The designs shown in this manual for Rittal VX25 enclosures use the Rittal Flat-PLS busbar system. Make sure that the current in the drive system does not exceed the current-carrying capacity of the busbars.


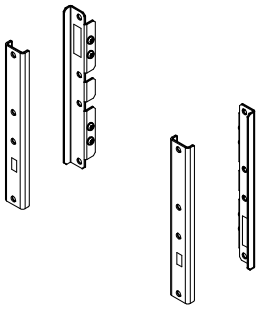
Used with ...	Qty	Ordering code	Kit code	Illustration
VX25 enclosure	1 kit per cubicle	3AXD50000333387	A-468-X-001-VX	 Instruction code: 3AXD50000333639

DC connection parts 1 of 2 (for Rittal VX25 enclosures)

These parts connect the Flat-PLS busbars to the DC fuses, and provide the mounting base for the charging components if required.

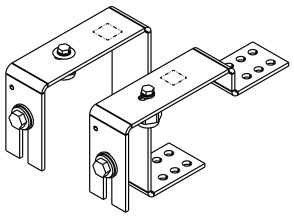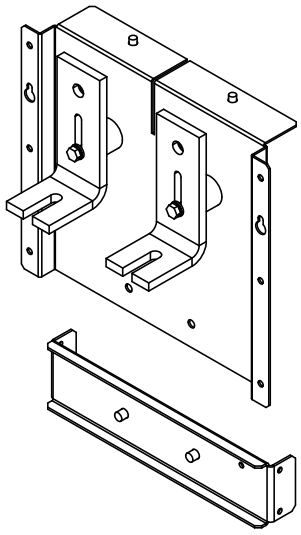
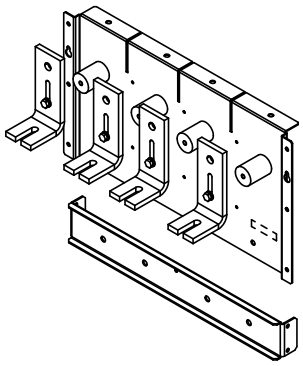
Used with...	Qty	Ordering code	Kit code	Illustration
400/600 mm VX25 enclosure without DC switch/disconnector and charging	1 per module	3AXD50000337446	A-46-8-206-VX	 Instruction code: 3AXD50000345915
400 mm VX25 enclosure without DC switch/disconnector and charging	1	3AXD50000337415	A-4-8-252-VX	 Instruction code: 3AXD50000345151
600 mm VX25 enclosure without DC switch/disconnector and charging	1	3AXD50000337521	A-6-8-255-VX	 Instruction code: 3AXD50000342471



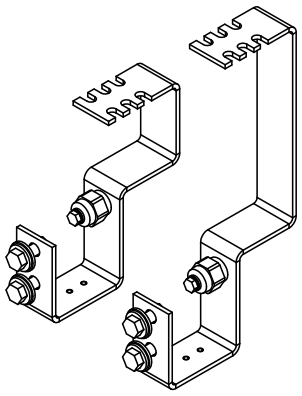
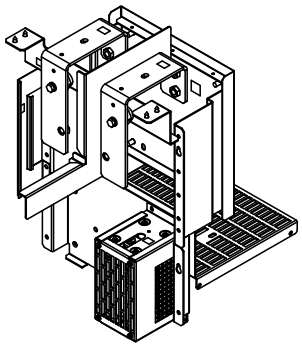
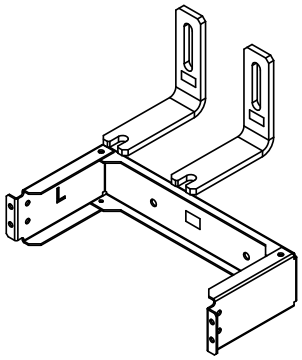
Used with...	Qty	Ordering code	Kit code	Illustration
400/600 mm VX25 enclosure with DC switch/disconnector and charging	1 per module	3AXD50000337453	A-46-8-207-VX	 Instruction code: 3AXD50000345458
400 mm VX25 enclosure with DC switch/disconnector and charging	1	3AXD50000337439	A-4-8-288-VX	 Instruction code: 3AXD50000342501
	1	3AXD50000337422	A-4-8-290-VX	 Instruction code: 3AXD50000345236

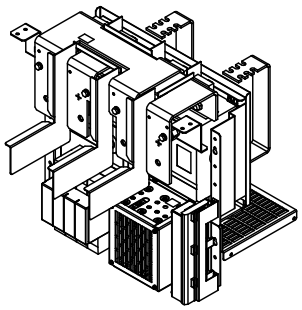
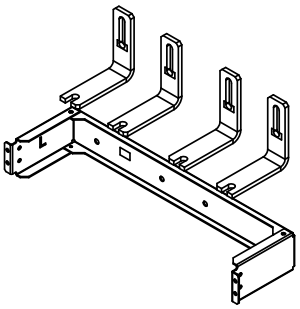
Used with...	Qty	Ordering code	Kit code	Illustration
600 mm VX25 enclosure with DC switch/disconnector and charging	1	3AXD50000337545	A-6-8-289-VX	 Instruction code: 3AXD50000342860
	1	3AXD50000337538	A-6-8-291-VX	 Instruction code: 3AXD50000342983

DC connection parts 1 of 2 (for generic enclosures)

These parts provide the DC connection between the input busbars and the DC fuses (including a mounting base for the charging components if required).

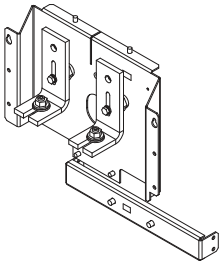
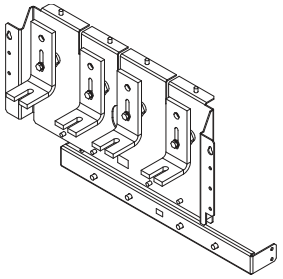
Used with...	Qty	Ordering code	Kit code	Illustration
400 mm generic enclosure without DC switch/disconnector and charging	1	3AXD50000006418	A-4-8-256	 Instruction code: 3AXD50000006441
600 mm generic enclosure without DC switch/disconnector and charging	1	3AXD50000006444	A-6-8-257	 Instruction code: 3AXD50000006447

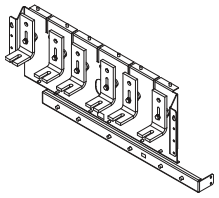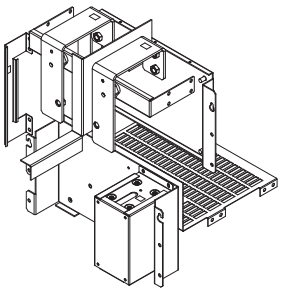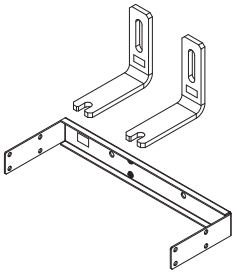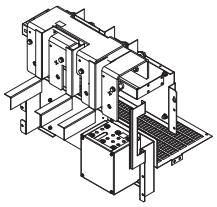
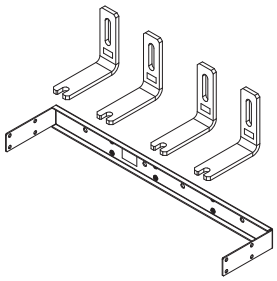
Used with...	Qty	Ordering code	Kit code	Illustration
800 mm generic enclosure without DC switch/disconnector and charging	1	3AXD50000006450	A-8-8-258	 Instruction code: 3AXD50000006455
400 mm generic enclosure with DC switch/disconnector and charging	1	3AXD50000044559	A-4-8-292	 Instruction code: 3AXD50000043644
	1	3AXD50000044582	A-4-8-295	 Instruction code: 3AXD50000043686
600 mm generic enclosure with DC switch/disconnector and charging	1	3AXD50000044560	A-6-8-293	 Instruction code: 3AXD50000043784
	1	3AXD50000044583	A-6-8-296	 Instruction code: 3AXD50000043737

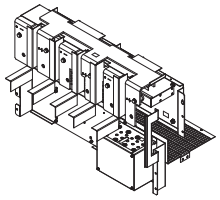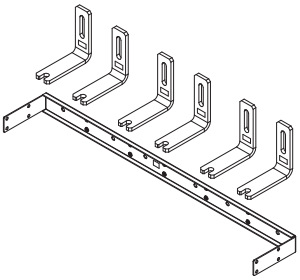Used with...	Qty	Ordering code	Kit code	Illustration
800 mm generic enclosure with DC switch/disconnector and charging	1	3AXD50000044581	A-8-8-294	 Instruction code: 3AXD50000044586
	1	3AXD50000044584	A-8-8-297	 Instruction code: 3AXD50000044574

DC connection parts 2 of 2 (for Rittal VX25 or generic enclosures)


These parts connect the DC fuses to the inverter module.

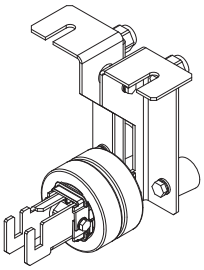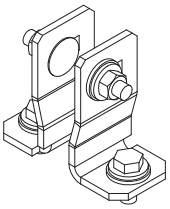Used with...	Qty	Ordering code	Kit code	Illustration
All VX25 and generic enclosures without DC switch/disconnector and charging	1 per module	3AXD50000028401	A-468-8-235	 Instruction code: 3AXD50000028418 **Note:** Filters to be ordered separately
	1 per module	3AXD50000028403	A-468-8-246	 Instruction code: 3AXD50000028384

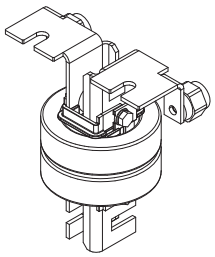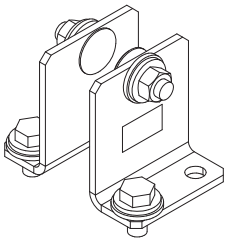Used with...	Qty	Ordering code	Kit code	Illustration
All VX25 and generic enclosures with DC switch/disconnector and charging	1 per module	3AXD50000044551	A-468-8-247	 Instruction code: 3AXD50000043411 **Note:** Filters to be ordered separately
	1 per module	3AXD50000044553	A-468-8-248	 Instruction code: 3AXD50000043466

Common mode filters

Common mode filtering reduces bearing currents and is required for electromagnetic compatibility (EMC). The filtering is implemented by installing two toroidal cores onto the DC busbars. The cores must be ordered separately.

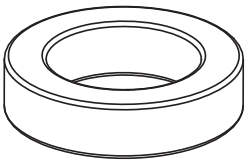Used with	Qty	Ordering code	Kit code	Illustration
All enclosure types	2 per module	3AUA0000032859	-	 Instruction code: 3AUA0000123359

DC fuses (IEC, UL)

Unit type ACS880-104-...			Fuse				
			Qty	Ordering code	Type	Data	Size
0470A-3			2	3AXD50000000148	170M6413	900 A, 690 V	3
0640A-3			2	68244463	170M6416	1250 A, 690 V	3
0760A-3			2	3AXD50000000150	170M6417	1400 A, 690 V	3
0830A-3 0900A-3			2	68393108	170M6419	1600 A, 690 V	3*
1250A-3			4	68244463	170M6416	1250 A, 690 V	3
1480A-3			4	3AXD50000000150	170M6417	1400 A, 690 V	3
1760A-3			4	68393108	170M6419	1600 A, 690 V	3*
2210A-3			6	3AXD50000000150	170M6417	1400 A, 690 V	3
2610A-3			6	68393108	170M6419	1600 A, 690 V	3*
3450A-3			8				
4290A-3			10				
5130A-3			12				
	0440A-5		2	3AXD50000000148	170M6413	900 A, 690 V	3
	0590A-5		2	68731658	170M6415	1100 A, 690 V	3
	0670A-5 0740A-5 0810A-5		2	3AXD50000000150	170M6417	1400 A, 690 V	3
	1150A-5		4	68731658	170M6415	1100 A, 690 V	3
	1450A-5 1580A-5		4	3AXD50000000150	170M6417	1400 A, 690 V	3
	2150A-5 2350A-5		6				
	3110A-5		8				
	3860A-5		10				
	4610A-5		12				
		0340A-7	2	63903167	170M6544	630 A, 1250 V	3
		0410A-7	2	63919128	170M6546	800 A, 1250 V	3
		0480A-7 0530A-7	2	63916749	170M6548	1000 A, 1100 V	3
		0600A-7	2	68736021	170M6549	1100 A, 1000 V	3
		0800A-7	4	63919128	170M6546	800 A, 1250 V	3
		1030A-7	4	63916749	170M6548	1000 A, 1100 V	3
		1170A-7	4	68736021	170M6549	1100 A, 1000 V	3
		1540A-7	6	63916749	170M6548	1000 A, 1100 V	3
		1740A-7	6	68736021	170M6549	1100 A, 1000 V	3
		2300A-7	8				
		2860A-7	10				
		3420A-7	12				

DC switch/disconnector kits

IEC – 230 V 50 Hz						
Unit type ACS880-104-...			Enclosure type	Qty	Ordering code	Switch type
0470A-3 0640A-3 0760A-3 0830A-3 0900A-3	0440A-5 0590A-5 0670A-5 0740A-5 0810A-5	0340A-7 0410A-7 0480A-7 0530A-7 0600A-7	Rittal VX25 or generic	1	3AXD50000009534	OT1600E11
1250A-3 1480A-3 1760A-3	1150A-5 1450A-5 1580A-5	0800A-7 1030A-7 1170A-7	Rittal VX25 or generic	1	3AXD50000009535	OT1600E22
2210A-3 2610A-3	2150A-5 2350A-5	1540A-7 1740A-7	Rittal VX25	1	3AXD50000009534	OT1600E11
				1	3AXD50000009535	OT1600E22
			Generic	1	3AXD50000009536	OT2500E22
3450A-3	3110A-5	2300A-7	Rittal VX25 or generic	2	3AXD50000009535	OT1600E22
4290A-3	3860A-5	2860A-7	Rittal VX25	1	3AXD50000009534	OT1600E11
				2	3AXD50000009535	OT1600E22
			Generic	1	3AXD50000009535	OT1600E22
				1	3AXD50000009536	OT2500E22
5130A-3	4610A-5	3420A-7	Rittal VX25	3	3AXD50000009535	OT1600E22
			Generic	2	3AXD50000009536	OT2500E22

IEC – 230 V 60 Hz						
Unit type ACS880-104-...			Enclosure type	Qty	Ordering code	Switch type
0470A-3 0640A-3 0760A-3 0830A-3 0900A-3	0440A-5 0590A-5 0670A-5 0740A-5 0810A-5	0340A-7 0410A-7 0480A-7 0530A-7 0600A-7	Rittal VX25 or generic	1	3AXD50000026854	OT1600E11
1250A-3 1480A-3 1760A-3	1150A-5 1450A-5 1580A-5	0800A-7 1030A-7 1170A-7	Rittal VX25 or generic	1	3AXD50000026857	OT1600E22
2210A-3 2610A-3	2150A-5 2350A-5	1540A-7 1740A-7	Rittal VX25	1	3AXD50000026854	OT1600E11
				1	3AXD50000026857	OT1600E22
			Generic	1	3AXD50000026860	OT2500E22
3450A-3	3110A-5	2300A-7	Rittal VX25 or generic	2	3AXD50000026857	OT1600E22
4290A-3	3860A-5	2860A-7	Rittal VX25	1	3AXD50000026854	OT1600E11
				2	3AXD50000026857	OT1600E22
			Generic	1	3AXD50000026857	OT1600E22
				1	3AXD50000026860	OT2500E22
5130A-3	4610A-5	3420A-7	Rittal VX25	3	3AXD50000026857	OT1600E22
			Generic	2	3AXD50000026860	OT2500E22

UL – 115 V 60 Hz						
Unit type ACS880-104-...			Enclosure type	Qty	Ordering code	Switch type
0470A-3 0640A-3 0760A-3 0830A-3 0900A-3	0440A-5 0590A-5 0670A-5 0740A-5 0810A-5	0340A-7 0410A-7 0480A-7 0530A-7 0600A-7	Rittal VX25 or generic	1	3AXD50000009540	OT1200U11
1250A-3 1480A-3 1760A-3	1150A-5 1450A-5 1580A-5	0800A-7 1030A-7 1170A-7	Rittal VX25 or generic	1	3AXD50000009541	OT1200U22
2210A-3 2610A-3	2150A-5 2350A-5	1540A-7 1740A-7	Rittal VX25 or generic	1	3AXD50000009540	OT1200U11
				1	3AXD50000009541	OT1200U22
3450A-3	3110A-5	2300A-7	Rittal VX25 or generic	2	3AXD50000009541	OT1200U22
4290A-3	3860A-5	2860A-7	Rittal VX25 or generic	1	3AXD50000009540	OT1200U11
				2	3AXD50000009541	OT1200U22
5130A-3	4610A-5	3420A-7	Rittal VX25 or generic	3	3AXD50000009541	OT1200U22

Kit contents:

- DC switch/disconnector(s)
- Shaft (12 × 395 mm)
- OHB150J12P (switch types …11) or OHB274J12 (switch types …22) handle with off/on indication
- Interlock kit OTZT4A with PDAL2 coil
- One normally-open (OA1G10) and one normally-closed (OA3G01) auxiliary contact block.

Charging kits

The charging kit contains the main parts of the charging circuit, such as the charging switch (with shaft, handle, terminal shrouds and a set of auxiliary contacts), fuses, connectors and the charging controller. Note that the charging resistors or fiber optic cables are not included in the kit and must be ordered separately.

IEC					
Unit type ACS880-104-…			**Enclosure type**	**Qty**	**Ordering code**
0470A-3 0640A-3 0760A-3 0830A-3 0900A-3 1250A-3 1480A-3 1760A-3	0440A-5 0590A-5 0670A-5 0740A-5 0810A-5 1150A-5 1450A-5 1580A-5	0340A-7 0410A-7 0480A-7 0530A-7 0600A-7 0800A-7 1030A-7 1170A-7	Rittal VX25 or generic	1	3AXD50000009537
2210A-3 2610A-3	2150A-5 2350A-5	1540A-7 1740A-7	Rittal VX25	2	3AXD50000009537
			Generic	1	3AXD50000009539
3450A-3	3110A-5	2300A-7	Rittal VX25 or generic	2	3AXD50000009537
4290A-3	3860A-5	2860A-7	Rittal VX25	3	3AXD50000009537
			Generic	1	3AXD50000009537
				1	3AXD50000009539
5130A-3	4610A-5	3420A-7	Rittal VX25	3	3AXD50000009537
			Generic	2	3AXD50000009539

UL					
Unit type ACS880-104-…			**Enclosure type**	**Qty**	**Ordering code**
0470A-3 0640A-3 0760A-3 0830A-3 0900A-3 1250A-3 1480A-3 1760A-3	0440A-5 0590A-5 0670A-5 0740A-5 0810A-5 1150A-5 1450A-5 1580A-5	0340A-7 0410A-7 0480A-7 0530A-7 0600A-7 0800A-7 1030A-7 1170A-7	Rittal VX25 or generic	1	3AXD50000009538

UL					
Unit type ACS880-104-...			Enclosure type	Qty	Ordering code
2210A-3 2610A-3 3450A-3	2150A-5 2350A-5 3110A-5	1540A-7 1740A-7 2300A-7	Rittal VX25 or generic	2	3AXD50000009538
4290A-3 5130A-3	3860A-5 4610A-5	2860A-7 3420A-7	Rittal VX25 or generic	3	3AXD50000009538

Kit contents:

Ordering code	Contents
3AXD50000009537	Switch fuse (OS160GD04F) with terminal shrouds (OSS160GT1S/4); shaft (6 × 290 mm); OHB65J6 handle; normally-closed auxiliary contacts (OA3G01, 2 pcs); 170M2676 fuses; charging controller
3AXD50000009538	Switch fuse (OS100GJ04FP) with terminal shrouds (OSS160GT1S/4); shaft (6 × 161 mm); OHB65J6 handle; normally-closed auxiliary contacts (OA3G01, 2 pcs); FWJ30A fuses and fuse holder modification parts; charging controller
3AXD50000009539	Switch fuse (OS200DZ22F) with terminal shrouds (OSS200G1S/4); shaft (6 × 210 mm); OHB65J6 handle; normally-closed auxiliary contacts (OA3G01, 2 pcs); 170M2676 fuses; charging controller

- Charging resistors are not included and must be ordered separately. See below.
- The charging controller connects to each inverter module by a pair of fiber optic cables. The cables are not included and must be ordered separately.

Charging resistors


IEC						
Unit type ACS880-104-...			Enclosure type	Qty	Ordering code	Data
0470A-3 0640A-3 0760A-3 0830A-3 0900A-3	0440A-5 0590A-5 0670A-5 0740A-5 0810A-5		Rittal VX25 or generic	4	10037531	24 ohm
1250A-3 1480A-3 1760A-3	1150A-5 1450A-5 1580A-5		Rittal VX25 or generic	6	10037531	24 ohm
2210A-3 2610A-3	2150A-5 2350A-5		Rittal VX25	10	10037531	24 ohm
			Generic	8		
3450A-3	3110A-5		Rittal VX25 or generic	12	10037531	24 ohm
4290A-3	3860A-5		Rittal VX25	16	10037531	24 ohm
			Generic	14		
5130A-3	4610A-5		Rittal VX25	18	10037531	24 ohm
			Generic	16		
		0340A-7 0410A-7 0480A-7 0530A-7 0600A-7	Rittal VX25 or generic	4	10028531	33 ohm
		0800A-7 1030A-7 1170A-7	Rittal VX25 or generic	6	10028531	33 ohm
		1540A-7 1740A-7	Rittal VX25	10	10028531	33 ohm
			Generic	8		
		2300A-7	Rittal VX25 or generic	12	10028531	33 ohm
		2860A-7	Rittal VX25	16	10028531	33 ohm
			Generic	14		
		3420A-7	Rittal VX25	18	10028531	33 ohm
			Generic	16		

UL						
Unit type ACS880-104-...			Enclosure type	Qty	Ordering code	Data
0470A-3 0640A-3 0760A-3 0830A-3 0900A-3	0440A-5 0590A-5 0670A-5 0740A-5 0810A-5		Rittal VX25 or generic	4	10037531	24 ohm
1250A-3 1480A-3 1760A-3	1150A-5 1450A-5 1580A-5		Rittal VX25 or generic	6	10037531	24 ohm
2210A-3 2610A-3	2150A-5 2350A-5		Rittal VX25 or generic	10	10037531	24 ohm
3450A-3	3110A-5		Rittal VX25 or generic	12	10037531	24 ohm
4290A-3	3860A-5		Rittal VX25 or generic	16	10037531	24 ohm
5130A-3	4610A-5		Rittal VX25 or generic	18	10037531	24 ohm
		0340A-7 0410A-7 0480A-7 0530A-7 0600A-7	Rittal VX25 or generic	4	10028531	33 ohm
		0800A-7 1030A-7 1170A-7	Rittal VX25 or generic	6	10028531	33 ohm
		1540A-7 1740A-7	Rittal VX25 or generic	10	10028531	33 ohm
		2300A-7	Rittal VX25 or generic	12	10028531	33 ohm
		2860A-7	Rittal VX25 or generic	16	10028531	33 ohm
		3420A-7	Rittal VX25 or generic	18	10028531	33 ohm

AC-side components

Quick connector

The three-phase power connection to the inverter/supply/brake/converter module through a quick connector.

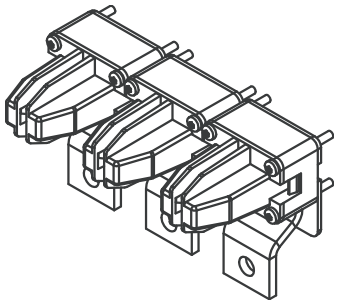Used with	Qty	Ordering code	Kit code	Illustration
All enclosure types	1 per module	3AUA0000119227	A-468-8-100	 Instruction code: 3AUA0000118667

Output busbars/shrouds kit

This kit contains the busbars that connect to the quick connector(s), the busbars for the motor cable connection, and shrouding.

The following types of kits are available:




1. Kits with cable connections (all enclosure types).
   Each inverter module has its own motor cable connections. If the inverter unit consists of parallel-connected modules, each module must be separately (and identically) cabled to the motor.
2. Kits with bridging busbars (600 mm VX25 or generic enclosures, 800 mm generic enclosures).
   These kits connect the outputs of the modules in the same cubicle so that, for example, a single thicker cable can be used instead of separate cables for each module.




   WARNING!
   The bridging can carry the nominal output of one inverter module. In case of three parallel modules, ensure that the load capacity of the bridging is not exceeded. For example, if the cabling connects to the output busbars at one module only, use the module in the middle.





   If the inverter unit consists of modules installed in different cubicles, make sure that the load is distributed evenly between the modules:


   - In case of two inverter cubicles of two modules, connect the same number of cables to each cubicle.
   - In case of one inverter cubicle with three modules and another with two, each cubicle requires a number of cables proportional to the number of modules within. For example, connect three out of five (or six out of ten, etc.) cables to the cubicle with three modules, the remaining two out of five (four out of ten) cables to the cubicle with two modules.

3. Kits with common AC output busbars (400 and 600 mm wide VX25 enclosures).
   These kits have connection points for busbars that join the outputs of inverter modules regardless of whether the modules are located in the same cubicle or not. Using these kits, it is possible to construct a common output cubicle where all motor cables connect to.

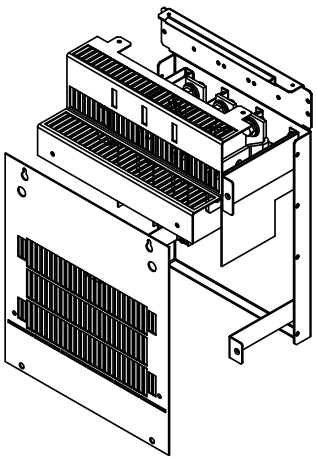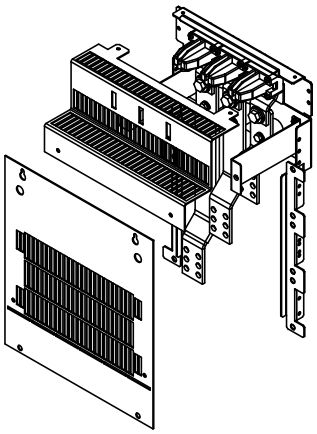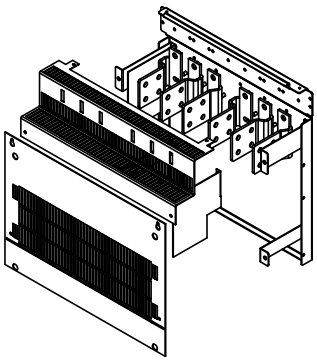Used with...	Qty	Ordering code	Kit code	Illustration
400 mm VX25 enclosure (cable connection)	1	3AXD50000337477	A-4-8-132-VX	 Instruction code: 3AXD50000343492
400 mm VX25 enclosure (common AC output busbar connection)	1	3AXD50000337088	A-4-8-140-VX	 Instruction code: 3AXD50000337088
600 mm VX25 enclosure (cable connection)	1	3AXD50000337569	A-6-8-133-VX	 Instruction code: 3AXD50000345526

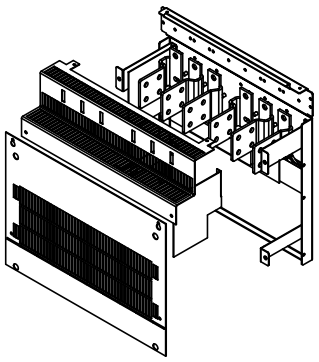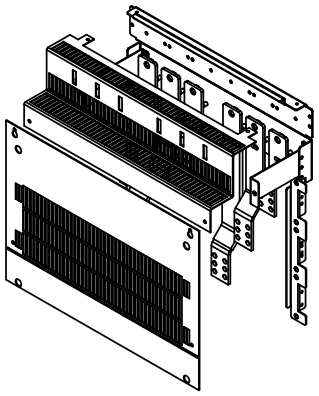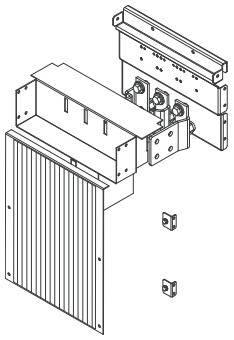
Used with...	Qty	Ordering code	Kit code	Illustration
600 mm VX25 enclosure (cable connection with bridging busbars)	1	3AXD50000337576	A-6-8-134-VX	 Instruction code: 3AXD50000345632
600 mm VX25 enclosure (common AC output busbar connection)	1	3AXD50000337552	A-6-8-141-VX	 Instruction code: 3AXD50000346196
400 mm generic enclosure (cable connection)	1	3AXD50000006435	A-4-8-135	 Instruction code: 3AXD50000006497

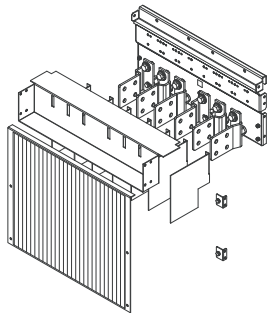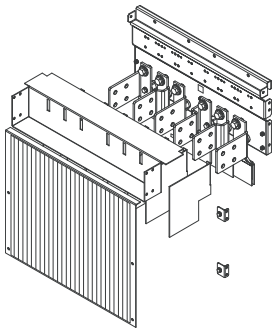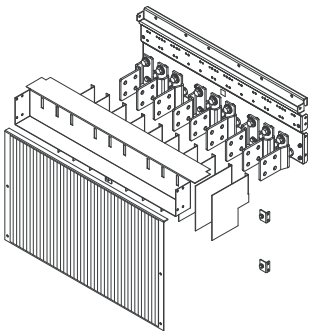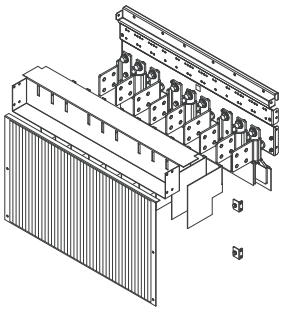Used with...	Qty	Ordering code	Kit code	Illustration
600 mm generic enclosure (cable connection)	1	3AXD50000006491	A-6-8-136	 Instruction code: 3AXD50000006489
600 mm generic enclosure (cable connection with bridging busbars)	1	3AXD50000006493	A-6-8-138	 Instruction code: 3AXD50000006505
800 mm generic enclosure (cable connection)	1	3AXD50000006492	A-8-8-137	 Instruction code: 3AXD50000006503
800 mm generic enclosure (cable connection with bridging busbars)	1	3AXD50000006494	A-8-8-139	 Instruction code: 3AXD50000006498

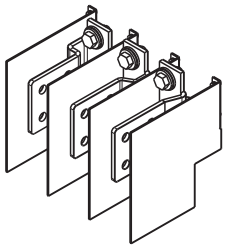Used with...	Qty	Ordering code	Kit code	Illustration
Generic enclosure (AC output busbars)	1 per module	3AXD50000008761	A-0-8-047	 Instruction code: 3AXD50000010859

Cable entry kit

Cable entry kit, to be installed on the bottom plate of the enclosure, contains four 60 mm diameter inlets for cables with grommets, wire meshing for 360° grounding, and a strain relief bracket.




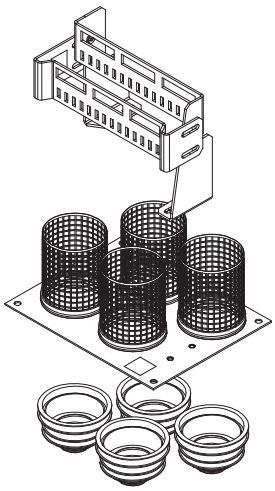
Used with ...	Qty	Ordering code	Kit code	Illustration
All enclosure types	1 per module (minimum)	3AXD50000004385	A-468-8-441	 Instruction code: 3AXD50000004817





Mechanical installation accessories

These kits include parts that are used for installing the inverter module in the enclosure.

Inverter module top/bottom guides

This kit contains the rails that guide the inverter module at the top and the bottom.

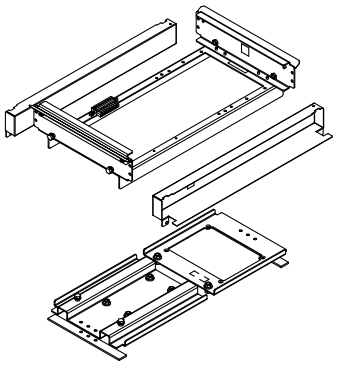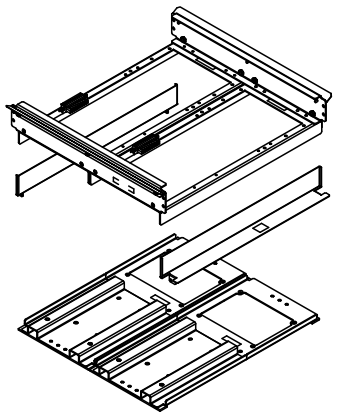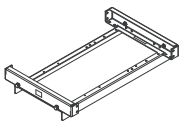
Used with ...	Qty	Ordering code	Kit code	Illustration
400 mm Rittal VX25 enclosure	1	3AXD50000337071	A-4-8-310-VX	 Instruction code: 3AXD50000335152
600 mm Rittal VX25 enclosure	1	3AXD50000337514	A-4-8-309-VX	 Instruction code: 3AXD50000345052
400 mm generic enclosure	1	3AXD50000005875	A-4-8-315	  Instruction code: 3AXD50000005874

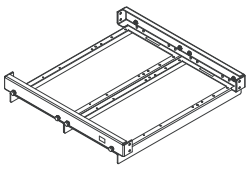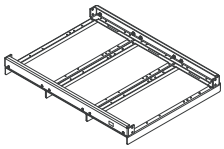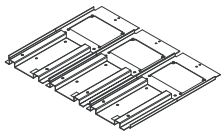Used with ...	Qty	Ordering code	Kit code	Illustration
600 mm generic enclosure	1	3AXD50000005876	A-6-8-311	  Instruction code: 3AXD50000005864
800 mm generic enclosure	1	3AXD50000005877	A-8-8-312	  Instruction code: 3AXD50000005848

Insertion/Extraction ramp



The ramp can be used when inserting or extracting wheeled modules.

Do not use the ramp with plinth heights over 100 mm (3.93 in). The ramp is designed for a plinth height of 100 mm (the standard plinth height of Rittal VX25 enclosures).

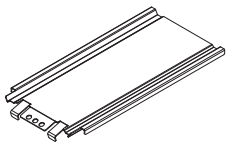Used with ...	Qty	Ordering code	Kit code	Illustration
All VX25 enclosures	1	3AXD50000438037	A-468-8-304-VX	

Shrouding

This kit contains the shroud for the top part of the cubicle with the necessary brackets and screws.

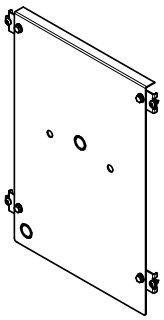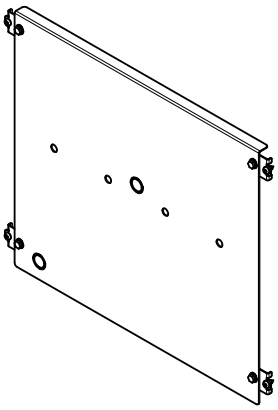
Used with ...	Qty	Ordering code	Kit code	Illustration
400 mm Rittal VX25 enclosure	1	3AXD50000331484	A-4-8-359-VX	 Instruction code: 3AXD50000335169
600 mm Rittal VX25 enclosure	1	3AXD50000337378	A-6-8-360-VX	 Instruction code: 3AXD50000335022

BLHF filters

Filter modules




Filter module	Ordering code
ACS880-BLHF-21-7+C188+V112	3AXD50000987191
ACS880-BLHF-21-7+C188+G427+V112	3AXD50000987207
ACS880-BLHF-22-7+C188+V112	3AXD50000987214
ACS880-BLHF-22-7+C188+G427+V112	3AXD50000987221


Control circuit plug connectors

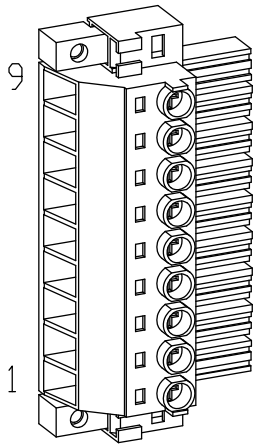Connector	Data	Qty	Ordering code	Illustration
X30 for BLHF filters with +V112	BVZ 7.62HP/09/180FC SN BK BX LRP 9-pole (female) 10 mm², 1000 V, 57 A (UL/CSA: 600 V, 40.5 A)	1 per filter module	3AXD50000960248	



Filter module top/bottom guides



This kit contains the rails that guide the filter module at the top and the bottom.

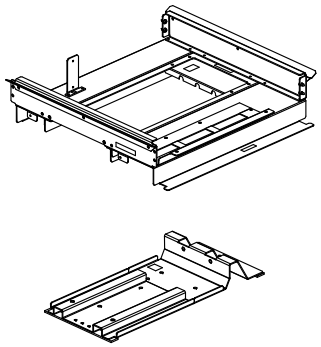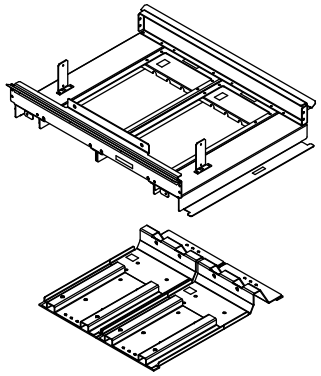
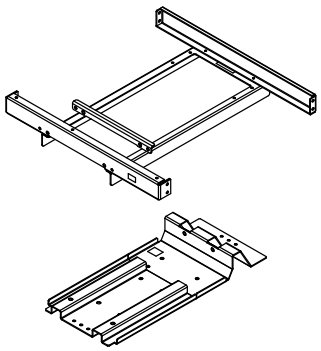
Used with ...	Qty	Ordering code	Kit code	Illustration
600 mm Rittal VX25 enclosure	1	3AXD50000883080	A-6-8-335-VX	 Instruction code: 3AXD50000883684
800 mm Rittal VX25 enclosure	1	3AXD50000883233	A-8-8-336-VX	 Instruction code: 3AXD50000887408
600 mm generic enclosure	1	3AXD50000883288	A-6-8-337	 Instruction code: 3AXD50000887224



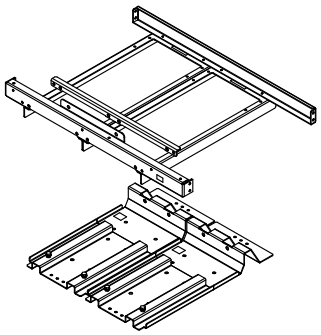
Used with ...	Qty	Ordering code	Kit code	Illustration
800 mm generic enclosure	1	3AXD50000883318	A-8-8-338	 Instruction code: 3AXD50000887071

AC connection parts

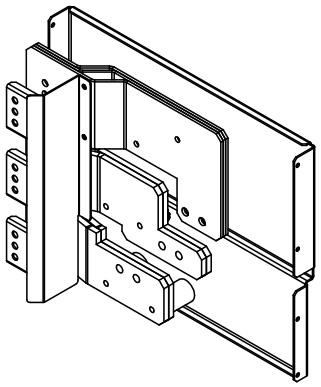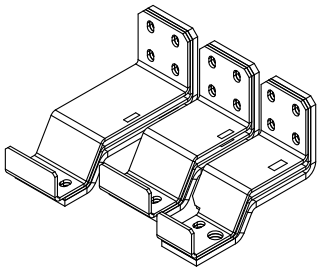Used with...	Qty	Ordering code	Kit code	Illustration
600 mm Rittal VX25 enclosure (AC input busbars)	1	3AXD50000885053	A-6-8-118-VX	 Instruction code: 3AXD50000887347
600 mm Rittal VX25 or generic enclosure (AC flanges)	1	3AXD50000883219	A-X-8-149	 Instruction code: 3AXD50000884216

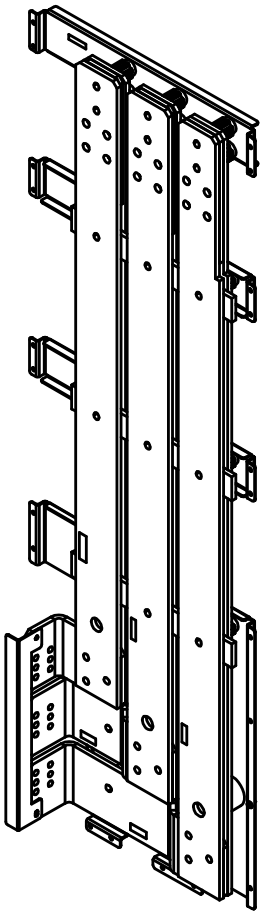
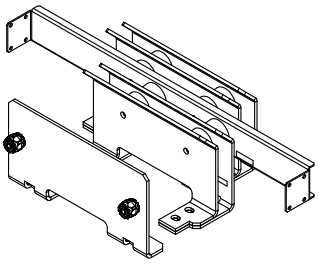
Used with...	Qty	Ordering code	Kit code	Illustration
600 mm Rittal VX25 enclosure (AC busbars)	1	3AXD50000883103	A-6-8-112-VX	 Instruction code: 3AXD50000887231
800 mm Rittal VX25 enclosure (AC connection busbars)	1	3AXD50000883264	A-8-8-116-VX	 Instruction code: 3AXD50000887576

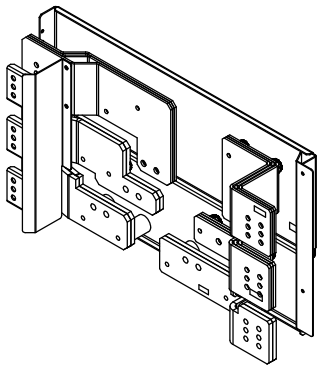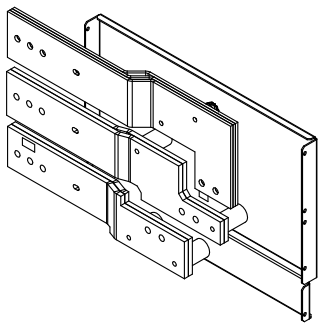Used with...	Qty	Ordering code	Kit code	Illustration
800 mm Rittal VX25 enclosure (AC busbars)	1	3AXD50000883257	A-8-8-113-VX	 Instruction code: 3AXD50000887569
600 mm generic enclosure (AC input busbars)	1	3AXD50000885060	A-6-8-119	 Instruction code: 3AXD50000887323

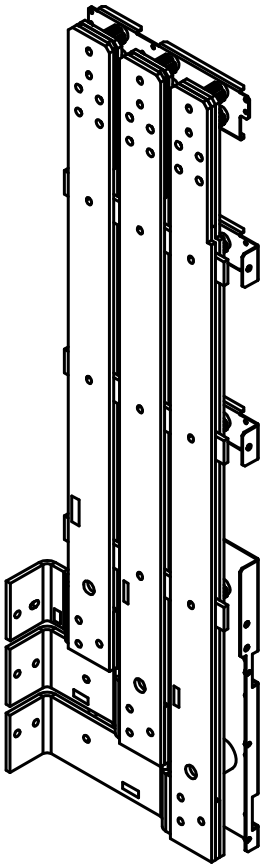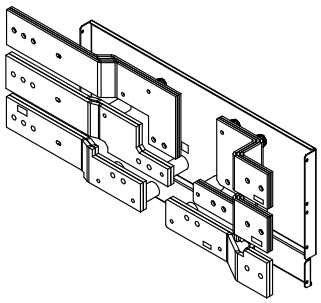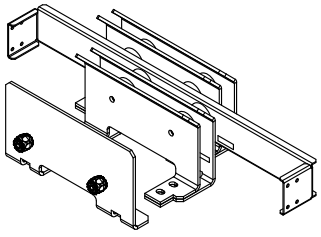Used with...	Qty	Ordering code	Kit code	Illustration
600 mm generic enclosure (AC busbars)	1	3AXD50000883295	A-6-8-114	 Instruction code: 3AXD50000887330
800 mm generic enclosure (AC busbars)	1	3AXD50000883332	A-8-8-115	 Instruction code: 3AXD50000887316
800 mm generic enclosure (AC connection busbars)	1	3AXD50000883349	A-8-8-117	 Instruction code: 3AXD50000887088

Shrouding




This kit contains the shroud with the necessary brackets and screws.

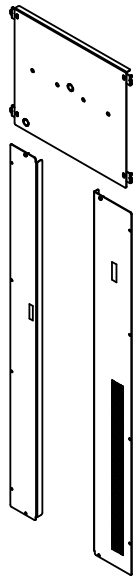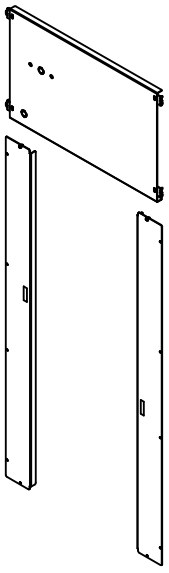Used with ...	Qty	Ordering code	Kit code	Illustration
600 mm Rittal VX25 enclosure	1	3AXD50000883226	A-6-8-362-VX	 Instruction code: 3AXD50000887286
800 mm Rittal VX25 enclosure	1	3AXD50000883271	A-8-8-363-VX	 Instruction code: 3AXD50000888016




Cabinet ventilation

Air inlet kits




Air inlet kits 400 mm cabinet

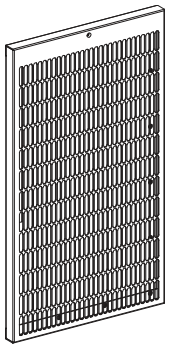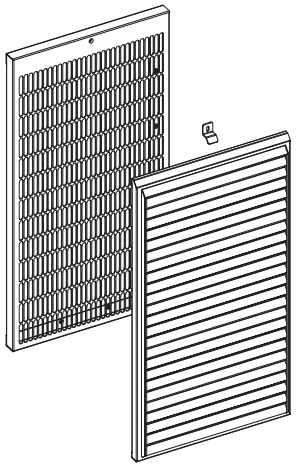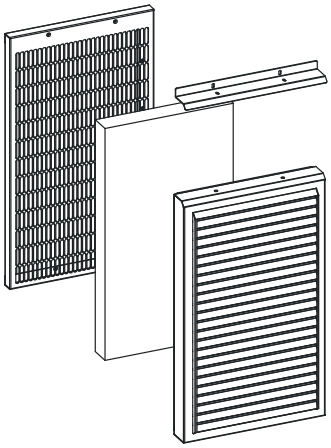Used with ...	Qty	Ordering code	Kit code	Illustration
IP20	1	3AUA0000117002	A-4-X-021	 Instruction code: 3AUA0000116879
IP42	1	3AUA0000117007	A-4-X-024	 Instruction code: 3AUA0000116873
IP54	1	3AXD50000009184	A-4-X-027	 Instruction code: 3AXD50000009989

Air inlet kits 600 mm cabinet

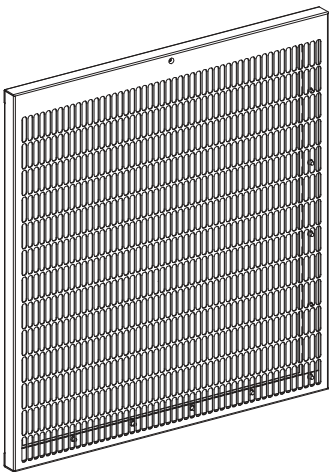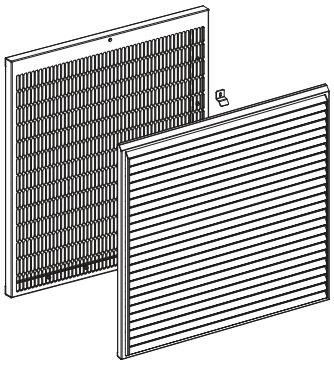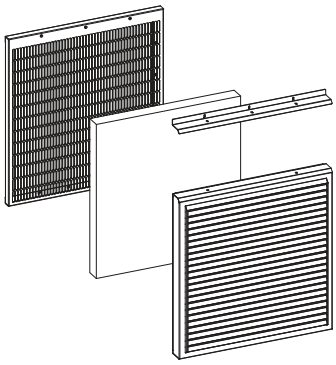
Used with ...	Qty	Ordering code	Kit code	Illustration
IP20	1	3AUA0000117003	A-6-X-022	 Instruction code: 3AUA0000116880
IP42	1	3AUA0000117008	A-6-X-025	 Instruction code: 3AUA0000116874
IP54	1	3AXD50000009185	A-6-X-028	 Instruction code: 3AXD50000009990





Air inlet kits 800 mm cabinet

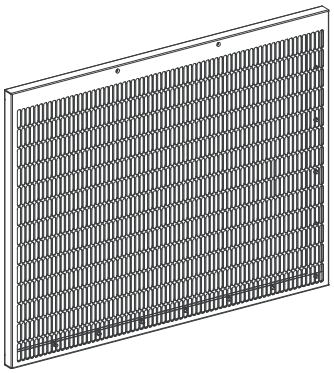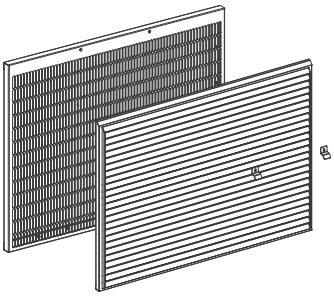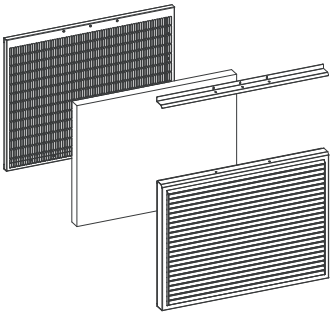
Used with ...	Qty	Ordering code	Kit code	Illustration
IP20	1	3AUA0000117005	A-8-X-023	 Instruction code: 3AUA0000116887
IP42	1	3AUA0000117009	A-8-X-026	 Instruction code: 3AUA0000116875
IP54	1	3AXD50000009186	A-8-X-029	 Instruction code: 3AXD50000010001

Air outlet kits




Air outlet kits 400 mm cabinet



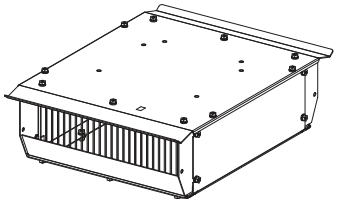
Used with ...	Qty	Ordering code	Kit code	Illustration
IP20	1	3AUA0000125203	A-4-X-042	 Instruction code: 3AXD50000001983

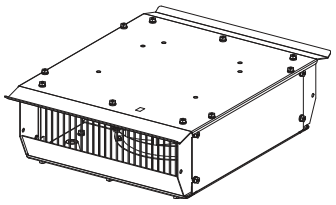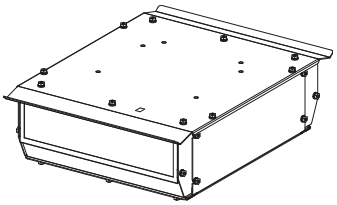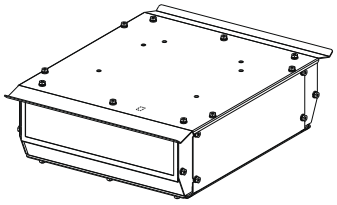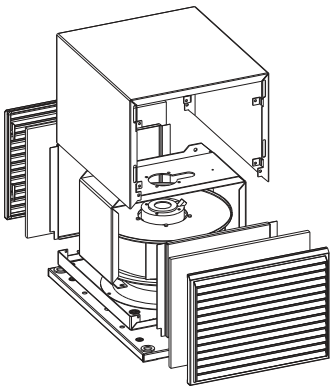Used with ...	Qty	Ordering code	Kit code	Illustration
IP20	1	3AUA0000125201	A-4-X-062	 Instruction code: 3AXD50000001982 **Note:** Fan to be ordered separately
IP42	1	3AUA0000114968	A-4-X-040	 Instruction code: 3AUA0000115292
IP42	1	3AUA0000114967	A-4-X-060	 Instruction code: 3AUA0000115290 **Note:** Fan to be ordered separately
IP54 (230 V)	1	3AXD50000009187	A-4-X-064	 Instruction code: 3AXD50000010284 **Note:** Fan to be ordered separately

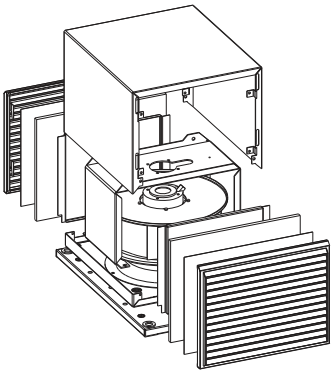
Used with ...	Qty	Ordering code	Kit code	Illustration
IP54 (115 V)	1	3AXD50000010362	A-4-X-067	 Instruction code: 3AXD50000010284 **Note:** Fan to be ordered separately





Air outlet kits 600 mm cabinet

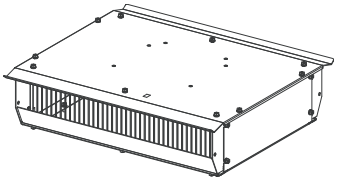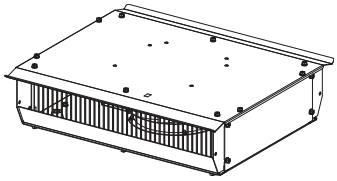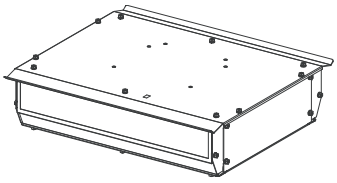
Used with ...	Qty	Ordering code	Kit code	Illustration
IP20	1	3AUA0000125204	A-6-X-043	 Instruction code: 3AXD50000001981
IP20	1	3AUA0000125202	A-6-X-063	 Instruction code: 3AXD50000001980 **Note:** Fan to be ordered separately
IP42	1	3AUA0000114789	A-6-X-041	 Instruction code: 3AUA0000115166

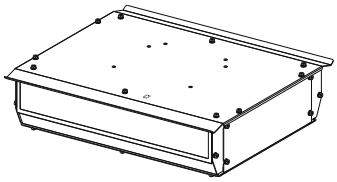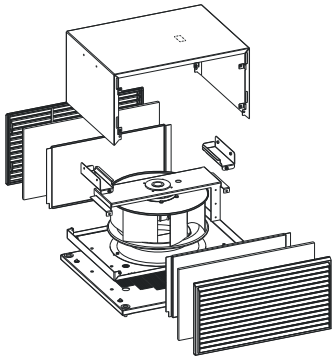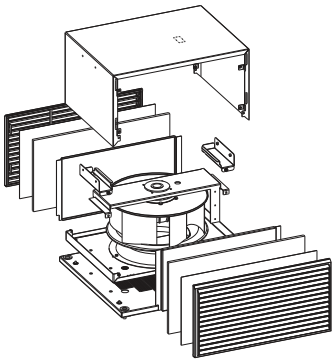Used with ...	Qty	Ordering code	Kit code	Illustration
IP42	1	3AUA0000114971	A-6-X-061	 Instruction code: 3AUA0000115152 **Note:** Fan to be ordered separately
IP54 (230 V)	1	3AXD50000009189	A-6-X-065	 Instruction code: 3AXD50000010004 **Note:** Fan to be ordered separately
IP54 (115 V)	1	3AXD50000010327	A-6-X-066	 Instruction code: 3AXD50000010004 **Note:** Fan to be ordered separately

Air outlet kits 800 mm cabinet

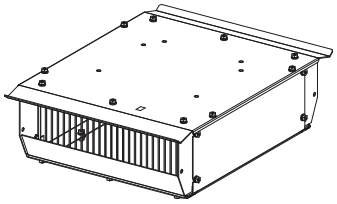Used with ...	Qty	Ordering code	Kit code	Illustration
IP20	2	3AUA0000125203	A-4-X-042	 Instruction code: 3AXD50000001983

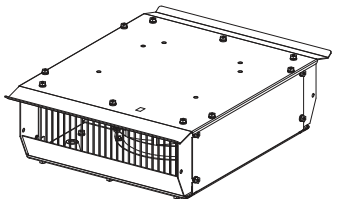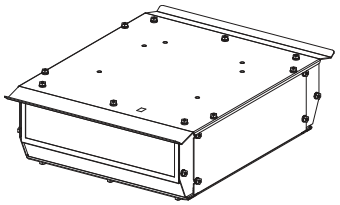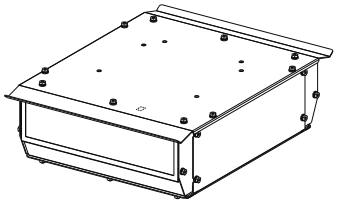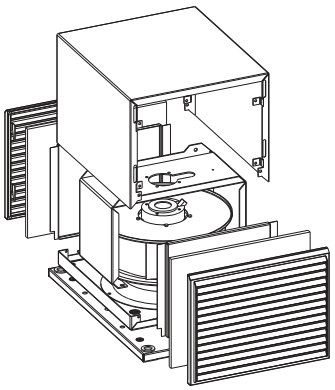Used with ...	Qty	Ordering code	Kit code	Illustration
IP20	2	3AUA0000125201	A-4-X-062	 Instruction code: 3AXD50000001982 **Note:** Fan to be ordered separately
IP42	2	3AUA0000114968	A-4-X-040	 Instruction code: 3AUA0000116875
IP42	2	3AUA0000114967	A-4-X-060	 Instruction code: 3AUA0000115290 **Note:** Fan to be ordered separately
IP54 (230 V)	2	3AXD50000009187	A-4-X-064	 Instruction code: 3AXD50000010284 **Note:** Fan to be ordered separately

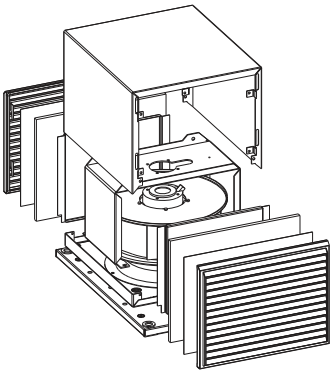Used with ...	Qty	Ordering code	Kit code	Illustration
IP54 (115 V)	2	3AXD50000010362	A-4-X-067	 Instruction code: 3AXD50000010284 **Note:** Fan to be ordered separately

Cooling fans (frames R1i...R4i)

One or two cooling fans are to be installed inside the air outlet compartment to ensure sufficient cooling of the cabinet.

IEC				
Enclosure width / Degree of protection (Auxiliary voltage)	**Component**		**Qty**	**Ordering code**
	Name	**Data**		
400 mm, 600 mm / IP20, IP42 (230 V 50/60 Hz)	Fan	0.77 A; 230 V; 96 W; 50/60 Hz	1	3AXD50000000592
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724
400 mm / IP54 (230 V 50/60 Hz)	Fan	1.1 A; 230 V; 240 W; 50 Hz 1.45 A; 230 V; 350 W; 60 Hz	1	3AXD50000006934
	Capacitor	6 µF, 600 V	1	3AXD50000006959
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724
600 mm / IP54 (230 V 50/60 Hz)	Fan	2.3 A; 230 V; 540 W; 50 Hz 3 A; 230 V; 690 W; 60 Hz	1	3AXD50000006111
	Capacitor	12 µF, 600 V	1	3AXD50000006885
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724
800 mm / IP20, IP42 (230 V 50/60 Hz)	Fan	0.77 A; 230 V; 96 W; 50/60 Hz	2	3AXD50000000592
	Connector	PLUG; 12 AWG; 2.50 mm^2	2	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	2	3AXD50000000724
800 mm / IP54 (230 V 50/60 Hz)	Fan	1.1 A; 230 V; 240 W; 50 Hz 1.45 A; 230 V; 350 W; 60 Hz	2	3AXD50000006934
	Capacitor	6 µF, 600 V	2	3AXD50000006959
	Connector	PLUG; 12 AWG; 2.50 mm^2	2	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	2	3AXD50000000724

UL				
Enclosure width / Degree of protection (Auxiliary voltage)	**Component**		**Qty**	**Ordering code**
	Name	**Data**		
400 mm, 600 mm / IP20, IP42 (230 V 50/60 Hz)	Fan	0.77 A; 230 V; 96 W; 50/60 Hz	1	3AXD50000000592
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724
400 mm, 600 mm / IP20, IP42 (115 V 60 Hz)	Fan	115 V; 115 W; 50/60 Hz	1	3AXD50000700288
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724

UL				
Enclosure width / Degree of protection (Auxiliary voltage)	**Component**		**Qty**	**Ordering code**
	Name	**Data**		
400 mm / IP54 (230 V 50/60 Hz)	Fan	1.1 A; 230 V; 240 W; 50 Hz 1.45 A; 230 V; 350 W; 60 Hz	1	3AXD50000006934
	Capacitor	6 µF, 600 V	1	3AXD50000006959
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724
400 mm / IP54 (115 V 50/60 Hz)	Fan	3.1 A; 115 V; 300 W; 50 Hz 3.9 A; 115 V; 430 W; 60 Hz	1	64750062
	Capacitor	25 µF, 220 V	1	68713188
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724
600 mm / IP54 (230 V 50/60 Hz)	Fan	2.3 A; 230 V; 540 W; 50 Hz 3 A; 230 V; 690 W; 60 Hz	1	3AXD50000006111
	Capacitor	12 µF, 600 V	1	3AXD50000006885
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724
600 mm / IP54 (115 V 50/60 Hz)	Fan	6.3 A; 115 V; 680 W; 60 Hz	1	64750038
	Capacitor	25 µF, 220 V	1	68713188
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724
800 mm / IP20, IP42 (230 V 50/60 Hz)	Fan	0.77 A; 230 V; 96 W; 50/60 Hz	2	3AXD50000000592
	Connector	PLUG; 12 AWG; 2.50 mm^2	2	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	2	3AXD50000000724
800 mm / IP20, IP42 (115 V 60 Hz)	Fan	115 V; 115 W; 50/60 Hz	2	3AXD50000700288
	Connector	PLUG; 12 AWG; 2.50 mm^2	2	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	2	3AXD50000000724
800 mm / IP54 (230 V 50/60 Hz)	Fan	1.1 A; 230 V; 240 W; 50 Hz 1.45 A; 230 V; 350 W; 60 Hz	2	3AXD50000006934
	Capacitor	6 µF, 600 V	2	3AXD50000006959
	Connector	PLUG; 12 AWG; 2.50 mm^2	2	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	2	3AXD50000000724
800 mm / IP54 (115 V 50/60 Hz)	Fan	3.1 A; 115 V; 300 W; 50 Hz 3.9 A; 115 V; 430 W; 60 Hz	2	64750062
	Capacitor	25 µF, 220 V	2	68713188
	Connector	PLUG; 12 AWG; 2.50 mm^2	2	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	2	3AXD50000000724

The wiring diagram examples show a cabinet cooling fan circuit that energizes the fan when at least one inverter module installed in the cabinet is running. The fan will continue to run for 20 minutes after all inverter modules have been stopped.

The following parts (or equivalent) are used to implement the circuit. These parts are to be sourced by the customer.

- Phoenix Contact ST 2,5-DIO/L-R - 3036262 spring cage component terminal block with a 1N4007 diode
- Relpol PI84-24DC-M41G relay
  - Rated load (capacity): 8 A / 24 V DC
  - Rated power consumption: 0.40 … 0.48 W DC
  - GZT80 relay socket
- 600 mm of AWG24, 300 V, UL1569 (or equivalent material, valid for PVC insulation only) wire
- Favier SEP-4 light brown 4 kV fiberglass sleeving
- Fan control wire (code: 3AXD50000003308).

Cooling fans (frames R5i)

A cooling fan is to be installed inside the air outlet compartment to ensure sufficient cooling of the cabinet.

IEC				
Enclosure width / Degree of protection (Auxiliary voltage)	**Component**		**Qty**	**Ordering code**
	Name	**Data**		
400 mm, 600 mm / IP20, IP42 (230 V 50/60 Hz)	Fan	0.77 A; 230 V; 96 W; 50/60 Hz	1	3AXD50000000592
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724
400 mm / IP54 (230 V 50/60 Hz)	Fan	1.1 A; 230 V; 240 W; 50 Hz 1.45 A; 230 V; 350 W; 60 Hz	1	3AXD50000006934
	Capacitor	6 µF, 600 V	1	3AXD50000006959
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724
600 mm / IP54 (230 V 50/60 Hz)	Fan	2.3 A; 230 V; 540 W; 50 Hz 3 A; 230 V; 690 W; 60 Hz	1	3AXD50000006111
	Capacitor	12 µF, 600 V	1	3AXD50000006885
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724

UL				
Enclosure width / Degree of protection (Auxiliary voltage)	**Component**		**Qty**	**Ordering code**
	Name	**Data**		
400 mm, 600 mm / IP20, IP42 (230 V 50/60 Hz)	Fan	0.77 A; 230 V; 96 W; 50/60 Hz	1	3AXD50000000592
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724
400 mm, 600 mm / IP20, IP42 (115 V 60 Hz)	Fan	R3G225-RE19-32	1	3AXD50000700288
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724
400 mm / IP54 (230 V 50/60 Hz)	Fan	1.1 A; 230 V; 240 W; 50 Hz 1.45 A; 230 V; 350 W; 60 Hz	1	3AXD50000006934
	Capacitor	6 µF, 600 V	1	3AXD50000006959
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724
400 mm / IP54 (115 V 50/60 Hz)	Fan	3.1 A; 115 V; 300 W; 50 Hz 3.9 A; 115 V; 430 W; 60 Hz	1	64750062
	Capacitor	25 µF, 220 V	1	68713188
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724

UL				
Enclosure width / Degree of protection (Auxiliary voltage)	**Component**		**Qty**	**Ordering code**
	Name	**Data**		
600 mm / IP54 (230 V 50/60 Hz)	Fan	2.3 A; 230 V; 540 W; 50 Hz 3 A; 230 V; 690 W; 60 Hz	1	3AXD50000006111
	Capacitor	12 µF, 600 V	1	3AXD50000006885
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724
600 mm / IP54 (115 V 50/60 Hz)	Fan	6.3 A; 115 V; 680 W; 60 Hz	1	64750038
	Capacitor	25 µF, 220 V	1	68713188
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724

The wiring diagram examples show a cabinet cooling fan circuit that energizes the fan when at least one inverter module installed in the cabinet is running. The fan will continue to run for 20 minutes after all inverter modules have been stopped.

The following parts (or equivalent) are used to implement the circuit. These parts are to be sourced by the customer.

- Phoenix Contact ST 2,5-DIO/L-R - 3036262 spring cage component terminal block with a 1N4007 diode
- Relpol PI84-24DC-M41G relay
  - Rated load (capacity): 8 A / 24 V DC
  - Rated power consumption: 0.40 … 0.48 W DC
  - GZT80 relay socket
- 600 mm of AWG24, 300 V, UL1569 (or equivalent material, valid for PVC insulation only) wire
- Favier SEP-4 light brown 4 kV fiberglass sleeving
- Fan control wire (code: 3AXD50000003308).

Cooling fans (frames R6i...R7i)

A cooling fan is to be installed inside the IP54 air outlet compartment to ensure sufficient cooling of the cabinet.

Enclosure width / Degree of protection (Auxiliary voltage)	**Component**		**Qty**	**Ordering code**
	Name	**Data**		
400 mm / IP54 (230 V 50/60 Hz)	Fan	1.1 A; 230 V; 240 W; 50 Hz 1.45 A; 230 V; 350 W; 60 Hz	1	3AXD50000006934
	Capacitor	6 µF, 600 V	1	3AXD50000006959
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724
400 mm / IP54 (115 V 50/60 Hz)	Fan	3.1 A; 115 V; 300 W; 50 Hz 3.9 A; 115 V; 430 W; 60 Hz	1	64750062
	Capacitor	25vµF, 220 V	1	68713188
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724

Cooling fans (frames R8i)

Enclosure width / Degree of protection (Auxiliary voltage)	Component		Qty	Ordering code
	Name	Data		
400 mm / IP54 (230 V 50/60 Hz)	Fan	1.1 A; 230 V; 240 W; 50 Hz 1.45 A; 230 V; 350 W; 60 Hz	1	3AXD50000006934
	Capacitor	6 µF, 600 V	1	3AXD50000006959
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724
400 mm / IP54 (115 V 50/60 Hz)	Fan	3.1 A; 115 V; 300 W; 50 Hz 3.9 A; 115 V; 430 W; 60 Hz	1	64750062
	Capacitor	25 µF, 220 V	1	68713188
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724
600 mm / IP54 (230 V 50/60 Hz)	Fan	2.3 A; 230 V; 540 W; 50 Hz 3 A; 230 V; 690 W; 60 Hz	1	3AXD50000006111
	Capacitor	12 µF, 600 V	1	3AXD50000006885
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724
600 mm / IP54 (115 V 50/60 Hz)	Fan	6.3 A; 115 V; 680 W; 60 Hz	1	64750038
	Capacitor	25 µF, 220 V	1	68713188
	Connector	PLUG; 12 AWG; 2.50 mm^2	1	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	1	3AXD50000000724
800 mm / IP54 (230 V 50/60 Hz	Fan	1.1 A; 230 V; 240 W; 50 Hz 1.45 A; 230 V; 350 W; 60 Hz	2	3AXD50000006934
	Capacitor	6 µF, 600 V	2	3AXD50000006959
	Connector	PLUG; 12 AWG; 2.50 mm^2	2	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	2	3AXD50000000724
800 mm / IP54 (115 V 50/60 Hz)	Fan	3.1 A; 115 V; 300 W; 50 Hz 3.9 A; 115 V; 430 W; 60 Hz	2	64750062
	Capacitor	25 µF, 220 V	2	68713188
	Connector	PLUG; 12 AWG; 2.50 mm^2	2	3AXD50000000723
	Connector	SOCKET; 12 AWG; 2.50 mm^2	2	3AXD50000000724

12

Technical data

Contents of this chapter

This chapter contains the technical specifications of the inverter modules and associated components.

Ratings

ACS880-104- ...	Frame size	Input ratings	Output ratings							
				No-overload use			Light-overload use		Heavy-duty use	
		I_1	I_{max}	I_2	P_n	S_n	I_{Ld}	P_{Ld}	I_{Hd}	P_{Hd}
		A	A	A	kW	kVA	A	kW	A	kW
U_n = 400 V										
004A8-3	R1i	5.8	7.0	4.8	1.5	3.3	4.5	1.5	4.0	1.5
006A0-3	R1i	7.2	8.8	6.0	2.2	4.2	5.5	2.2	5.0	1.5
008A0-3	R1i	9.6	10.5	8.0	3.0	5.5	7.6	3.0	6.0	2.2
0011A-3	R2i	12.6	13.5	10.5	4.0	7.3	9.7	4.0	9.0	3.0
0014A-3	R2i	16.8	16.5	14.0	5.5	9.7	13.0	5.5	11.0	4.0
0018A-3	R2i	21.6	21	18.0	7.5	12.5	16.8	7.5	14.0	5.5
0025A-3	R3i	30	33	25	11.0	17.0	23	11.0	19.0	7.5
0035A-3	R3i	42	44	35	15.0	24	32	15.0	29	11.0
0044A-3	R3i	53	53	44	18.5	30	41	18.5	35	15.0
0050A-3	R3i	60	66	50	22	35	46	22	44	22
0061A-3	R4i	73	78	61	30	42	57	30	52	22
0078A-3	R4i	94	100	78	37	54	74	37	69	30
0094A-3	R4i	113	124	94	45	65	90	45	75	37

ACS880-104- ...	Frame size	Input ratings	Output ratings							
				No-overload use			Light-overload use		Heavy-duty use	
		I_1	I_{max}	I_2	P_n	S_n	I_{Ld}	P_{Ld}	I_{Hd}	P_{Hd}
		A	A	A	kW	kVA	A	kW	A	kW
0100A-3	R4i	125	125	104	55	72	100	55	78	37
0140A-3	R6i	169	183	141	75	98	135	75	105	55
0170A-3	R6i	203	220	169	90	117	162	90	126	55
0210A-3	R6i	247	268	206	110	143	198	110	154	75
0250A-3	R6i	295	320	246	132	170	236	132	184	90
0300A-3	R7i	360	390	300	160	208	288	160	224	110
0350A-3	R7i	420	455	350	200	242	336	160	262	132
0470A-3	R8i	529	620	470	250	326	451	250	352	160
0640A-3	R8i	720	840	640	355	443	614	315	479	250
0760A-3	R8i	855	990	760	400	527	730	400	568	315
0830A-3	R8i	934	1080	830	450	575	797	400	621	315
0900A-3	R8i	1013	1080	900	500	624	864	450	473	355
1250A-3	2×R8i	1406	1630	1250	630	866	1200	630	935	500
1480A-3	2×R8i	1665	1930	1480	800	1025	1421	800	1107	630
1760A-3	2×R8i	1980	2120	1760	1000	1219	1690	900	1316	710
2210A-3	3×R8i	2486	2880	2210	1200	1531	2122	1200	1653	900
2610A-3	3×R8i	2936	3140	2610	1400	1808	2506	1400	1952	1000
3450A-3	4×R8i	3881	4140	3450	1800	2390	3312	1800	2581	1400
4290A-3	5×R8i	4826	5150	4290	2400	2972	4118	2000	3209	1800
5130A-3	6×R8i	5771	6160	5130	2800	3554	4925	2400	3837	2000
U_n = 500 V										
003A6-5	R1i	4.3	5.3	3.6	1.5	3.1	3.4	1.5	3.0	1.5
004A8-5	R1i	5.8	7.0	4.8	2.2	4.2	4.5	2.2	4.0	1.5
006A0-5	R1i	7.2	8.8	6.0	3.0	5.2	5.5	3.0	5.0	2.2
008A0-5	R1i	9.6	10.5	8.0	4.0	6.9	7.6	4.0	6.0	3.0
0011A-5	R2i	12.6	13.5	10.5	5.5	9.1	9.7	5.5	9.0	4.0
0014A-5	R2i	16.8	16.5	14.0	7.5	12.1	13.0	7.5	11.0	5.5
0018A-5	R2i	21.6	21	18.0	11.0	16	16.8	11.0	14.0	7.5
0025A-5	R3i	30	33	25	15.0	22	23	15.0	19.0	11.0
0030A-5	R3i	36	36	30	18.5	26	28	18.5	24	15.0
0035A-5	R3i	42	44	35	22	30	32	22	29	18.5
0050A-5	R3i	60	66	50	30	43	45	30	44	22
0061A-5	R4i	73	78	61	37	53	57	37	52	30
0078A-5	R4i	94	100	78	45	68	74	45	59	45
0094A-5	R4i	113	124	94	55	81	90	55	75	45
0110A-5	R6i	136	147	113	75	98	108	75	85	55
0140A-5	R6i	163	177	136	90	118	131	90	102	55
0170A-5	R6i	198	215	165	110	143	158	110	123	75

ACS880-104- ...	Frame size	Input ratings	Output ratings							
				No-overload use			Light-overload use		Heavy-duty use	
		I_1	I_{max}	I_2	P_n	S_n	I_{Ld}	P_{Ld}	I_{Hd}	P_{Hd}
		A	A	A	kW	kVA	A	kW	A	kW
0200A-5	R6i	236	256	197	132	171	189	132	147	90
0240A-5	R6i	288	312	240	160	208	230	160	180	110
0300A-5	R7i	362	393	302	200	262	290	200	226	132
0340A-5	R7i	408	442	340	250	294	326	200	254	160
0440A-5	R8i	495	580	440	250	381	422	250	329	200
0590A-5	R8i	664	770	590	400	511	566	355	441	250
0670A-5	R8i	754	880	670	450	580	643	400	501	315
0740A-5	R8i	833	970	740	500	641	710	450	554	355
0810A-5	R8i	911	1060	810	560	701	778	500	606	400
1150A-5	2×R8i	1294	1500	1150	800	996	1104	710	860	560
1450A-5	2×R8i	1631	1890	1450	1000	1256	1392	900	1085	710
1580A-5	2×R8i	1778	2060	1580	1100	1368	1517	1000	1182	800
2150A-5	3×R8i	2419	2800	2150	1500	1862	2064	1400	1608	1100
2350A-5	3×R8i	1644	3060	2350	1600	2035	2256	1500	1758	1200
3110A-5	4×R8i	3499	4050	3110	2000	2693	2986	2000	2326	1600
3860A-5	5×R8i	4343	5020	3860	2400	3343	3706	2400	2887	2000
4610A-5	6×R8i	5186	6000	4610	3200	392	4426	2800	3448	2400
U_n = 690 V										
007A3-7	R5i	8.8	9.5	7.3	5.5	8.7	6.9	5.5	5.6	4.0
009A8-7	R5i	11.8	12.7	9.8	7.5	11.7	9.3	7.5	7.33	5.5
014A2-7	R5i	17.0	18.5	14.2	11.0	17.0	13.5	11.0	9.8	7.5
0018A-7	R5i	22	23	18.0	15.0	21.5	17.1	15.0	14.2	11.0
0022A-7	R5i	26	29	22	18.5	26	21	18.5	18.0	15.0
0027A-7	R5i	32	35	27	22	32	26	22	22	18.5
0035A-7	R5i	42	46	35	30	42	33	30	27	22
0042A-7	R5i	50	55	42	37	50	40	37	35	30
0052A-7	R5i	62	68	52	45	62	49	45	42	37
0062A-7	R6i	74	81	62	55	74	60	55	46	45
0082A-7	R6i	98	107	82	75	98	79	75	61	55
0100A-7	R6i	119	129	99	90	118	95	90	74	75
0130A-7	R6i	150	163	125	110	149	120	110	94	75
0140A-7	R6i	173	187	144	132	172	138	132	108	90
0190A-7	R6i	230	250	192	160	229	184	160	144	132
0220A-7	R7i	260	282	217	200	259	208	200	162	160
0270A-7	R7i	324	351	270	250	323	259	250	202	200
0340A-7	R8i	383	510	340	315	406	326	250	254	200
0410A-7	R8i	461	620	410	400	490	394	355	307	250
0480A-7	R8i	540	720	480	450	574	461	400	359	315

ACS880-104- ...	Frame size	Input ratings	Output ratings							
				No-overload use			Light-overload use		Heavy-duty use	
		I_1	I_{max}	I_2	P_n	S_n	I_{Ld}	P_{Ld}	I_{Hd}	P_{Hd}
		A	A	A	kW	kVA	A	kW	A	kW
0530A-7	R8i	596	800	530	500	633	509	450	396	355
0600A-7	R8i	675	900	600	560	717	576	560	449	400
0800A-7	2×R8i	900	1200	800	800	956	768	710	598	560
1030A-7	2×R8i	1159	1550	1030	1000	1231	989	900	770	710
1170A-7	2×R8i	1316	1760	1170	1100	1398	1123	1000	875	800
1540A-7	3×R8i	1733	2310	1540	1400	1840	1478	1400	1152	1100
1740A-7	3×R8i	1958	2610	1740	1600	2080	1670	1600	1302	1200
2300A-7	4×R8i	2588	3450	2300	2000	2749	2208	2000	1720	1600
2860A-7	5×R8i	3218	4290	2860	2800	3418	2746	2400	2139	2000
3420A-7	6×R8i	3848	5130	3420	3200	4087	3283	3200	2558	2400

Definitions

U_n	Nominal AC supply voltage of drive system
I_1	Nominal DC input current
I_2	Nominal output current (available continuously with no overloading)
P_n	Typical motor power in no-overload use The horsepower ratings are typical NEMA motor sizes at 460 V (ACS880-104-xxxxA-5) and 575 V (ACS880-104-xxxxA-7) respectively.
S_n	Apparent power in no-overload use
I_{Ld}	Continuous rms output current allowing 10% overload for 1 minute every 5 minutes
P_{Ld}	Typical motor power in light-overload use
I_{max}	Maximum output current. Available for 10 seconds at start; otherwise as long as allowed by drive temperature.
I_{Hd}	Continuous rms output current allowing 50% overload for 1 minute every 5 minutes
P_{Hd}	Typical motor power in heavy-duty use


Note:

- The ratings apply at an ambient temperature of 40 °C (104 °F).
- The ratings apply to units without option +C132 (marine type approval). For ratings of units with option +C132, see ACS880 +C132 marine type-approved drive modules and module packages supplement (3AXD50000037752 [English]).
- To achieve the rated motor power given in the table, the rated current of the drive must be higher than or equal to the rated motor current.
- The DriveSize dimensioning tool available from ABB is recommended for selecting the drive, motor and gear combination.

Derating

Surrounding air temperature derating


In the temperature range +40…50 °C (+104…122 °F), the rated output current is derated by 1 percentage point for every added 1 °C (1.8 °F). The output current can be calculated by multiplying the current given in the rating table by the derating factor *(k)*:

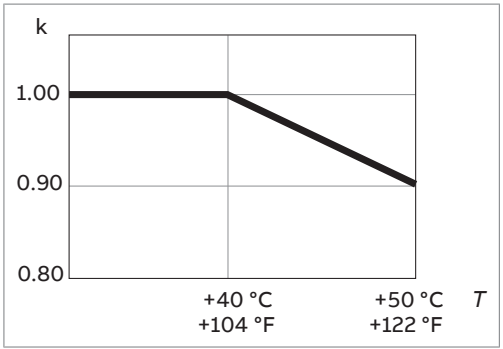

Altitude derating

At altitudes more than 1000 m (3281 ft) above sea level, the output current derating is 1 percentage point for every added 100 m (328 ft). For example, the derating factor for 1500 m (4921 ft) is 0.95. The maximum permitted installation altitude is given in the technical data.

If the surrounding air temperature is less than +40 °C (104 °F), the derating can be reduced by 1.5 percentage points for every 1 °C (1.8 °F) reduction in temperature. A few altitude derating curves are shown below.

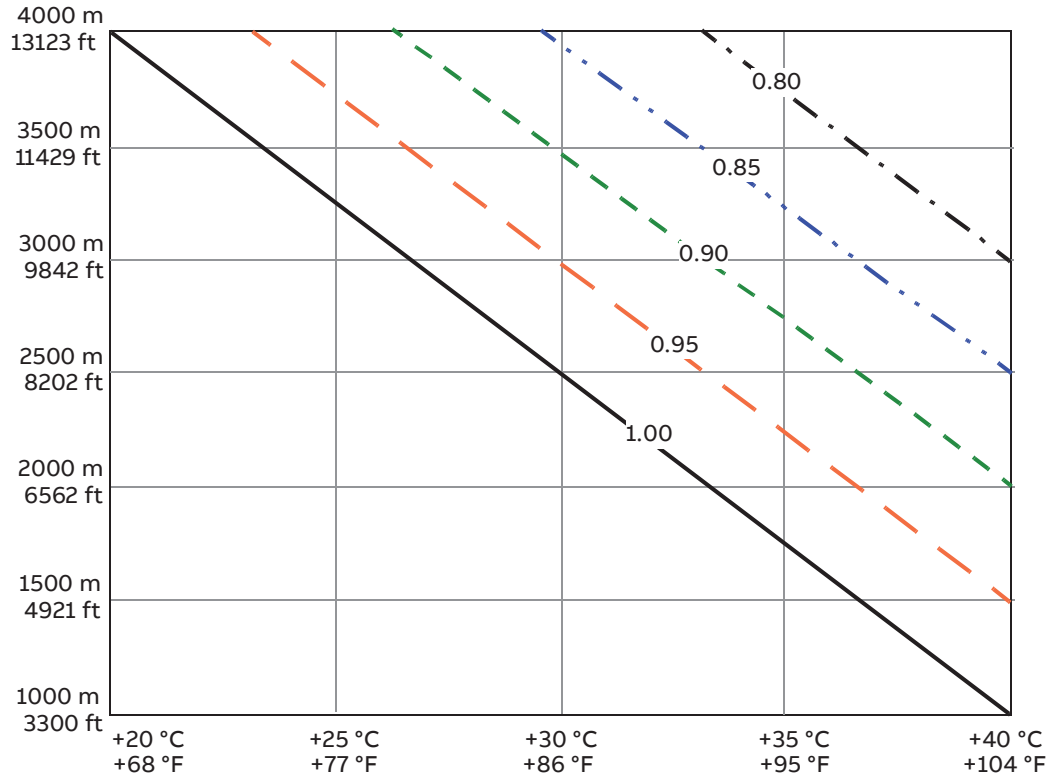

———	Derating factor 1.00
– – –	Derating factor 0.95

	Derating factor 0.90
	Derating factor 0.85
	Derating factor 0.80

For a more accurate derating, use the DriveSize PC tool.

Switching frequency derating

Switching frequencies other than default can require output current derating. Contact ABB for more information.

Output frequency derating

Motor operation above 150 Hz can require type-specific output current derating. Contact ABB for more information.

Cooling characteristics, noise, DC capacitance

ACS880-104-...	Power loss	Air flow		Noise*	DC capacitance
	W	m^3/h	ft^3/min	dB (A)	mF
U_n = 400 V					
004A8-3	70	24	14	47	0.280
006A0-3	80	24	14	47	0.280
008A0-3	90	24	14	47	0.280
0011A-3	110	48	28	39	0.435
0014A-3	140	48	28	39	0.865
0018A-3	170	48	28	39	0.865
0025A-3	200	142	84	63	0.785
0035A-3	300	142	84	63	0.785
0044A-3	350	200	118	71	1.178
0050A-3	410	200	118	71	1.178
0061A-3	500	290	171	70	1.570
0078A-3	600	290	171	70	2.355
0094A-3	740	290	171	70	2.355
0100A-3	750	290	171	70	2.355
0140A-3	1100	650	383	71	4.500
0170A-3	1400	650	383	71	4.500
0210A-3	1800	650	383	71	4.500
0250A-3	2000	650	383	71	6.750
0300A-3	2500	940	553	72	9.000
0350A-3	3100	940	553	72	9.000
0470A-3	4800	1300	765	72	11.250
0640A-3	6700	1300	765	72	13.500
0760A-3	8600	1300	765	72	18.000
0830A-3	8900	1300	765	72	18.000
0900A-3	10000	1300	765	72	18.000

ACS880-104-...	Power loss	Air flow		Noise*	DC capacitance
	W	m³/h	ft³/min	dB (A)	mF
1250A-3	13000	2600	1530	74	27.000
1480A-3	16000	2600	1530	74	36.000
1760A-3	20000	2600	1530	74	36.000
2210A-3	23000	3900	2295	76	54.000
2610A-3	30000	3900	2295	76	54.000
3450A-3	40000	5200	3060	76	72.000
4290A-3	50000	6500	3825	77	90.000
5130A-3	60000	7800	4590	78	108.000
U_n = 500 V					
003A6-5	60	24	14	47	0.280
004A8-5	70	24	14	47	0.280
006A0-5	80	24	14	47	0.280
008A0-5	90	24	14	47	0.280
0011A-5	130	48	28	39	0.435
0014A-5	150	48	28	39	0.865
0018A-5	180	48	28	39	0.865
0025A-5	230	142	84	63	0.785
0030A-5	280	142	84	63	0.785
0035A-5	320	142	84	63	0.785
0050A-5	480	200	118	71	1.178
0061A-5	550	290	171	70	1.570
0078A-5	650	290	171	70	2.355
0094A-5	800	290	171	70	2.355
0110A-5	1000	650	383	71	4.500
0140A-5	1200	650	383	71	4.500
0170A-5	1500	650	383	71	4.500
0200A-5	1800	650	383	71	4.500
0240A-5	2000	650	383	71	6.750
0300A-5	2700	940	553	72	9.000
0340A-5	3200	940	553	72	9.000
0440A-5	4700	1300	765	72	11.250
0590A-5	6300	1300	765	72	13.500
0670A-5	6900	1300	765	72	18.000
0740A-5	8100	1300	765	72	18.000
0810A-5	9300	1300	765	72	18.000
1150A-5	12000	2600	1530	74	27.000
1450A-5	16000	2600	1530	74	36.000
1580A-5	18000	2600	1530	74	36.000
2150A-5	24000	3900	2295	76	54.000
2350A-5	27000	3900	2295	76	54.000
3110A-5	36000	5200	3060	76	72.000


ACS880-104-...	Power loss	Air flow		Noise*	DC capacitance
	W	m³/h	ft³/min	dB (A)	mF
3860A-5	44000	6500	3825	77	90.000
4610A-5	53000	7800	4590	78	108.000
U_n = 690 V					
007A3-7	220	280	165	62	0.343
009A8-7	280	280	165	62	0.343
014A2-7	400	280	165	62	0.343
0018A-7	490	280	165	62	0.343
0022A-7	580	280	165	62	0.687
0027A-7	660	280	165	62	0.687
0035A-7	860	280	165	62	0.687
0042A-7	1000	280	165	62	0.687
0052A-7	1120	280	165	62	0.687
0062A-7	800	650	383	71	1.500
0082A-7	1100	650	383	71	1.500
0100A-7	1300	650	383	71	1.500
0130A-7	1500	650	383	71	3.000
0140A-7	1800	650	383	71	3.000
0190A-7	2500	650	383	71	3.000
0220A-7	2800	940	553	72	4.500
0270A-7	3300	940	553	72	4.500
0340A-7	5200	1300	765	72	6.000
0410A-7	6100	1300	765	72	6.000
0480A-7	6800	1300	765	72	9.000
0530A-7	7900	1300	765	72	9.000
0600A-7	9000	1300	765	72	9.000
0800A-7	12000	2600	1530	74	12.000
1030A-7	15000	2600	1530	74	18.000
1170A-7	18000	2600	1530	74	18.000
1540A-7	23000	3900	2295	76	27.000
1740A-7	26000	3900	2295	76	27.000
2300A-7	35000	5200	3060	76	36.000
2860A-7	43000	6500	3825	77	45.000
3420A-7	52000	7800	4590	78	54.000
*Measured in a typical ABB (ACS880-107) cabinet installation.					

These losses are not calculated according to the ecodesign standard IEC 61800-9-2.


Permitted mounting orientations

The modules can be mounted upright or frames R6i...R8i also on right-hand side.

Frames R6i…R7i viewed from the front:

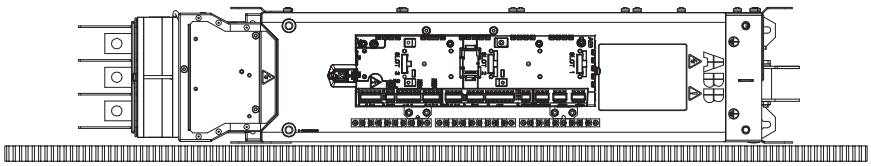

Frame R8i viewed from the front:

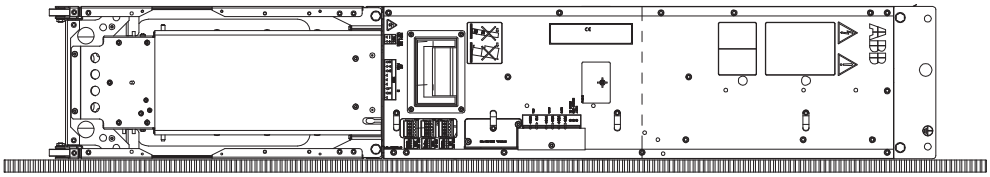

Dimensions and weights

The weights of the ACS880-104 modules are shown below. For the dimensions, see chapter Dimension drawings (page 415).

ACS880-104-...			Weight	
			kg	lbs
004A8-3 006A0-3 008A0-3	003A6-5 004A8-5 006A0-5 008A0-5		3	6.5
0011A-3 0014A-3 0018A-3	0011A-5 0014A-5 0018A-5		5	11
0025A-3 0035A-3 0044A-3 0050A-3	0025A-5 0030A-5 0035A-5 0050A-5		10	22
		007A3-7 009A8-7 014A2-7 0018A-7 0022A-7 0027A-7 0035A-7 0042A-7 0052A-7	14	31
0061A-3 0078A-3 0094A-3 0100A-3	0061A-5 0078A-5 0094A-5		17	38

ACS880-104-...			Weight	
			kg	lbs
0140A-3 0170A-3 0210A-3 0250A-3	0110A-5 0140A-5 0170A-5 0200A-5 0240A-5	0062A-7 0082A-7 0100A-7 0130A-7 0140A-7 0190A-7	38	84
0300A-3 0350A-3	0300A-5 0340A-5	0220A-7 0270A-7	42	93
0470A-3 0640A-3 0760A-3 0830A-3 0900A-3	0440A-5 0590A-5 0670A-5 0740A-5 0810A-5	0340A-7 0410A-7 0480A-7 0530A-7 0600A-7	125	275

Free space requirements

ACS880-104-...			Above [1]		Below [3]		Front [4]		Left/Right [5]	
			mm	inch	mm	inch	mm	inch	mm	inch
004A8-3 006A0-3 008A0-3 0011A-3 0014A-3 0018A-3	003A6-5 004A8-5 006A0-5 008A0-5 0011A-5 0014A-5 0018A-5		150 [2]	5.9 [2]	125	4.9	0	0.0	2.5	0.1
0025A-3 0035A-3 0044A-3 0050A-3	0025A-5 0030A-5 0035A-5 0050A-5		150 [2]	5.9 [2]	150	5.9	0	0.0	2.5	0.1
0061A-3 0078A-3 0094A-3 0100A-3	0061A-5 0078A-5 0094A-5		150 [2]	5.9 [2]	175	6.9	0	0.0	2.5	0.1
		007A3-7 009A8-7 014A2-7 0018A-7 0022A-7 0027A-7 0035A-7 0042A-7 0052A-7	200	7.9	150	5.9	0	0.0	10	0.4
0140A-3 0170A-3 0210A-3 0250A-3 0300A-3 0350A-3	0110A-5 0140A-5 0170A-5 0200A-5 0240A-5 0300A-5 0340A-5	0062A-7 0082A-7 0100A-7 0130A-7 0140A-7 0190A-7 0220A-7 0270A-7	150	5.9	150	5.9	0	0.0	25	1.0

ACS880-104-...			Above [1]		Below [3]		Front [4]		Left/Right [5]	
			mm	inch	mm	inch	mm	inch	mm	inch
0470A-3	0440A-5	0340A-7	200	7.9	-	-	10	0.4	10	0.4
0640A-3	0590A-5	0410A-7								
0760A-3	0670A-5	0480A-7								
0830A-3	0740A-5	0530A-7								
0900A-3	0810A-5	0600A-7								

[1] Required by cooling air flow or [2] air guide

[3] Required by cooling air flow and/or cabling

[4] Additional free space can be required by options installed on control unit, and control wiring

[5] Additional space required for smooth installation

Input power (DC) connection

Voltage (U_1)	ACS880-104-xxxxx-3: 513…566 V DC. This is indicated in the type designation label as typical input voltage level (566 V DC). ACS880-104-xxxxx-5: 513…707 V DC. This is indicated in the type designation label as typical input voltage levels (566/679/707 V DC). ACS880-104-xxxxx-7: 709…976 V DC. This is indicated in the type designation label as typical input voltage levels (742/849/976 V DC).

Motor connection data

Motor types	Asynchronous AC induction motors, permanent magnet synchronous motors, AC induction servomotors and ABB synchronous reluctance (SynRM) motors
Voltage (U_2)	3-phase symmetrical, Umax at field weakening point ACS880-104-xxxxx-3: 0…400 V AC. The maximum value (400 V) is a typical drive input voltage level shown on the type designation label of the supply unit corresponding to 380…415 V AC. ACS880-104-xxxxx-5: 0…400/480/500 V AC. The maximum values (400/480/500 V) are typical drive input voltage levels shown on the type designation label of the supply unit corresponding to 380…500 V AC. ACS880-104-xxxxx-7: 0…525/600/690 V AC. The maximum values (525/600/690 V) are typical drive input voltage levels shown on the type designation label of the supply unit corresponding to 525…690 V AC.
Frequency (f_2)	0…500 Hz 0…120 Hz with sine output filters (option +E206) 0…120 Hz for frames R1i…R5i with du/dt filters (option +E205) 0…200 Hz for frames R6i and R7i with du/dt filters (option +E205) • For higher operational output frequencies, contact your local ABB representative. • Operation at frequencies higher than 150 Hz can require derating. For more information, contact your local ABB representative.
Current	Refer to the technical data.

Switching frequency	Frames R1i…R4i: 4.5 kHz (typical) Frames R5i…R8i: 3 kHz (typical) The switching frequency can vary per frame and voltage. For exact values, contact your local ABB representative.
Maximum recommended motor cable length	Frames R1i…R2i: 150 m (492 ft) [1)] Frames R3i…R7i: 300 m (984 ft) [1)] Frame R8i and multiples: 500 m (1640 ft) **Note:** Longer cables cause a motor voltage decrease which limits the available motor power. The decrease depends on the motor cable length and characteristics. Contact ABB for more information. **Note:** The maximum motor cable length for the EMC compliance is 100 m (328 ft).

1) Tested with 100 m (328 ft) for EMC Category C3. See standards and markings information in ACS880 multidrives cabinets and modules electrical planning instructions (3AUA0000102324 [English]).

Typical power cable sizes

The tables below give the current carrying capacity (I_{Lmax}) and typical size for copper and aluminum cables with PVC or XLPE insulation. A correction factor K = 0.70 is used. Time const. is the temperature time constant of the cable.

The cable sizing is based on a maximum of 9 cables installed side by side on a ladder type cable tray, with three trays on top of each other (with 30 cm of space between the trays), and an ambient temperature of 30 °C (IEC 60364-5-52).

Conductor cross-section (copper)		PVC insulation Conductor temperature 70°		XLPE insulation Conductor temperature 90°		Typical dimensions of copper cable	
mm²	AWG / kcmil	I_{Lmax} (A)	Time const. (s)	I_{Lmax} (A)	Time const. (s)	Size	ø [mm]
1.5	16	13	85	16	67	3 × 1.5 + 1.5	13
2.5	12	18	121	23	88	3 × 2.5 + 2.5	14
4	12	24	175	30	133	3 × 4 + 4	16
6	10	30	251	38	186	3 × 6 + 6	18
10	8	42	359	53	268	3 × 10 + 10	21
16	6	56	514	70	391	3 × 16 + 16	23
25	4	71	791	89	598	3 × 25 + 16	24
35	1	88	1000	110	760	3 × 35 + 16	26
50	1/0	107	1308	134	990	3 × 50 + 25	29
70	2/0	137	1613	171	1230	3 × 70 + 35	32
95	4/0	167	2046	209	1551	3 × 95 + 50	38
120	250	193	2441	241	1859	3 × 120 + 70	41
150	300	223	2820	279	2139	3 × 150 + 70	44
185	400	255	3329	319	2525	3 × 185 + 95	50
240	500	301	4073	376	3099	3 × 240 + 120	55
300	600	348	4779	435	3636	3 × 300 + 150	58

Conductor cross-section (aluminum)		PVC insulation Conductor temperature 70°		XLPE insulation Conductor temperature 90°		Typical dimensions of aluminum cable	
mm²	AWG / kcmil	I_{Lmax} (A)	Time const. (s)	I_{Lmax} (A)	Time const. (s)	Size	ø [mm]
35	1	67	736	84	669	3 × 35 + 10 Cu	26
50	1/0	82	959	102	874	3 × 50 + 15 Cu	29
70	2/0	105	1182	131	1079	3 × 70 + 21 Cu	32
95	4/0	128	1492	159	1376	3 × 95 + 29 Cu	38
120	250	148	1776	184	1637	3 × 120 + 41 Cu	41
150	300	171	2042	213	1881	3 × 150 + 41 Cu	44
185	400	196	2422	243	2237	3 × 185 + 57 Cu	49
240	500	231	2967	286	2740	3 × 240 + 72 Cu	54
300	600	267	3478	330	3229	3 × 300 + 88 Cu	58

Terminal data for the power cables

Input terminals


Frame size	UDC+, UDC-		PE
	Conductor size	Tightening torque	Tightening torque
R1i	0.25 … 4 mm²	0.5 … 0.6 N·m (4.4 …5.3 lbf·in)	1.5 N·m (13 lbf·in)
R2i	0.5 … 6 mm²	1.2 … 1.5 N·m (10.6 … 13.3 lbf·in)	1.5 N·m (13 lbf·in)
R3i…R5i	6…70 mm²	Allen screw: 15 N·m (11 lbf·ft) Connection post: 4 N·m (30 lbf·in) Connector cover screws: 3 N·m (25 lbf·in)	3 N·m (25 lbf·in) (screw size M5)
R6i…R7i	Refer to chapter Dimension drawings and section One R6i/R7i module in a 400 mm wide Rittal VX25 enclosure (page 103).		
R8i and multiples	M12, maximum intrusion into module 20 mm (0.8”). Refer to chapter Dimension drawings and section One R8i module in a 400 mm wide Rittal VX25 enclosure (page 118).		

Output terminals (frames R1i…R5i)

Frame size	U2, V2, W2		PE
	Conductor size	Tightening torque	Tightening torque
R1i	0.25 … 4 mm²	0.5 … 0.6 N·m (4.4 …5.3 lbf·in)	1.5 N·m (13 lbf·in)
R2i	0.5 … 6 mm²	1.2 … 1.5 N·m (10.6 … 13.3 lbf·in)	1.5 N·m (13 lbf·in)

Frame size	U2, V2, W2		PE
	Conductor size	Tightening torque	Tightening torque
R3i…R5i	6…70 mm²	Allen screw: 15 N·m (11 lbf·ft) Connection post: 4 N·m (30 lbf·in) Connector cover screws: 3 N·m (25 lbf·in)	3 N·m (25 lbf·in) (screw size M5)


Output terminals (frames R6i…R7i)

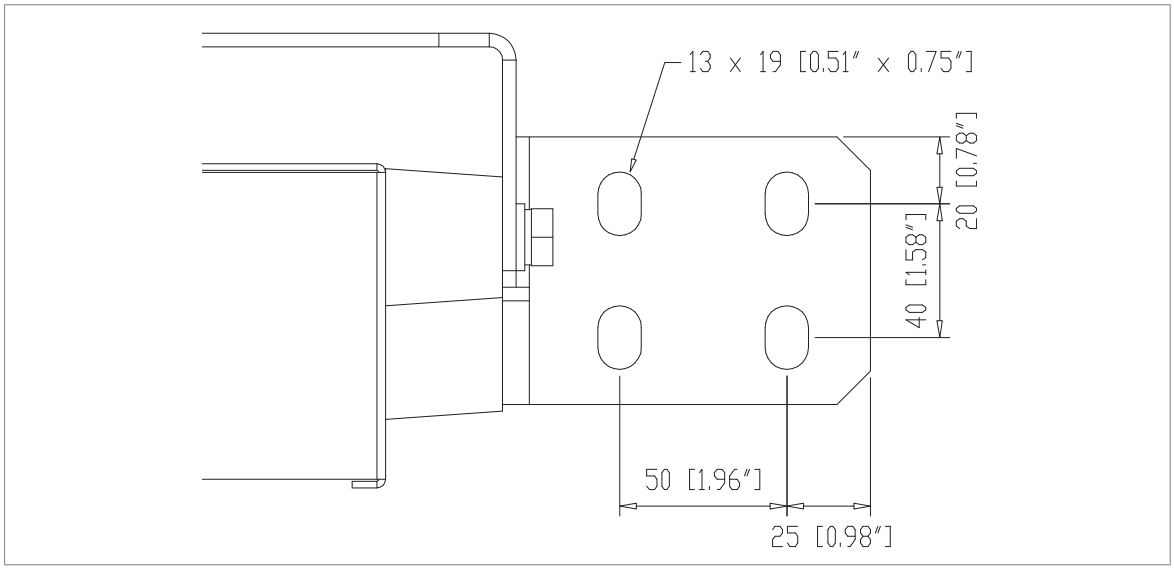

Screw size: M12 or ½″. Tightening torque: 70 N·m (52 lbf·ft)

Busbar material: Tin-plated copper

Output terminals (frame R8i)

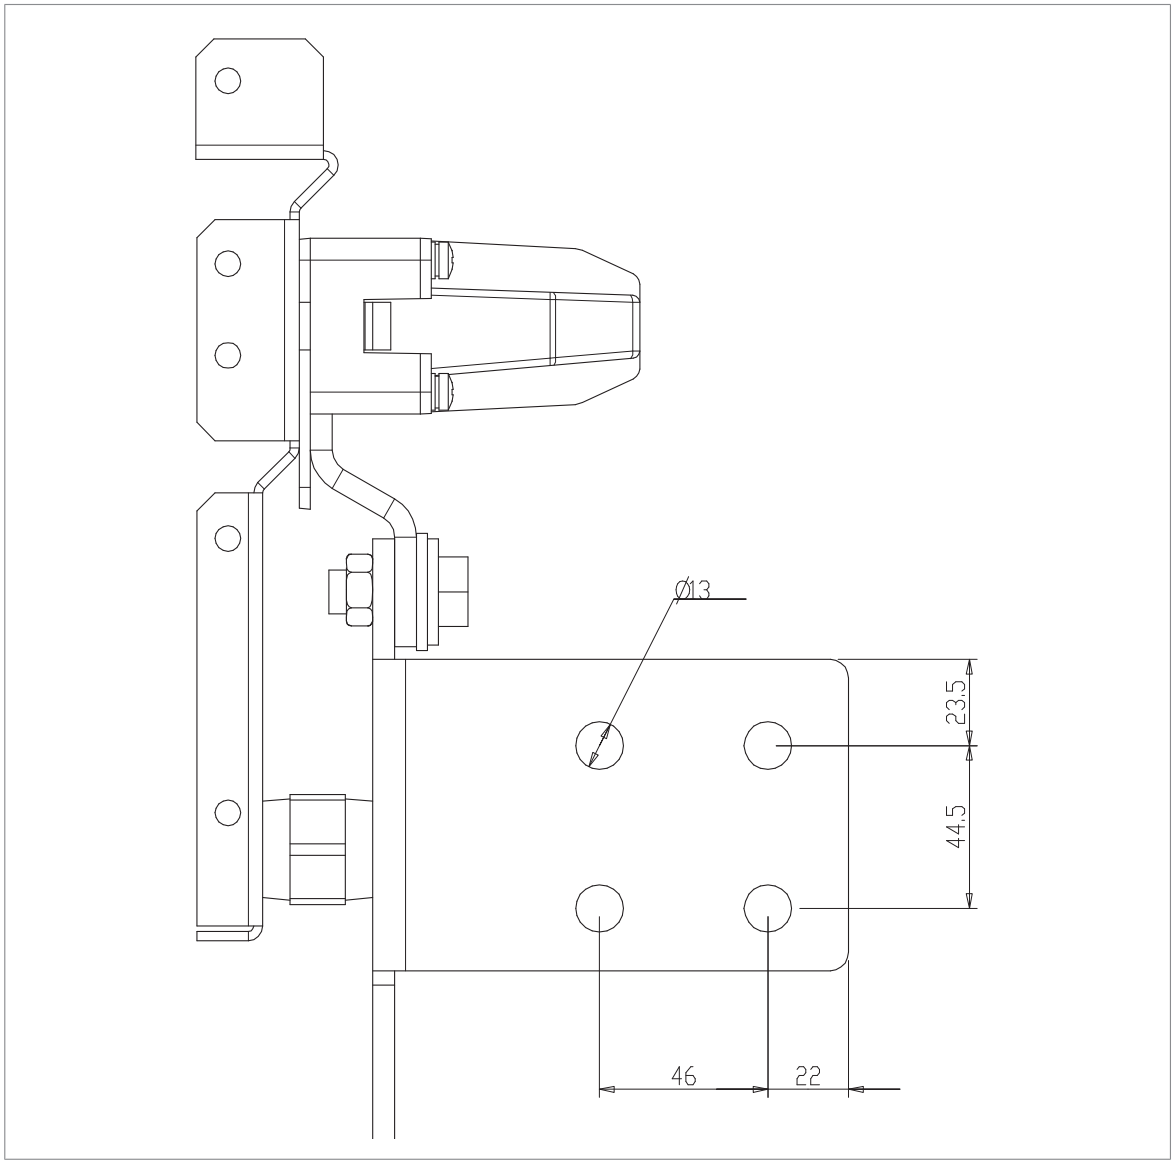

Screw size: M12 or ½". Tightening torque: 70 N·m (52 lbf·ft)

Busbars to quick connector: M12. Tightening torque: 50 N·m (37 lbf·ft)

Busbars to support insulators: M8. Tightening torque: 9 N·m (6.5 lbf·ft)

Busbar material: Tin-plated copper

Control connections

See chapters Control unit (UCU) and Control unit (BCU, ZCU).

Protection classes

Degrees of protection (IEC/EN 60529)	IP00 (frames R6i…R8i)) IP20 (frames R1i…R5i)
Enclosure types (UL 50/50E)	UL Open Type
Overvoltage category (IEC/EN 60664-1)	III
Protective class (IEC/EN 61800-5-1)	I

Ambient conditions

Environmental limits for the drive system are given below. The drive system is to be used in a heated, indoor, controlled environment.

	Operation installed for stationary use	**Storage** in the protective package	**Transportation** in the protective package
Installation site altitude above sea level	1. Frame R1i…R4i module: 0…2000 m (6561 ft) 2. Frame R5i…R8i module: 0…4000 m (13123 ft) Output derated above 1000 m (3281 ft).	-	-
	For supply network types, see section Input power (DC) connection (page 365).		
Air temperature	0 … +40 °C (+32 … +104 °F). No condensation allowed. Output derated in the range +40 … +50 °C (+104 … +122 °F). See section Ambient temperature derating.	-40 to +70 °C (-40 to +158 °F)	-40 to +70 °C (-40 to +158 °F)
Relative humidity	5 to 95%	Max. 95%	Max. 95%
	No condensation allowed. Maximum allowed relative humidity is 60% in the presence of corrosive gases.		
Contamination	IEC/EN 60721-3- 3:2002: Classification of environmental conditions - Part 3-3: Classification of groups of environmental parameters and their severities - Stationary use of weather protected locations	IEC 60721-3-1	IEC 60721-3-2
Chemical gases	Class 3C2	Class 1C2	Class 2C2
Solid particles	Class 3S1. No conductive dust allowed.	Class 1S3 (packing must support this, otherwise 1S2)	Class 2S2

Vibration IEC 61800-5-1 IEC 60068-2-6:2007, EN 60068-2-6:2008 Environmental testing Part 2: Tests -Test Fc: Vibration (sinusoidal)	10…57 Hz: max. 0.075 mm amplitude 58…150 Hz: 1 g Tested in ABB multidrive cabinet (ACS880-x07) according to: Max. 1 mm (0.04 in.) (5 … 13.2 Hz), max. 0.7 g (13.2 … 100 Hz) sinusoidal	For modules and cabinets in packages: IEC/EN 60721-3-1:1997 Classification of environmental conditions - Part 3: Classification of groups of environmental parameters and their severities - Section 1: Storage	For cabinet package: IEC/EN 60721-3-1:1997 Classification of environmental conditions - Part 3: Classification of groups of environmental parameters and their severities - Section 2: Transportation
Shock IEC 60068-2-27:2008, EN 60068-2-27:2009 Environmental testing - Part 2-27: Tests - Test Ea and guidance: Shock	Not allowed	With packing max. 100 m/s2 (330 ft./s2) 11 ms	With packing max. 100 m/s2 (330 ft./s2) 11 ms

Colors

RAL 9002 / PMS 1C Cool Gray, RAL 9017, NCS 1502-Y

Materials

Module

Refer to ACS880 cabinet-installed drives and multidrive modules recycling instructions and environmental information (3AXD50000153909 [English]).

Packaging of module

This is a complete list of the package materials. The materials vary depending on the frame size (packages do not contain all materials listed below).

- Cardboard (heavy duty quality with wet strength glue in large modules)
- Molded pulp
- Plywood
- Wood
- PP (strapping)
- EPP (foam)
- PE (plastic bag and/or VCI film)
- Metal (fixing clamps, screws).

Packaging of options

- Cardboard
- Kraft paper
- PP (straps)
- PE (film, bubble wrap)
- Plywood, wood (only for heavy components).

Materials vary according to the item type, size and shape. Typical package consists of a cardboard box with paper filling or bubble wrap. ESD-safe packing materials are used for printed circuit boards and similar items.

- **Manuals**

Printed product manuals are made of recyclable paper. Product manuals are available on the Internet.

Disposal

The main parts of the drive can be recycled to preserve natural resources and energy. Product parts and materials should be dismantled and separated.

Generally all metals, such as steel, aluminum, copper and its alloys, and precious metals can be recycled as material. Plastics, rubber, cardboard and other packaging material can be used in energy recovery.

Printed circuit boards and DC capacitors need selective treatment according to IEC 62635 guidelines.

To aid recycling, most plastic parts are marked with an appropriate identification code. In addition, components containing substances of very high concern (SVHCs) are listed in European Chemicals Agency's SCIP database. SCIP is the database for information on Substances of Concern In articles as such or in complex objects (Products) established under the Waste Framework Directive (2008/98/EC). For further information, contact your local ABB distributor or consult European Chemicals Agency's SCIP database to find out which SVHCs are used in the drive, and to find out where those components are located.

Contact your local ABB distributor for further information on environmental aspects. End of life treatment must follow international and national regulations.

For more information on ABB end of life services, refer to new.abb.com/service/end-of-life-services.

Standards

See ACS880 multidrives cabinets and modules electrical planning instructions (3AUA0000102324 [English]).

Markings

See ACS880 multidrives cabinets and modules electrical planning instructions (3AUA0000102324 [English]).

Efficiency

Approximately 98% at nominal power level.

The efficiency is not calculated according to the ecodesign standard IEC 61800-9-2.

Energy efficiency data (ecodesign)

Energy efficiency data is not provided for the drive/unit. Multidrives and multidrive modules are not in the scope of the EU ecodesign requirements (Regulation EU/2019/1781) or the UK ecodesign requirements (Regulation SI 2021 No. 745).

Auxiliary power consumptions

Control equipment

Device	U_n	f Hz	I_{cont} A	I_{start} A	P_{cont} W
UCU control unit	24 V DC (+30%/-20%)	-	2.5 [1)]	-	60
ZCU/BCU control unit	24 V DC (+10%)	-	2.0	-	48
R8i module: internal electronics	230 V AC (+15%/-20%)	50/60	0.45	-	105
	115 V AC (+15%/-20%)	50/60	0.9	-	105
R8i module: heating element (option +C183)	230 V AC	50/60	-	-	40
	115 V AC	60	-	-	40
R8i module: direct-on-line fan (option +C188)	400 V AC	50	1.5	3.0	-
		60	1.9	3.8	-
	320 V AC	60	1.5	4.4	-
Charging controller	230 V AC (+10%/-15%)	50/60	0.04	-	-
	115 V AC (+10%/-15%)	50/60	0.08	-	-
PDAL2 switch/disconnector interlock coil	230 V AC (+10%/-30%)	50	-	-	6.5
	240 V AC (+10%/-30%)	60	-	-	6.5
	110 V AC (+10%/-30%)	60	-	-	6.5

1) The value is applicable in these conditions: UCU-24 control unit, with 24 V DC power supply, with control panel, with 4 relay outputs in use, with all analog outputs at maximum current, with RDCO module and 3 option modules installed, and with 8 inverter modules in the STO circuit.

Cabinet cooling fans

Frame size	Enclosure width (IEC, UL)	U_n V AC	f Hz	I_{cont} A
R1i…R5i (IP20/IP42 roof fan)	400/600/800 mm (UL)	230	50	0.7
	400/600/800 mm (IEC)		60	0.9
	400/600/800 mm (UL)	115	60	1.8
R1i…R8i (IP54 roof fan)	400/800 mm (IEC/UL)	230	50	1.1
			60	1.45
	600 mm (IEC/UL)	230	50	2.3
			60	3
	400/800mm (UL)	115	50	3.1
			60	3.9
	600 mm (UL)	115	50	5.5
			60	6.3

Definitions

f	Supply frequency
I_{cont}	Continuous current consumption
I_{start}	Calculated load current at start
P_{cont}	Continuous input power
U_n	Voltage requirement

Fuse data

Ferrules used with 400 V and 500 V units

Rating	Class	Example	Power loss at I_n	Clearing I^2t		U_n
A rms			W	A^2s	V	V
10	aR	Bussmann FWP-10A14Fa	4	22	660	660 (IEC) 700 (UL)
15	aR	Bussmann FWP-15A14Fa	5.5	75	660	
20	aR	Bussmann FWP-20A14Fa	6	180	660	
25	aR	Bussmann FWP-25A14Fa	7	320	660	
32	aR	Bussmann FWP-32A14Fa	7.6	600	660	
50	aR	Mersen 6,921 CP URQ 27x60/50	16	610	690	690
63	aR	Mersen 6,921 CP URQ 27x60/63	21	860	690	
80	aR	Mersen 6,921 CP URQ 27x60/80	24	1880	690	
100	aR	Mersen 6,921 CP URQ 27x60/100	27	3210	690	
125	aR	Mersen 6,921 CP URQ 27x60/125	30	6970	690	
160	aR	Mersen 6,921 CP URQ 27x60/160	34	15000	690	
200	aR	Mersen 6,921 CP URQ 27x60/200	38	30000	690	

Ferrules used with 690 V units

Rating	Class	Example	Power loss at I_n	Clearing I^2t		U_n
A rms			W	A^2s	V	V
40	aR	Mersen 1021 CP URB 27x60/40	17	450	1000	1000
100	aR	Mersen 1021 CP URB 27x60/100	27	6000	1000	

Flush-end fuse blocks used with 400 V and 500 V units

Rating	Class	Example	Power loss at I_n	Clearing I^2t		Size	U_n
A rms			W	A^2s	V		V
250	aR	Bussmann 170M4409	55	21000	660	1	690 (IEC) 700 (UL)
315	aR	Bussmann 170M4410	58	42000	660		
400	aR	Bussmann 170M4412	65	91500	660		
450	aR	Bussmann 170M4413	70	120000	660		
500	aR	Bussmann 170M4414	72	170000	660		
630	aR	Bussmann 170M4416	80	350000	660		
700	aR	Bussmann 170M4417	85	465000	660		
800	aR	Bussmann 170M4418	95	725000	660		
900	aR	Bussmann 170M6413	120	670000	660	3	
1100	aR	Bussmann 170M6415	130	1300000	660		
1250	aR	Bussmann 170M6416	140	1950000	660		
1400	aR	Bussmann 170M6417	155	2450000	660		
1600	aR	Bussmann 170M6419	160	3900000	660		

Flush-end fuse blocks used with 690 V units

Rating	Class	Example	Power loss at I_n	Clearing I^2t		Size	U_n
A rms			W	A^2s	V		V
125	aR	Bussmann 170M3392	35	9000	1000	1*	690 (IEC) 700 (UL)
160	aR	Bussmann 170M4388	45	11500	1000	1	
200	aR	Bussmann 170M4389	50	22500	1000		
250	aR	Bussmann 170M4390	60	4600	1000		
315	aR	Bussmann 170M4391	65	9000	1000		
350	aR	Bussmann 170M4392	70	125000	1000		
400	aR	Bussmann 170M4393	75	175000	1000		
500	aR	Bussmann 170M4395	85	340000	1000		1100 (IEC)
630	aR	Bussmann 170M6544	115	495000	1000	3	1250 (IEC), 1300 (UL)
800	aR	Bussmann 170M6546	125	995000	1000		
1000	aR	Bussmann 170M6548	135	2150000	1000		1100 (IEC)
1100	aR	Bussmann 170M6549	140	2800000	1000		1000 (IEC)

Tightening torques

Unless a tightening torque is specified in the text, the following torques can be used.

Electrical connections

Size	Torque	Strength class
M3	0.5 N·m (4.4 lbf·in)	4.6...8.8
M4	1 N·m (9 lbf·in)	4.6...8.8
M5	4 N·m (35 lbf·in)	8.8
M6	9 N·m (6.6 lbf·ft)	8.8
M8	22 N·m (16 lbf·ft)	8.8
M10	42 N·m (31 lbf·ft)	8.8
M12	70 N·m (52 lbf·ft)	8.8
M16	120 N·m (90 lbf·ft)	8.8

Mechanical connections

Size	Max. torque	Strength class
M5	6 N·m (53 lbf·in)	8.8
M6	10 N·m (7.4 lbf·ft)	8.8
M8	24 N·m (17.7 lbf·ft)	8.8

Insulation supports

Size	Max. torque	Strength class
M6	5 N·m (44 lbf·in)	8.8
M8	9 N·m (6.6 lbf·ft)	8.8
M10	18 N·m (13.3 lbf·ft)	8.8
M12	31 N·m (23 lbf·ft)	8.8

Cable lugs

Size	Max. torque	Strength class
M8	15 N·m (11 lbf·ft)	8.8 (A2-70 or A4-70)
M10	32 N·m (23.5 lbf·ft)	8.8
M12	50 N·m (37 lbf·ft)	8.8

Disclaimers

Generic disclaimer

The manufacturer shall have no obligation with respect to any product which (i) has been improperly repaired or altered; (ii) has been subjected to misuse, negligence or accident; (iii) has been used in a manner contrary to the manufacturer’s instructions; or (iv) has failed as a result of ordinary wear and tear.

Cyber security disclaimer

This product is designed to be connected to and to communicate information and data via a network interface. It is Customer's sole responsibility to provide and continuously ensure a secure connection between the product and Customer network or any other network (as the case may be). Customer shall establish and maintain any appropriate measures (such as but not limited to the installation of firewalls, application of authentication measures, encryption of data, installation of anti-virus programs, etc.) to protect the product, the network, its system and the interface against any kind of security breaches, unauthorized access, interference, intrusion, leakage and/or theft of data or information.

ABB and its affiliates are not liable for damages and/or losses related to such security breaches, any unauthorized access, interference, intrusion, leakage and/or theft of data or information.

Declarations of conformity

See ACS880 multidrives cabinets and modules electrical planning instructions (3AUA0000102324 [English]).

13

The Safe torque off function

Contents of this chapter

This chapter describes the Safe torque off (STO) function of the drive and gives instructions for its use.

Note: In this chapter, the term 'drive' refers to one inverter unit of the drive system.

Description

WARNING!
In case of parallel-connected drives or dual-winding motors, the STO must be activated on each drive to remove the torque from the motor.

The Safe torque off function can be used, for example, as the final actuator device of safety circuits (such as an emergency stop circuit) that stop the drive in case of danger. Another typical application is a prevention of unexpected start-up function that enables short-time maintenance operations like cleaning or work on non-electrical parts of the machinery without switching off the power supply to the drive.

When activated, the Safe torque off function disables the control voltage for the power semiconductors of the drive output stage, thus preventing the drive from generating the torque required to rotate the motor. If the motor is running when Safe torque off is activated, it coasts to a stop.

The Safe torque off function has a redundant architecture, that is, both channels must be used in the safety function implementation. The safety data given in this manual is calculated for redundant use, and does not apply if both channels are not used.

The Safe torque off function complies with these standards:

Standard	Name
IEC 60204-1:2021 EN 60204-1:2018	Safety of machinery – Electrical equipment of machines – Part 1: General requirements
IEC 61000-6-7:2014	Electromagnetic compatibility (EMC) – Part 6-7: Generic standards – Immunity requirements for equipment intended to perform functions in a safety-related system (functional safety) in industrial locations
IEC 61326-3-1:2017	Electrical equipment for measurement, control and laboratory use – EMC requirements – Part 3-1: Immunity requirements for safety-related systems and for equipment intended to perform safety-related functions (functional safety) – General industrial applications
IEC 61508-1:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems – Part 1: General requirements
IEC 61508-2:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems – Part 2: Requirements for electrical/electronic/programmable electronic safety-related systems
IEC 61511-1:2017	Functional safety – Safety instrumented systems for the process industry sector
IEC 61800-5-2:2016 EN 61800-5-2:2007	Adjustable speed electrical power drive systems – Part 5-2: Safety requirements – Functional
EN IEC 62061:2021	Safety of machinery – Functional safety of safety-related control systems
EN ISO 13849-1:2015	Safety of machinery – Safety-related parts of control systems – Part 1: General principles for design
EN ISO 13849-2:2012	Safety of machinery – Safety-related parts of control systems – Part 2: Validation

The function also corresponds to Prevention of unexpected start-up as specified by EN ISO 14118:2018 (ISO 14118:2017), and Uncontrolled stop (stop category 0) as specified in EN/IEC 60204-1.

Compliance with the European Machinery Directive and the UK Supply of Machinery (Safety) Regulations

Refer to ACS880 multidrive cabinets and modules electrical planning instructions (3AUA0000102324 [English]).

Wiring

For the electrical specifications of the STO connection, see the technical data of the control unit.

Activation switch

In the wiring diagrams, the activation switch has the designation [K]. This represents a component such as a manually operated switch, an emergency stop push button switch, or the contacts of a safety relay or safety PLC.

- In case a manually operated activation switch is used, the switch must be of a type that can be locked out to the open position.
- The contacts of the switch or relay must open/close within 200 ms of each other.
- An FSO, FSPS, FSCS, or FPTC module can also be used. For more information, see the module documentation.

Cable types and lengths

- ABB recommends double-shielded twisted-pair cable.
- Maximum cable lengths:
  - 300 m (1000 ft) between activation switch [K] and drive control unit
  - 60 m (200 ft) between multiple drives
  - 60 m (200 ft) between external power supply and first control unit
  - 30 m (100 ft) between control unit and last inverter module in the chain.

Note: A short-circuit in the wiring between the switch and an STO terminal causes a dangerous fault. Therefore, it is recommended to use a safety relay (including wiring diagnostics) or a wiring method (shield grounding, channel separation) which reduces or eliminates the risk caused by the short-circuit.

Note: The voltage at the STO input terminals of the control unit (or frame R8i inverter module) must be at least 17 V DC to be interpreted as “1”.


The pulse tolerance of the input channels is 1 ms.

Grounding of protective shields

- Ground the shield in the cabling between the activation switch and the control unit at the control unit only.
- Ground the shield in the cabling between two control units at one control unit only.
- Do not ground the shield in the cabling between control unit and inverter module, or between inverter modules.


Dual-channel connection with internal power supply

Frames R1i...R7i (R6i/R7i without option +C249), with ZCU control unit

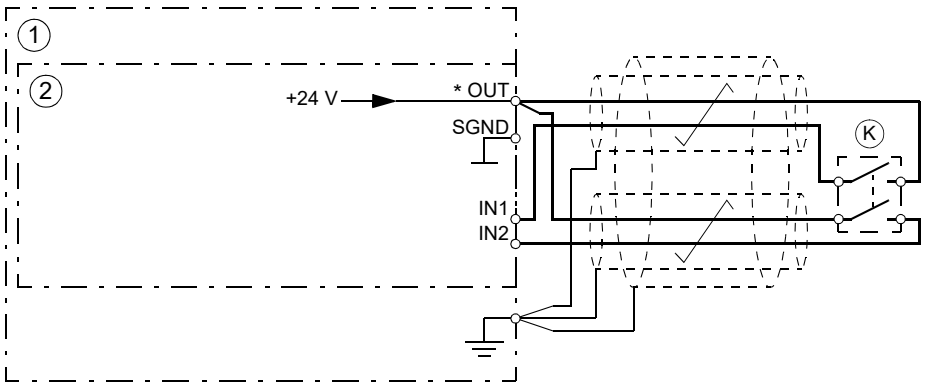


1	Inverter unit
2	Control unit
K	Activation switch
* OUT1 in frame R5i	

Frame R6i/R7i with option +C249, with BCU control unit

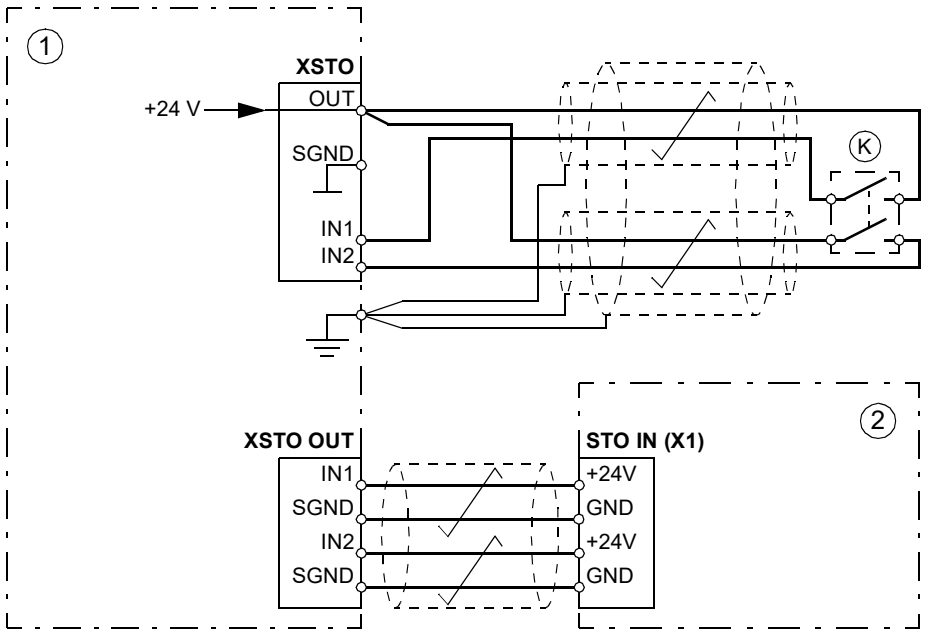


1	Control unit
2	Inverter module
K	Activation switch

Frame R6i/R7i with option +C249, with UCU control unit

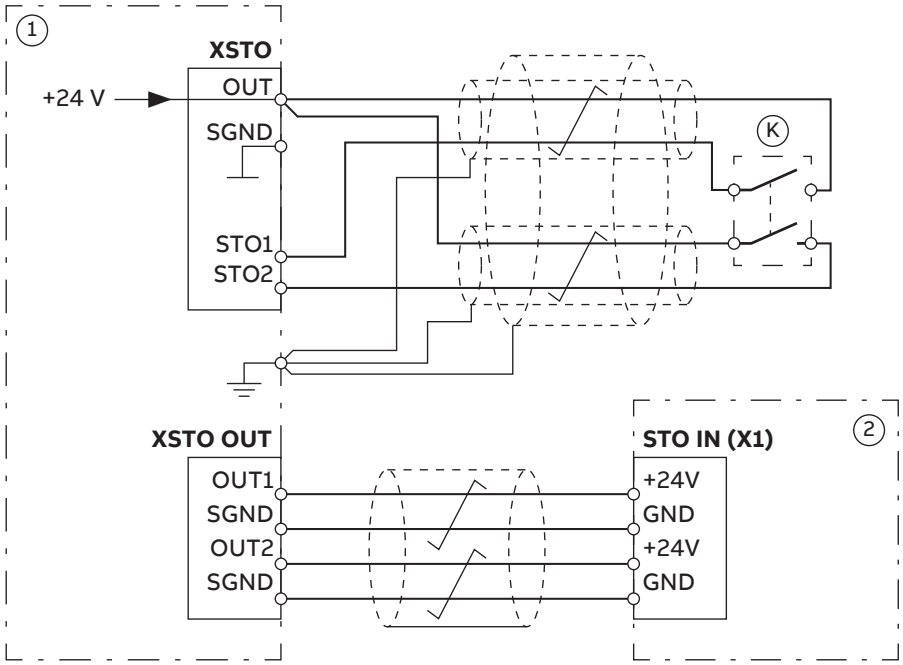


1	Control unit
2	Inverter module
K	Activation switch

Frame R8i and multiples with BCU control unit

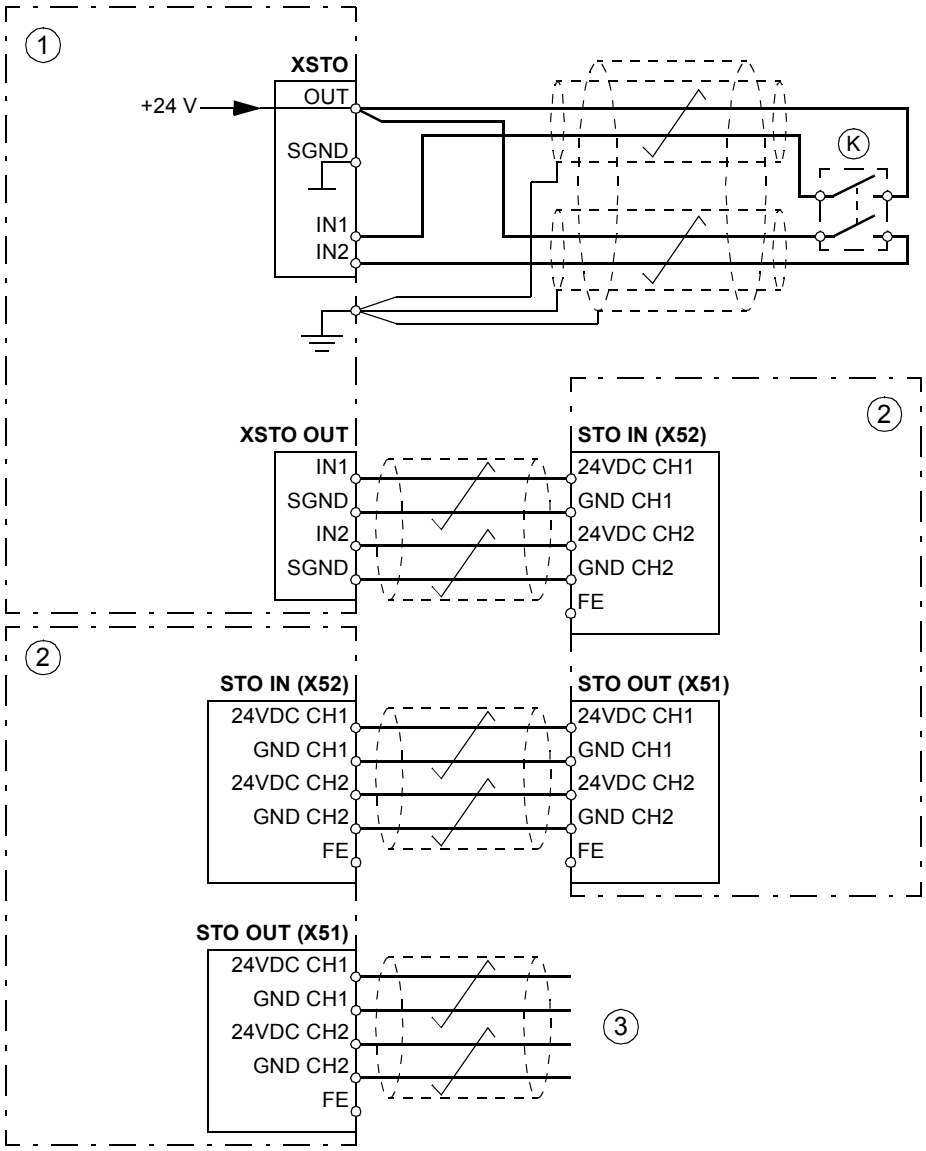


1	Inverter control unit
2	Inverter module(s)
3	To remaining inverter modules
K	Activation switch

Frame R8i and multiples with UCU control unit

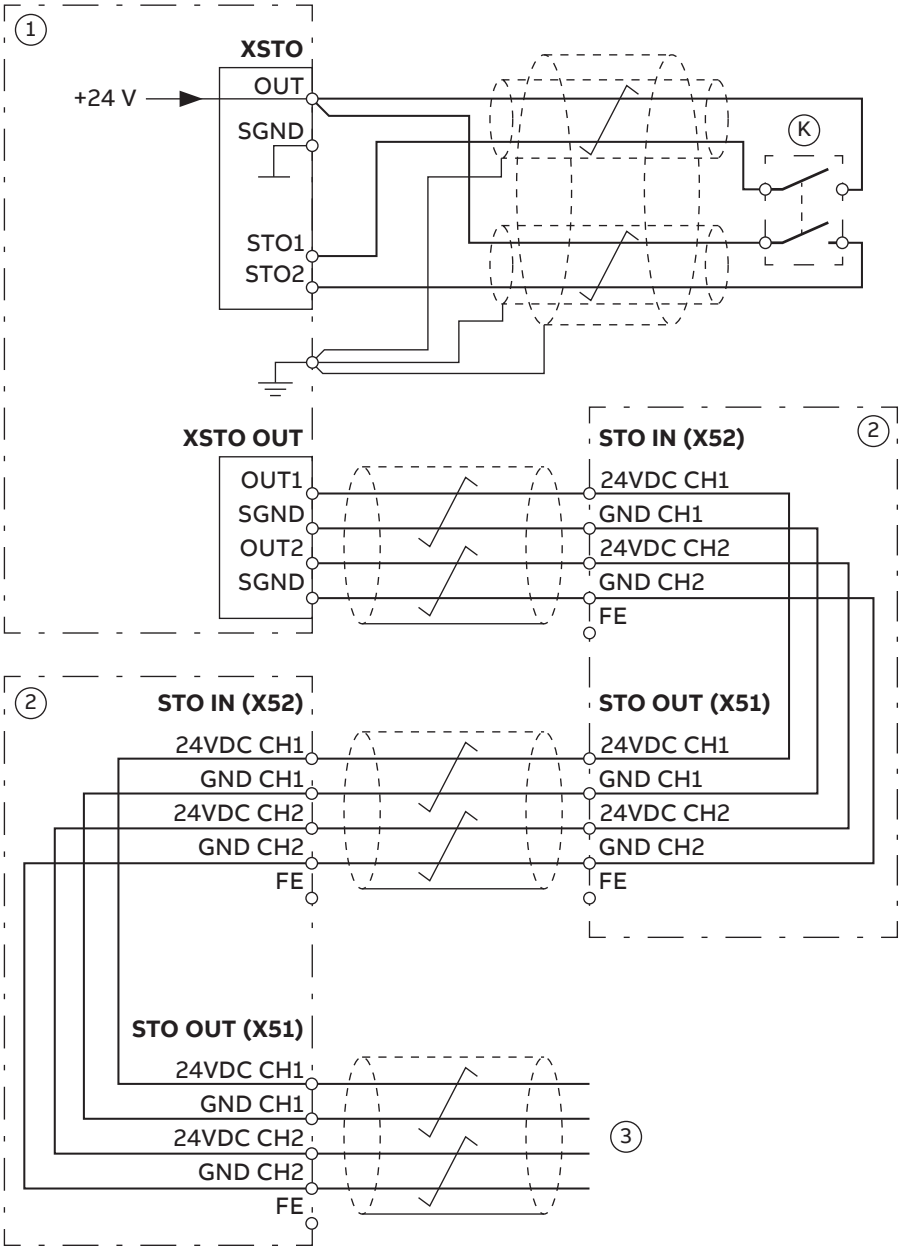

1	Inverter control unit
2	Inverter module(s)
3	To remaining inverter modules
K	Activation switch

Single-channel connection of activation switch, with ZCU-12 control unit

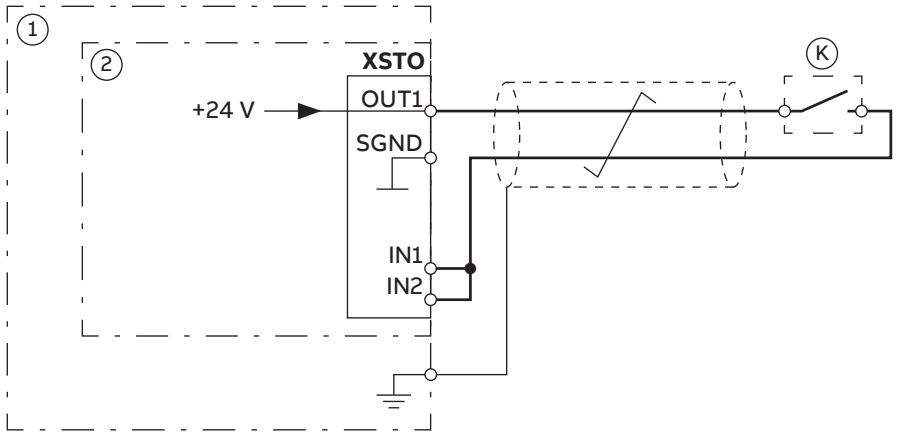


Note:

- Both STO inputs (IN1, IN2) must be connected to the activation switch. Otherwise, no SIL/PL classification is given.
- Pay special attention to avoiding any potential failure modes for the wiring. For example, use shielded cable. For measures for fault exclusion of wiring, see eg. EN ISO 13849-2:2012, table D.4.

1	Inverter unit
2	Control unit
K	Activation switch **Note:** A single-channel activation switch can limit the SIL/PL capability of the safety function to a lower level than the SIL/PL capability of the STO function of the drive.

Single-channel connection of activation switch, with ZCU-14 or BCU control unit

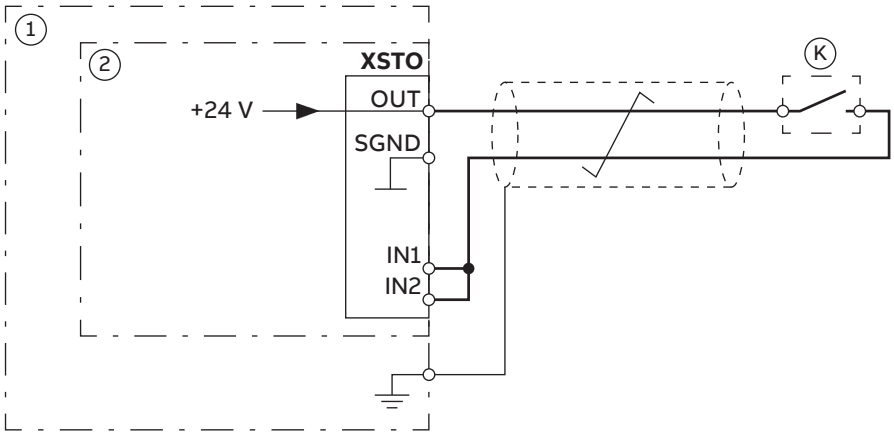


Note:

- Both STO inputs (IN1, IN2) must be connected to the activation switch. Otherwise, no SIL/PL classification is given.
- Pay special attention to avoiding any potential failure modes for the wiring. For example, use shielded cable. For measures for fault exclusion of wiring, see eg. EN ISO 13849-2:2012, table D.4.

1	Inverter unit
2	Control unit
K	Activation switch **Note:** A single-channel activation switch can limit the SIL/PL capability of the safety function to a lower level than the SIL/PL capability of the STO function of the drive.

Single-channel connection of activation switch, with UCU control unit

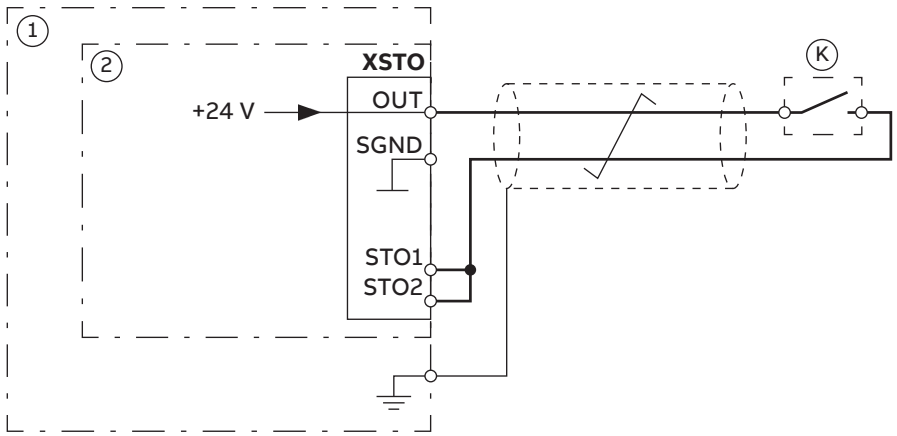


Note:

- Both STO inputs (STO1, STO2) must be connected to the activation switch. Otherwise, no SIL/PL classification is given.
- Pay special attention to avoiding any potential failure modes for the wiring. For example, use shielded cable. For measures for fault exclusion of wiring, see eg. EN ISO 13849-2:2012, table D.4.

1	Inverter unit
2	Control unit
K	Activation switch **Note:** A single-channel activation switch can limit the SIL/PL capability of the safety function to a lower level than the SIL/PL capability of the STO function of the drive.

Multiple inverter units


Internal power supply (example, inverter unit with ZCU or BCU control unit)

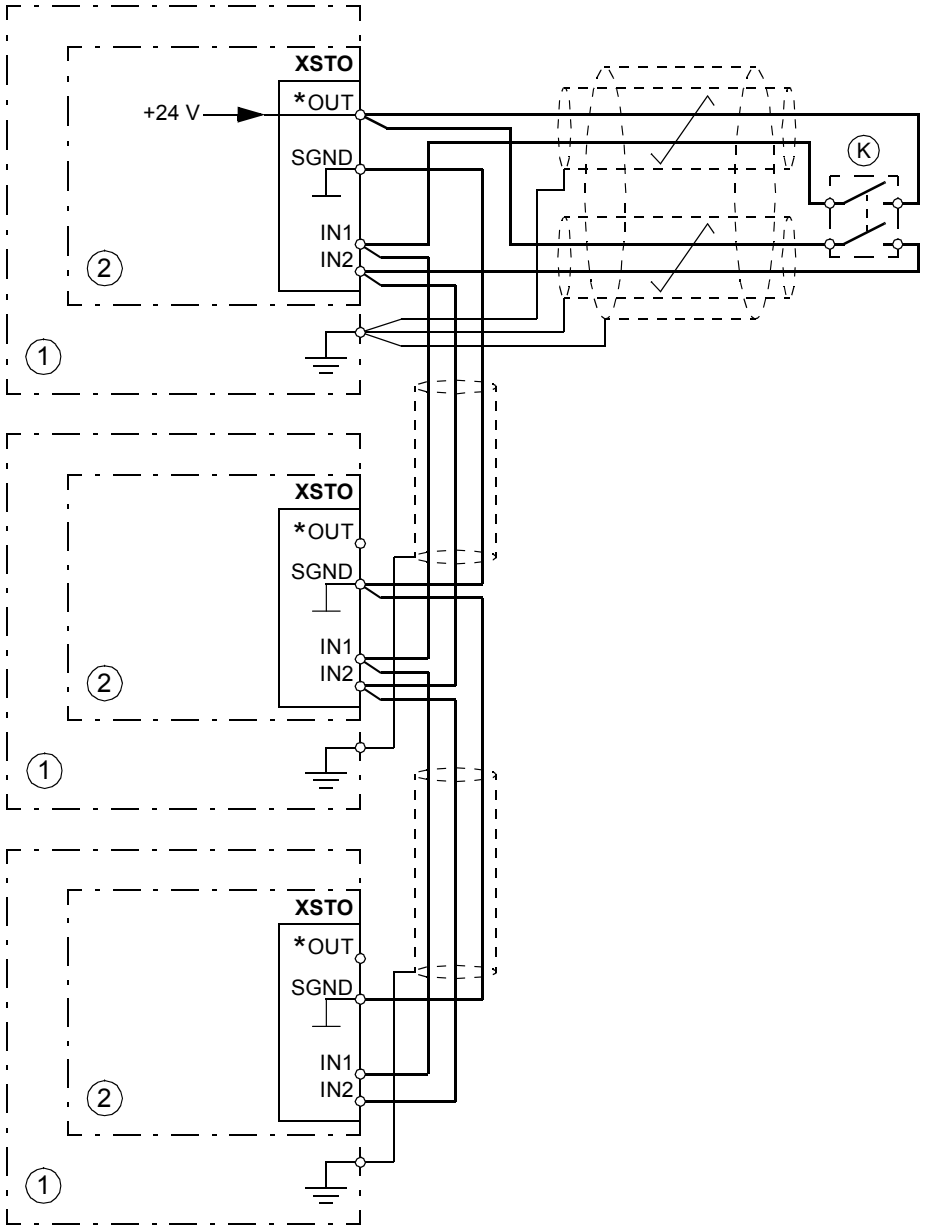

1	Inverter unit
2	Control unit
K	Activation switch


* OUT1 in ZCU-12 control units.

Internal power supply (example, inverter unit with UCU control unit)

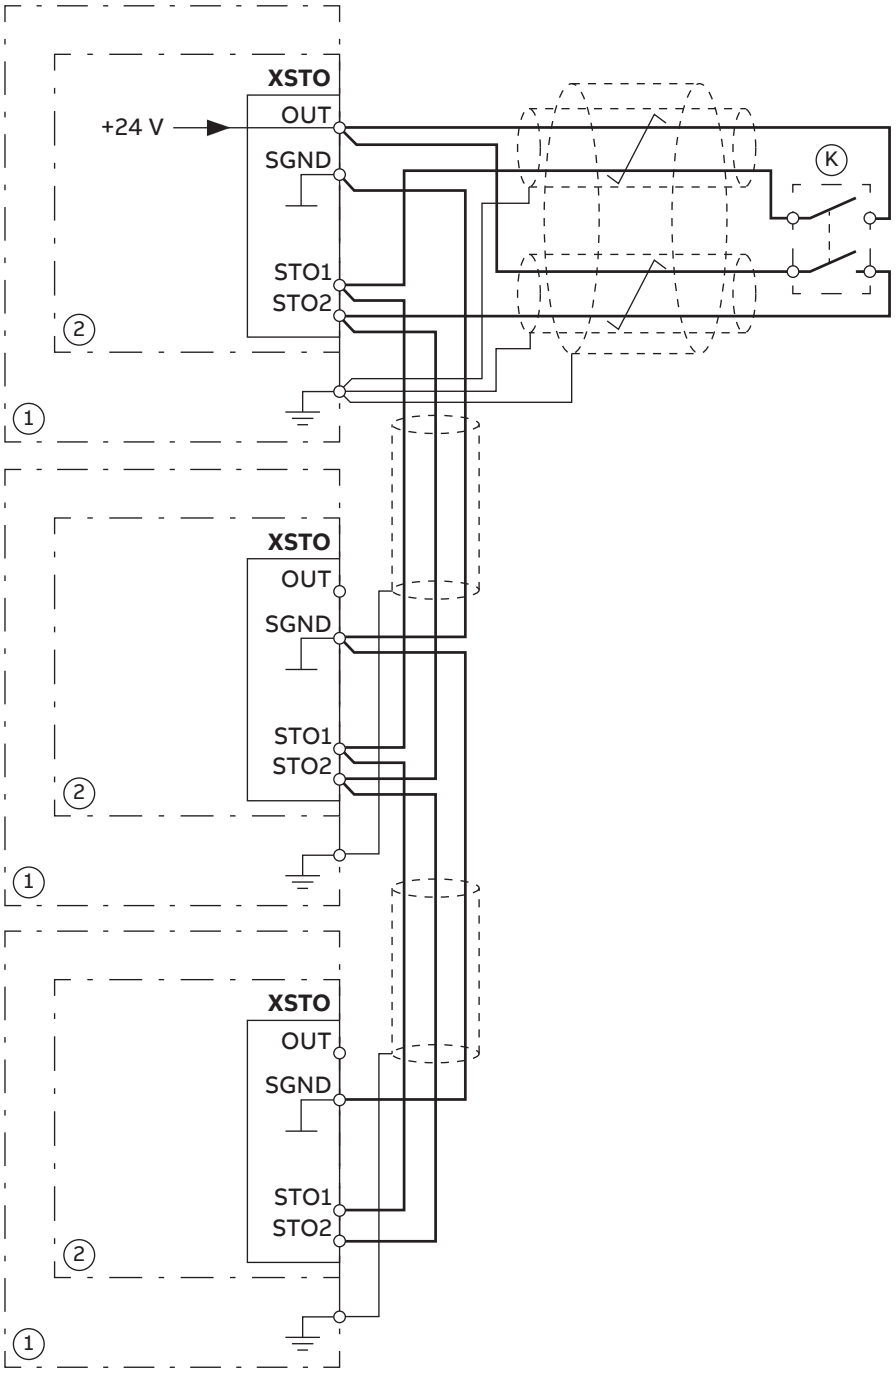

1	Inverter unit
2	Control unit
K	Activation switch


External power supply (example, inverter unit with ZCU or BCU control unit)

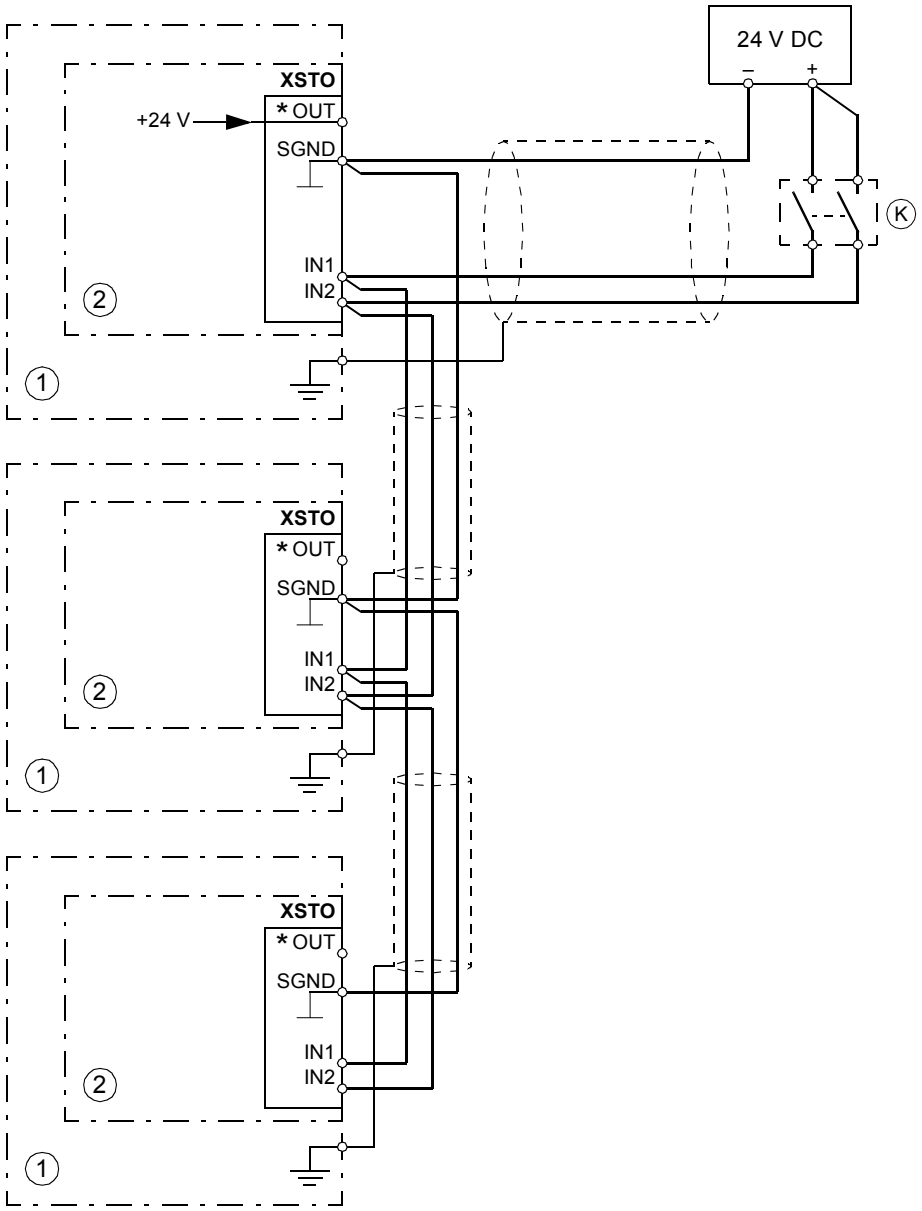

1	Inverter unit
2	Control unit
K	Activation switch

* OUT1 in ZCU-12 control units.

External power supply (example, inverter unit with UCU control unit)

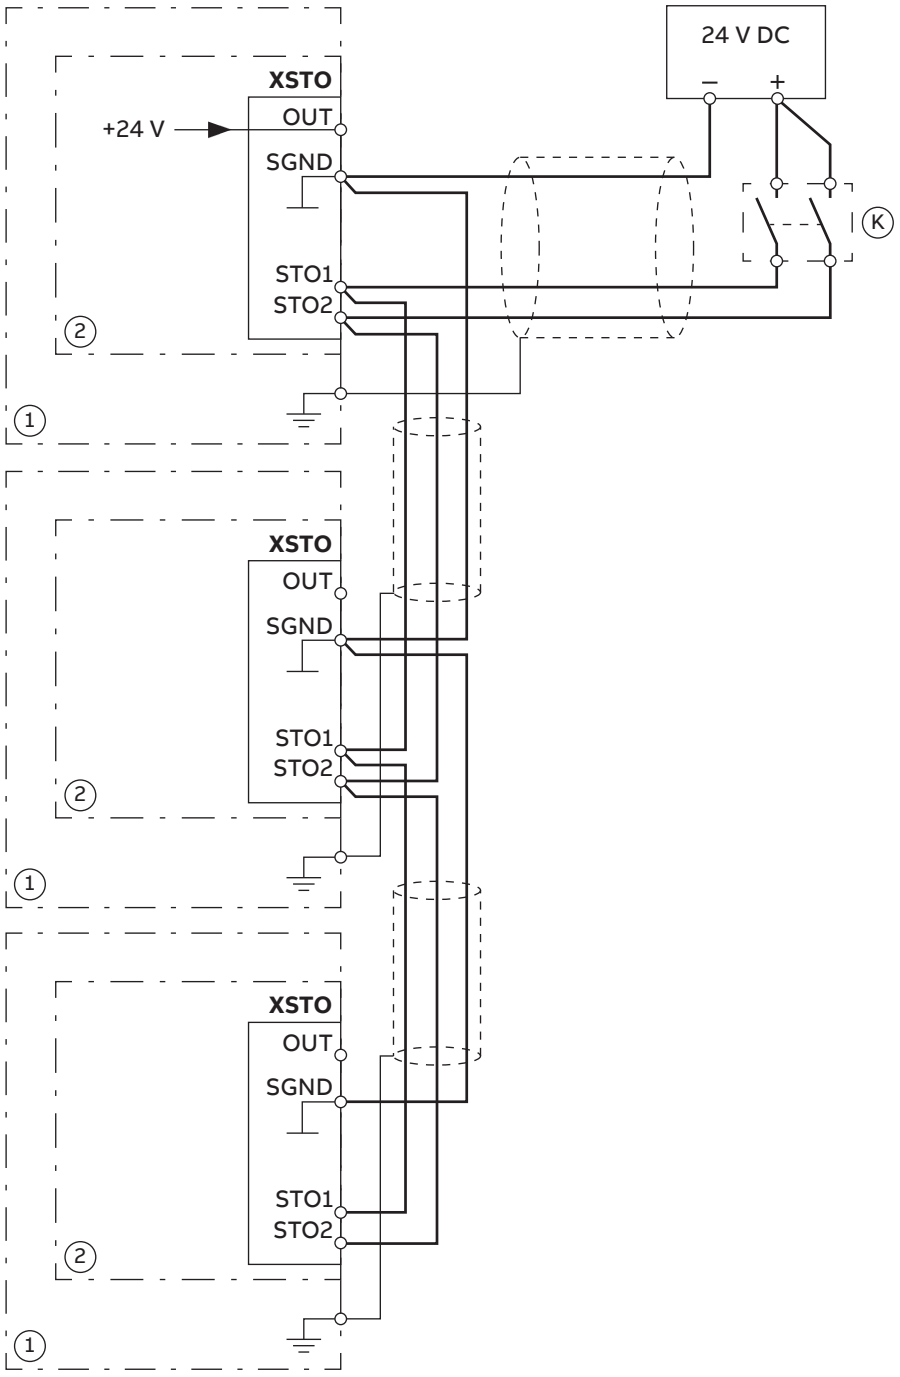

1	Inverter unit
2	Control unit
K	Activation switch

Operation principle

1. The Safe torque off activates (the activation switch is opened, or safety relay contacts open).
2. The STO inputs of the drive control unit de-energize.
3. The control unit cuts off the control voltage from the output IGBTs.
4. The control program generates an indication as defined by parameter 31.22 (refer the firmware manual of the drive).
   The parameter selects which indications are given when one or both STO signals are switched off or lost. The indications also depend on whether the drive is running or stopped when this occurs.

   Note: This parameter does not affect the operation of the STO function itself. The STO function will operate regardless of the setting of this parameter: a running drive will stop upon removal of one or both STO signals, and will not start until both STO signals are restored and all faults reset.

   Note: The loss of only one STO signal always generates a fault as it is interpreted as a malfunction of STO hardware or wiring.
5. The motor coasts to a stop (if running). The drive cannot restart while the activation switch or safety relay contacts are open. After the contacts close, a reset may be needed (depending on the setting of parameter 31.22). A new start command is required to start the drive.

Start-up including validation test

To ensure the safe operation of a safety function, validation is required. The final assembler of the machine must validate the function by performing a validation test. The test must be performed

1. at initial start-up of the safety function
2. after any changes related to the safety function (circuit boards, wiring, components, settings, replacement of inverter module, etc.)
3. after any maintenance work related to the safety function
4. after a drive firmware update
5. at the proof test of the safety function.

Competence

The validation test of the safety function must be carried out by a competent person with adequate expertise and knowledge of the safety function as well as functional safety, as required by IEC 61508-1 clause 6. The test procedures and report must be documented and signed by this person.

Validation test reports

Signed validation test reports must be stored in the logbook of the machine. The report shall include documentation of start-up activities and test results, references to failure reports and resolution of failures. Any new validation tests performed due to changes or maintenance shall be logged into the logbook.

Validation test procedure

After wiring the Safe torque off function, validate its operation as follows.

Note: If an FSO safety functions module, FSCS-21, FSPS-21 or FPTC module is installed, refer to its documentation.

Note: All inverter modules of the drive must be powered and connected to the STO circuit during the validation test.

Action	☑
WARNING! Obey the safety instructions. If you ignore them, injury or death, or damage to the equipment can occur.	☐
Make sure that the motor can be run and stopped freely during start-up.	☐
Stop the drive (if running), switch the input power off and isolate the drive from the power line using a disconnector.	☐
Check the STO circuit connections against the wiring diagram.	☐
Close the disconnector and switch the power on.	☐
In case the drive consists of parallel-connected modules, check that the number of modules detected (parameter 95.14) matches the actual number of modules, and that the drive type is correctly set in parameter 95.31.	☐

Action	☑
Test the operation of the STO function when the motor is stopped. • Give a stop command for the drive (if running) and wait until the motor shaft is at a standstill. Make sure that the drive operates as follows: • Open the STO circuit. The drive generates an indication if one is defined for the 'stopped' state in parameter 31.22 (refer the firmware manual). • Give a start command to verify that the STO function blocks the drive's operation. The motor should not start. • Close the STO circuit. • Reset any active faults. Restart the drive and check that the motor runs normally.	☐
Test the operation of the STO function when the motor is running. • Start the drive and make sure the motor is running. • Open the STO circuit. The motor should stop. The drive generates an indication if one is defined for the 'running' state in parameter 31.22 (see the firmware manual). • Reset any active faults and try to start the drive. • Make sure that the motor stays at a standstill and the drive operates as described above in testing the operation when the motor is stopped. • Close the STO circuit. • Reset any active faults. Restart the drive and check that the motor runs normally.	☐
Test the operation of the failure detection of the drive. The motor can be stopped or running. • Open the 1st input channel of the STO circuit. If the motor was running, it should coast to a stop. The drive generates an FA81 fault indication (refer the firmware manual). • Give a start command to verify that the STO function blocks the drive's operation. The motor should not start. • Open the STO circuit (both channels). • Give a reset command. • Close the STO circuit (both channels). • Reset any active faults. Restart the drive and check that the motor runs normally. • Open the 2nd input channel of the STO circuit. If the motor was running, it should coast to a stop. The drive generates an FA82 fault indication (refer the firmware manual). • Give a start command to verify that the STO function blocks the drive's operation. The motor should not start. • Open the STO circuit (both channels). • Give a reset command. • Close the STO circuit (both channels). • Reset any active faults. Restart the drive and check that the motor runs normally.	☐
Document and sign the validation test report which verifies that the safety function is safe and accepted for operation.	☐

Use

1. Open the activation switch, or activate the safety functionality that is wired to the STO connection.
2. The STO inputs on the drive control unit de-energize, and the control unit cuts off the control voltage from the output IGBTs.
3. The control program generates an indication as defined by parameter 31.22 (refer the firmware manual of the drive).
4. The motor coasts to a stop (if running). The drive will not restart while the activation switch or safety relay contacts are open.
5. Deactivate the STO by closing the activation switch, or resetting the safety functionality that is wired to the STO connection.
6. Reset any faults before restarting.



WARNING!
The Safe torque off function does not disconnect the voltage of the main and auxiliary circuits from the drive. Therefore maintenance work on electrical parts of the drive or the motor can only be carried out after isolating the drive from the supply and all other voltage sources.



WARNING!
The Safe torque off functionality is only achieved through the XSTO connector of the inverter control unit (A41). True Safe torque off functionality is not achieved through the XSTO connectors of other control units (such as the supply control unit or the brake control unit).

The Safe torque off function is supported by any ACS880 inverter or drive control program. It is not supported by supply, DC/DC converter or brake firmware.



WARNING!
The drive cannot detect or memorize any changes in the STO circuitry when the drive control unit is not powered or when the main power to the drive is off. If both STO circuits are closed and a level-type start signal is active when the power is restored, it is possible that the drive starts without a fresh start command. Take this into account in the risk assessment of the system.



WARNING!
Permanent magnet or synchronous reluctance [SynRM] motors only:

In case of a multiple IGBT power semiconductor failure, the drive can produce an alignment torque which maximally rotates the motor shaft by 180/*p* degrees (with permanent magnet motors) or 180/2*p* degrees (with synchronous reluctance [SynRM] motors) regardless of the activation of the Safe torque off function. *p* denotes the number of pole pairs.

Notes:

- If a running drive is stopped by using the Safe torque off function, the drive will cut off the motor supply voltage and the motor will coast to a stop. If this causes

danger or is not otherwise acceptable, stop the drive and machinery using the appropriate stop mode before activating the Safe torque off function.

- The Safe torque off function overrides all other functions of the drive.
- The Safe torque off function is ineffective against deliberate sabotage or misuse.
- The Safe torque off function has been designed to reduce the recognized hazardous conditions. In spite of this, it is not always possible to eliminate all potential hazards. The assembler of the machine must inform the final user about the residual risks.

Maintenance

After the operation of the circuit is validated at start-up, the STO function shall be maintained by periodic proof testing. In high demand mode of operation, the maximum proof test interval is 20 years. In low demand mode of operation, the maximum proof test interval is 10 years; refer section Safety data (page 401).

There are two alternative procedures for proof testing:

1. Perfect proof testing. It is assumed that all dangerous failures of the STO circuit are detected during the test. PFD_{avg} values for STO with the perfect proof testing procedure are given in the safety data section.
2. Simplified proof testing. This procedure is faster and simpler than perfect proof testing. Not all dangerous failures of the STO circuit are detected during the test. The PFD_{avg} value for STO with the simplified proof testing procedure is given in the safety data section.

Note: The proof testing procedures are only valid for proof testing (periodic test, item 5 under section Start-up including validation test) but not for re-validation after changes made in the circuit. Re-validation (items 1…4 under Start-up including validation test) must be done according to the initial validation procedure.

Note: Refer also the Recommendation of Use CNB/M/11.050 (published by the European co-ordination of Notified Bodies) concerning dual-channel safety-related systems with electromechanical outputs:

- When the safety integrity requirement for the safety function is SIL 3 or PL e (cat. 3 or 4), the proof test for the function must be performed at least every month.
- When the safety integrity requirement for the safety function is SIL 2 (HFT = 1) or PL d (cat. 3), the proof test for the function must be performed at least every 12 months.

The STO function of the drive does not contain any electromechanical components.

In addition to proof testing, it is a good practice to check the operation of the function when other maintenance procedures are carried out on the machinery.

Include the Safe torque off operation test described above in the routine maintenance program of the machinery that the drive runs.

If any wiring or component change is needed after start-up, or the parameters are restored, do the test given in section Validation test procedure (page 394).

Use only spare parts approved by ABB.

Record all maintenance and proof test activities in the machine logbook.

Competence

The maintenance and proof test activities of the safety function must be carried out by a competent person with adequate expertise and knowledge of the safety function as well as functional safety, as required by IEC 61508-1 clause 6.

Perfect proof test procedure

Action	☑
WARNING! Obey the safety instructions. If you ignore them, injury or death, or damage to the equipment can occur.	☐
Test the operation of the STO function. If the motor is running, it will stop during the test. • Give a stop command for the drive (if running) and wait until the motor shaft is at a standstill. Make sure that the drive operates as follows: • Open the STO circuit. The drive generates an indication if one is defined for the 'stopped' state in parameter 31.22 (see the firmware manual). • Close the STO circuit. • Reset any active faults. Restart the drive and check that the motor runs normally.	☐
Test the operation of the failure detection of the drive. The motor can be stopped or running. • Open the 1st input channel of the STO circuit. If the motor was running, it should coast to a stop. The drive generates an FA81 fault indication (see the firmware manual). • Open the STO circuit (both channels). • Give a reset command. • Close the STO circuit (both channels). • Reset any active faults. • Open the 2nd input channel of the STO circuit. If the motor was running, it should coast to a stop. The drive generates an FA82 fault indication (see the firmware manual). • Open the STO circuit (both channels). • Give a reset command. • Close the STO circuit (both channels). • Reset any active faults. Restart the drive and check that the motor runs normally.	☐
Document and sign the test report to verify that the safety function has been tested according to the procedure.	☐

Simplified proof test procedure

Action	☑
WARNING! Obey the safety instructions. If you ignore them, injury or death, or damage to the equipment can occur.	☐
Test the operation of the STO function. If the motor is running, it will stop during the test. • Give a stop command for the drive (if running) and wait until the motor shaft is at a standstill. Make sure that the drive operates as follows: • Open the STO circuit. The drive generates an indication if one is defined for the 'stopped' state in parameter 31.22 (see the firmware manual). • Close the STO circuit. • Reset any active faults. Restart the drive and check that the motor runs normally.	☐
Document and sign the test report to verify that the safety function has been tested according to the procedure.	☐

Fault tracing

The indications given during the normal operation of the Safe torque off function are selected by drive control program parameter 31.22.

The diagnostics of the Safe torque off function cross-compare the status of the two STO channels. In case the channels are not in the same state, a fault reaction function is performed and the drive trips on an FA81 or FA82 fault. An attempt to use the STO in a non-redundant manner, for example activating only one channel, will trigger the same reaction.

Refer the firmware manual of the drive control program for the indications generated by the drive, and for details on directing fault and warning indications to an output on the control unit for external diagnostics.

Any failures of the Safe torque off function must be reported to ABB.

Safety data

The safety data for the Safe torque off function is given below.

Note: The safety data is calculated for redundant use, and applies only if both STO channels are used.

Frame size	SIL	SC	PL	PFH (T_1 = 20 a) (1/h)	PFD_{avg}			$MTTF_D$ (a)	DC (%)	SFF (%)	Cat.	HFT	CCF	T_M (a)	PFH_{diag} (1/h)	λ_{Diag_s} (1/h)	λ_{Diag_d} (1/h)
					Perfect proof test		Simplified proof test										
					T_1 = 5 a	T_1 = 10 a	T_1 = 5 or 10 a										
R1i R2i R3i R4i	3	3	e	3.23E-09	7.08E-05	1.91E-05	3.82E-05	24293	≥90	>99	3	1	80	20	1.20E-11	8.25E-08	1.20E-09
R5i	3	3	e	3.36E-09	6.27E-05	5.41E-07	9.58E-07	16946	≥90	>99	3	1	80	20	1.00E-11	1.31E-07	1.20E-09
R6i R7i	3	3	e	3.87E-09	9.96E-05	4.00E-05	3.99E-04	4376	≥90	>99	3	1	80	20	4.75E-09	2.34E-07	2.27E-07
R8i	3	3	e	5.82E-10	1.25E-05	2.51E-05	5.06E-05	4824	≥90	>99	3	1	80	20	5.35E-09	3.32E-07	2.86E-07
2×R8i	3	3	e	5.92E-10	1.27E-05	2.55E-05	5.15E-05	4483	≥90	>99	3	1	80	20	6.13E-09	4.50E-07	3.65E-07
3×R8i	3	3	e	6.02E-10	1.29E-05	2.59E-05	5.23E-05	4187	≥90	>99	3	1	80	20	6.92E-09	5.67E-07	4.43E-07
4×R8i	3	3	e	6.11E-10	1.31E-05	2.63E-05	5.31E-05	3928	≥90	>99	3	1	80	20	7.71E-09	6.85E-07	5.22E-07
5×R8i	3	3	e	6.21E-10	1.33E-05	2.68E-05	5.39E-05	3699	≥90	>99	3	1	80	20	8.50E-09	8.02E-07	6.01E-07
6×R8i	3	3	e	6.30E-10	1.35E-05	2.72E-05	5.48E-05	3495	≥90	>99	3	1	80	20	9.29E-09	9.19E-07	6.80E-07
3AXD10000041323 K, 3AXD10000078136 K, 3AXD10001716945 D, 3AXD10001916430 B																	

- The STO is a type A (frames R1i…R5i, frames R6i…R7i without option +V998) or type B (R6i…R7i with option +V998, frame R8i and multiples) safety component as defined in IEC 61508-2.
- Relevant failure modes:
  - The STO trips spuriously (safe failure)
  - The STO does not activate when requested
  - A fault exclusion on the failure mode “short circuit on printed circuit board” has been made (EN 13849-2, table D.5). The analysis is based on an assumption that one failure occurs at one time. No accumulated failures have been analyzed.
- STO response times:
  - STO reaction time (shortest detectable break): 1 ms
  - STO response time:
    - Frames R1i…R7i: 7 ms (typical), 10 ms (maximum)
    - Frame R8i and multiples: 2 ms (typical), 25 ms (maximum)
  - Fault detection time: Channels in different states for longer than 200 ms
  - Fault reaction time: Fault detection time + 10 ms.
- Indication delays:
  - STO fault indication (parameter 31.22) delay: < 500 ms
  - STO warning indication (parameter 31.22) delay: < 1000 ms.

Terms and abbreviations

Term or abbreviation	Reference	Description
Cat.	EN ISO 13849-1	Classification of the safety-related parts of a control system in respect of their resistance to faults and their subsequent behavior in the fault condition, and which is achieved by the structural arrangement of the parts, fault detection and/or by their reliability. The categories are: B, 1, 2, 3 and 4.
CCF	EN ISO 13849-1	Common cause failure (%)
DC	EN ISO 13849-1	Diagnostic coverage (%)
HFT	IEC 61508	Hardware fault tolerance
$MTTF_D$	EN ISO 13849-1	Mean time to dangerous failure: (Total number of life units) / (Number of dangerous, undetected failures) during a particular measurement interval under stated conditions
PFD_{avg}	IEC 61508	Average probability of dangerous failure on demand, that is, mean unavailability of a safety-related system to perform the specified safety function when a demand occurs
PFH	IEC 61508	Average frequency of dangerous failures per hour, that is, average frequency of a dangerous failure of a safety related system to perform the specified safety function over a given period of time
PFH_{diag}	IEC/EN 62061	Average frequency of dangerous failures per hour for the diagnostic function of STO
PL	EN ISO 13849-1	Performance level. Levels a…e correspond to SIL
Proof test	IEC 61508, IEC 62061	Periodic test performed to detect failures in a safety-related system so that, if necessary, a repair can restore the system to an "as new" condition or as close as practical to this condition
SC	IEC 61508	Systematic capability (1…3)
SFF	IEC 61508	Safe failure fraction (%)
SIL	IEC 61508	Safety integrity level (1…3)

Term or abbreviation	Reference	Description
STO	IEC/EN 61800-5-2	Safe torque off
T_1	IEC 61508-6	Proof test interval. T_1 is a parameter used to define the probabilistic failure rate (PFH or PFD) for the safety function or subsystem. Performing a proof test at a maximum interval of T_1 is required to keep the SIL capability valid. The same interval must be followed to keep the PL capability (EN ISO 13849) valid. See also section Maintenance.
T_M	EN ISO 13849-1	Mission time: the period of time covering the intended use of the safety function/device. After the mission time elapses, the safety device must be replaced. Note that any T_M values given cannot be regarded as a guarantee or warranty.
λ_{Diag_d}	IEC 61508-6	Dangerous failure rate (per hour) of the diagnostics function of STO
λ_{Diag_s}	IEC 61508-6	Safe failure rate (per hour) of the diagnostics function of STO

TÜV certificate

The TÜV certificate is available on the Internet.

14

Resistor braking using frames R1i…R4i inverter modules

Contents of this chapter

This chapter deals with using the internal brake choppers of frame R1i…R4i inverter modules.

Using R1i…R4i modules for resistor braking

The internal brake choppers of frame R1i…R4i inverter modules can be used for resistor braking of other modules. Brake resistors are available from ABB as add-on kits and must be installed in separate cubicles; contact your local ABB representative for details.

Planning the braking system

- The continuous and maximum braking power ratings of individual inverter modules are listed on Ratings (page 411) .
  The total continuous braking power of parallel-connected modules is calculated with the formula
  $P_{brcont} = P_{brcont1} + 0.8 \times (P_{brcont2} + P_{brcont3} + \ldots)$
  where $P_{brcont1}$, $P_{brcont2}$, etc. are the P_{brcont} values of the connected modules from largest to smallest.
  The total maximum braking power of parallel-connected modules is calculated with the formula
  $P_{brmax} = P_{brmax1} + 0.7 \times (P_{brmax2} + P_{brmax3} + \ldots)$

where P_{brmax1}, P_{brmax2}, etc. are the P_{brmax} values of the connected modules from largest to smallest.

- The resistance of the resistor must not be lower than R_{min}. The energy transferred by any inverter module to its resistor must not exceed the heat dissipation capacity (E_R) of the resistor.

Restrictions

- Internal brake choppers are only available for frame R1i…R4i, ACS880-104-xxxxx-3 and ACS880-104-xxxxx-5 inverter module types.
- The maximum number of modules doing the braking is 12 frame R1i…R2i modules or 6 frame R3i…R4i modules, ie. the number of modules that can be mounted into a 800 mm wide Rittal TS 8 cubicle.
- Each inverter module must have its own resistor(s).
- In case the braking power of the modules is not sufficient, a separate brake chopper must be used. It is not allowed to use the internal brake choppers simultaneously with a separate brake chopper.
- The cubicle with the braking modules must be next in the line-up to the inverter that needs to be braked.
- The internal brake choppers cannot be used if the system has an IGBT (regenerative) supply unit.

Selecting the brake resistor

Ratings (page 411) lists an example brake resistor for each inverter type. These resistors are available from ABB.

When sourcing a resistor from a third party, make sure that:

1. The resistance of the custom resistor is greater or equal than the minimum allowed resistance:
   $R \geq R_{min}$
   where

   R — Resistance of the custom resistor.

   WARNING! Never use a brake resistor with a resistance smaller than *R*min. The inverter module and the chopper are not able to handle the overcurrent caused by the low resistance.

   R_{min} — Minimum allowed resistance of the brake resistor. See section Ratings.

2. The load capacity of the custom resistor is higher than the instantaneous maximum power consumption of the resistor when it is connected to the DC link voltage by the chopper:
   $$P_r > \frac{{U_{DC}}^2}{R}$$
   where

   P_r — Load capacity of the custom resistor

U_{DC}	Drive DC link voltage. 1.35 · 1.25 · 415 V DC (when supply voltage is 380 to 415 V AC) or 1.35 · 1.25 · 500 V DC (when supply voltage is 440 to 500 V AC)
R	Resistance of the custom resistor

Selecting and routing the brake resistor cables

Use the same cable type for resistor as for inverter input cabling to ensure that the inverter DC fuses also protect the resistor cable.

Minimizing electromagnetic interference

Make sure that the installation is compliant with the EMC requirements. Obey these rules in order to minimize electromagnetic interference caused by the rapid voltage and current changes in the resistor cables:

- Shield the brake resistor cable. Use shielded cable or a metallic enclosure. If you use unshielded single-core cables, route them inside a cabinet that efficiently suppresses the radiated emissions.
- Install the cables away from other cable routes.
- Avoid long parallel runs with other cables. The minimum parallel cabling separation distance is 0.3 meters (1 ft).
- Cross the other cables at 90° angles.
- Keep the cable as short as possible in order to minimize the radiated emissions and stress on the brake chopper. The longer the cable the greater the radiated emissions, inductive load and voltage peaks over the IGBT semiconductors of the brake chopper.

Maximum cable length

The maximum cable length of the resistor cable is 10 m (33 ft).

Selecting the installation location for the brake resistors

Protect the open (IP00) brake resistors against contact. Install the brake resistor in a place where it cools effectively. Arrange the cooling of the resistor so that:

- no danger of overheating is caused to the resistor or nearby materials, and
- the temperature of the space that the resistor is in does not go above the allowed maximum value.



WARNING!
The materials near the brake resistor must be non-flammable. The surface temperature of the resistor is high. Air flowing from the resistor is of hundreds of degrees Celsius. If the exhaust vents are connected to a ventilation system, make sure that the material withstands high temperatures. Protect the resistor against contact.


Protecting the system against thermal overload

The inverter module protects itself and the resistor cable against thermal overload when the cable is correctly dimensioned. The inverter control program includes a

resistor and resistor cable thermal protection function which can be tuned by the user. See the firmware manual.

Equipping the drive system with a main contactor or breaker is highly recommended for safety reasons. Wire the contactor or breaker so that it opens in case the resistor overheats. This is essential for safety since the inverter module may not be able to break the current if the chopper remains conductive in a fault situation. An example wiring diagram is shown below. ABB resistors are equipped with a thermal switch (5) inside the resistor assembly as standard. The switch indicates overtemperature and overload.

We recommend that you also wire the thermal switch to a digital input of the inverter module.

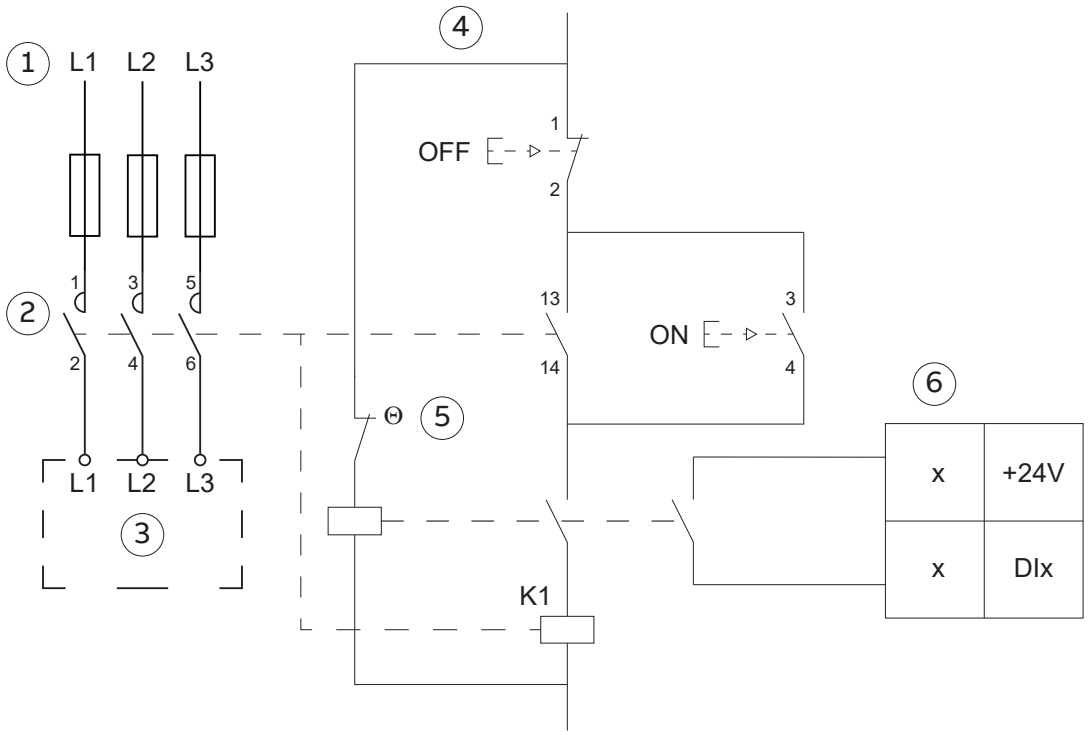

1.	AC supply network
2.	Main contactor
3.	Drive
4.	Example main contactor control circuit
5.	Brake resistor temperature sensor (thermal switch)
6.	External fault indication via a digital input of the inverter unit (or drive)

Protecting the resistor cable against short circuit

The DC fuses of the inverter module will also protect the resistor cable if the cable is identical with the inverter input cable.

Mechanical installation


All brake resistors must be installed outside the drive. Follow the resistor manufacturer's instructions.

Electrical installation

Checking the insulation of the brake resistor assembly

Check the insulation of each brake resistor assembly as follows:

1. Check that the resistor cable is connected to the resistor, and disconnected from the inverter module terminals R+ and R-.
2. At the inverter end, connect the R+ and R- conductors of the resistor cable together. Measure the insulation resistance between the combined conductors and the Protective Earth (PE) conductor by using a measuring voltage of 1000 V DC. The insulation resistance must be higher than 1 Mohm.

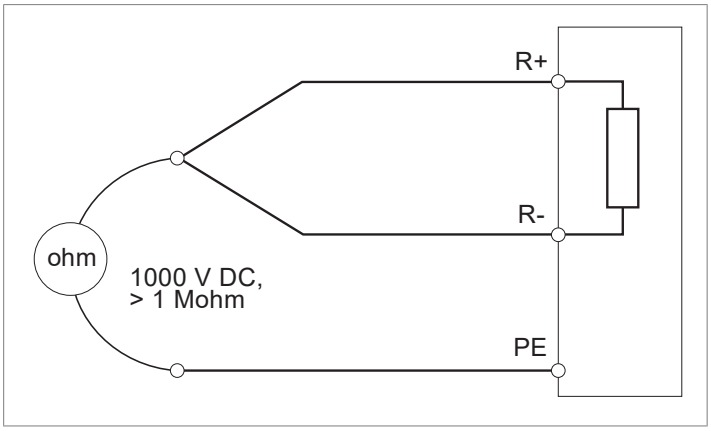

Connection procedure

1. Connect the resistor cable to the R+ and R- terminals in the same way as the other power cables. Use the same cable type as with the DC input cable. If a shielded threeconductor cable is used, cut the third conductor, insulate it, and ground the twisted shield of the cable (protective earth conductor of the resistor assembly) at both ends.
2. Connect the thermal switch of the brake resistor as described above under Protecting the system against thermal overload.

Start-up

Note: New brake resistors may be coated with storage grease. As the brake chopper operates for the first time, the grease burns off and may produce some smoke. Make sure there is proper ventilation.

Set the following inverter control program parameters (ACS880 primary control program) in each braking inverter:

- Disable the overvoltage control (parameter 30.30).
- Set parameter 31.01 to point to the digital input to which the thermal switch of the brake resistor is wired.
- Set parameter 31.02 so that the event generates a fault.
- Enable the brake chopper by parameter 43.06 Brake chopper enable. If you select Enabled with thermal model, also set the brake resistor overload protection parameters 43.08 and 43.09 according to the application.
- Check the value of parameter 43.10 Brake resistance.
- Adjust other brake-related settings as necessary in parameter group 43.
  Match the brake chopper operating limits of all braking inverters. You will need to enter a service-level pass code into parameter 96.02 to access the limit parameters. To obtain the pass code, contact your local ABB representative.
  - Stop all inverters of the drive system (even those not used for braking) if any are running.
  - Monitor the DC voltage (parameter 01.11) on each braking inverter for a period of time. Calculate the average of the readings separately for each inverter.
  - Select one braking inverter as reference. On this inverter, enter the nominal AC supply voltage into parameter 95.37. Multiply this value by the number shown in the table below to get the value of 95.36.

Supply voltage range [V AC] (see parameter 95.01)				
	208…240	**380…415**	**440…480**	**500**
[95.36] = [95.37] ×	0.867	0.916	0.917	1.000

  For example, with a 380…415 V inverter, the value of 95.36 should be 0.916 times the value of 95.37.
  - For each of the remaining braking inverters, divide the average DC voltage value of the inverter by that of the reference inverter. Multiply the result with the nominal supply voltage, and enter the result into parameter 95.37. Further multiply the value of 95.37 by the factor shown in the above table to get the value of 95.36.
  - On all braking inverters, enable custom supply voltage limits using parameter 95.35.

With these parameter settings, a resistor overtemperature situation will trip the inverter which will then coast to a stop.



WARNING!
Connect the brake resistor to the inverter module before enabling the brake chopper. On the other hand, if the chopper is disabled, the resistor must be disconnected.

For settings with other control programs, see the appropriate firmware manual.

Technical data

Ratings

ACS880-104-...	Output ratings			Brake resistor example			
	P_{brcont}	P_{brmax}	R_{min}	Type	R	P_n	E_R
	kW	kW	ohm		ohm	W	kJ
U_n = 400 V							
004A8-3	1.8	3.3	120	JBR-01 (Danotherm CAR 155 D T 414 120R)	120	105	22
006A0-3	1.9	3.3	120				
008A0-3	1.9	3.3	120				
0011A-3	2.8	50	80	JBR-03 (Danotherm CAR 200 D T 415 80R)	80	135	40
0014A-3	5.7	10.0	40	JBR-04 (Danotherm CBR-V 210 D T 415 40R)	40	360	73
0018A-3	5.7	10.00	40				
0025A-3	11.4	20.0	20	JBR-05 (Danotherm CBR-V 330 D T 415 20R)	20	570	77
0035A-3	11.4	20.0	20				
0044A-3	17.5	30.8	13	JBR-06 (Danotherm CBR-V 460 D HT 415 13R)	13	790	132
0050A-3	17.5	30.8	13				
0061A-3	17.5	30.8	13				
0078A-3	17.5	30.8	13				
0094A-3	17.5	30.8	13				
0100A-3	17.5	30.8	13				
U_n = 500 V							
003A6-5	1.3	5.5	120	JBR-01 (Danotherm CAR 155 D T 414 120R)	120	105	22
004A8-5	1.8	5.5	120				
006A0-5	1.9	5.5	120				
008A0-5	1.9	5.5	120				
0011A-5	2.8	7.9	80	JBR-03 (Danotherm CAR 200 D T 415 80R)	80	135	40
0014A-5	5.7	14.6	40	JBR-04 (Danotherm CBR-V 210 D T 415 40R)	40	360	73
0018A-5	5.7	14.6	40				
0025A-5	11.4	30.7	20	JBR-05 (Danotherm CBR-V 330 D T 415 20R)	20	570	77
0030A-5	11.4	30.7	20				
0035A-5	11.4	30.7	20				
0050A-5	17.5	43.9	13	JBR-06 (Danotherm CBR-V 460 D HT 415 13R)	13	790	132
0061A-5	17.5	43.9	13				
0078A-5	17.5	43.9	13				
0094A-5	17.5	43.9	13				


Definitions

P_{brcont}	Maximum continuous braking power. The braking is considered continuous if the braking time exceeds 30 seconds.
P_{brmax}	Maximum braking power of the inverter module and its internal brake chopper. The inverter and chopper will withstand this braking power for 1 second within every 10 seconds. **Note:** The listed resistors will withstand this braking power for 1 second within every 120 seconds.
R_{min}	Minimum allowed resistance of the brake resistor.
R	Resistance of the listed resistor.
P_n	Continuous power (heat) dissipation of the listed resistor when placed correctly.
E_R	Short energy pulse that the listed resistor will withstand every 400 seconds.

The ratings apply at an ambient temperature of 40 °C (104 °F).

The listed brake resistors are protected to IP20. Refer to Resistor dimensions (page 413) for dimensions, wire sizes and tightening torques for the resistors.

Resistor dimensions

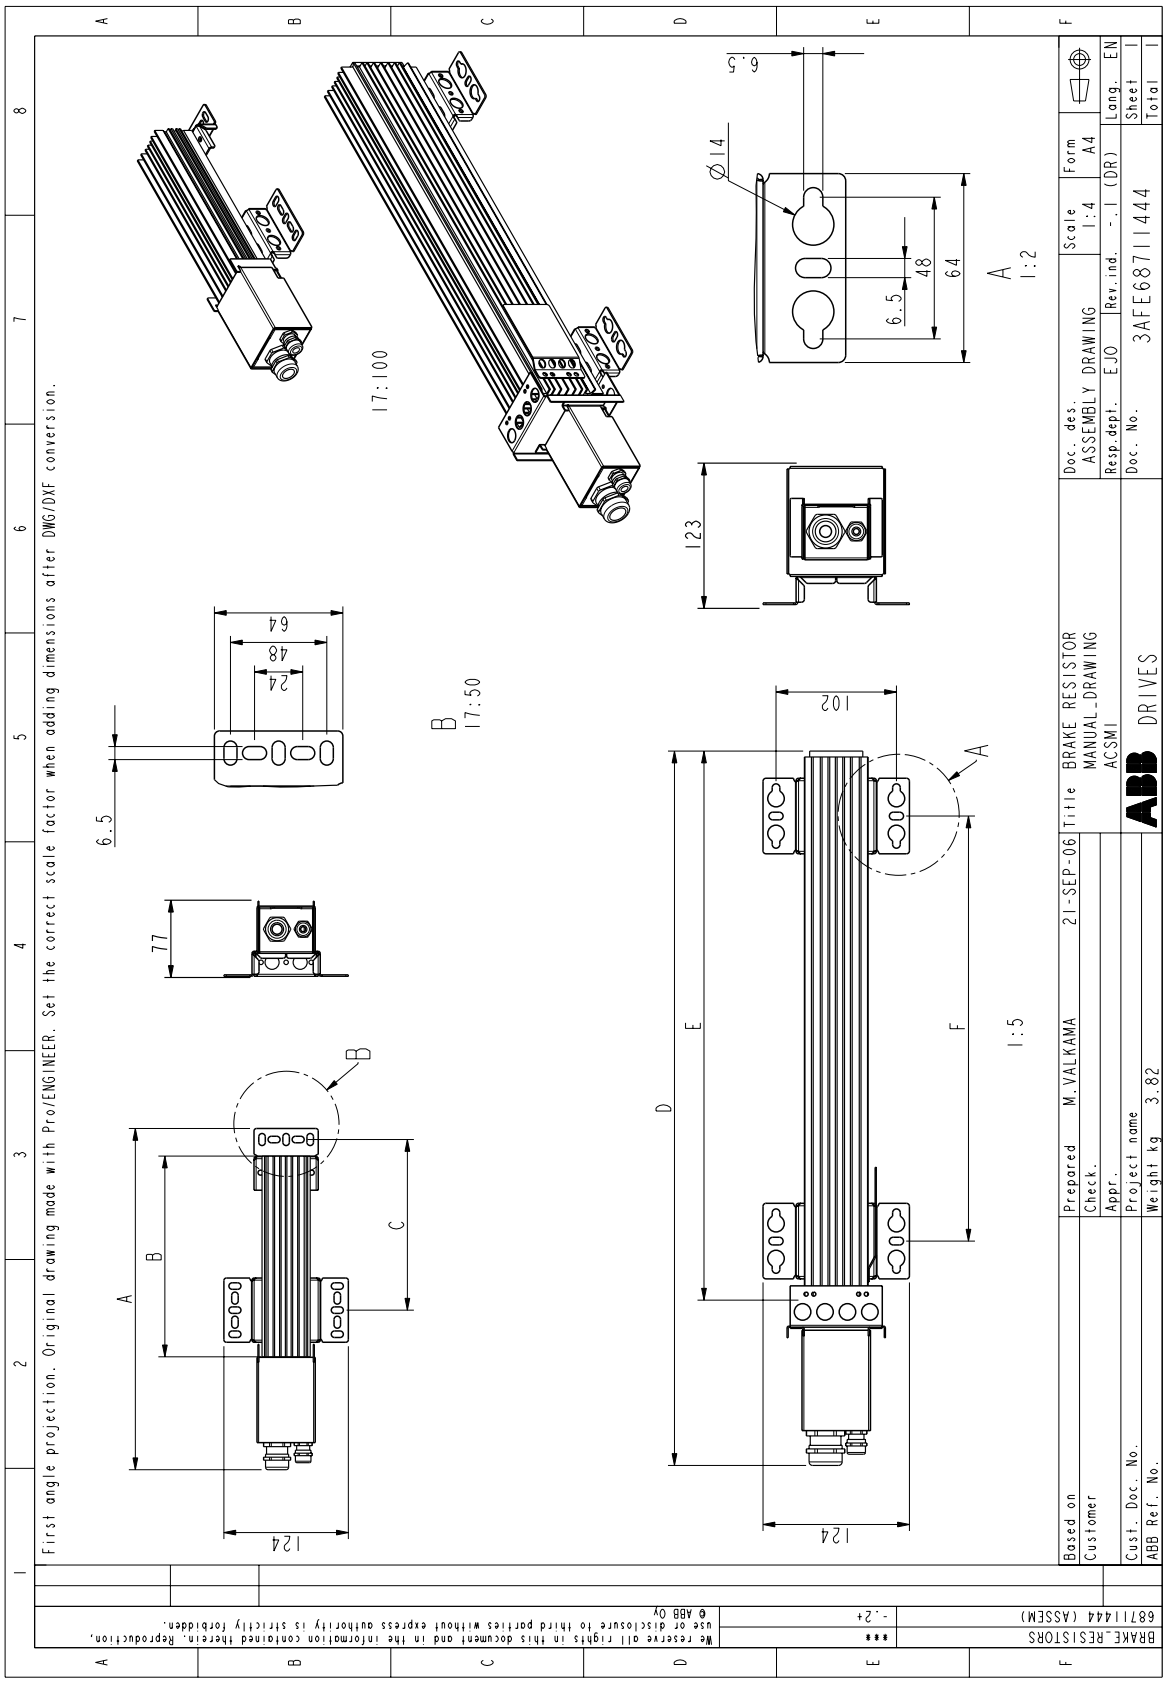

Dimension	Resistor type				
	JBR-01	JBR-03	JBR-04	JBR-05	JBR-06
A mm (in)	295 (11.61)	340 (13.39)	–	–	–
B mm (in)	155 (6.10)	200 (7.87)	–	–	–
C mm (in)	125 (4.92)	170 (6.69)	–	–	–
D mm (in)	–	–	345 (13.58)	465 (18.31)	595 (23.43)
E mm (in)	–	–	210 (8.27)	330 (12.99)	460 (18.11)
F mm (in)	–	–	110 (4.33)	230 (9.06)	360 (14.17)
Weight kg (lbs)	0.75 (1.7)	0.8 (1.8)	1.8 (4.0)	3.0 (6.6)	3.9 (8.6)
Max. wire size – Main terminals	10 mm^2 (AWG6)				
Tightening torque – Main terminals	1.5 … 1.8 N·m (13 … 16 lbf·in)				
Max. wire size – Thermal switch terminals	4 mm^2 (AWG12)				
Tightening torque – Thermal switch terminals	0.6 … 0.8 N·m (5.3 … 7.1 lbf·in)				

Resistor connectors on inverter modules

R+ and R- terminals	Frame R1i U2, V2, W2: 0.25…4 mm^2, 0.5 … 0.6 N·m (4.4 …5.3 lbf·in) Ground: 1.5 N·m (13 lbf·in) Frame R2i U2, V2, W2: 0.5 … 6 mm^2, 1.2 … 1.5 N·m (10.6 … 13.3 lbf·in) Ground: 1.5 N·m (13 lbf·in) Frames R3i and R4i U2, V2, W2: 6…70 mm^2. Allen screw torque 15 N·m (11 lbf·ft), connection post torque 4 N·m (30 lbf·in). Other conductor sizes can be used by replacing the original lug with a suitable crimp ring terminal. Ground: Screw size M5, torque 3 N·m (25 lbf·in) Connector cover screws: Torque 3 N·m (25 lbf·in)


15

Dimension drawings


Contents of this chapter

This chapter contains dimension drawings of the ACS880-104 inverter modules as well as auxiliary components. Dimensional drawings of most installation accessories are available from ABB on request.


Frame R1i

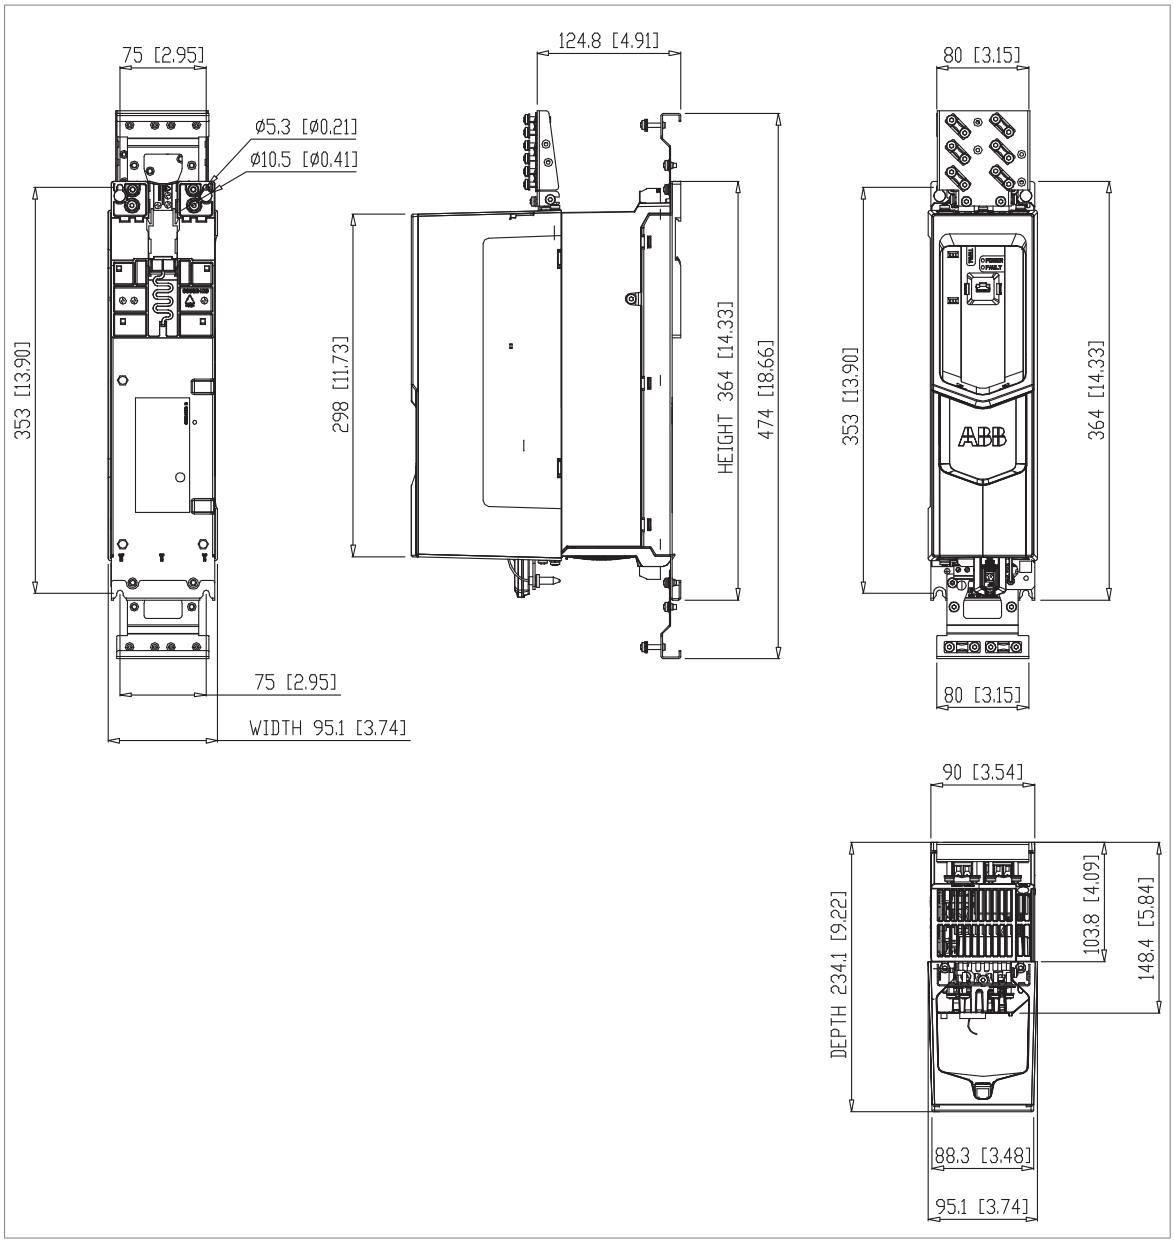
75 [2.95]
Ø5.3 [Ø0.21]
Ø10.5 [Ø0.41]
353 [13.90]
75 [2.95]
WIDTH 95.1 [3.74]
124.8 [4.91]
298 [11.73]
HEIGHT 364 [14.33]
474 [18.66]
80 [3.15]
353 [13.90]
364 [14.33]
ABB
80 [3.15]
90 [3.54]
DEPTH 234.1 [9.22]
103.8 [4.09]
148.4 [5.84]
88.3 [3.48]
95.1 [3.74]


Frame R2i

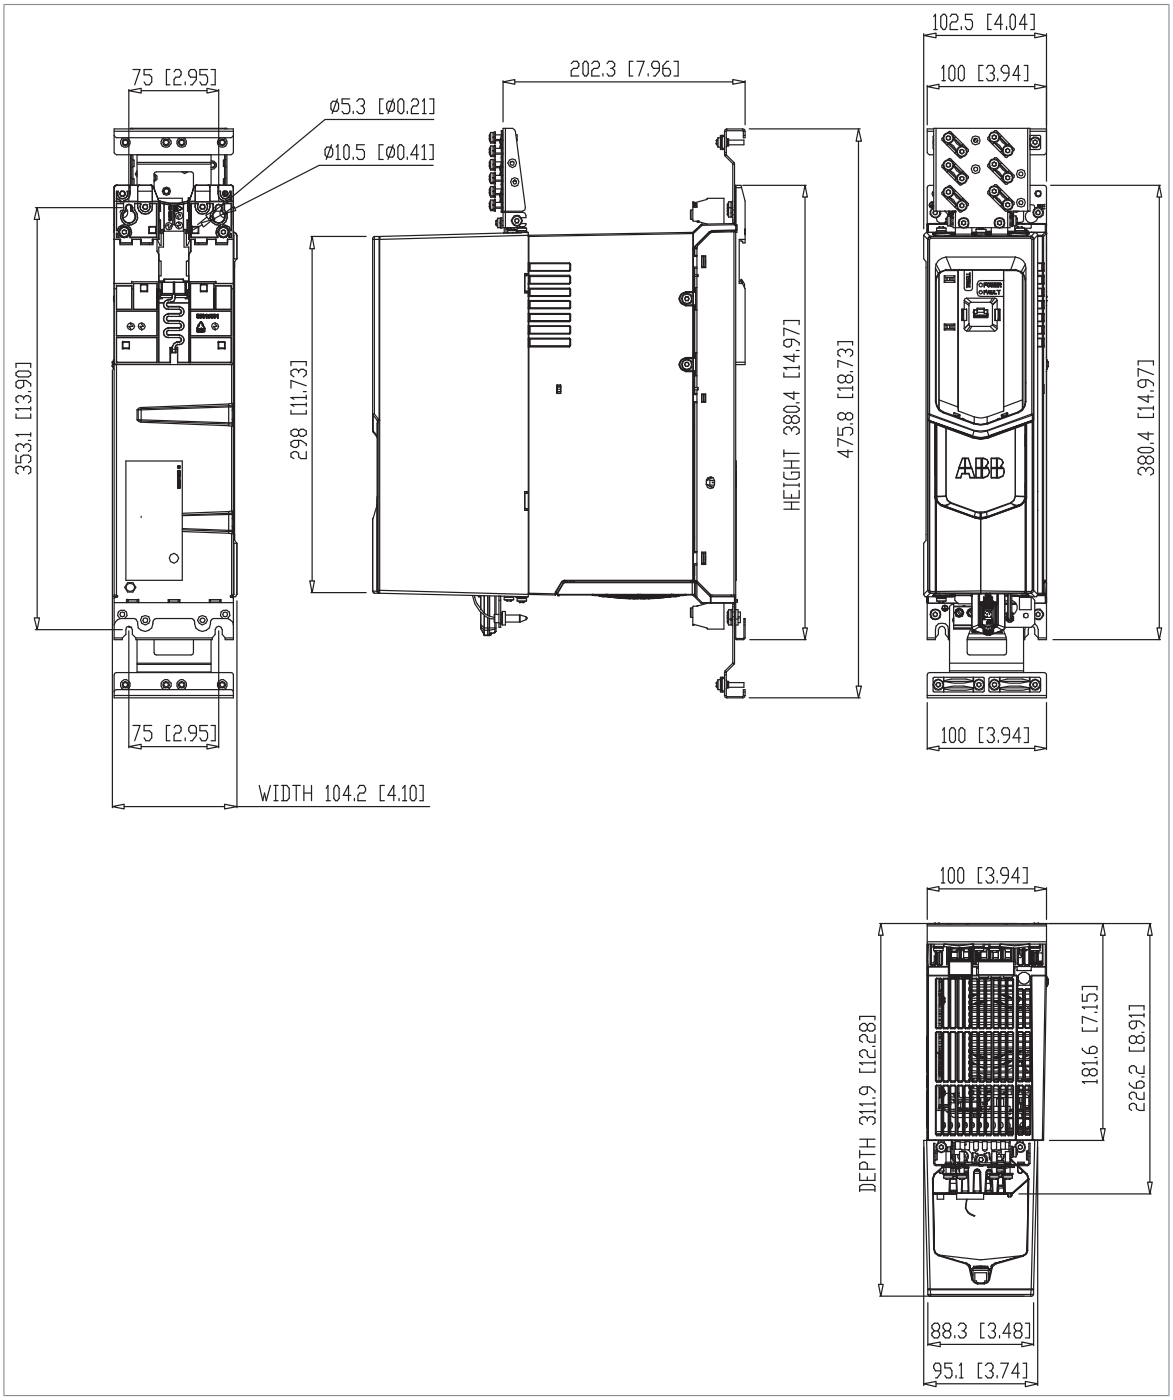
75 [2.95]
Ø5.3 [Ø0.21]
Ø10.5 [Ø0.41]
353.1 [13.90]
298 [11.73]
75 [2.95]
WIDTH 104.2 [4.10]
202.3 [7.96]
HEIGHT 380.4 [14.97]
475.8 [18.73]
102.5 [4.04]
100 [3.94]
ABB
380.4 [14.97]
100 [3.94]
100 [3.94]
DEPTH 311.9 [12.28]
181.6 [7.15]
226.2 [8.91]
88.3 [3.48]
95.1 [3.74]


Frame R3i

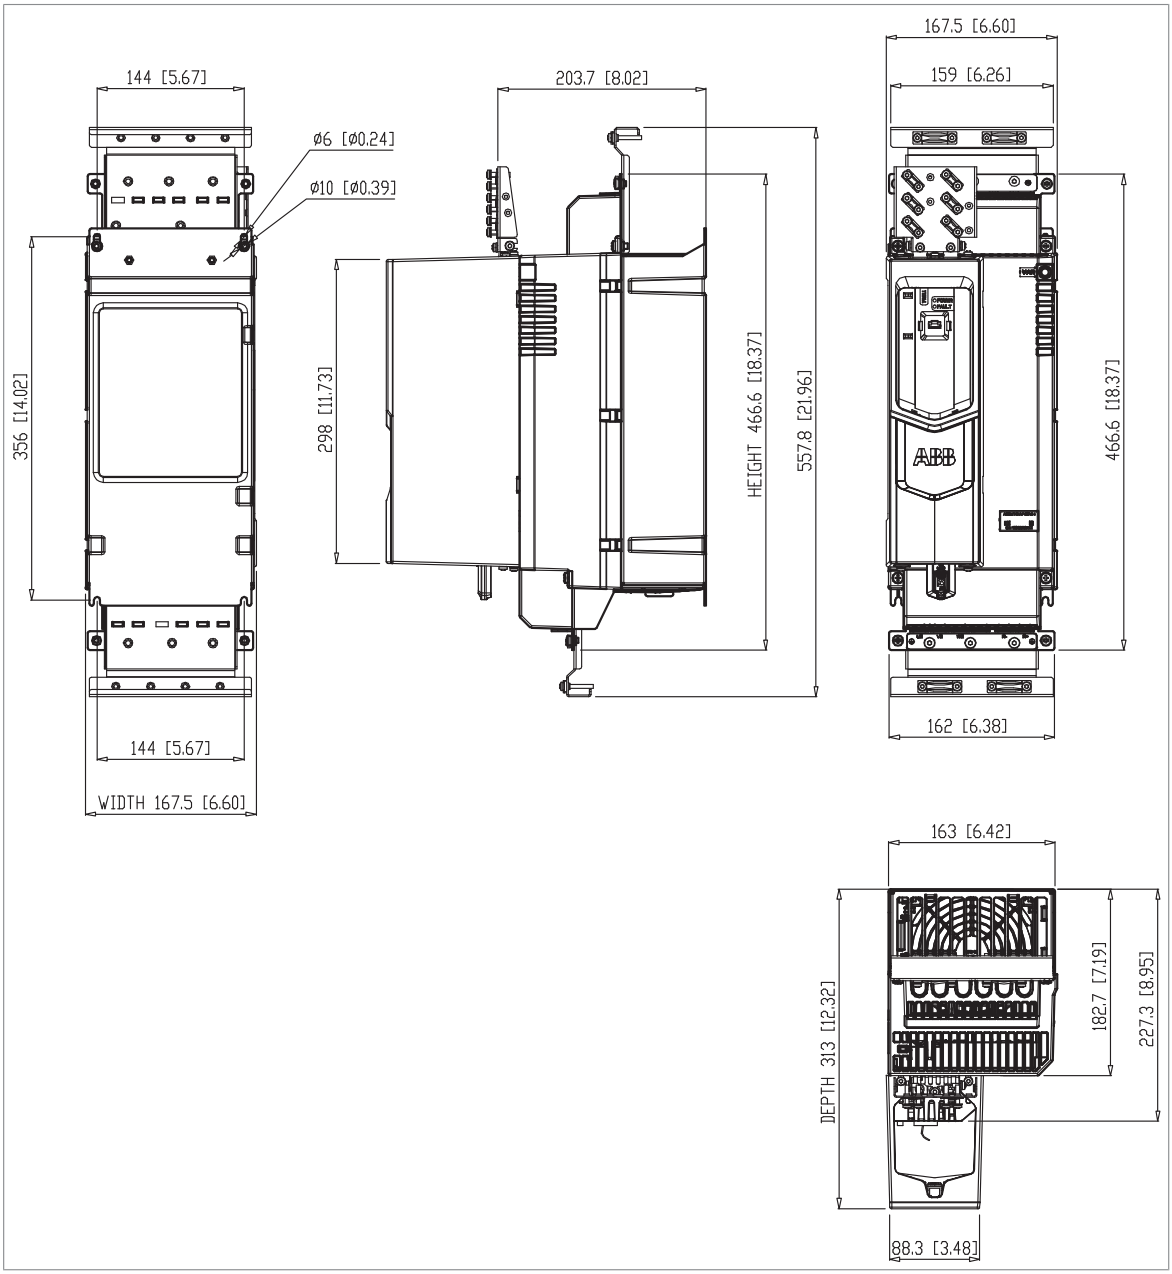
144 [5.67]
Ø6 [Ø0.24]
Ø10 [Ø0.39]
356 [14.02]
144 [5.67]
WIDTH 167.5 [6.60]
203.7 [8.02]
298 [11.73]
HEIGHT 466.6 [18.37]
557.8 [21.96]
167.5 [6.60]
159 [6.26]
466.6 [18.37]
162 [6.38]
163 [6.42]
DEPTH 313 [12.32]
182.7 [7.19]
227.3 [8.95]
88.3 [3.48]


Frame R4i

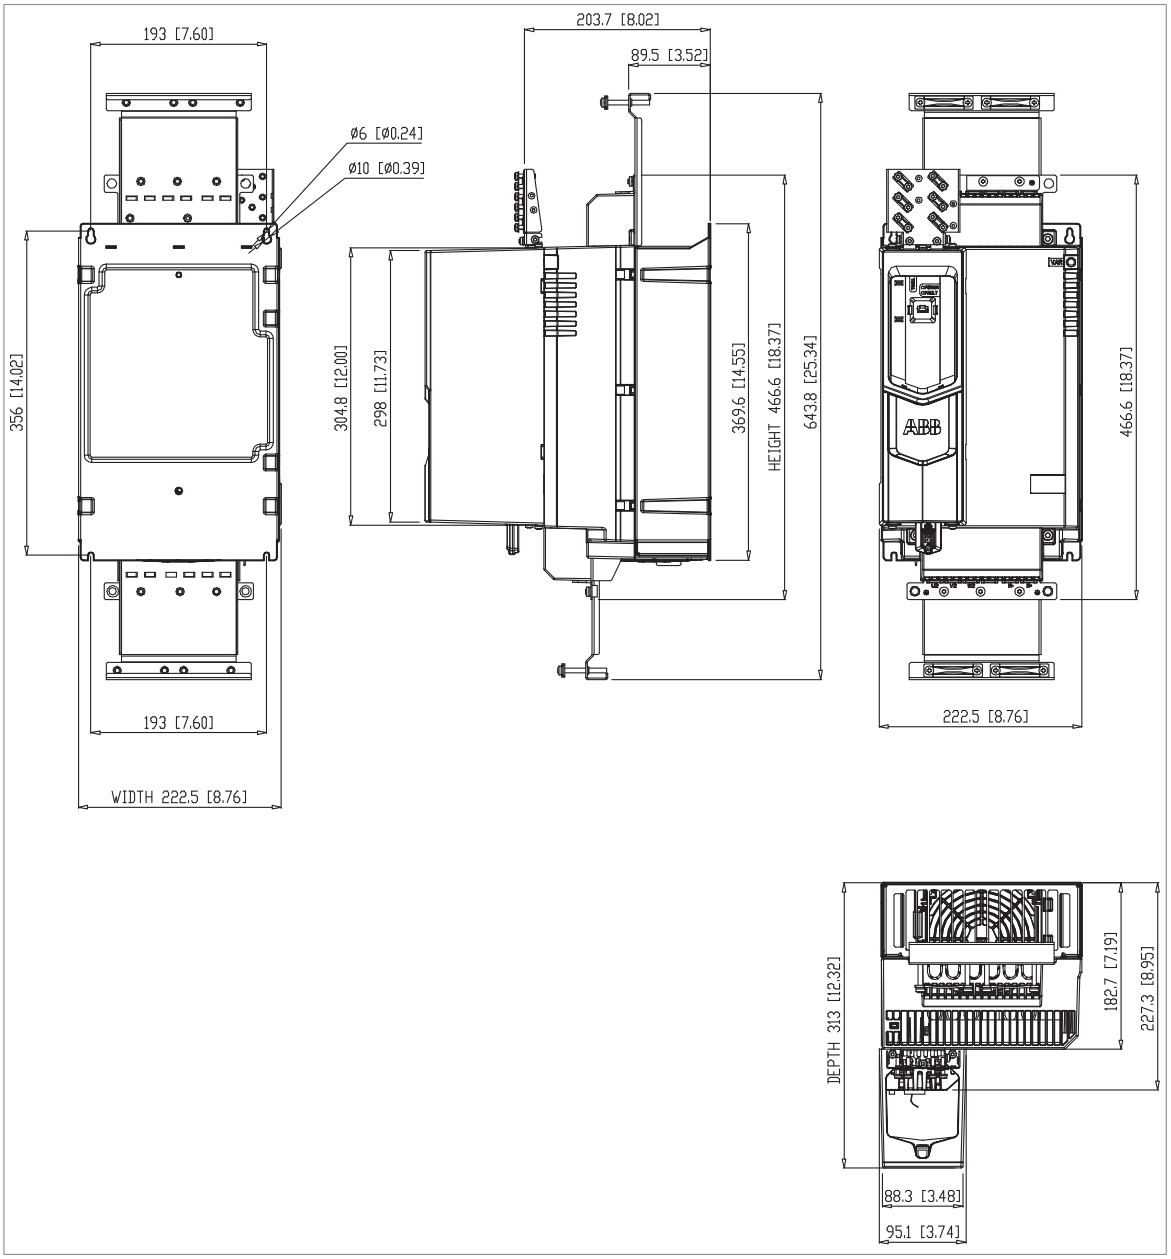
193 [7.60]
Ø6 [Ø0.24]
Ø10 [Ø0.39]
356 [14.02]
193 [7.60]
WIDTH 222.5 [8.76]
203.7 [8.02]
89.5 [3.52]
304.8 [12.00]
298 [11.73]
369.6 [14.55]
HEIGHT 466.6 [18.37]
643.8 [25.34]
466.6 [18.37]
222.5 [8.76]
DEPTH 313 [12.32]
182.7 [7.19]
227.3 [8.95]
88.3 [3.48]
95.1 [3.74]


Frame R5i

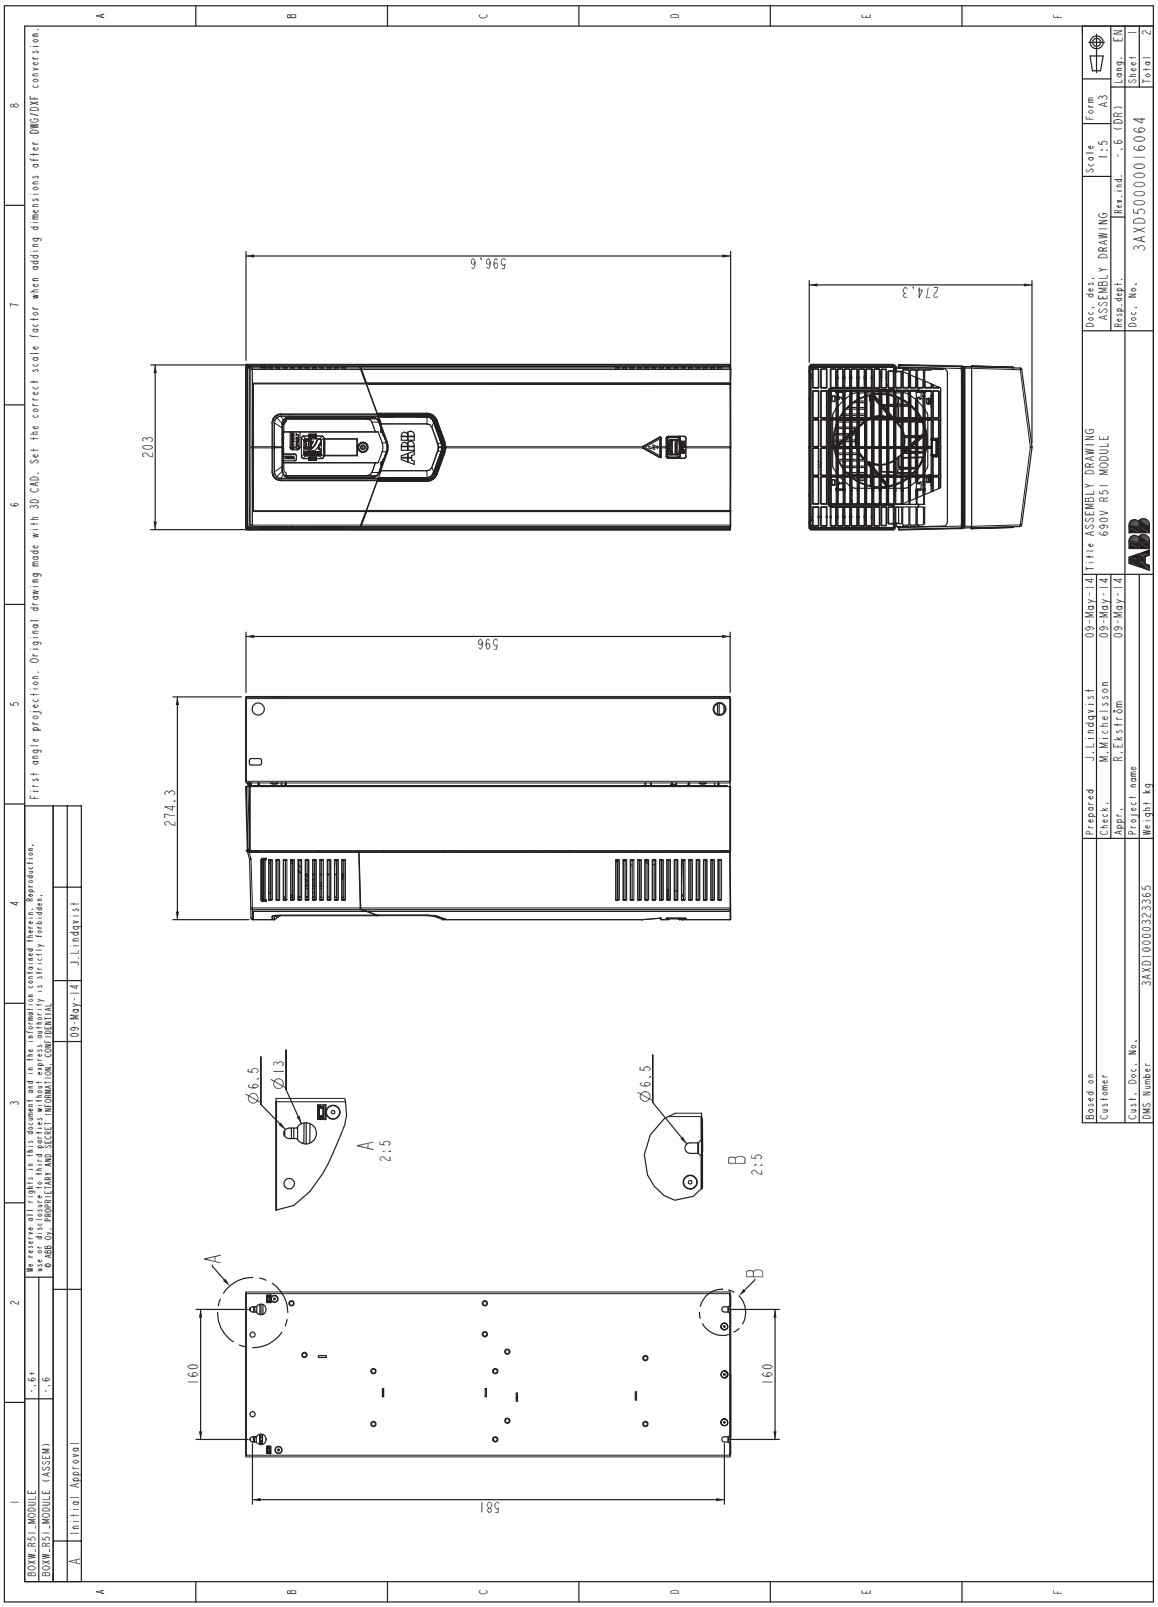
596,6
274,3
203
596
274,3
Ø6,5
Ø13
A
2:5
Ø6,5
B
2:5
A
B
160
160
581
ABB
First angle projection. Original drawing made with 3D CAD. Set the correct scale factor when adding dimensions after DWG/DXF conversion.
Title ASSEMBLY DRAWING
690V R5i MODULE
Doc. No. 3AXD50000016064
Scale 1:5
Form A3
Lang. EN
Sheet 1
Total 2
Prepared J.Lindqvist 09-May-14
Check. M.Michelsson 09-May-14
Appr. R.Ekström 09-May-14
Weight kg 3AXD10000323365
Based on
Customer
Cust. Doc. No.
DMS Number
Initial Approval J.Lindqvist 09-May-14


Frame R6i

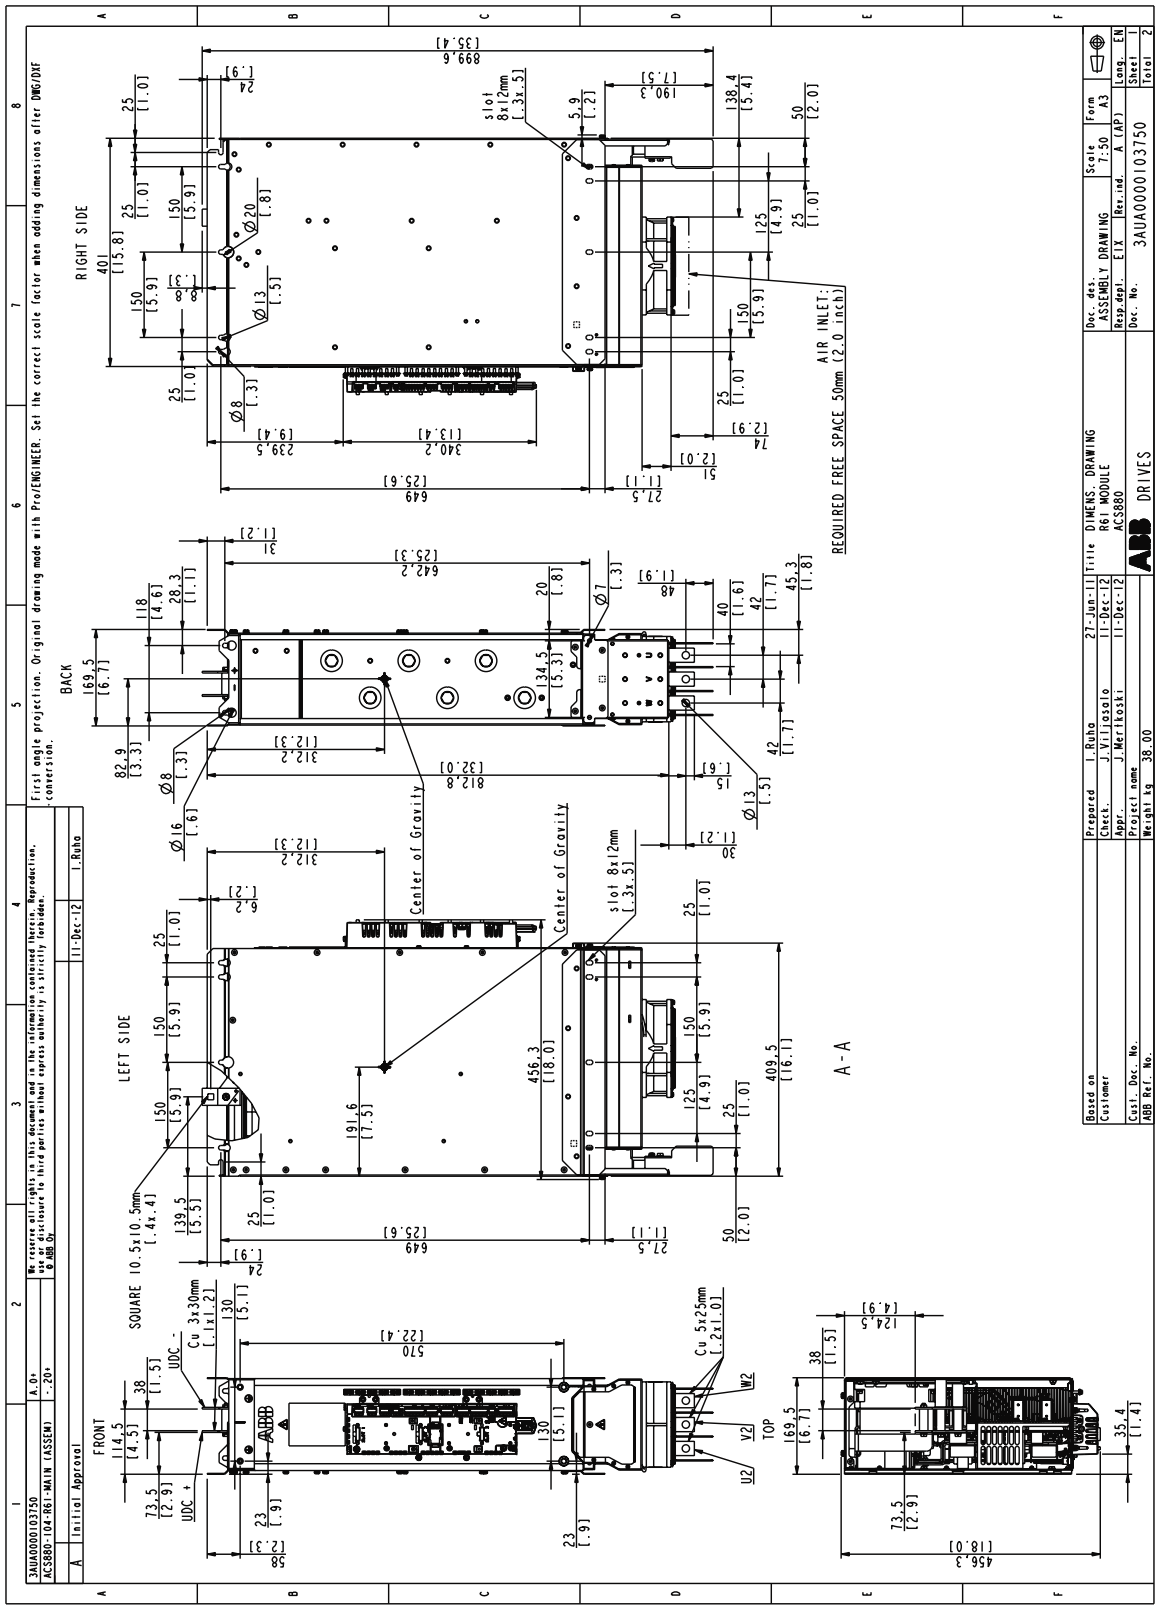
RIGHT SIDE
BACK
LEFT SIDE
FRONT
TOP
A - A
AIR INLET:
REQUIRED FREE SPACE 50mm (2.0 inch)
Center of Gravity
Center of Gravity
SQUARE 10.5x10.5mm
slot 8x12mm
slot 8x12mm
Cu 3x30mm
Cu 5x25mm
UDC -
UDC +
U2
V2
W2
Prepared I.Ruha 27-Jun-11
Check. J.Viitasalo 11-Dec-12
Appr. J.Merikoski 11-Dec-12
Project name
Weight kg 38.00
Title DIMENS. DRAWING
R6i MODULE
ACS880
Doc. des. ASSEMBLY DRAWING
Resp.dept. E1X
Doc. No. 3AUA0000103750
Scale 7:50
Rev.ind. A (AP)
Form A3
Long. EN
Sheet 1
Total 2
Based on
Customer
Cust. Doc. No.
ABB Ref. No.
3AUA0000103750
ACS880-104-R6I-MAIN (ASSEM)
A Initial Approval
11-Dec-12
I.Ruha
First angle projection. Original drawing made with Pro/ENGINEER. Set the correct scale factor when adding dimensions after DWG/DXF conversion.
We reserve all rights in this document and in the information contained therein. Reproduction, use or disclosure to third parties without express authority is strictly forbidden.
© ABB Oy
DRIVES


Frame R6i with options +V992 and +C249

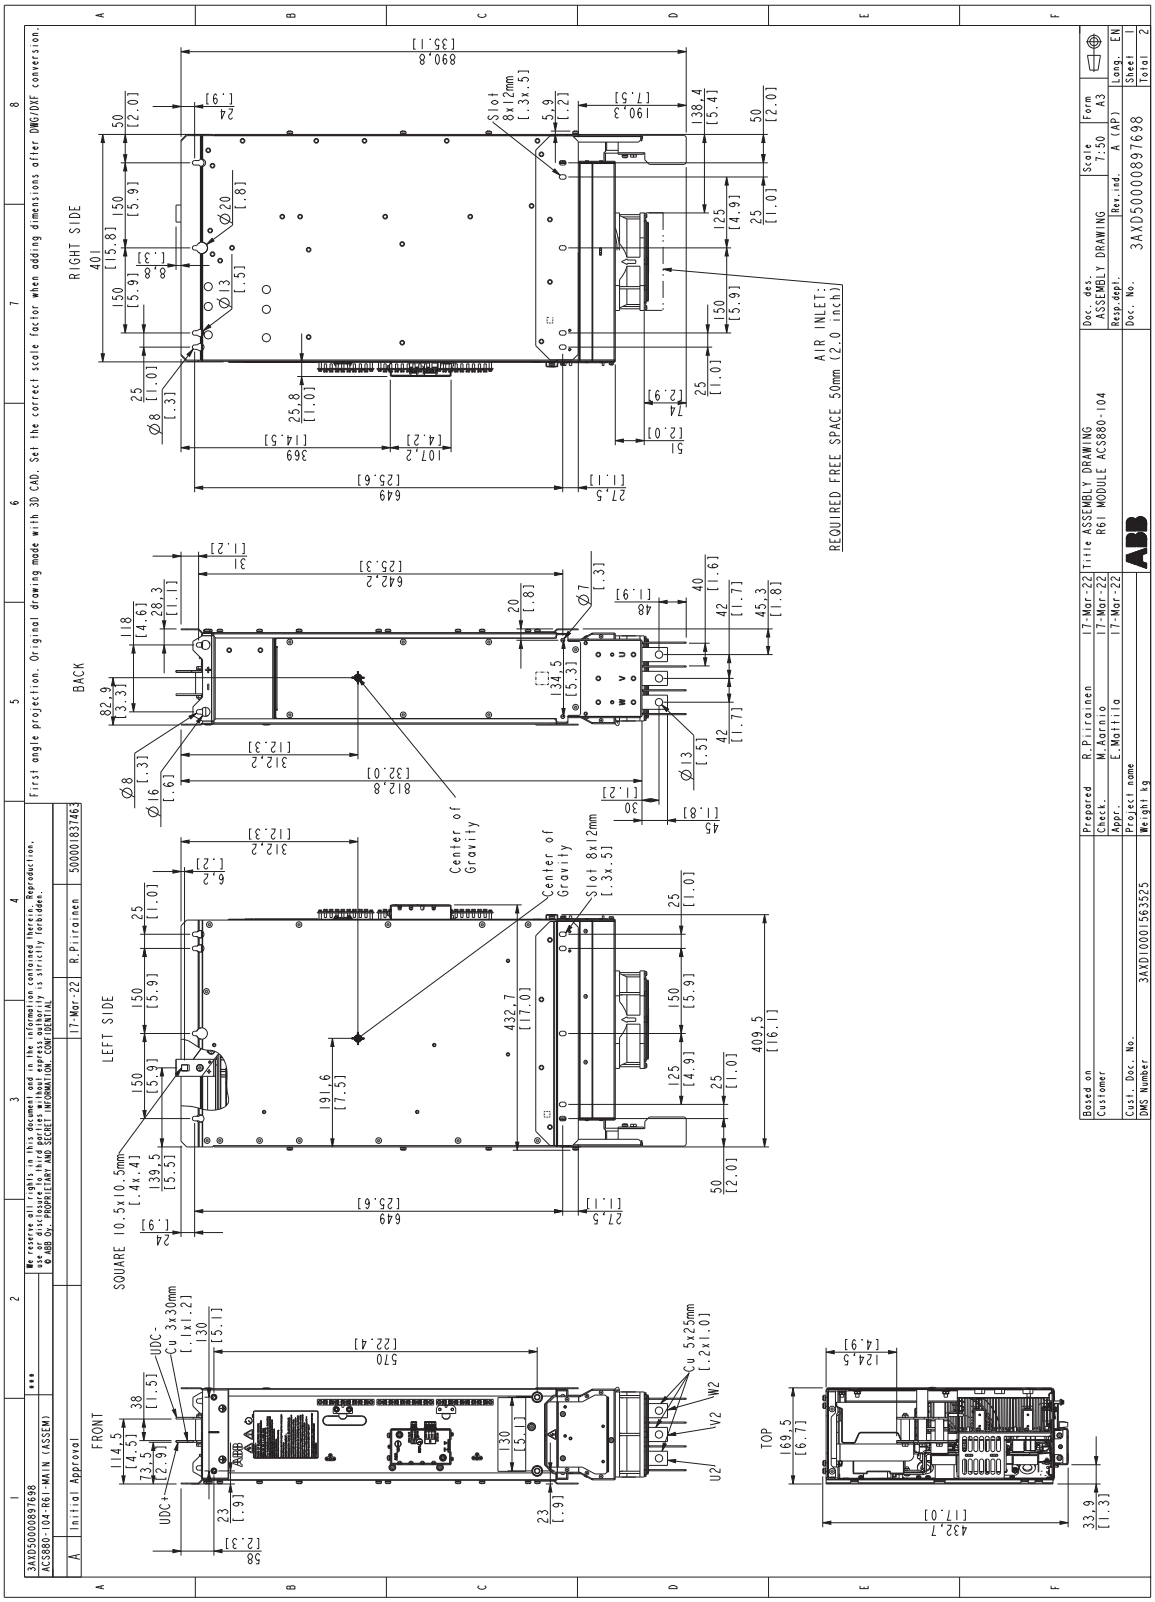


Frame R7i

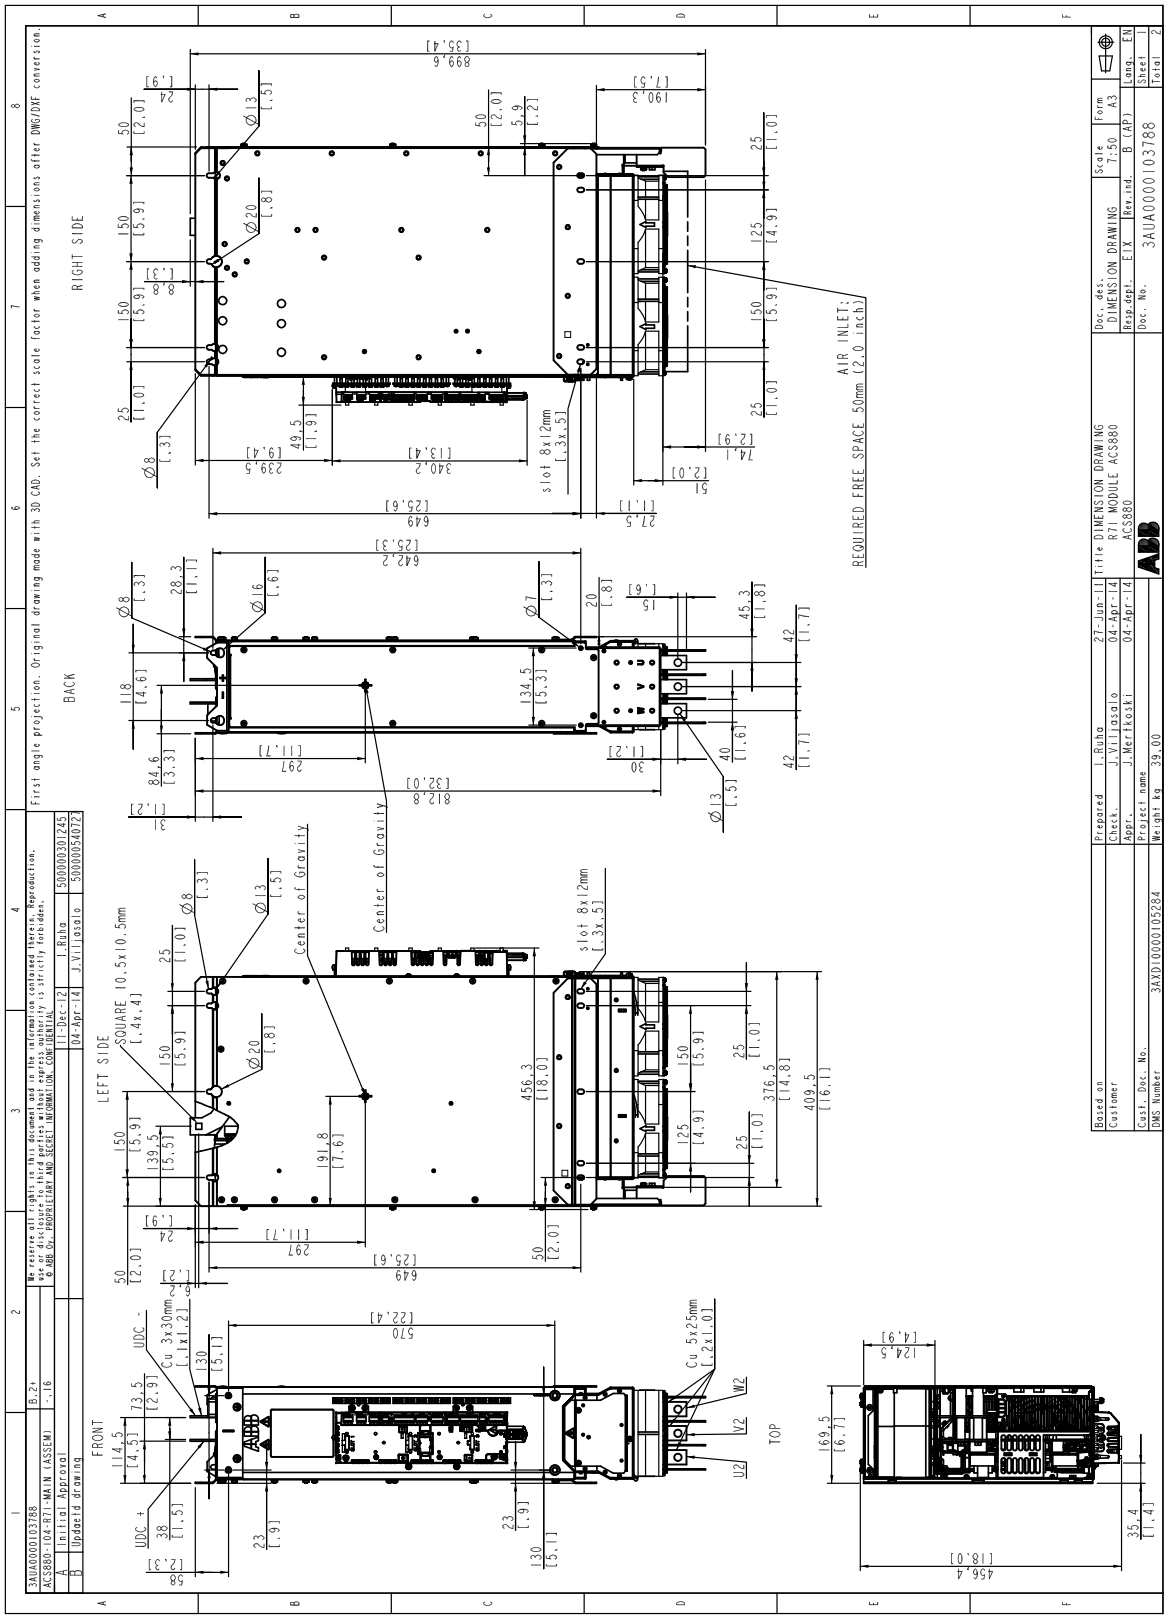
RIGHT SIDE
BACK
LEFT SIDE
FRONT
TOP
AIR INLET;
REQUIRED FREE SPACE 50mm (2.0 inch)
Center of Gravity
slot 8x12mm
SQUARE 10.5x10.5mm
Cu 3x30mm
Cu 5x25mm
UDC +
UDC -
DIMENSION DRAWING
R7i MODULE ACS880
ACS880
3AUA0000103788
3AXD10000105284
Weight kg 39,00


Frame R7i with options +V992 and +C249

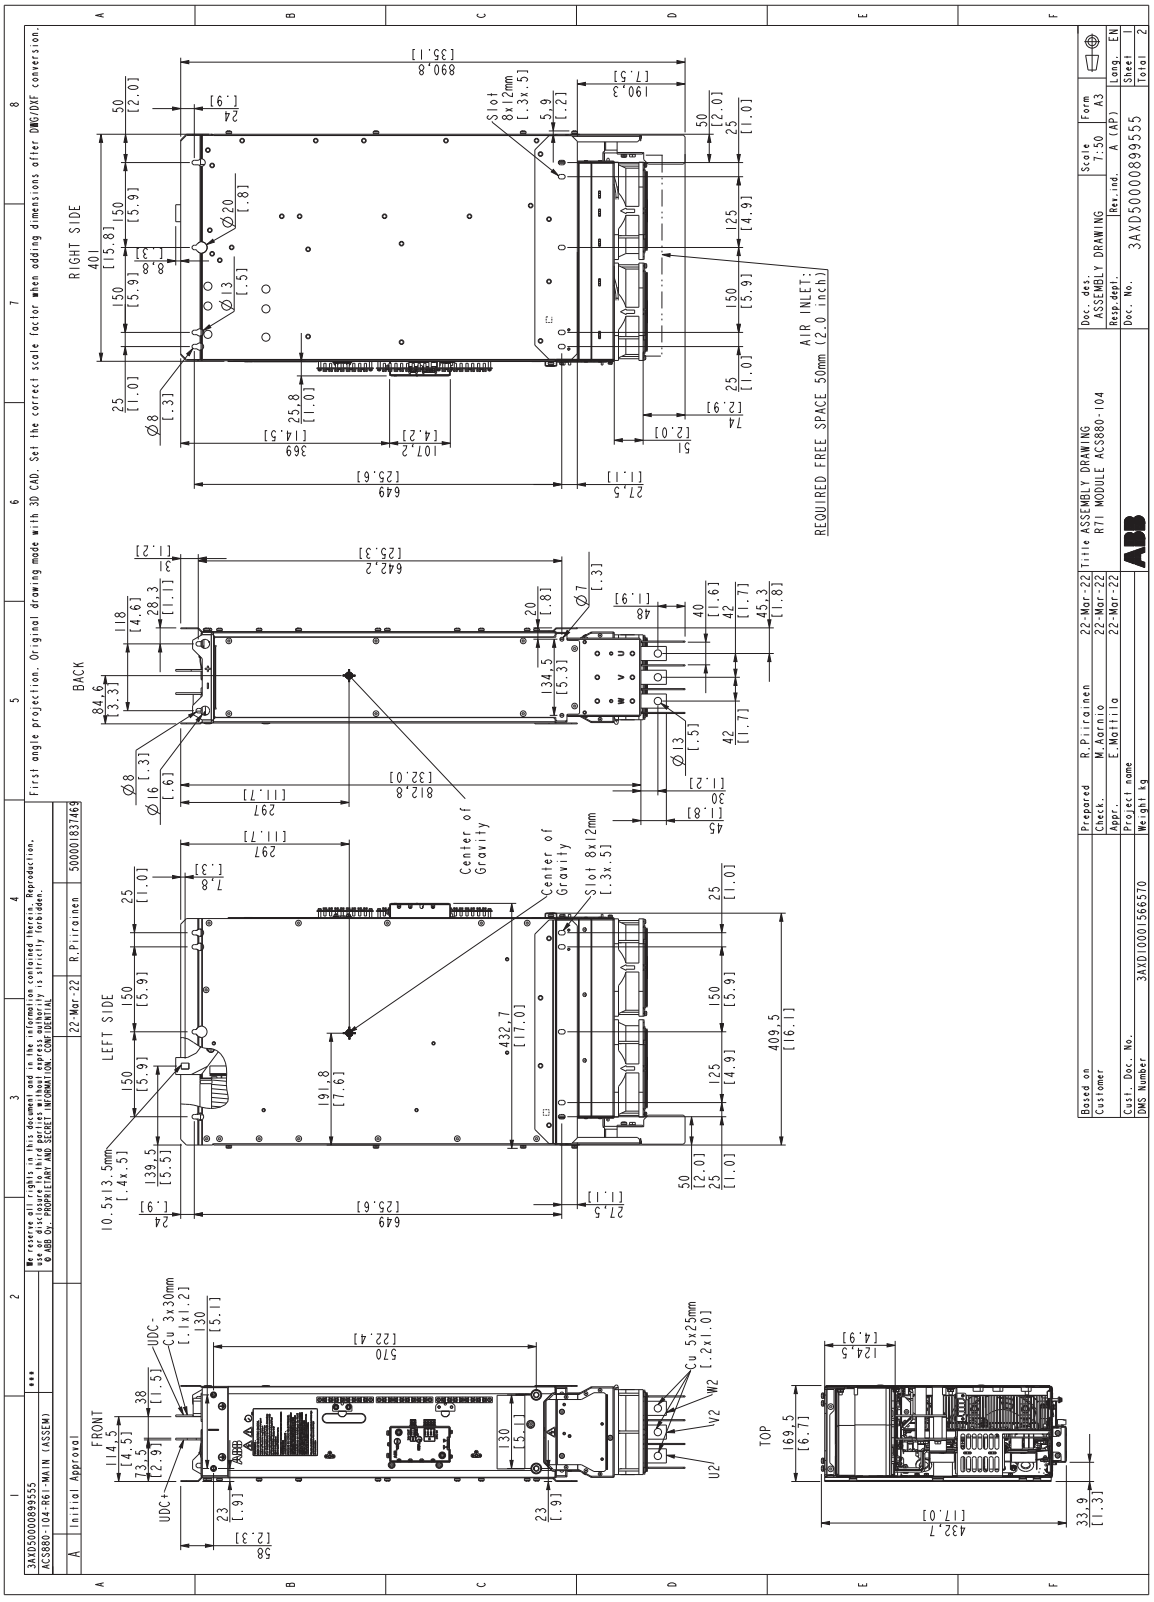


Frame R8i

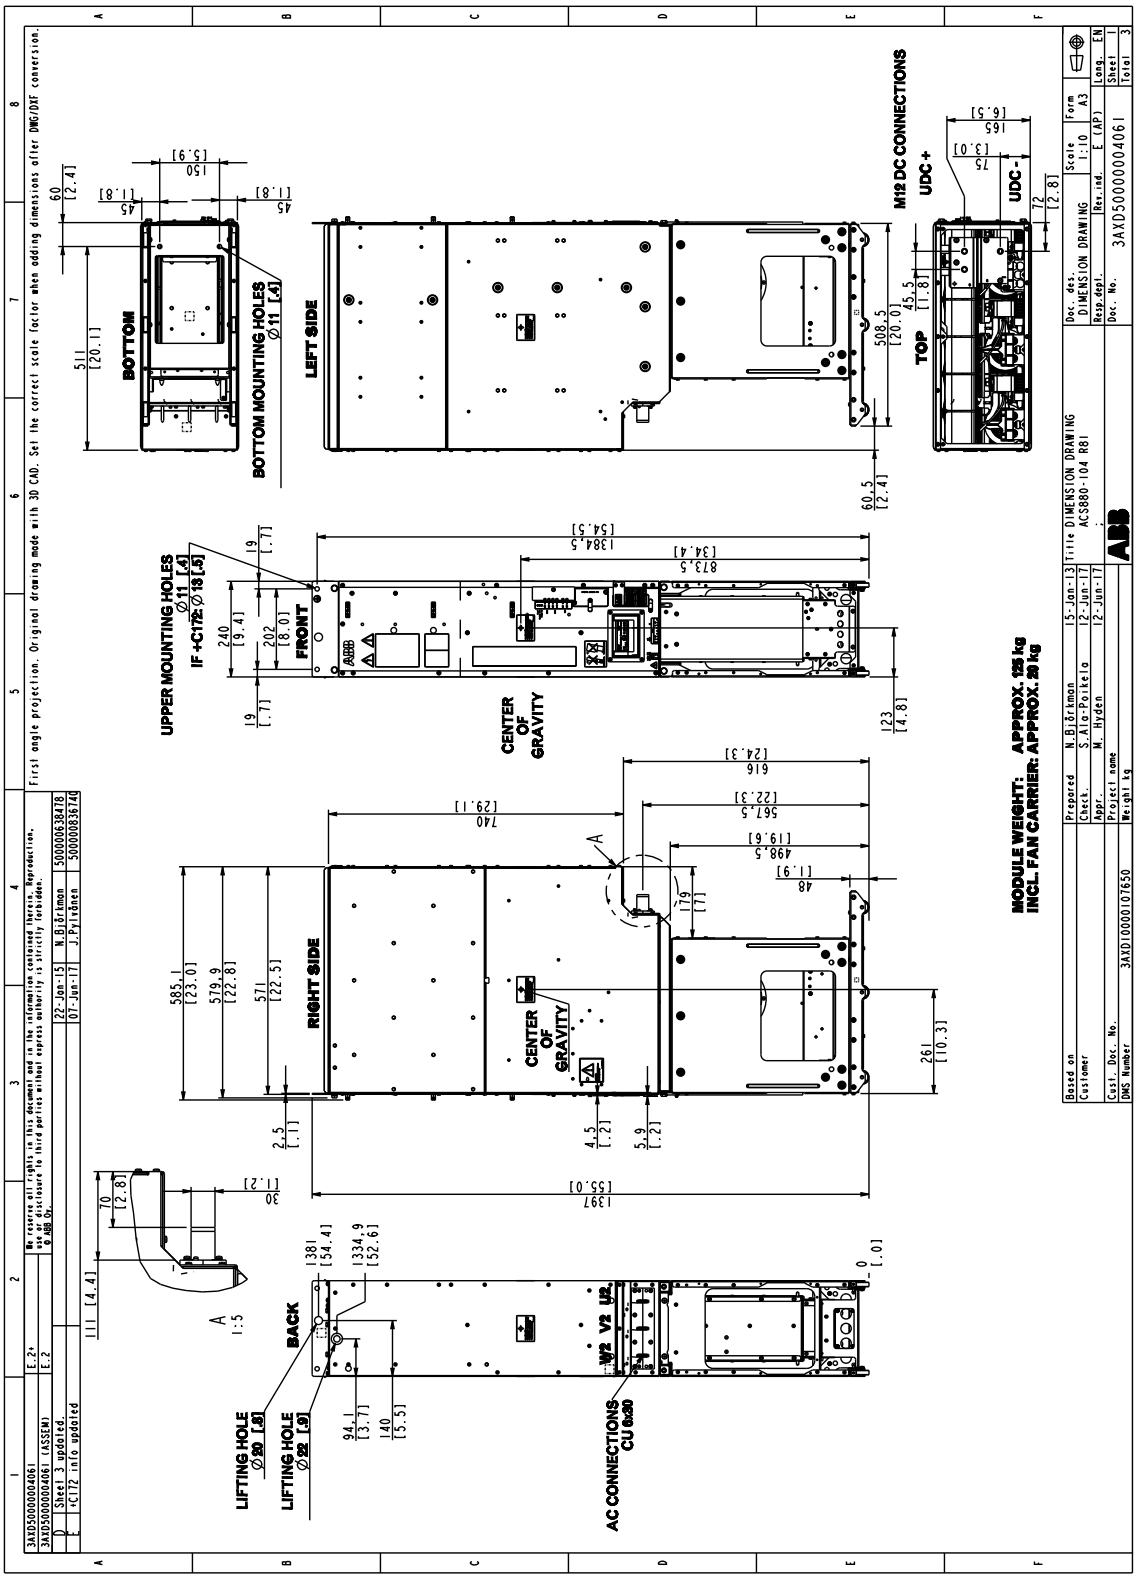

BOTTOM
BOTTOM MOUNTING HOLES Ø11 [.4]
LEFT SIDE
M12 DC CONNECTIONS
UDC+
UDC-
TOP
UPPER MOUNTING HOLES Ø11 [.4] IF +C172 Ø18 [.8]
FRONT
CENTER OF GRAVITY
RIGHT SIDE
CENTER OF GRAVITY
MODULE WEIGHT: APPROX. 125 kg
INCL. FAN CARRIER: APPROX. 29 kg
BACK
LIFTING HOLE Ø20 [.8]
LIFTING HOLE Ø22 [.9]
AC CONNECTIONS CU 8x30
Title DIMENSION DRAWING
ACS880-104 R8i
Doc. No. 3AXD50000004061
DIMENSION DRAWING
3AXD50000004061 (ASSEM)
Sheet 3 updated.
+C172 info updated
ABB


426 Dimension drawings

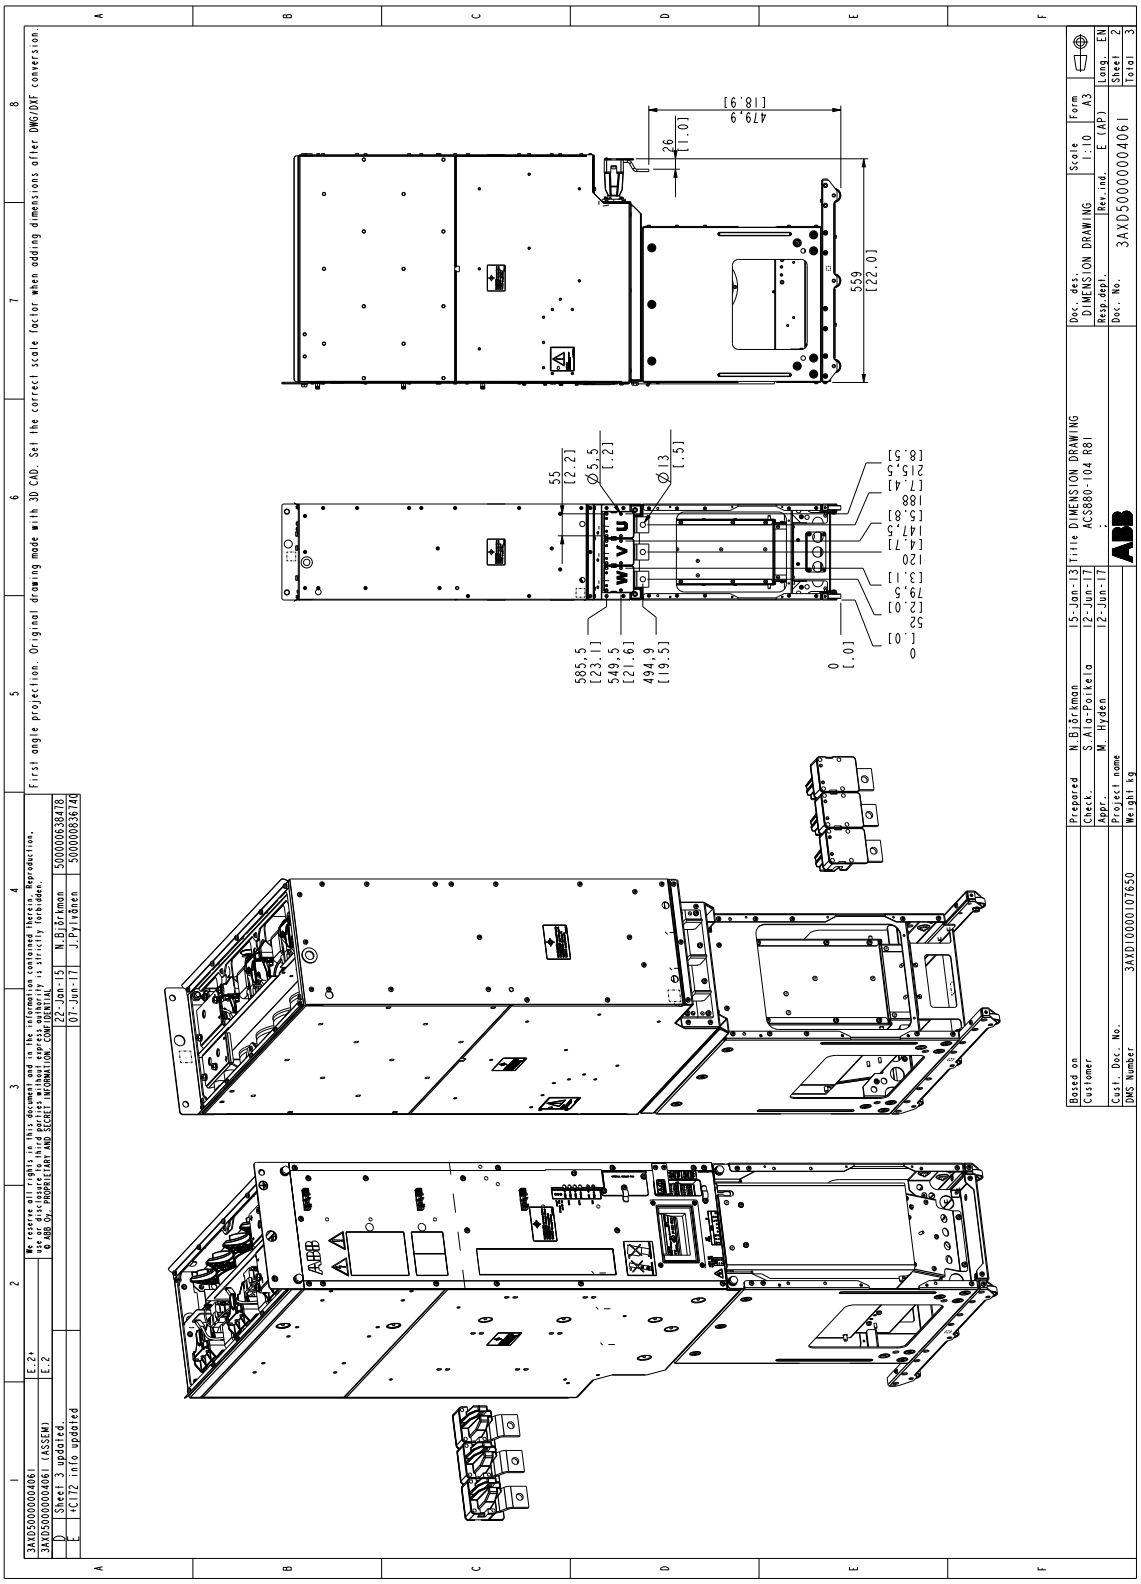

Frame R8i with option +P942

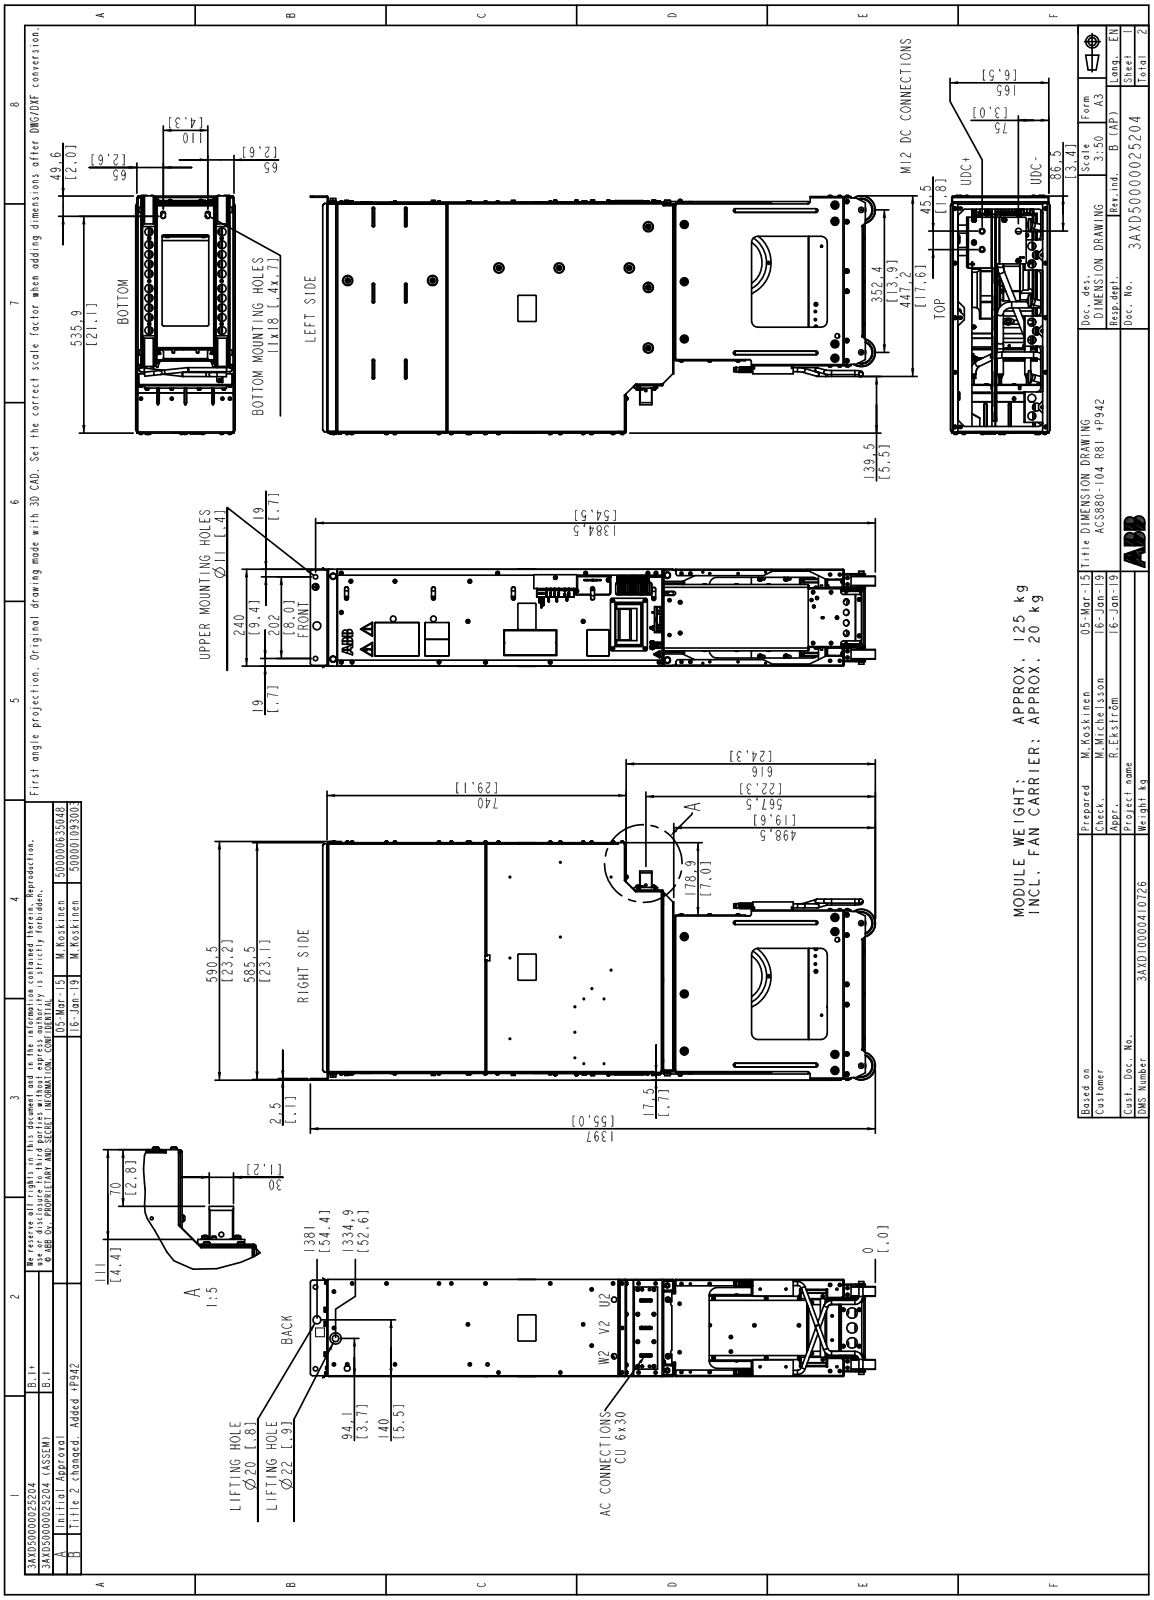

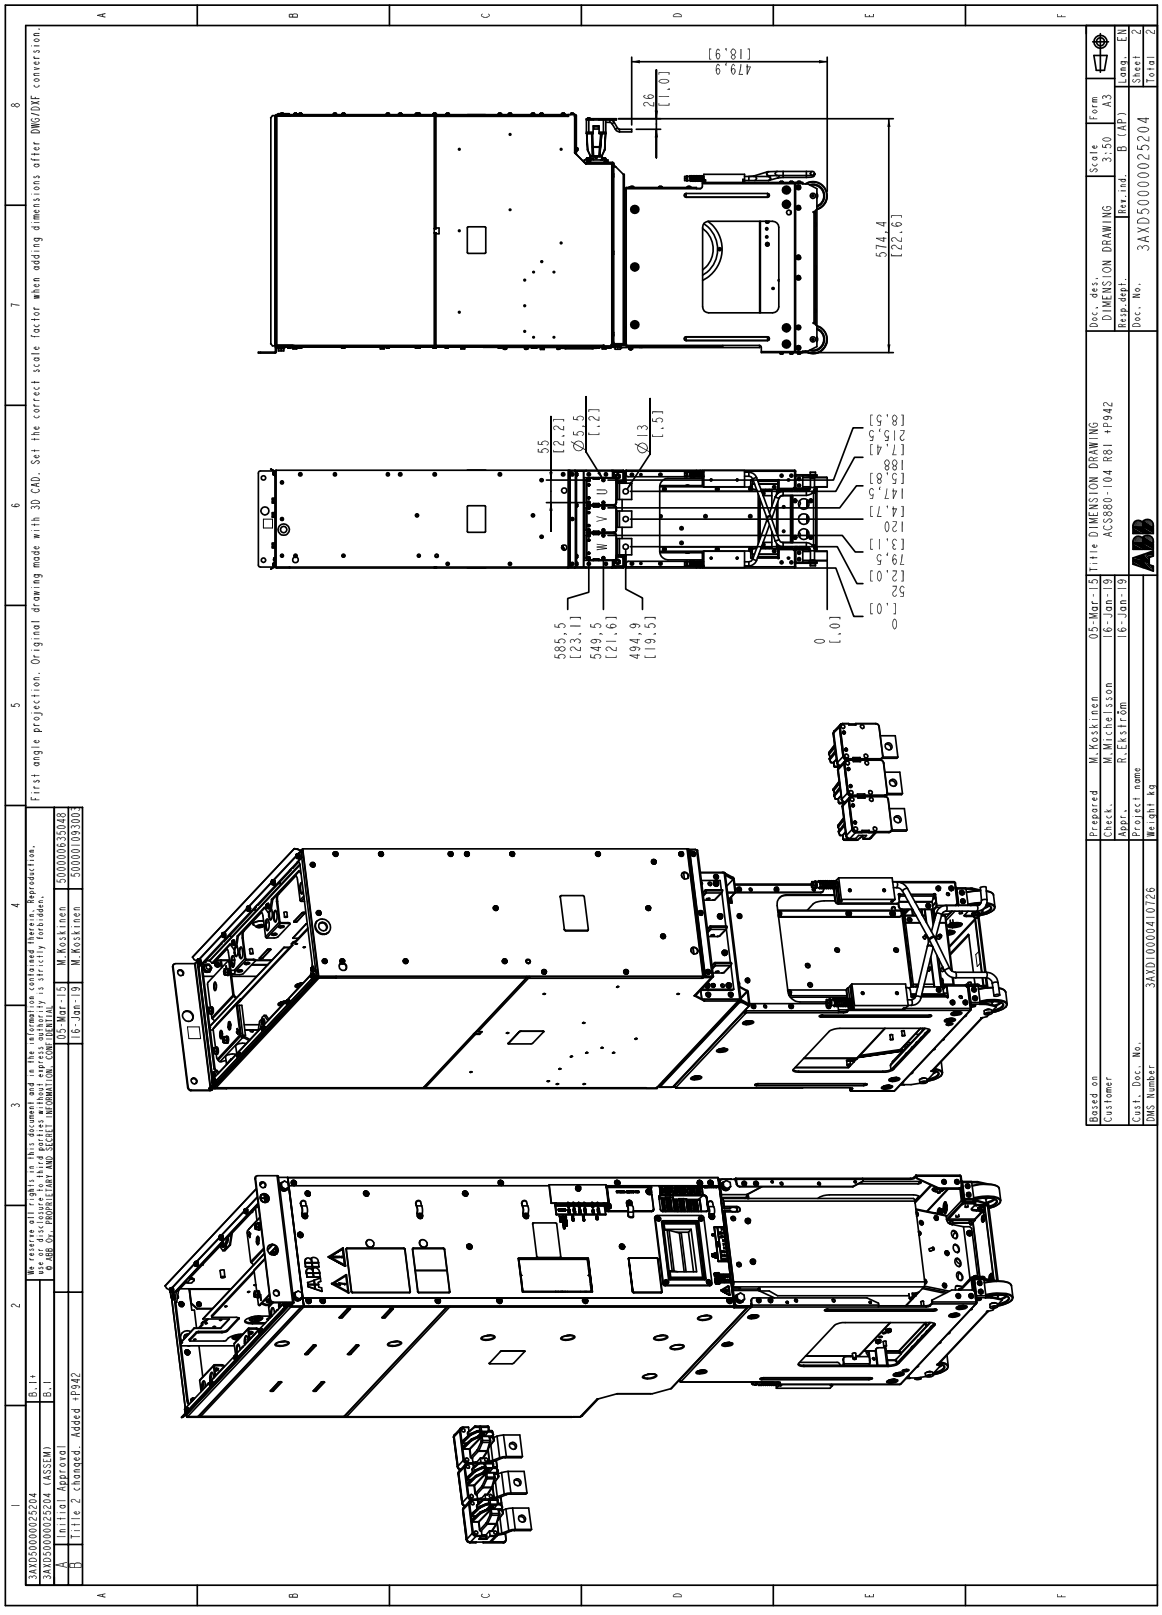

First angle projection. Original drawing made with 3D CAD. Set the correct scale factor when adding dimensions after DWG/DXF conversion.
We reserve all rights in this document and in the information contained therein. Reproduction, use or disclosure to third parties without express authority is strictly forbidden.
© ABB Oy, FINLAND and SECURITY INFORMATION CONFIDENTIAL
3AXD50000025204
3AXD50000025204 ASSEMI
A Initial Approval B.Ir 16-Mar-15 M.Koskinen 5000006350
B Title 2 changed. Added -P942 16-Jan-19 M.Koskinen 5000010930
Based on
Customer
Cust. Doc. No.
DMS Number 3AXD10000410726
Prepared M.Koskinen 05-Mar-15
Check M.Mirchelsson 16-Jan-19
Appr. R.Eksström 16-Jan-19
Project name
Weight kg
Title DIMENSION DRAWING
ACS880-104 R8I +P942
Doc. des. DIMENSION DRAWING
Resp dept.
Doc. No. 3AXD50000025204
Scale 3:50
Rev.ind. B (AP)
Form A3
Lang. EN
Sheet 2
Total 2
ABB
479,9 [18,9]
26 [1,0]
574,4 [22,6]
55 [2,2]
Ø5,5 [,2]
Ø13 [,5]
585,5 [23,1]
549,5 [21,6]
494,9 [19,5]
0 [,0]
52 [2,0]
79,5 [3,1]
120 [4,7]
147,5 [5,8]
188 [7,4]
219,5 [8,5]

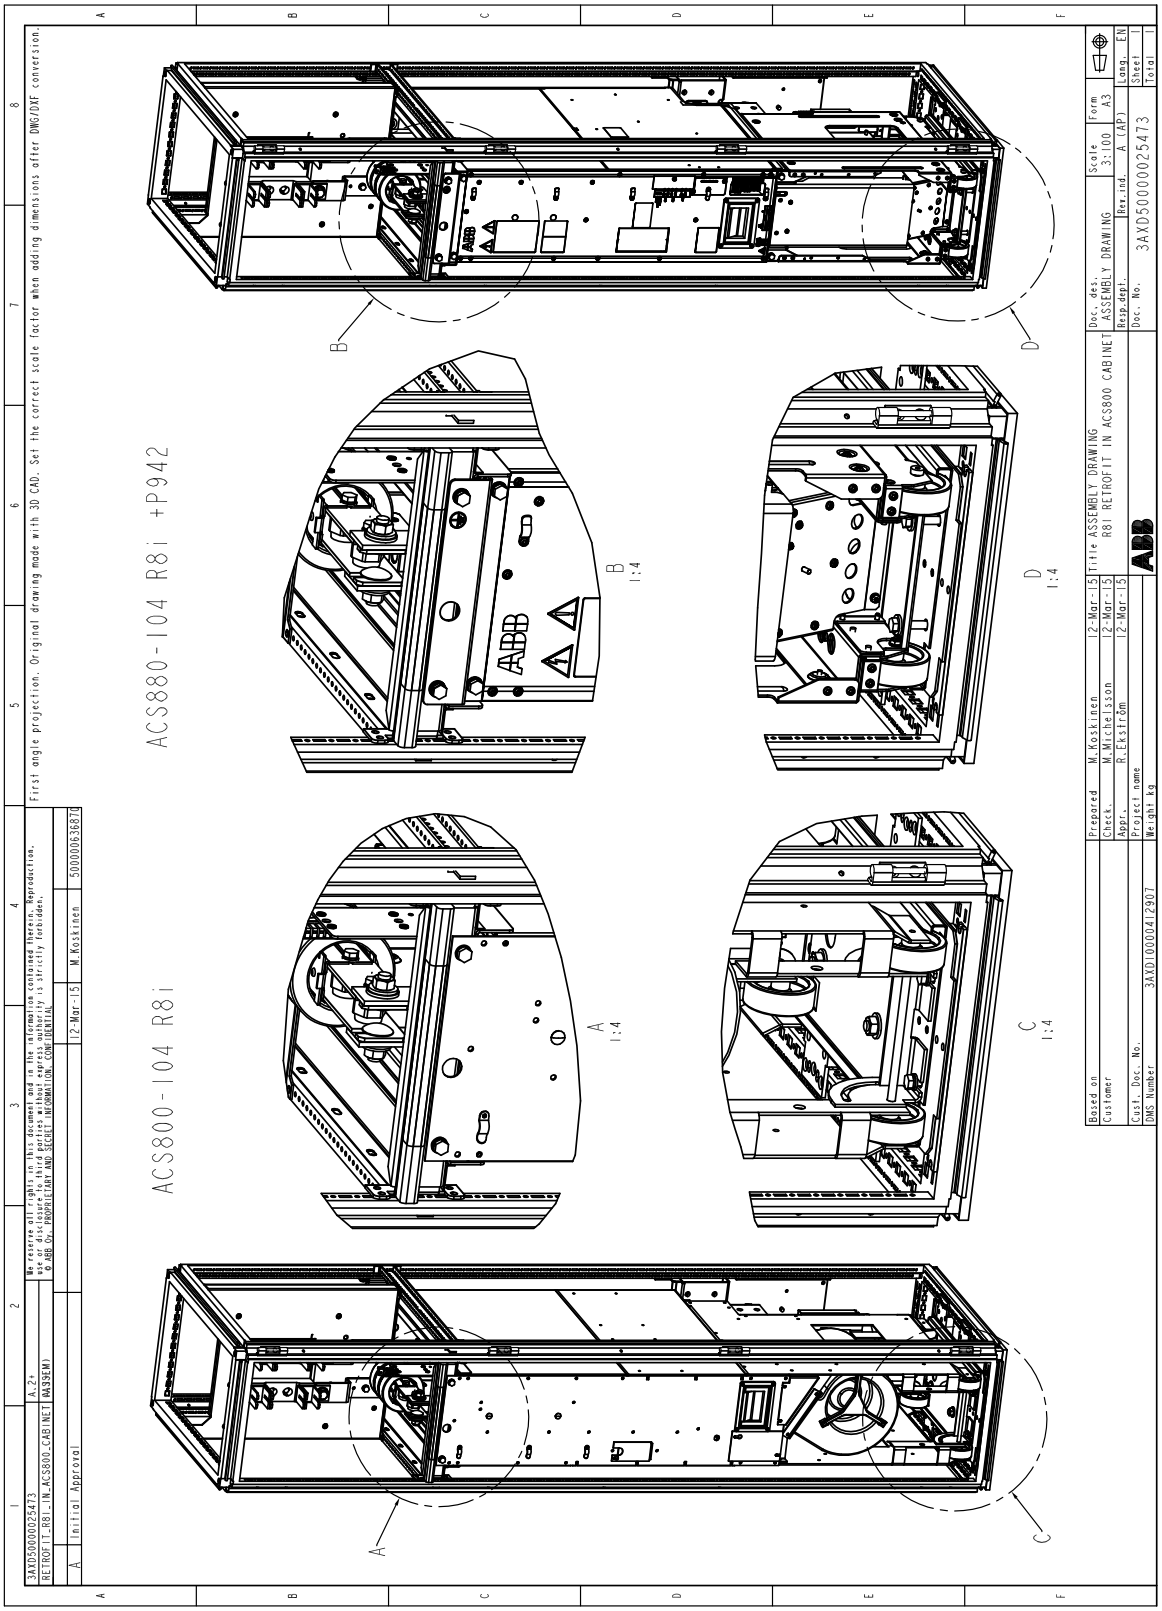
ACS880-104 R8i +P942
ACS800-104 R8i
A
1:4
B
1:4
C
1:4
D
1:4
First angle projection. Original drawing made with 3D CAD. Set the correct scale factor when adding dimensions after DWG/DXF conversion.
We reserve all rights in this document and in the information contained therein. Reproduction, use or disclosure to third parties without express authority is strictly forbidden. © ABB Oy, Drives Unit and ABB Group companies. All rights reserved.
3AXD50000025473
RETROFIT-R8I_IN_ACS800_CABINET (ASSEM)
A.2+
A Initial Approval
12-Mar-15
M.Koskinen
5000006368
Based on
Customer
Cust. Doc. No.
DMS Number
3AXD10000412907
Prepared
Check
Appr.
Project name
Weight kg
M.Koskinen
M.Michelsson
R.Ekström
12-Mar-15
Title ASSEMBLY DRAWING
R8i RETROFIT IN ACS800 CABINET
Doc. des.
ASSEMBLY DRAWING
Resp.dept.
Doc. No.
3AXD50000025473
Scale
3:100
Form
A3
Rev.ind.
A (AP)
Lang.
EN
Sheet
1
Total
1
ABB


Control electronics

ZCU control unit


Note: The control cable grounding plate can be attached to either top or bottom edge of the control unit.

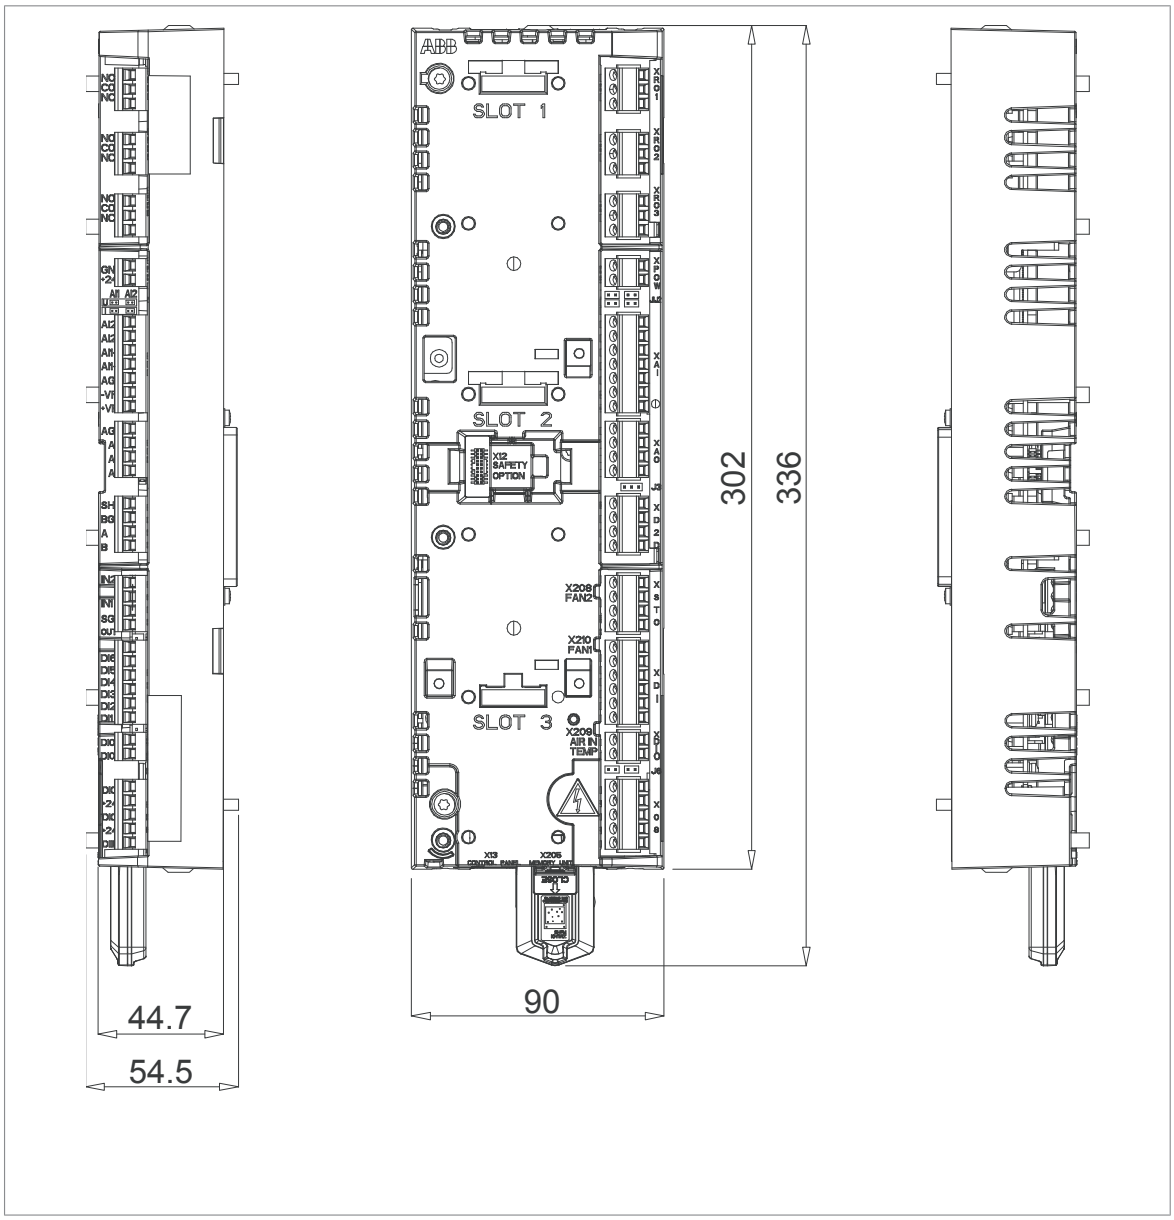


UCU control unit

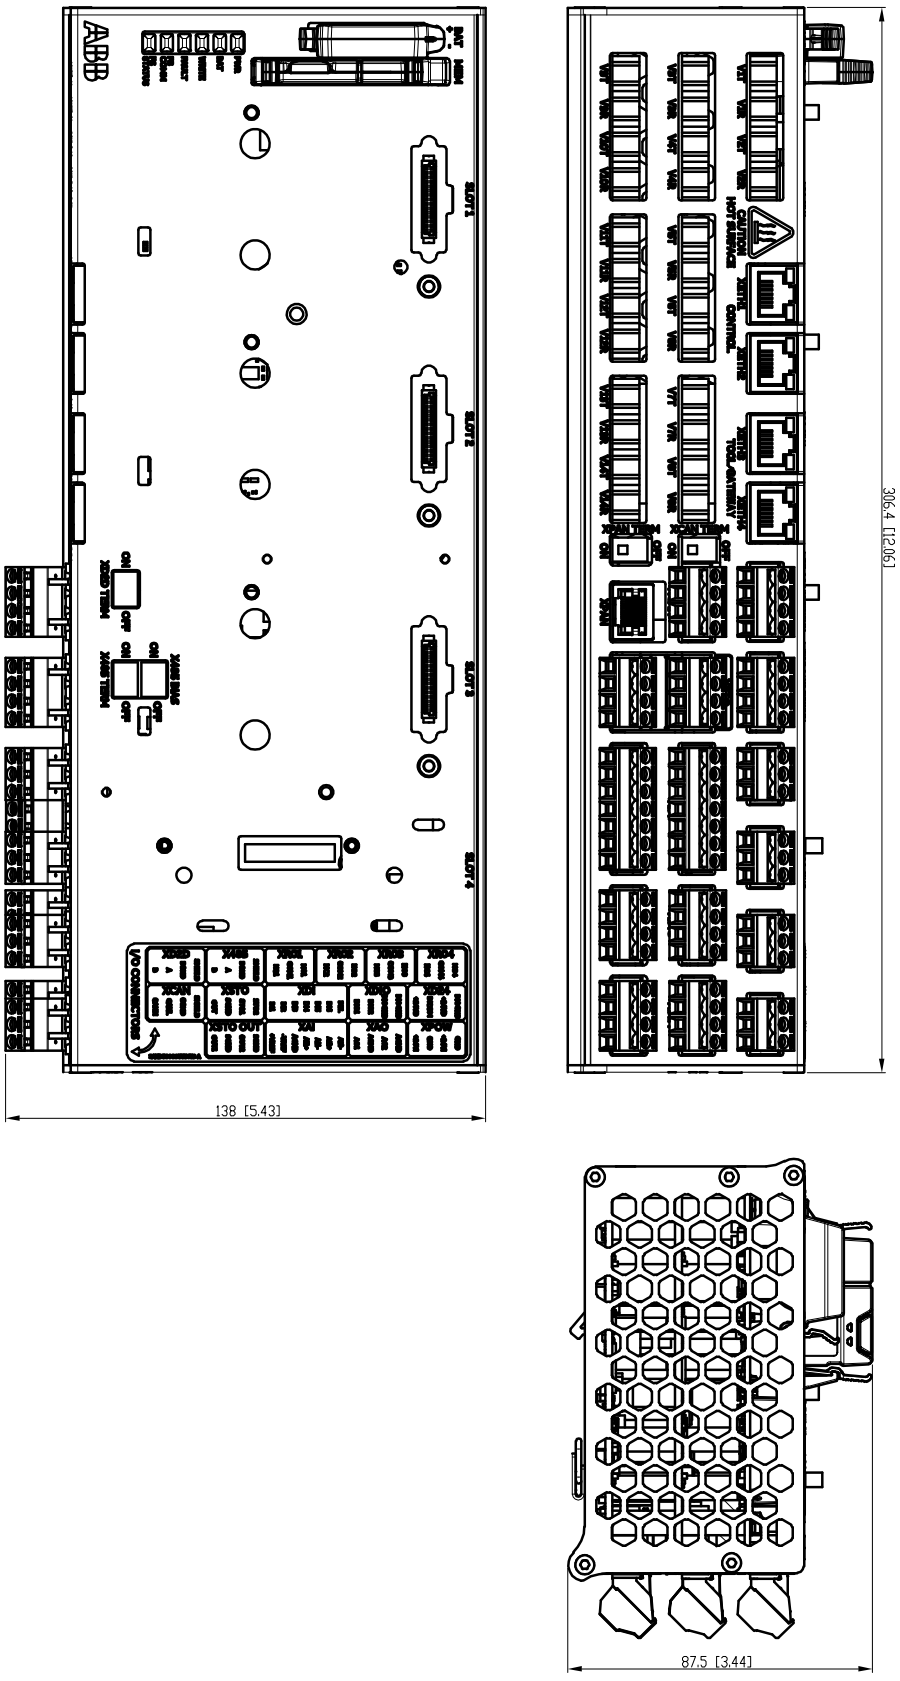

BCU control unit

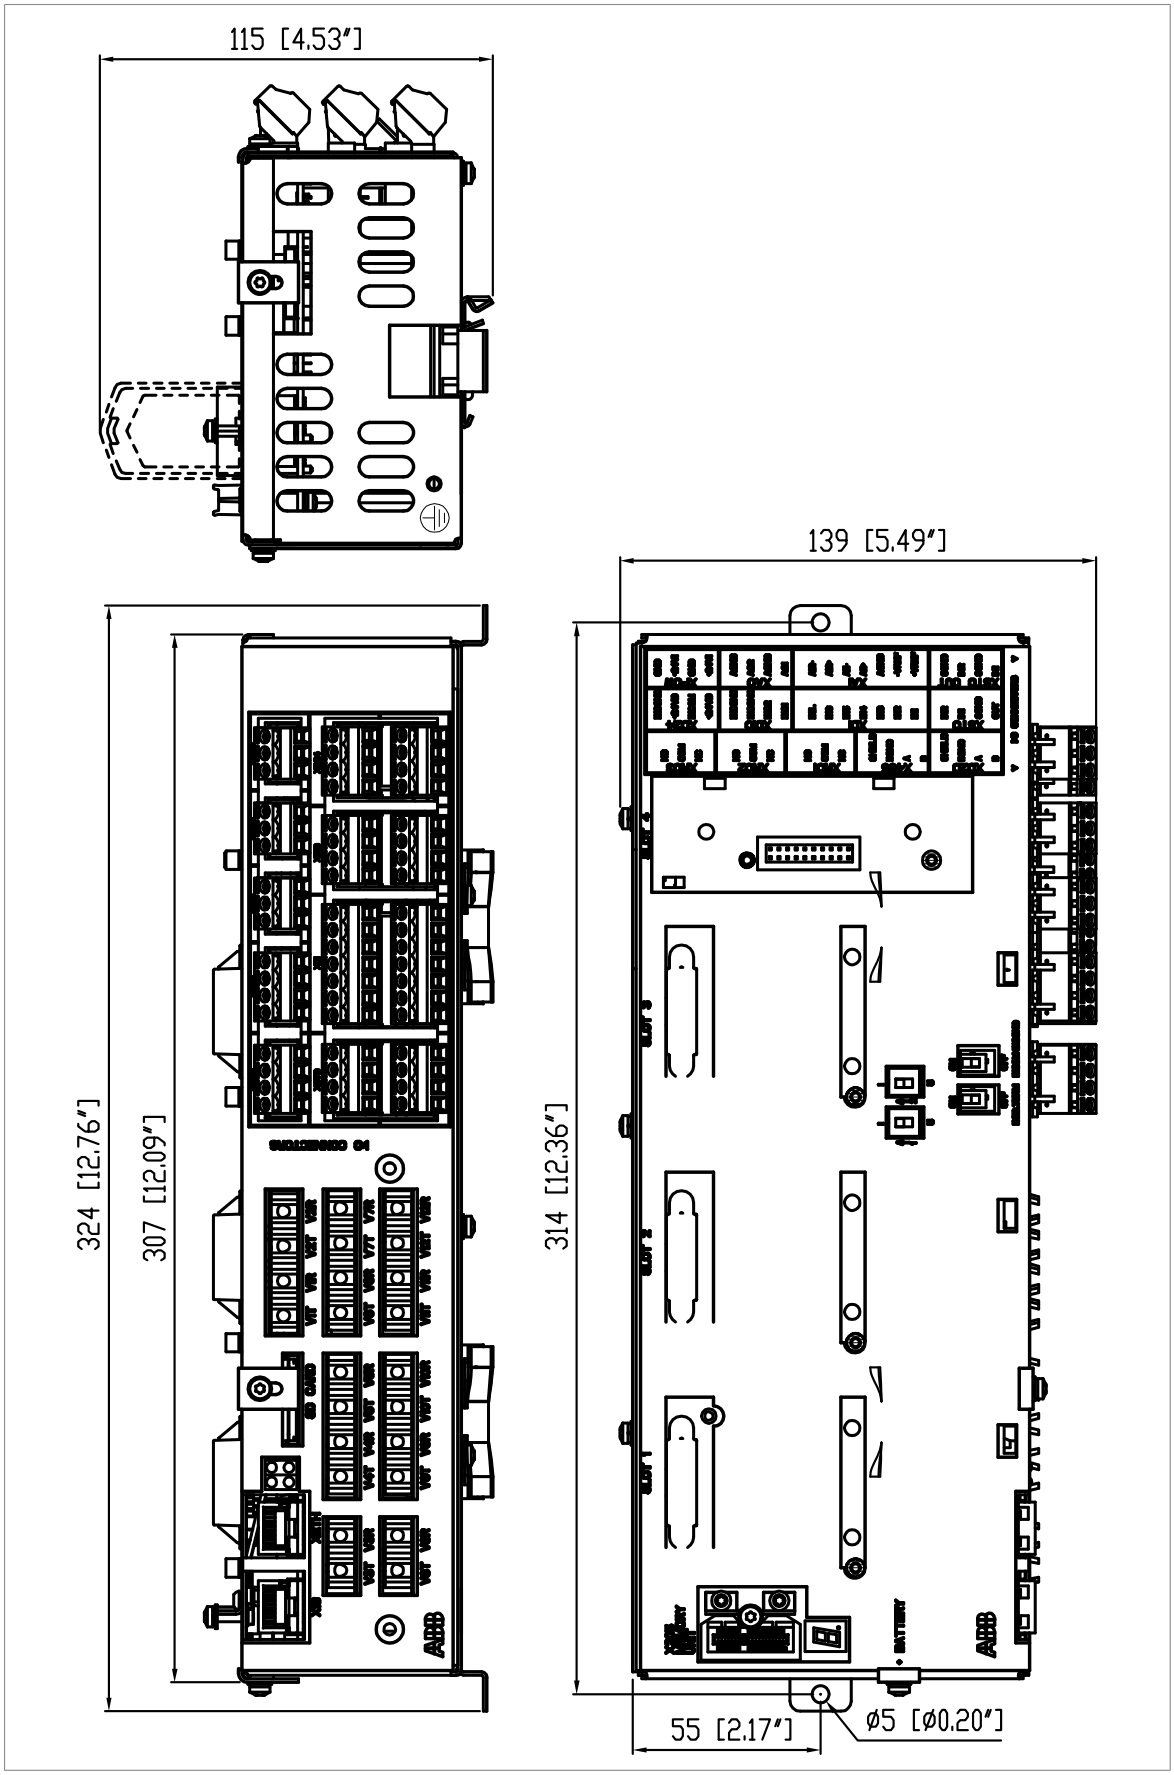

DPMP-01 door mounting kit

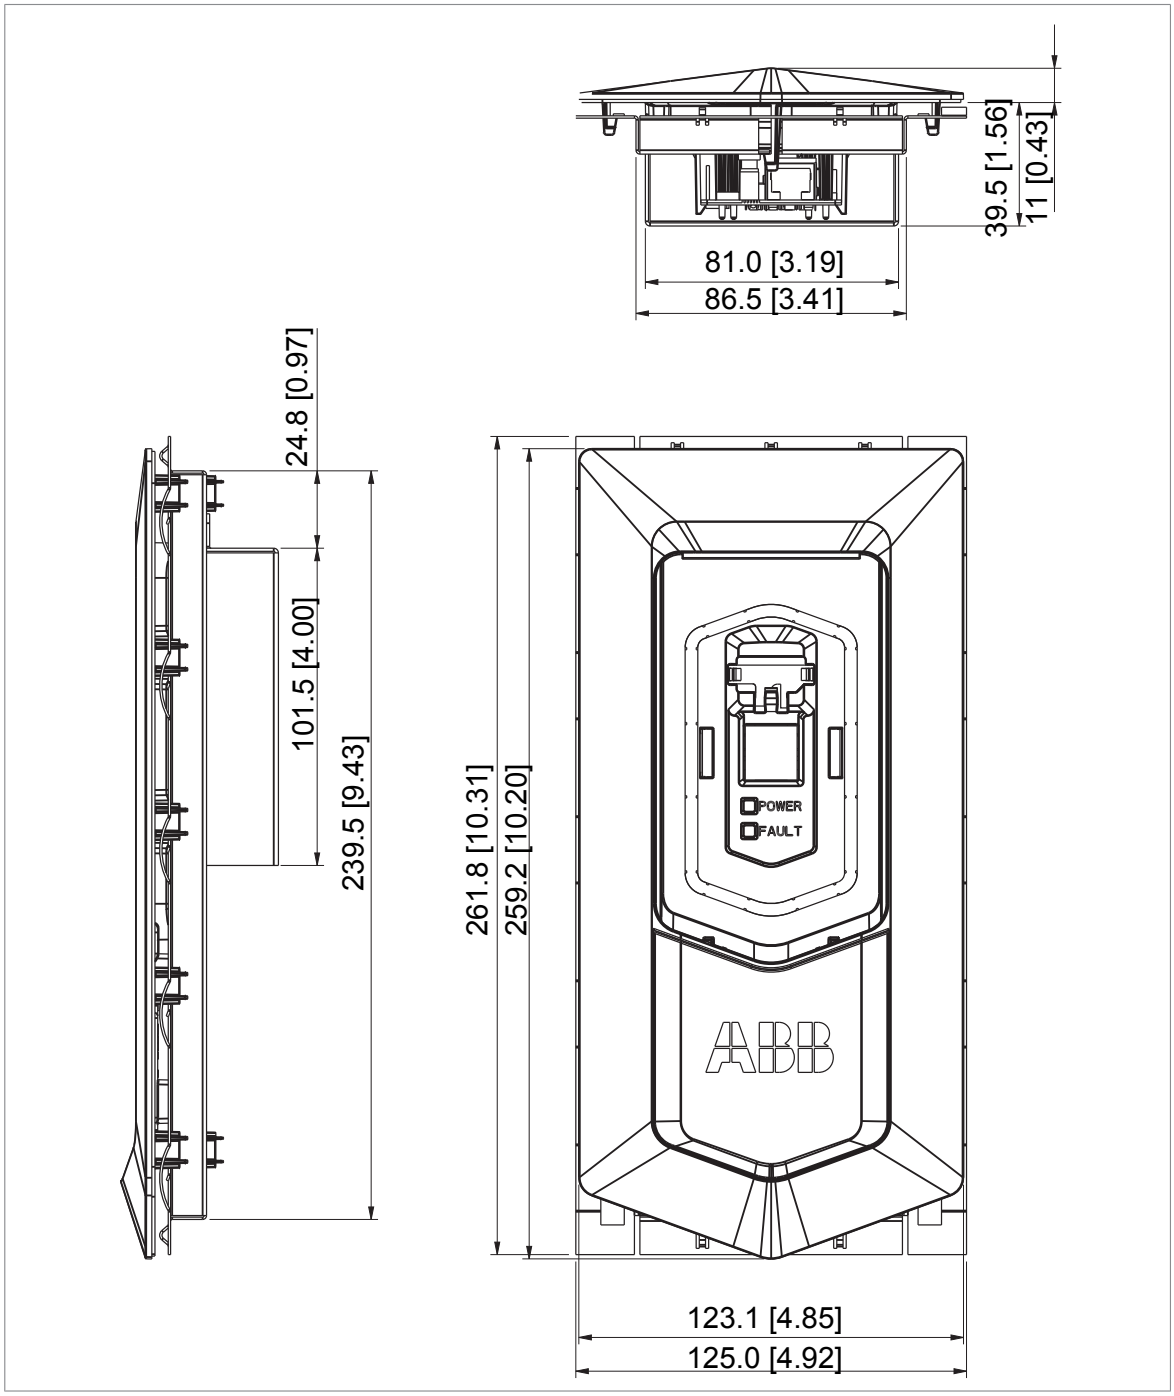


Cutting in the cabinet door: 109 mm × 223 mm (4.29 in. × 8.78 in.)


Plate thickness: 1.5 … 2.5 mm (0.06 … 0.10 in.)

DC fuses and fuse bases

Fuse, 14 × 51 mm

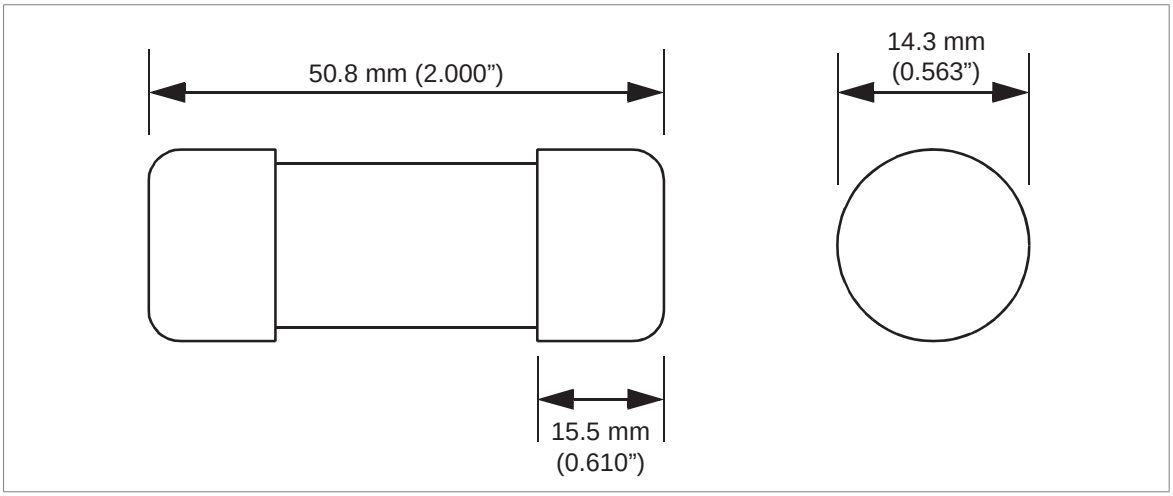


Mersen US141 (Z331153F) fuse disconnector (for 14 × 51 mm fuses)

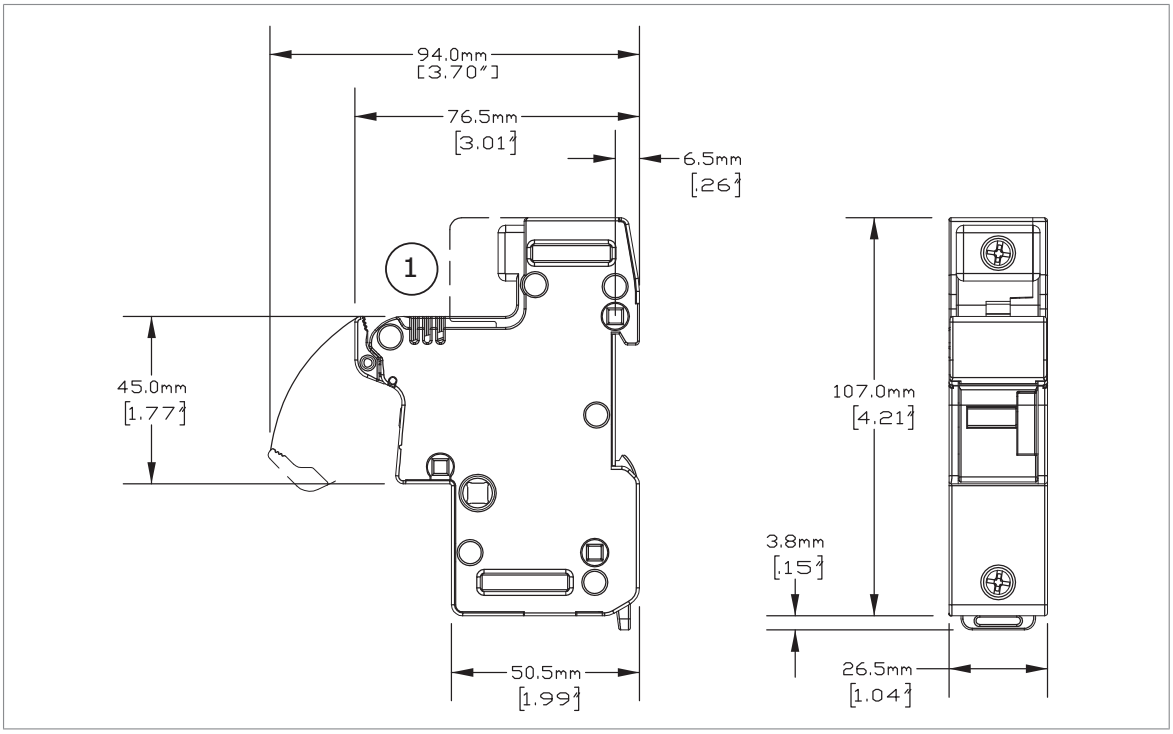


1. **Note:** On microswitch versions only

Fuse, 27 × 60 mm

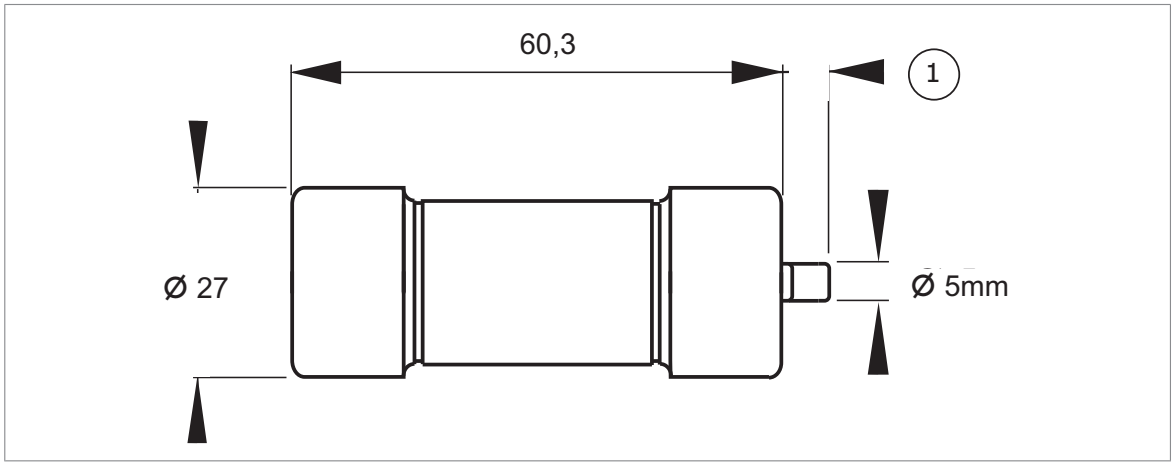


1. 7 mm indicator travel

Mersen US271MI (R227600C) fuse disconnector (for 27 × 60 mm fuses)

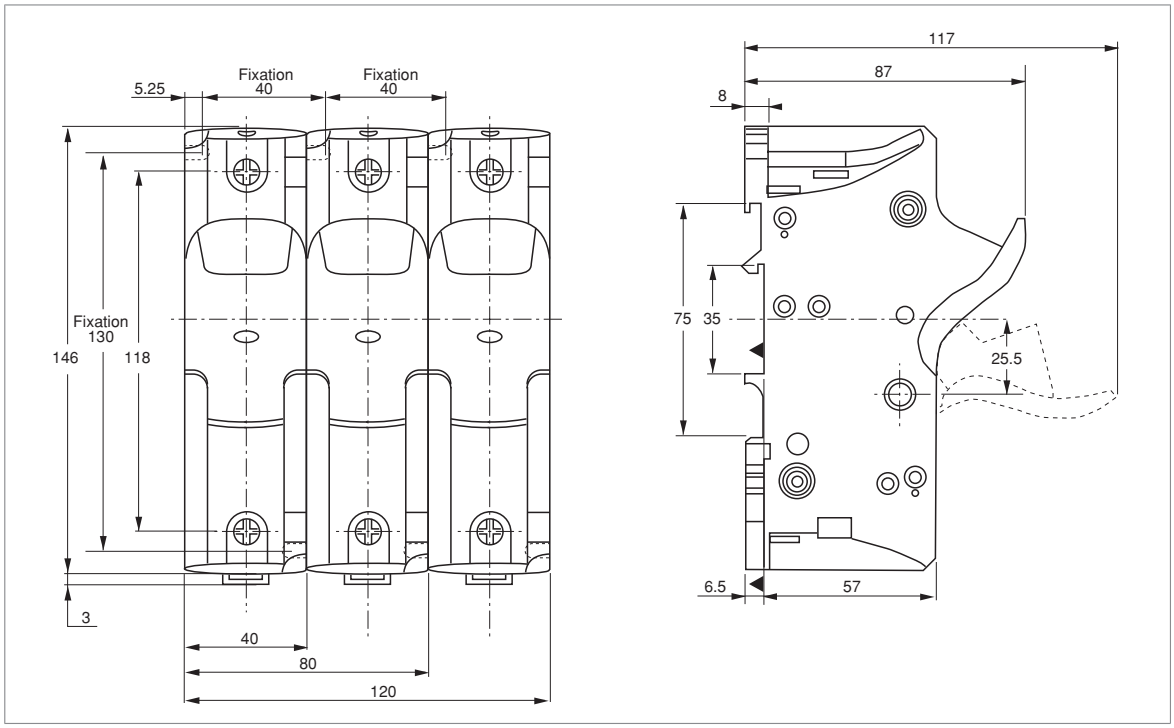


Mersen PS272PREMCPS (N220076) fuse disconnector (for R5i, 27 × 60 mm fuses)

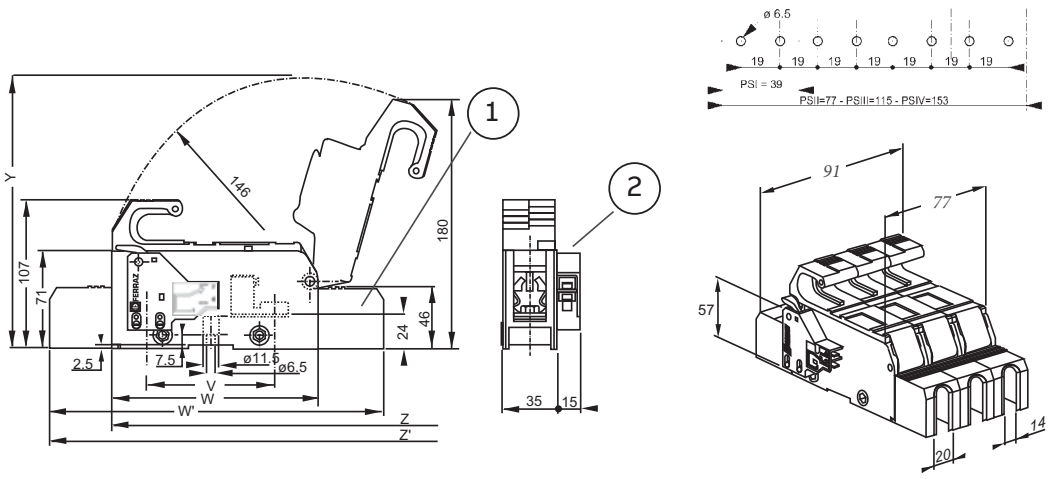

1	Twin terminal covers PS 27 Part #: A 220087 Weight: 30 g Packaging: 3 twins
2	MC PS
V	93 Connecting distance between centers
W	150 Without terminals cover length
W’	240 With terminals cover length
Y	196 Space factor with a 90° fuse carrier position
Z	284 Without terminal cover, space factor with a 180° fuse carrier position
Z’	279 With terminal cover, space factor with a 180° fuse carrier position

DC fuse blocks (Bussmann)

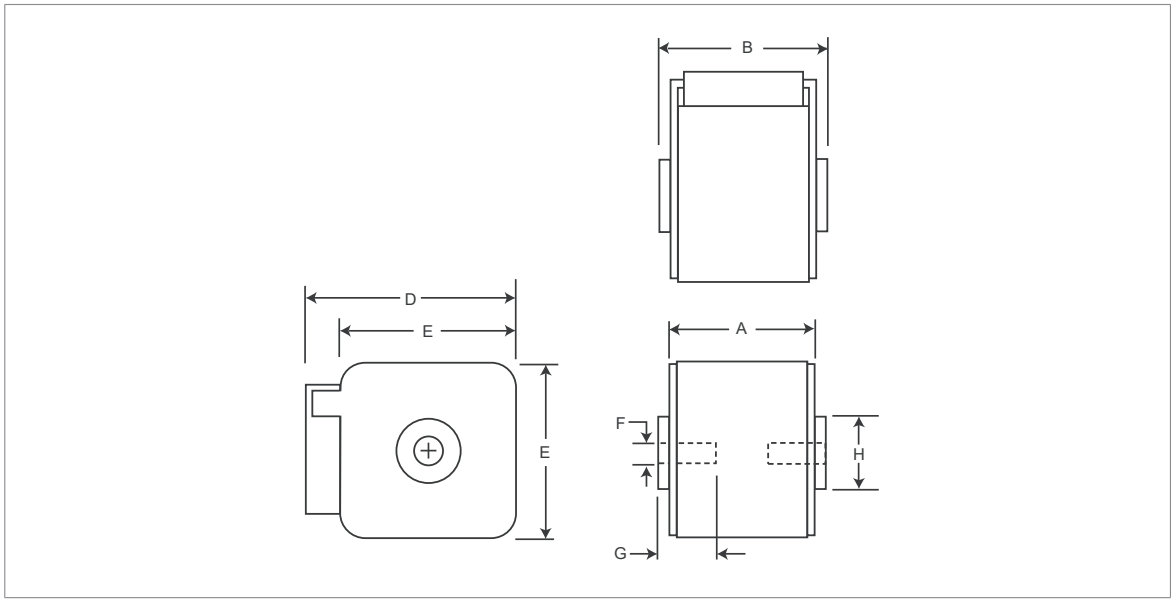


690 V fuses (as used with 400 and 500 V units)							
Size	**A** mm (inch)	**B** mm (inch)	**D** mm (inch)	**E** mm (inch)	**F**	**G** mm (inch)	**H** mm (inch)
1	50 (1.97)	51 (2.01)	69 (2.72)	53 (2.09)	M8	8 (0.31)	20 (0.79)
3	51 (2.01)	53 (2.09)	92 (3.62)	76 (2.99)	M12	10 (0.39)	30 (1.18)
3*	51 (2.01)	65 (2.56)	92 (3.62)	76 (2.99)	M12	10 (0.39)	30 (1.18)

1000…1250 V fuses (as used with 690 V units)							
Size	**A** mm (inch)	**B** mm (inch)	**D** mm (inch)	**E** mm (inch)	**F**	**G** mm (inch)	**H** mm (inch)
1*	74 (2.91)	75 (2.95)	59 (2.32)	45 (1.77)	M8	5 (0.20)	17 (0.67)
1	74 (2.91)	75 (2.95)	69 (2.72)	53 (2.09)	M8	8 (0.31)	20 (0.79)
3	81 (3.19)	83 (3.27)	92 (3.62)	76 (2.99)	M12	10 (0.39)	30 (1.18)

Switchgear and charging components


OS_ switch fuses

OS100GJ04FP

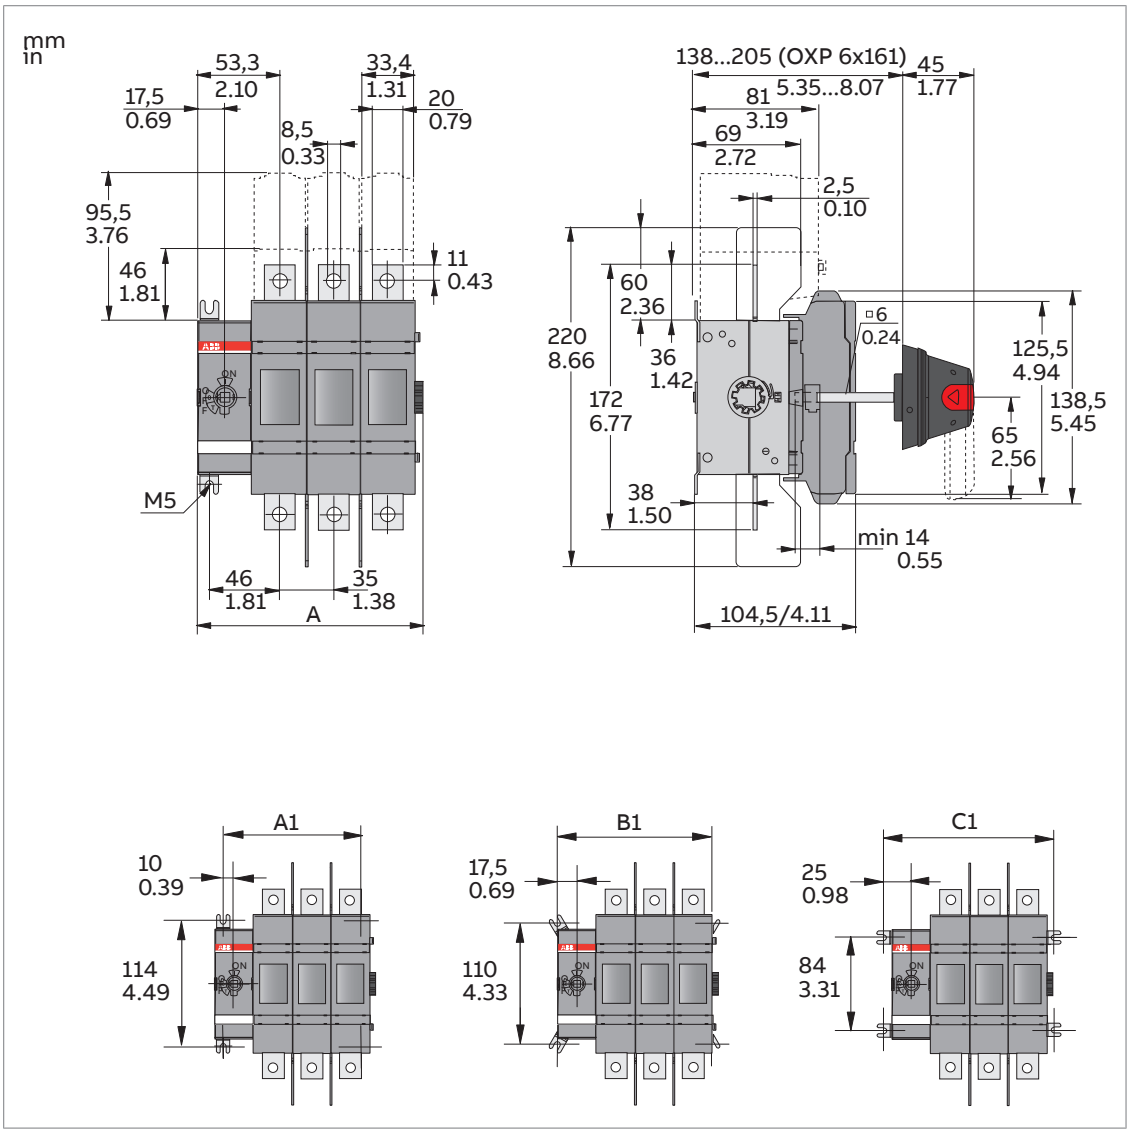


	mm (in)
A	181.5 (7.15)
A1	160 (6.30)
B1	175 (6.89)
C1	190 (7.48)

OS160GD04F

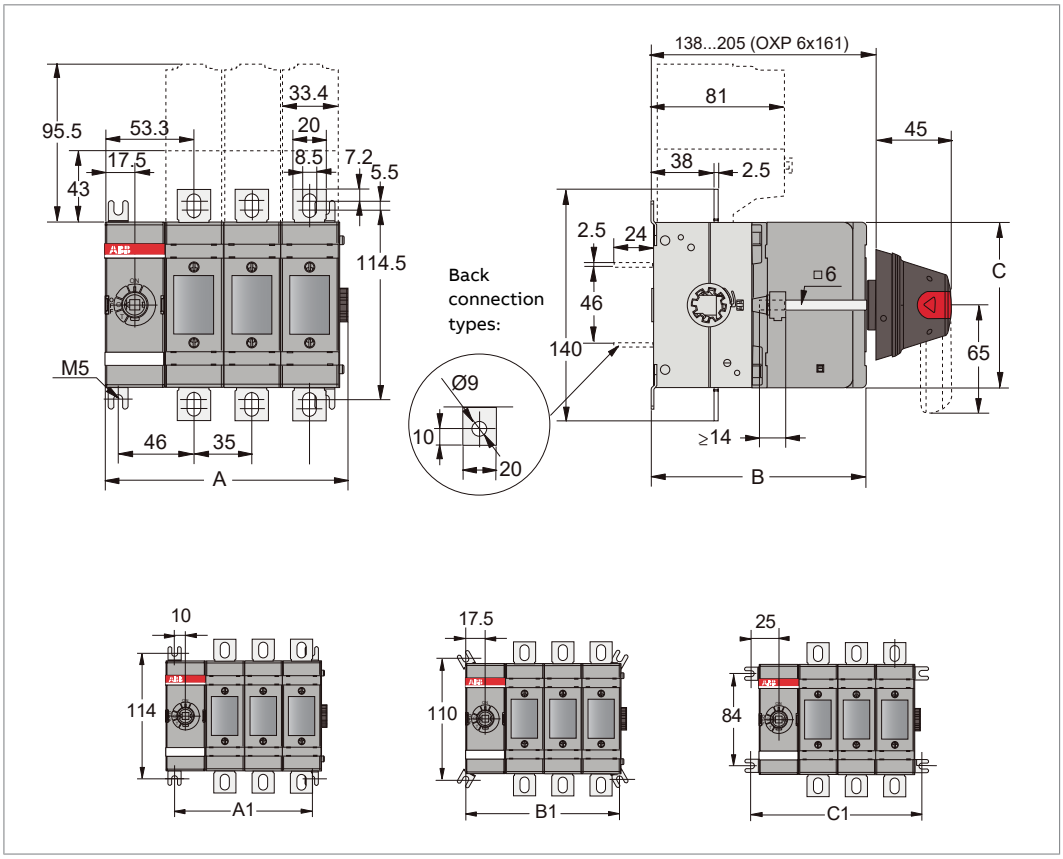

	mm (in)
A	181.5 (7.15)
B	130 (5.12)
C	100 (3.94)
A1	160 (6.30)
B1	175 (6.89)
C1	190 (7.48)


OS200DZ22F

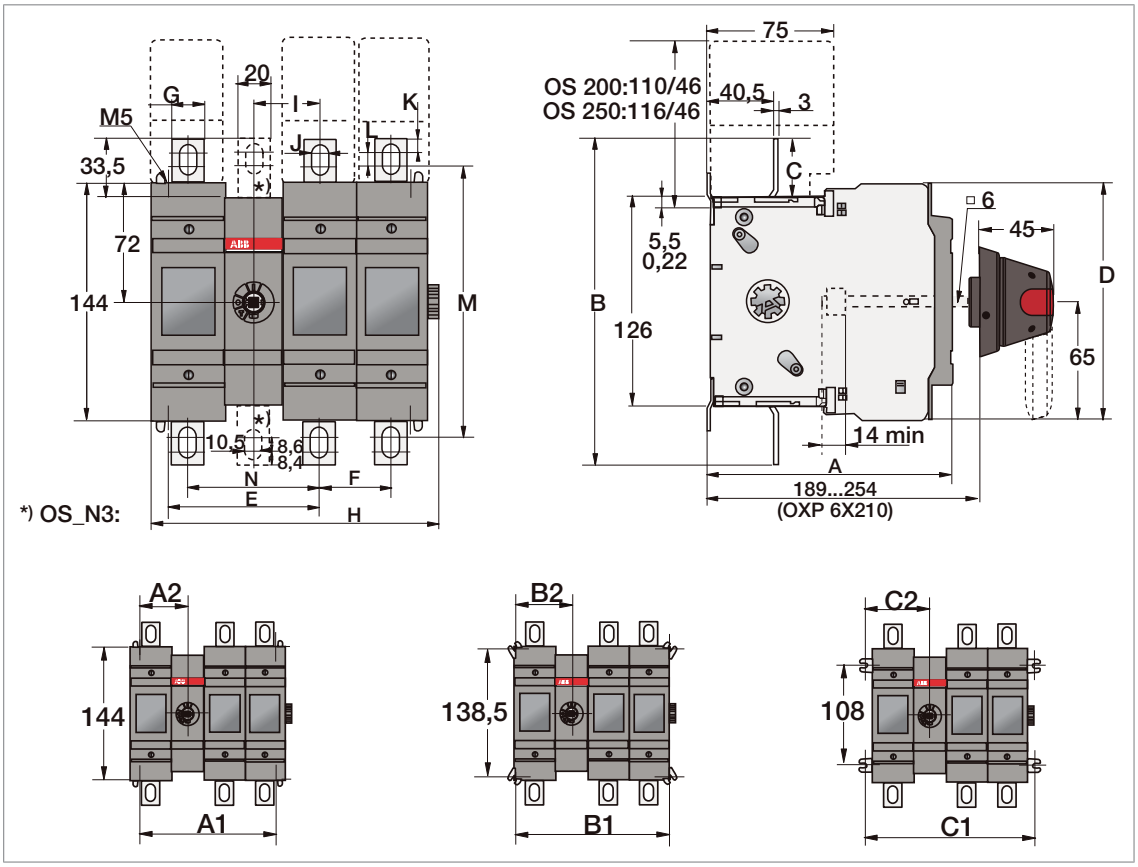

OS200			
D22	**mm (in)**	**D22**	**mm (in)**
A	149 (5.87)	K	8.4 (0.33)
B	199 (7.83)	L	8.6 (0.34)
C	36.5 (1.44)	M	165 (6.50)
D	144.5 (5.69)	N	80 (3.15)
E	135.5 (5.33)	A1	191 (7.52)
F	43.5 (1.71)	A2	95.5 (3.76)
G	20 (0.79)	B1	210 (8.27)
H	219 (8.62)	B2	105 (4.13)
I	40 8 (1.57)	C1	227 (8.94)
J	10 (0.39)	C2	113.5 (4.47)


OT_ switch/disconnectors

OT200E11

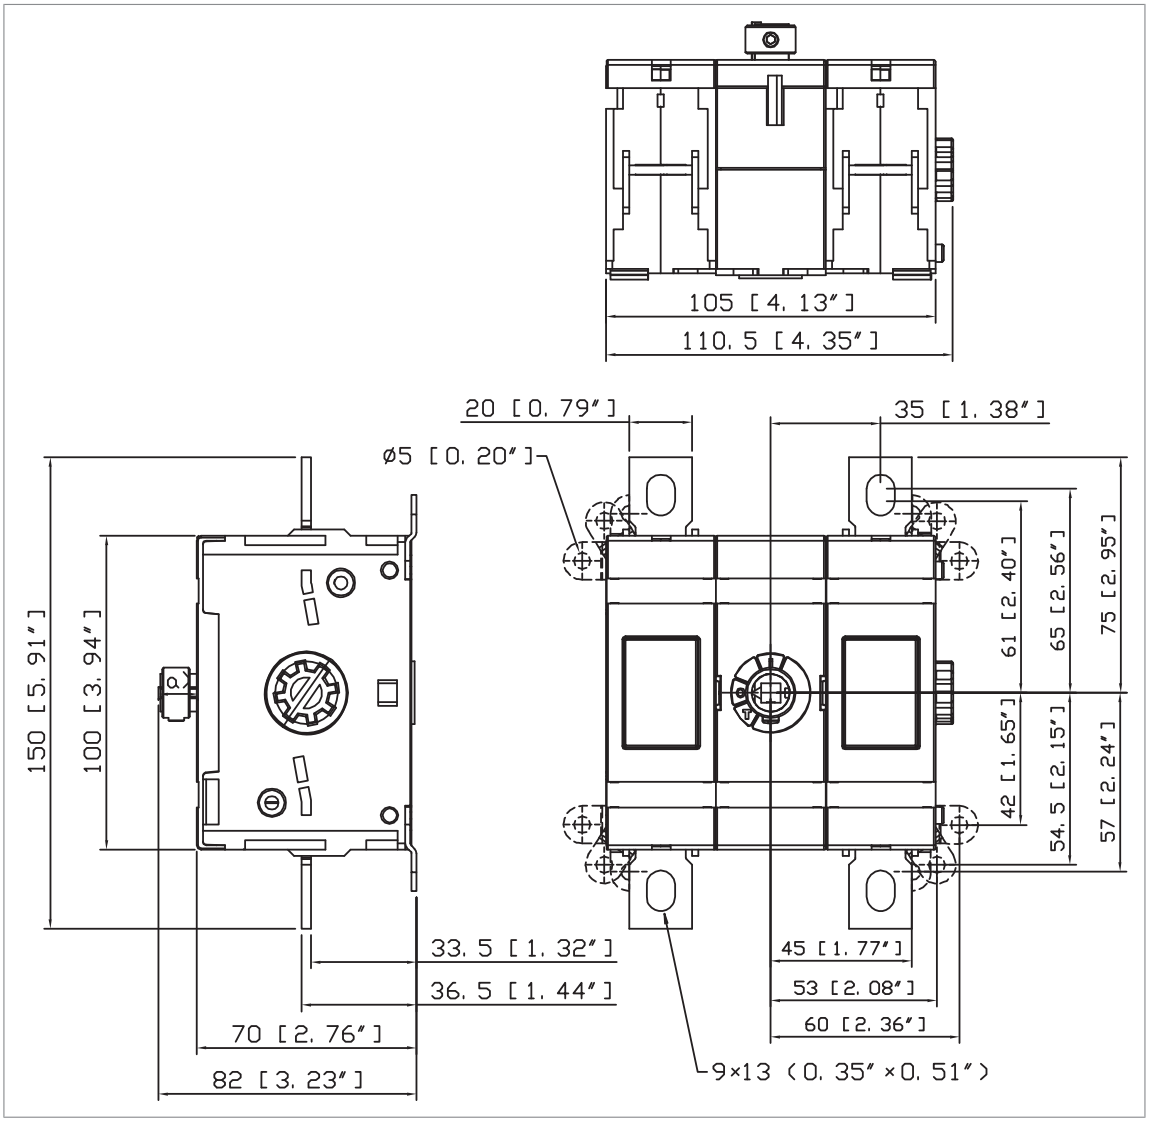


a) The shaft must extend into switch at least 14 mm (0.55″).

OT200U11

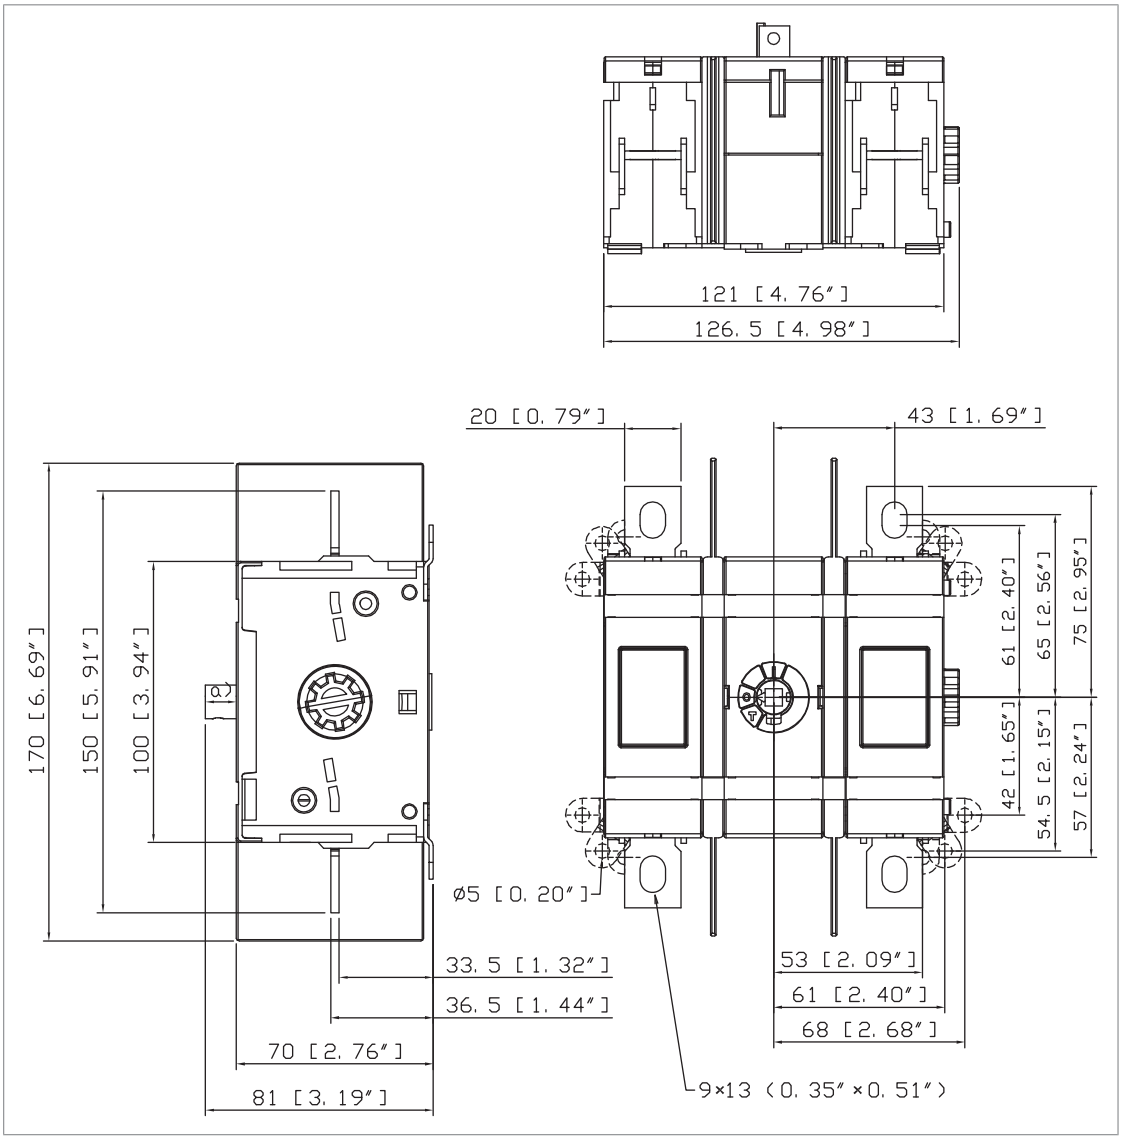


a) The shaft must extend into switch at least 14 mm (0.55″).

OT400E11

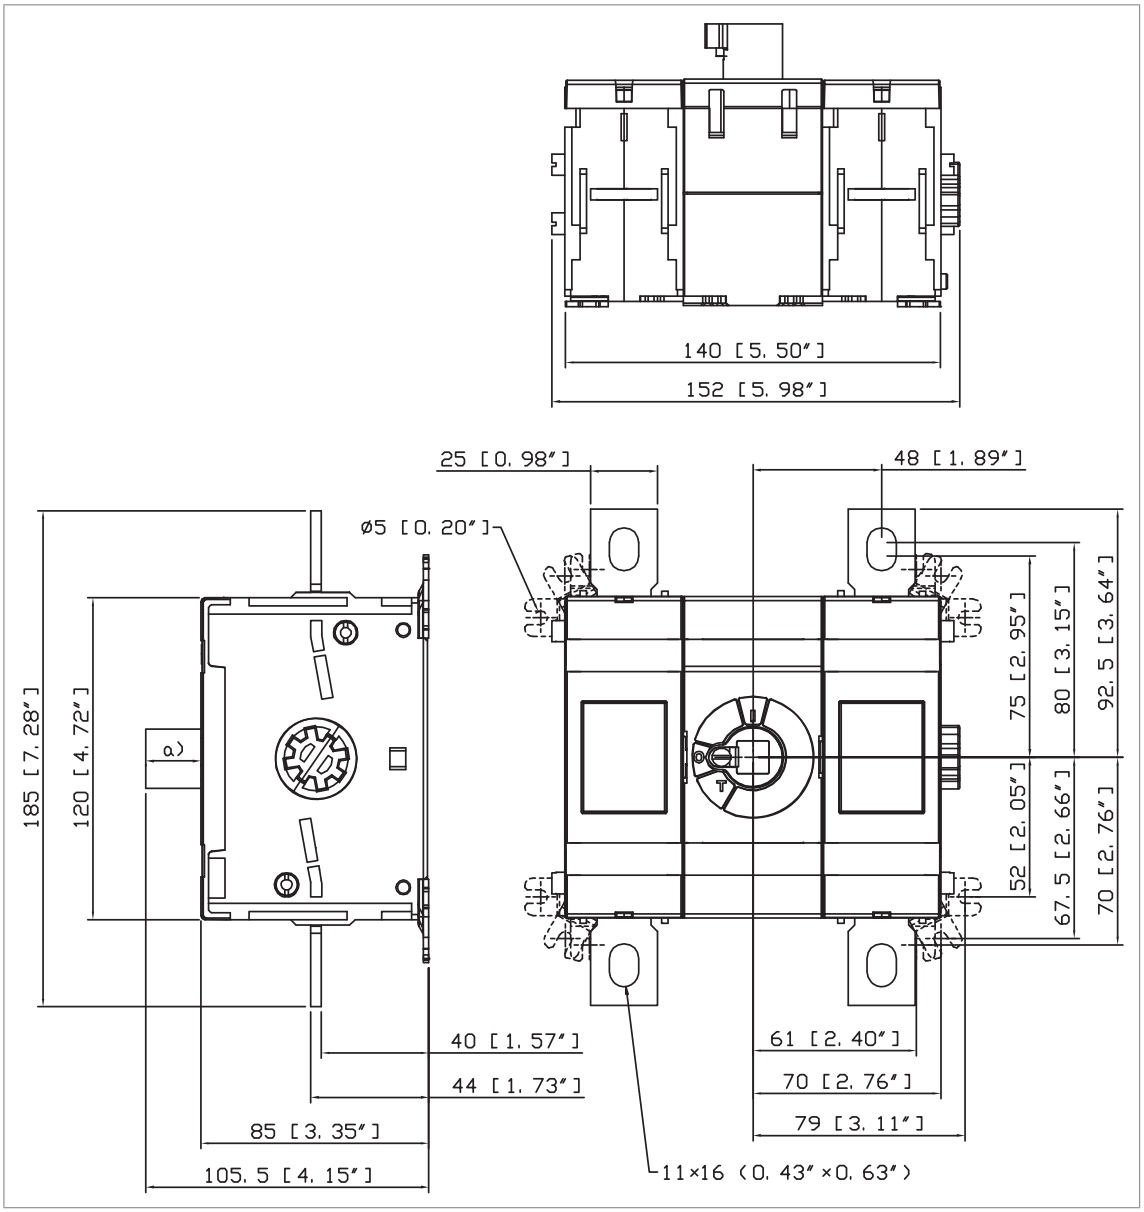


a) The shaft must extend into the switch at least 20 mm (0.79″).

OT400E22

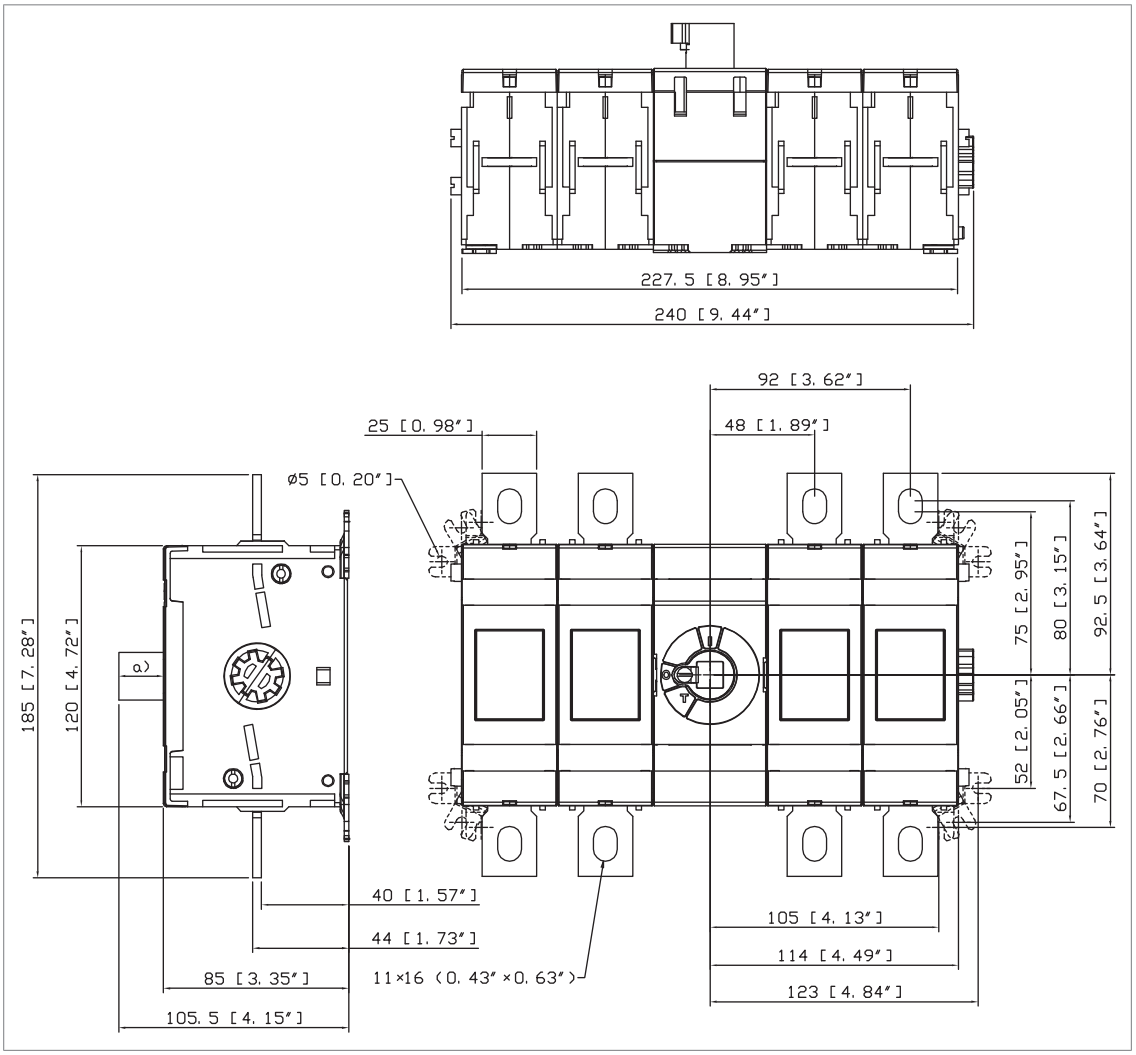


a) The shaft must extend into the switch at least 20 mm (0.79”).

OT400U11

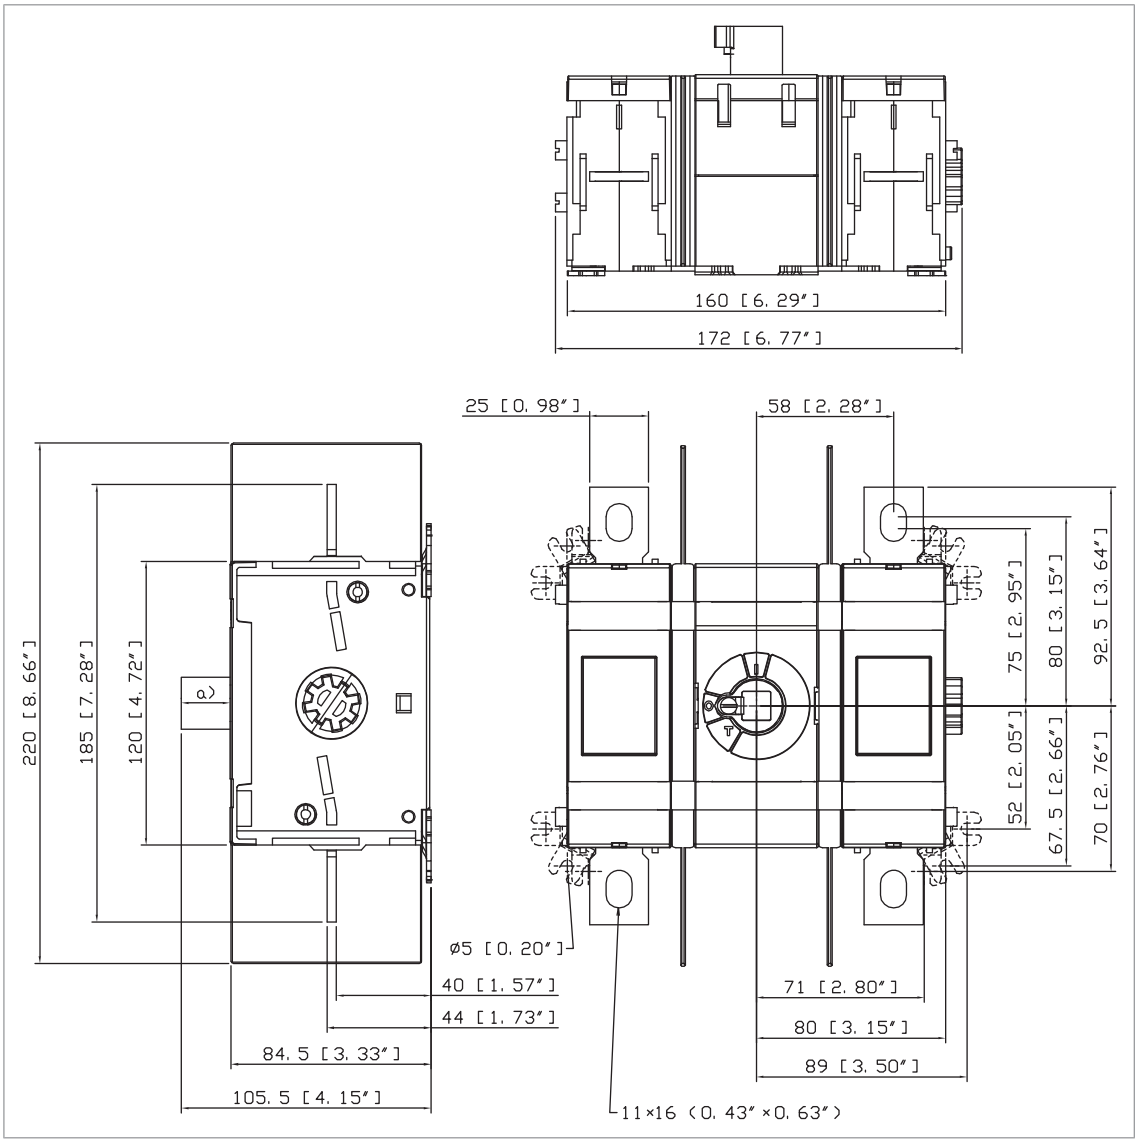


a) The shaft must extend into the switch at least 20 mm (0.79″).

OT400U22

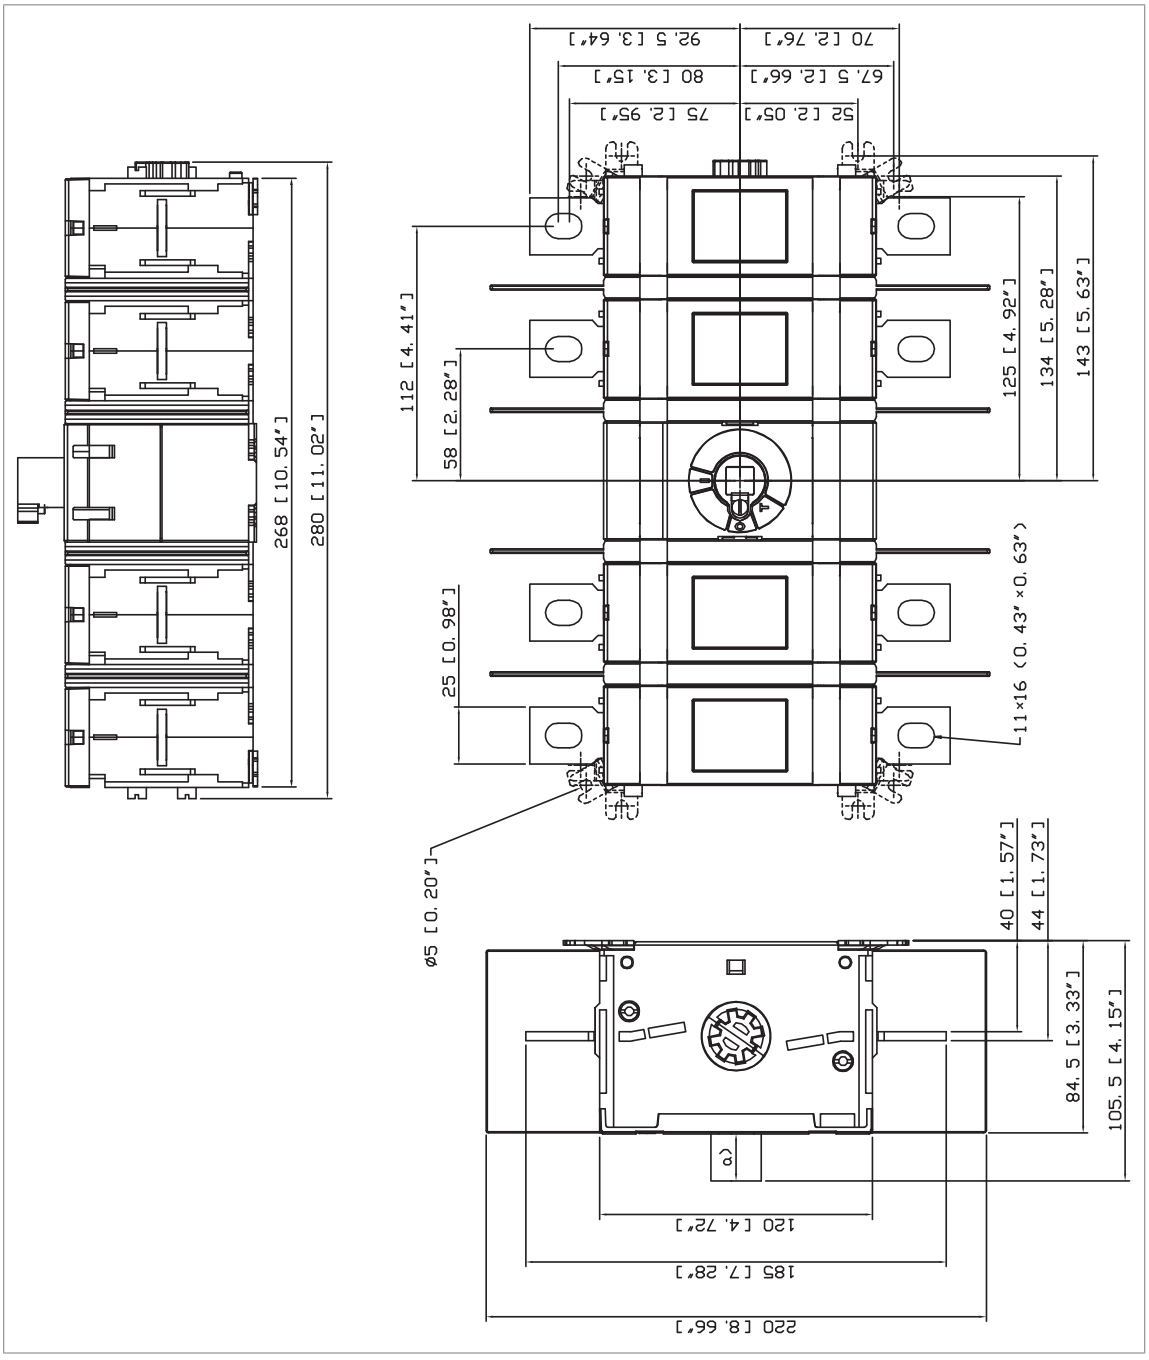


a) The shaft must extend into the switch at least 20 mm (0.79").

OT600U11, OT630E11

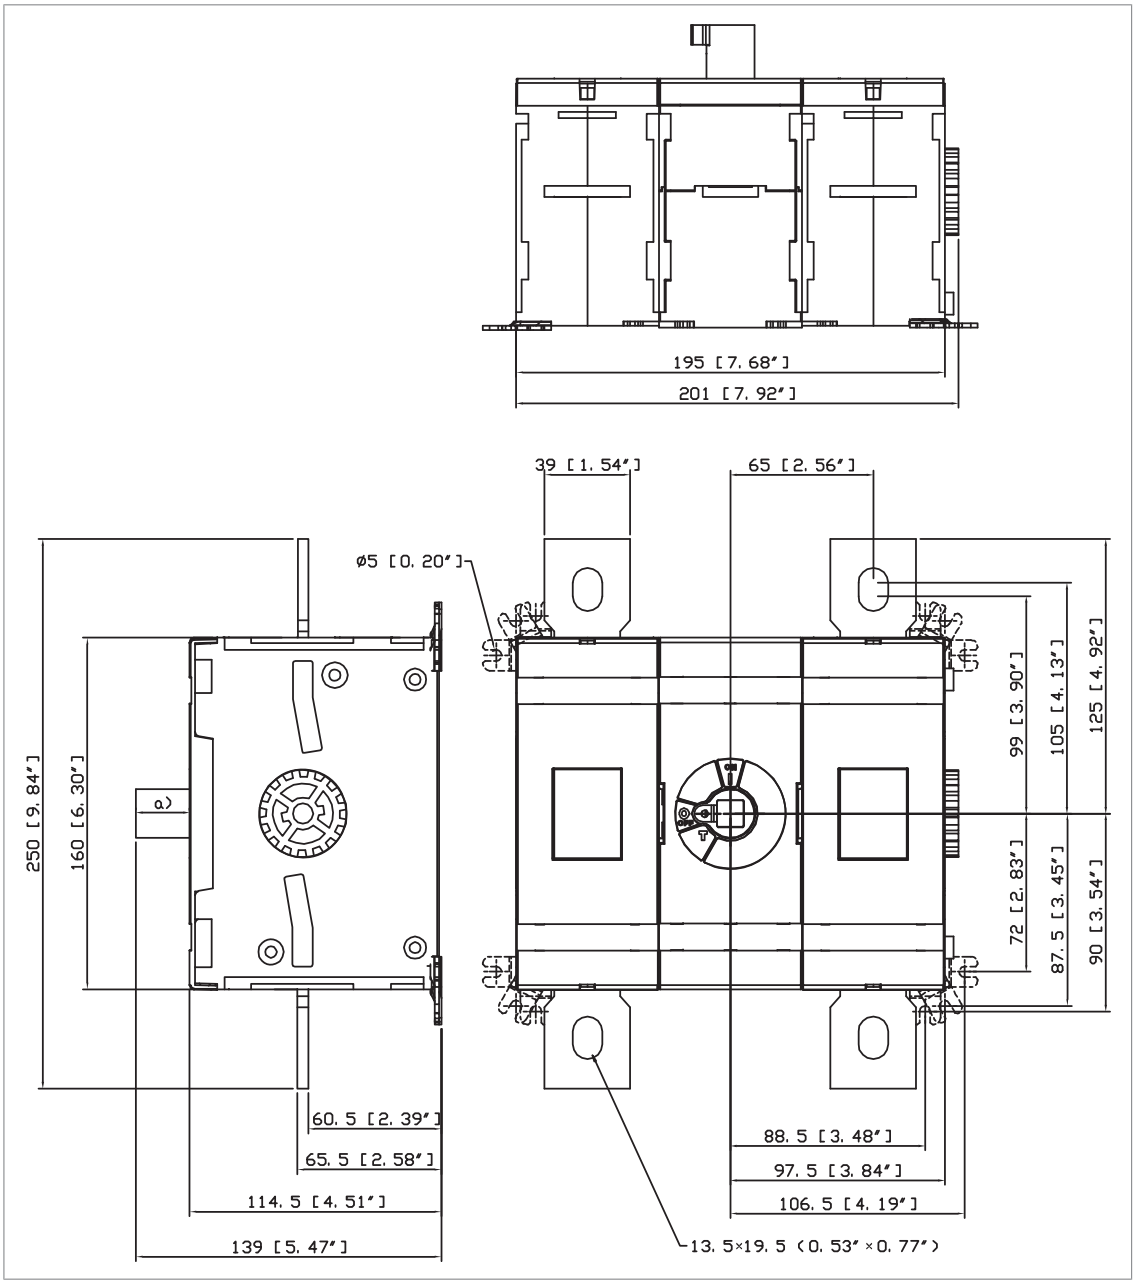


a) The shaft must extend into the switch at least 20 mm (0.79").

OT1200U__, OT1600E__

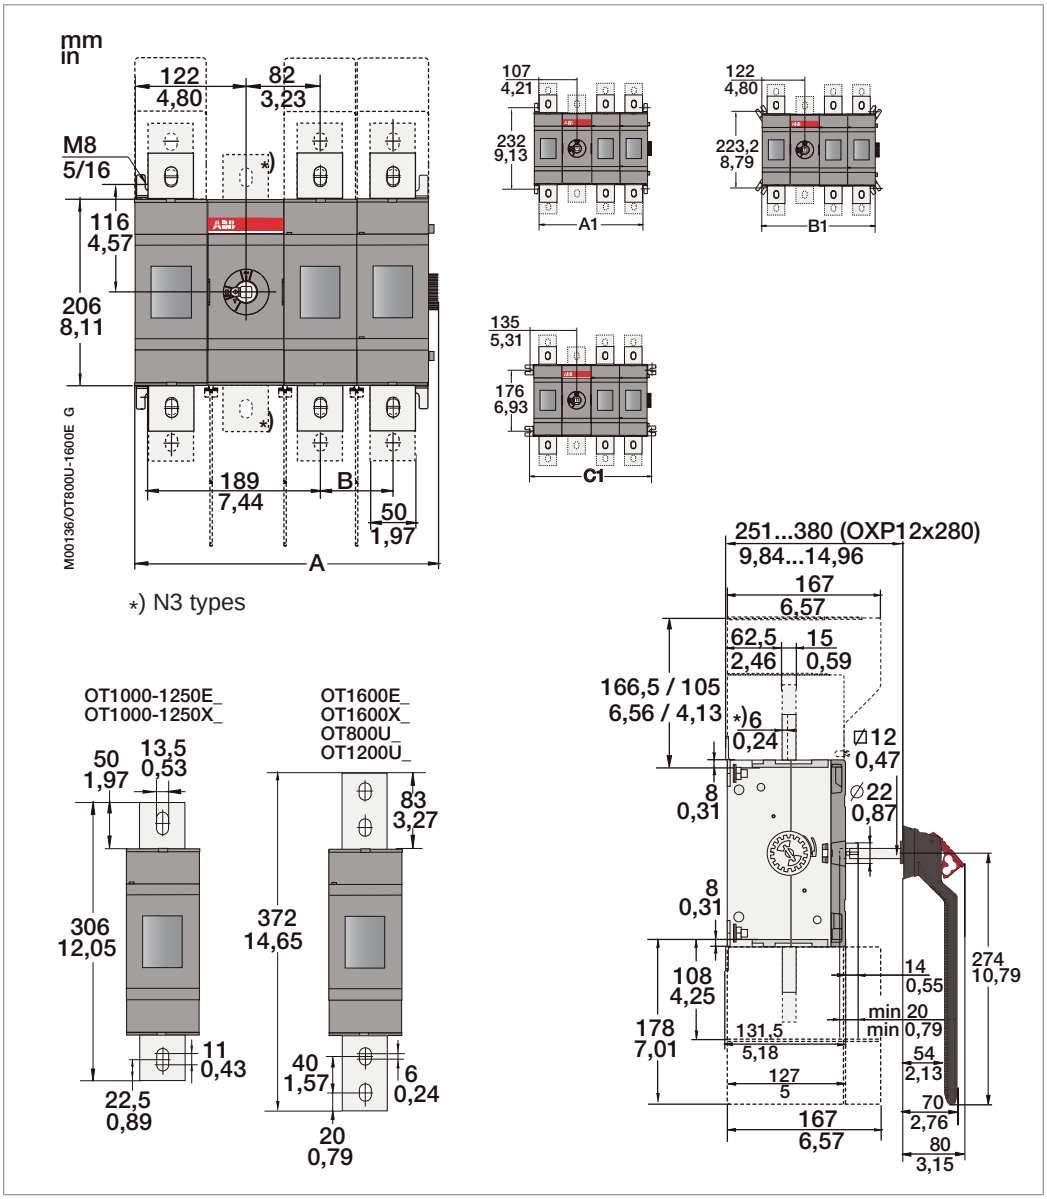

	_11 mm (in)	_22 mm (in)
A	254.50 (10.02)	414.50 (16.32)
B	-	80 (3.15)
A1	214 (8.43)	374 (14.72)
B1	244 (9.61)	404 (15.91)
C1	270 (10.63)	430 (16.93)

OT2500E22

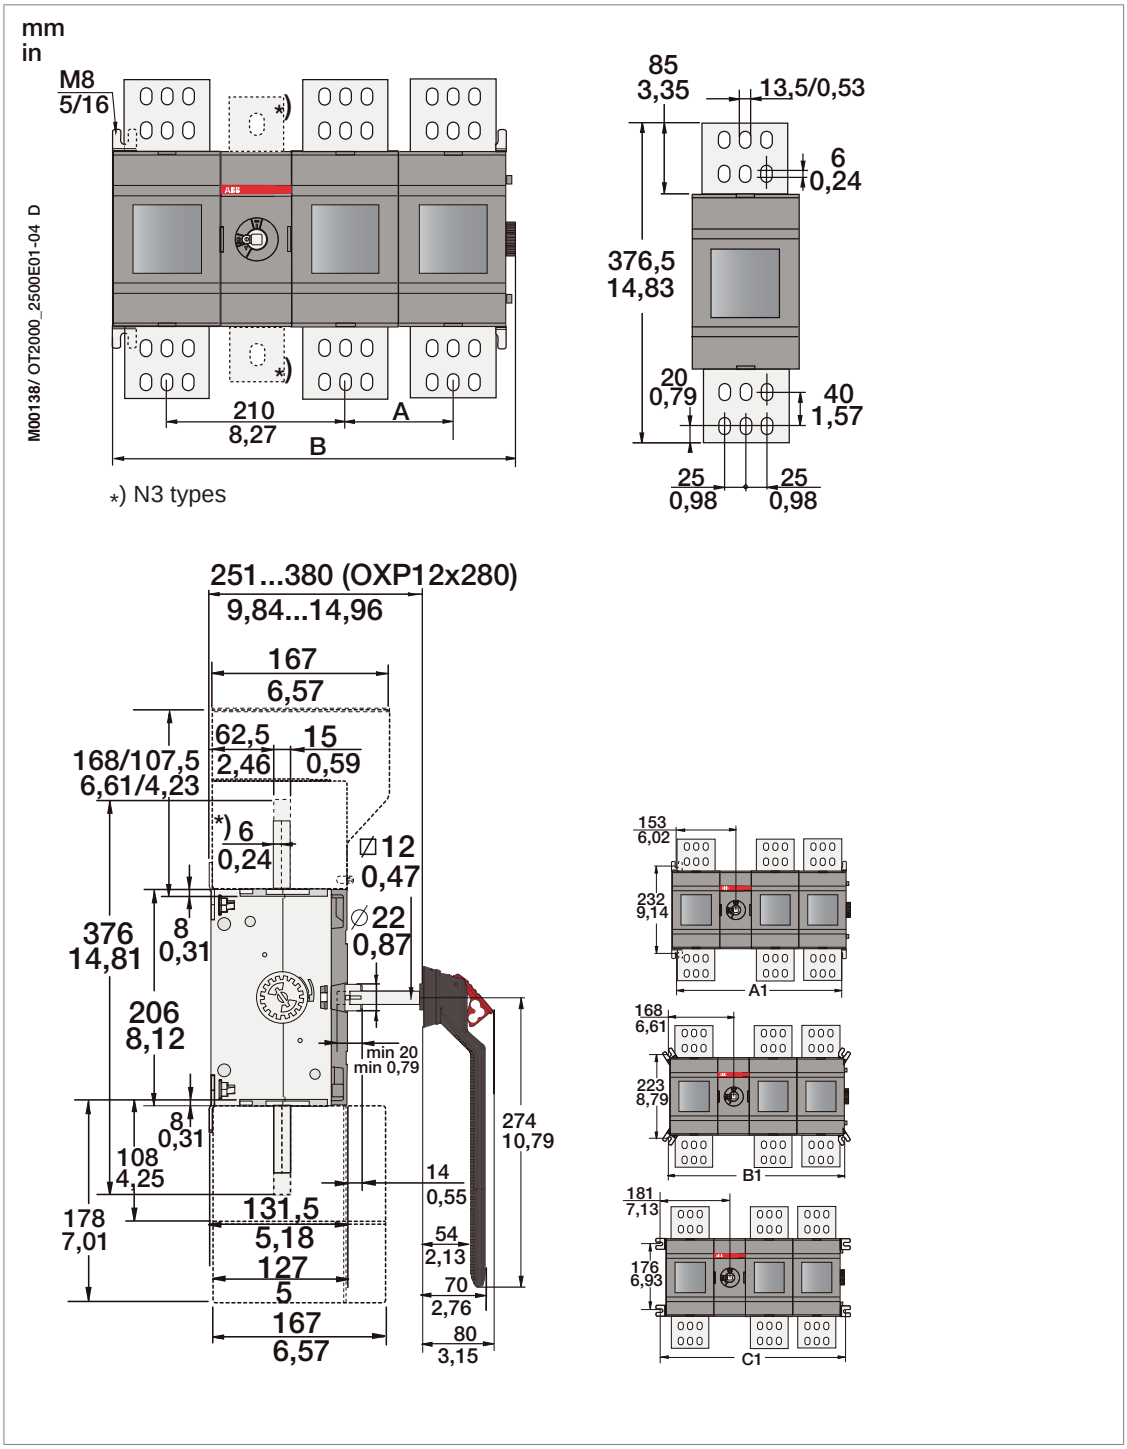


	mm (in)
A	126 (4.96)
B	598.5 (23.56)
A1	558 (21.97)
B1	588 (23.15)
C1	614 (24.17)

OHB_ switch handles


Note: The drawings are not to scale.

OHB65J6, OHB125J12, OHB145J12

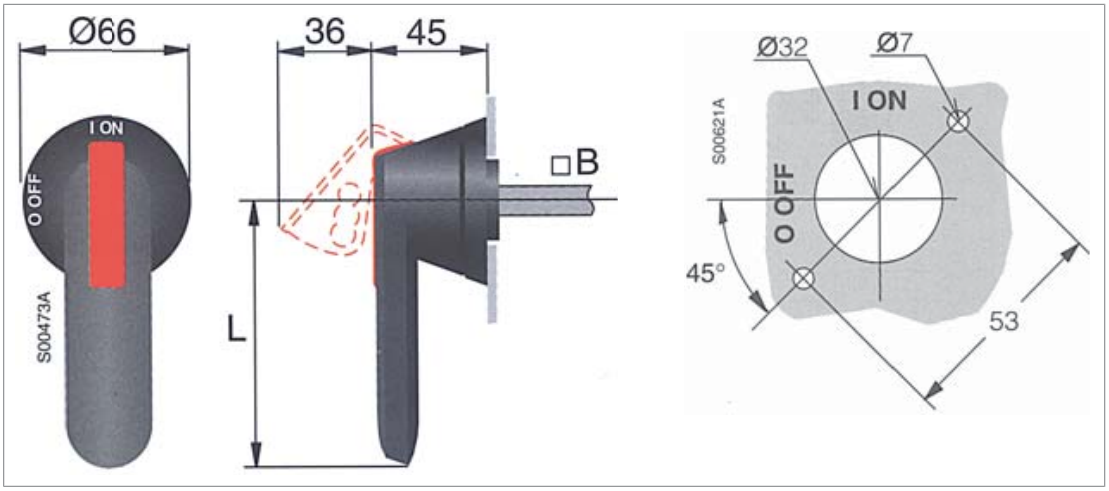


Handle type	L mm (in)	B mm (in)	Notes
OHB65J6	65 (2.56)	6 × 6 (0.24 × 0.24)	Used with OS_, OT200_
OHB125J12	125 (4.92)	12 × 12 (0.47 × 0.47)	Used with OT400_
OHB145J12	145 (5.71)	12 × 12 (0.47 × 0.47)	Used with OT600_ and OT630_

OHB150J12P

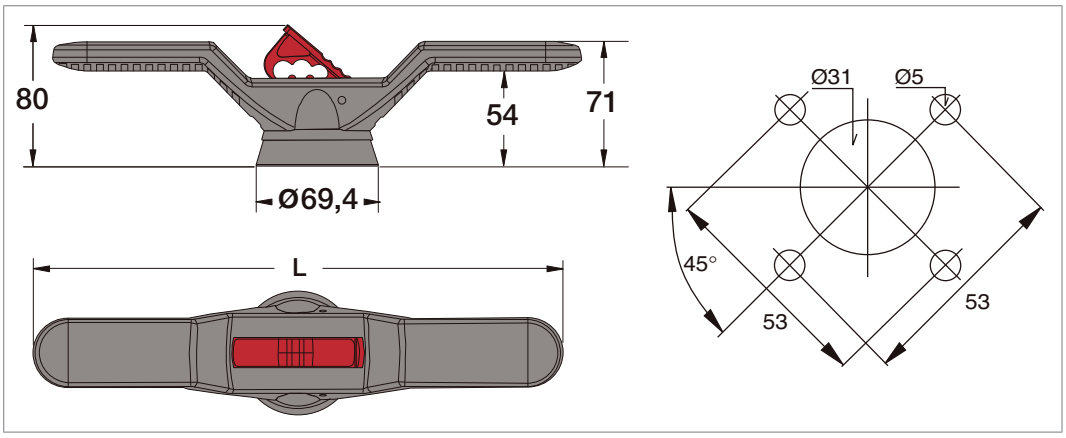

Handle type	L mm (in)	Shaft mm (in)	Notes
OHB150J12P	300 (11.81)	12 × 12 (0.47 × 0.47)	Used with OT1200U11 and OT1600E11


OHB274J12

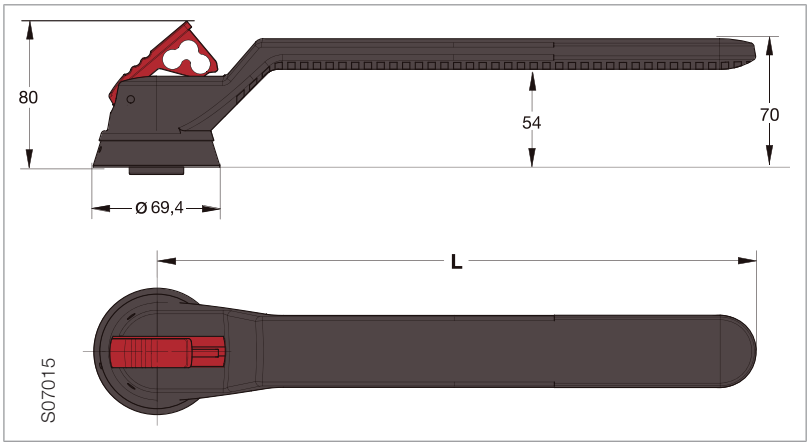

The drilling pattern is the same as OHB65/125/145.

Handle type	L mm (in)	Shaft mm (in)	Note
OHB274J12	274 (10.79)	12 × 12 (0.47 × 0.47)	Used with OT1200U22, OT1600E22 and OT2500E22

OA1G10/OA3G01 auxiliary contact blocks

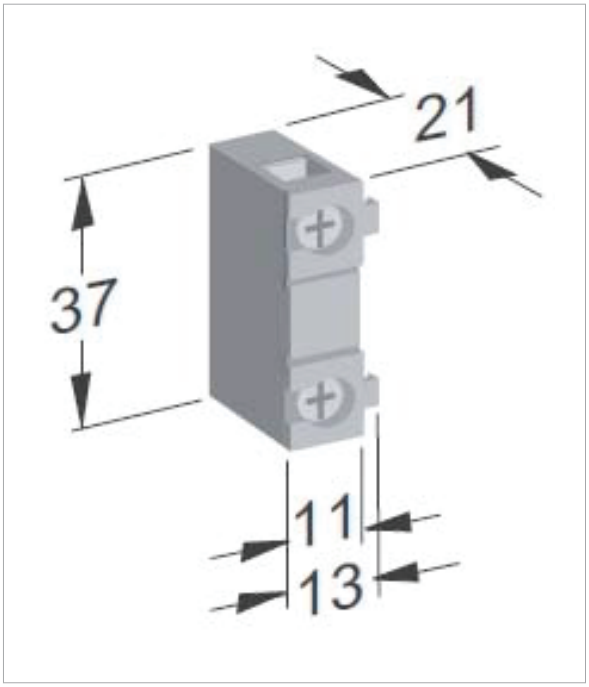


2×0.75…2.5 mm² (2×18…14 AWG)

0.8 N·m (7 lbf·in)


Pozidriv M3.5 Form 2

AF190-30-00-13 contactor

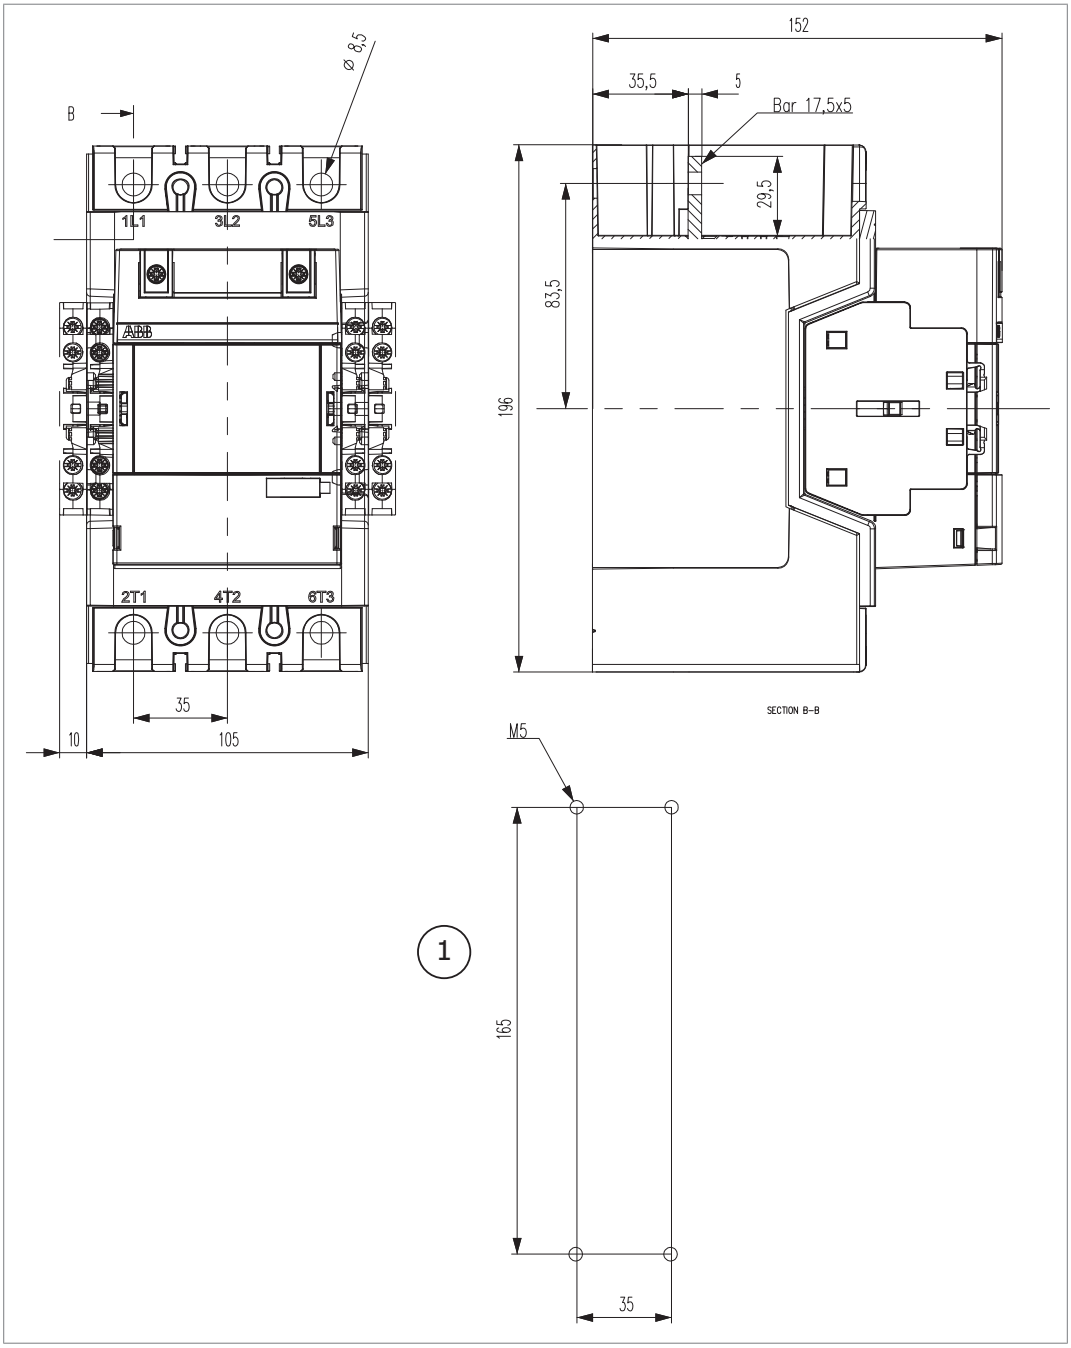


1. Drilling pattern


Charging controller

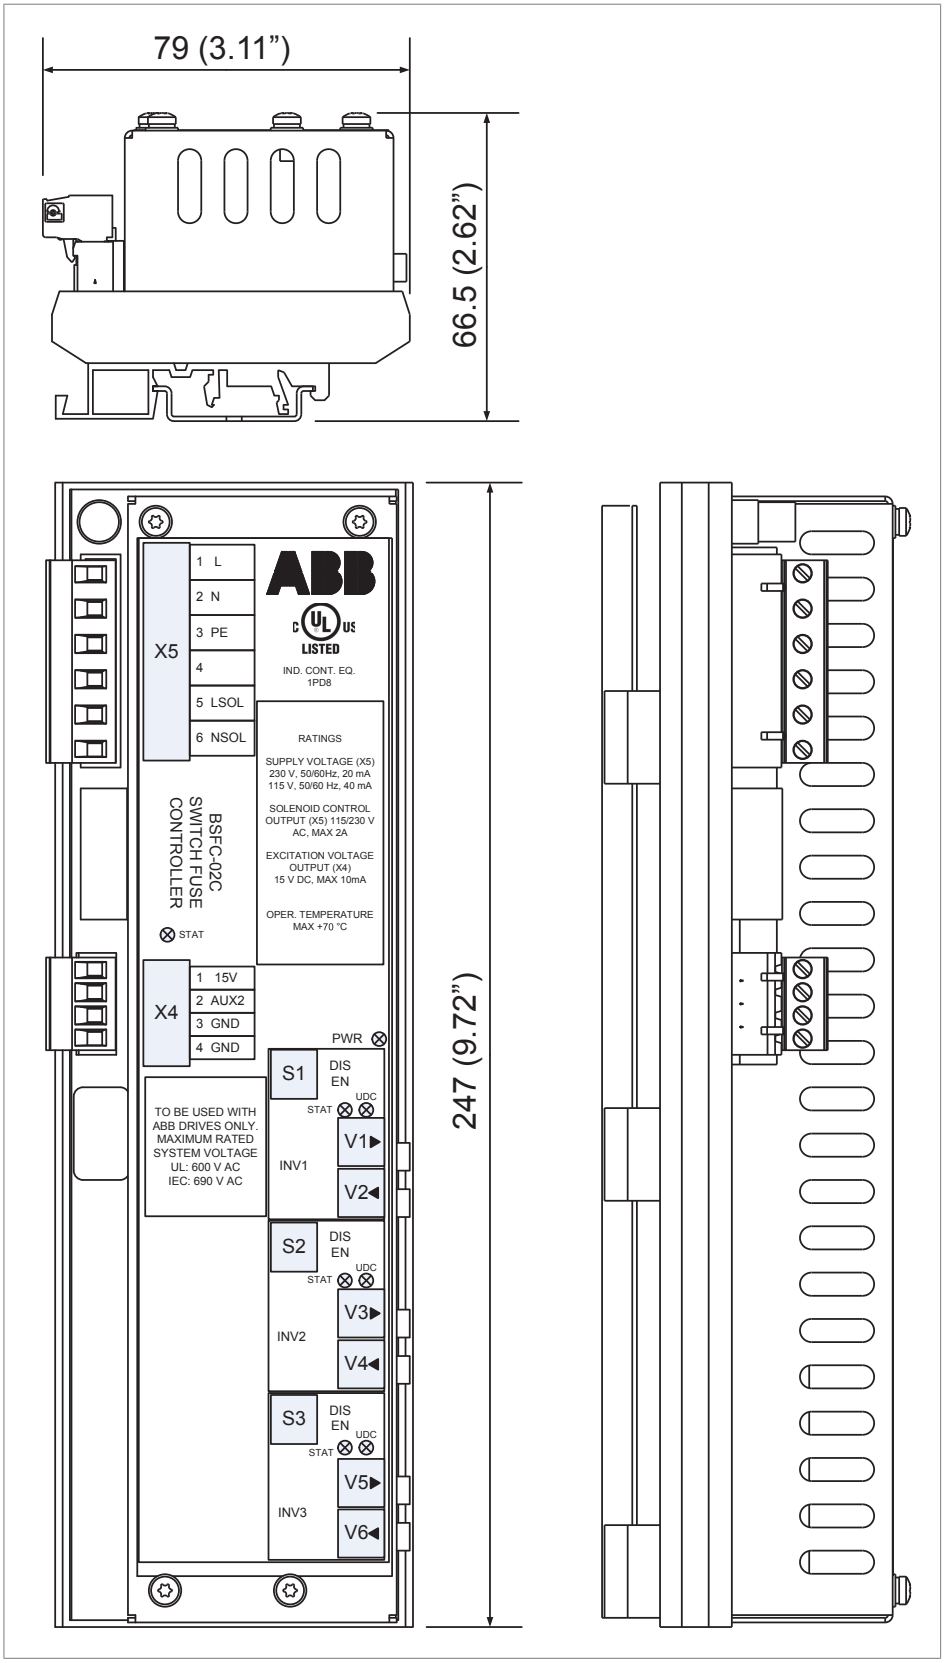

Charging resistor (frame R7i)

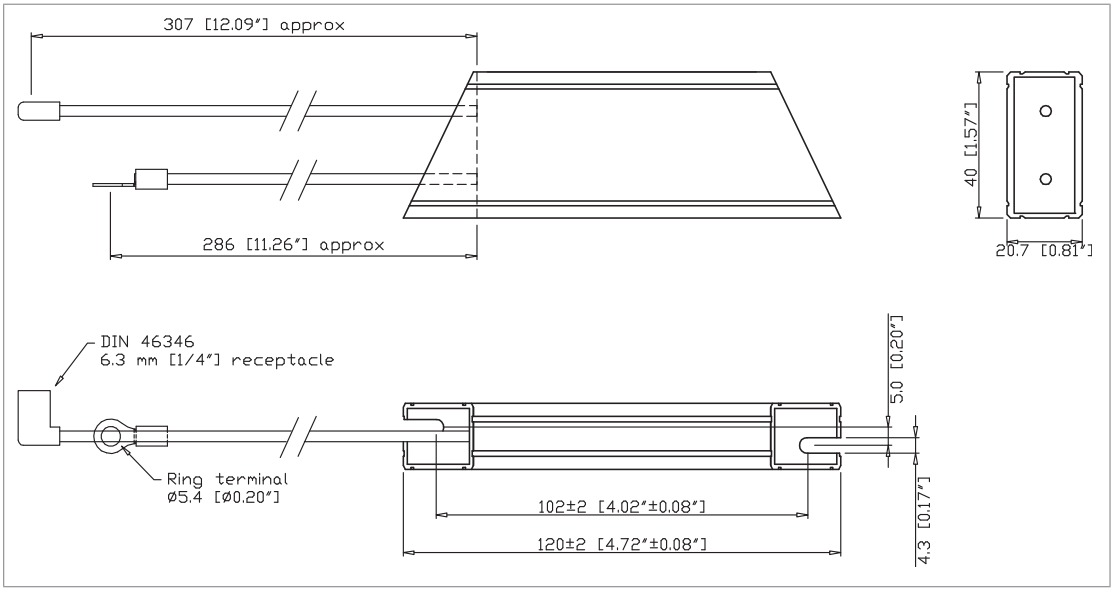


Charging resistor (frame R8i)

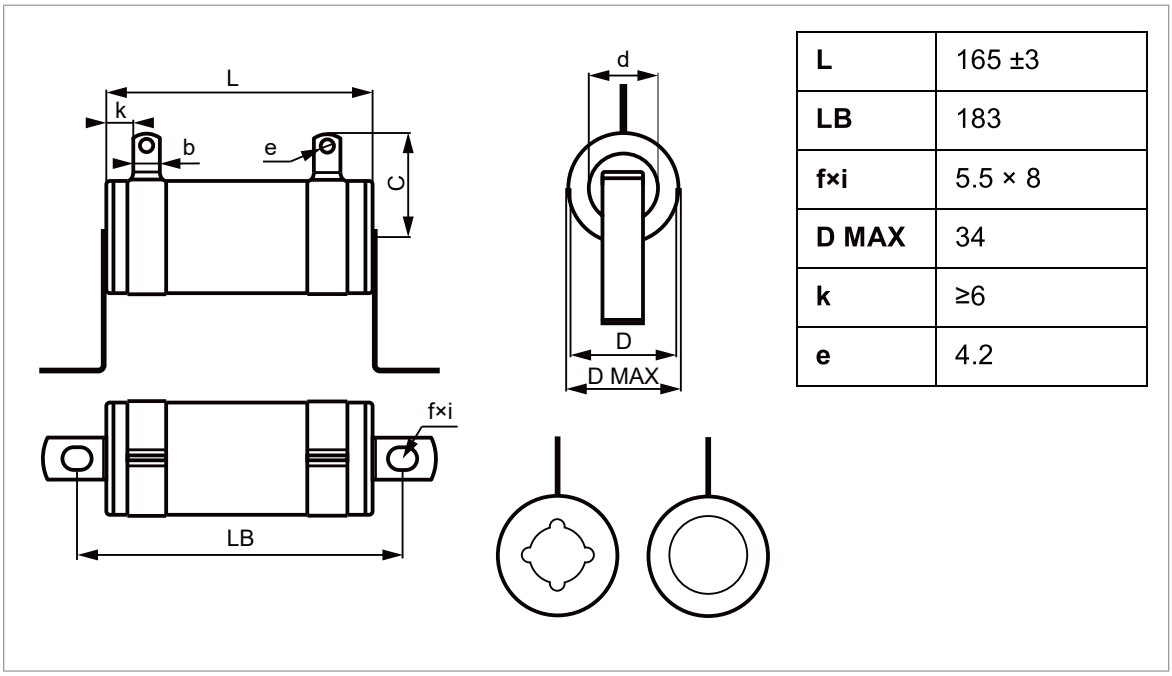


L	165 ±3
LB	183
f×i	5.5 × 8
D MAX	34
k	≥6
e	4.2

Miscellaneous components

Cooling fan 3AXD5000000592



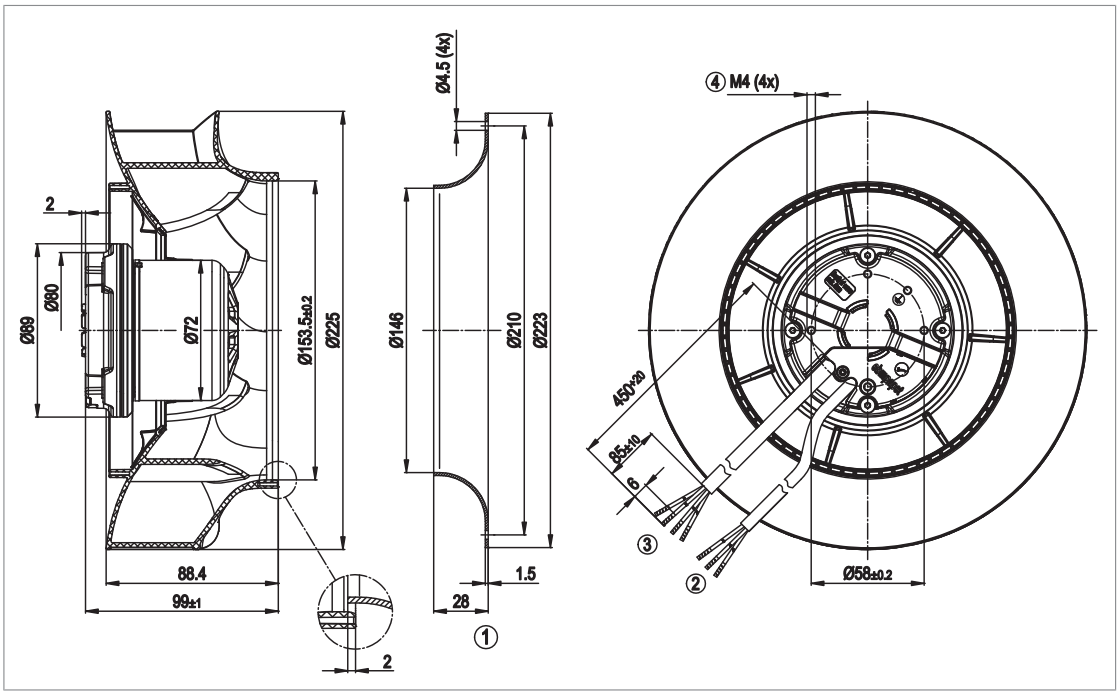


Cooling fan 3AXD50000006111

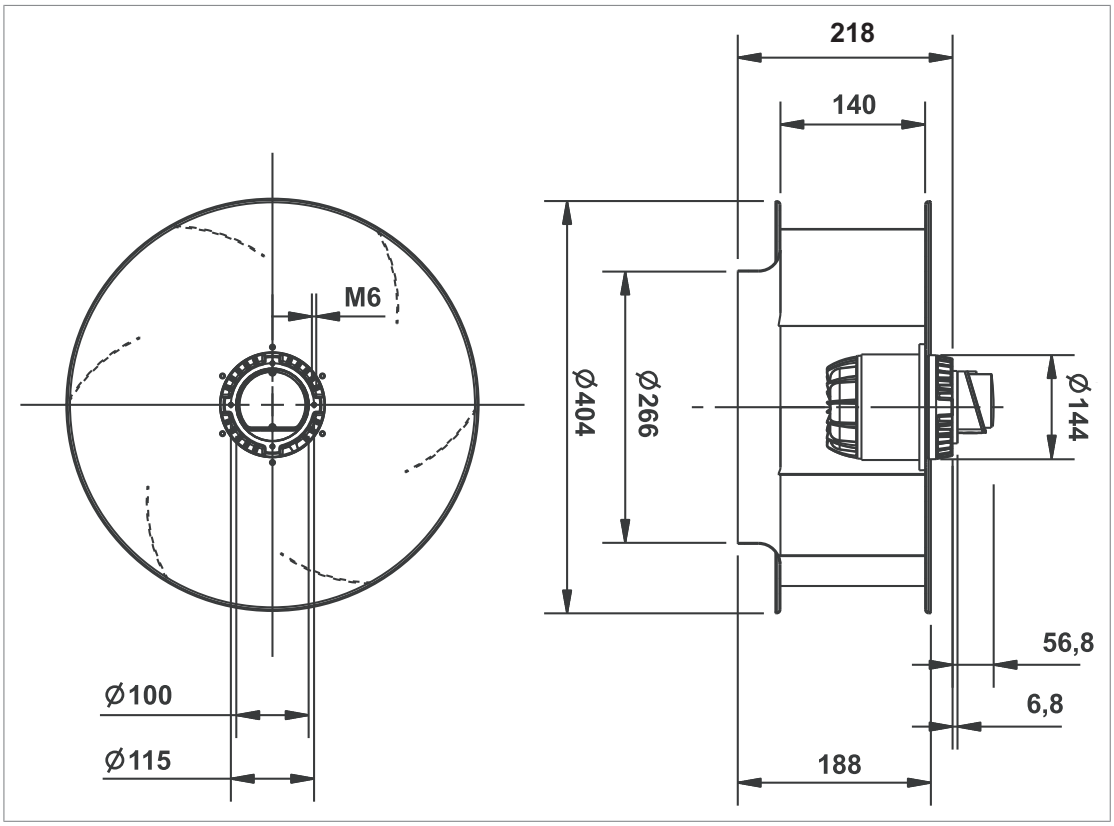


Output (du/dt) filters for frames R1i...R5i


L2	mm (inch)						① ② ⌀	kg /1	5	1 2 Nm	3 4	Nm
	A	B	C	D	E	H	mm (inch)	kg (lb)		N·m (lbf·in)	mm²	N·m (lbf·in)
NOCH0016-60	140 (5.51)	195 (7.68)	120 (4.72)	85 (3.35)	115 (4.53)	83 (3.279	–	2.4 (5.29)	M5	4 (35.40)	0.2…10	1.5 (13.28)
NOCH0030-60	165 (6.50)	215 (8.46)	145 (5.71)	108 (4.25)	130 (5.12)	95 (3.74)	–	4.7 (10.36)	M5	4 (35.40)	0.5…16	1.5 (13.28)
NOCH0070-60	180 (7.09)	261 (10.28)	170 (6.69)	125 (4.92)	150 (5.91)	120 (4.72)	–	9.5 (20.94)	M6	6 (53.10)	10…35	2.5 (22.13)
NOCH0120-60	154 (6.06)	106 (4.17)	100 (3.94)	75 (2.95)	200 (7.87)	160 (6.30)	9 (0.35)	7 (15.43)	M8	20 (177.02)	–	–
NOCH0260-60	185 (7.28)	111 (4.37)	124 (4.88)	82 (3.23)	383 (15.08)	368 (14.49)	13 (0.51)	12 (26.46)	M10	30 (265.52)	–	–
NOCH0400-60	185 (7.28)	126 (4.96)	124 (4.88)	97 (3.82)	383 (15.08)	368 (14.49)	13 (0.51)	17 (37.48)	M10	30 (265.52)	–	–

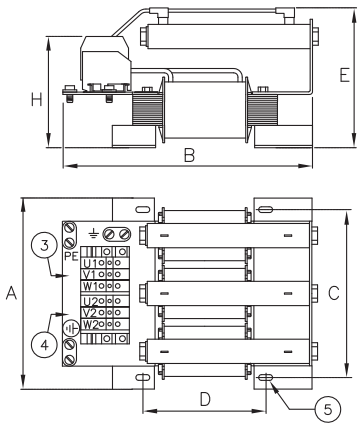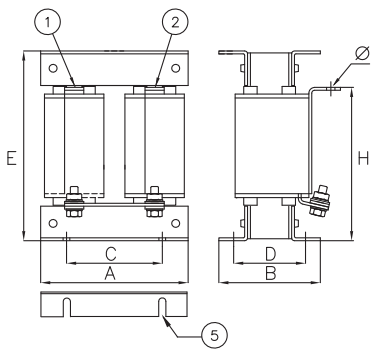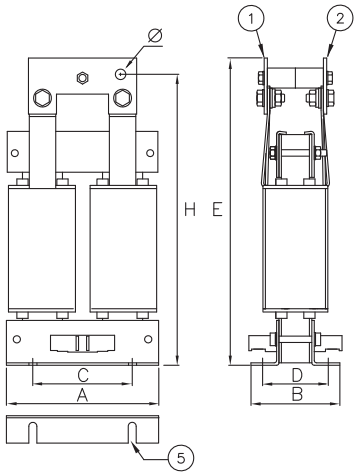
3. U1, V1, W1 4. U2, V2, W2	NOCH0016-60 NOCH0030-60 NOCH0050-60 NOCH0070-60	1. U1, V1, W1 2. U2, V2, W2	NOCH0120-60	1. U1, V1,W1 2. U2, V2, W2	NOCH0260-60 NOCH0400-60
					

Common mode filters

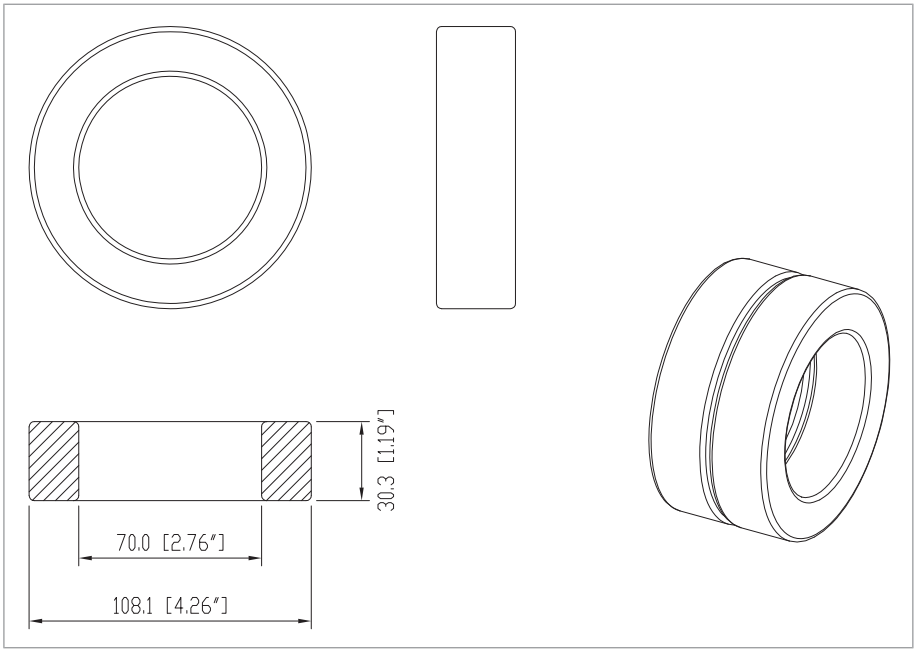


Quick connector for frame R8i

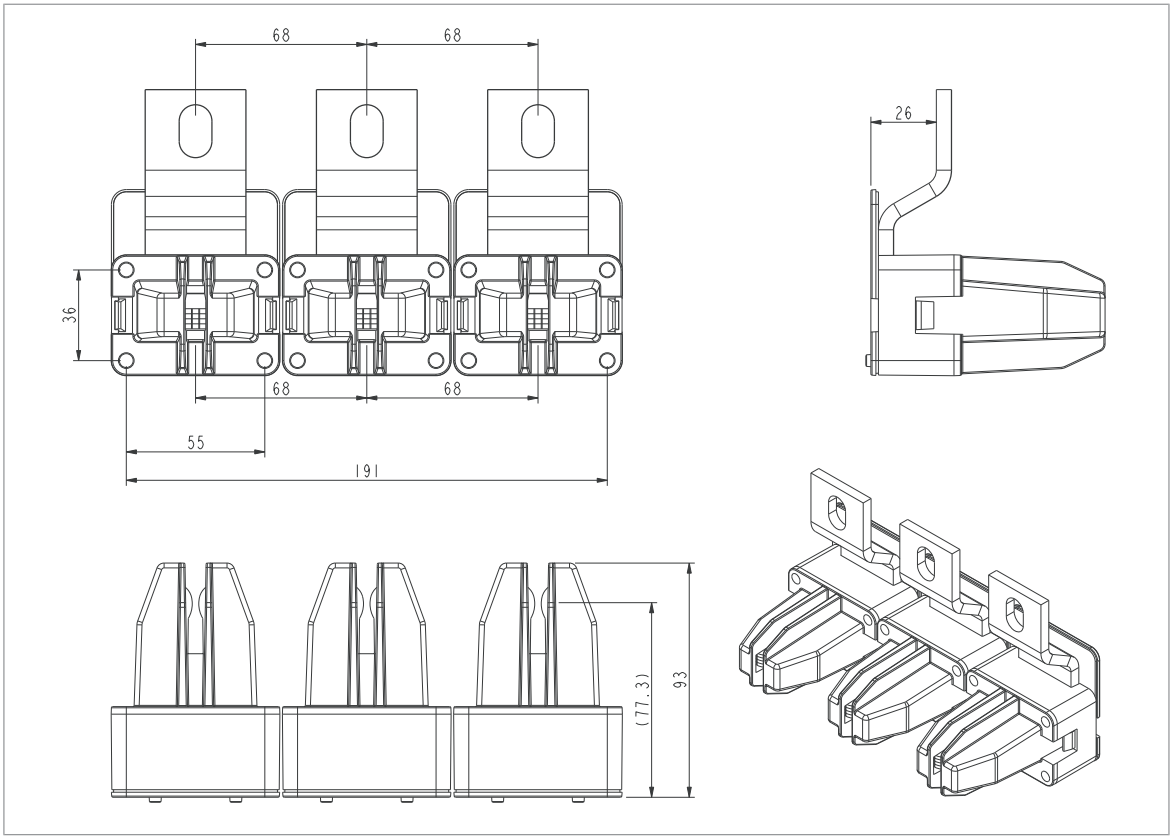


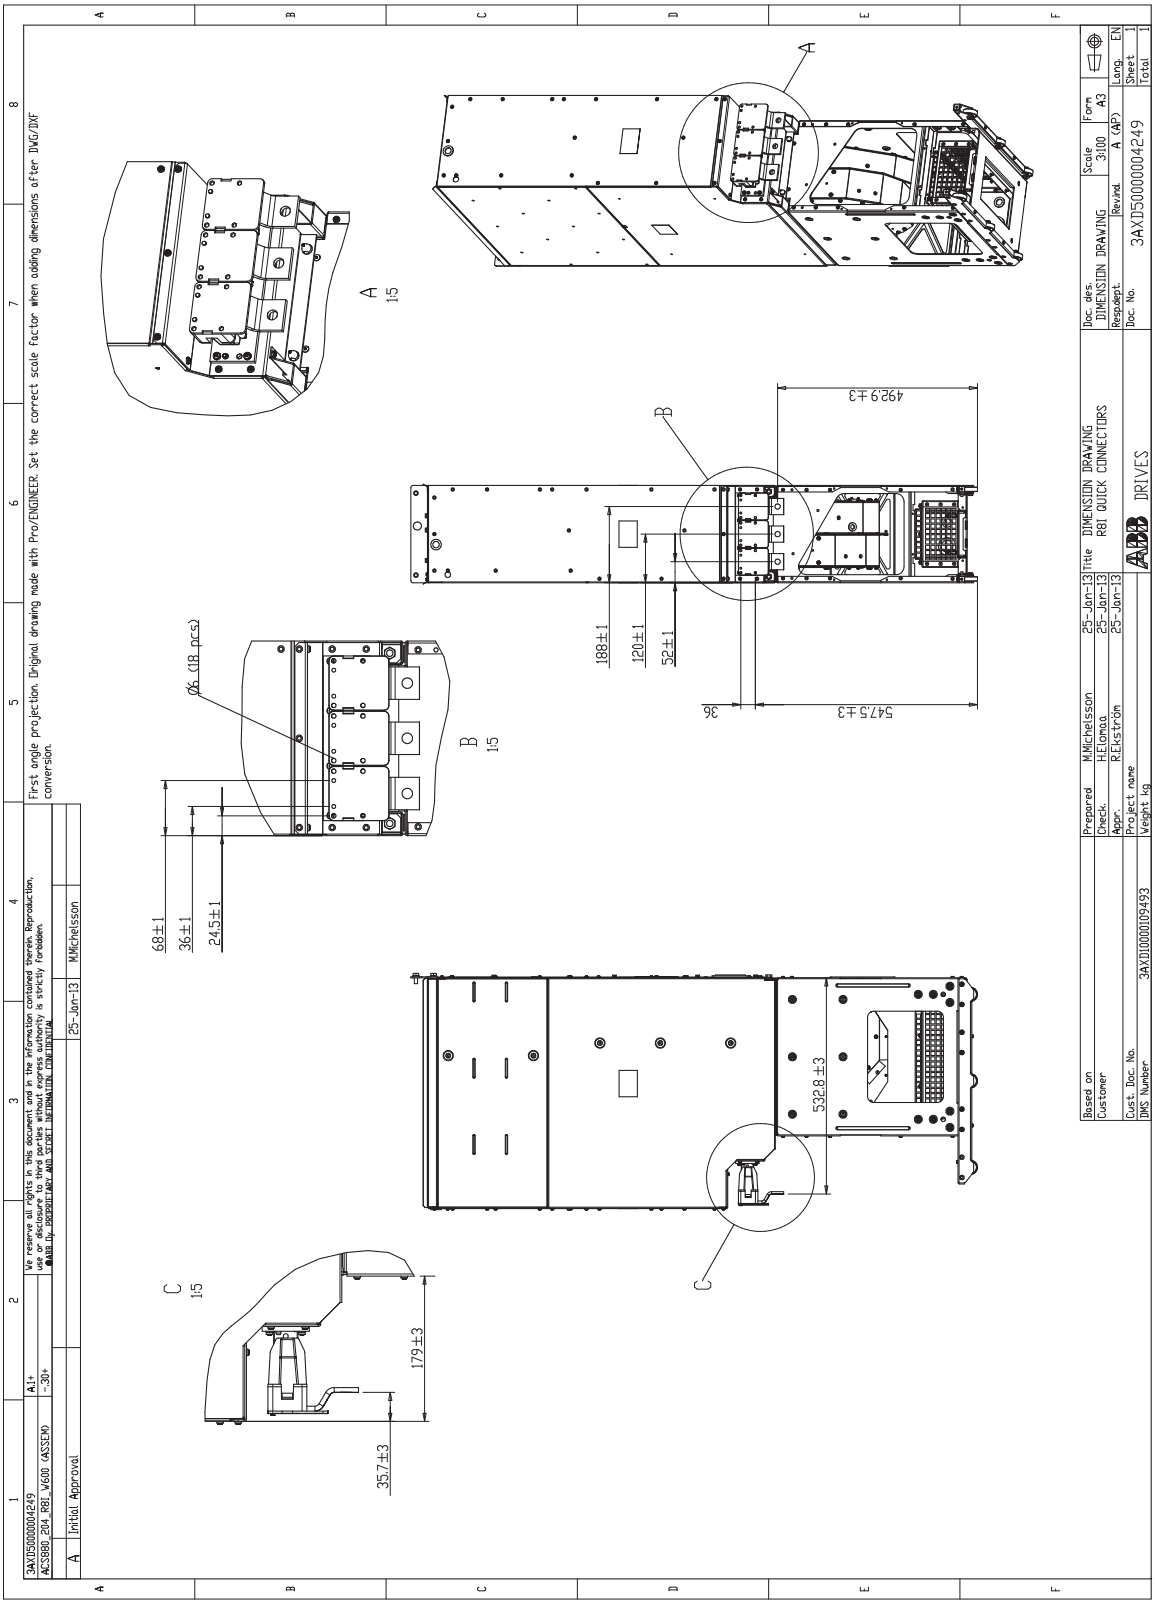
First angle projection. Original drawing made with Pro/ENGINEER. Set the correct scale factor when adding dimensions after DWG/DXF conversion.
We reserve all rights in this document and in the information contained therein. Reproduction, use or disclosure to third parties without express authority is strictly forbidden.
Made by PROPRIETARY AND SECRET INFORMATION. CONFIDENTIAL
3AXD50000004249
ACS880_204_R8I_V600 (ASSEM)
A Initial Approval
25-Jan-13
M.Michelsson
Prepared M.Michelsson 25-Jan-13
Check. H.Elonaa 25-Jan-13
Appr. R.Ekström 25-Jan-13
Project name
Weight kg
3AXD10000109493
Based on
Customer
Cust. Doc. No.
DMS Number
Title DIMENSION DRAWING R8I QUICK CONNECTORS
Doc des. DIMENSION DRAWING
Resp.dept.
Doc. No. 3AXD50000004249
Scale 3:100
Rev.ind. A (AP)
Form A3
Lang. EN
Sheet 1
Total 1
DRIVES
A 1:5
B 1:5
C 1:5
Ø6 (18 pcs)
68±1
36±1
24.5±1
188±1
120±1
52±1
492.9±3
547.5±3
36
532.8±3
179±3
35.7±3

Insertion/extraction ramp for frame R8i modules

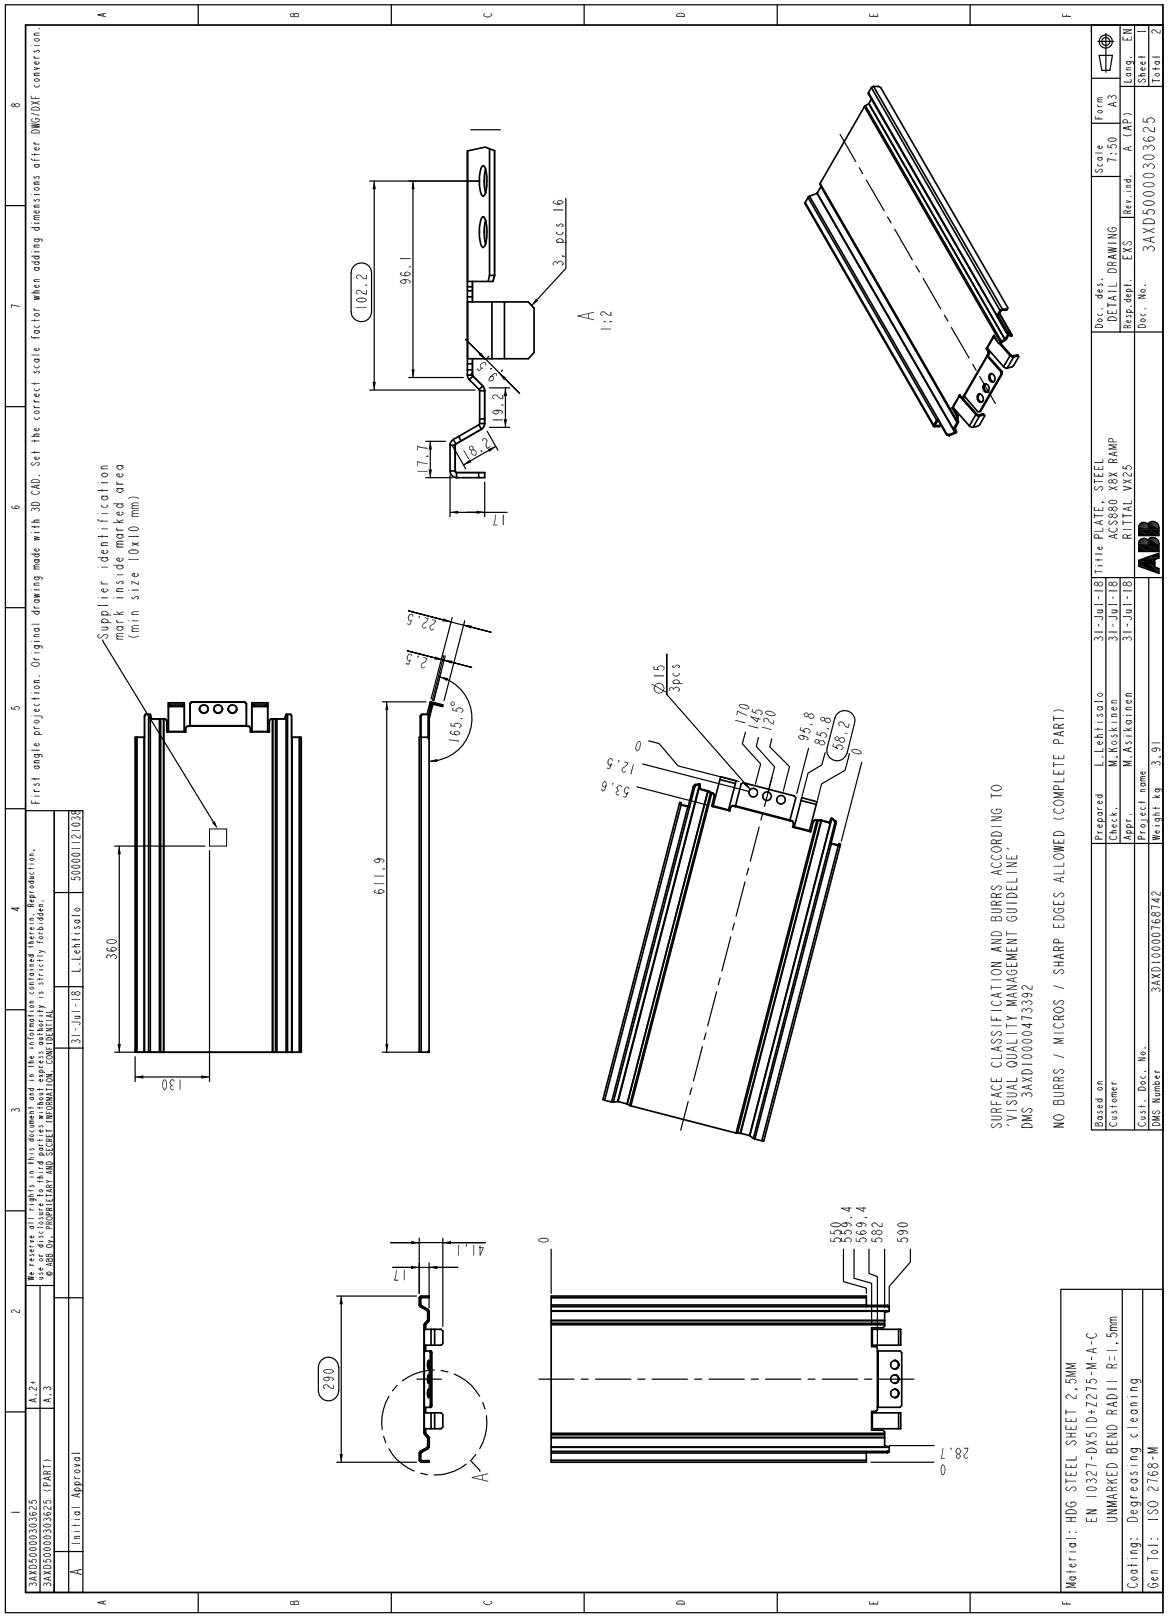

460 Dimension drawings

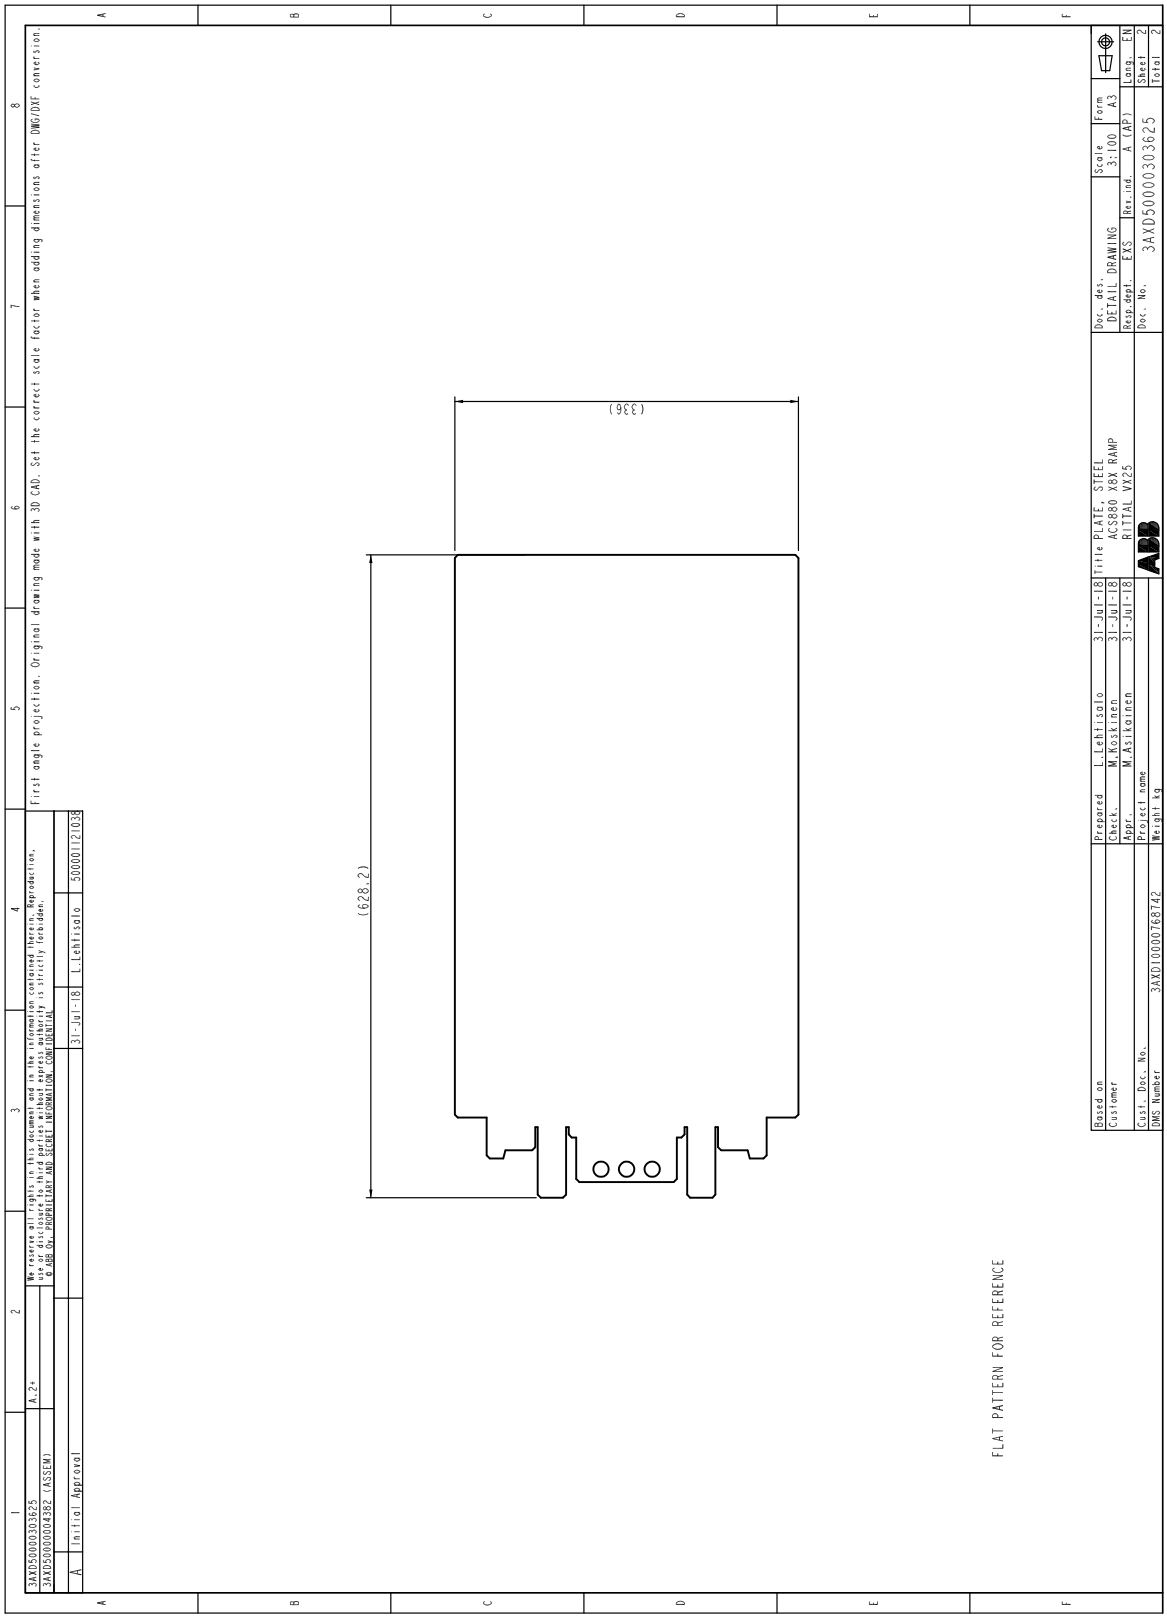

16

Circuit diagrams

Contents of this chapter

This chapter contains connection diagram examples for the whole inverter unit.

Note: By default, the Safe torque off (STO) function is not in use, and has been bridged at the factory as shown in the diagrams. For information on implementing the function, see chapter The Safe torque off function (page 379).

Note: This chapter does not contain all the circuit diagrams for all frame sizes. For complete set of diagrams, refer to the circuit diagrams delivered with the drive.

Component designations used in the diagrams

Frames R1i...R5i

Designation	Component
A41.x	ZCU control unit
A47	FDPI diagnostics and control panel interface. For constructing a panel bus between inverter modules without front cover, see Panel bus (control of several units from one control panel) (page 193).
A48	DPMP-01 panel mounting platform kit (to be ordered separately)
A49	ACS-AP-W control panel
F10.x	Main DC fuses
F11.x	Module-specific DC fuses
G26.x	Roof fan
K26	Roof fan control relay

Designation	Component
Q11	Main DC switch/disconnector
R12	du/dt filter
T11	Inverter module
T22	24 V DC power supply

Frame R6i

Designation	Component
A41	Control unit
A47	FDPI diagnostics and control panel interface. For constructing a panel bus between inverter modules without front cover, see Panel bus (control of several units from one control panel) (page 193).
A48	DPMP-01 panel mounting platform kit (to be ordered separately)
A49	ACS-AP-W control panel
F11.x	DC fuses
Q11	Main DC switch/disconnector
R12	Output (du/dt) filter
T11	Inverter module
T22	24 V DC power supply
Z1.x	Common mode filters

Frame R7i

Designation	Component
A47	FDPI diagnostics and control panel interface. For constructing a panel bus between inverter modules without front cover, see Panel bus (control of several units from one control panel) (page 193).
A48	DPMP-01 panel mounting platform kit (to be ordered separately)
A49	ACS-AP-W control panel
A51	Control unit
F11.x	DC fuses
Q11	Main DC switch/disconnector
Q14	Charging contactor
R14.x	Charging resistors
T11	Inverter module
T22	24 V DC power supply
Z1.x	Common mode filters


Frame R8i and multiples

Designation	Component
A11.x	Charging controller
A41	Control unit
A47	FDPI diagnostics and control panel interface. For constructing a panel bus between inverter modules without front cover, see Panel bus (control of several units from one control panel) (page 193).
A48	DPMP-01 panel mounting platform kit (to be ordered separately)
A49	ACS-AP-W control panel
F11.xx	DC fuses
Q10.x	Charging switch
Q11.x	Main DC switch/disconnector
R10.x	Charging resistors
R11.xx	Common mode filters
T11.x	Inverter module
T22	External 24 V DC power supply

Frames R1i...R4i – Sheet 000A



Frames R1i...R5i – Sheet 000B

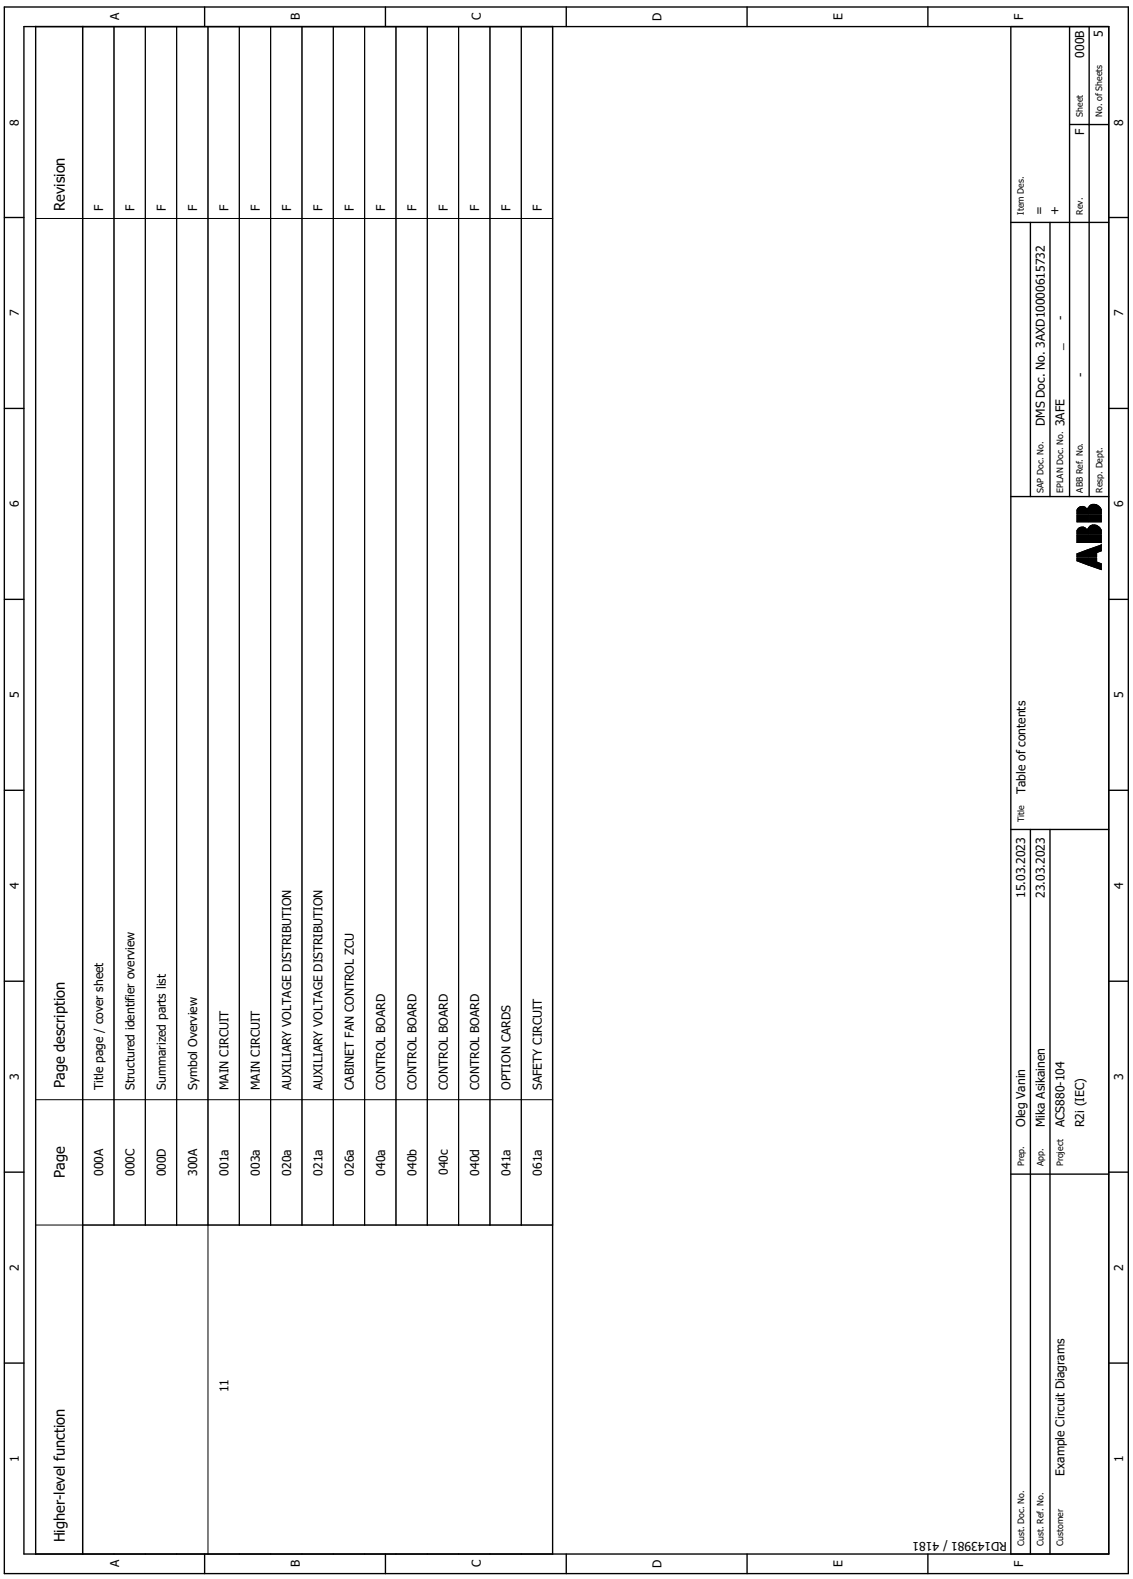

Higher-level function	Page	Page description	Revision
	000A	Title page / cover sheet	F
	000C	Structured identifier overview	F
	000D	Summarized parts list	F
	300A	Symbol Overview	F
11	001a	MAIN CIRCUIT	F
	003a	MAIN CIRCUIT	F
	020a	AUXILIARY VOLTAGE DISTRIBUTION	F
	021a	AUXILIARY VOLTAGE DISTRIBUTION	F
	026a	CABINET FAN CONTROL ZCU	F
	040a	CONTROL BOARD	F
	040b	CONTROL BOARD	F
	040c	CONTROL BOARD	F
	040d	CONTROL BOARD	F
	041a	OPTION CARDS	F
	061a	SAFETY CIRCUIT	F

RDI43981 / 4181


Cust. Doc. No.	Prep. Oleg Vanin	15.03.2023
Cust. Ref. No.	Appr. Mika Asikainen	23.03.2023
Customer Example Circuit Diagrams	Project ACS880-104 R2i (IEC)	

Title Table of contents


SAP Doc. No. DMS Doc. No. 3AXD10000615732
EPLAN Doc. No. 3AFE _ -
ABB Ref. No. - Rev. F Sheet 000B
Resp. Dept. No. of Sheets 5

Item Des. = +


Frames R1i...R4i – Sheet 000C

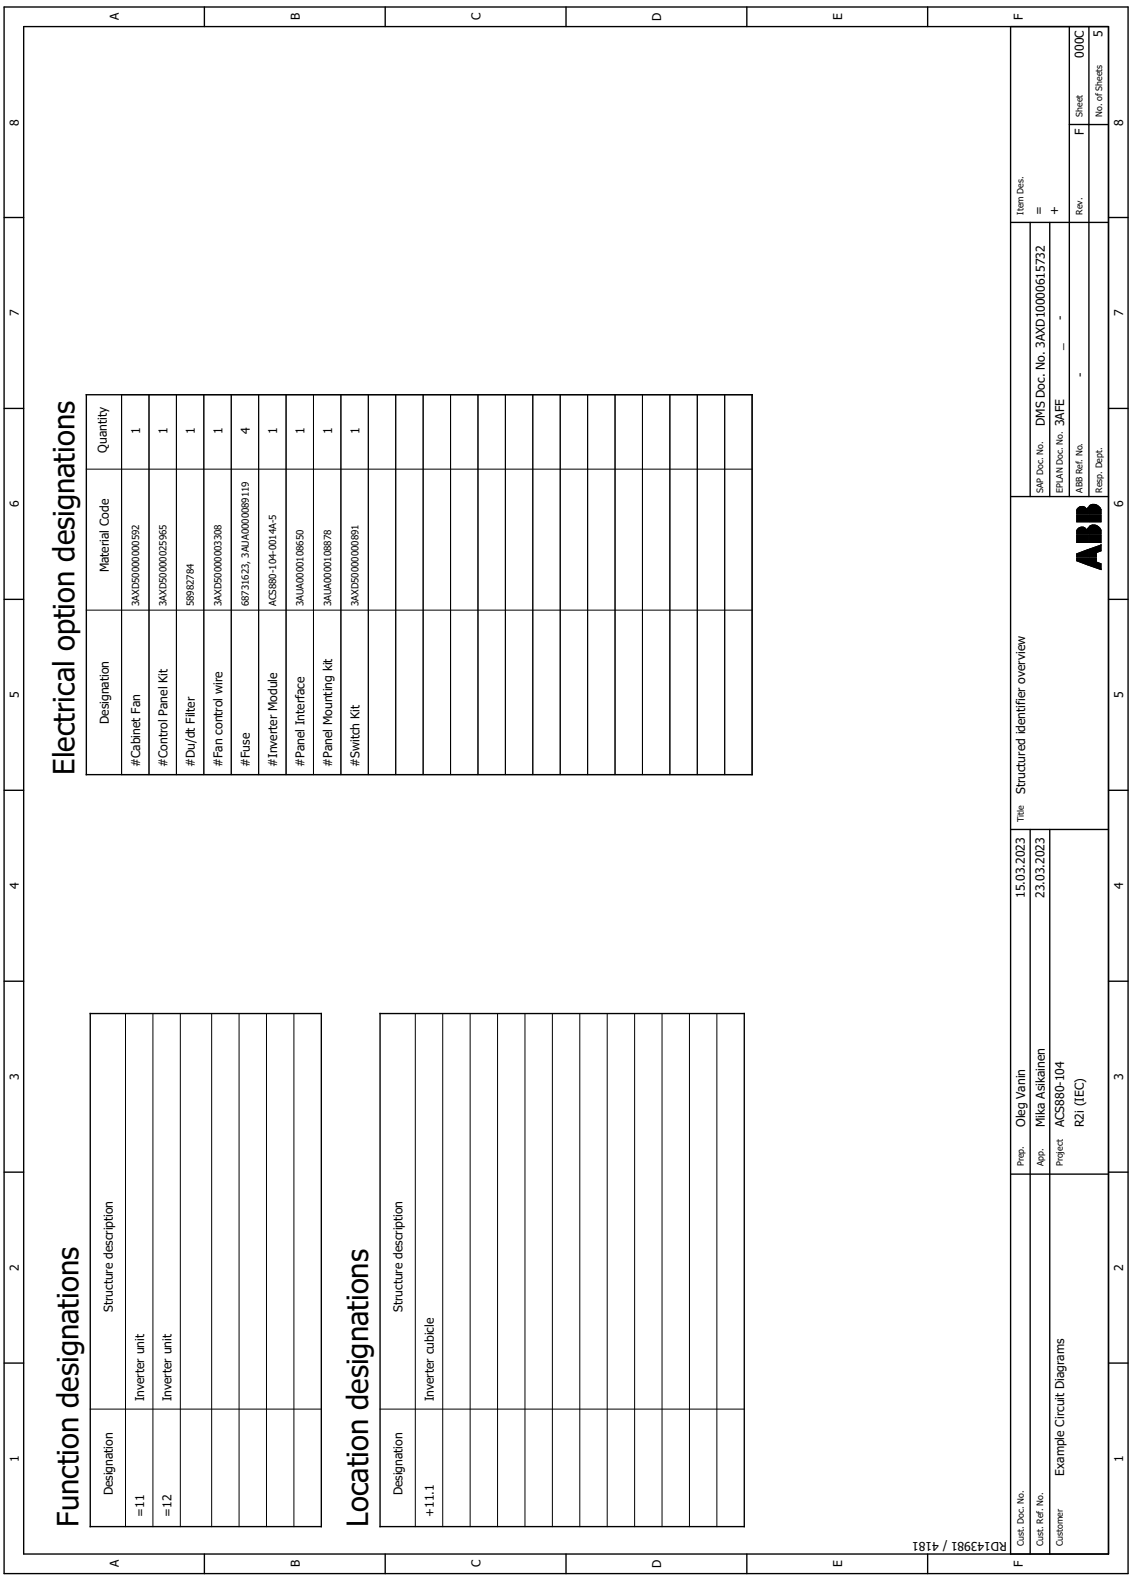


Frames R1i...R5i – Sheet 300A

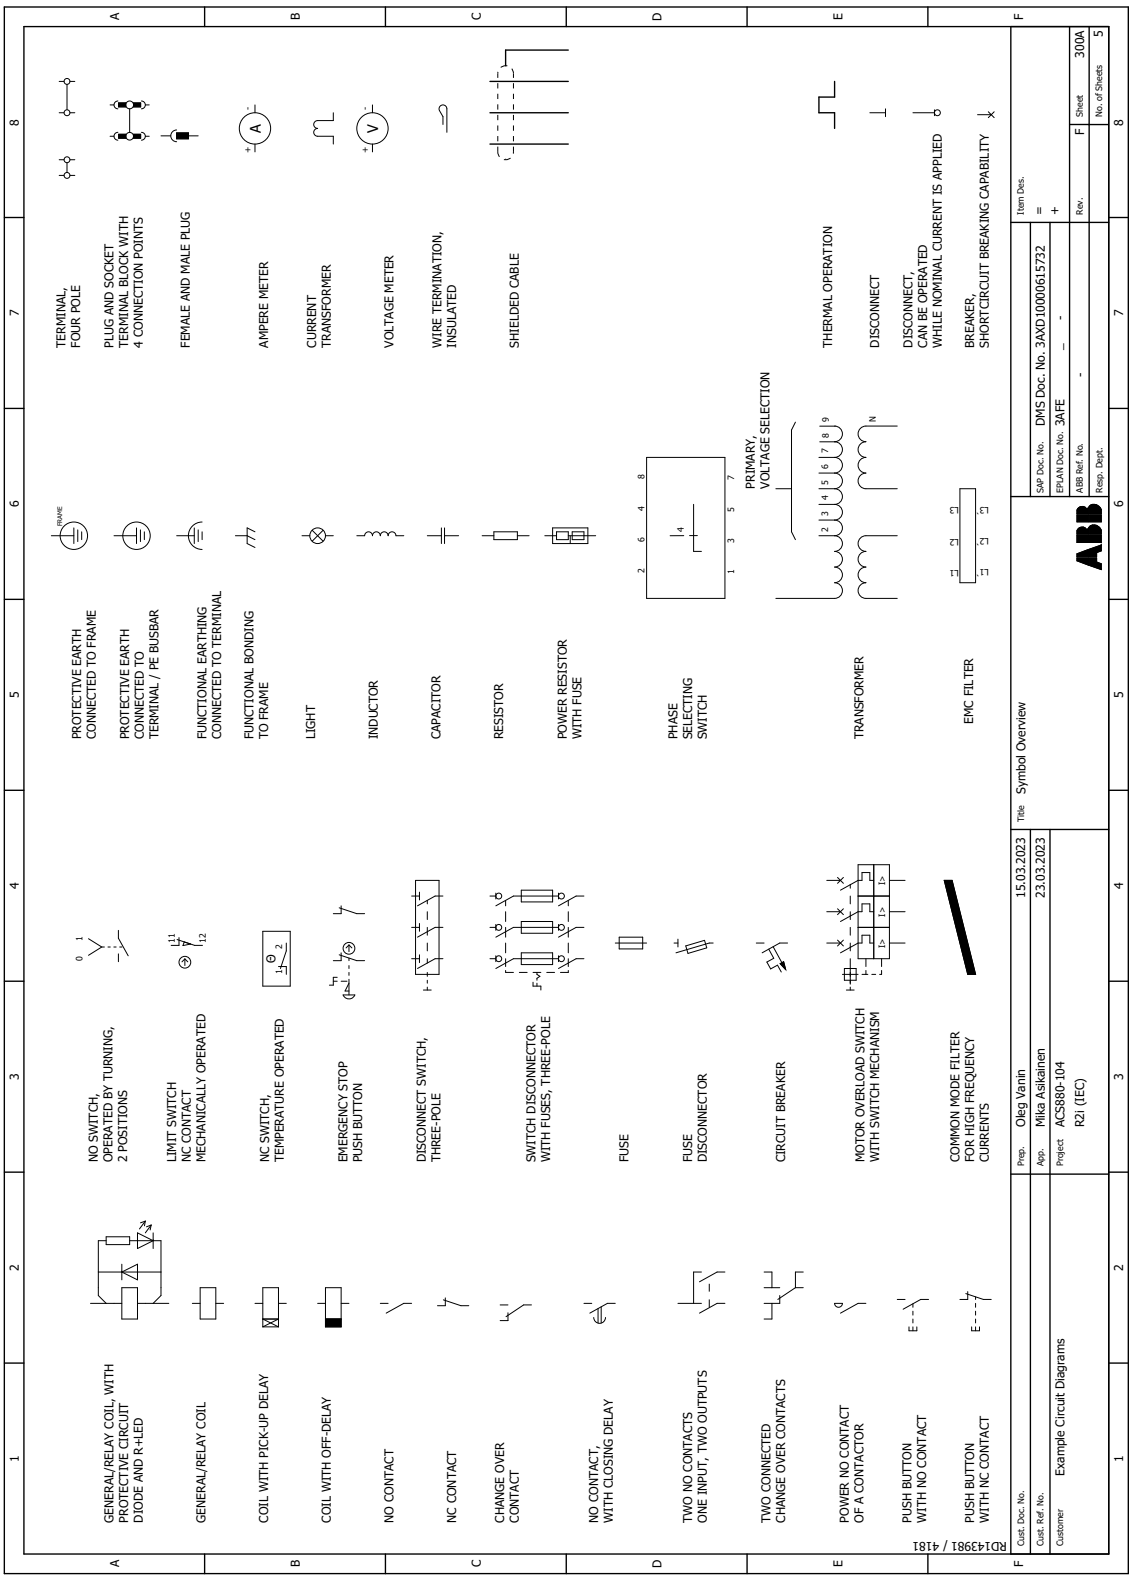


Frames R1i...R5i – Sheet 001a

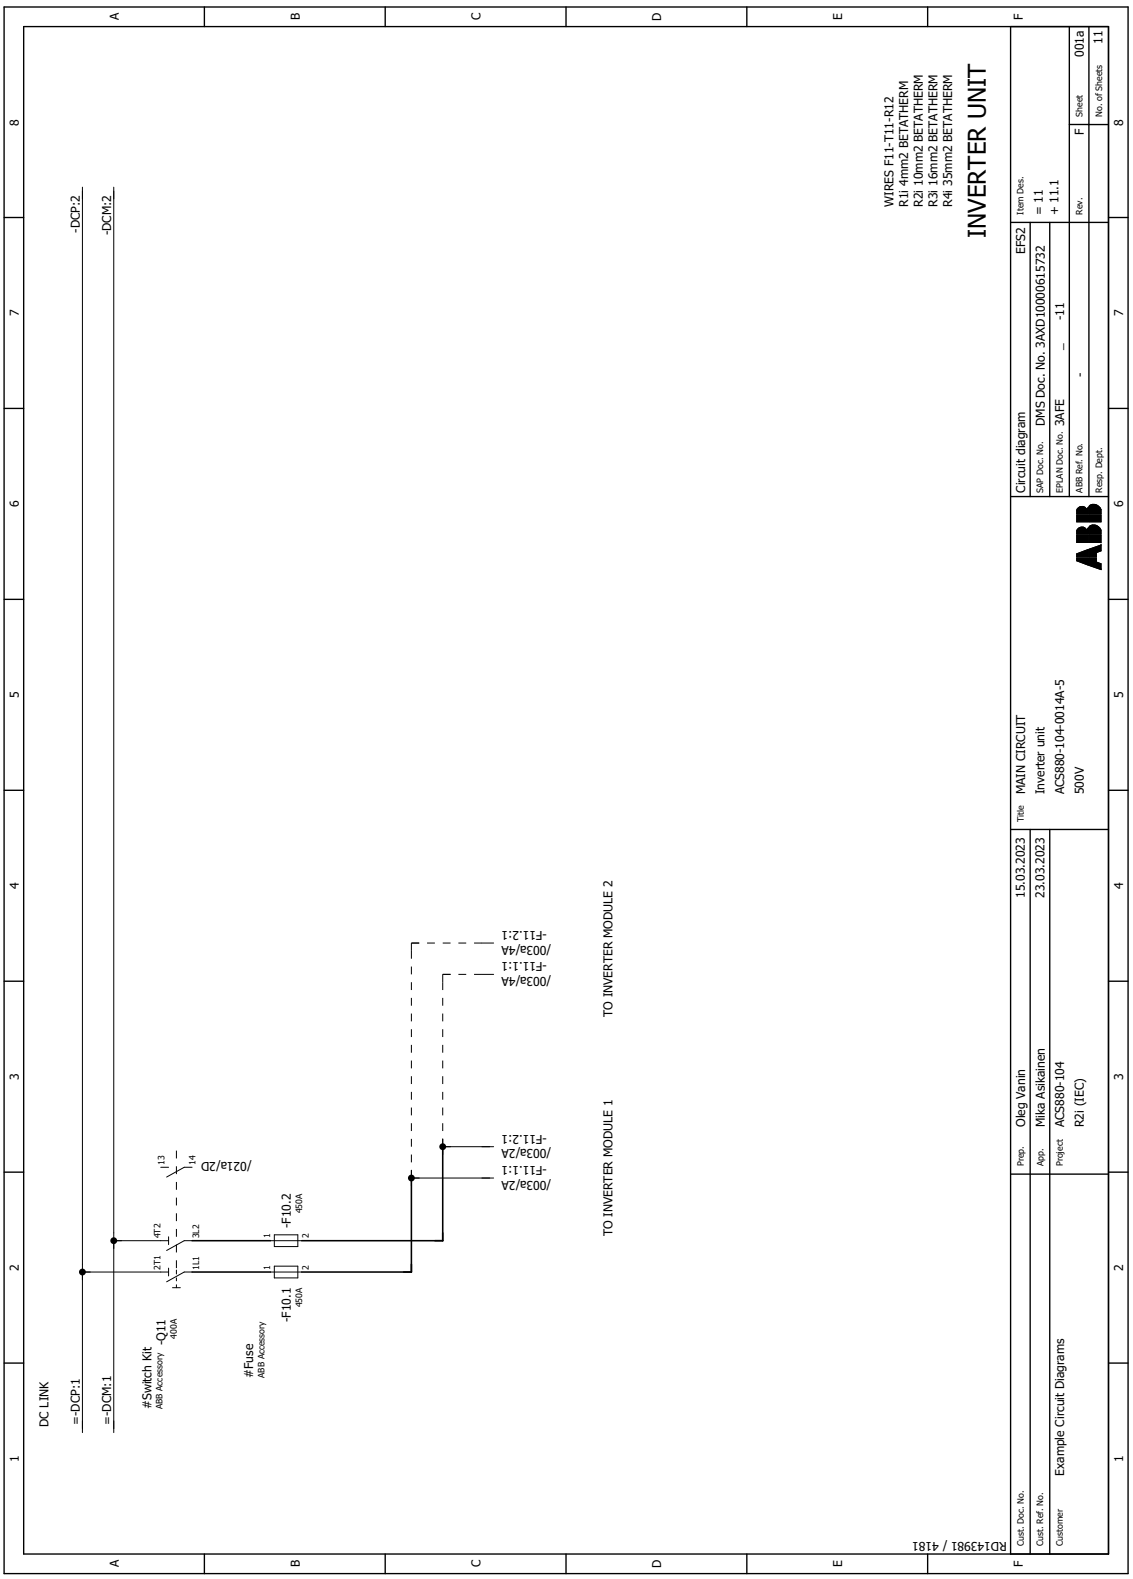


Frames R1i...R4i – Sheet 003a

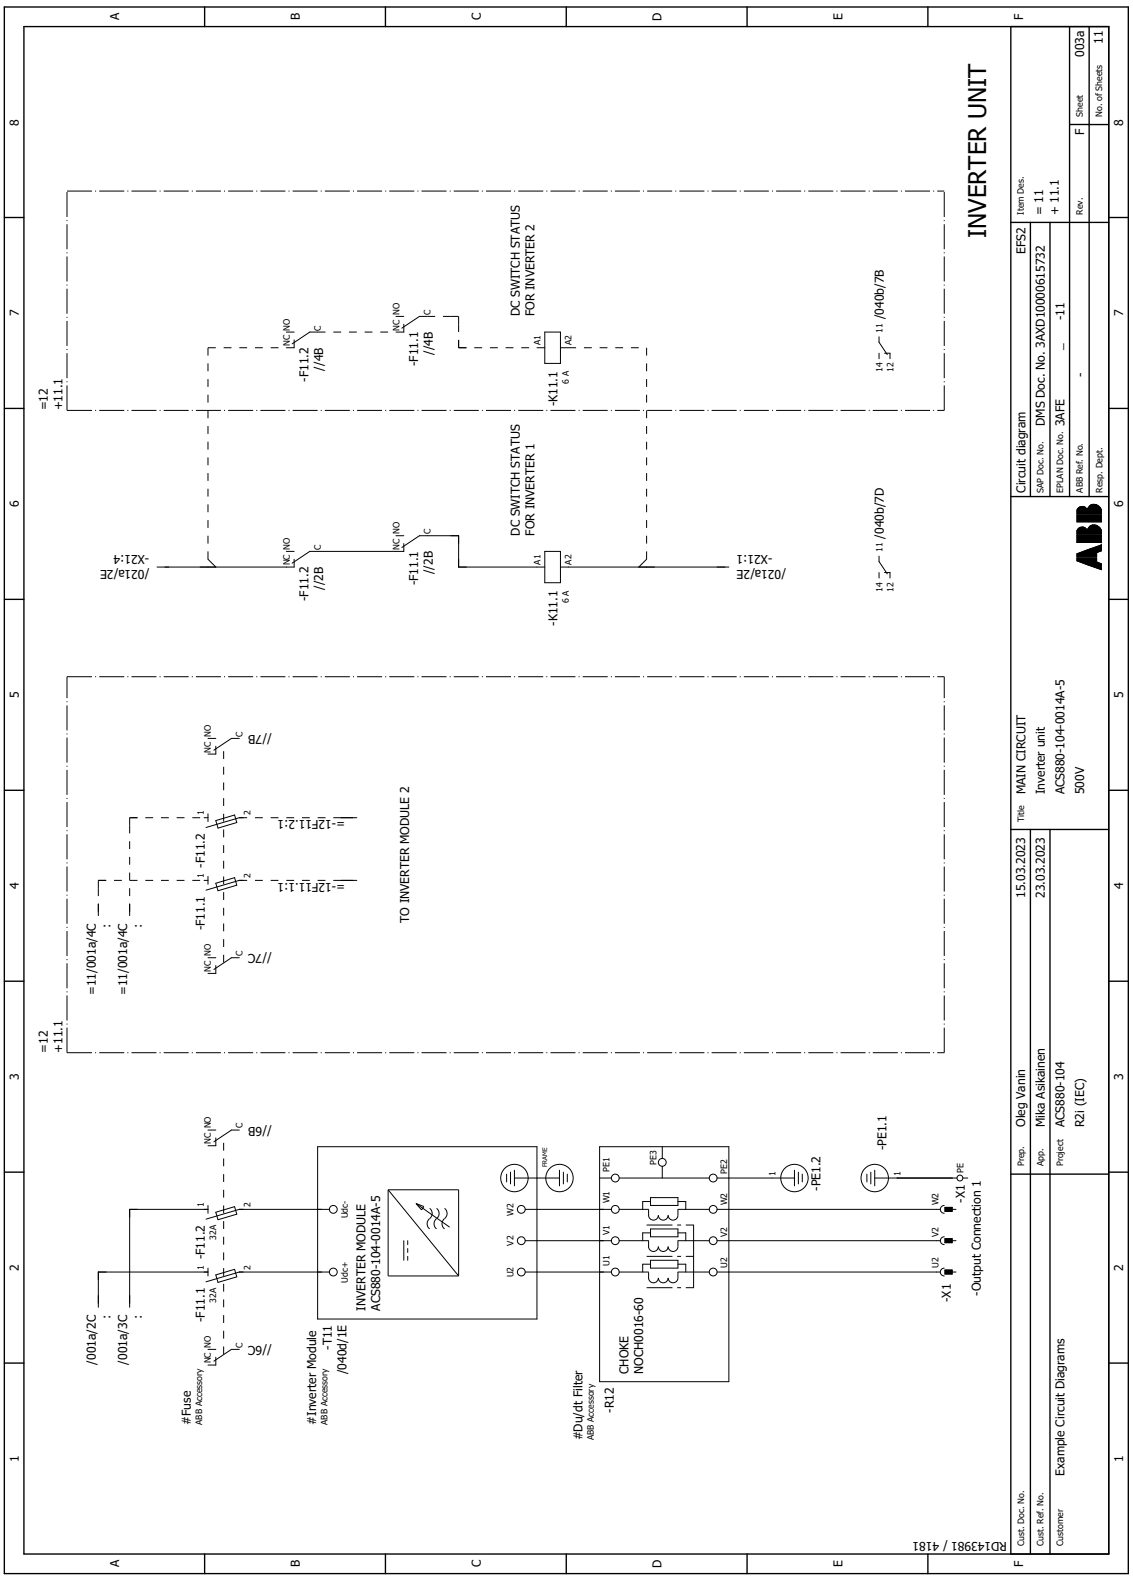


Frames R1i...R4i – Sheet 020a

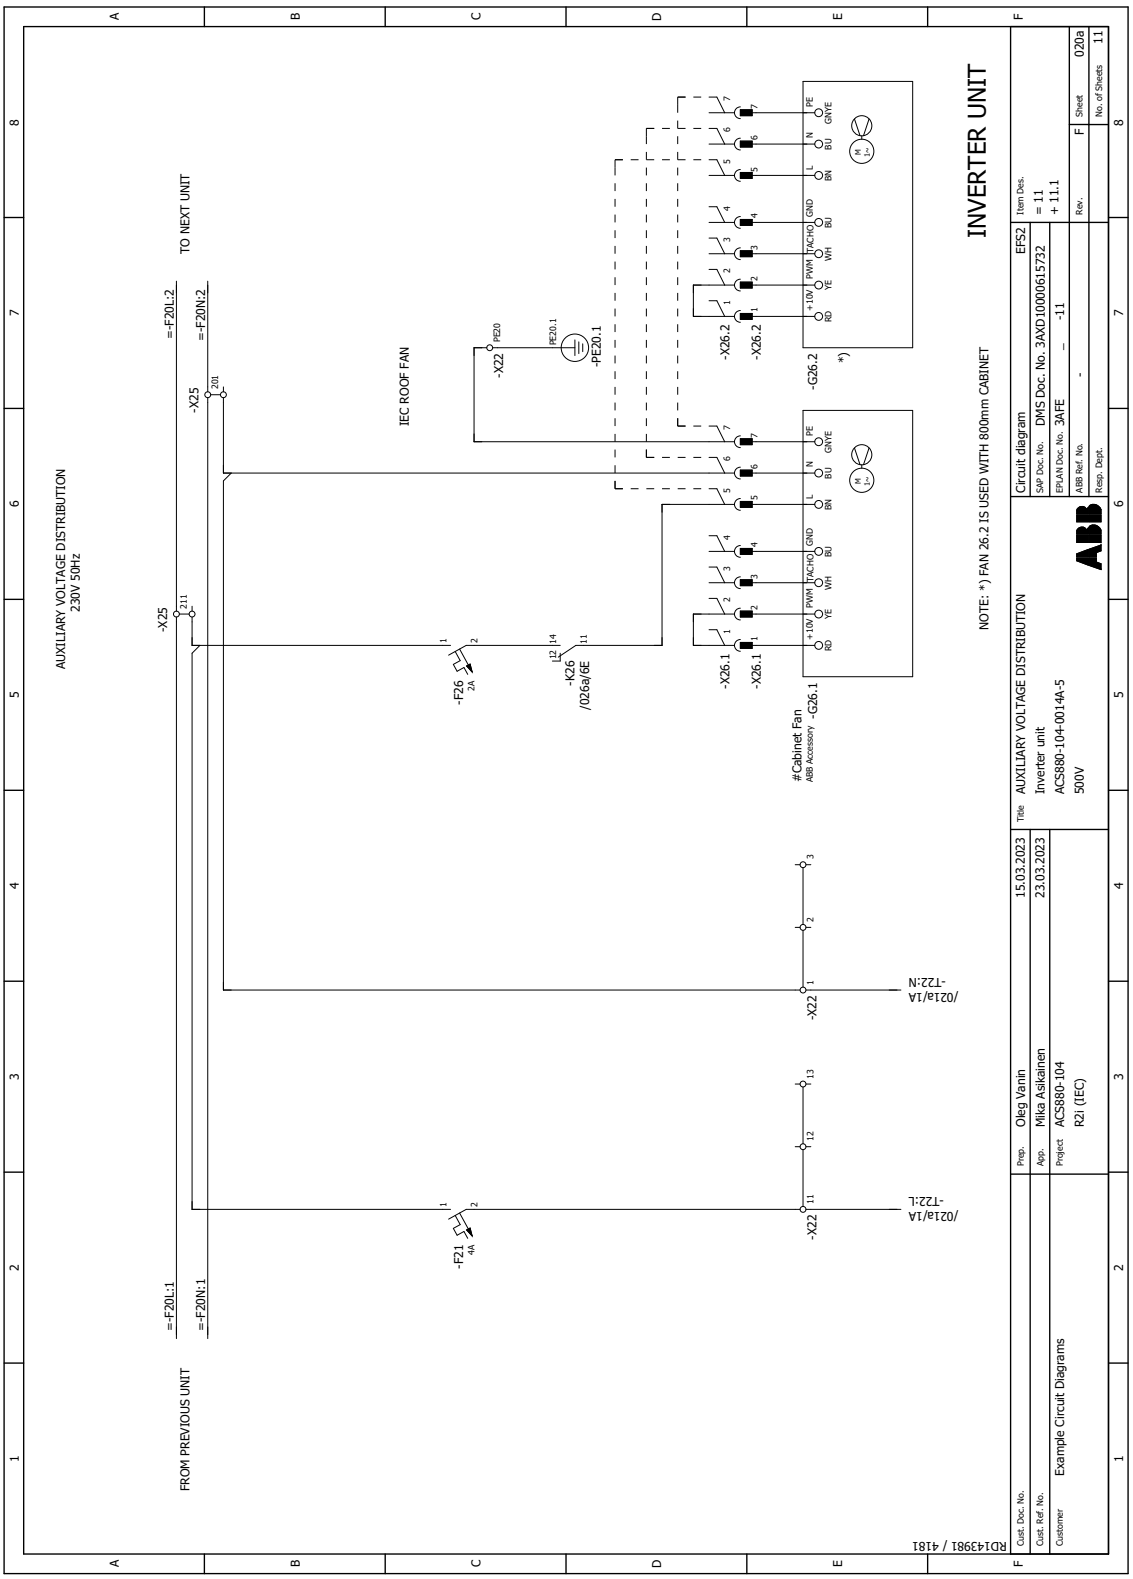


Frames R1i...R5i – Sheet 021a

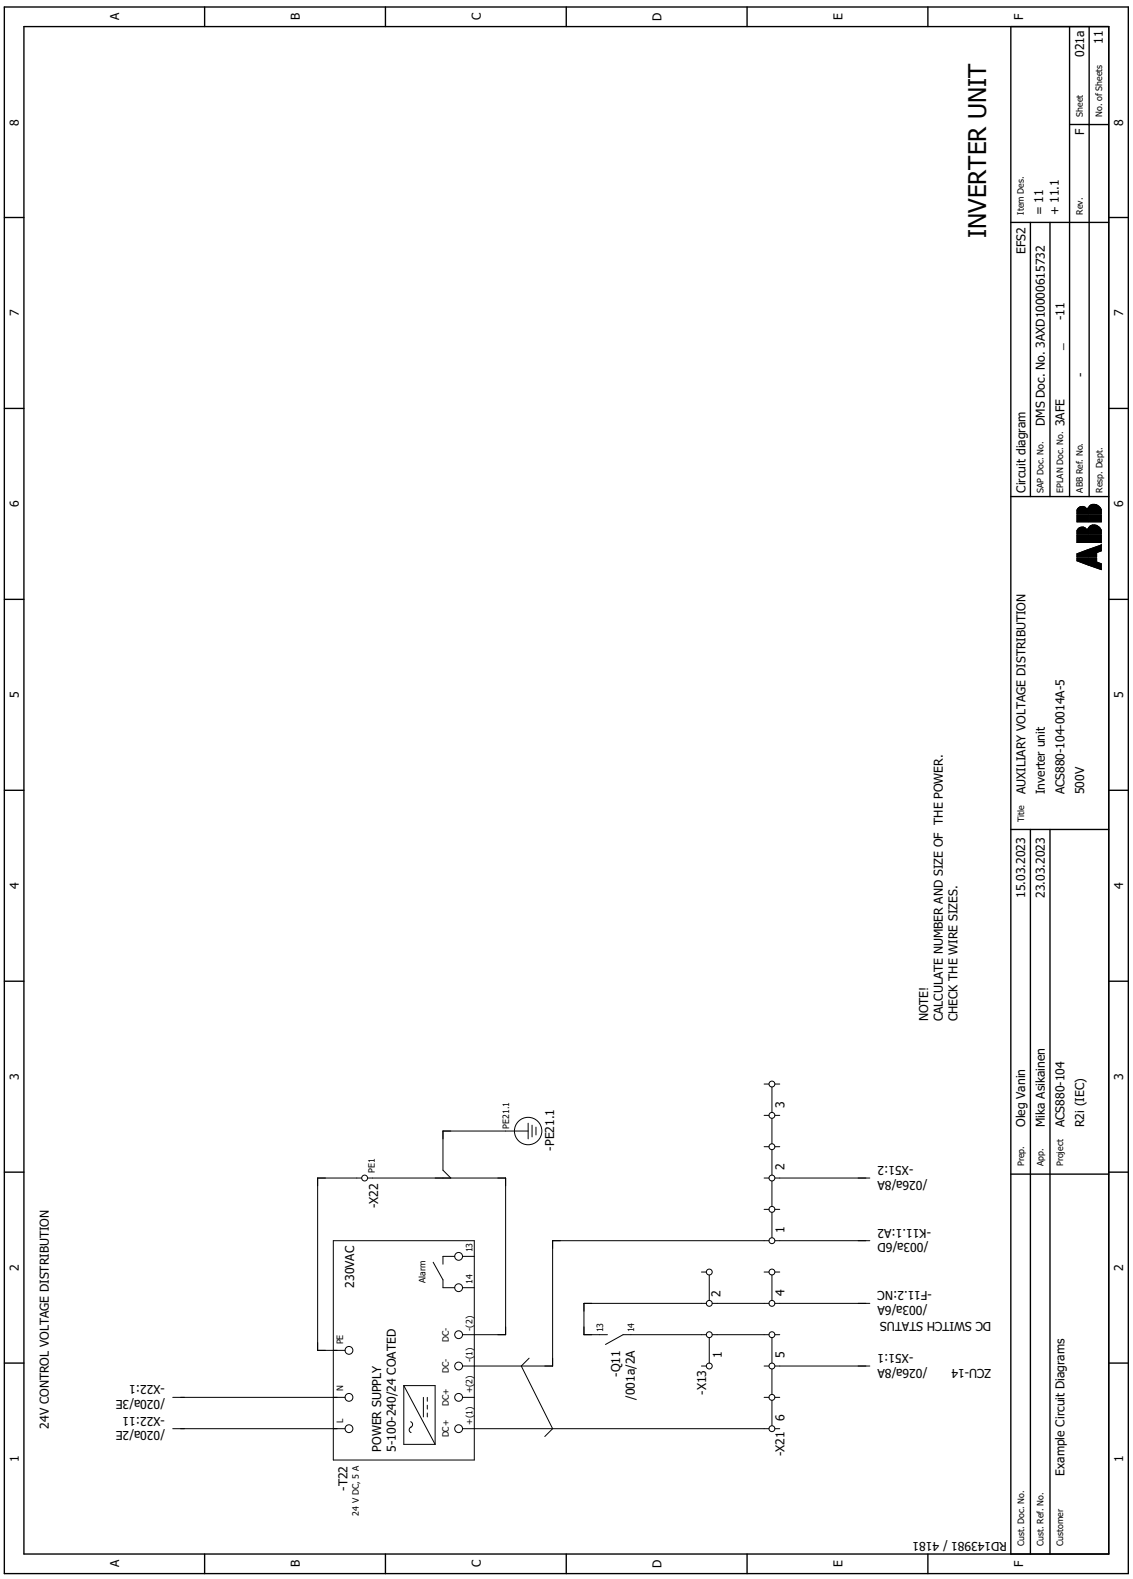


Frames R1i...R5i – Sheet 026a

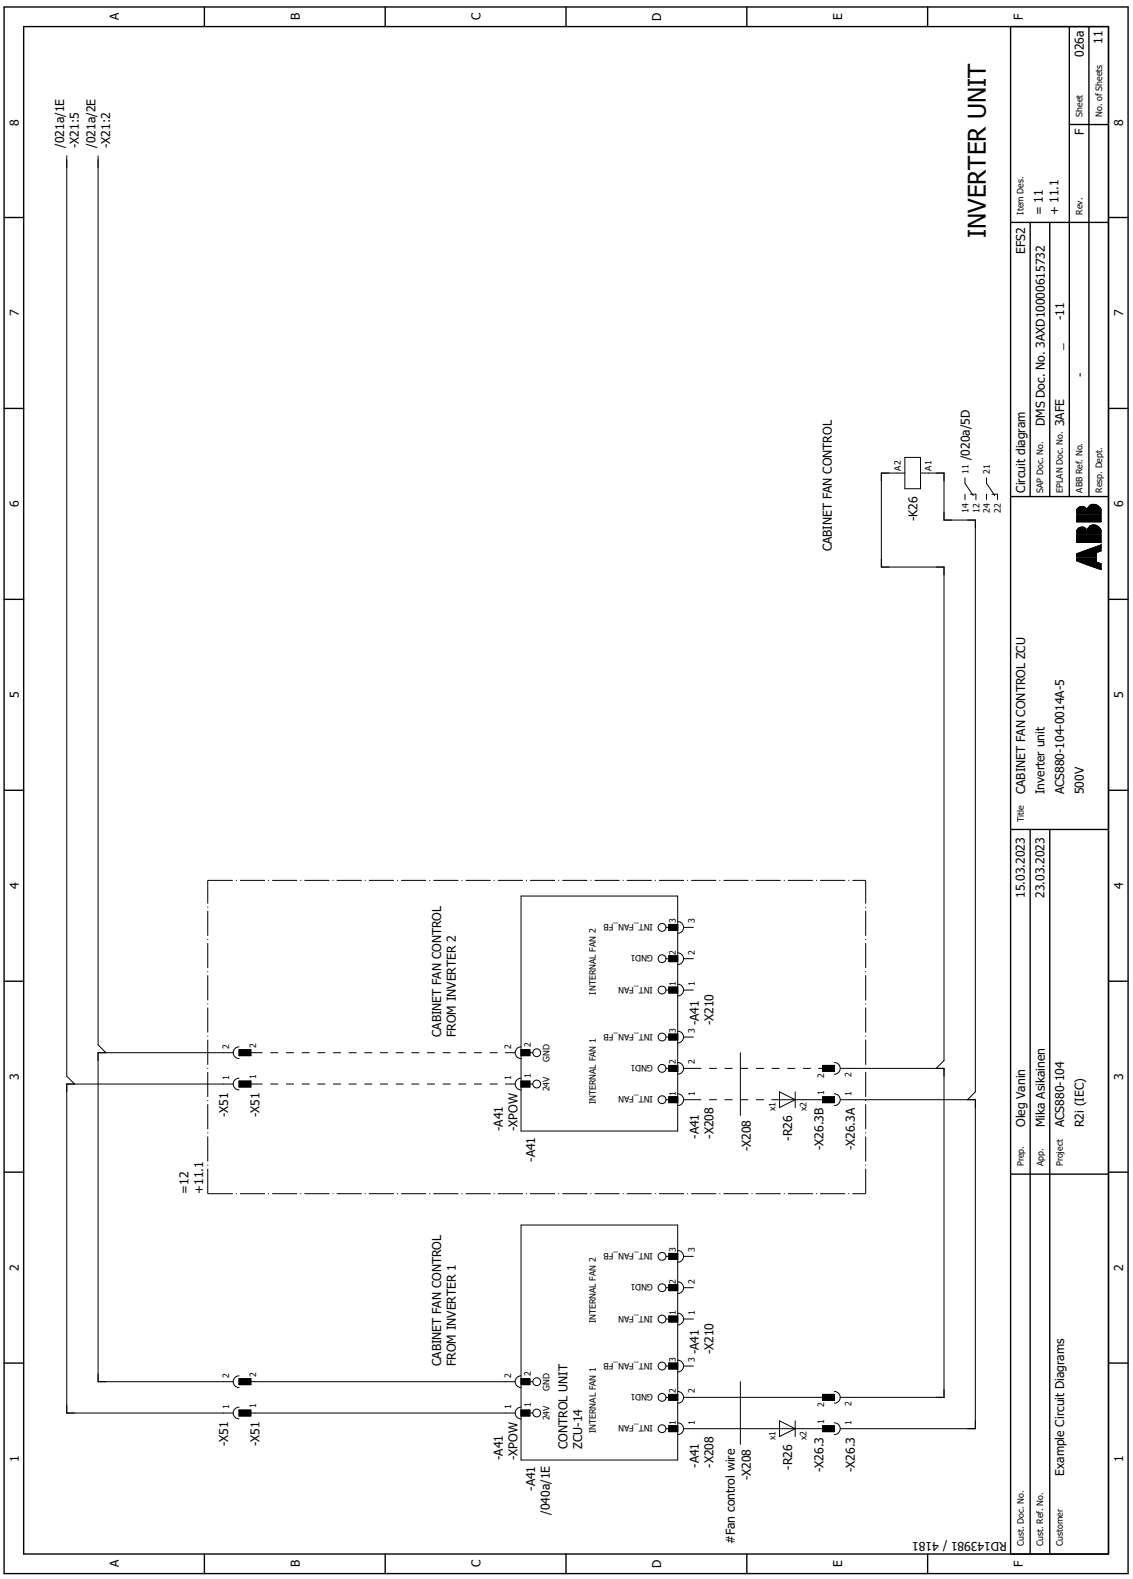


Frames R1i...R5i – Sheet 040a

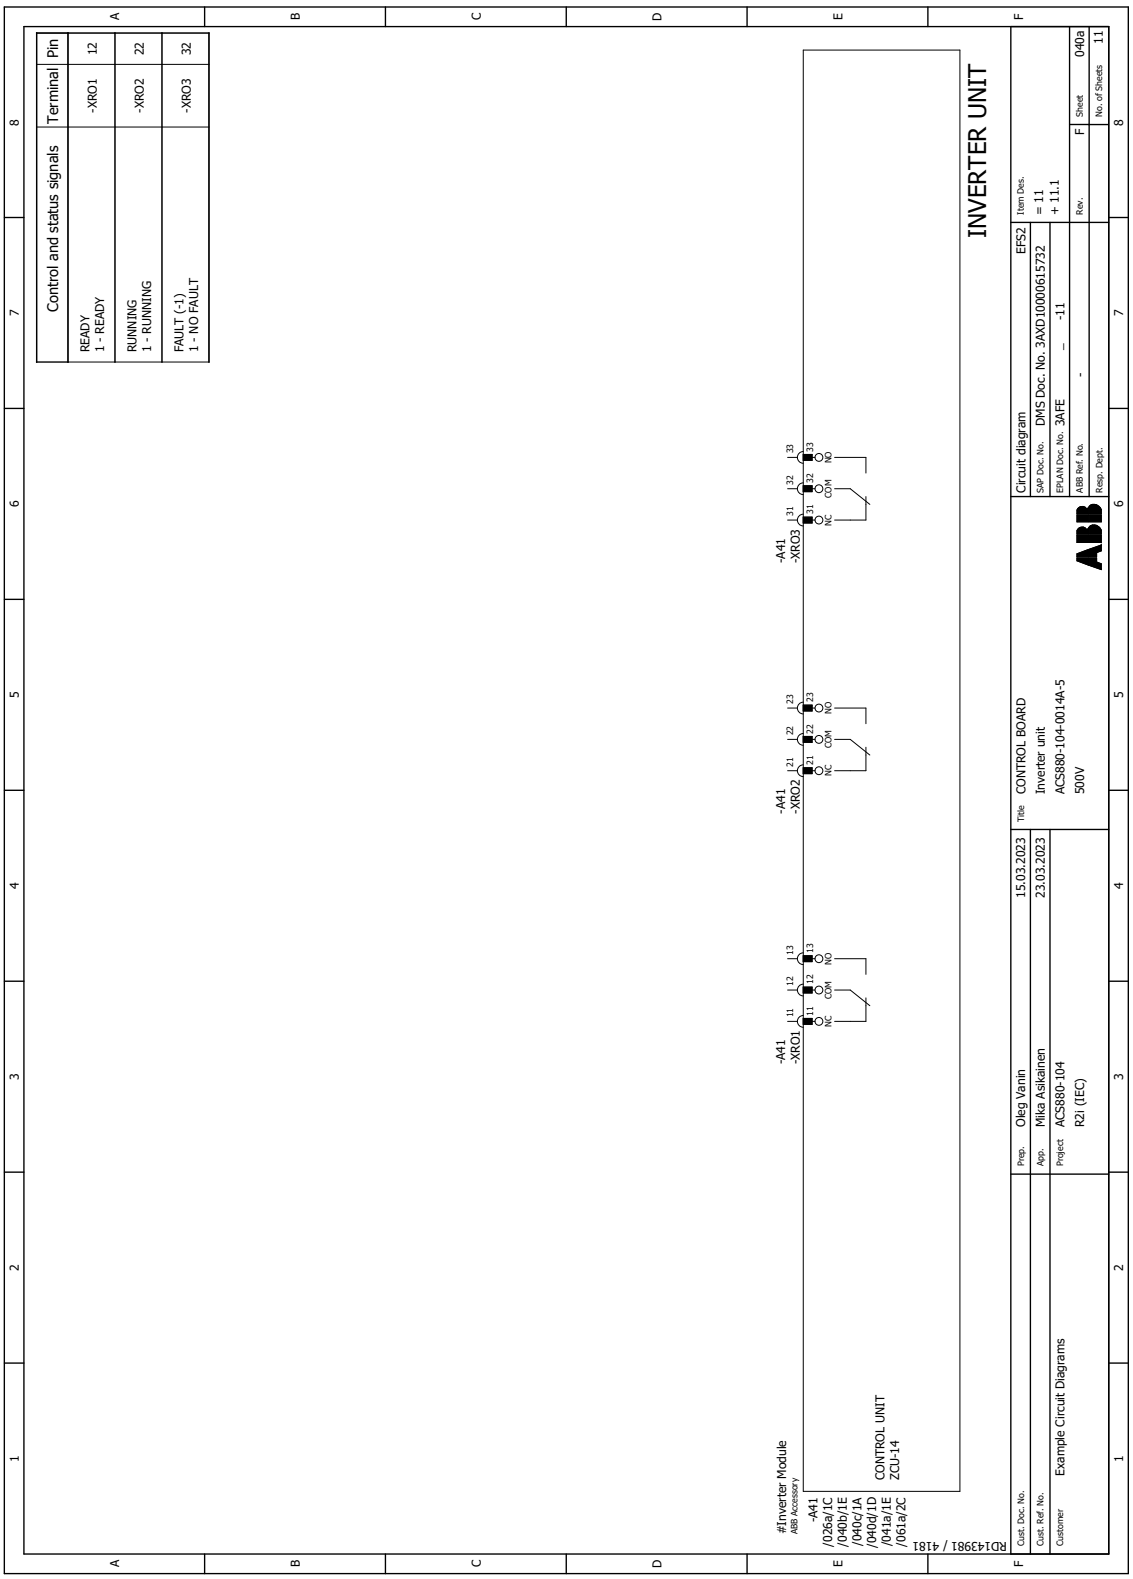


Frames R1i...R5i – Sheet 040b

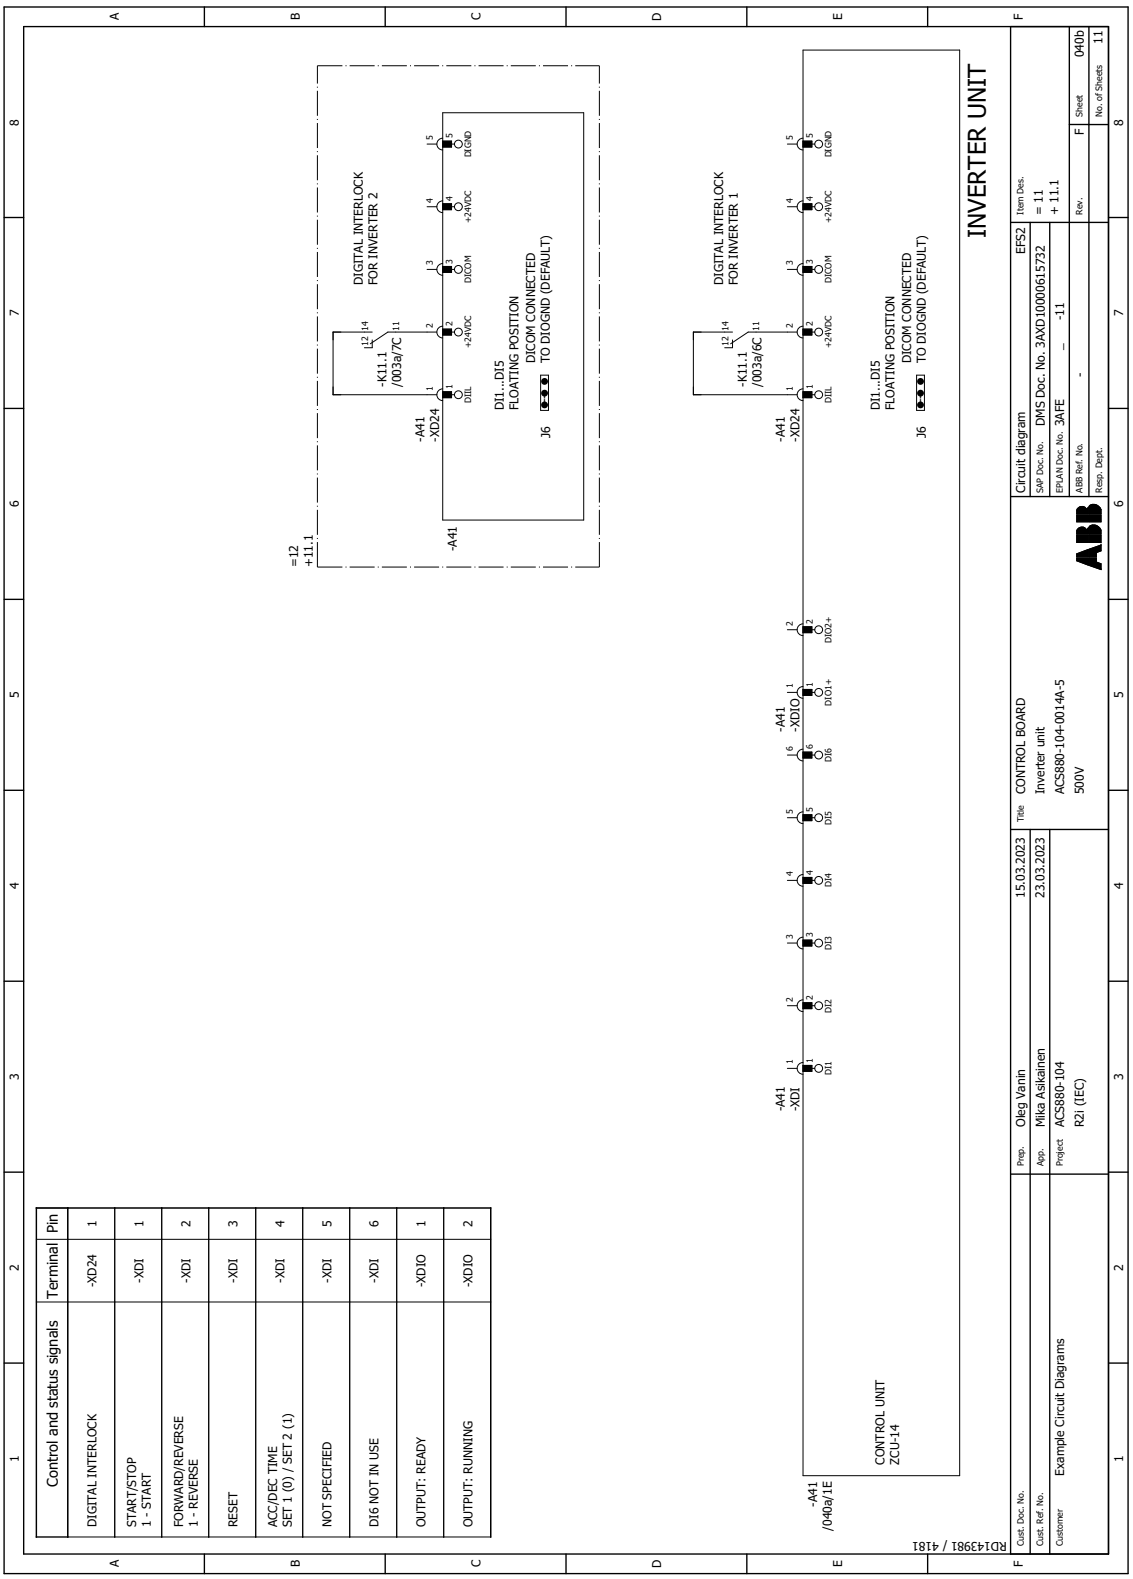


Frames R1i...R5i – Sheet 040c

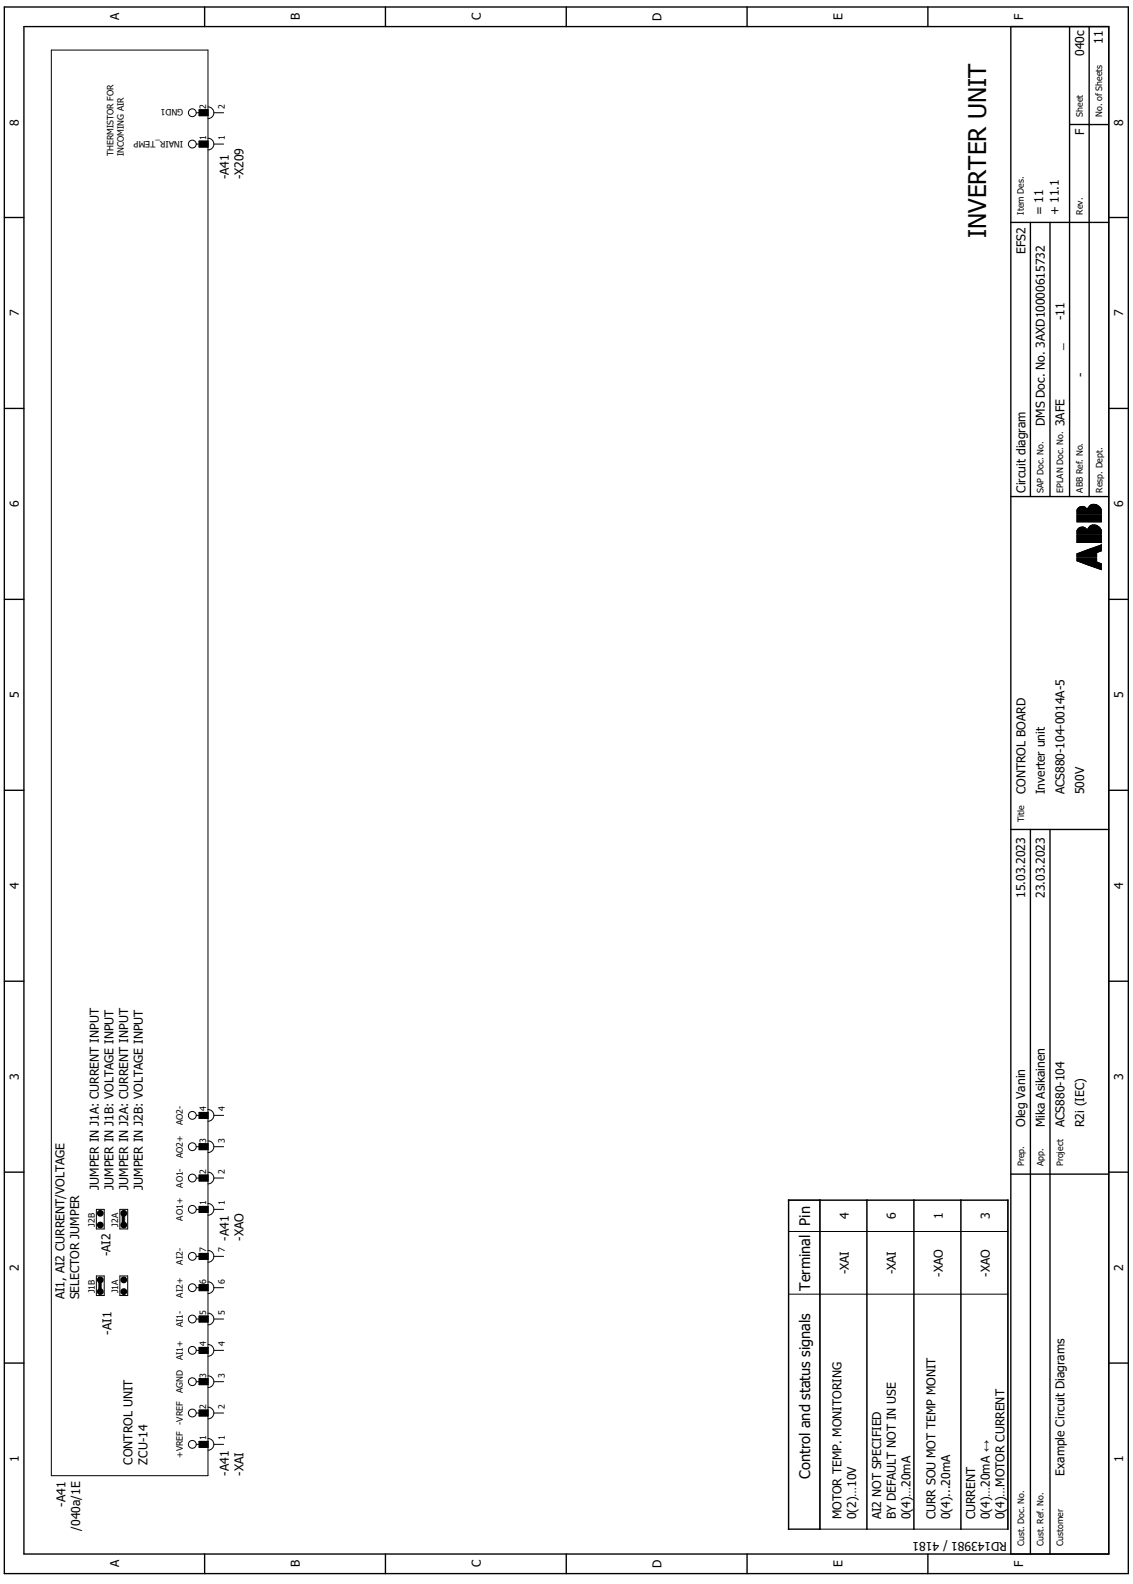


Frames R1i...R5i – Sheet 040d

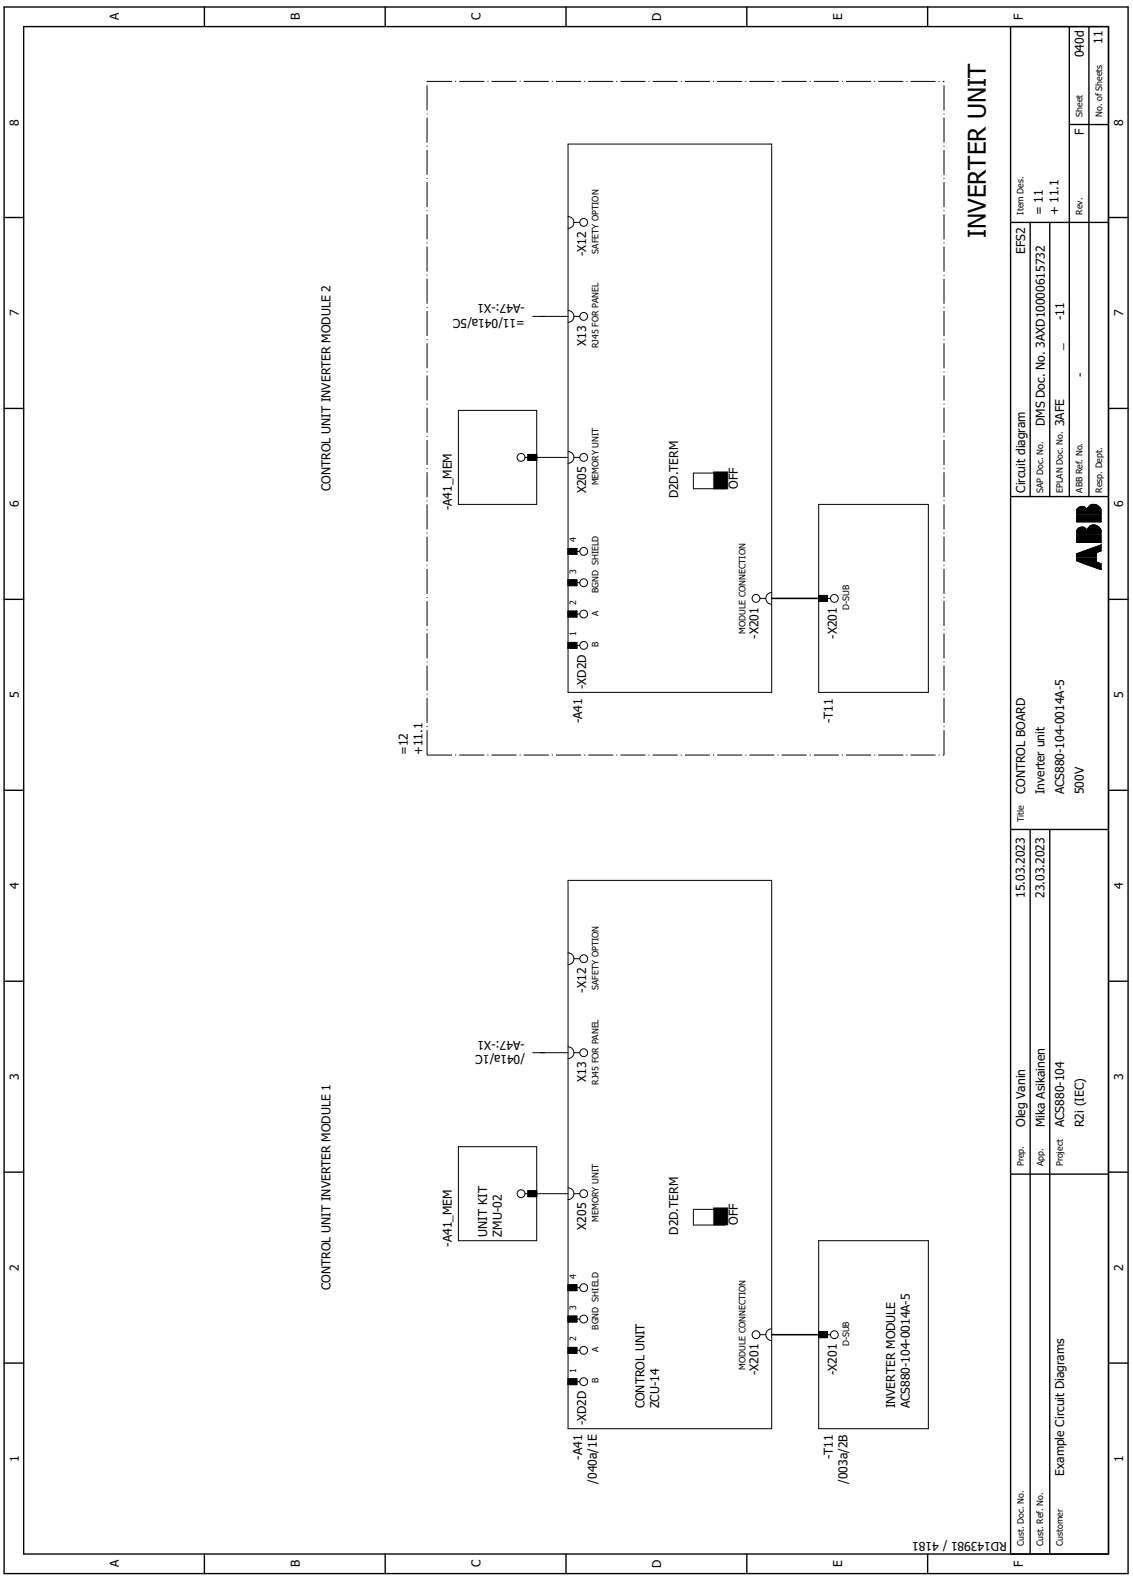

Frames R1i...R5i – Sheet 041a

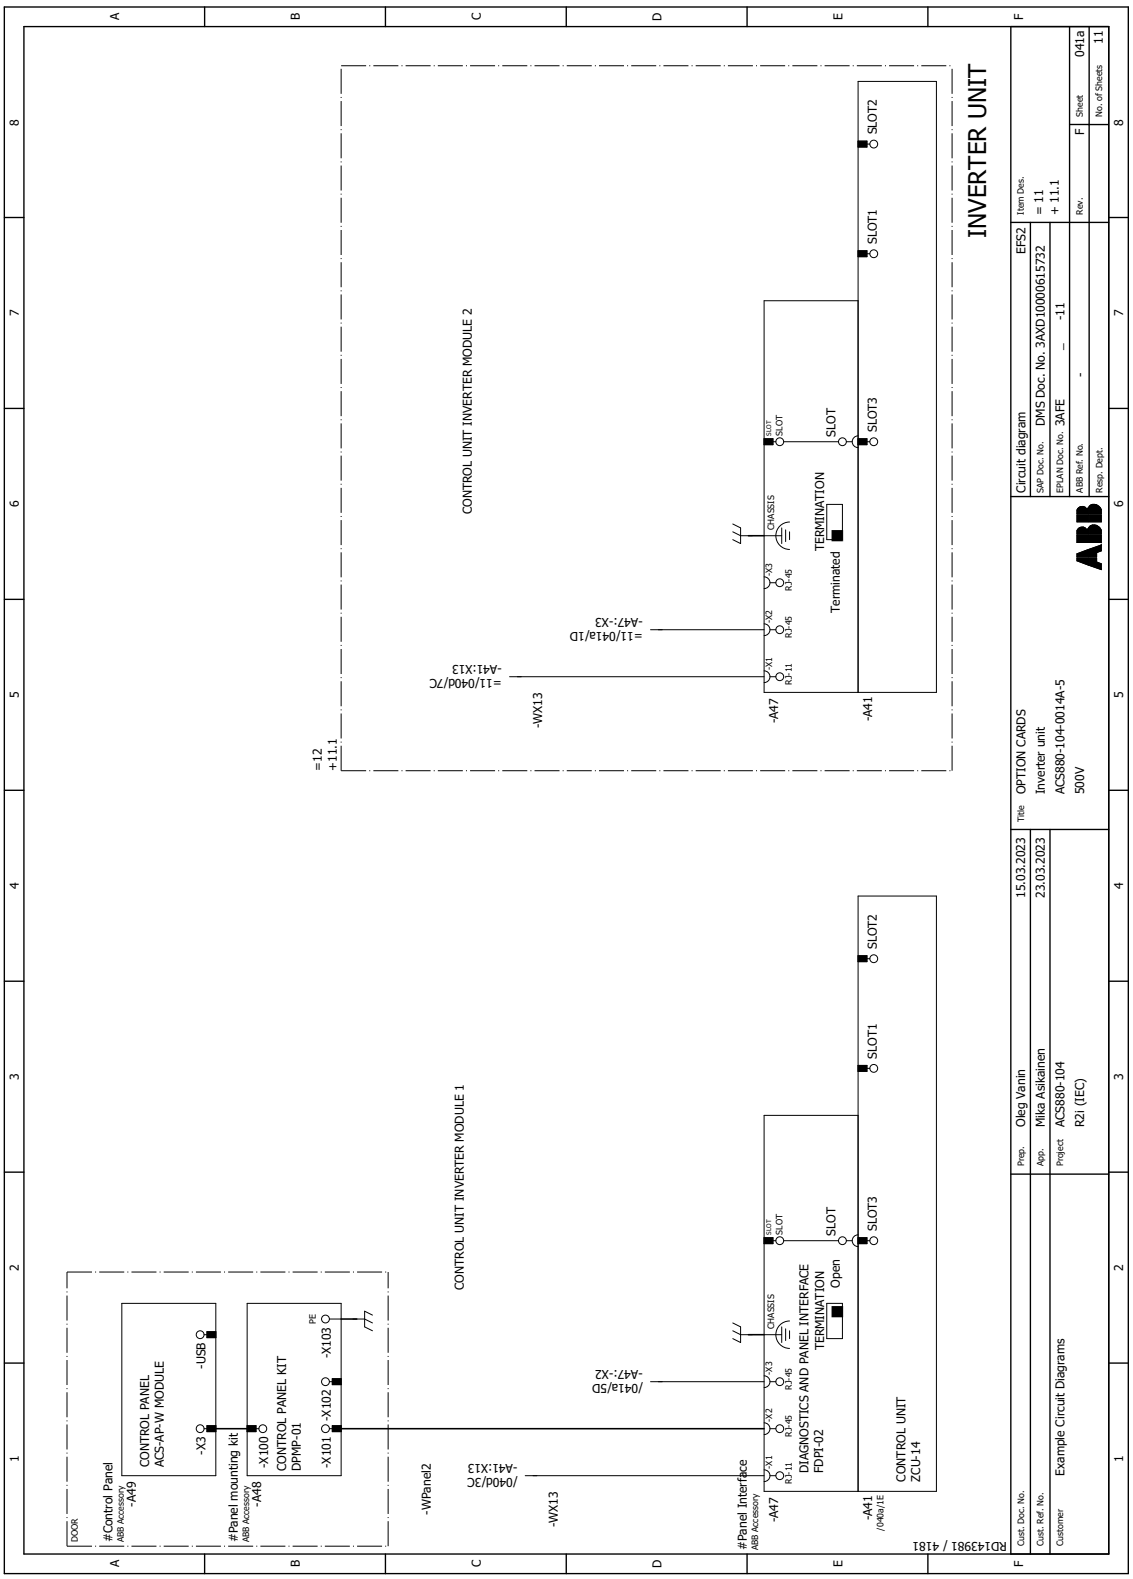


Frames R1i...R5i – Sheet 061a

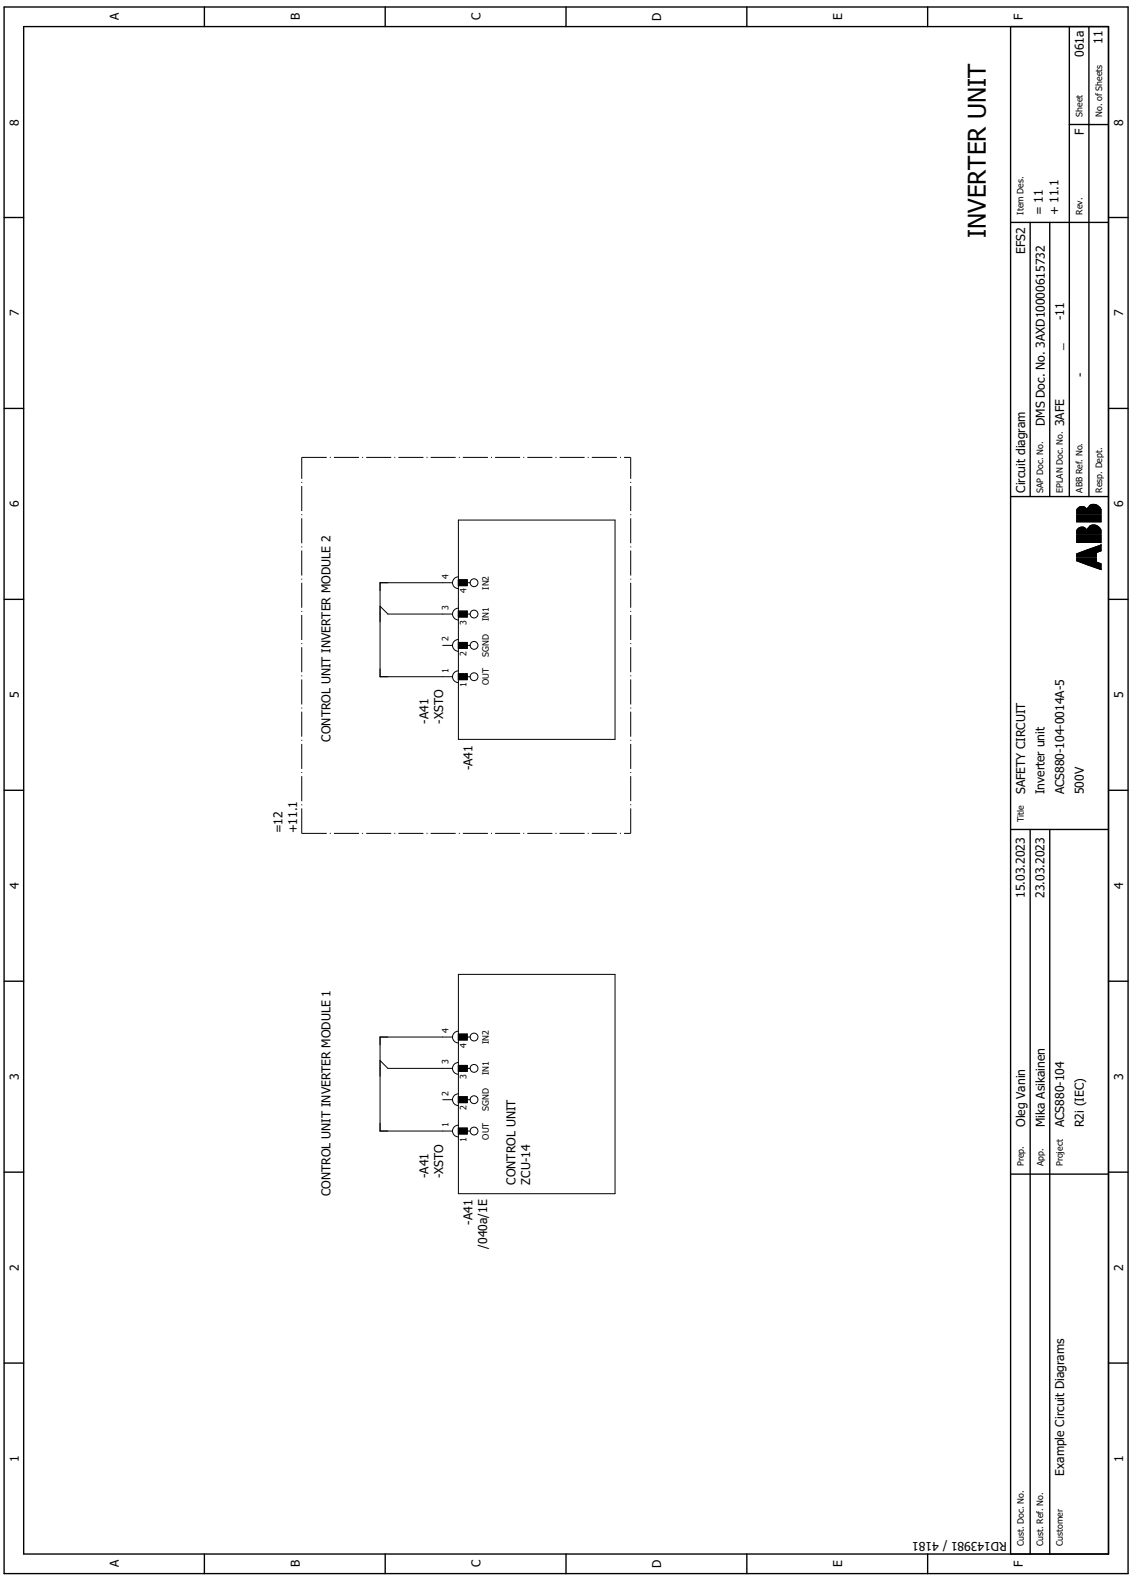


Frame R5i – Sheet 000A




Frame R5i – Sheet 000C

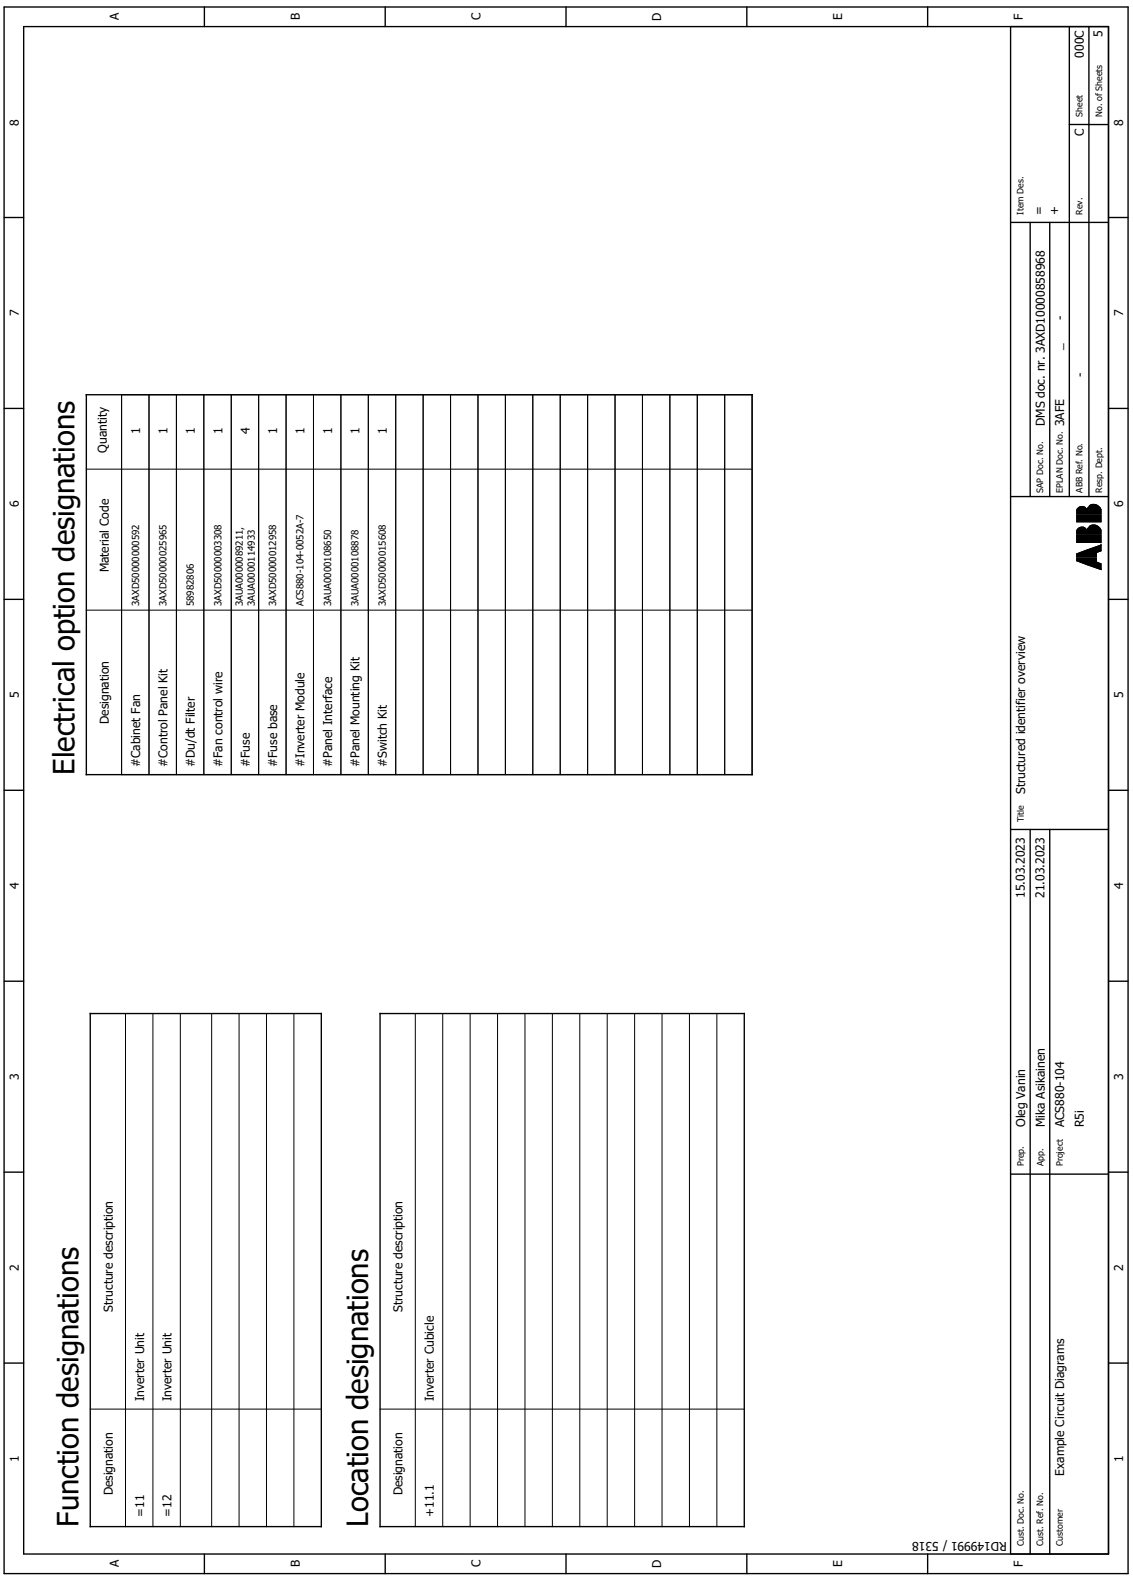


Frame R5i – Sheet 003a

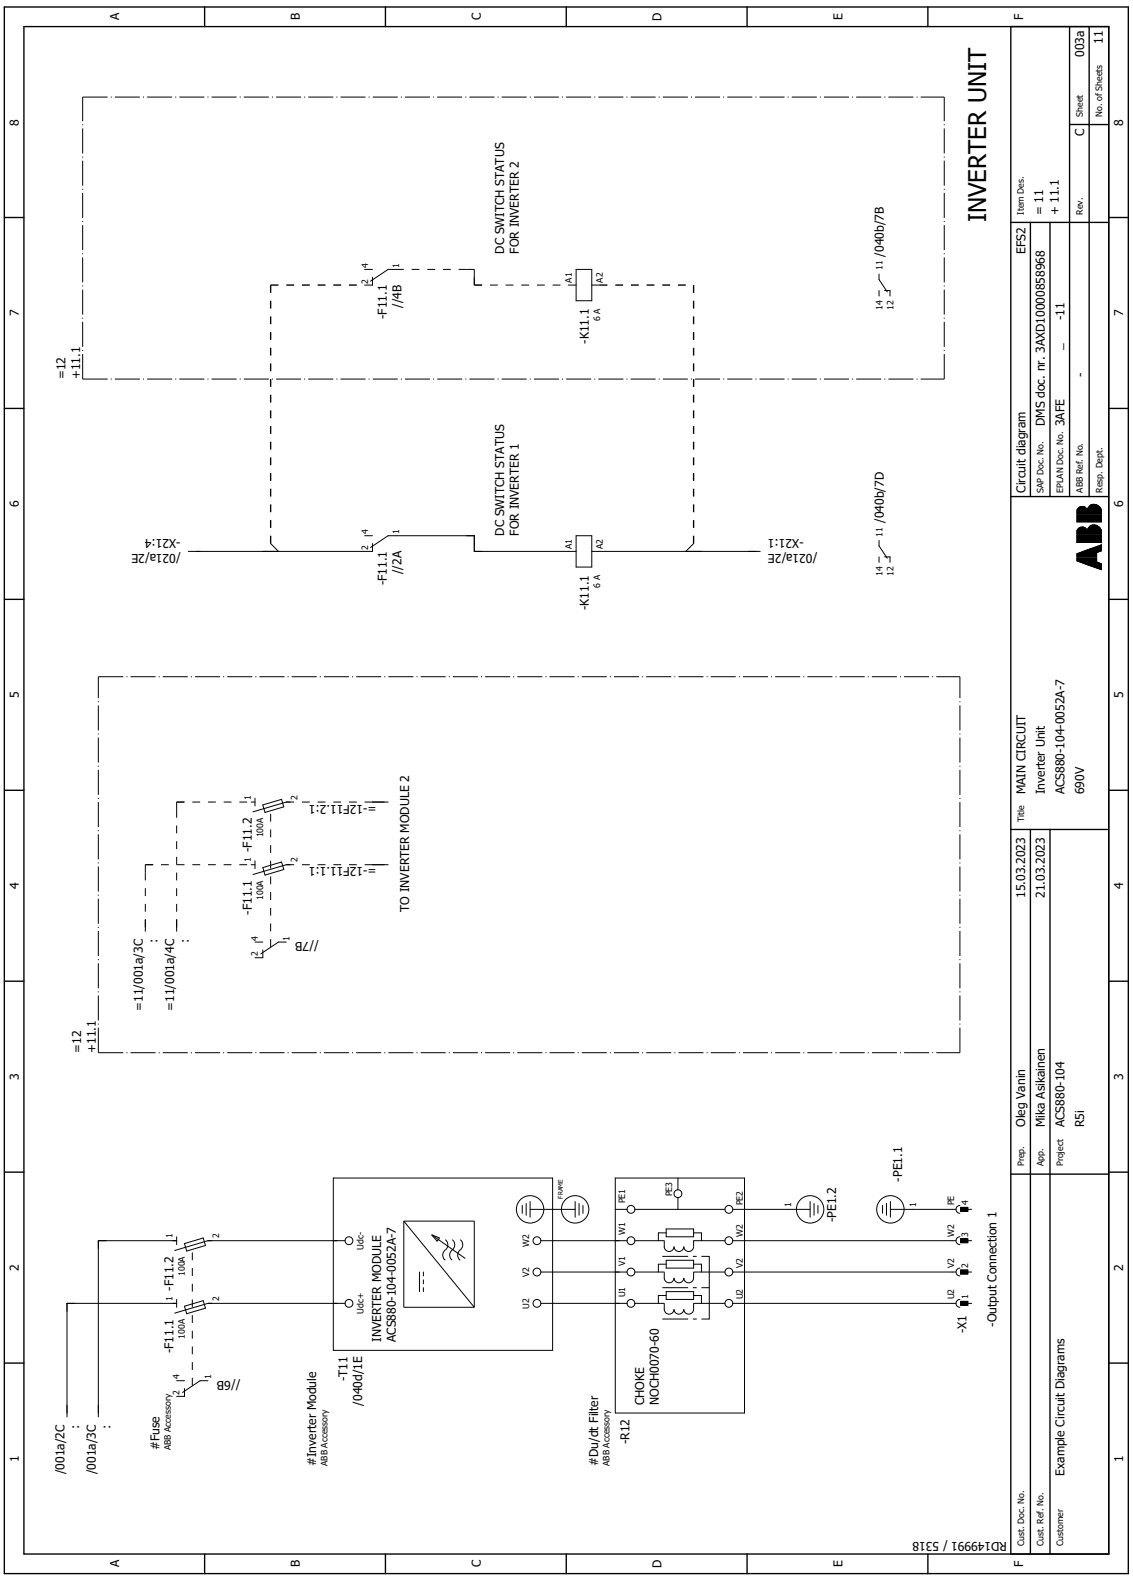


Frame R5i – Sheet 020a

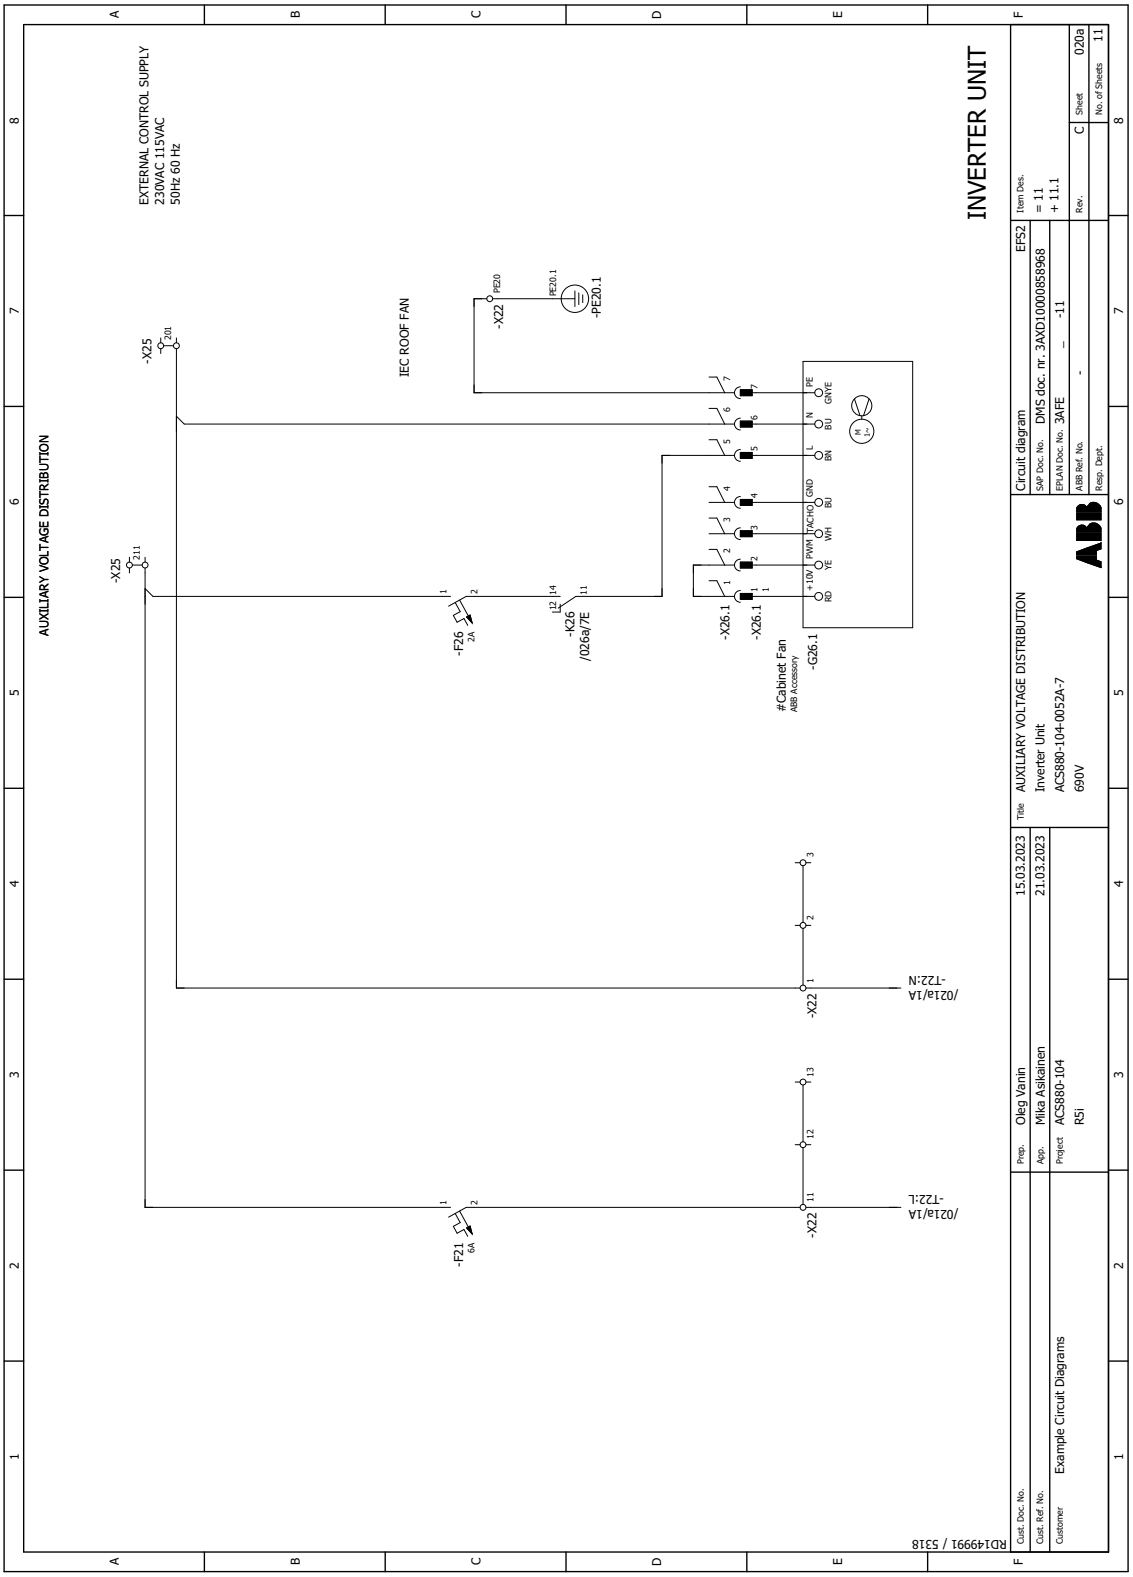


Frame R6i – Sheet 000A

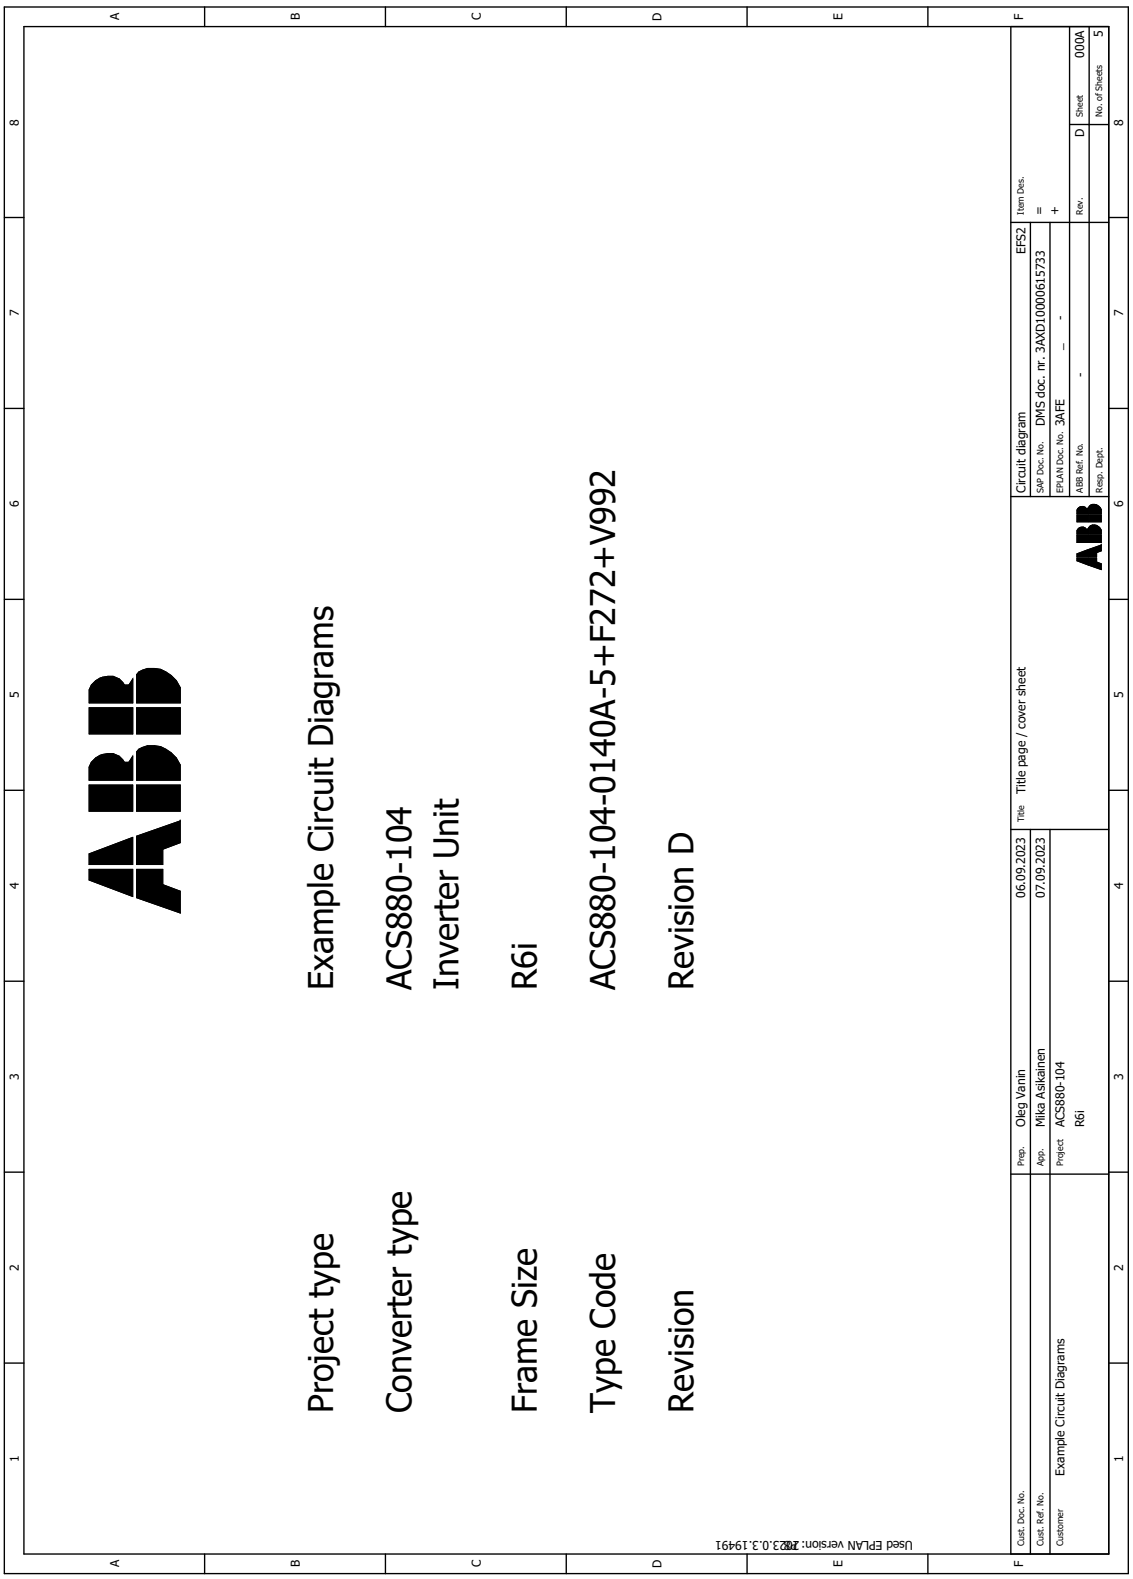


Frame R6i – Sheet 000B

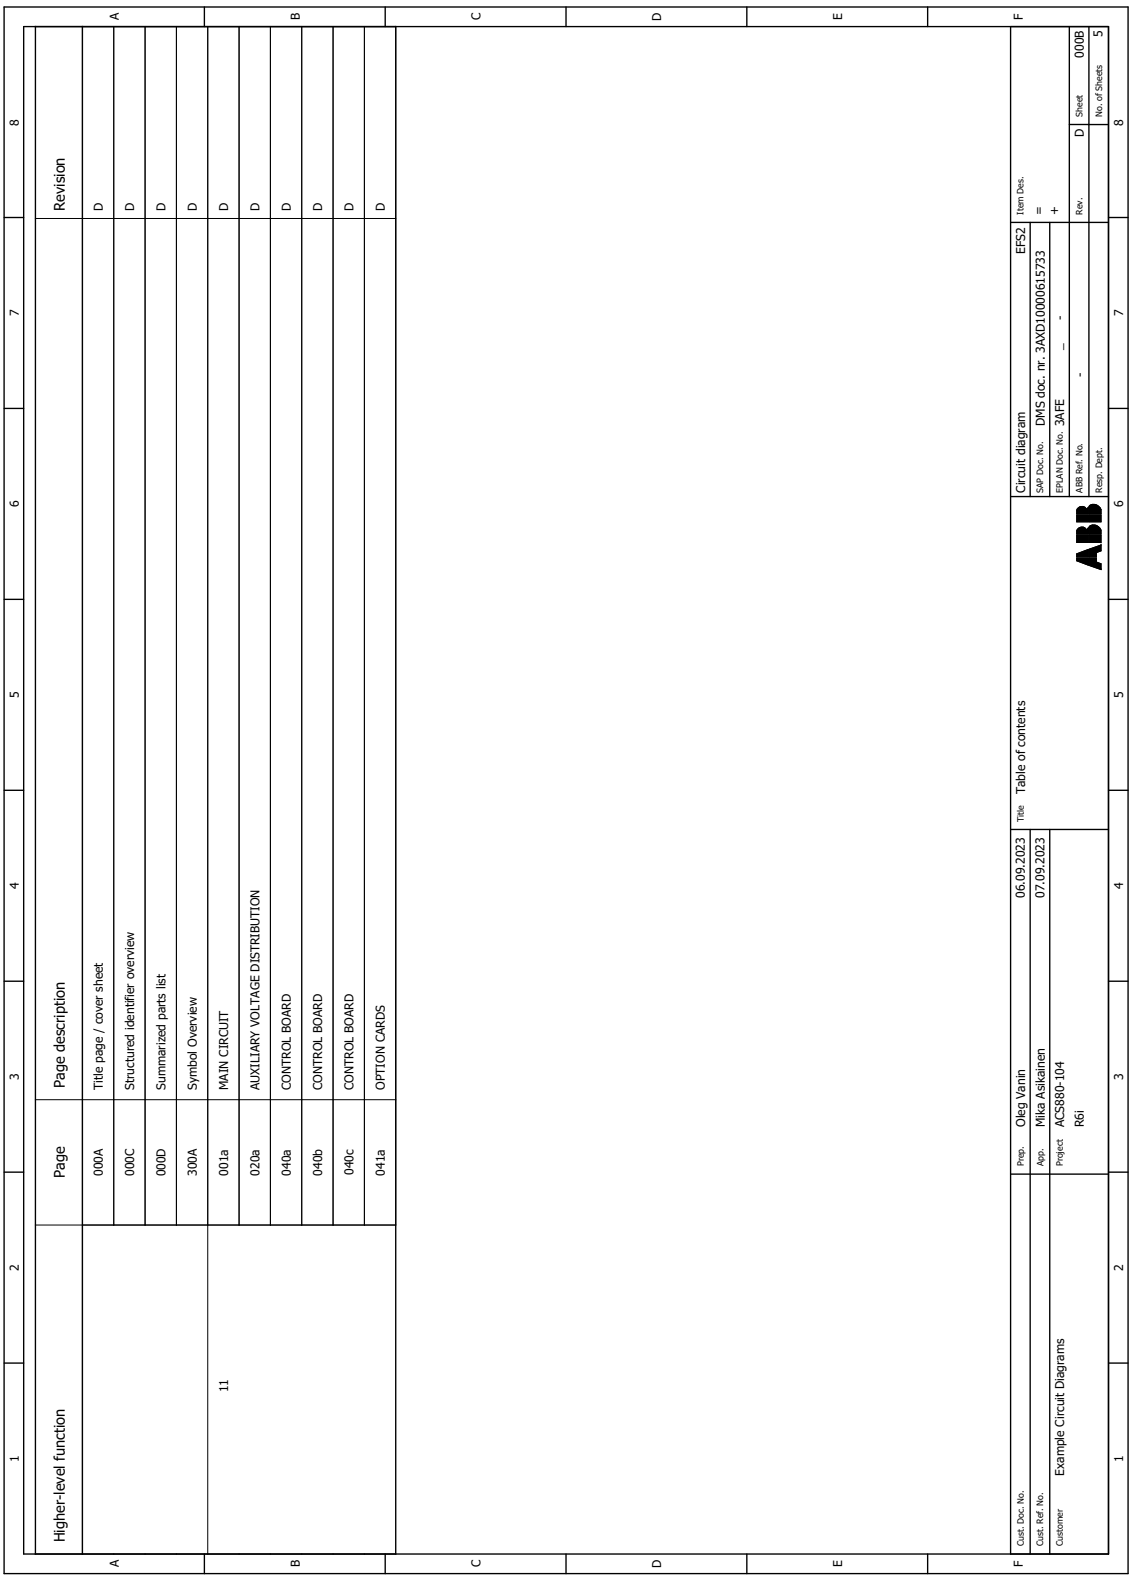


Frame R6i – Sheet 000C

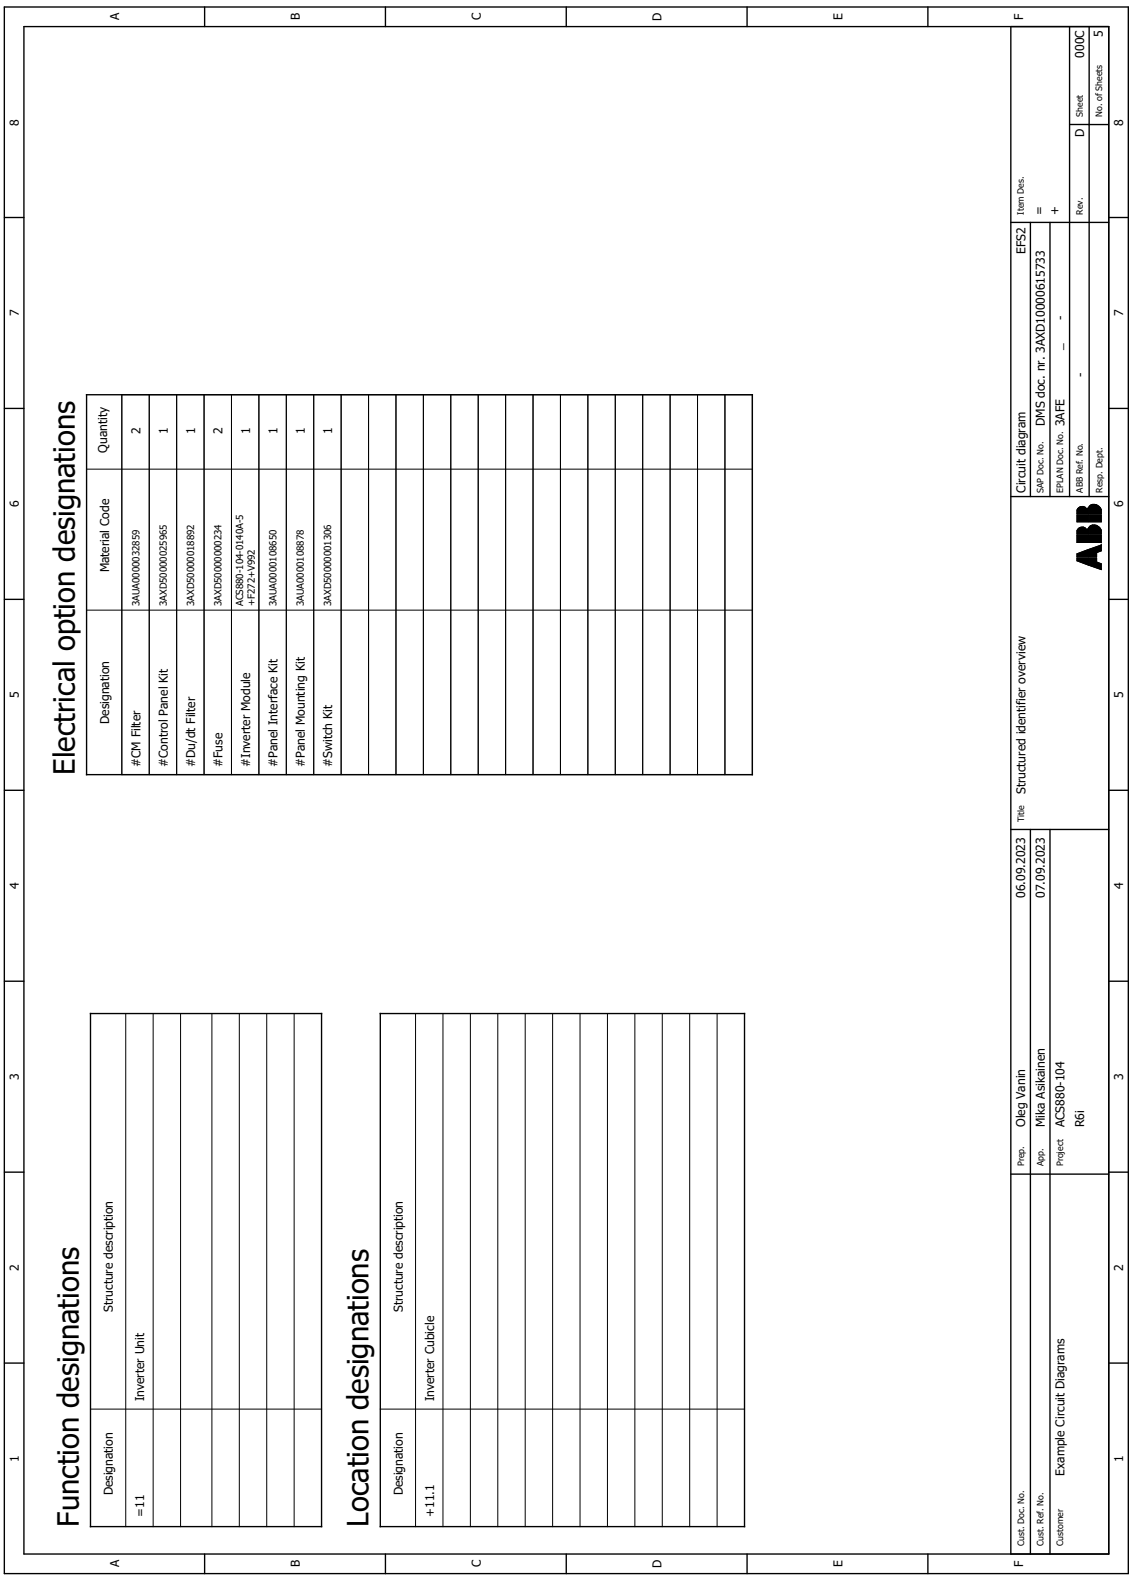


Frames R6i and R7i – Sheet 300A

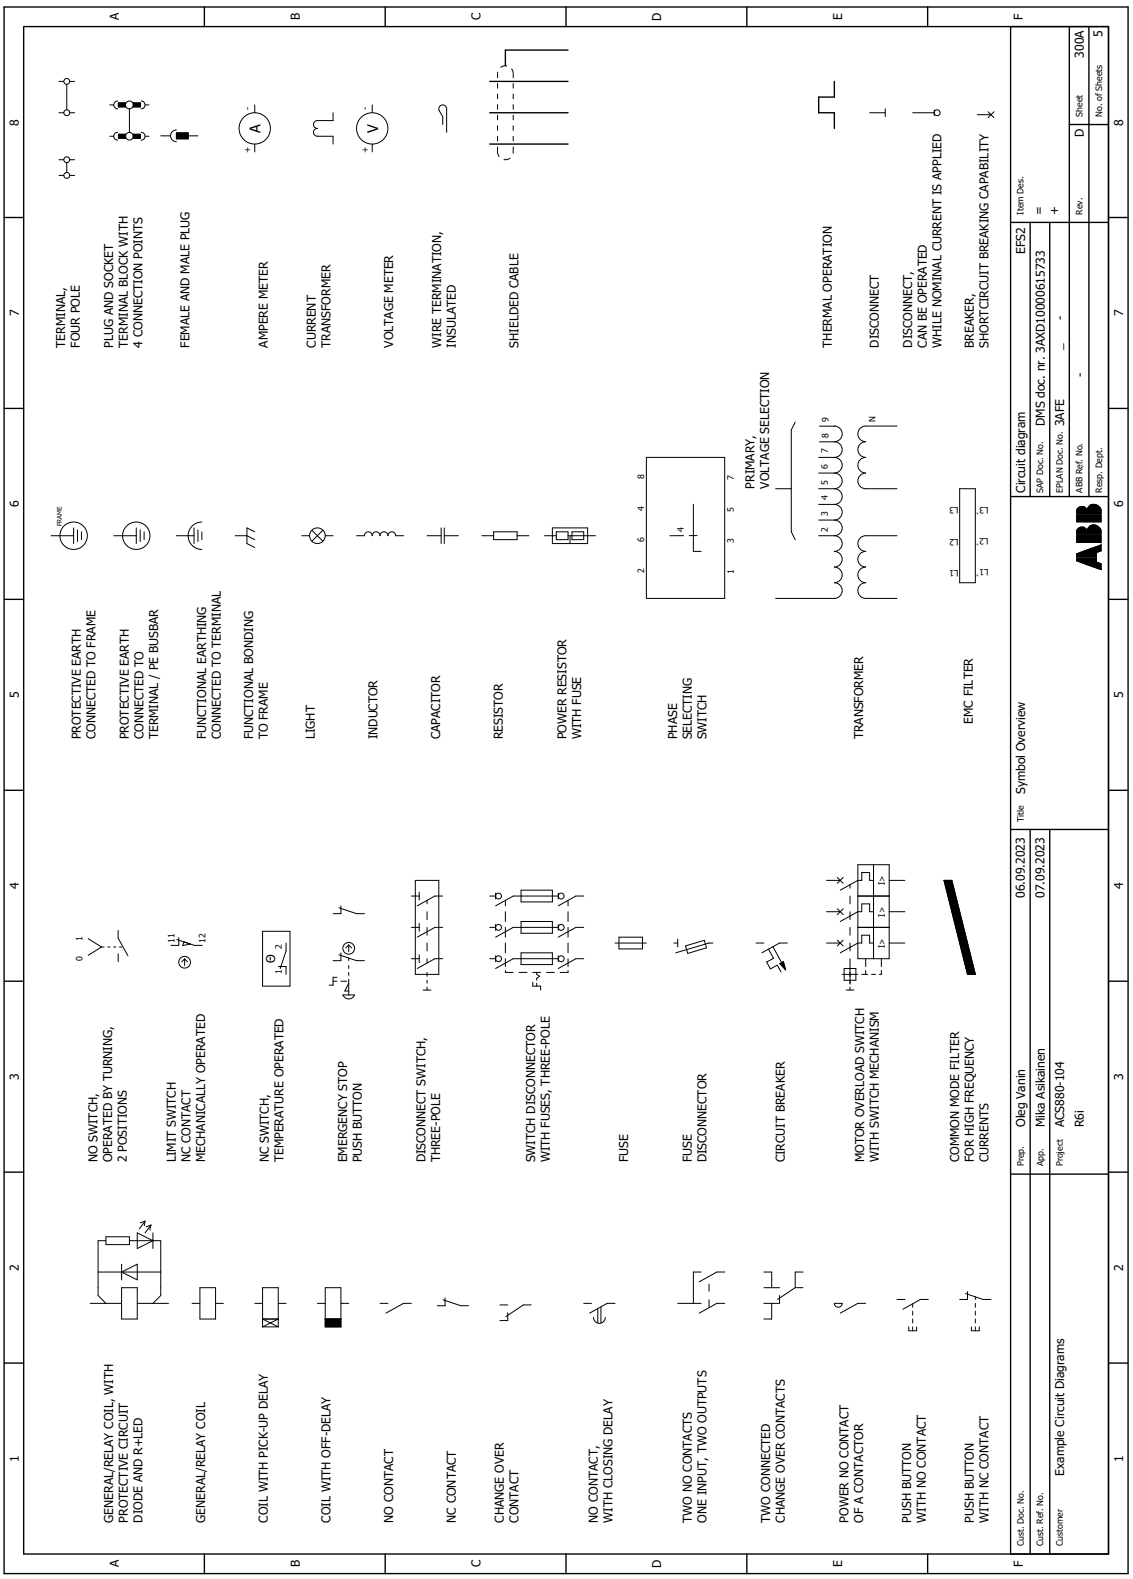


Frame R6i – Sheet 001a

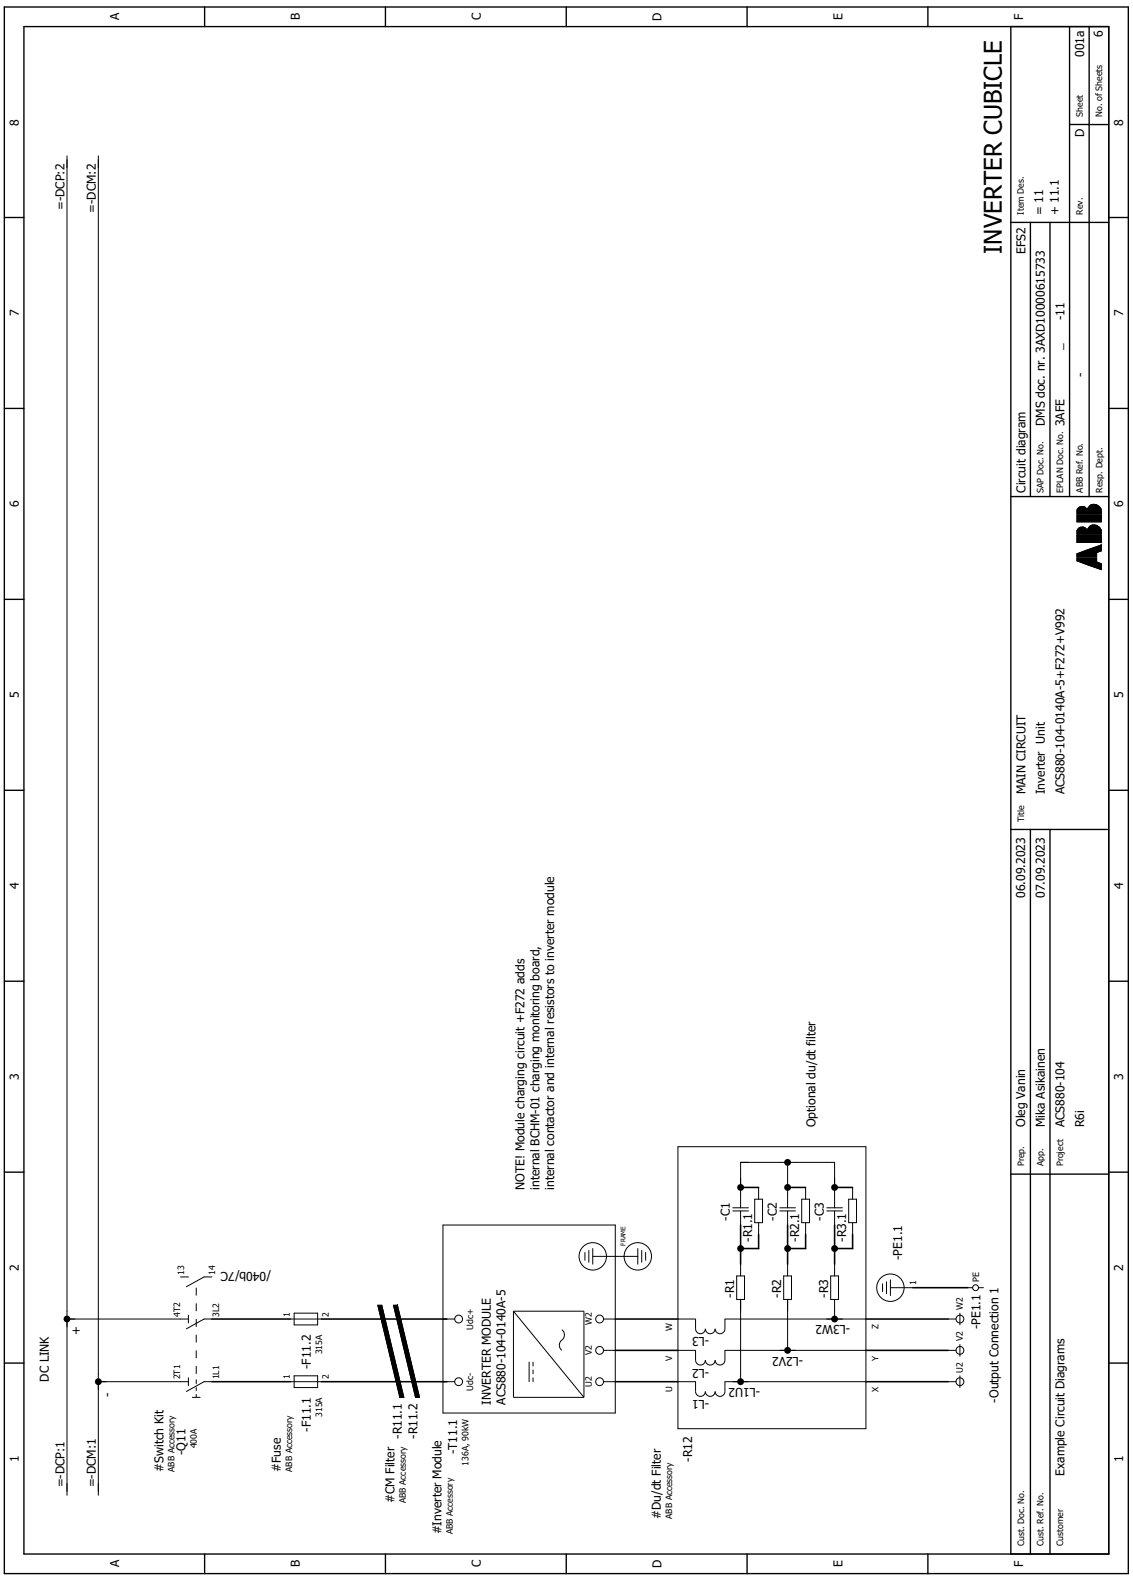


Frames R6i and R7i – Sheet 020a

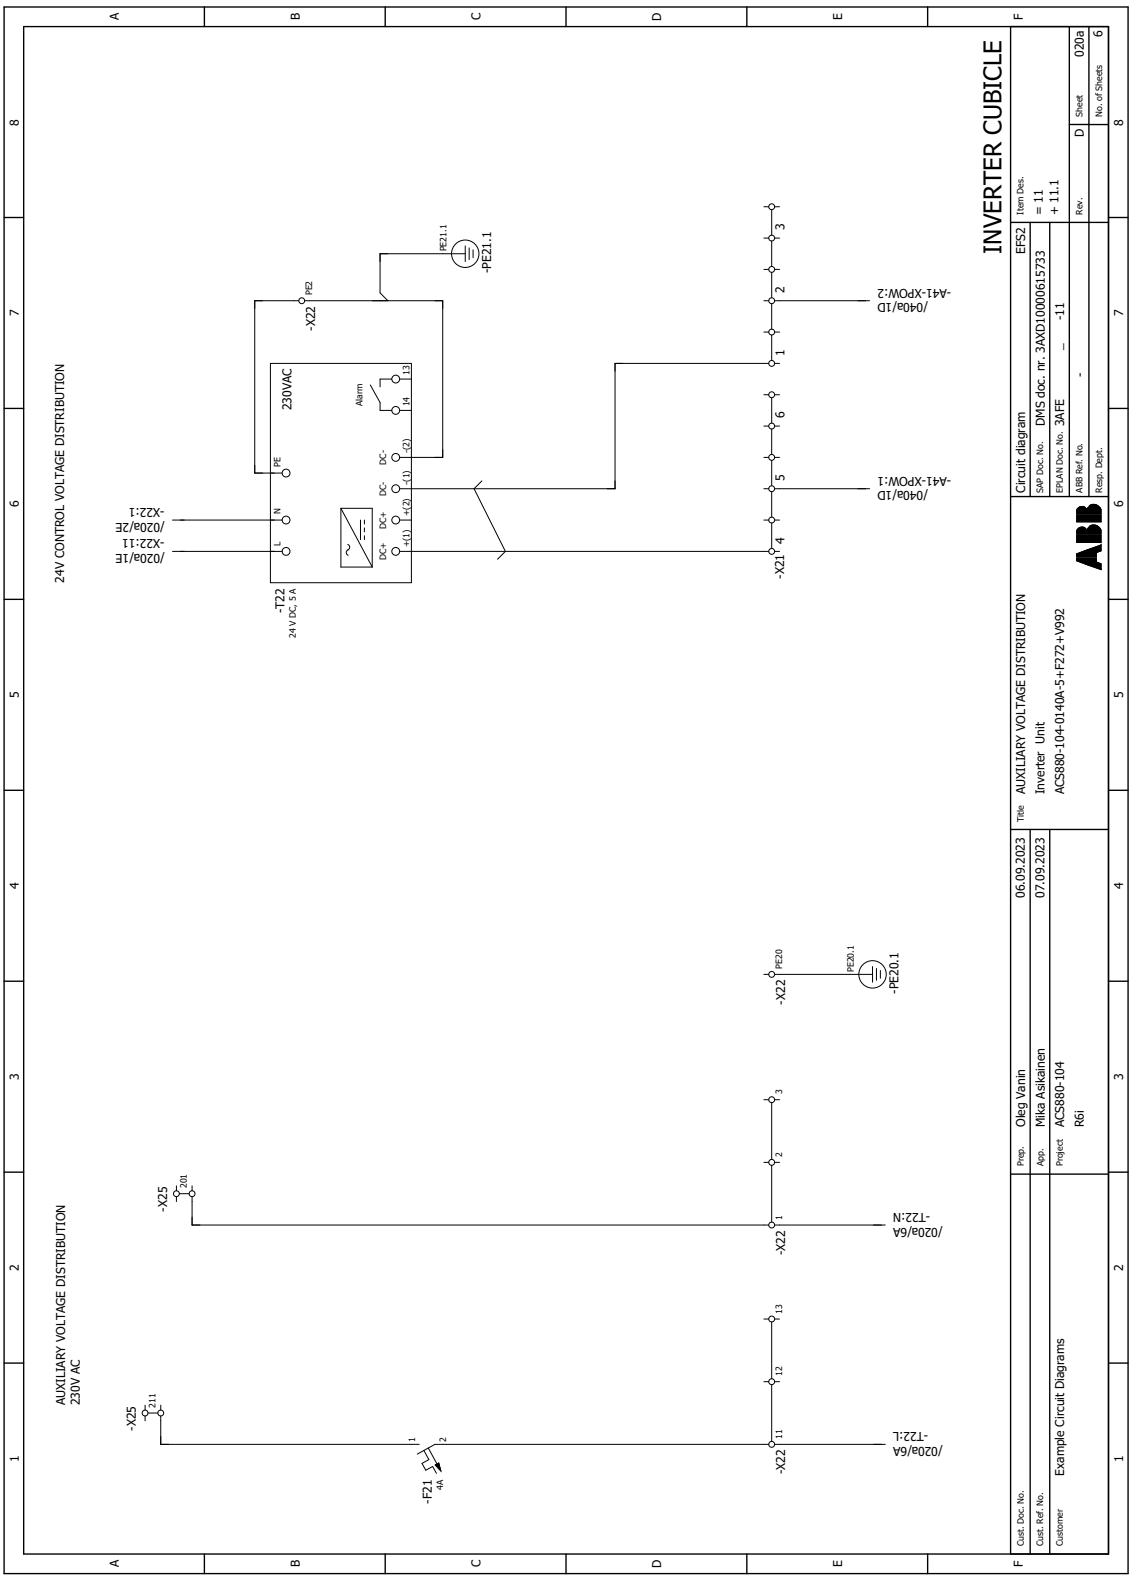


Frames R6i and R7i – Sheet 040a

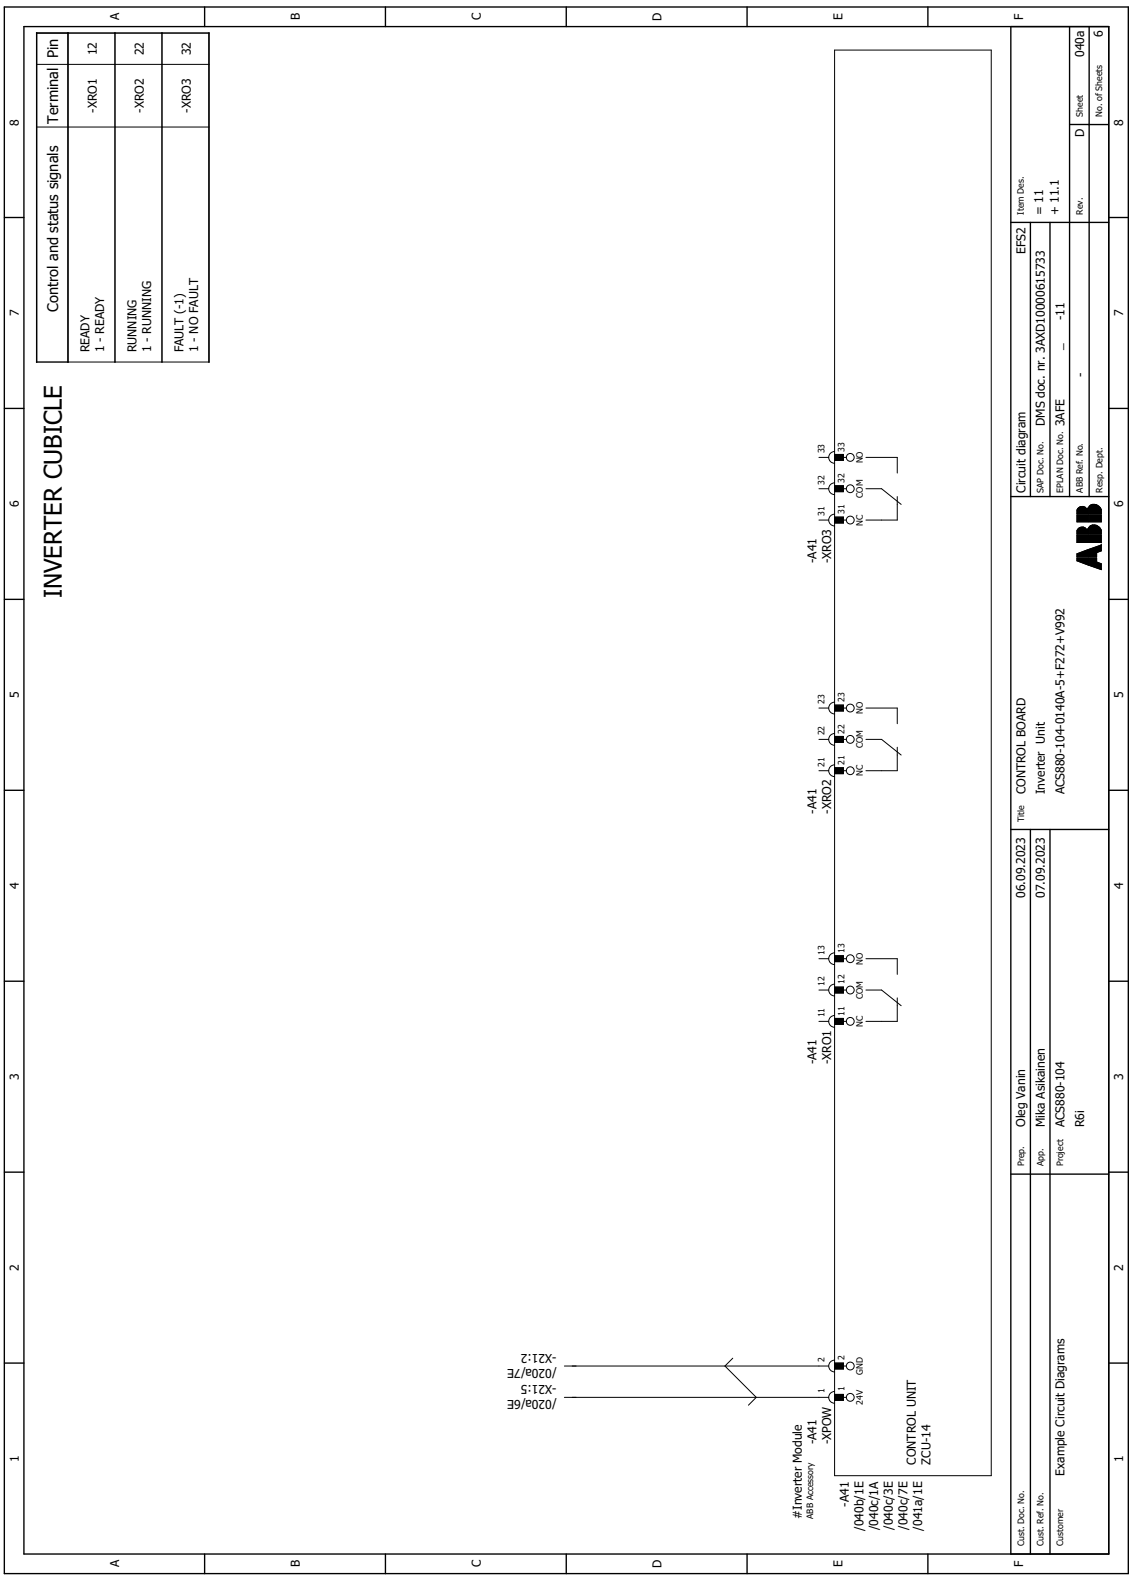


Frames R6i and R7i – Sheet 040b

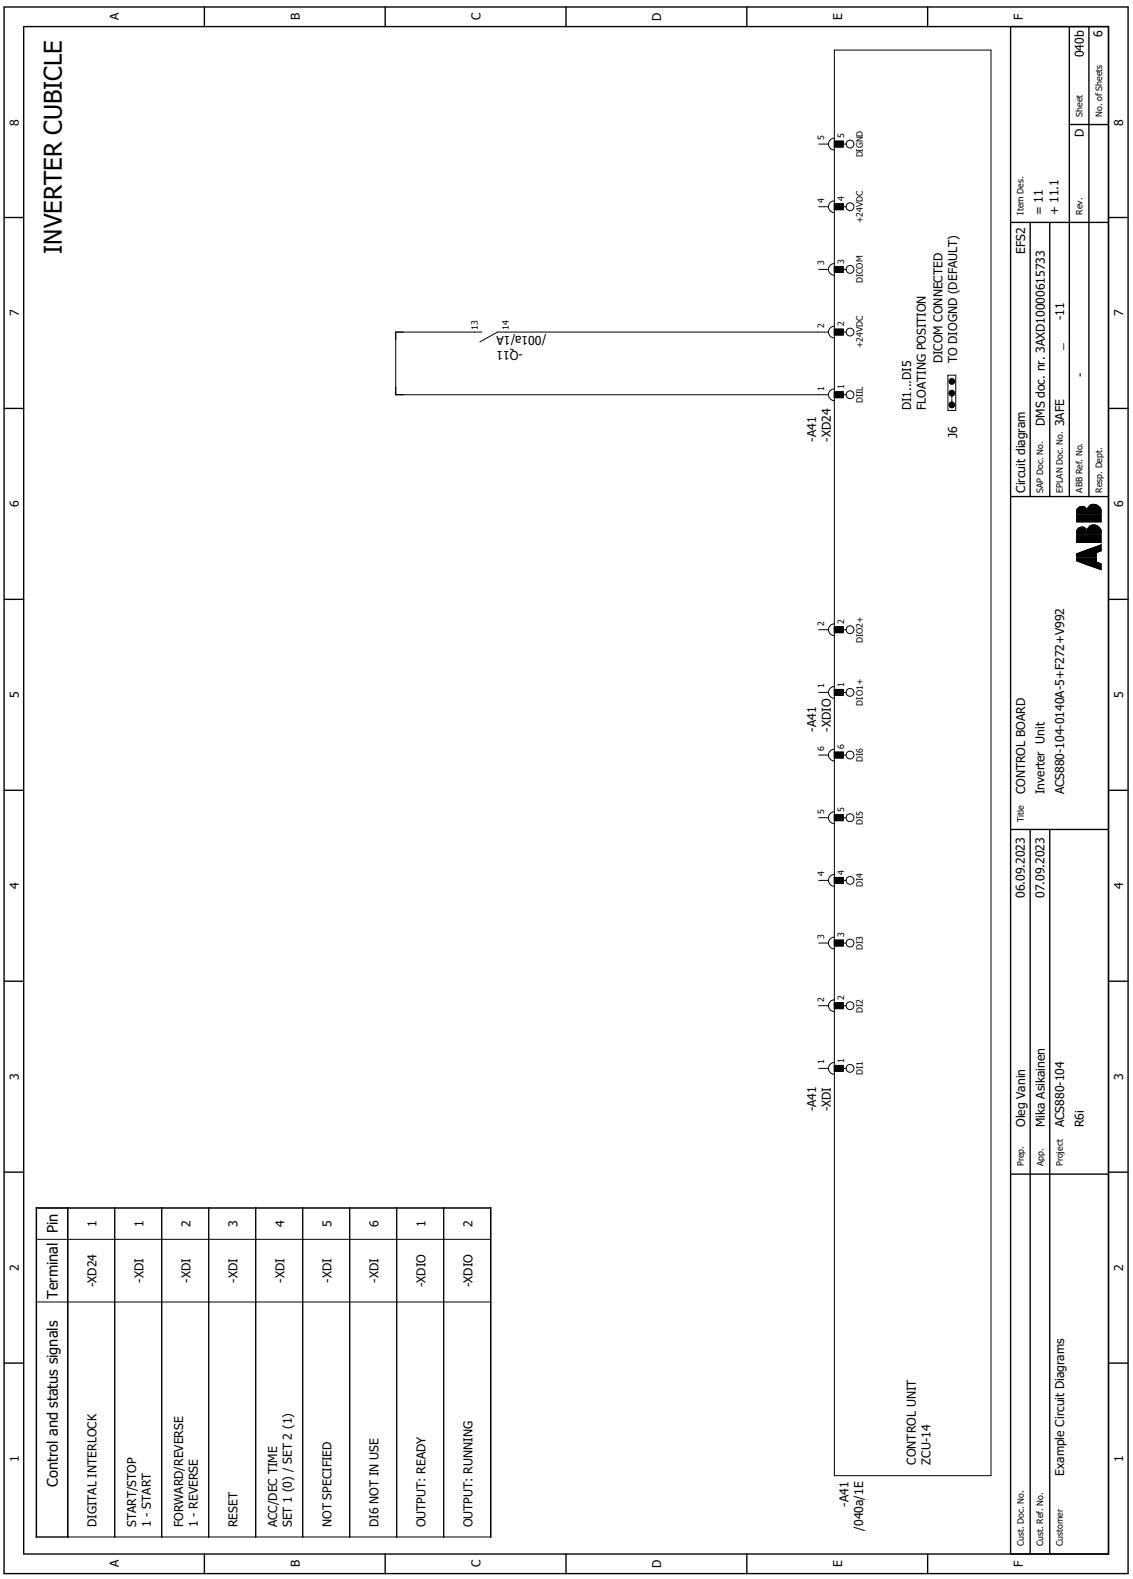


Frames R6i and R7i – Sheet 040c

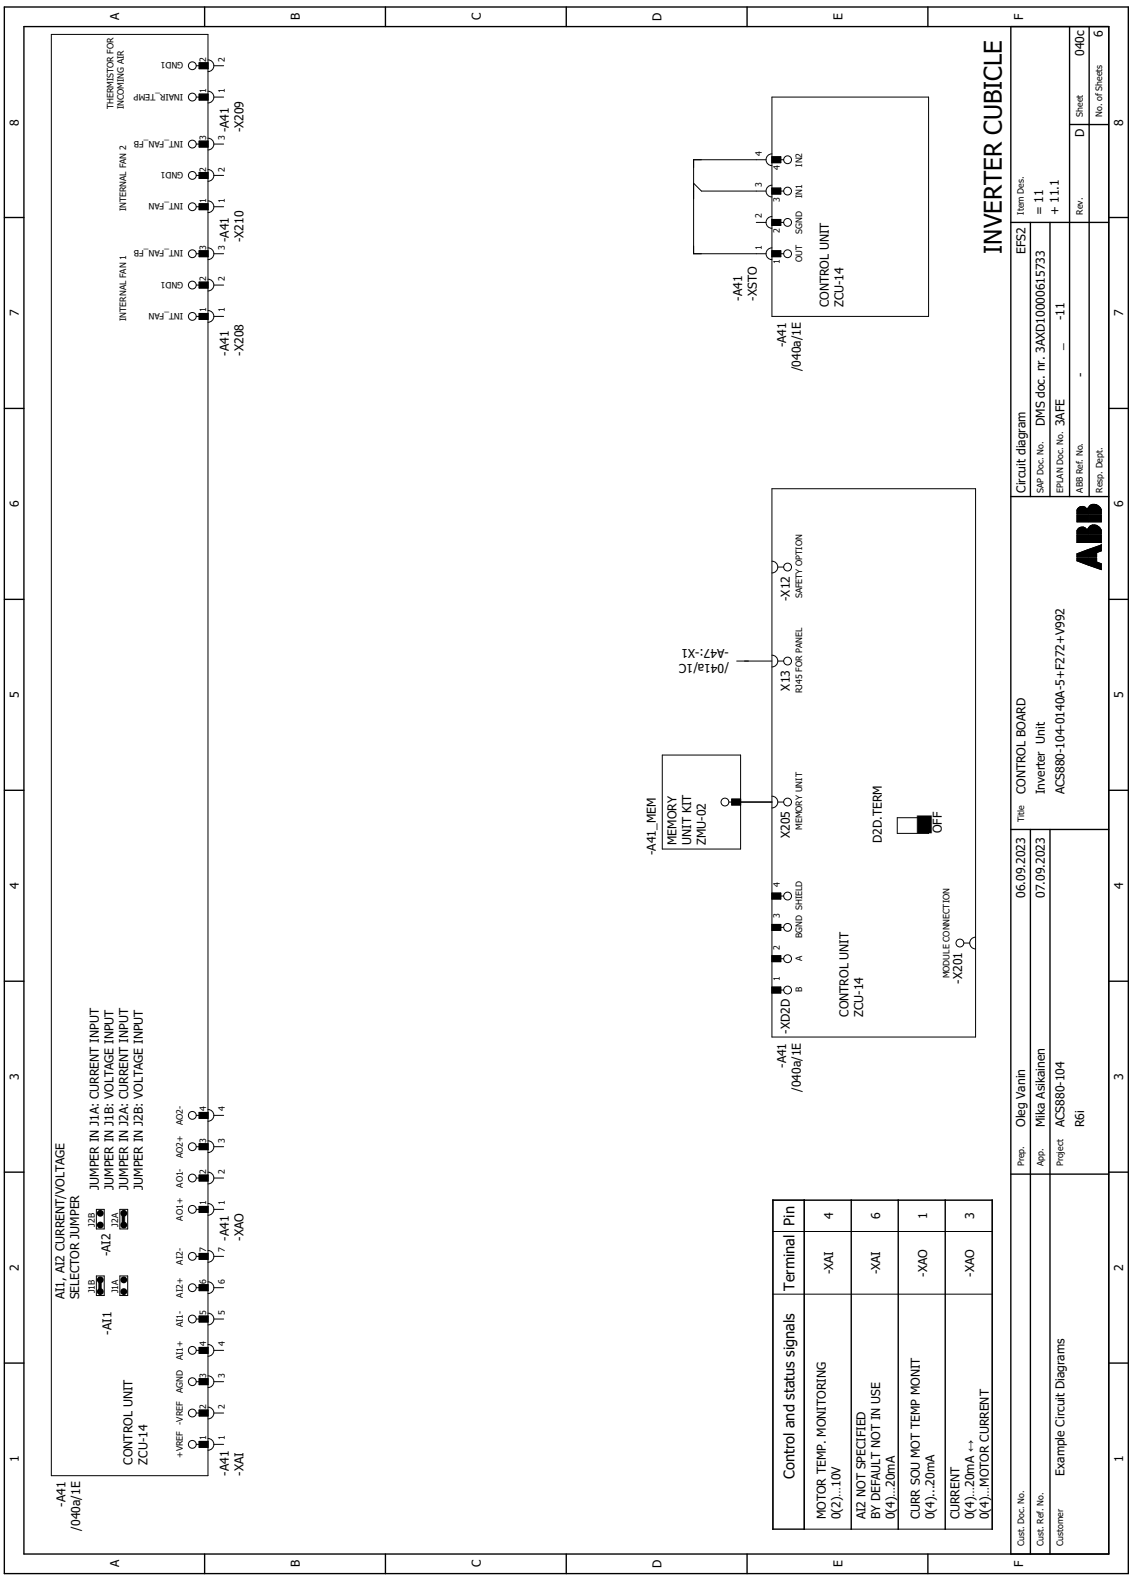


Frames R6i and R7i – Sheet 041a

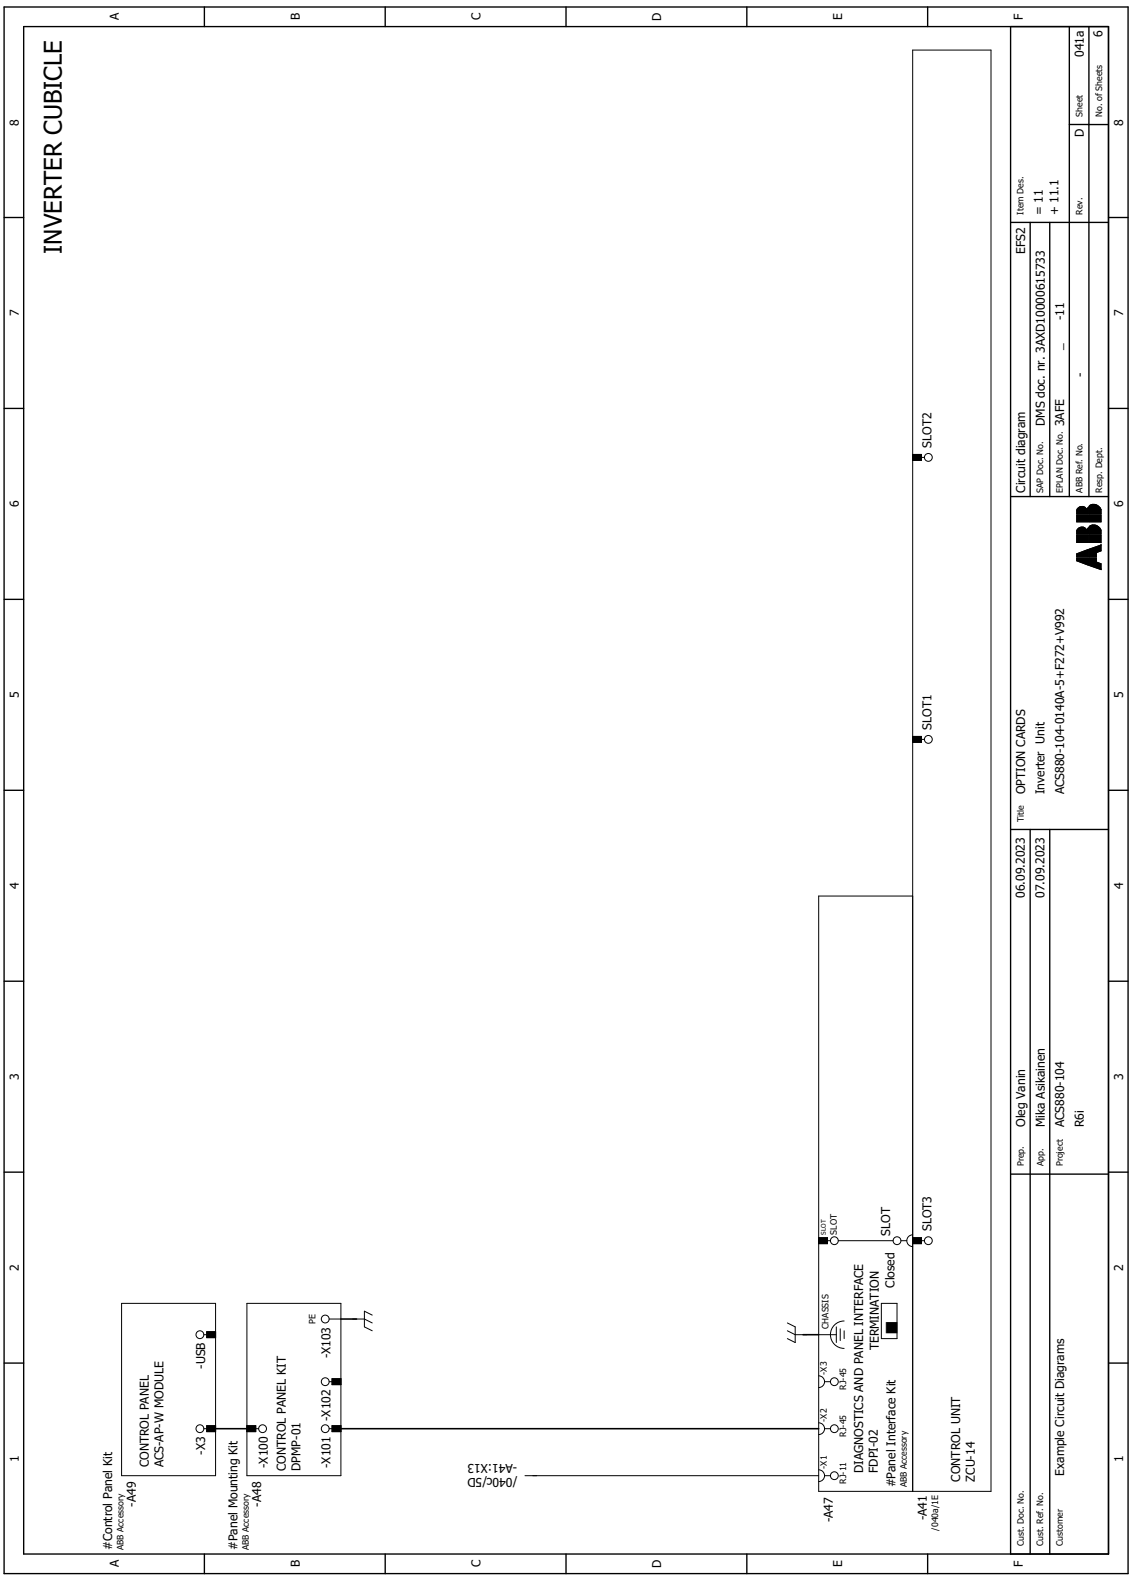


Frame R7i – Sheet 000A

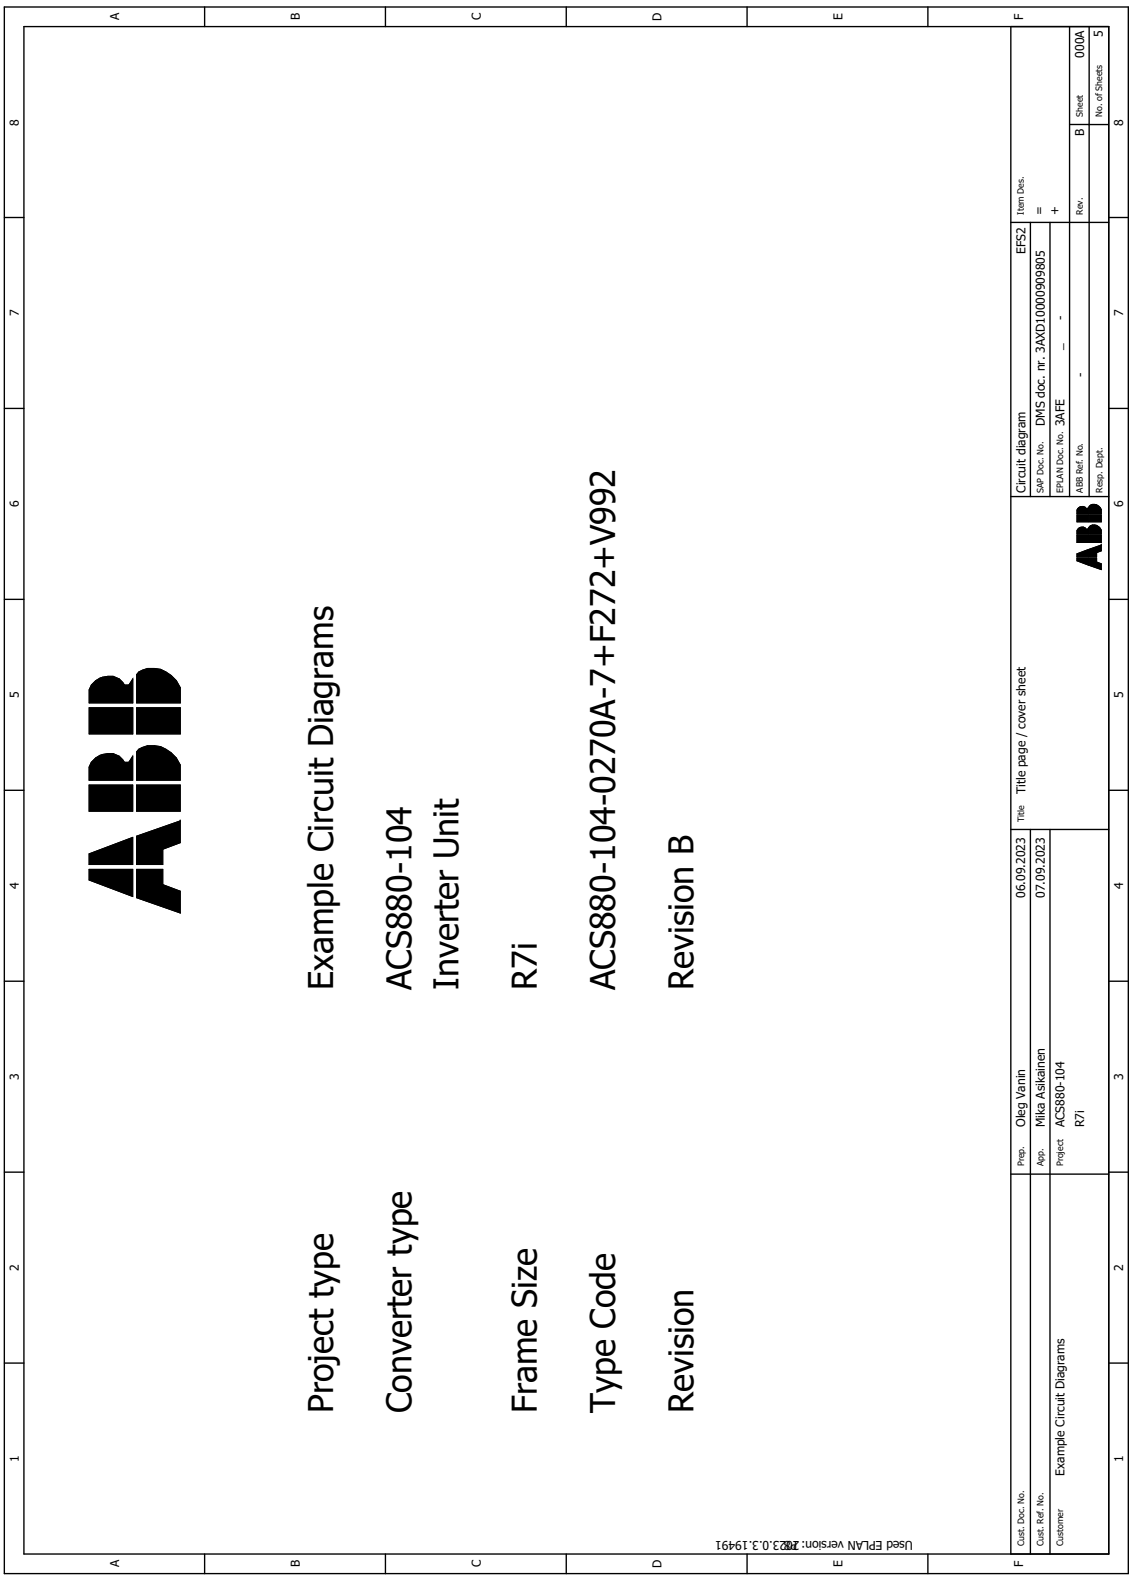

Frame R7i – Sheet 000B

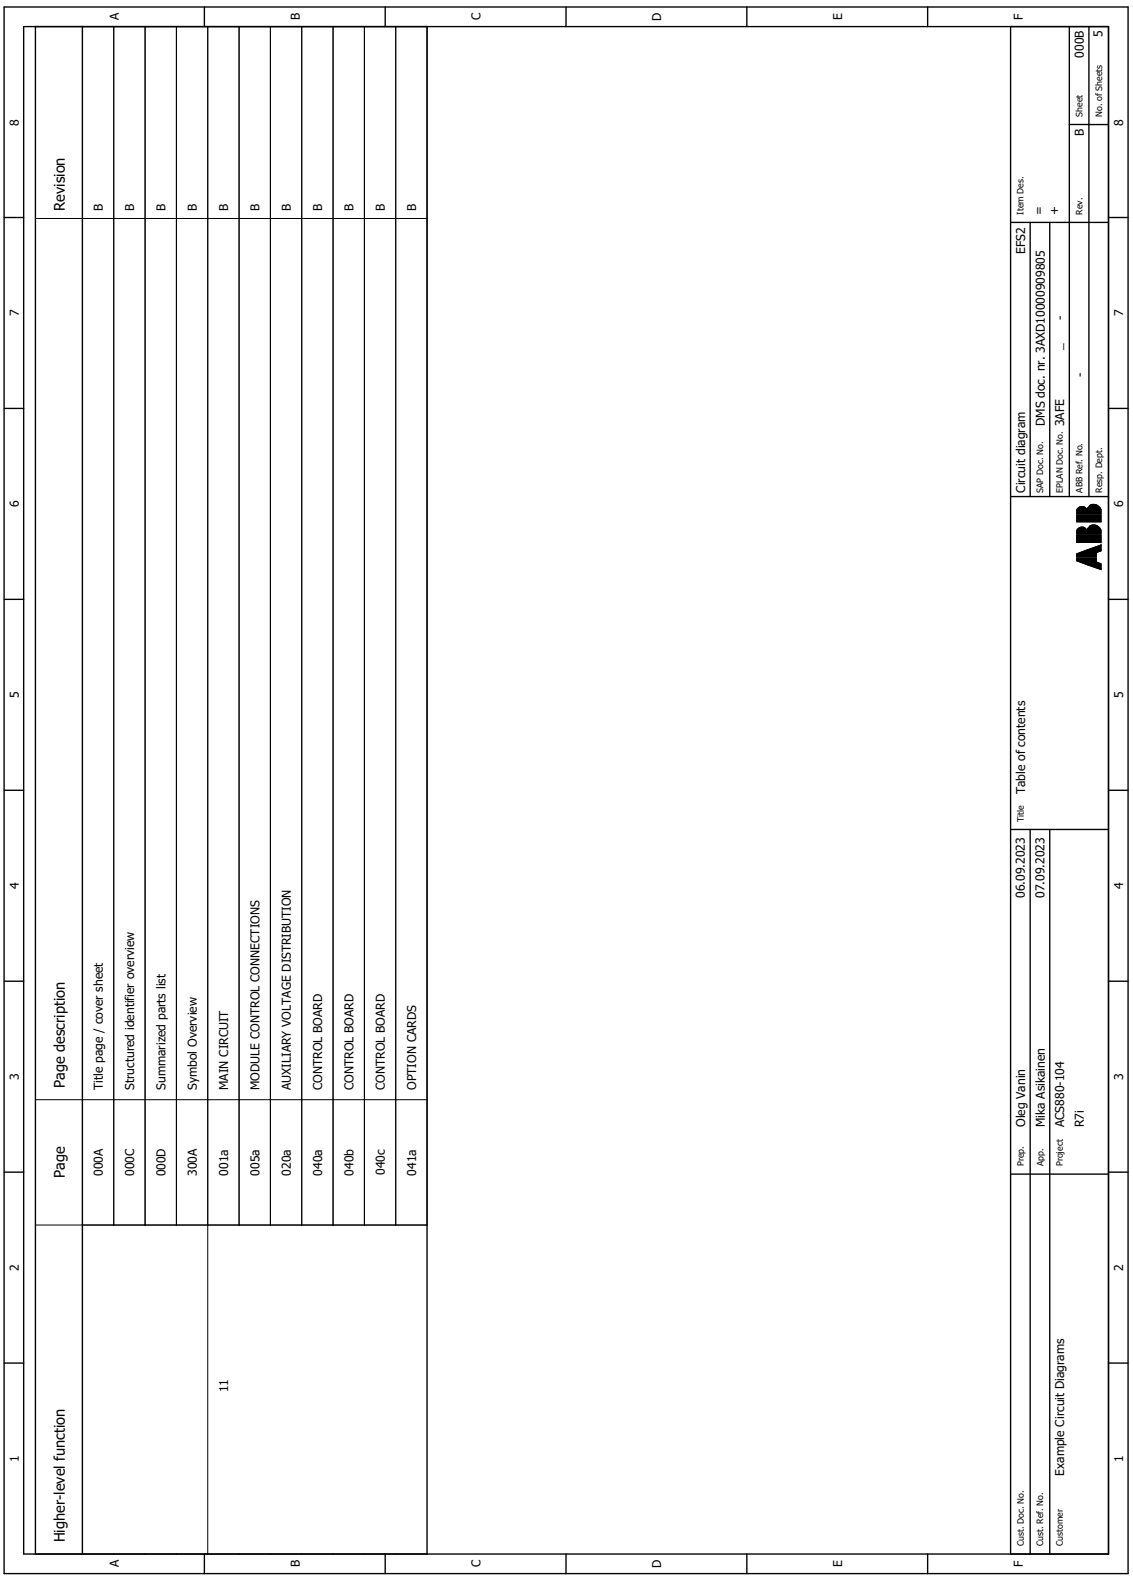

Frame R7i – Sheet 000C

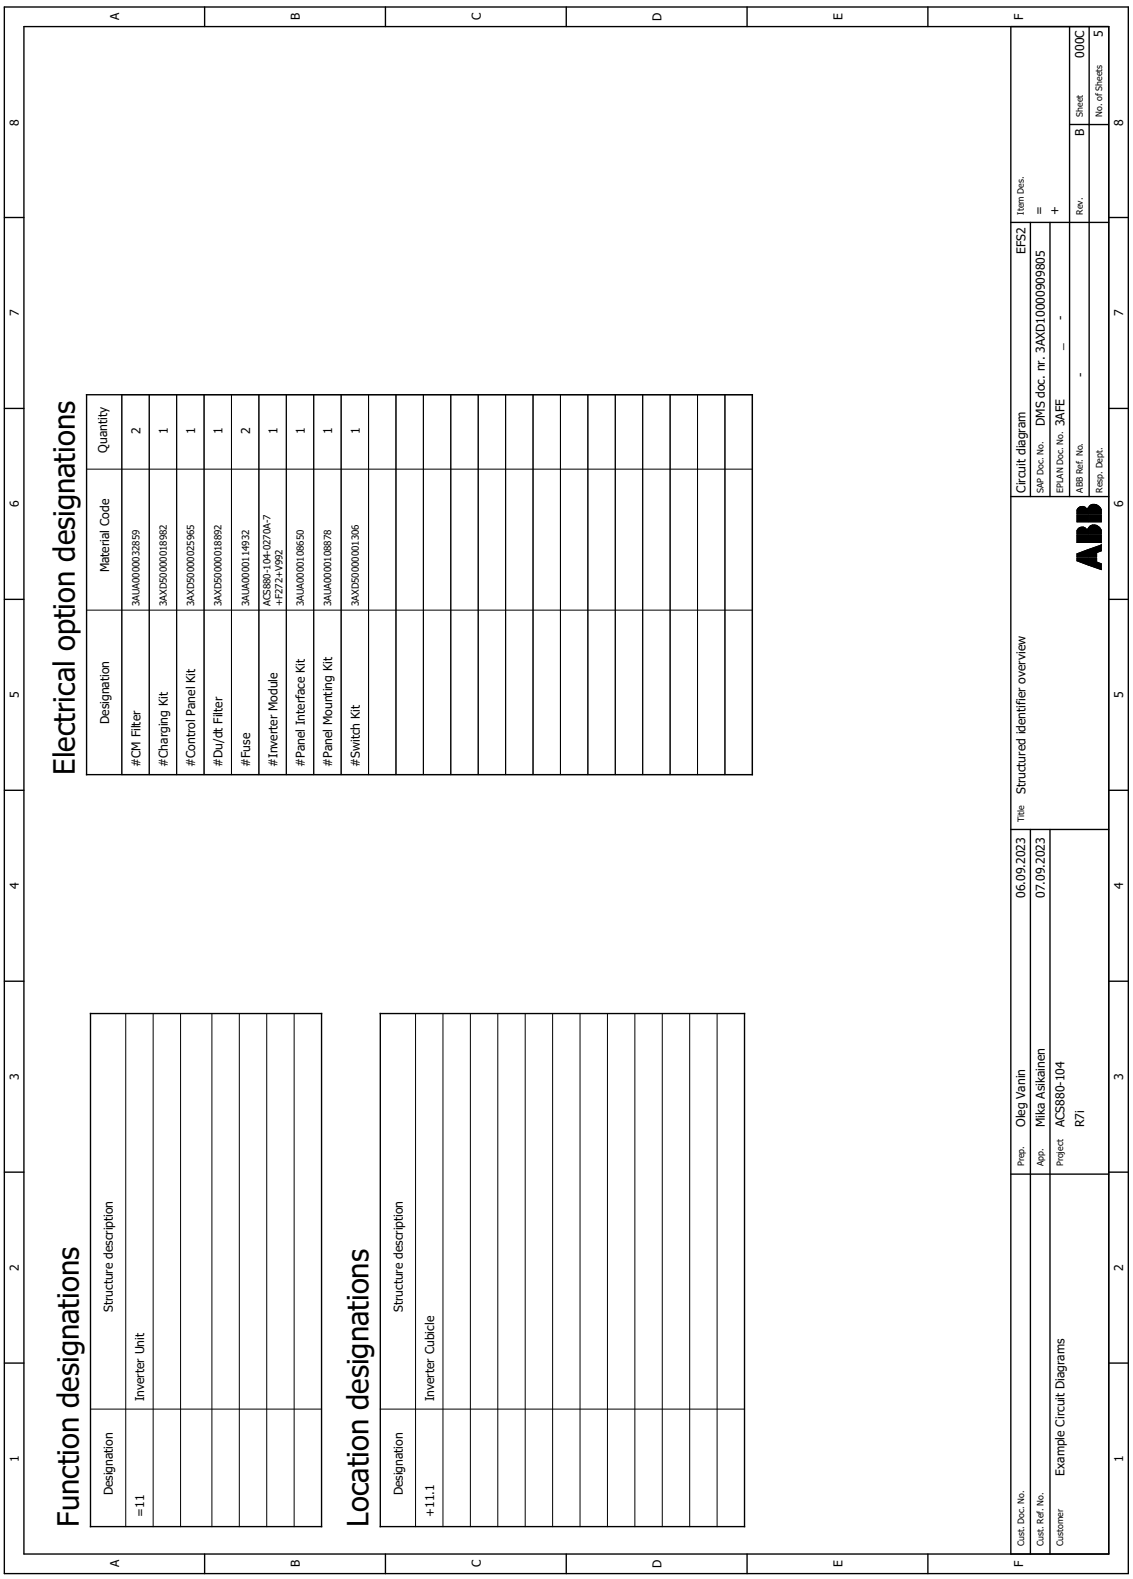

Function designations

Designation	Structure description
=11	Inverter Unit

Location designations

Designation	Structure description
+11.1	Inverter Cubicle


Electrical option designations

Designation	Material Code	Quantity
#CM Filter	3AUA0000032859	2
#Charging Kit	3AXD50000018982	1
#Control Panel Kit	3AXD50000025965	1
#Du/dt Filter	3AXD50000018892	1
#Fuse	3AUA0000114932	2
#Inverter Module	ACS880-104-0270A-7 +F272+V992	1
#Panel Interface Kit	3AUA0000108650	1
#Panel Mounting Kit	3AUA0000108878	1
#Switch Kit	3AXD50000001306	1


Cust. Doc. No.		Prep.	Oleg Vanin	06.09.2023	Title: Structured identifier overview
Cust. Ref. No.		Appr.	Mika Askainen	07.09.2023	
Customer	Example Circuit Diagrams	Project	ACS880-104 R7i		

Circuit diagram	EFS2
SAP Doc. No.	DMS doc. nr. 3AXD10000909805
EPLAN Doc. No.	3AFE _ -
ABB Ref. No.	-
Resp. Dept.	
Item Des.	
=	
+	
Rev.	B
Sheet	000C
No. of Sheets	5


Frame R7i – Sheet 001a

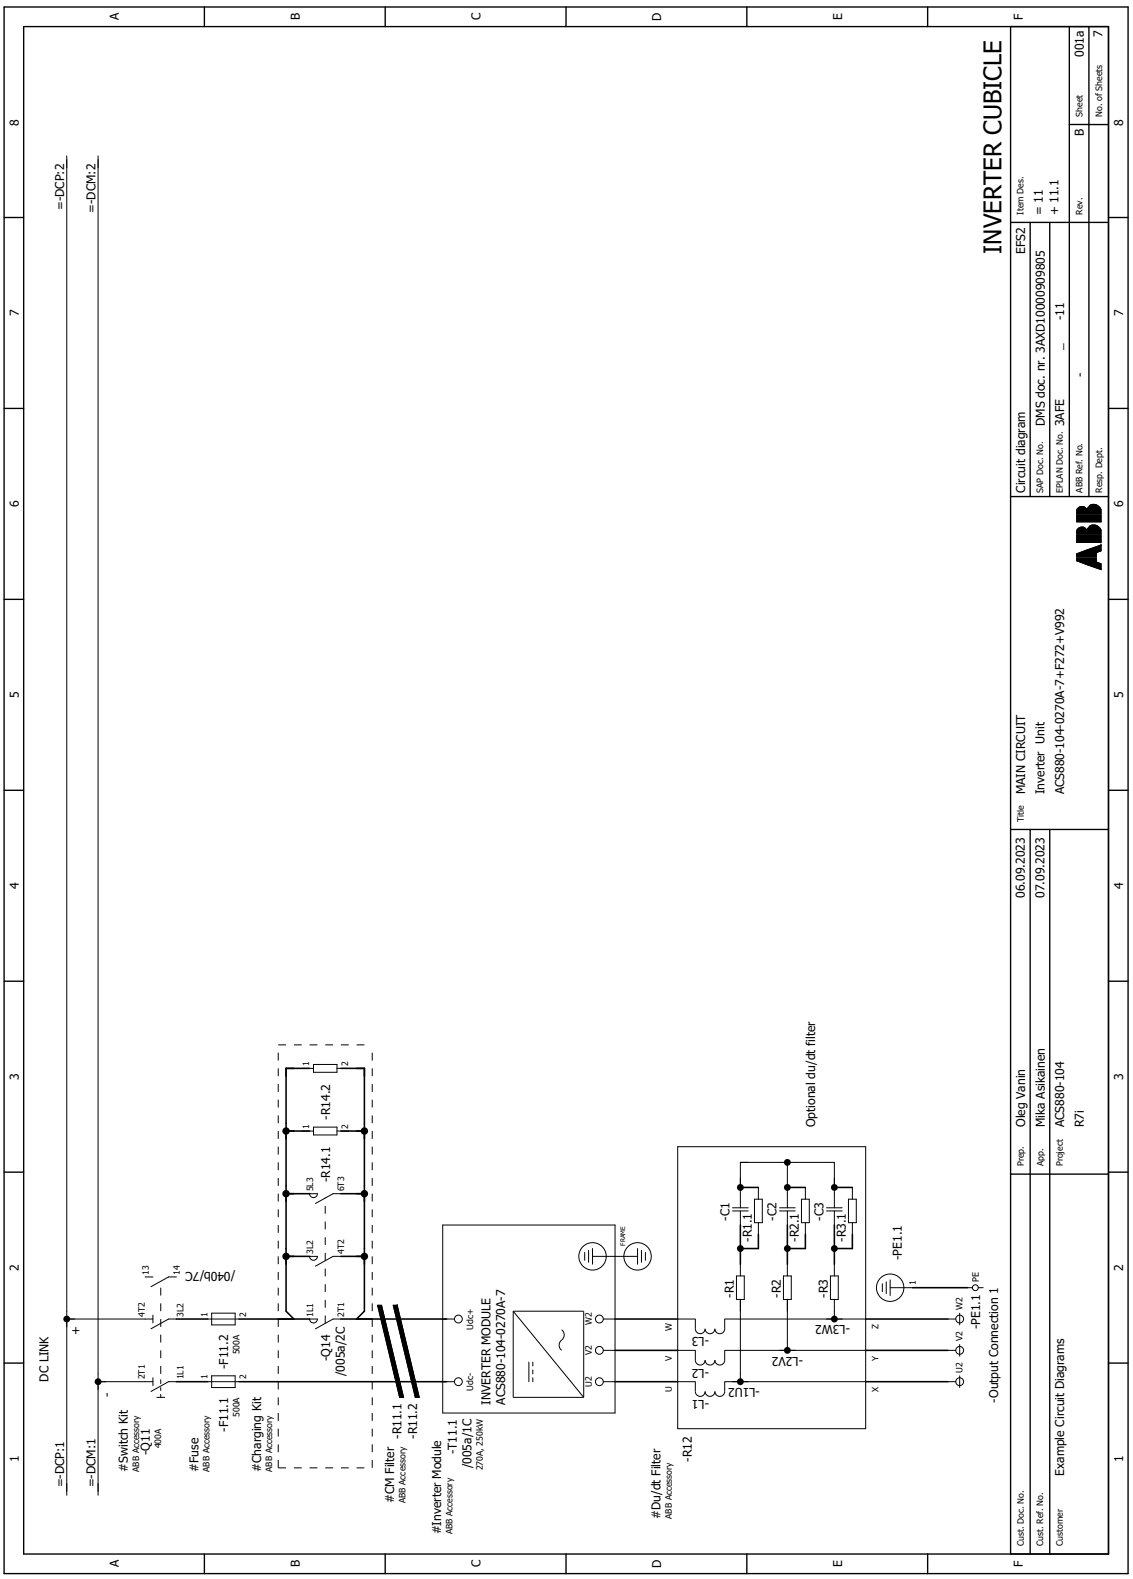


Frame R7i – Sheet 005a

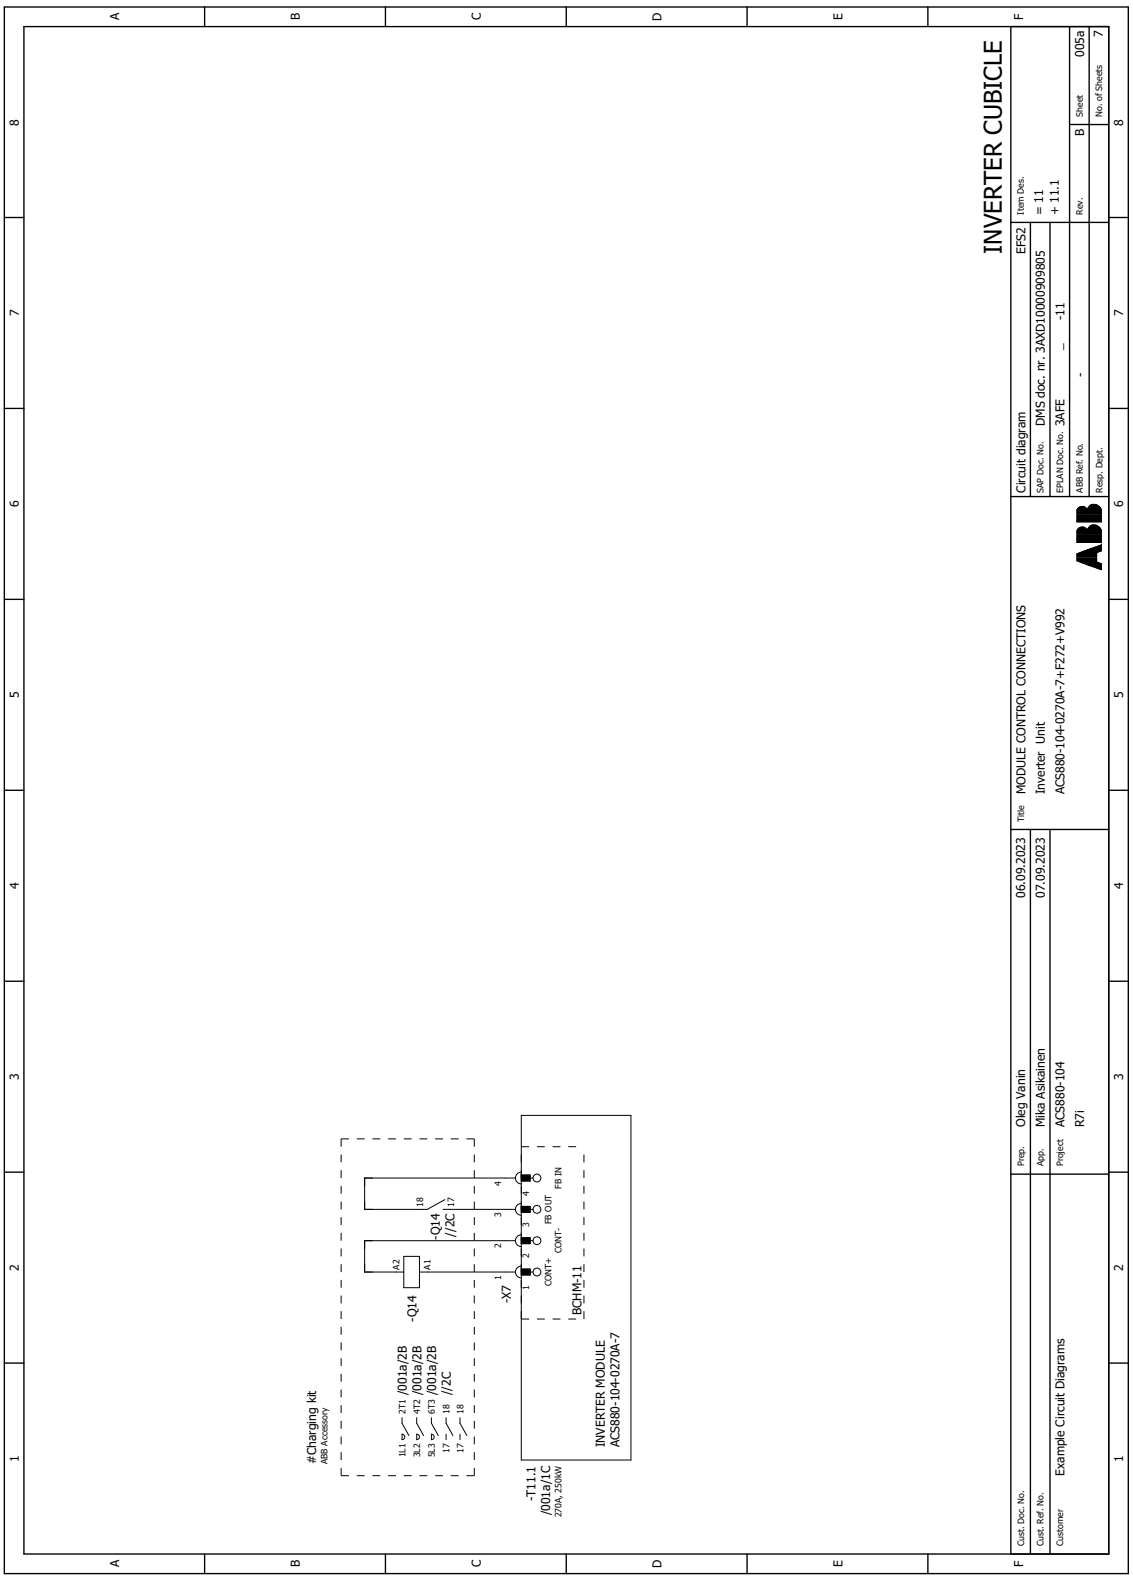

Frame 1×R8i (with DC switch/disconnector) – Sheet 000A

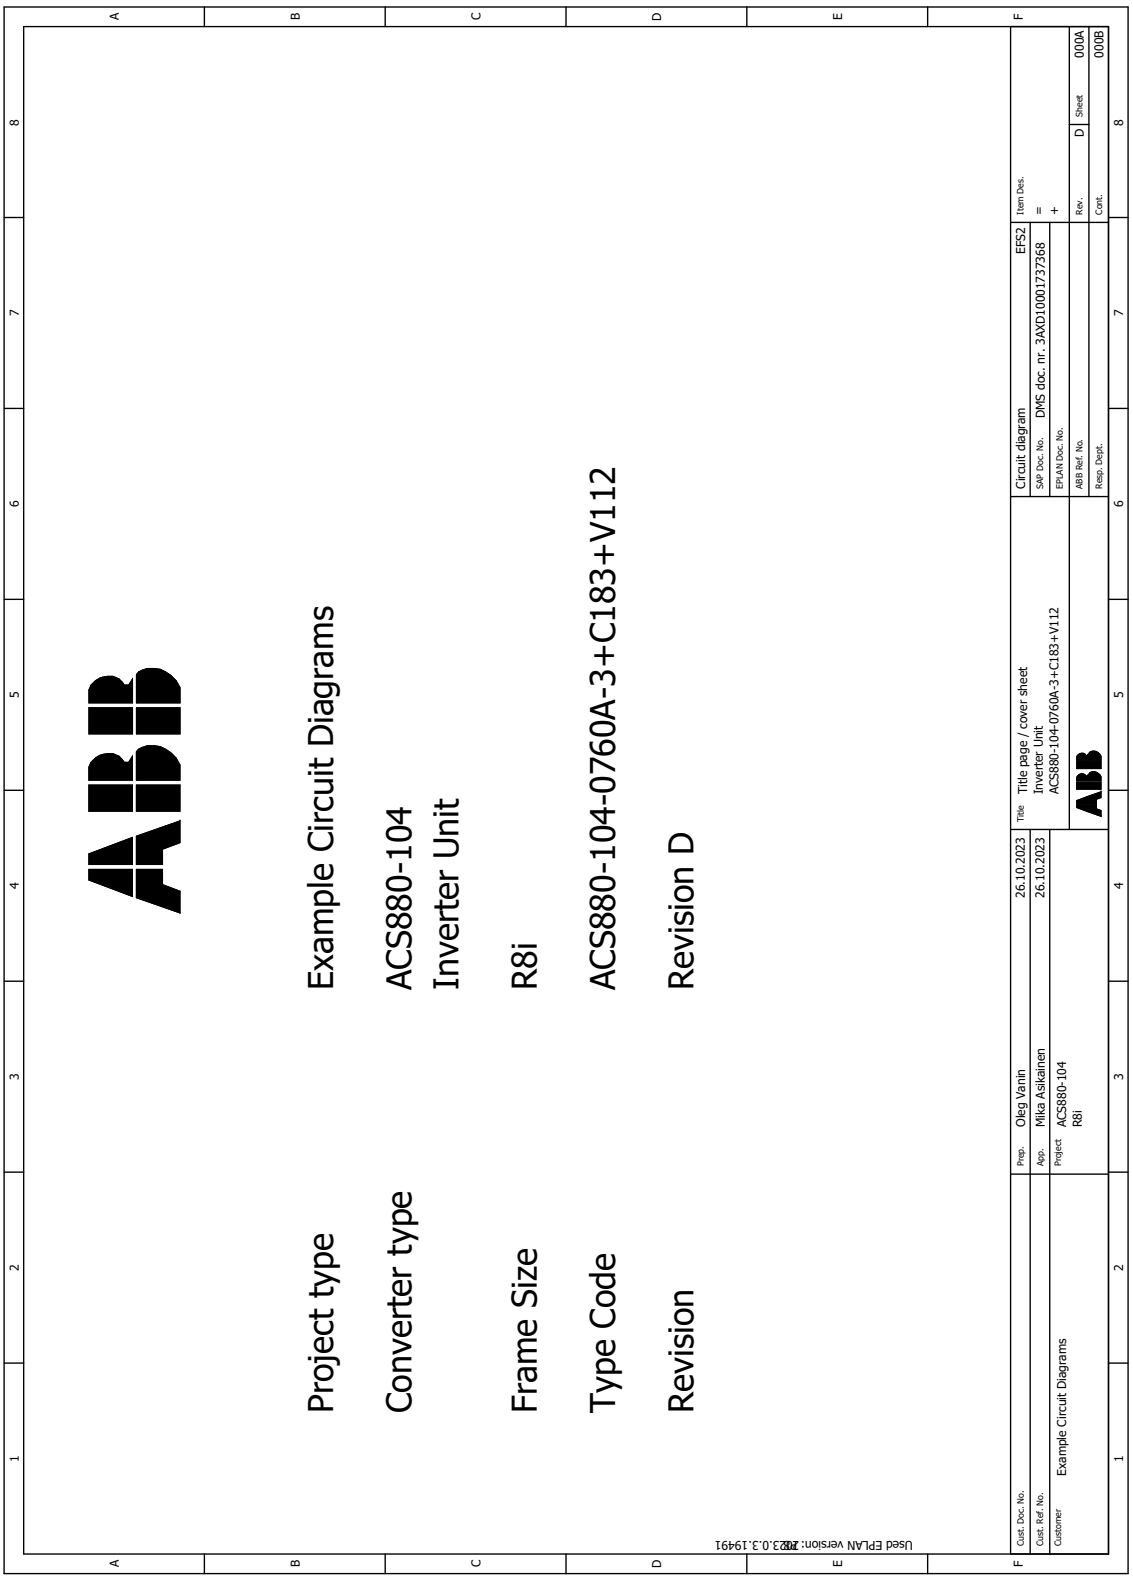

Frame 1×R8i – Sheet 000B

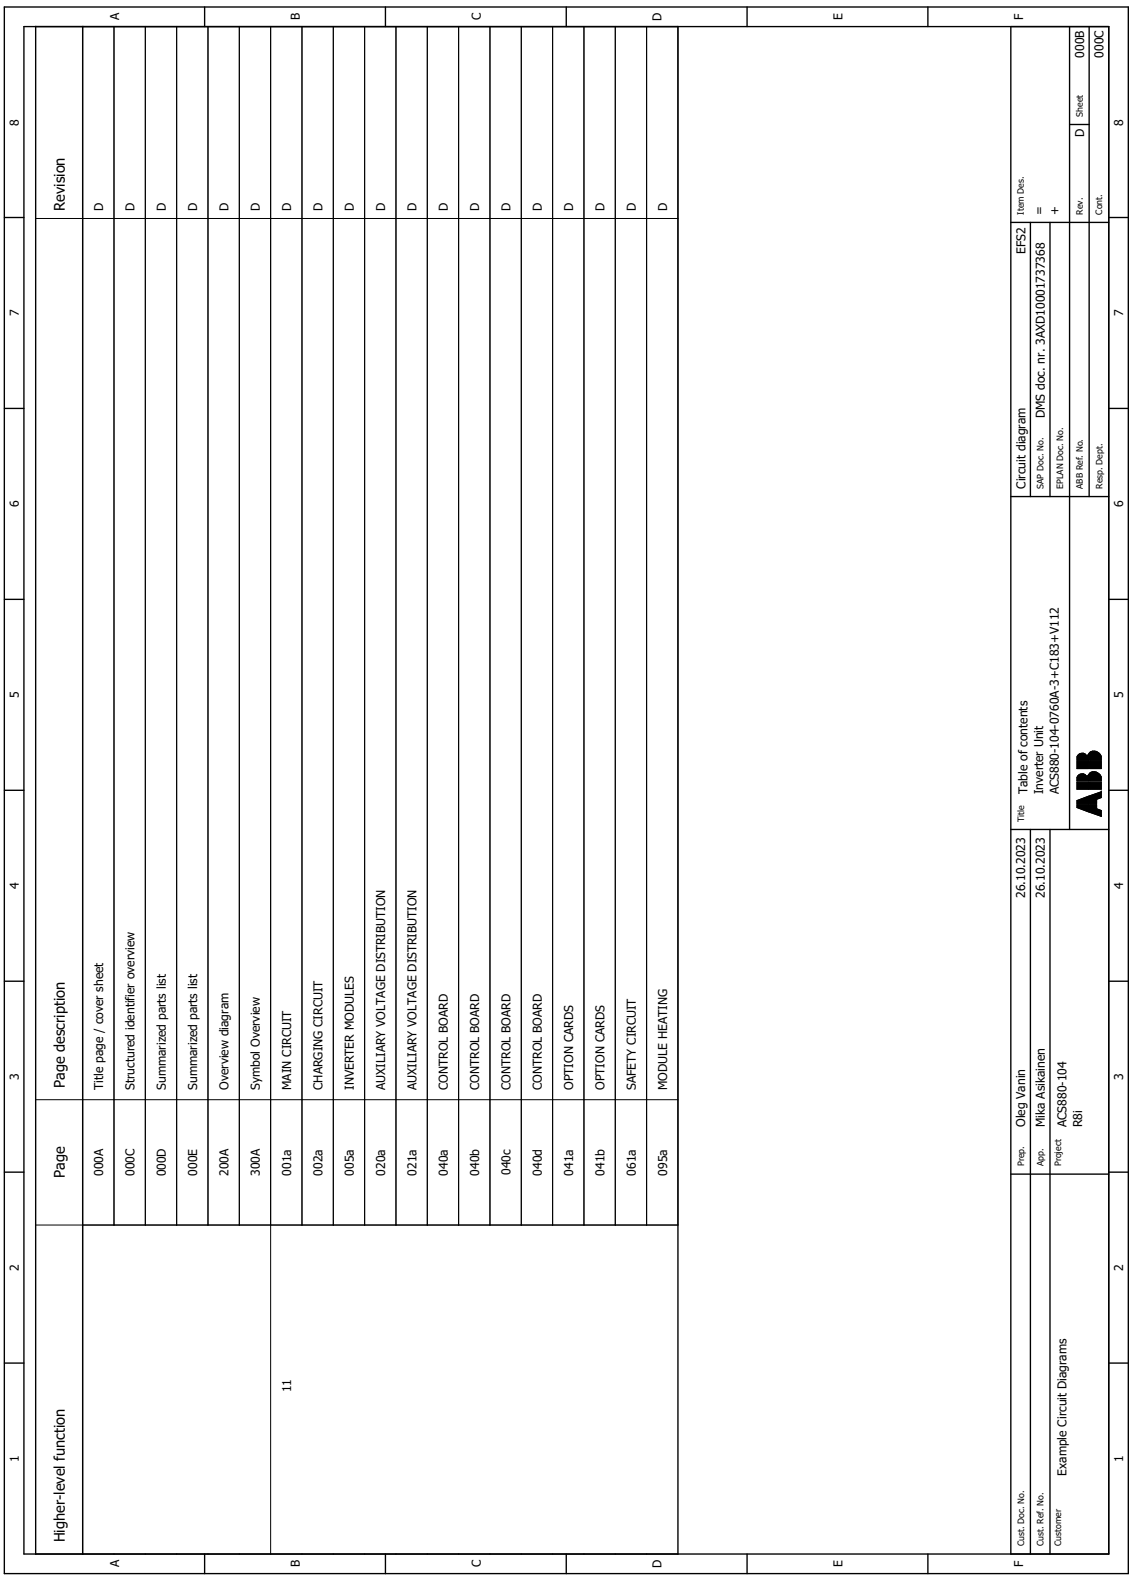

Higher-level function	Page	Page description	Revision
	000A	Title page / cover sheet	D
	000C	Structured identifier overview	D
	000D	Summarized parts list	D
	000E	Summarized parts list	D
	200A	Overview diagram	D
	300A	Symbol Overview	D
11	001a	MAIN CIRCUIT	D
	002a	CHARGING CIRCUIT	D
	005a	INVERTER MODULES	D
	020a	AUXILIARY VOLTAGE DISTRIBUTION	D
	021a	AUXILIARY VOLTAGE DISTRIBUTION	D
	040a	CONTROL BOARD	D
	040b	CONTROL BOARD	D
	040c	CONTROL BOARD	D
	040d	CONTROL BOARD	D
	041a	OPTION CARDS	D
	041b	OPTION CARDS	D
	061a	SAFETY CIRCUIT	D
	095a	MODULE HEATING	D

Cust. Doc. No.
Cust. Ref. No.
Customer: Example Circuit Diagrams

Prep.: Oleg Vanin 26.10.2023
Appr.: Mika Asikainen 26.10.2023
Project: ACS880-104 R8i


Title: Table of contents
Inverter Unit
ACS880-104+0760A-3+C183+V112

ABB


Circuit diagram EFS2
SAP Doc. No.: DMS doc. nr. 3AXD10001737368
EPLAN Doc. No.:
ABB Ref. No.:
Resp. Dept.:

Item Des.
=
+
Rev. D Sheet 000B
Cont. 000C


Frame 1×R8i – Sheet 000C

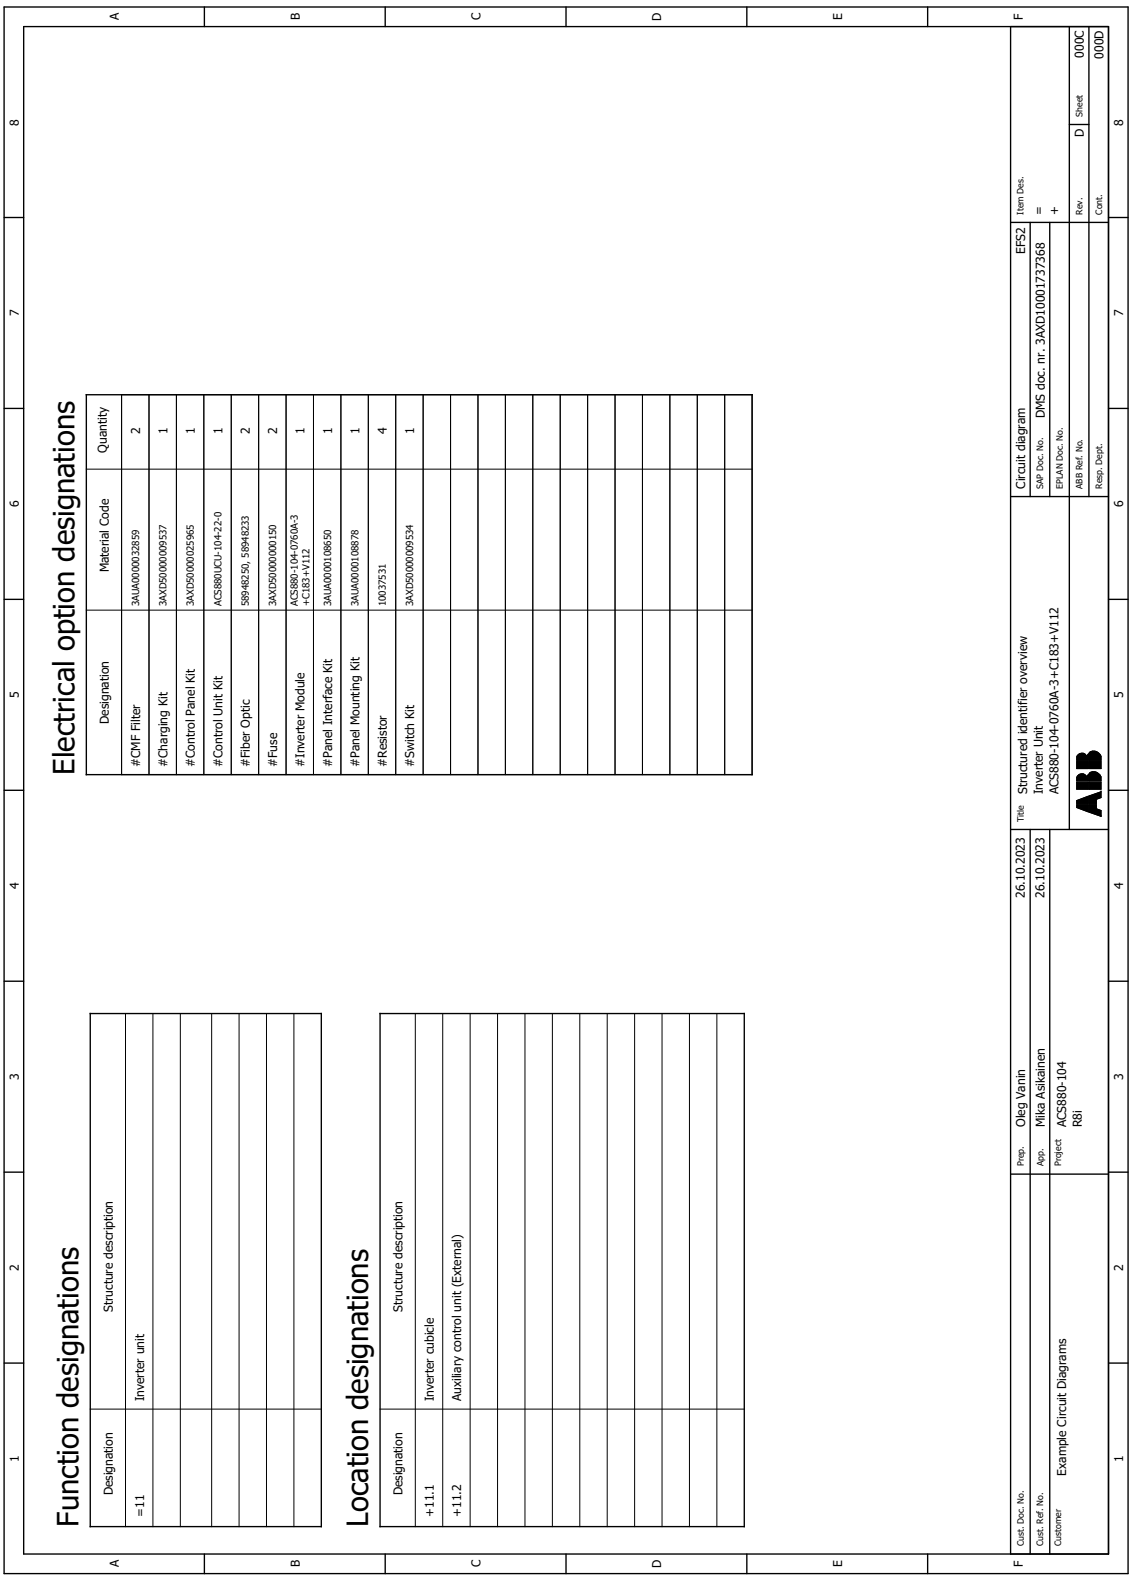


Frames 1×R8i and 2×R8i – Sheet 300A

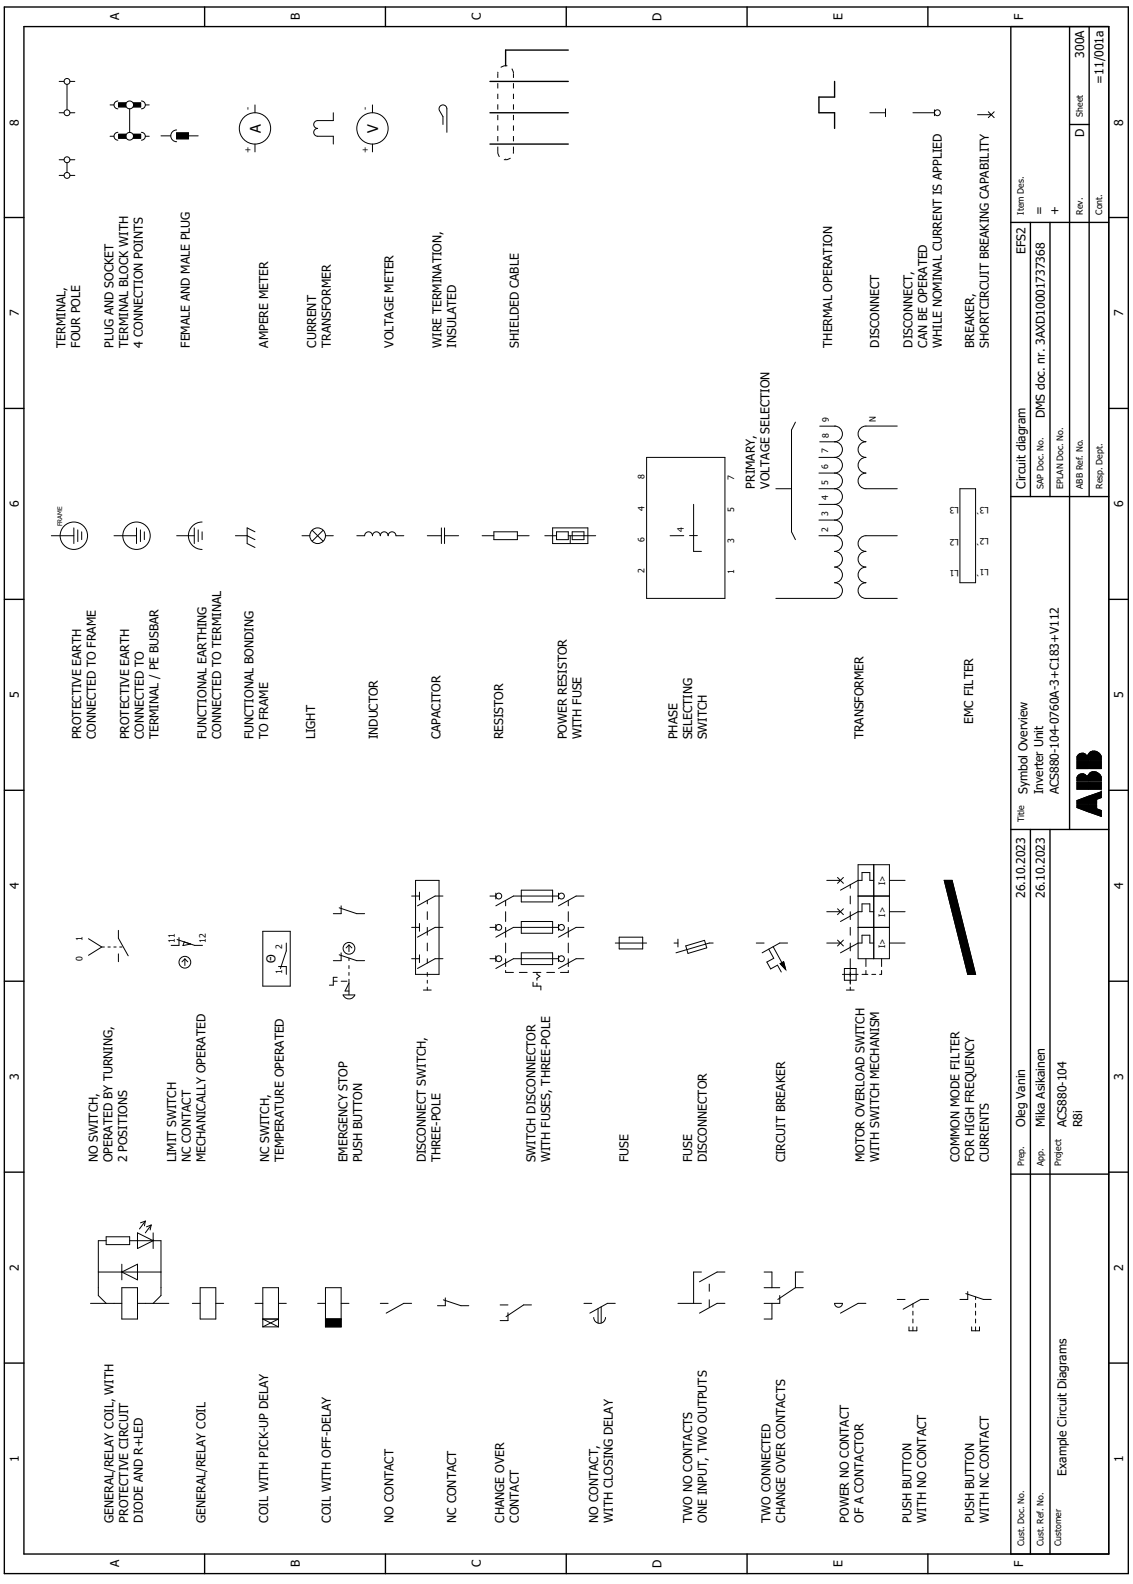


Frame 1×R8i – Sheet 001a

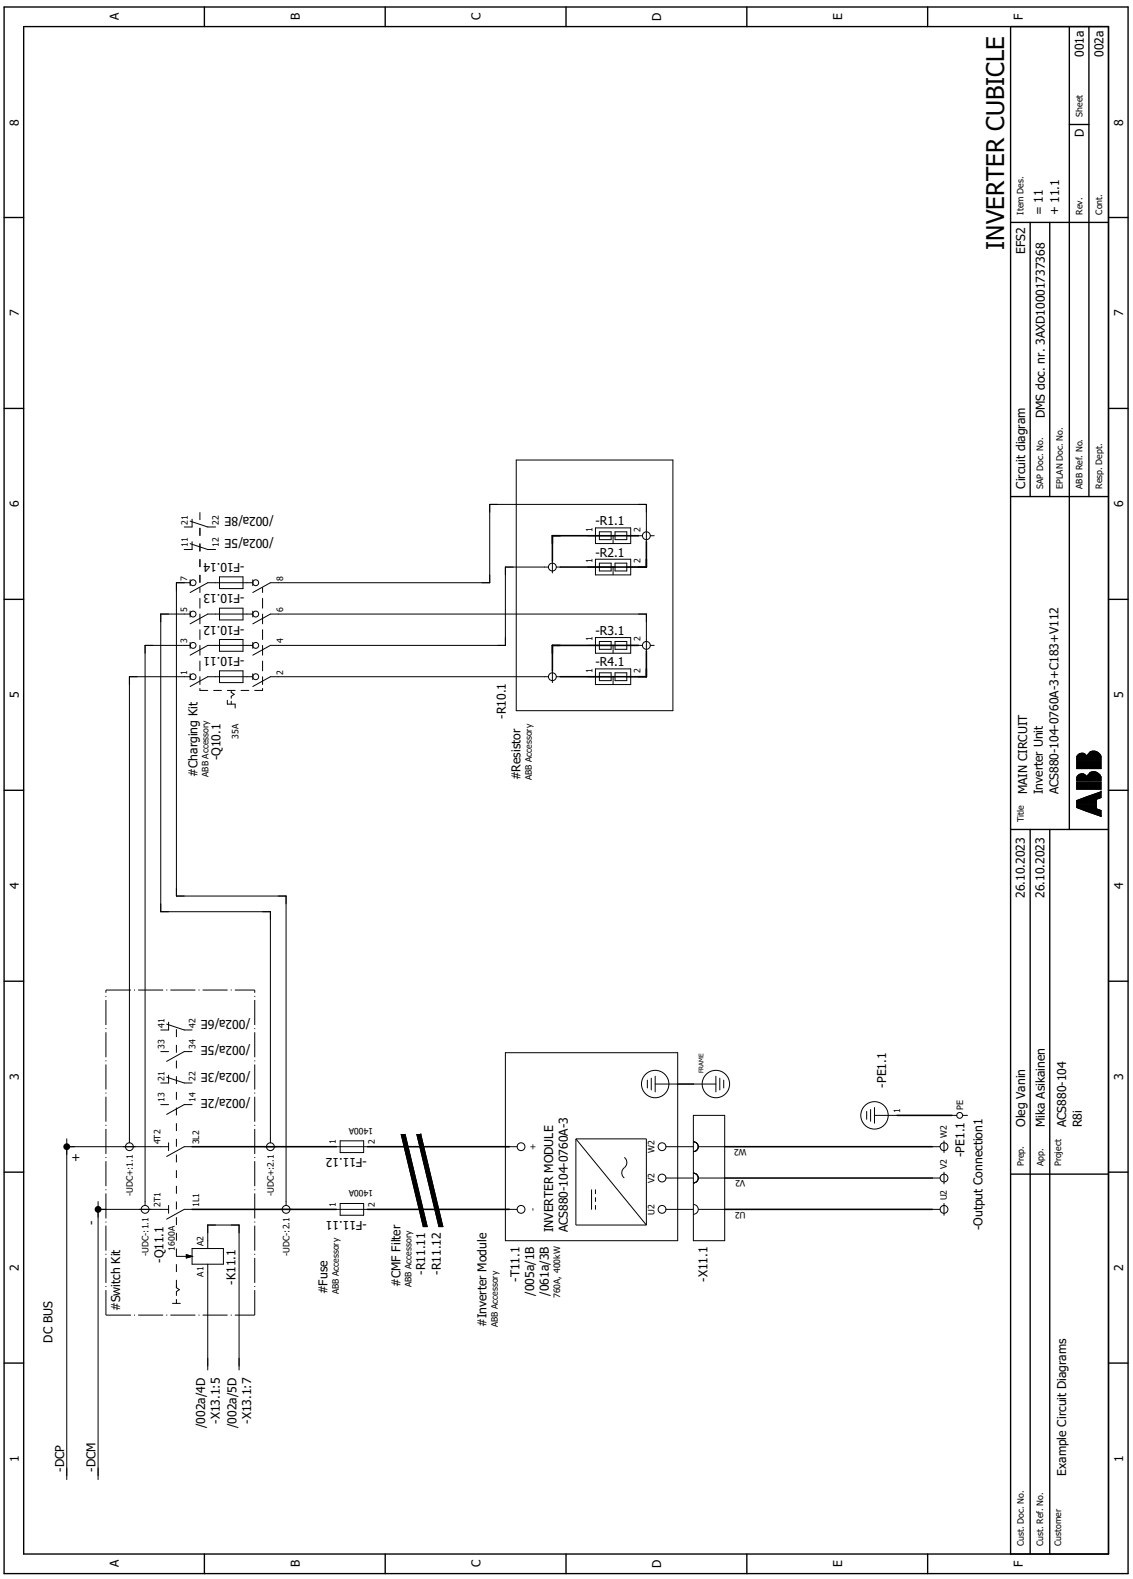


Frame 1×R8i – Sheet 002a

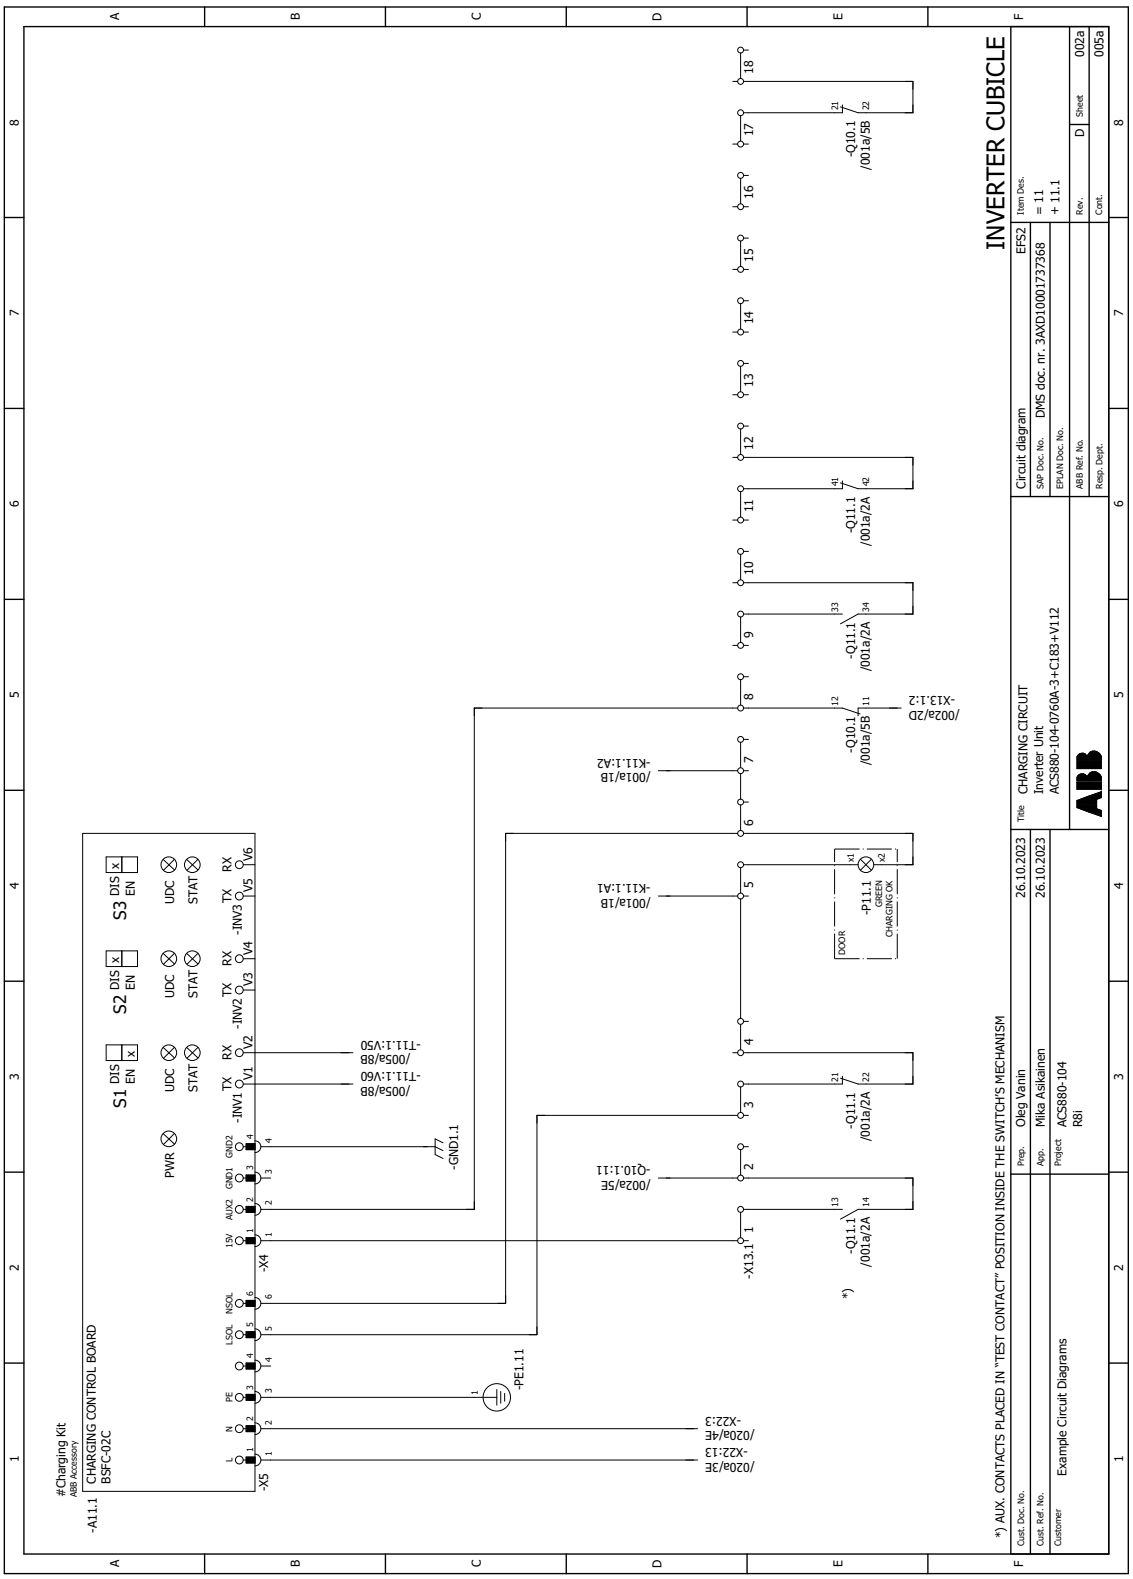


Frame 1×R8i – Sheet 005a

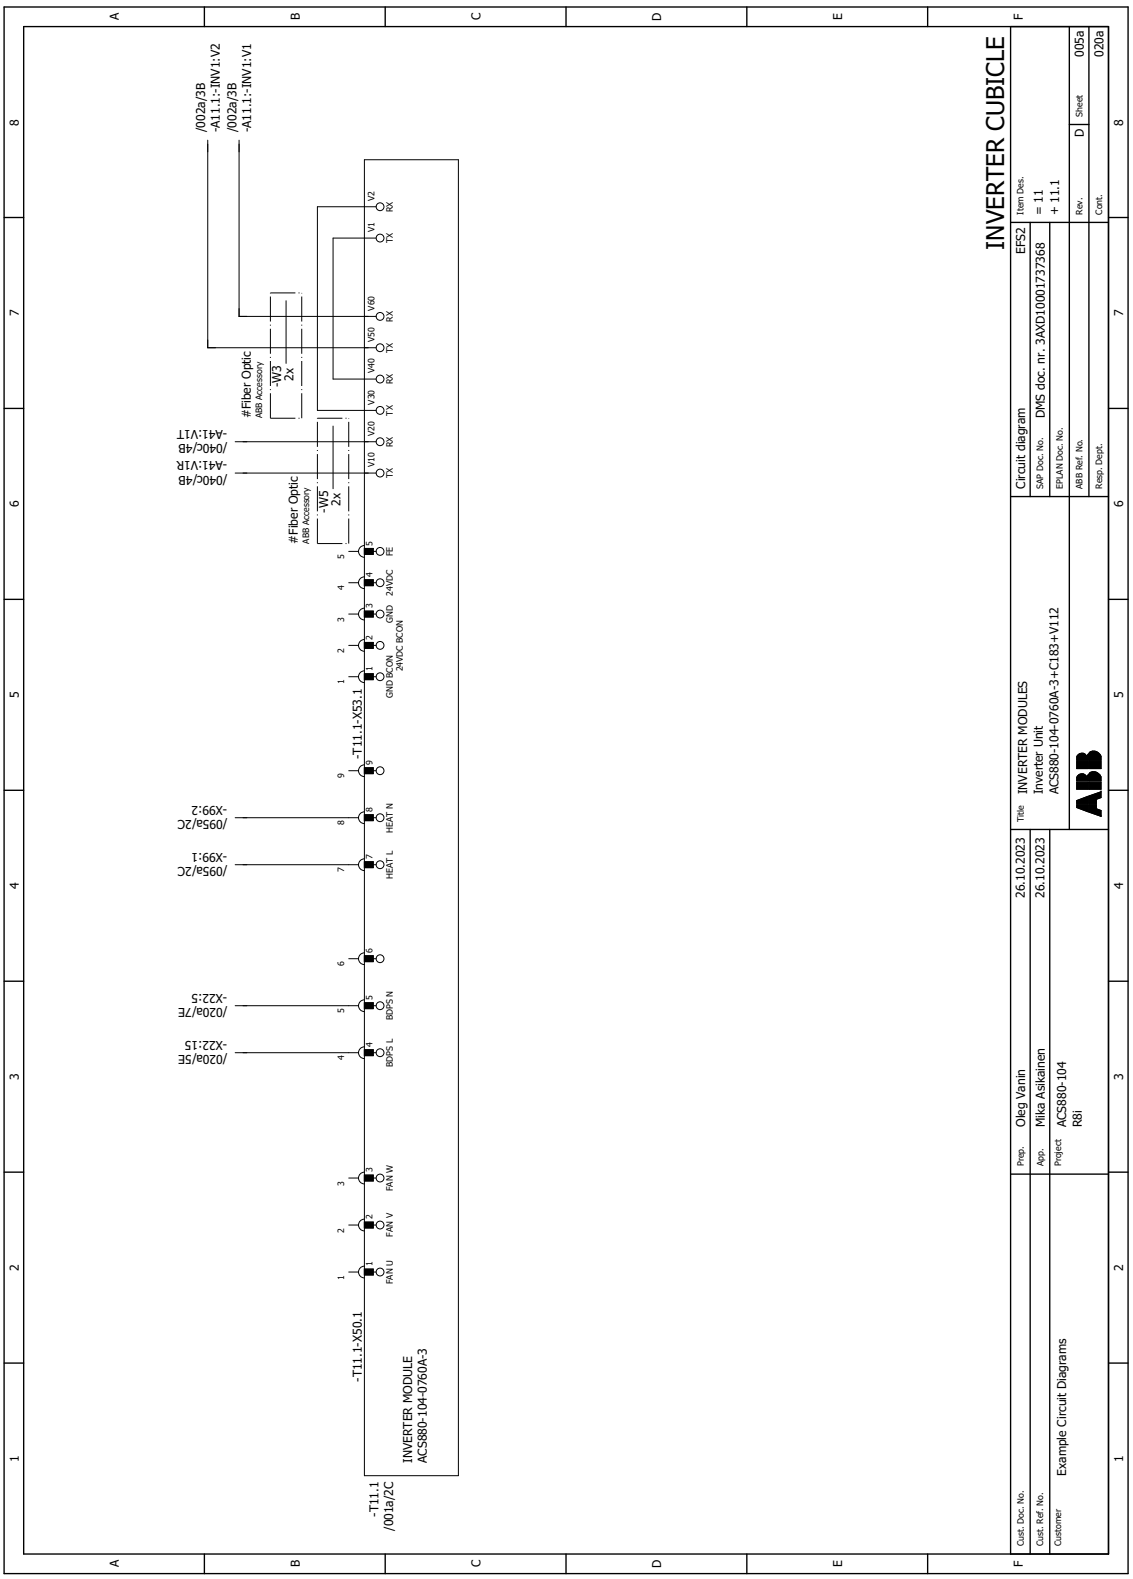


Frame 1×R8i – Sheet 020a

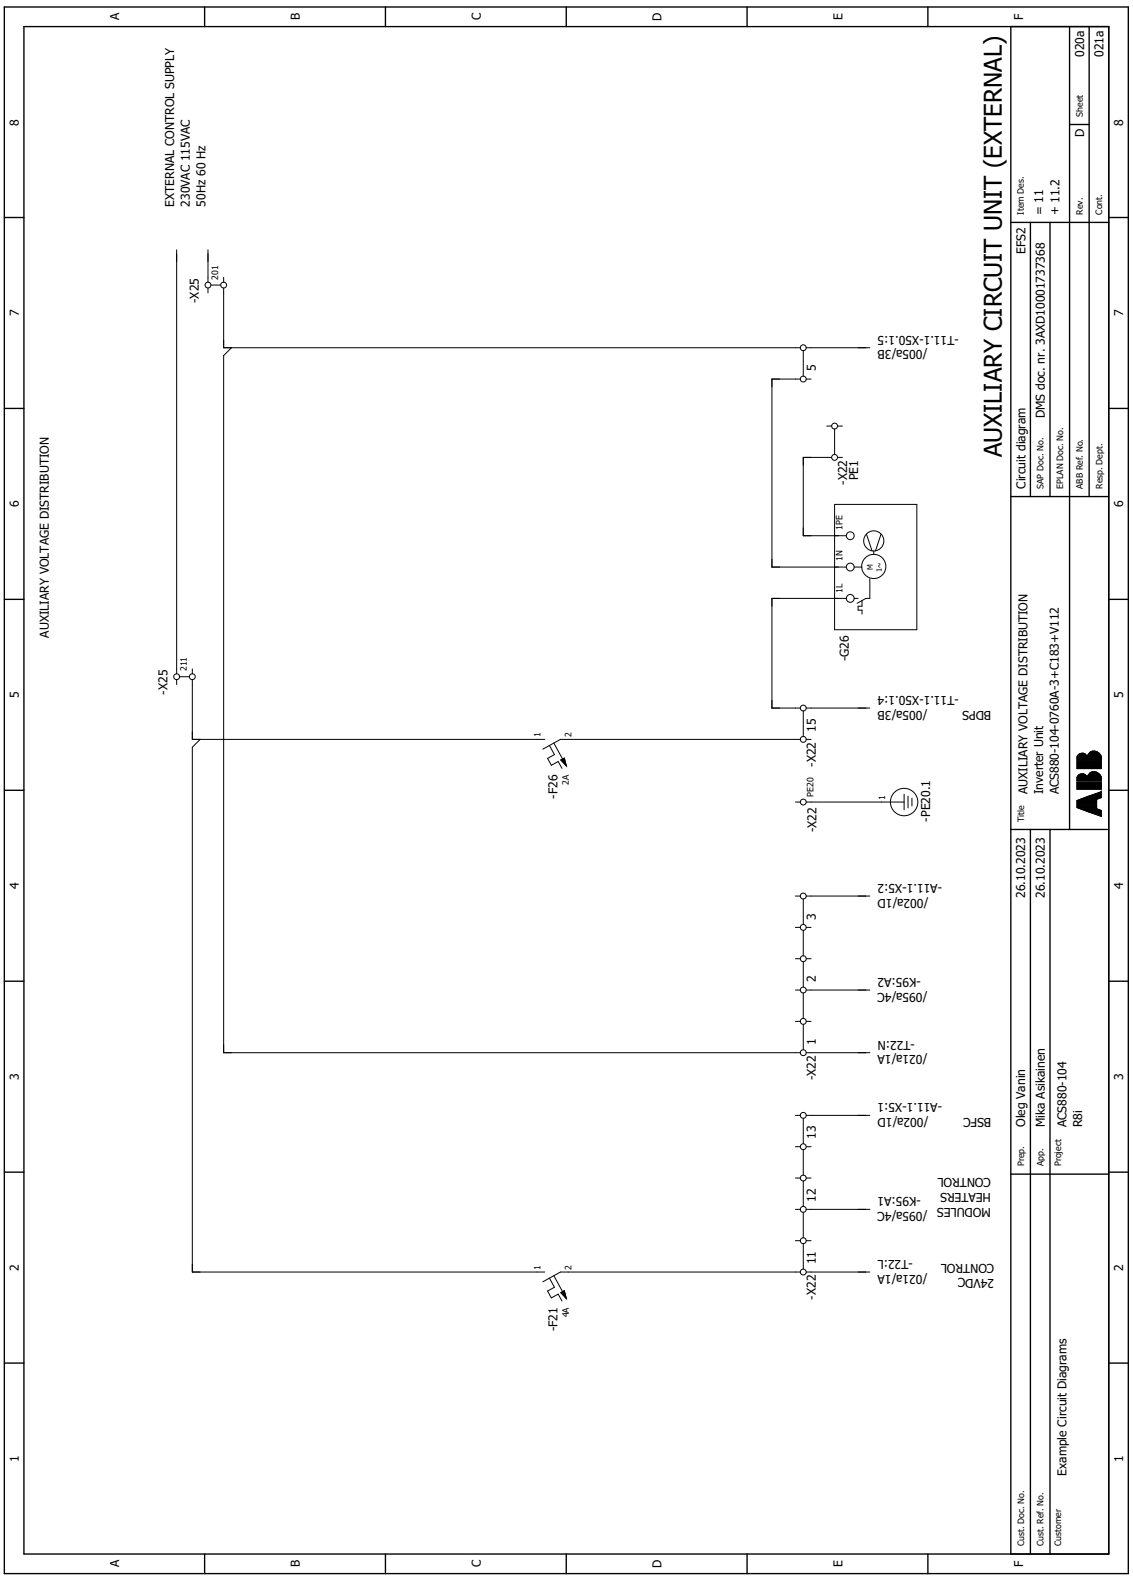


Frames 1×R8i and 2×R8i – Sheet 021a

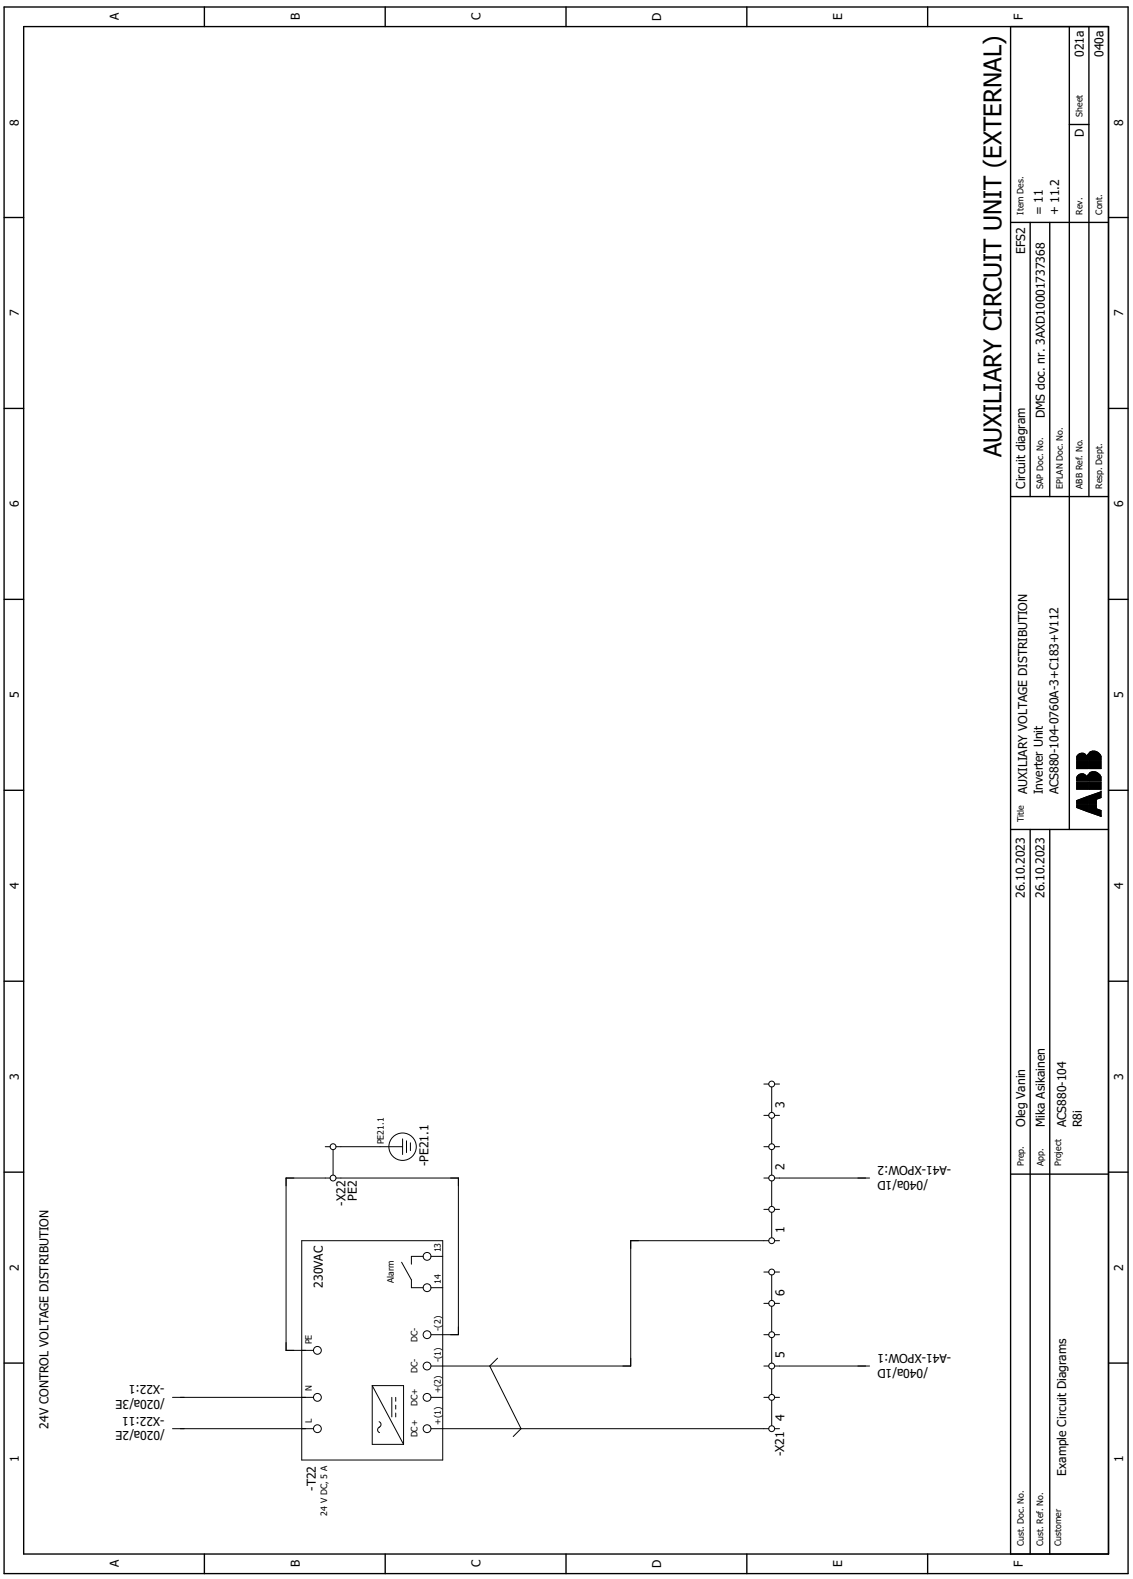


Frames 1×R8i and 2×R8i – Sheet 040a

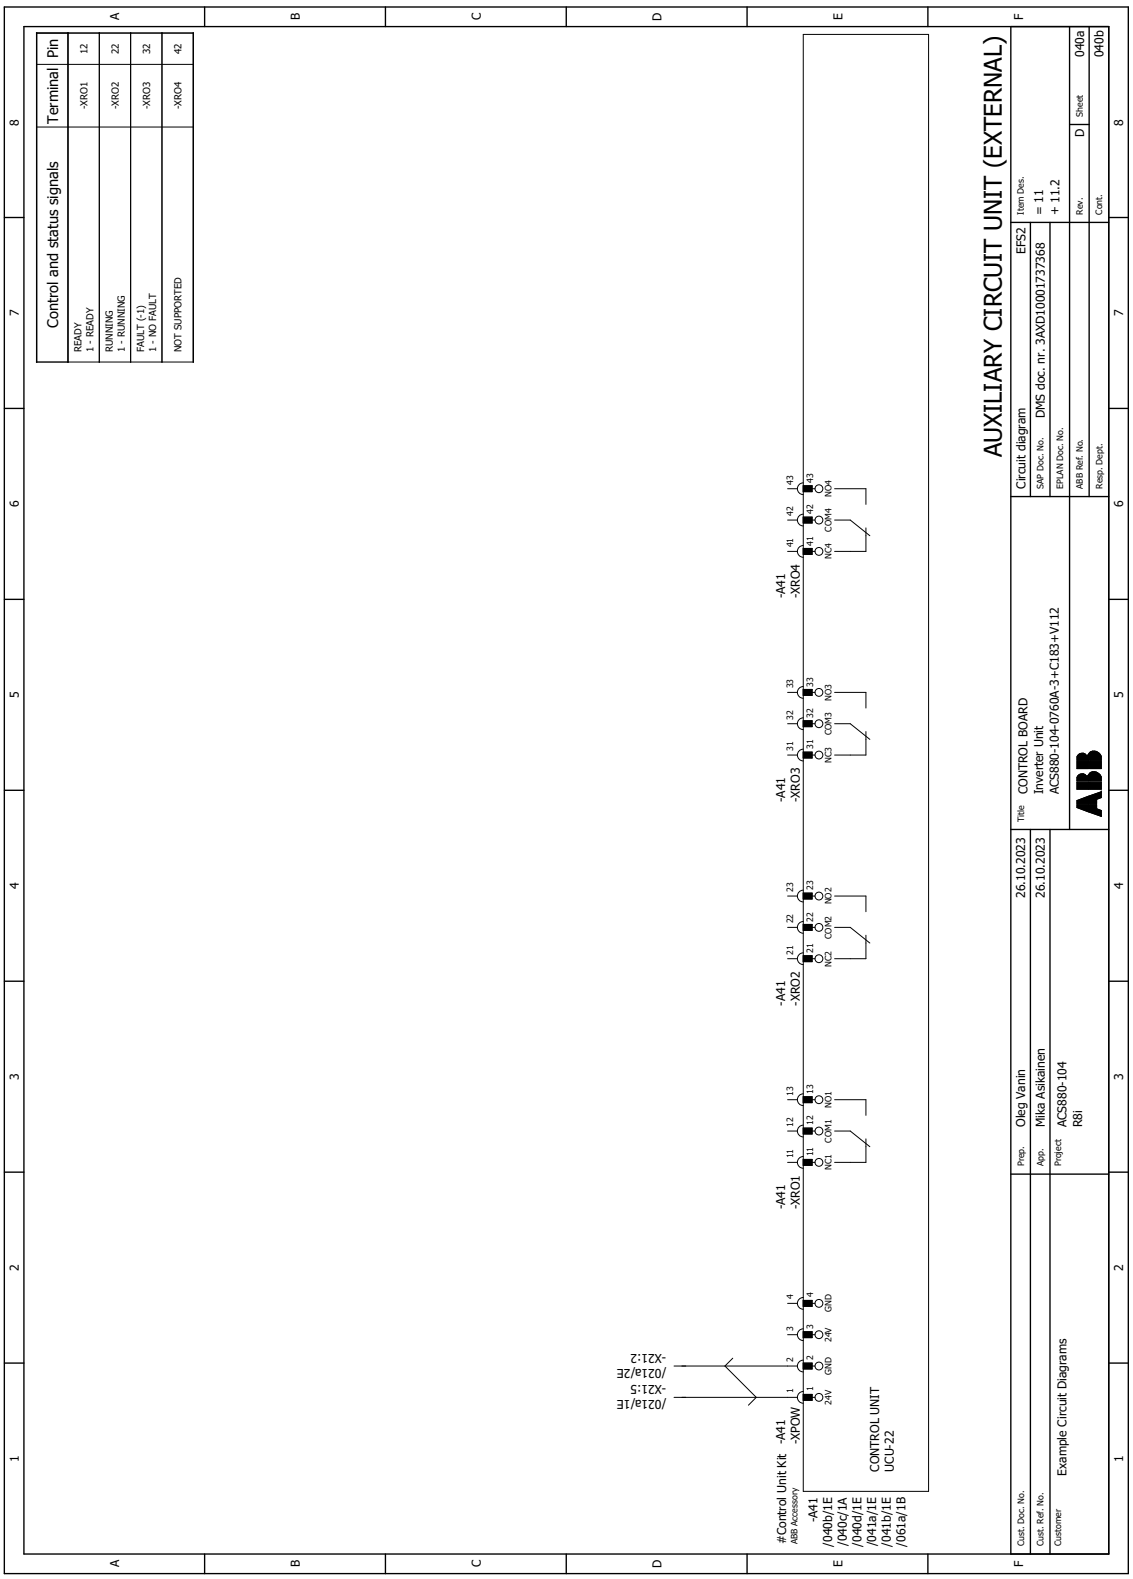


Frames 1×R8i and 2×R8i – Sheet 040b

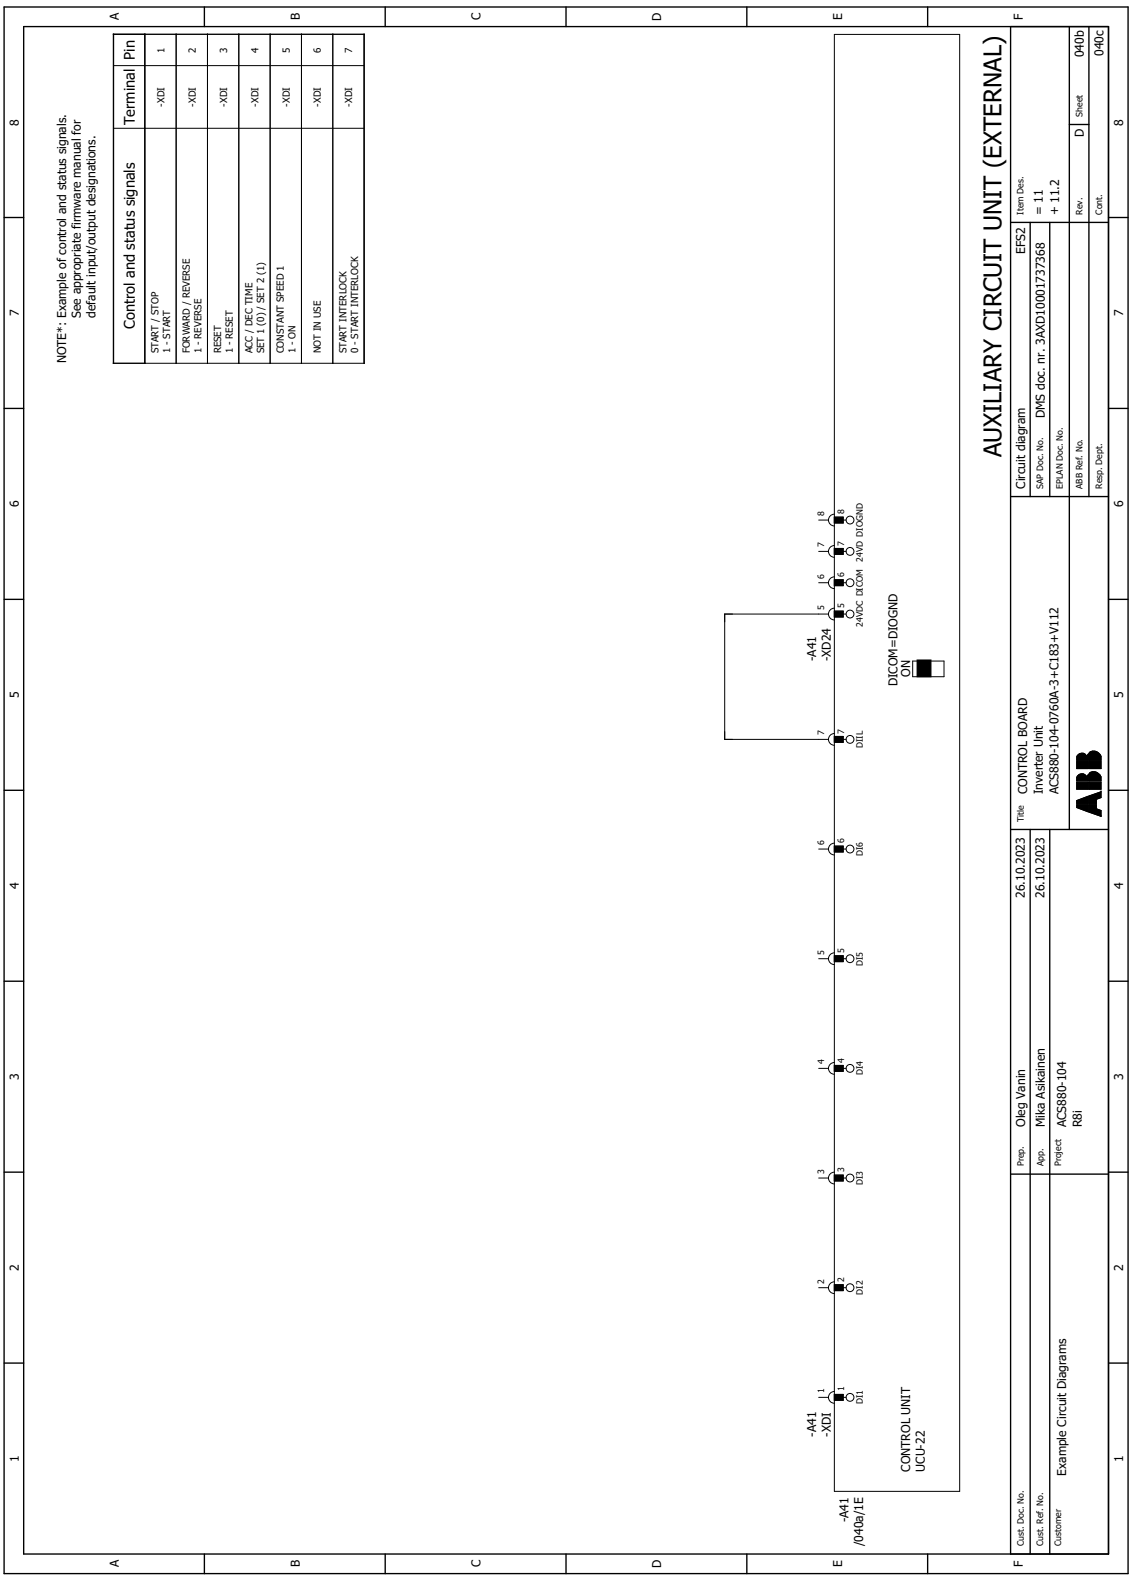


Frame 1×R8i – Sheet 040c

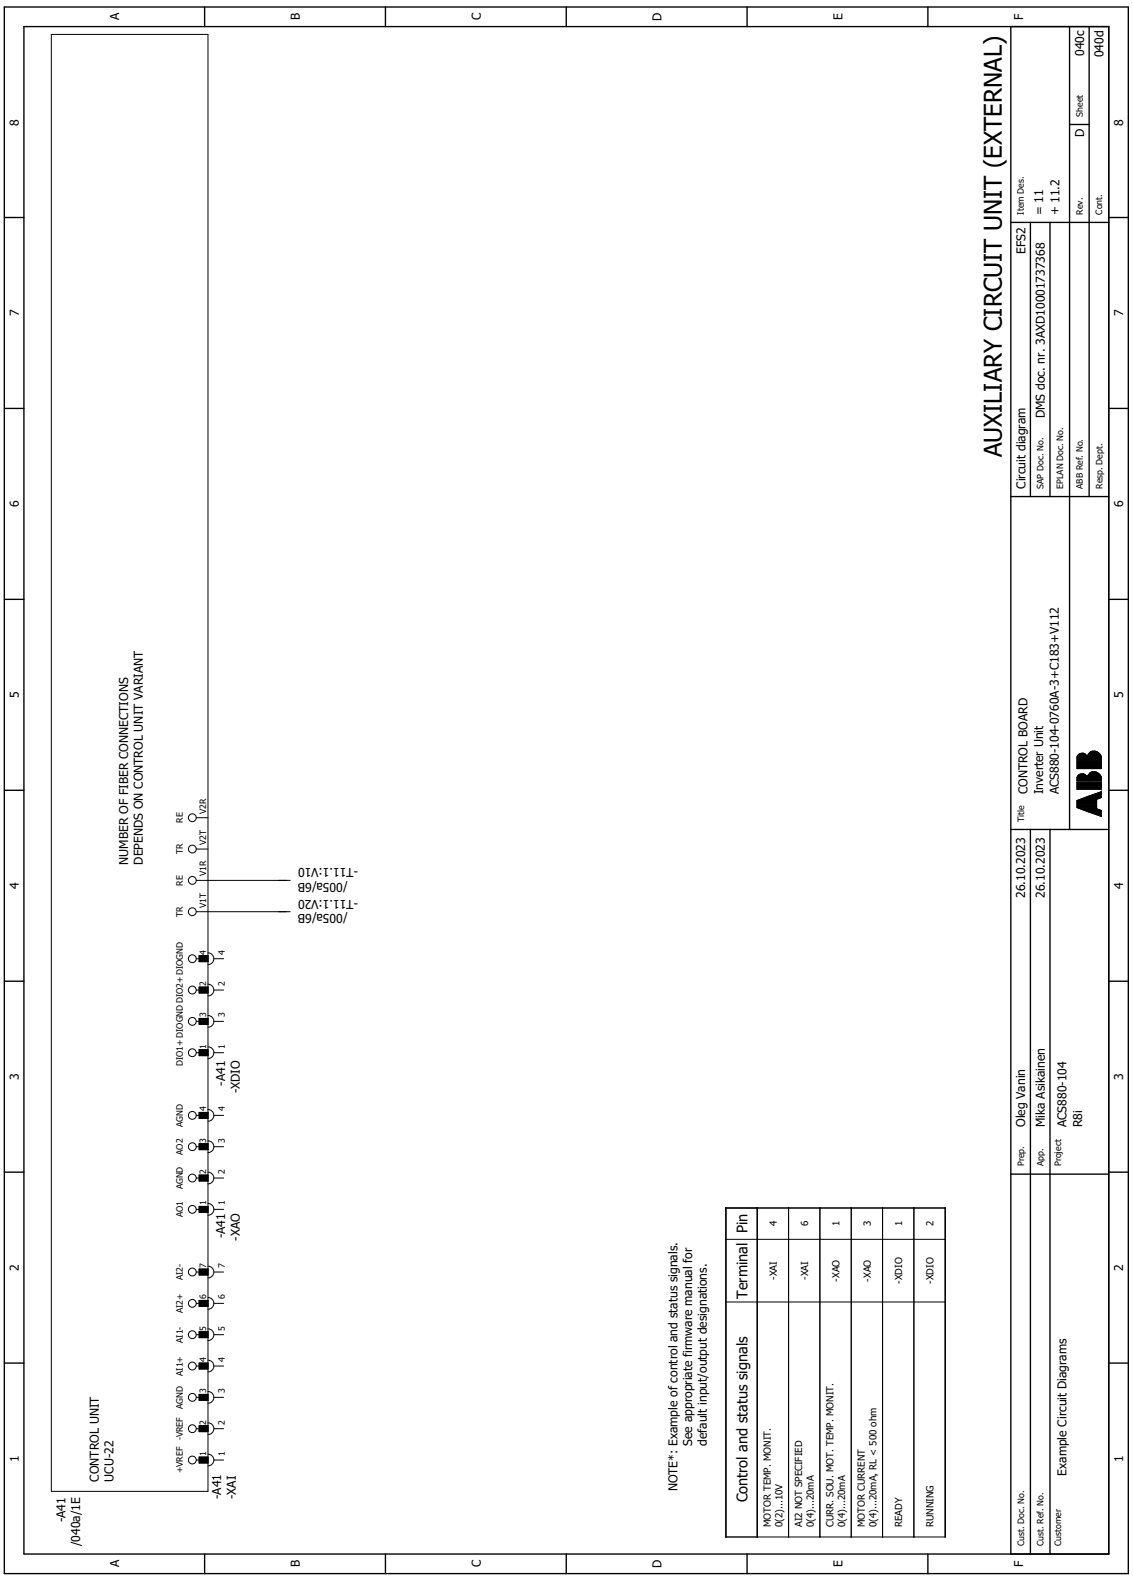


Frames 1×R8i and 2×R8i – Sheet 040d

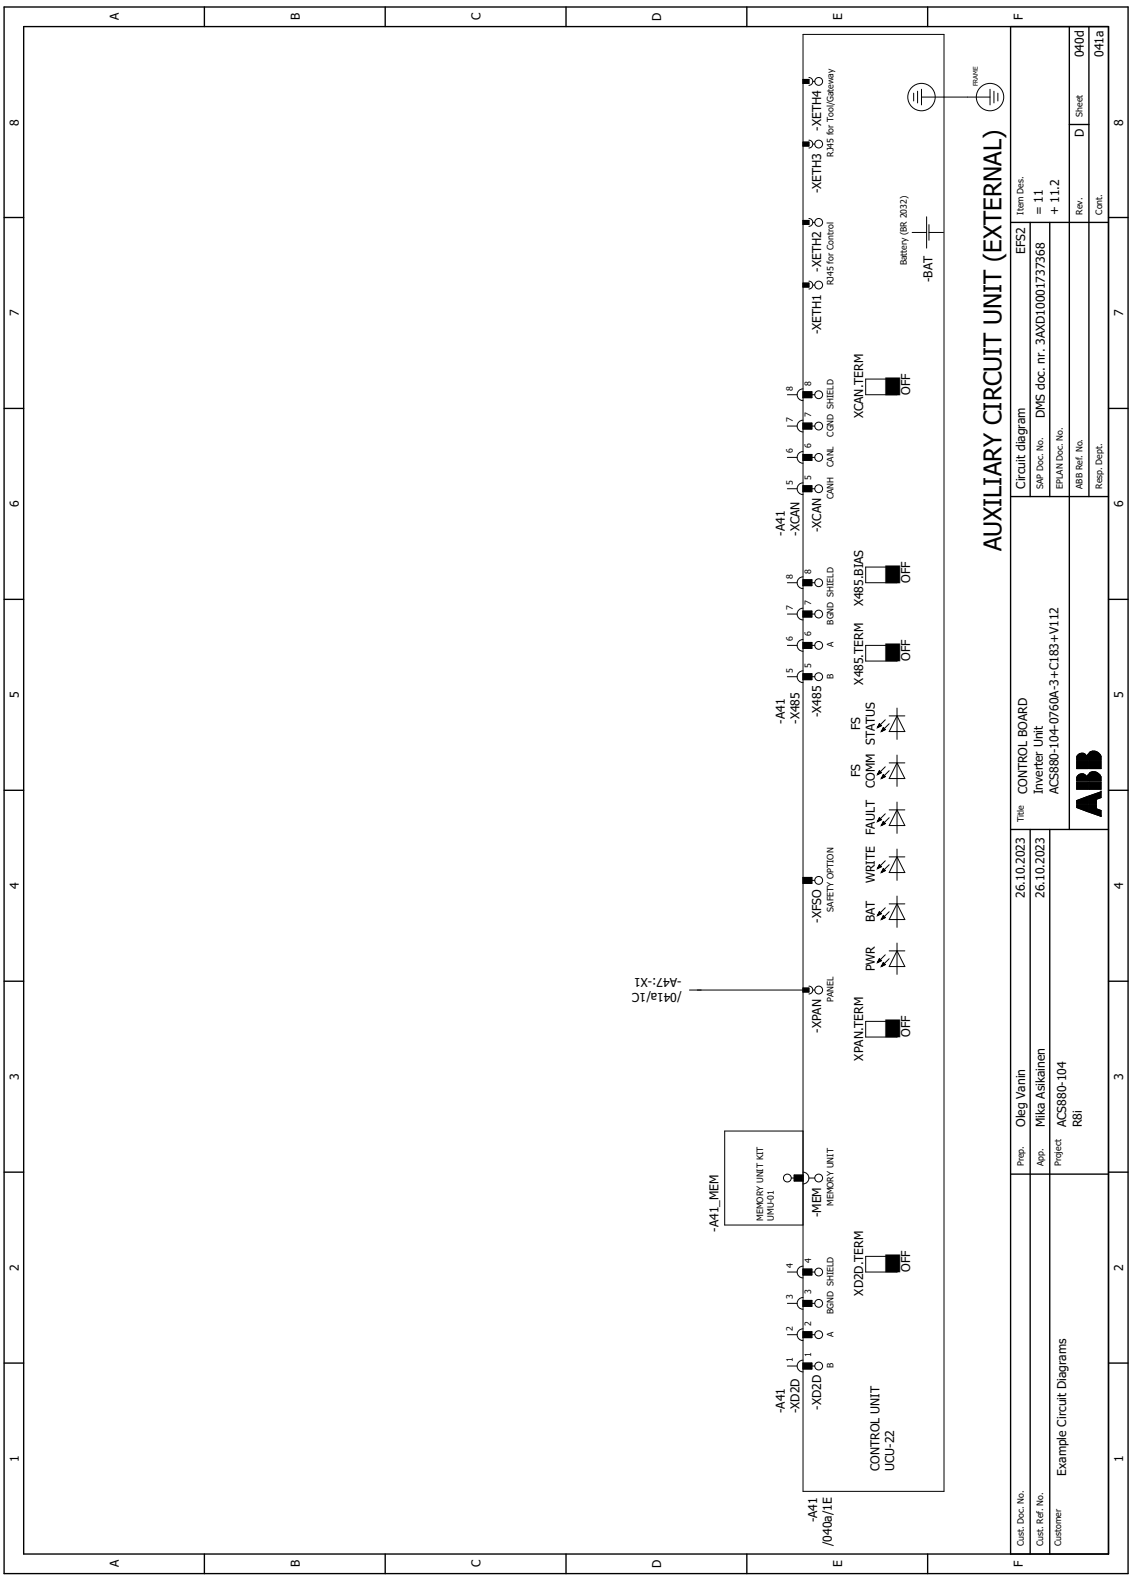


Frames 1×R8i and 2×R8i – Sheet 041a

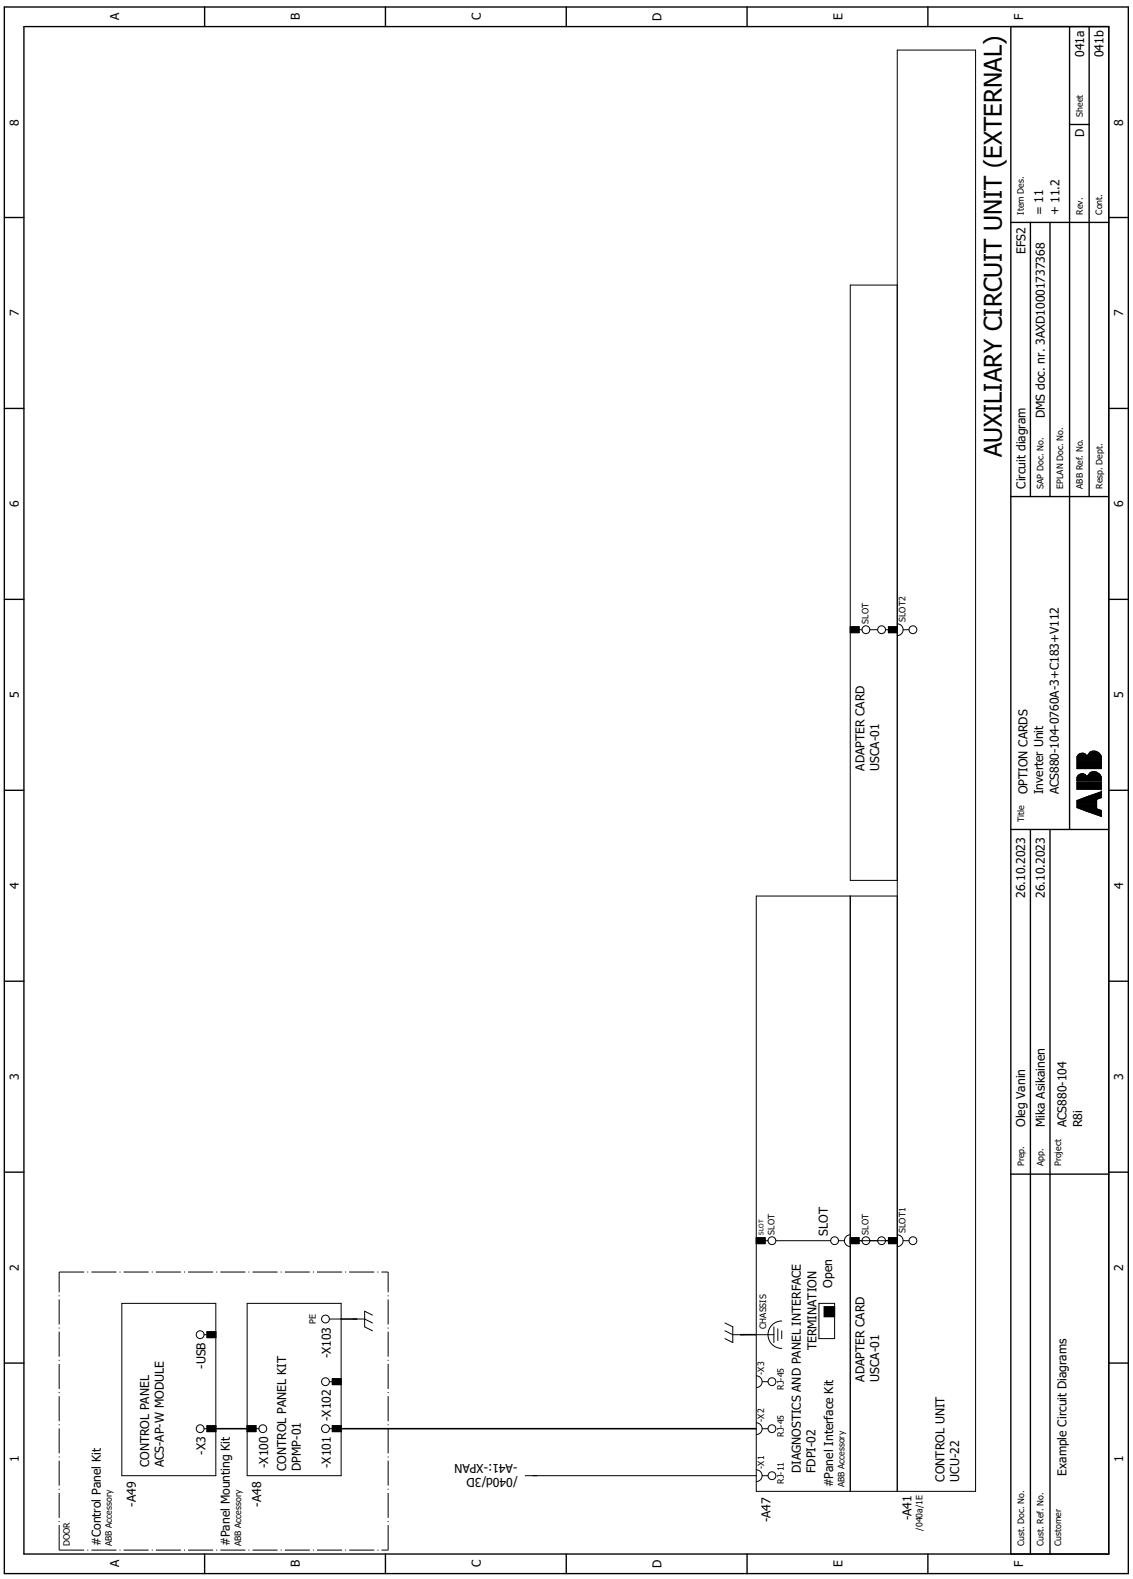

Frames 1×R8i and 2×R8i – Sheet 061a

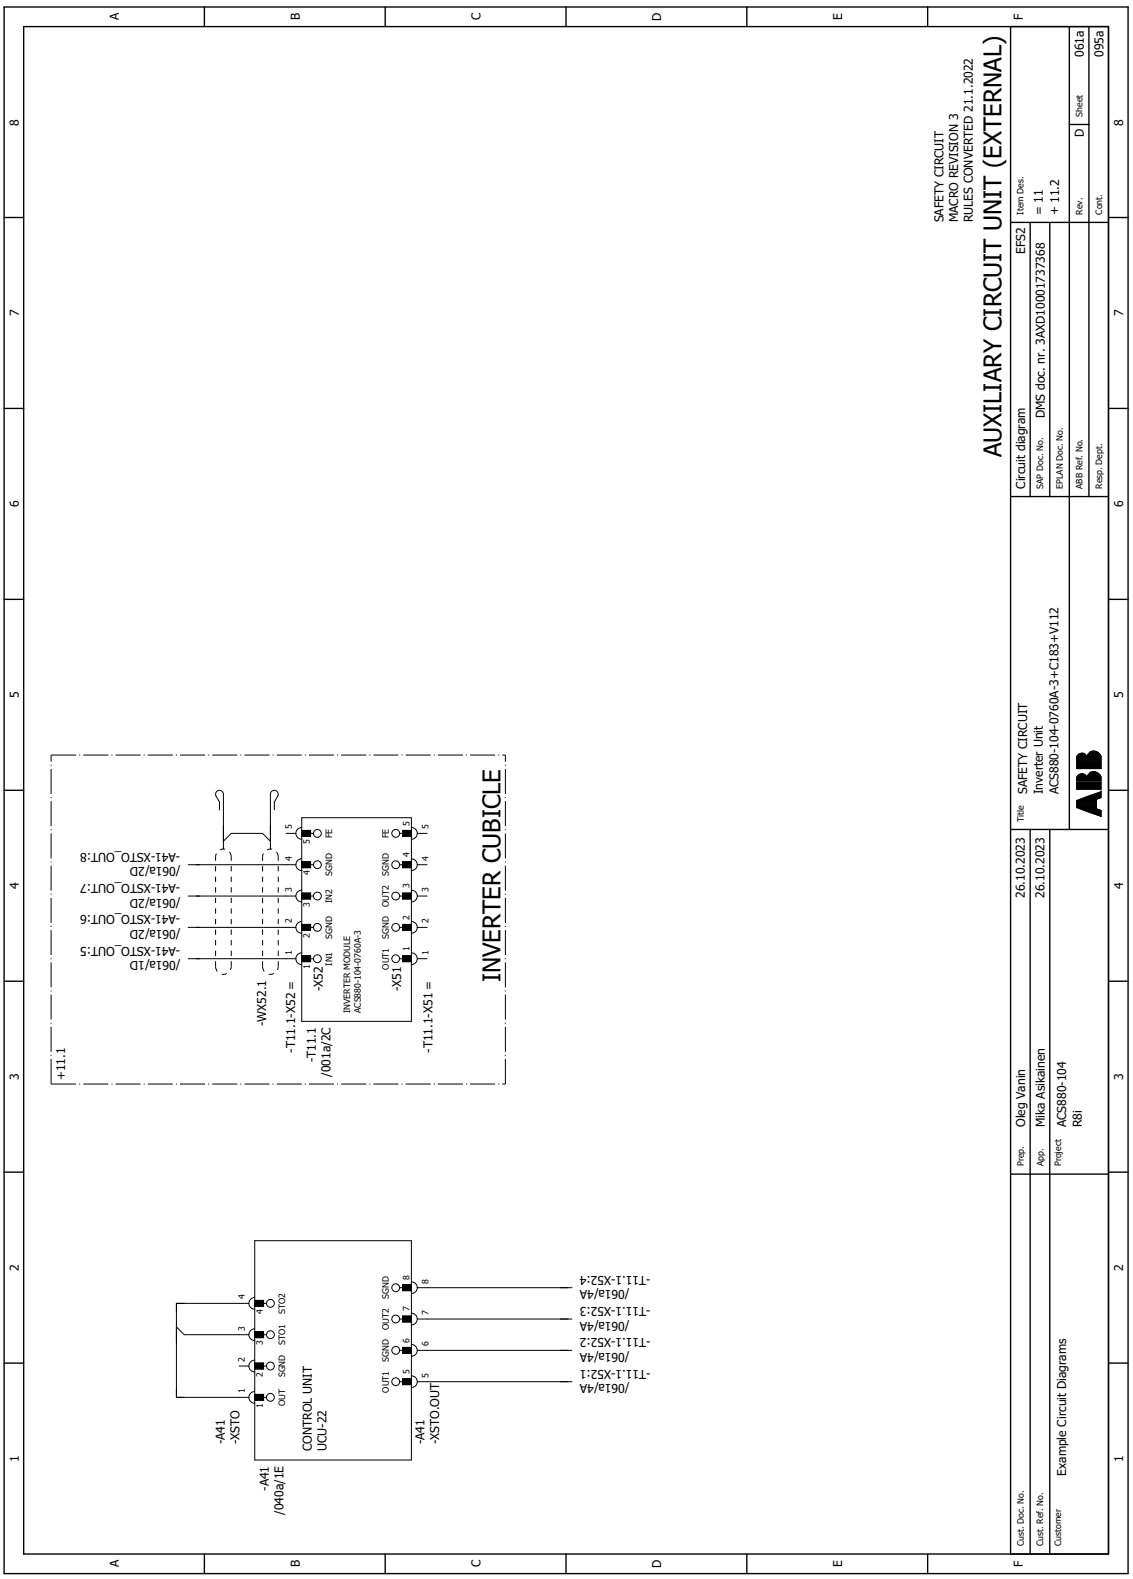


Frames 1×R8i and 2×R8i – Sheet 095a

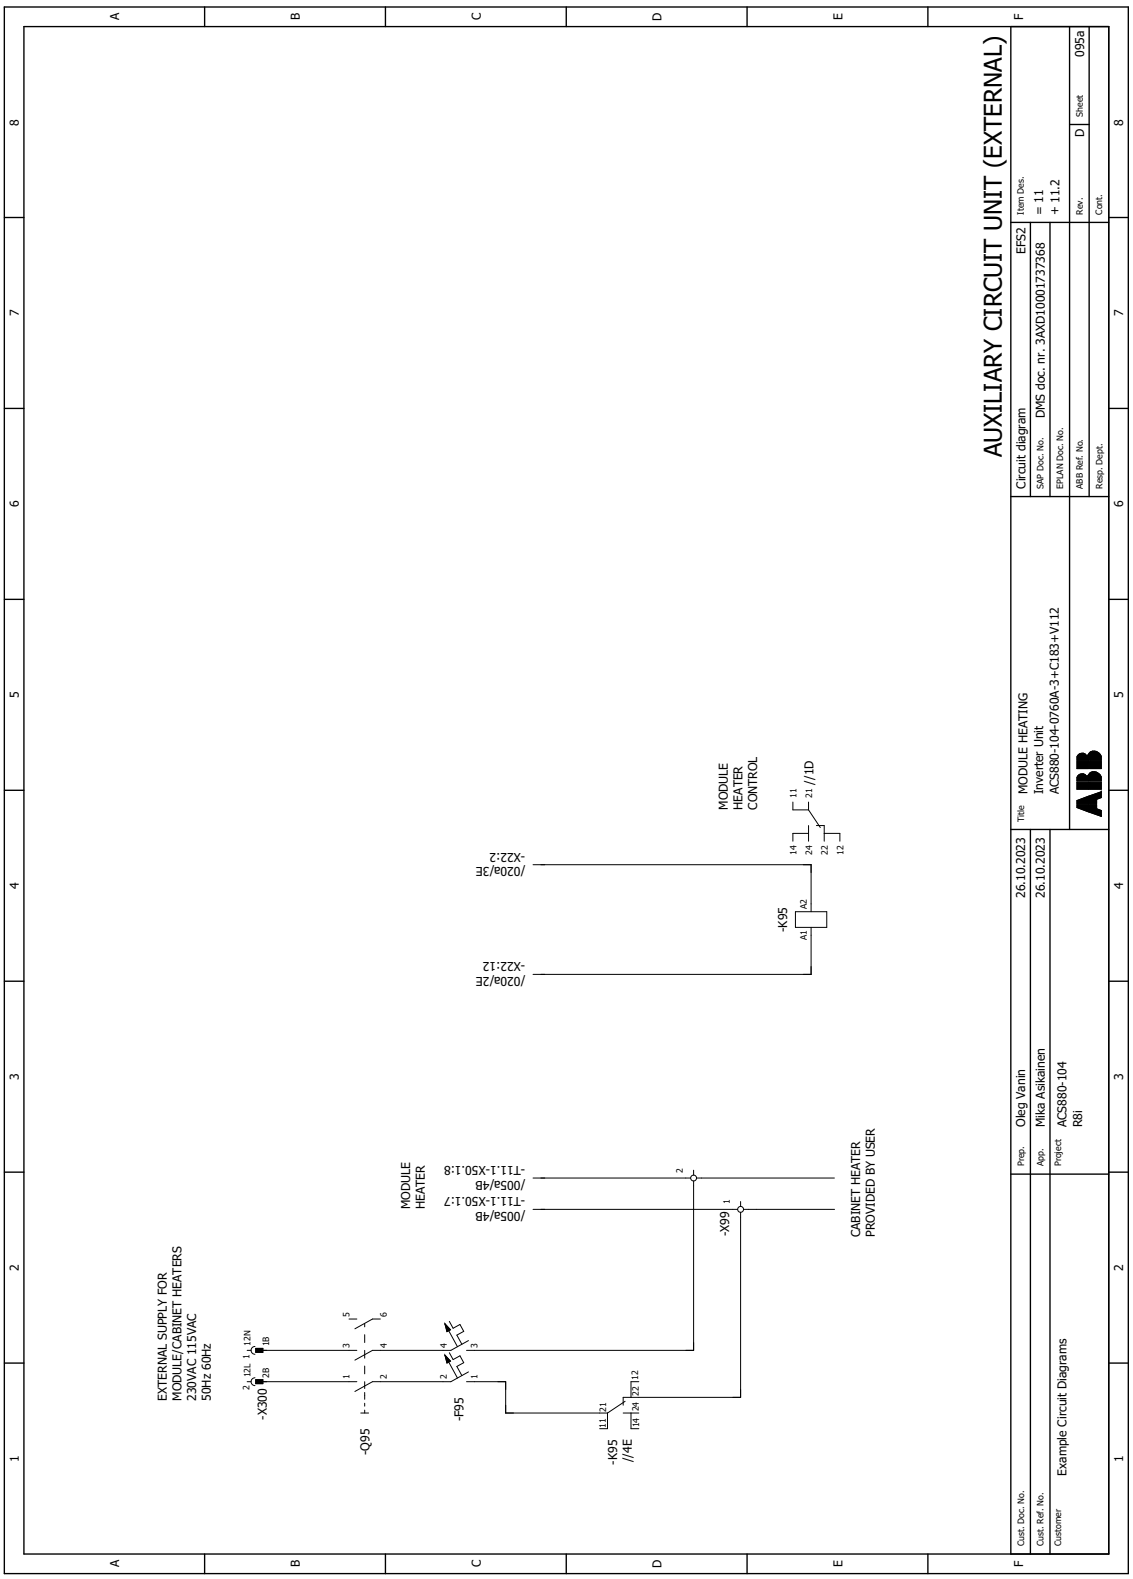

Frame 2×R8i – Sheet 000A




Frame 2×R8i – Sheet 000B

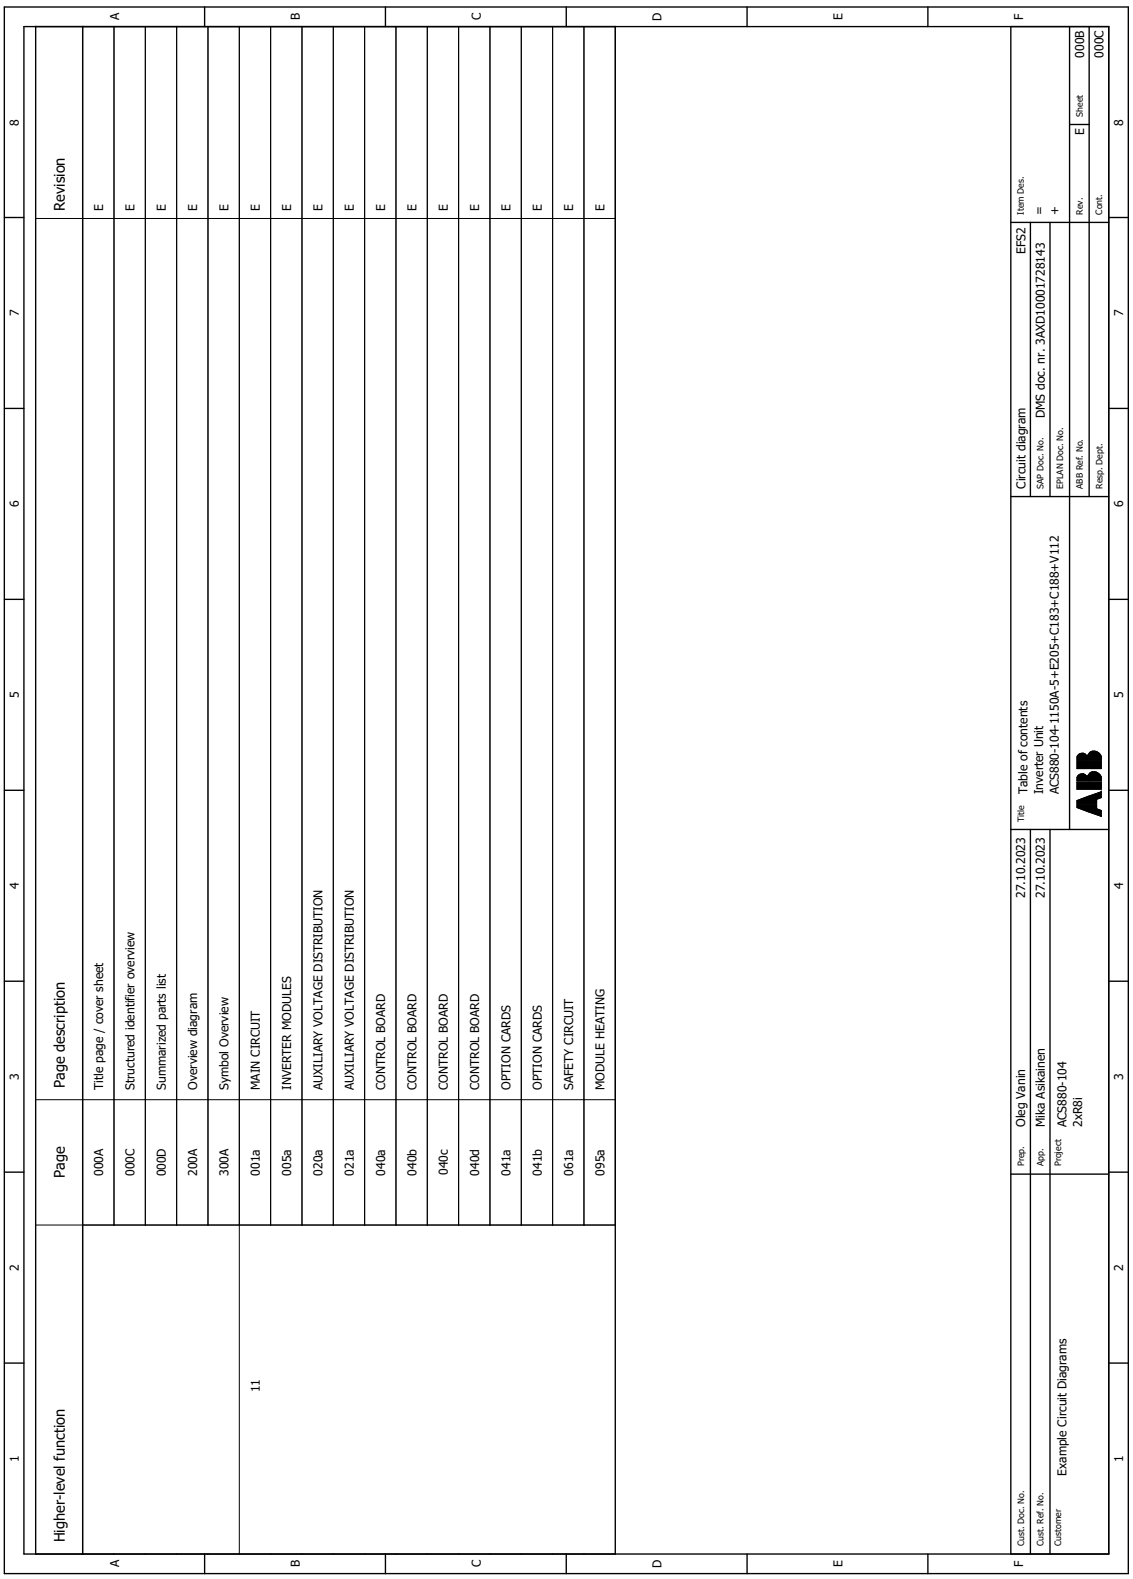


Higher-level function	Page	Page description	Revision
	000A	Title page / cover sheet	E
	000C	Structured identifier overview	E
	000D	Summarized parts list	E
	200A	Overview diagram	E
	300A	Symbol Overview	E
11	001a	MAIN CIRCUIT	E
	005a	INVERTER MODULES	E
	020a	AUXILIARY VOLTAGE DISTRIBUTION	E
	021a	AUXILIARY VOLTAGE DISTRIBUTION	E
	040a	CONTROL BOARD	E
	040b	CONTROL BOARD	E
	040c	CONTROL BOARD	E
	040d	CONTROL BOARD	E
	041a	OPTION CARDS	E
	041b	OPTION CARDS	E
	061a	SAFETY CIRCUIT	E
	095a	MODULE HEATING	E

Prep. Oleg Vanin 27.10.2023
Appr. Mika Asikainen 27.10.2023
Project ACS880-104 2xR8i
Title Table of contents Inverter Unit ACS880-104-1150A-5+E205+C183+C188+V112
Circuit diagram EFS2
SAP Doc. No. DMS doc. nr. 3AXD10001728143
EPLAN Doc. No.
ABB Ref. No.
Resp. Dept.
Item Des. = +
Rev. E Sheet 000B
Cont. 000C
Cust. Doc. No.
Cust. Ref. No.
Customer Example Circuit Diagrams


Frame 2×R8i – Sheet 000C

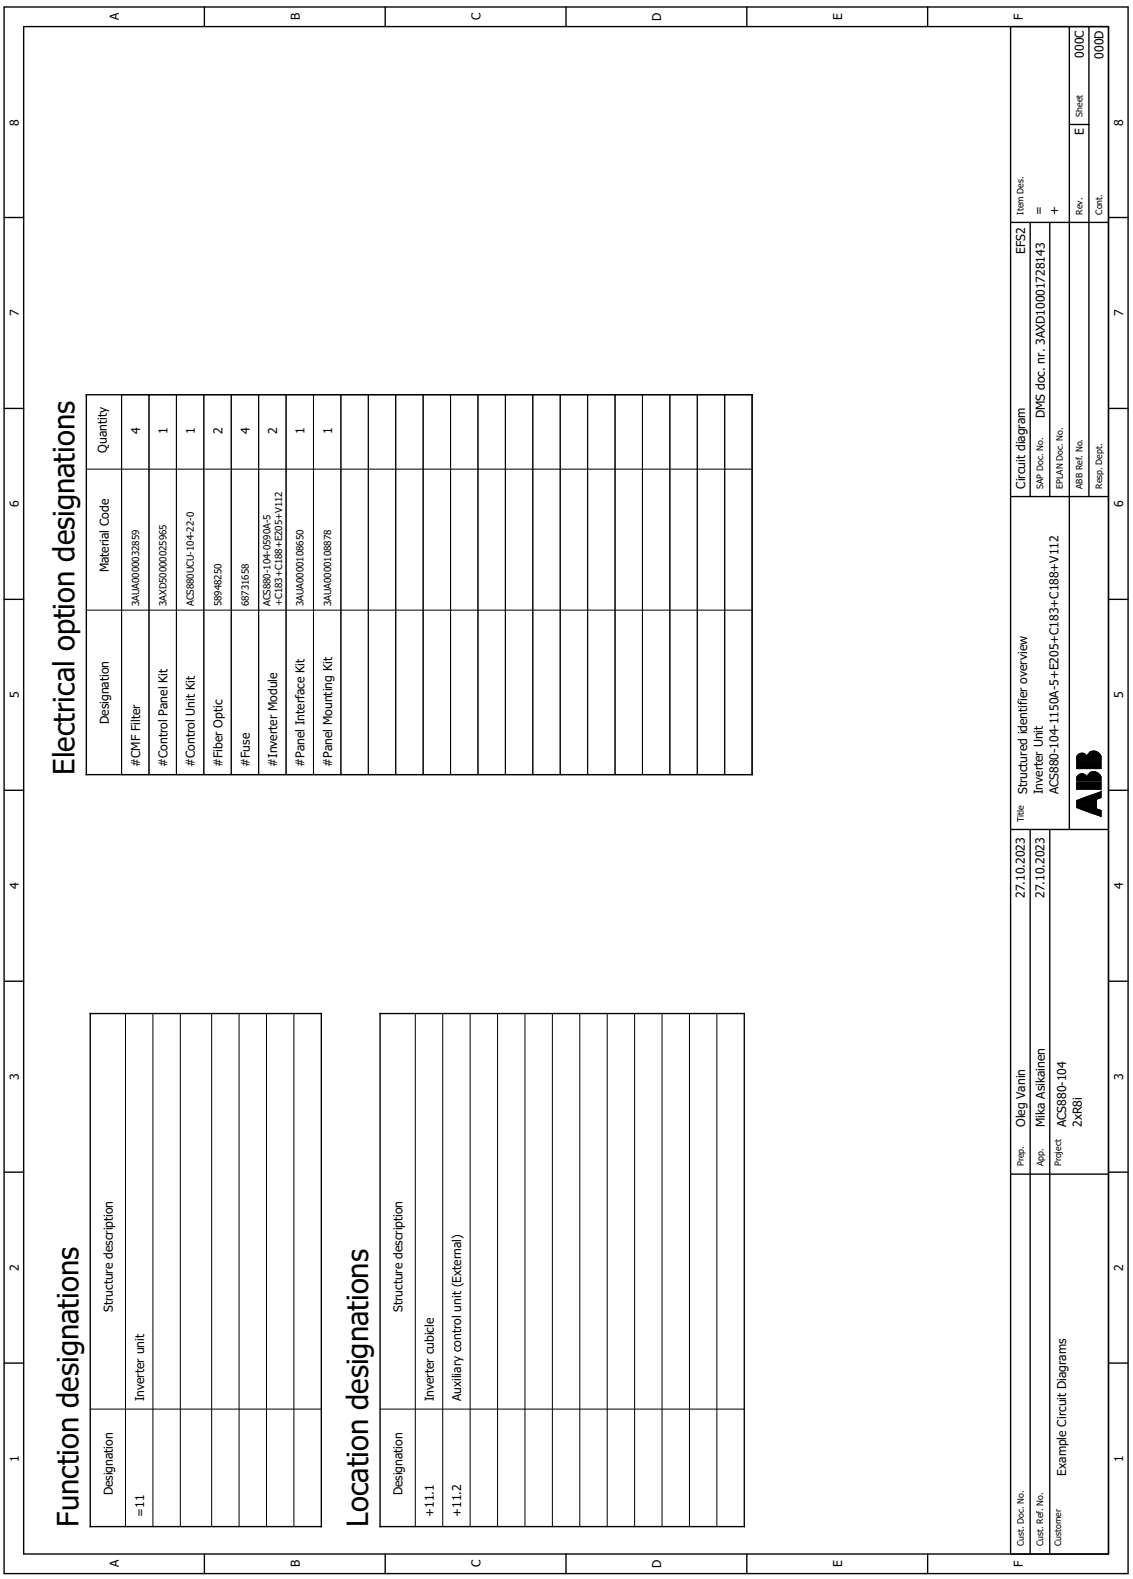


Frame 2×R8i – Sheet 001a

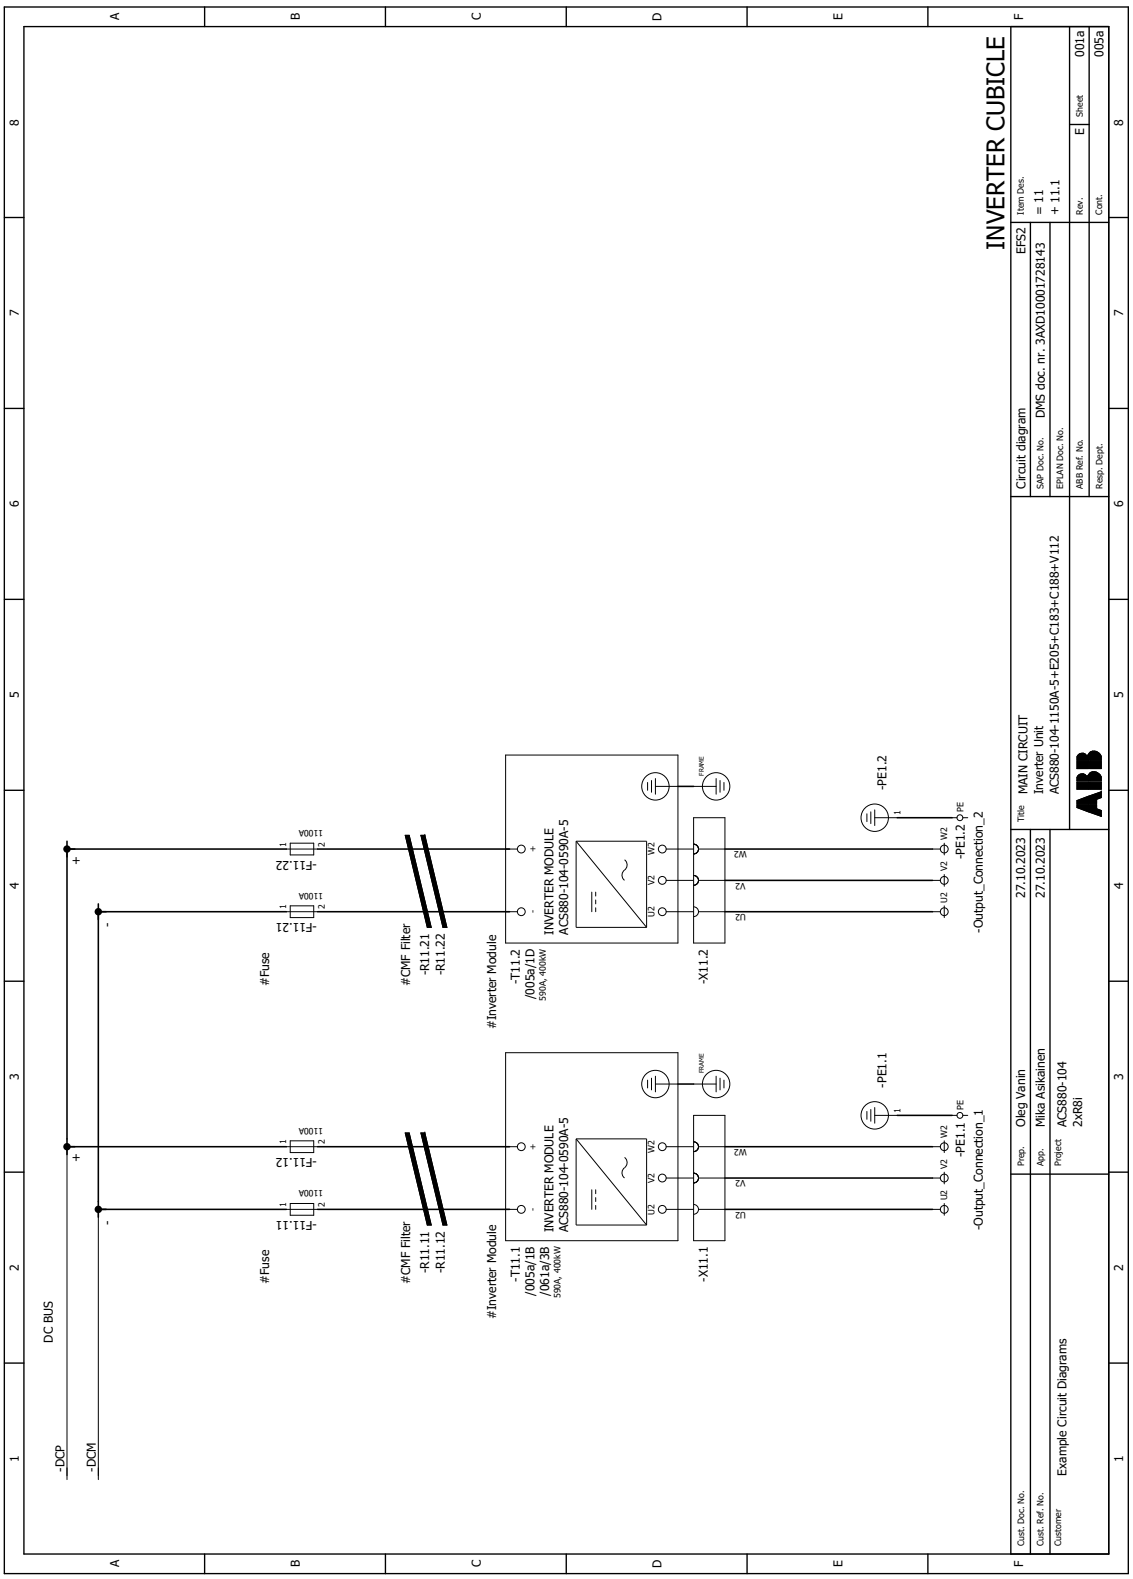


Frame 2×R8i – Sheet 005a

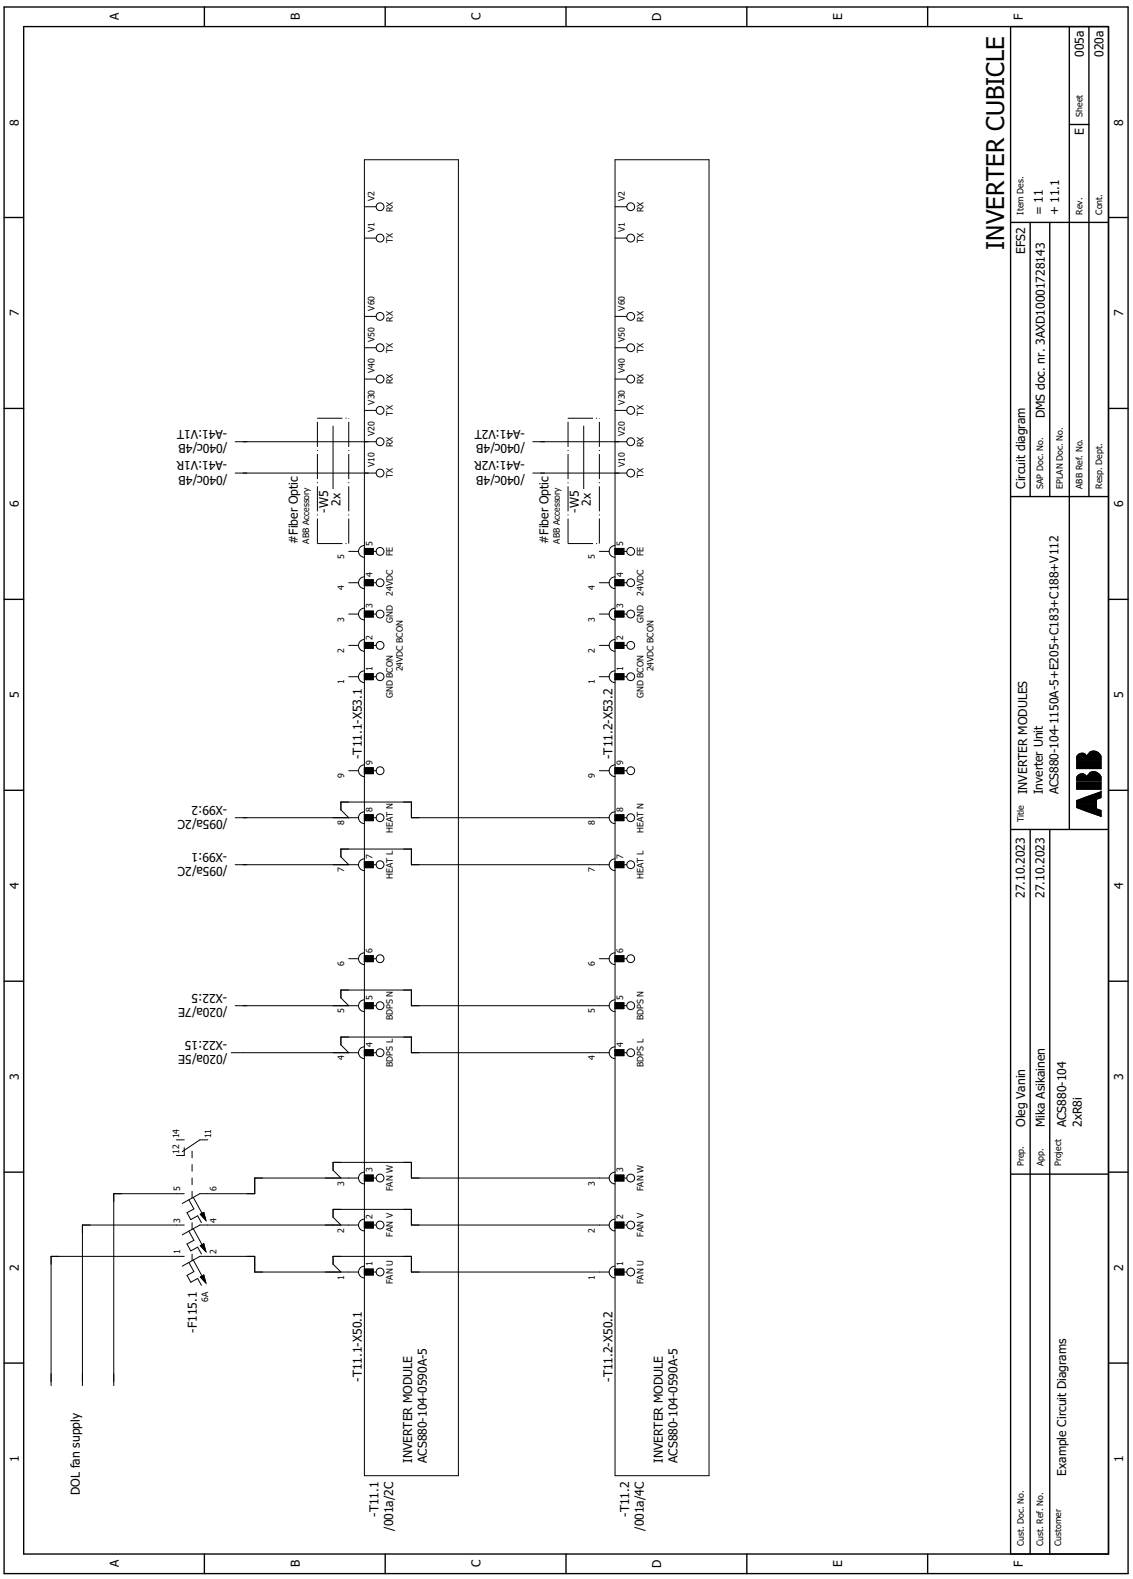

Frame 2×R8i – Sheet 020a

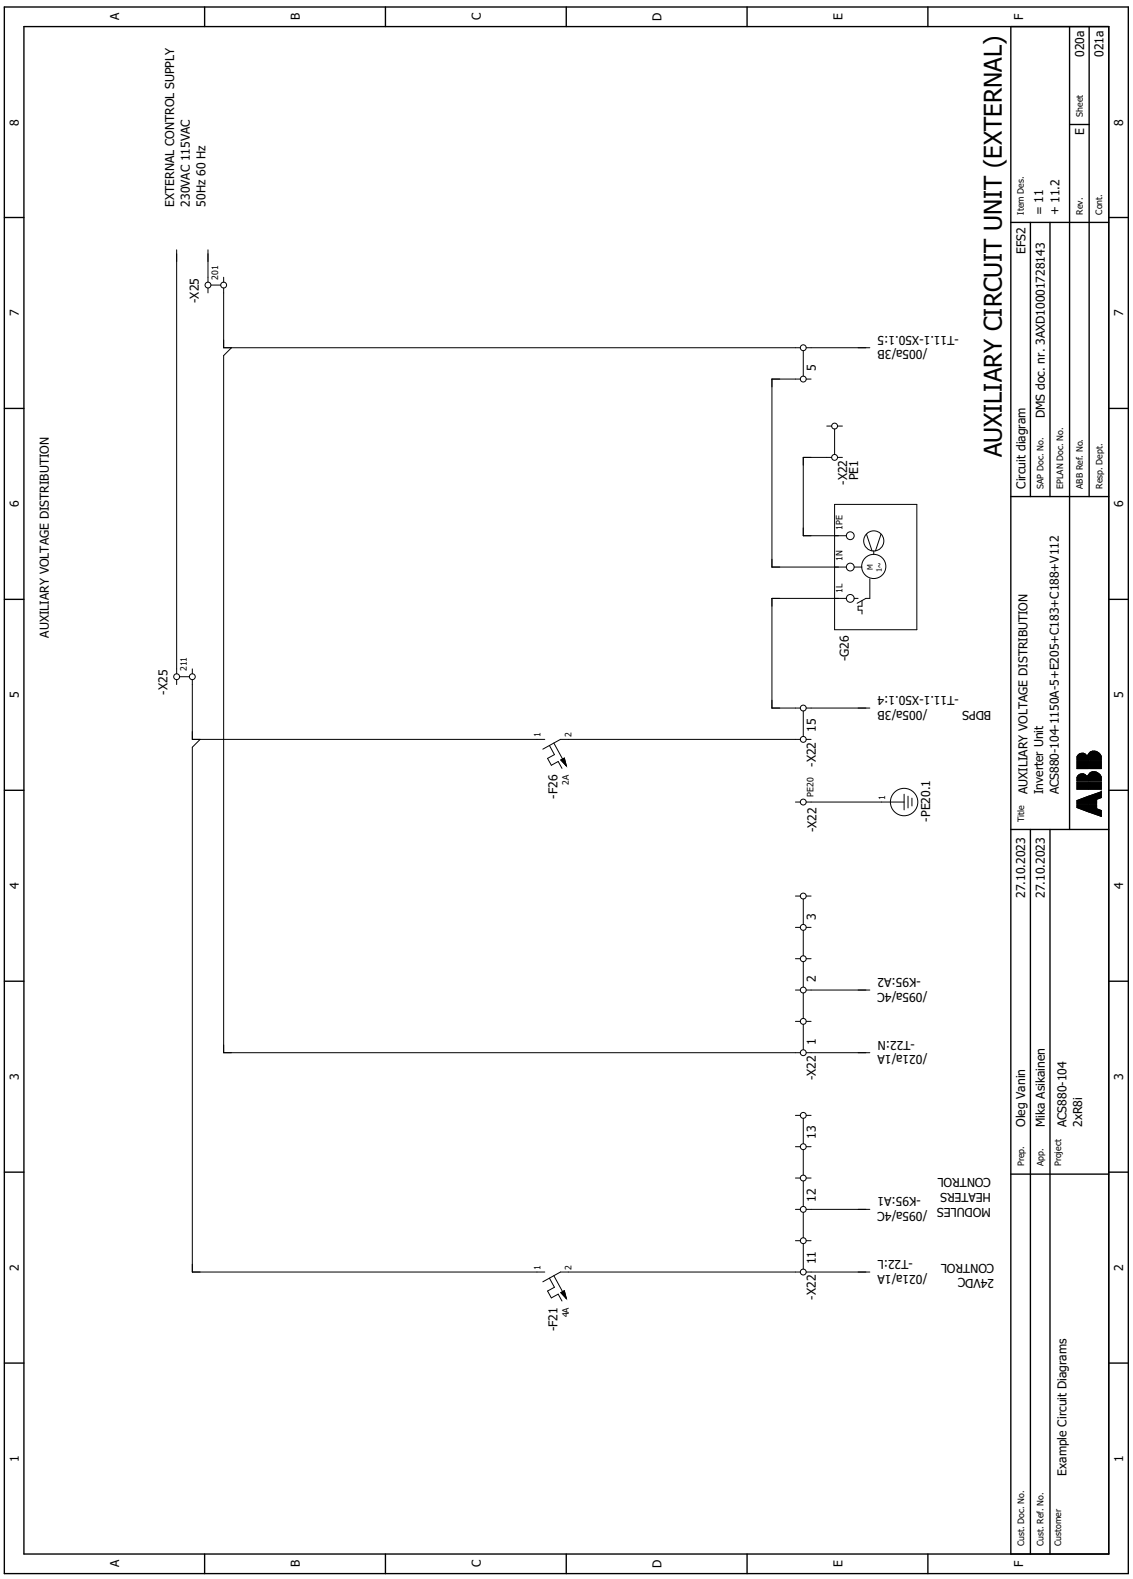

Frame 2×R8i – Sheet 040c

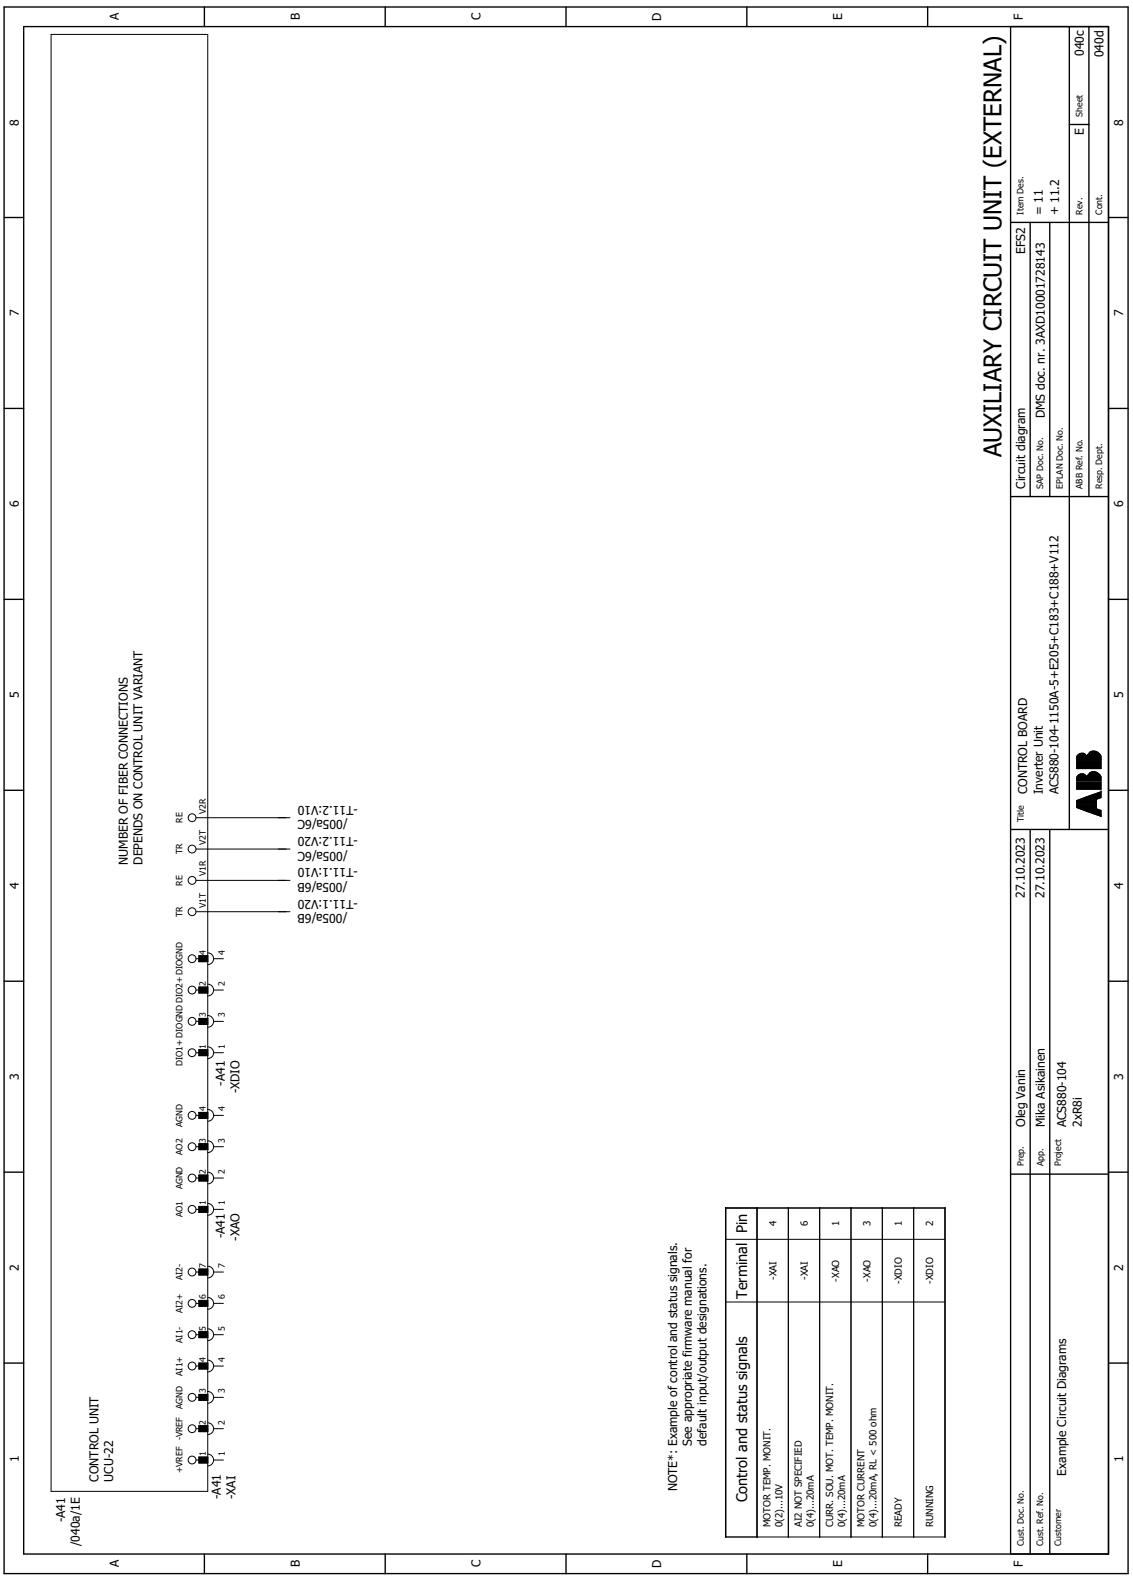

Further information

Product and service inquiries

Address any inquiries about the product to your local ABB representative, quoting the type designation and serial number of the unit in question. A listing of ABB sales, support and service contacts can be found by navigating to www.abb.com/contact-centers.

Product training

For information on ABB product training, navigate to new.abb.com/service/training.

Providing feedback on ABB manuals

Your comments on our manuals are welcome. Navigate to forms.abb.com/form-26567.

Document library on the Internet

You can find manuals and other product documents in PDF format on the Internet at www.abb.com/drives/documents.

a10 (frozen)
PDF-A4
Created 2025-01-10, 08:13:05

www.abb.com/drives

3AUA0000104271N

© Copyright 2025 ABB. All rights reserved.
Specifications subject to change without notice.

3AUA0000104271 Rev N (EN) 2025-01-10