Dimensions and Mounting

The EPM-31 complies with the PC/104 standard which provides for specific mounting hole and PC/104-*Plus* stack locations as shown in Figure 5.

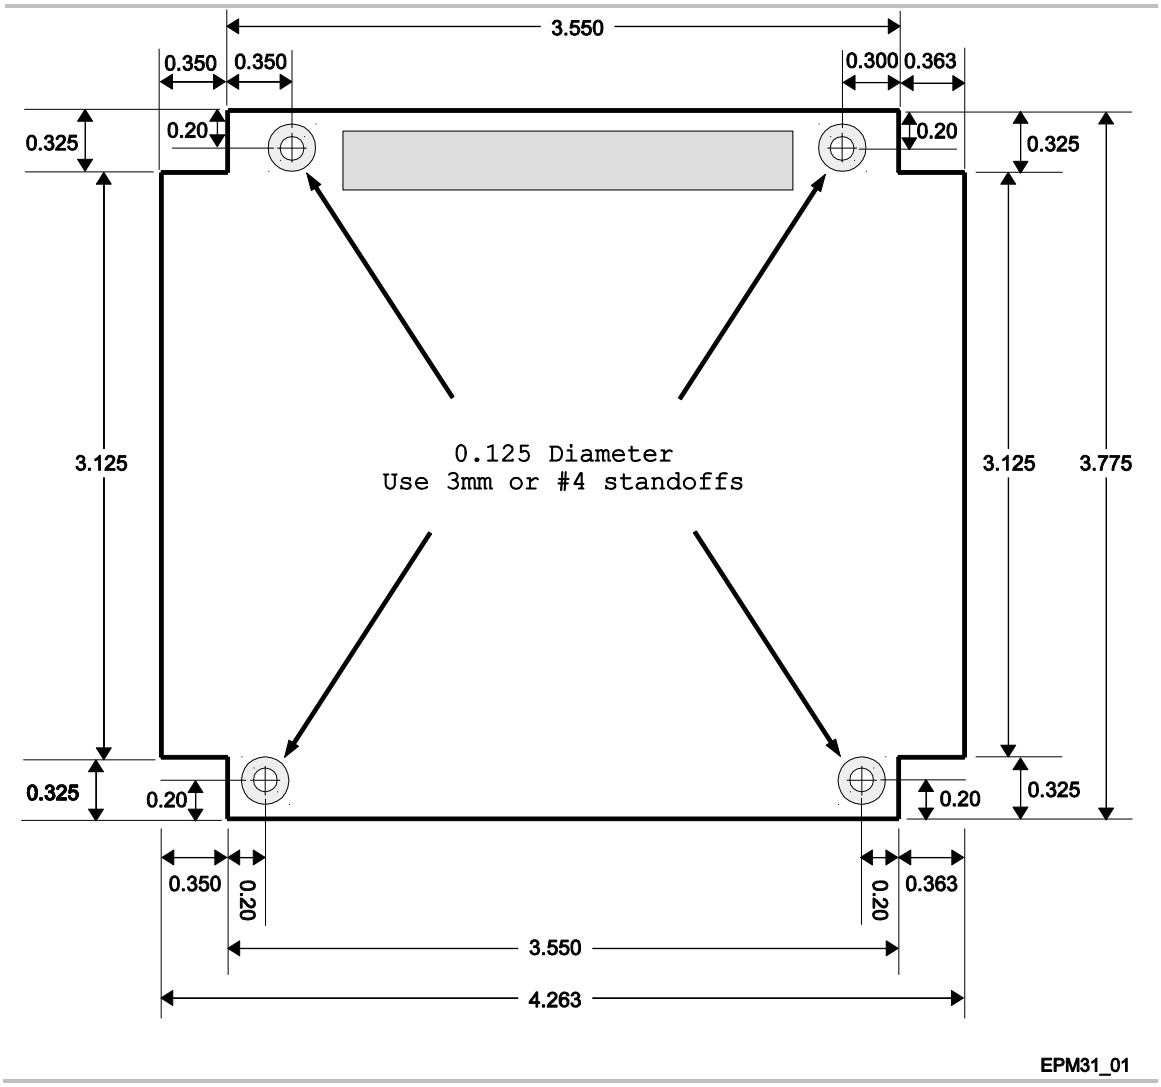

Figure 5. EPM-31 Dimensions and Mounting Holes
(Not to scale. All dimensions in inches.)

CAUTION:

The EPM-31 must be supported at all four mounting points to prevent excessive flexing when expansion modules are attached and removed. Flex damage caused by excessive force on an improperly mounted circuit board is not covered under the product warranty.