

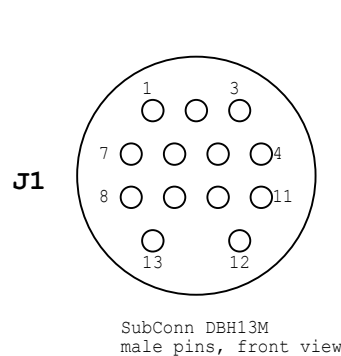
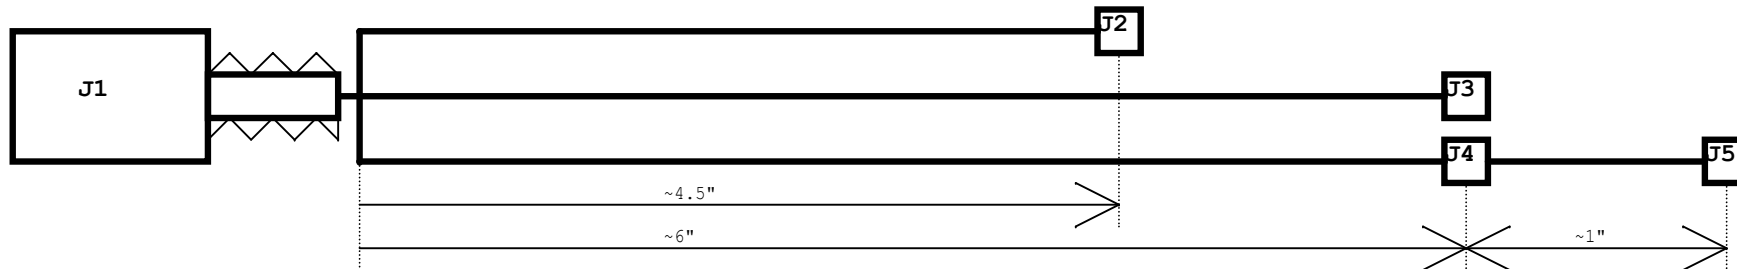


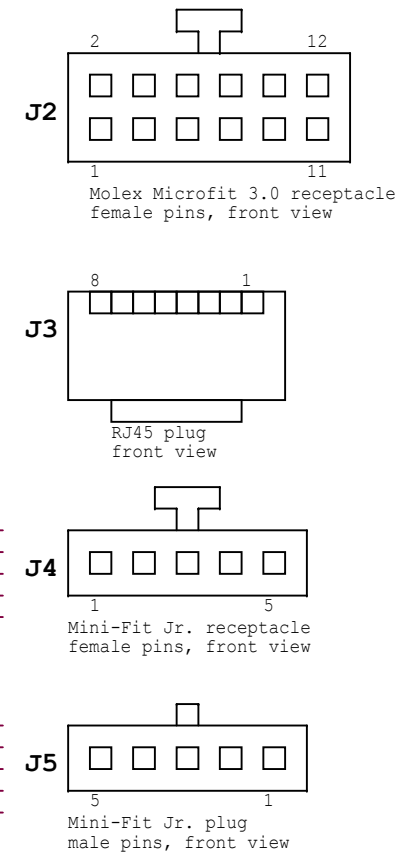


- install penetrator in hole currently plugged off
- install penetrator into housing using blue loctite
- o-ring is supplied in bag
- install locking sleeve with male thread before mounting penetrator

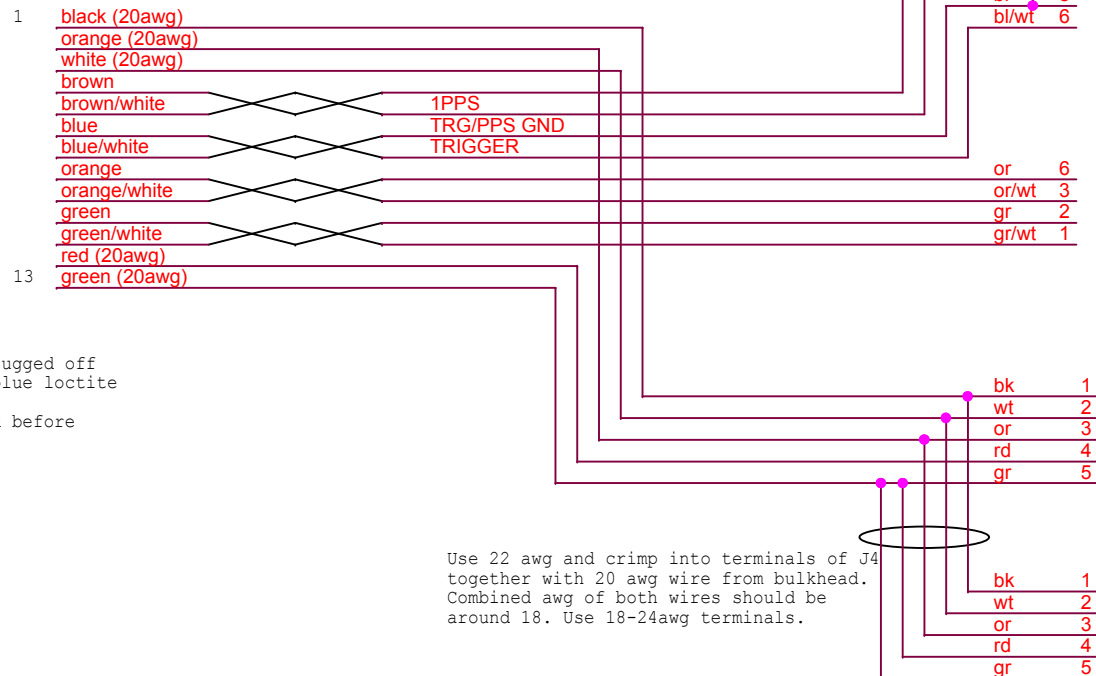



Actual wire lengths should be determined by leaving leads longer at first and see if connector can be properly inserted into board at that length, then adjust as needed.

Title		
Reson T50 penetrator hookup		
Size A	Document Number <Doc>	Rev 1
Date:	Monday, March 11, 2019	Sheet 1 of 1

J1

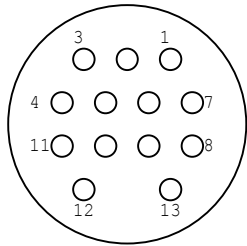

SubConn DIL13F
female pins, front view

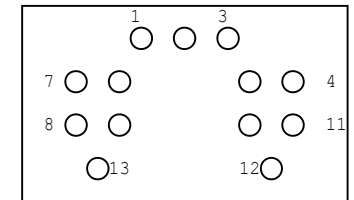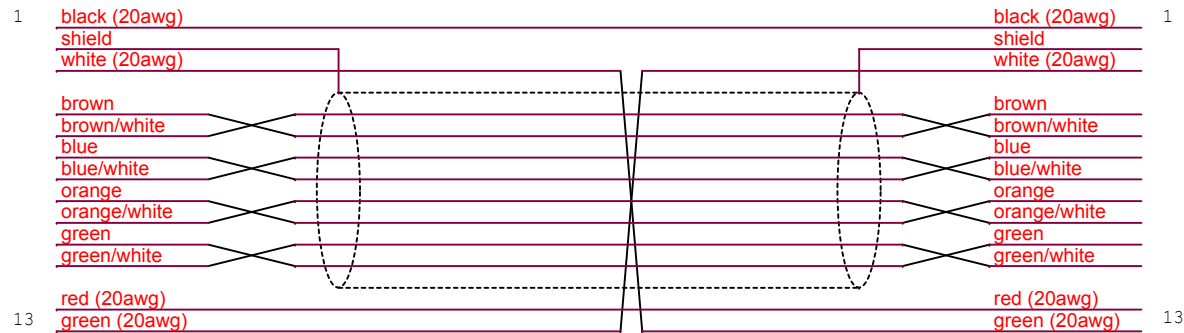

SubConn DLPIL13M
male pins, front view

- Prepare cable for potting but don't pot until tested by us
- twisted pairs carry Ethernet so keep twisted as close to joint as possible
- Use maximum length of cables, don't shorten more than necessary for joining

Title		
Reson T50 bus wetcable		
Size A	Document Number <Doc>	Rev 1
Date:	Tuesday, March 12, 2019	Sheet 1 of 1