


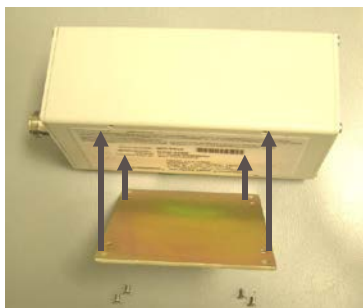

Rugged & Waterproof Modem Mounting Kit (MBRKHNPS)

1. Align Enclosure mounting holes over the bracket inner screw holes, with beveled side facing out.
2. Insert the screws provided from the backside of the bracket and tighten. (Mounting holes are for attaching to a flat surface).

DSI0011AA

POH0011MB
