


CELLULAR BRIDGE MOUNTING INSTRUCTIONS


STEP 1: Remove 4 plugs from bottom of Cell Bridge device using 1/16"-hex allen wrench.

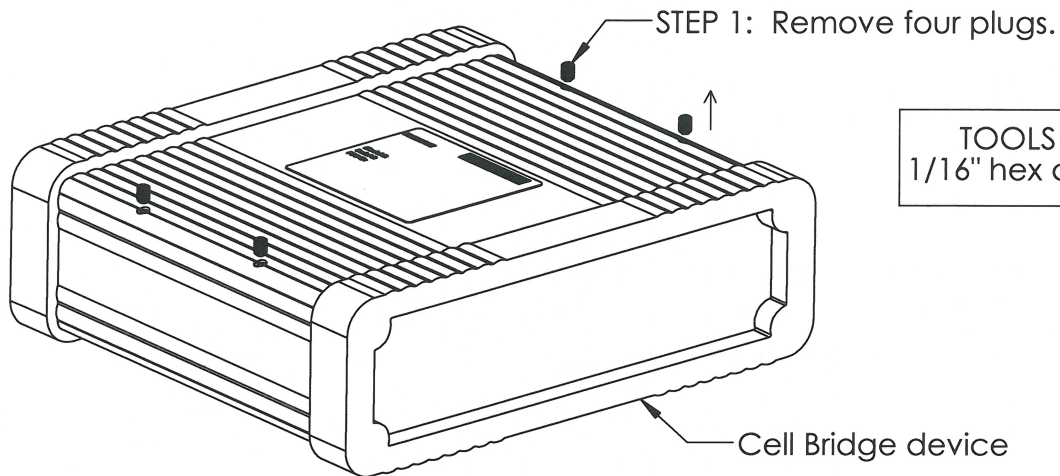

TOOLS NEEDED:
1/16" hex allen wrench

STEP 2: Decide on mounting method. If mounting to DIN rail, go to STEP 3. If mounting to flat surface, go to STEP 4.

STEP 3: Mount DIN bracket assembly to bottom of Cell Bridge device as shown using the four #6 screws provided. Insert screws into same tapped holes where plugs were previously removed.

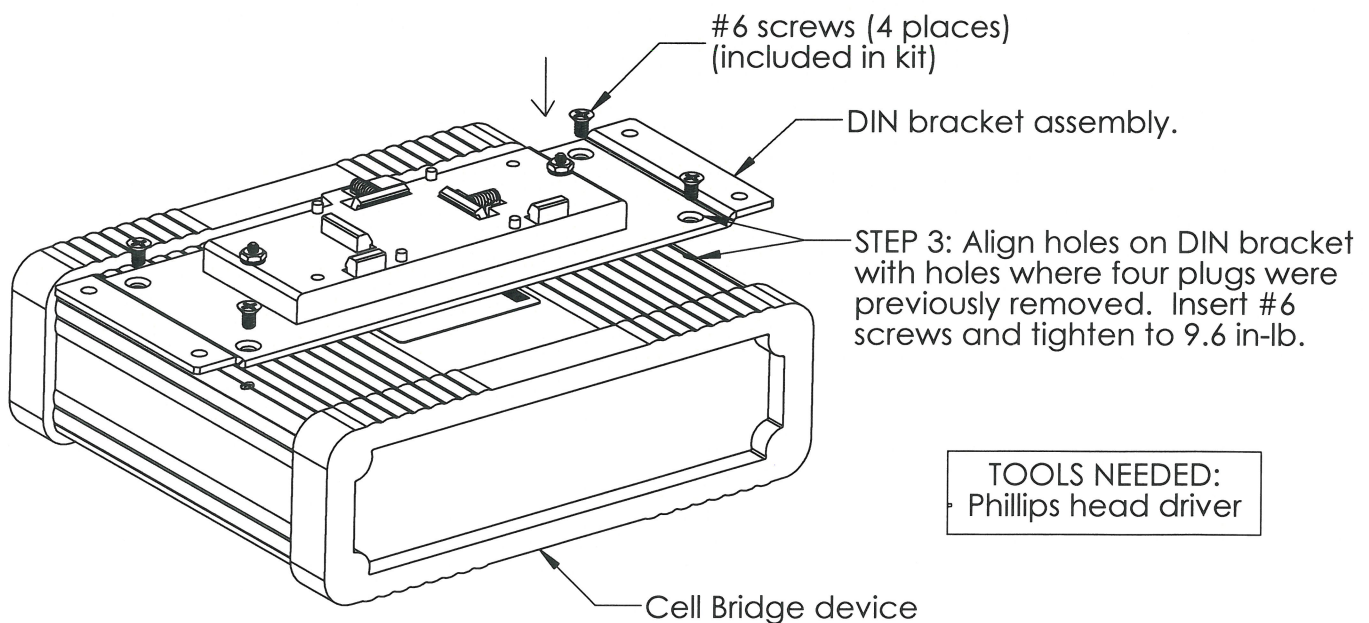

TOOLS NEEDED:
Phillips head driver

REVISIONS			
REV	ECN	DESCRIPTION	DATE
A	3172	INITIAL RELEASE	09-14-12

NAME	DATE
DRAWN PJ	09-14-12
CHECKED <i>WJ</i>	9/24/12
ENG APV <i>RC</i>	9/26/12

CELLULAR BRIDGE MOUNTING INSTRUCTIONS

STEP 4: Prepare DIN bracket assembly for flat surface mount by removing the green DIN guide. First loosen and remove fasteners that attach green DIN guide to mounting plate. Next, attach mounting plate to bottom of Cell Bridge device using same holes where plugs were previously removed in step 1.

