

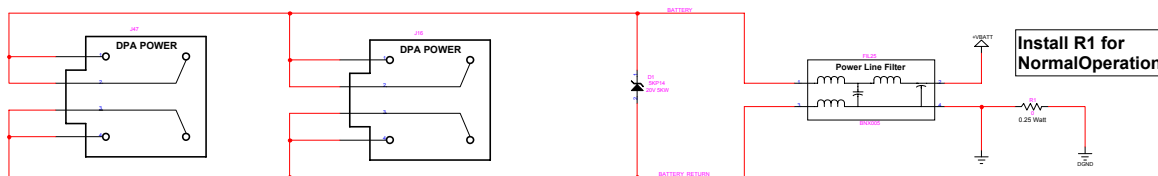
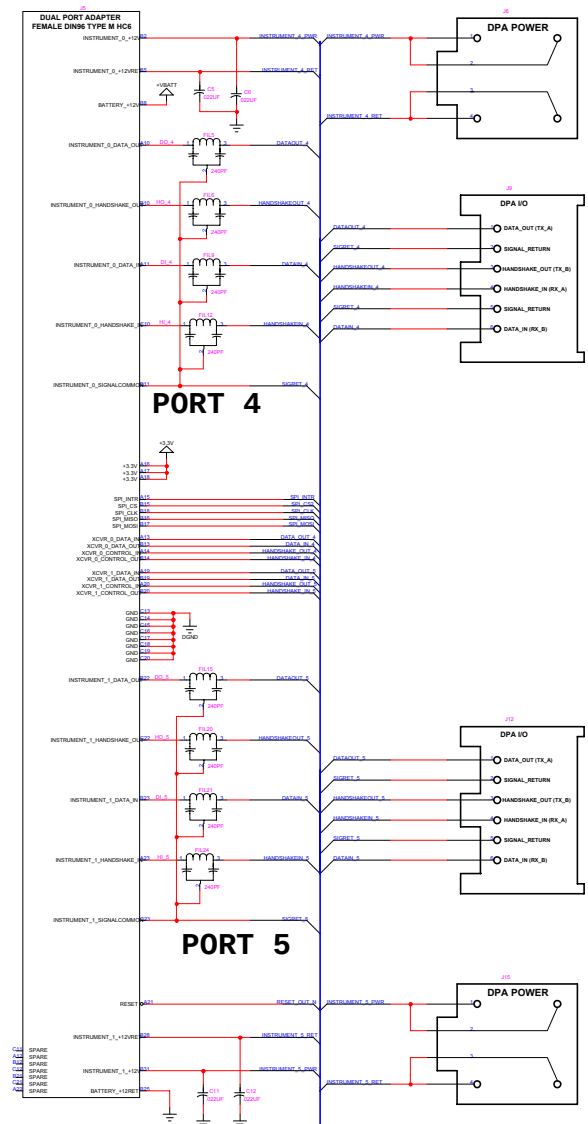
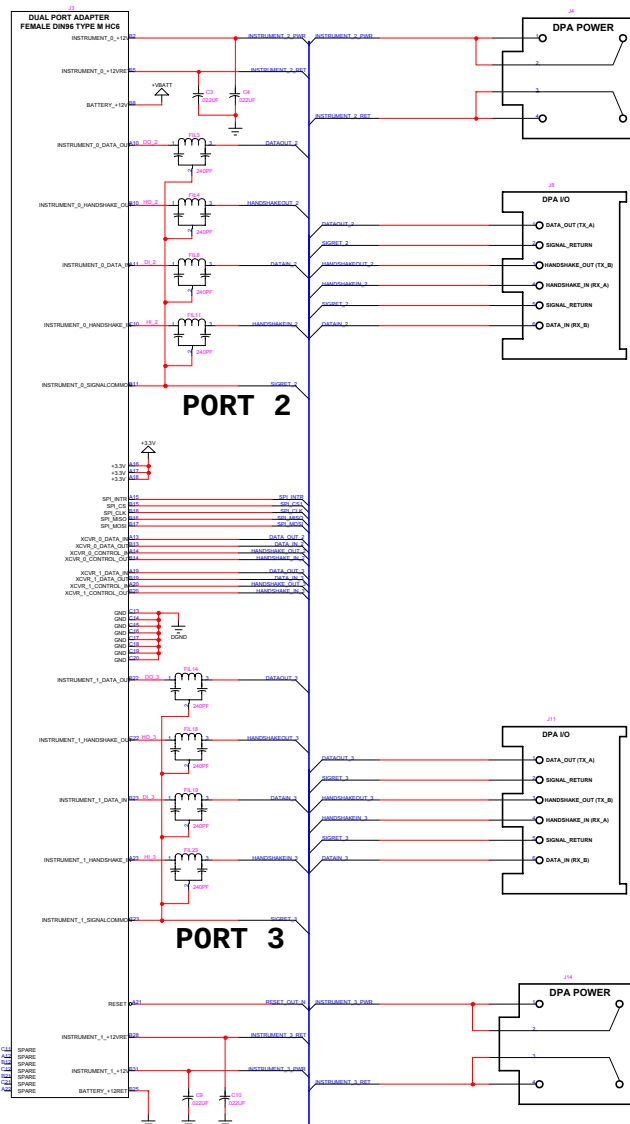
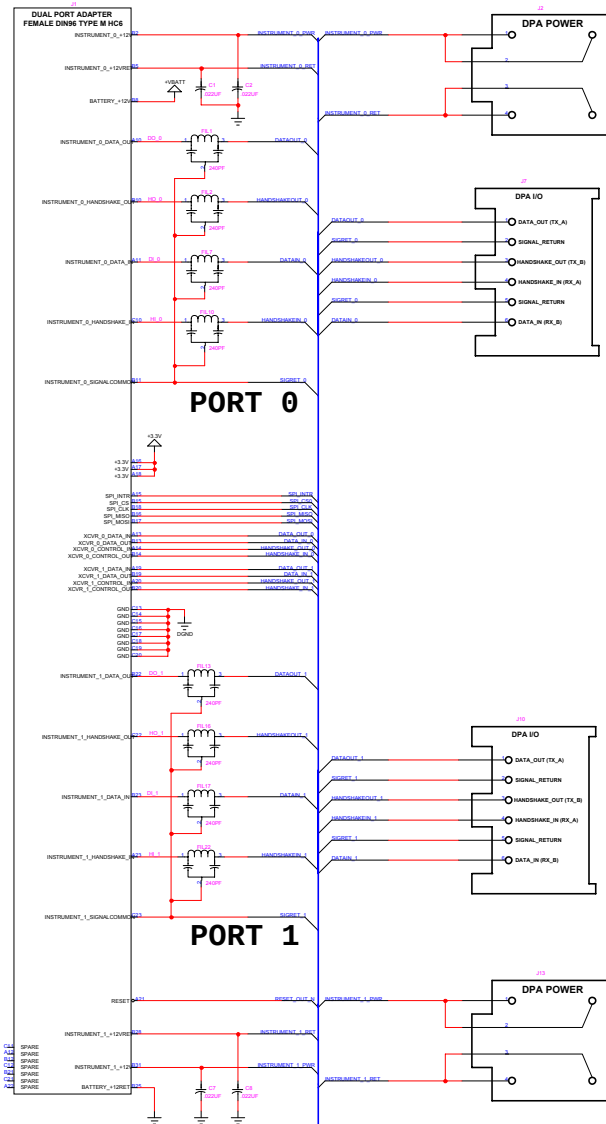
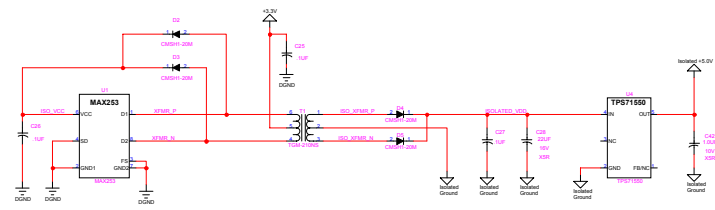
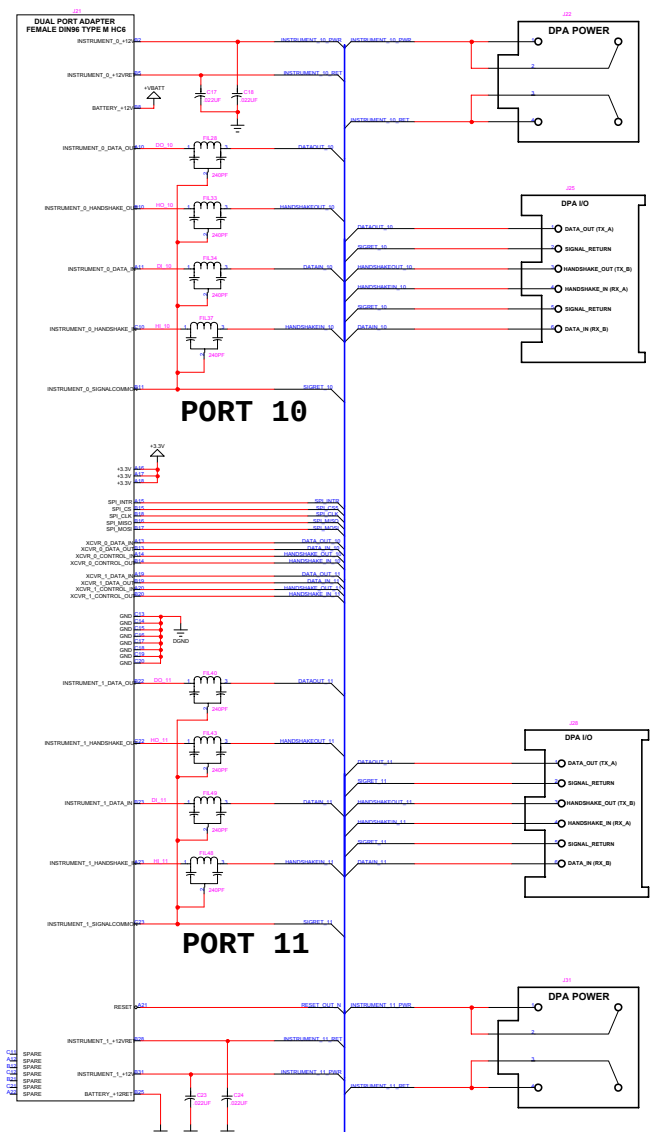


## DPA PORTS 0 TO 5

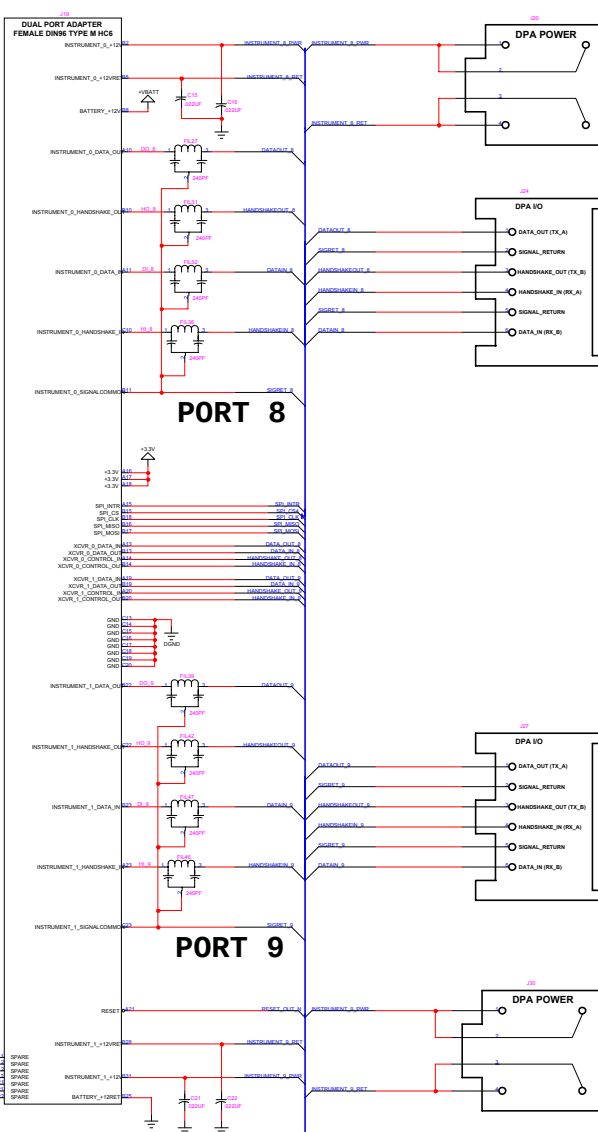


File:sixslot.cct  
Last Mod:18/9/2003  
Page: 1 OF 4  
Copyright ©2003, MBARI  
Revision 1.9

## DPA PORTS 6 TO 11

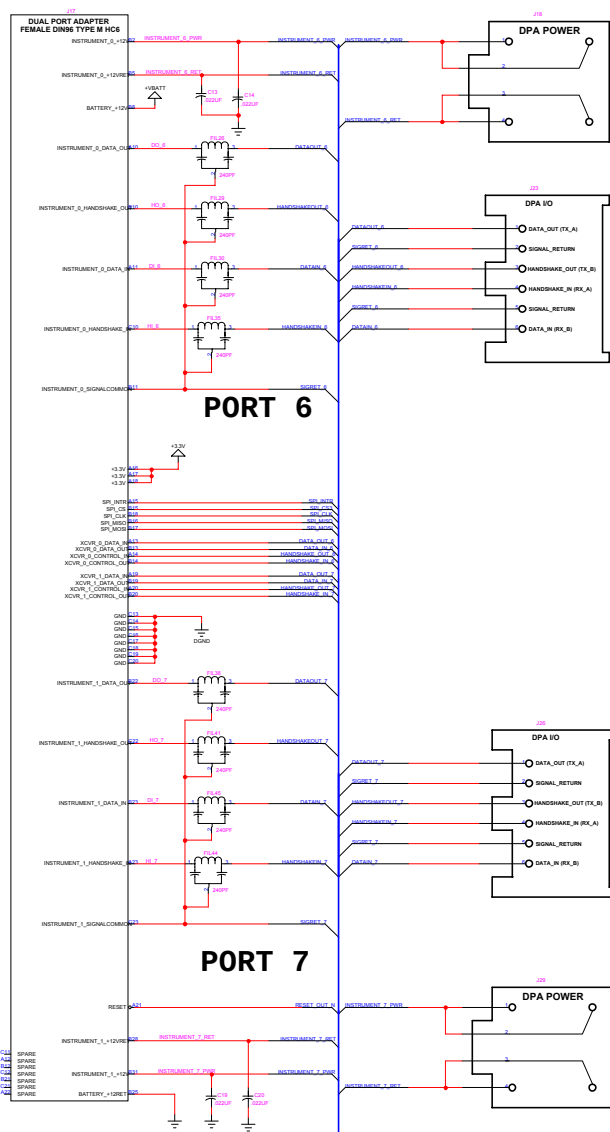

## SIDARM, RF MODEM, COMM CONTROLLER

**Install FB1 for controller.  
Do not install FB1 for use in  
power can.**

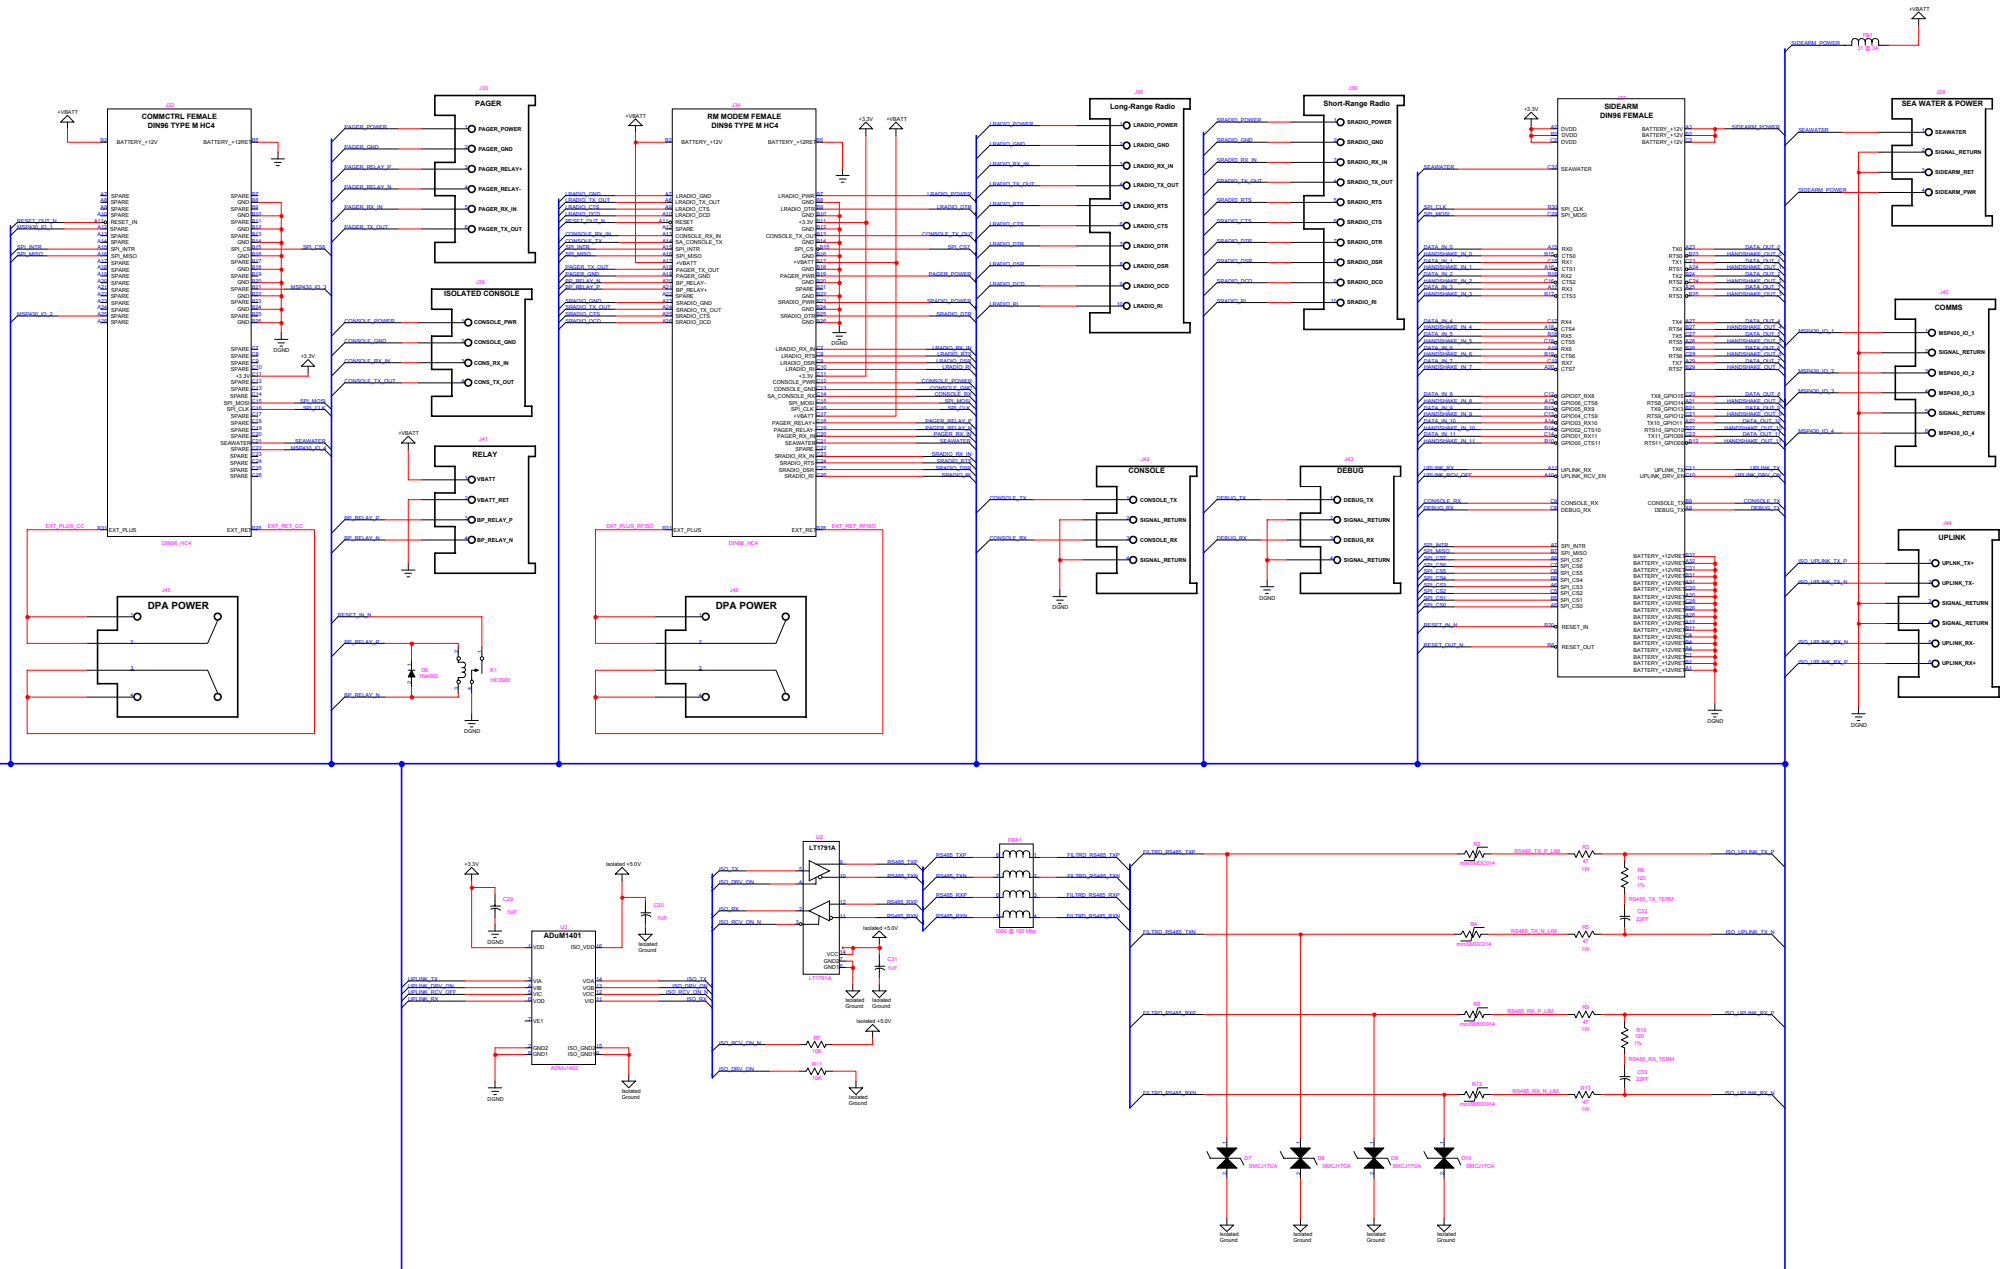

# BACKPLANE TERMINATIONS

