

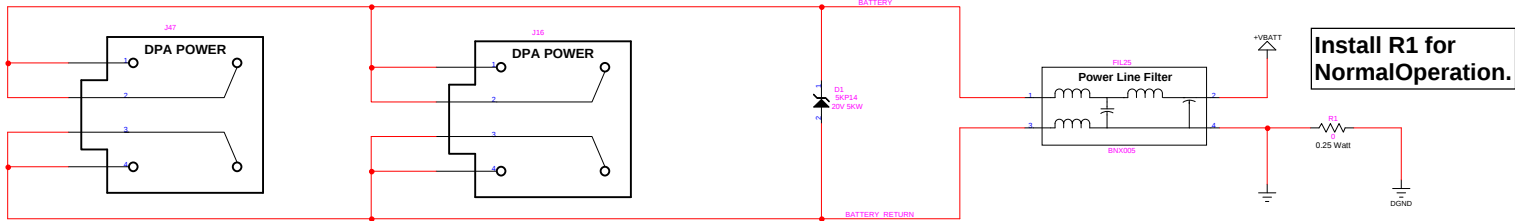
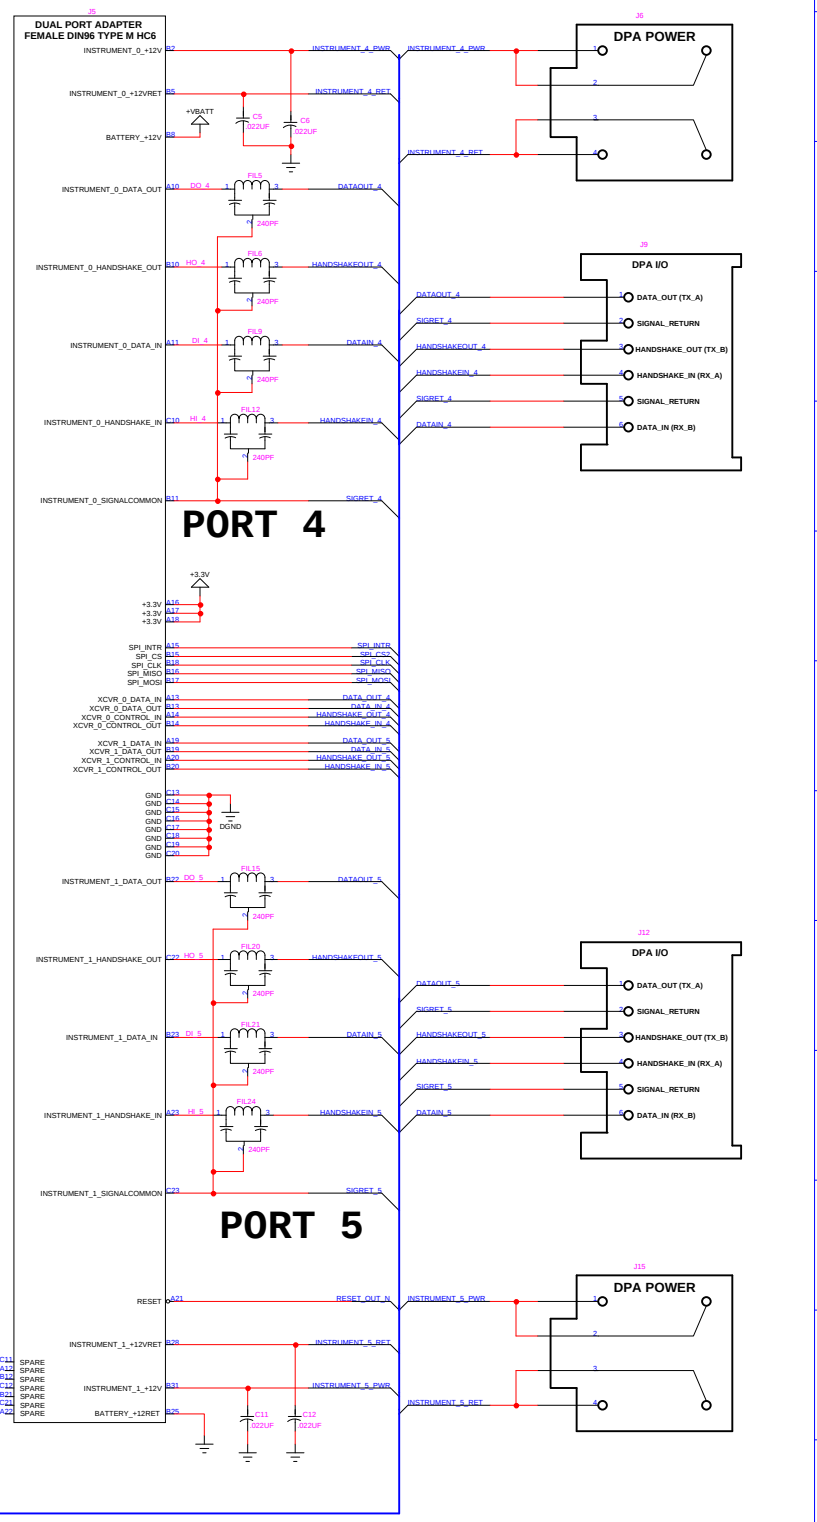
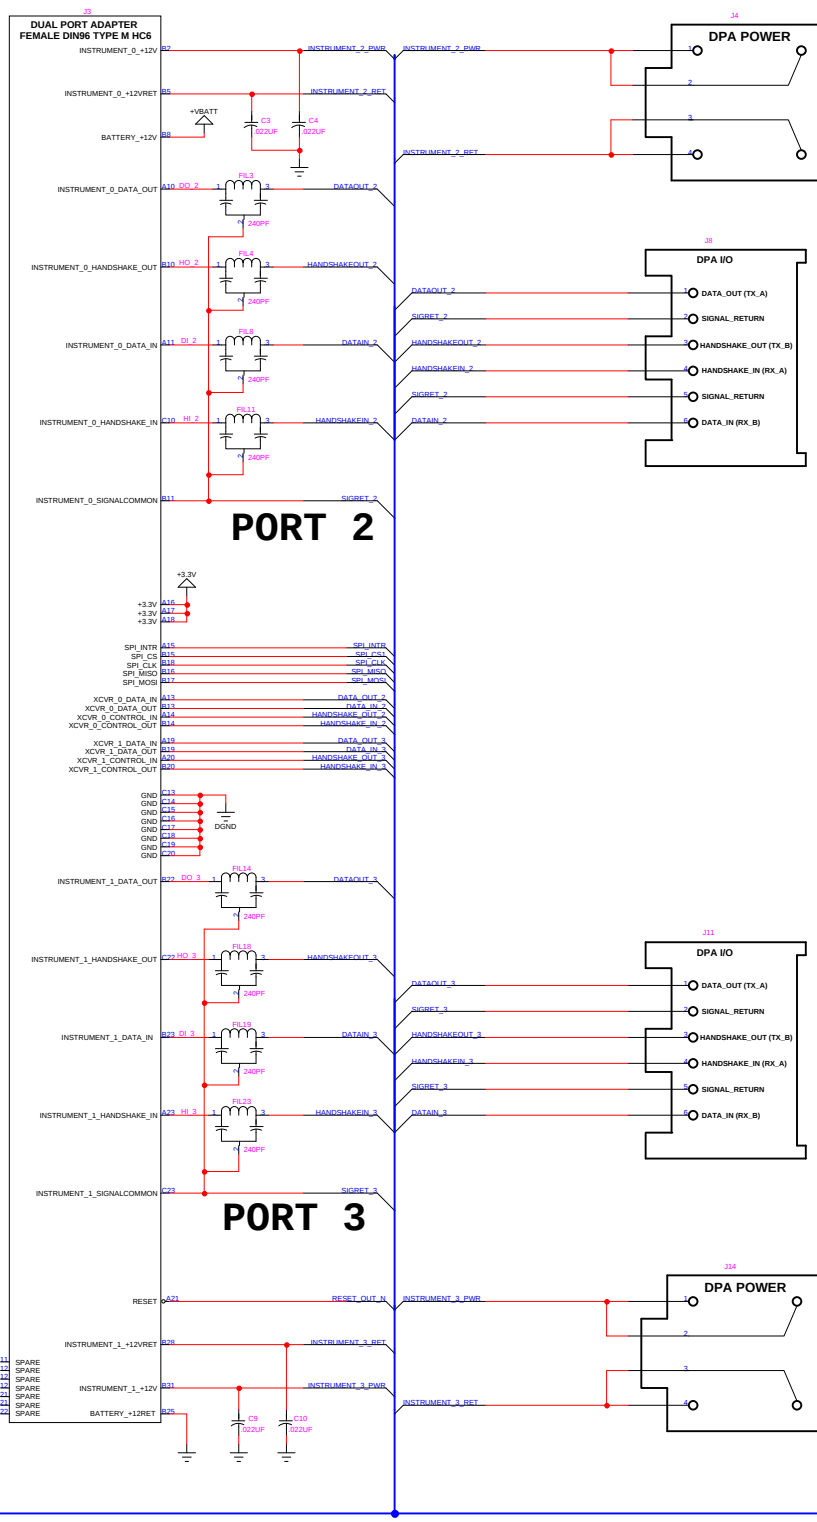
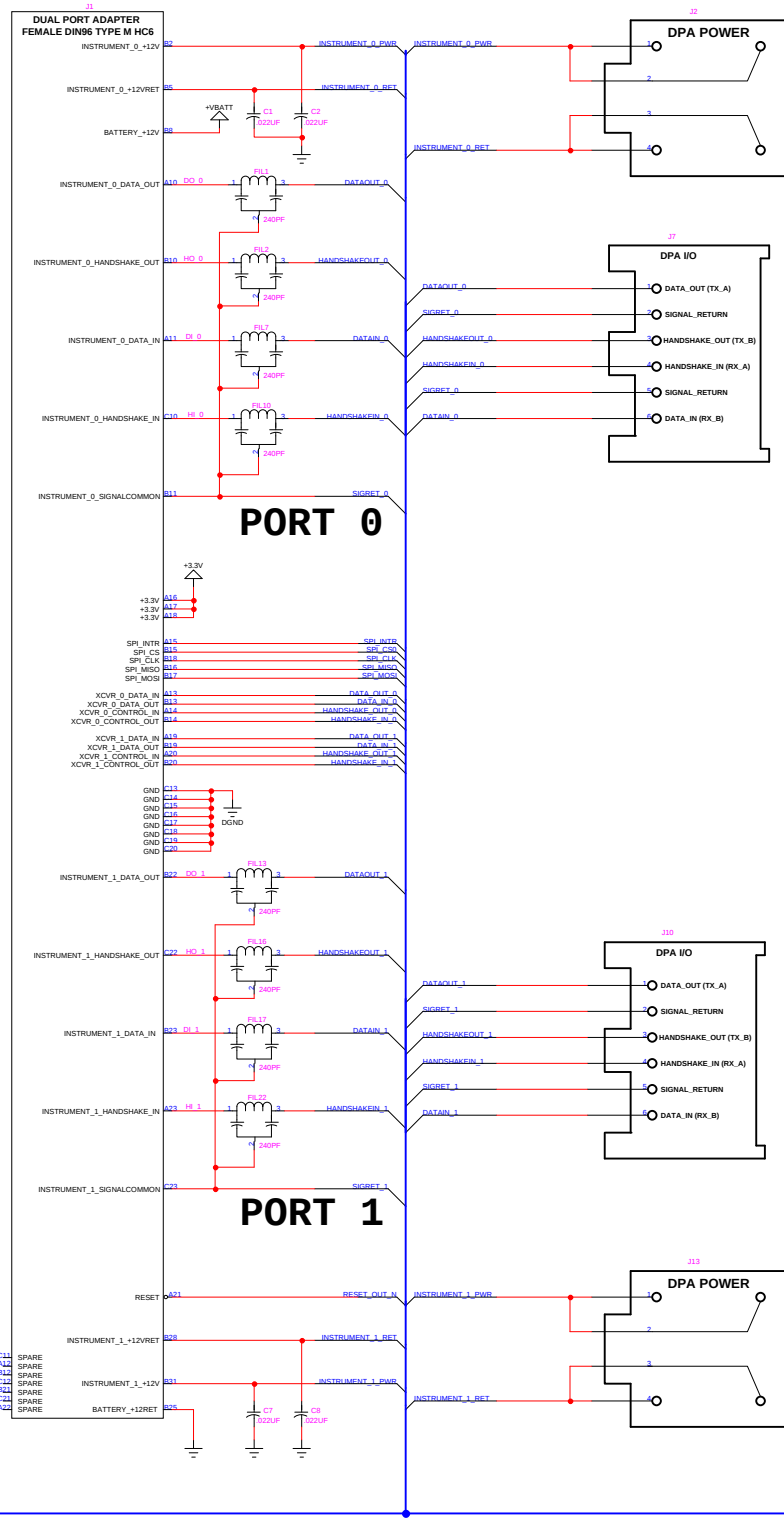
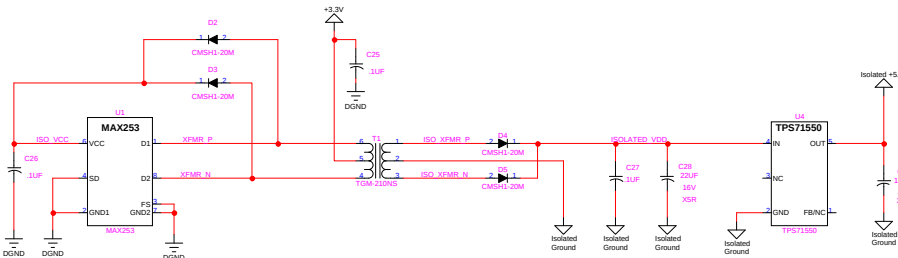
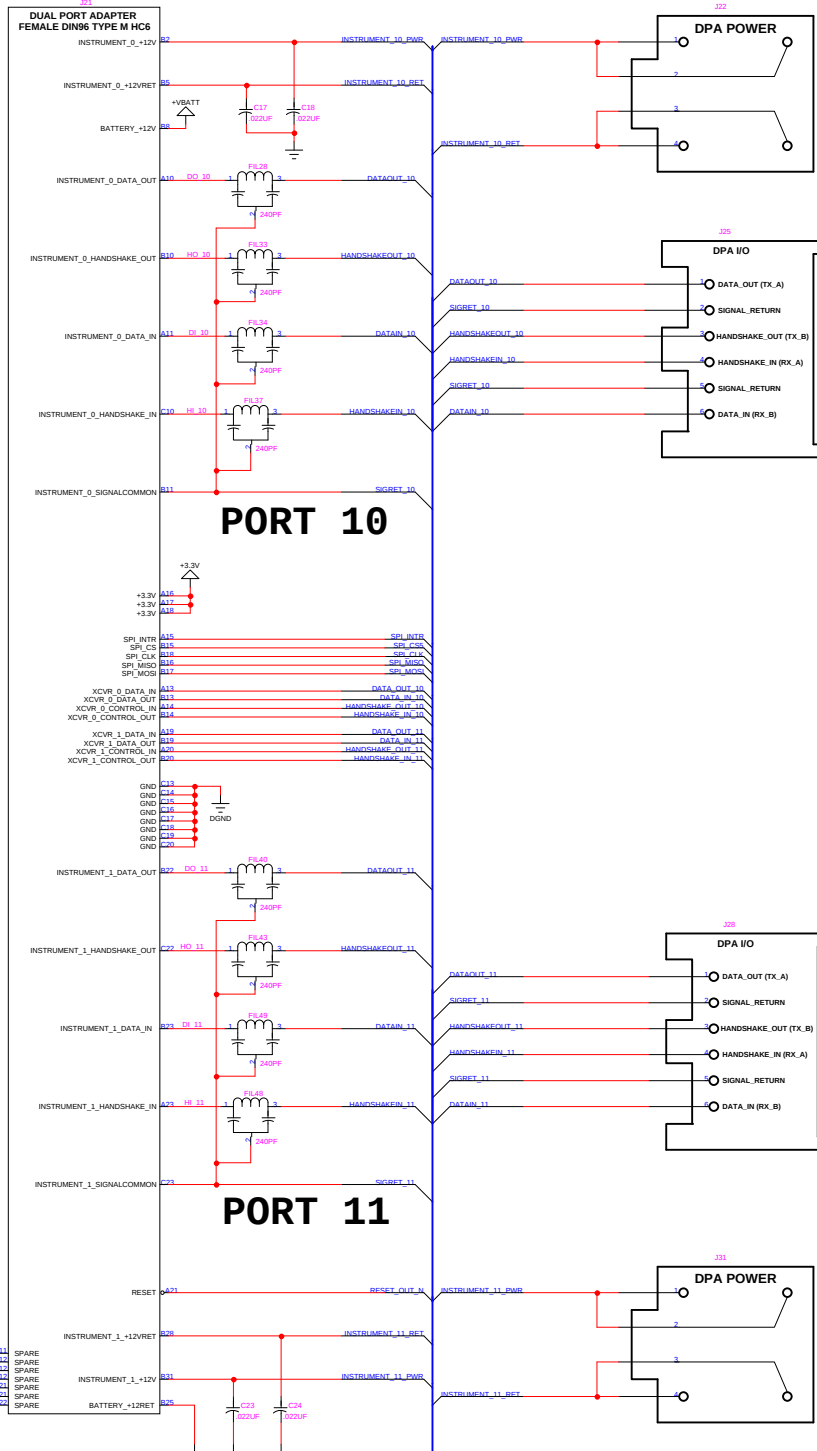


DPA PORTS 0 TO 5

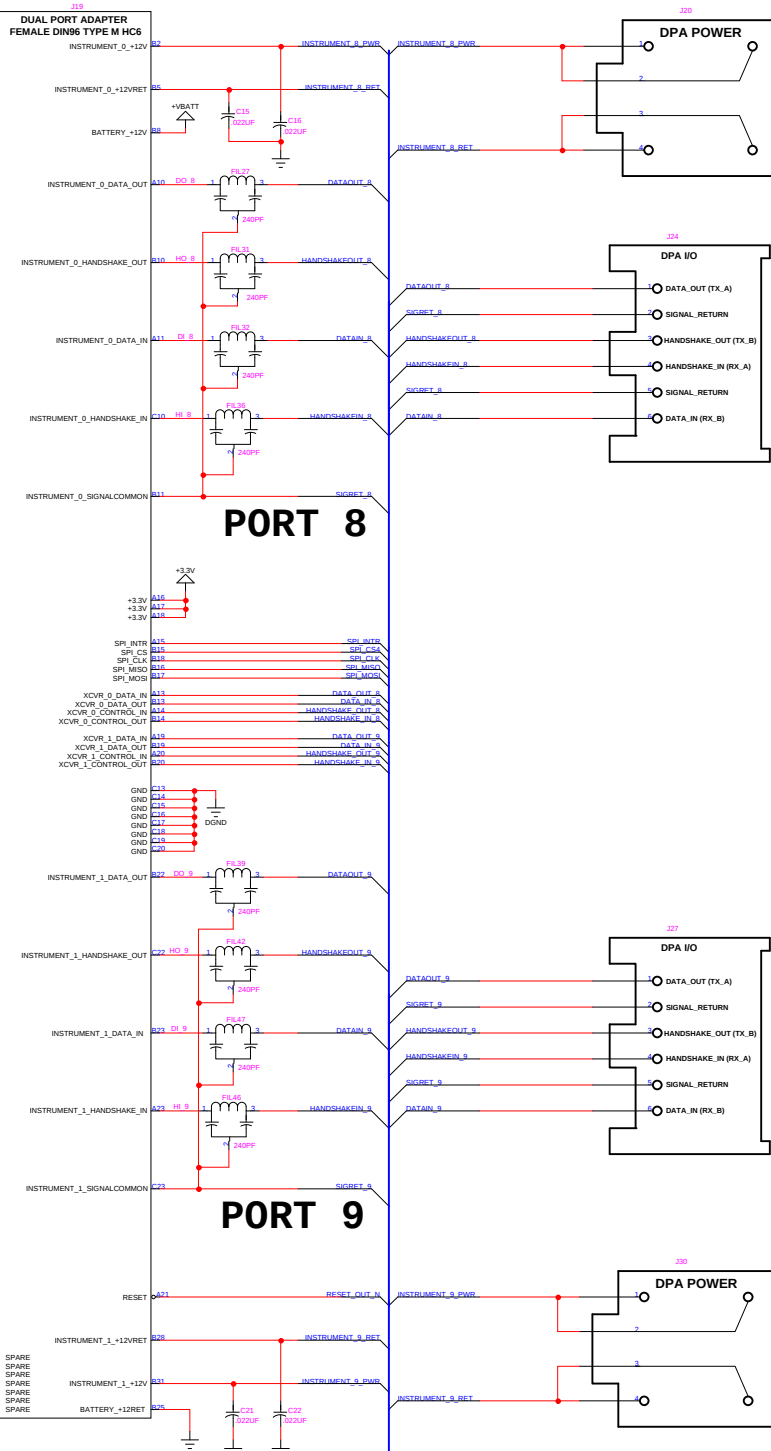



File:moos_backplane_2P1.cct
Last Mod: 9/28/2004
Page: 1 OF 4
Copyright ©2003, MBARI
Revision: 2.1

DPA PORTS 6 TO 11

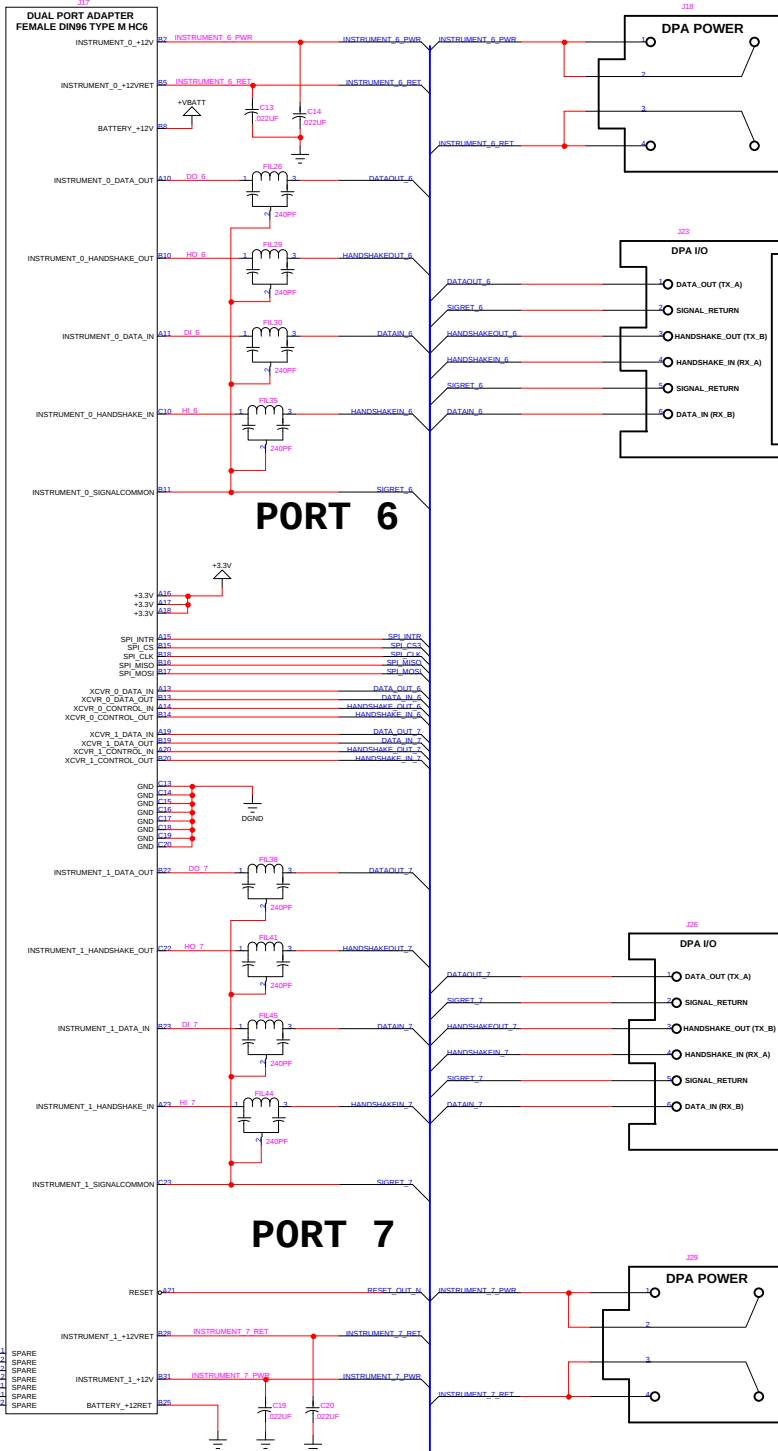

SIDEARM, RF MODEM, COMM CONTROLLER

Install FB1 for controller.
Do not install FB1 for use in
power can.

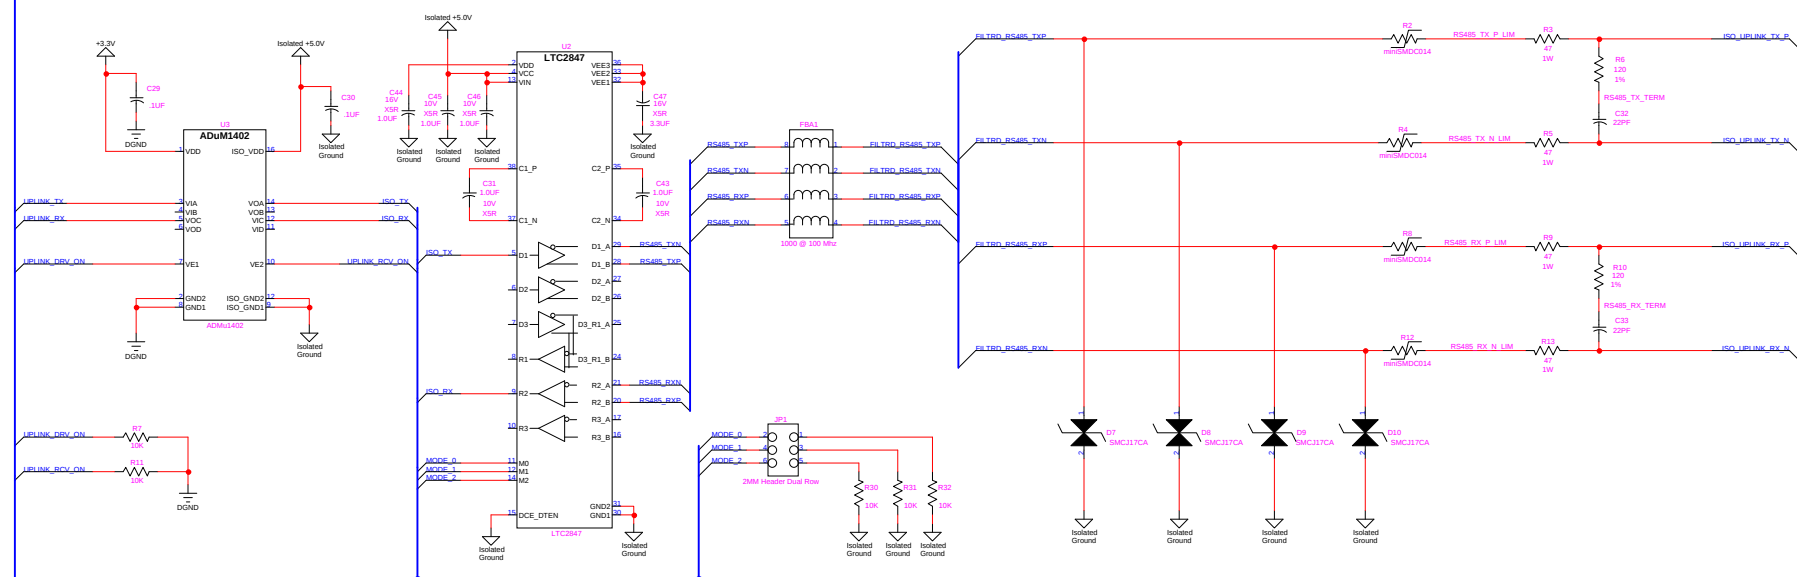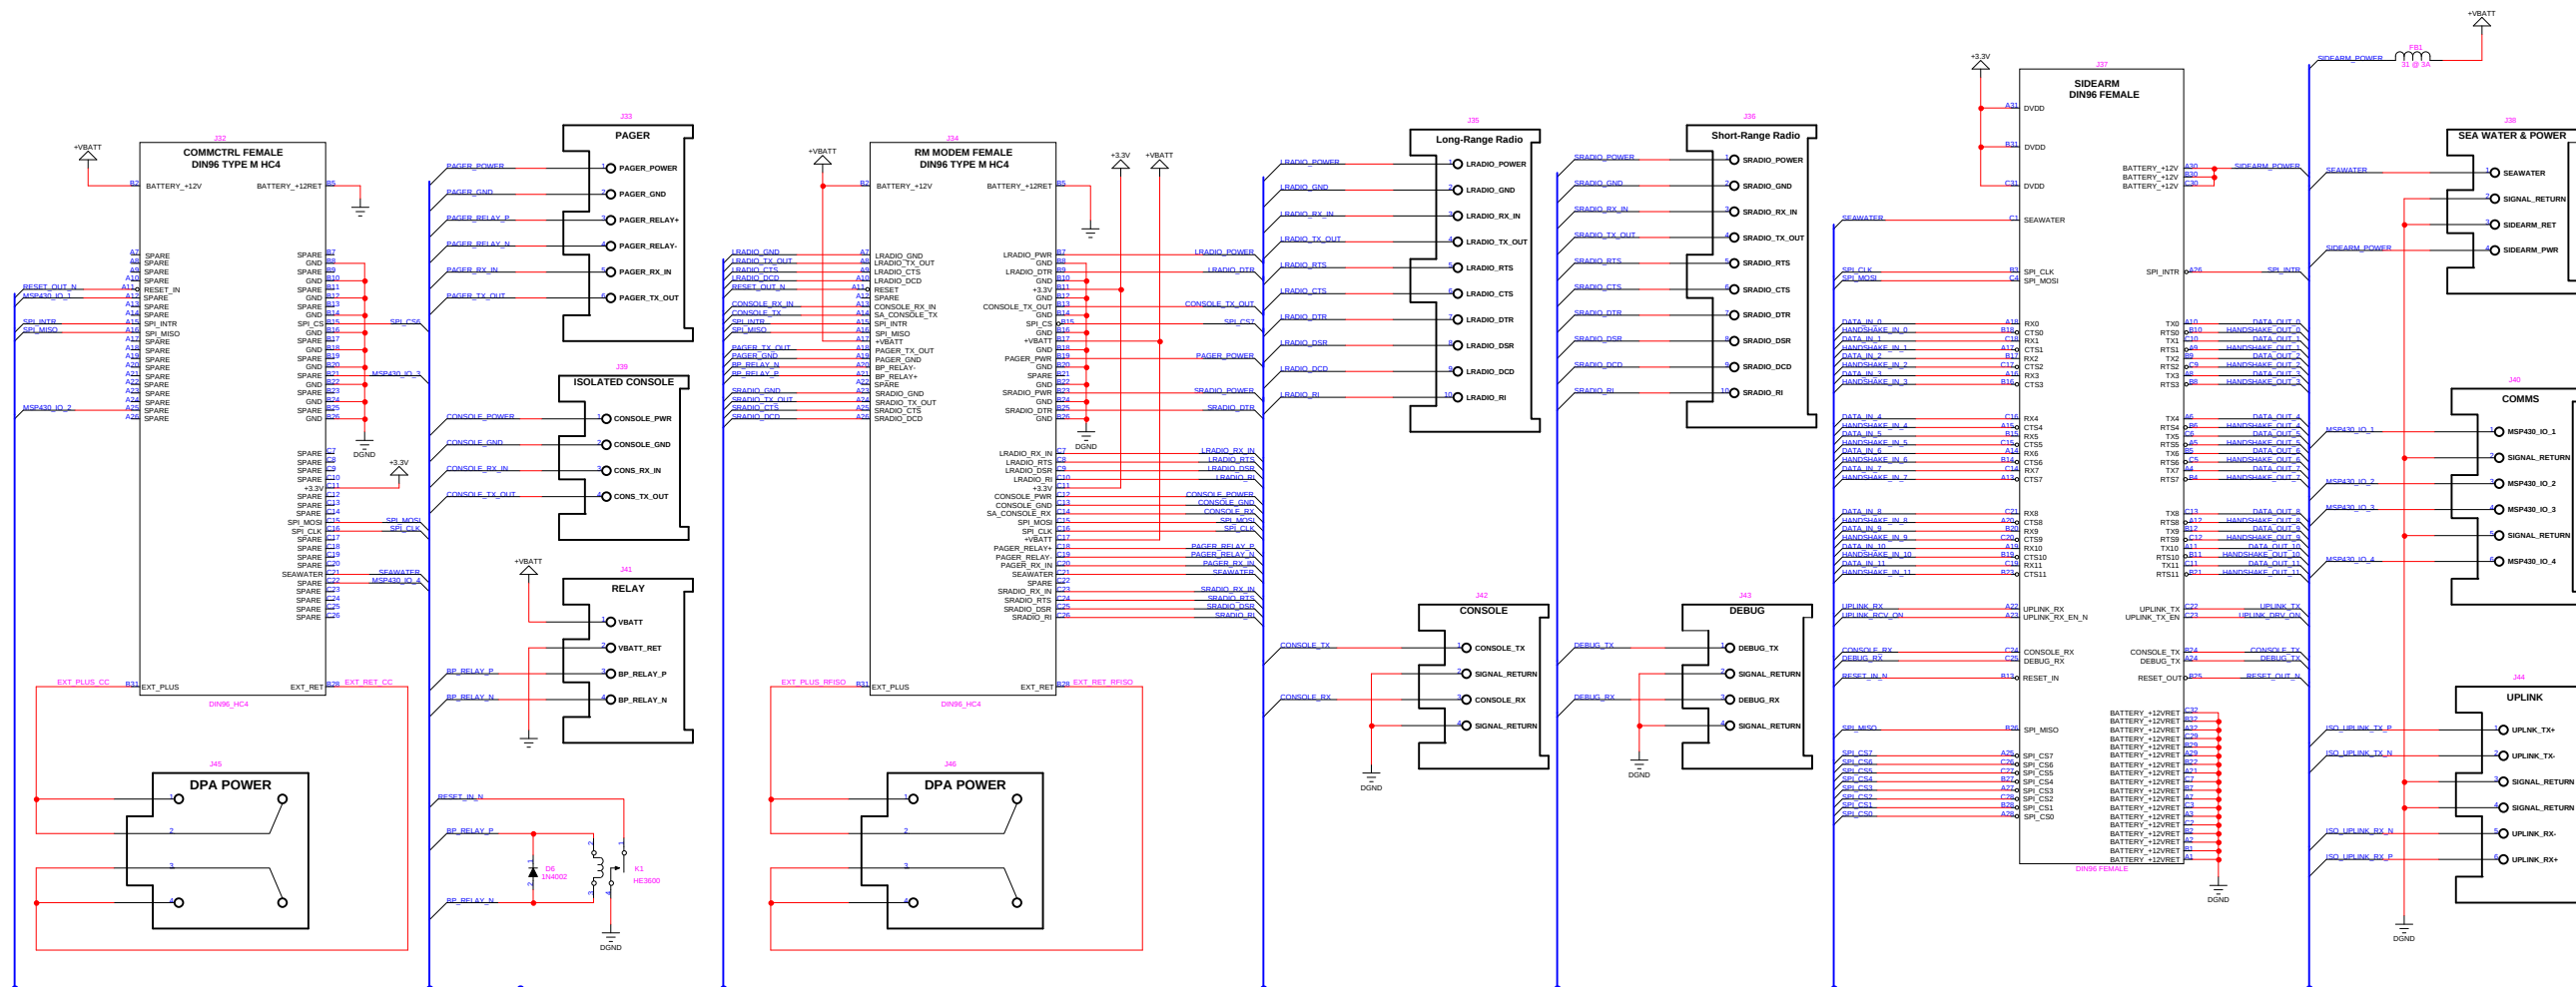

BACKPLANE TERMINATIONS

