



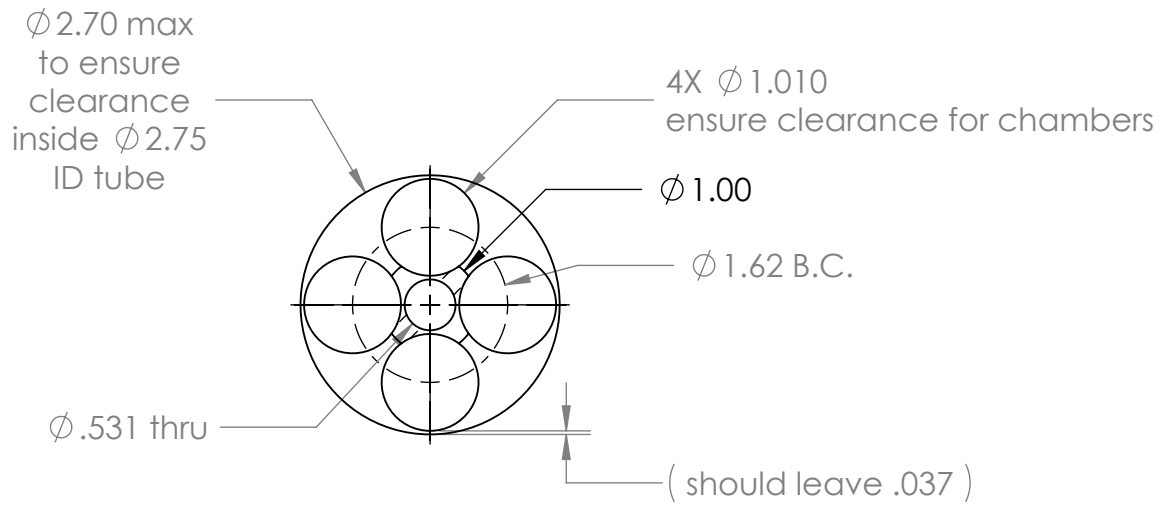


Neck ensures
proper spacing
so that pumps
and coild don't
damage fittings

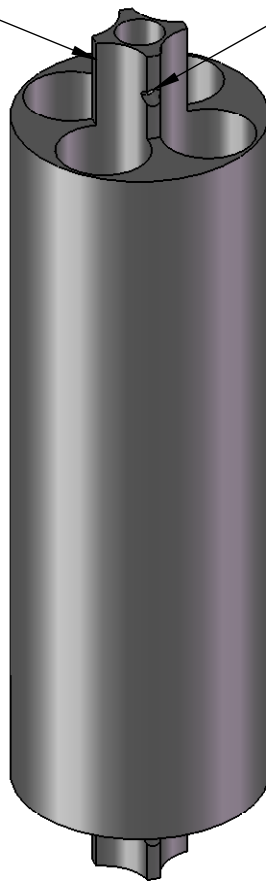




#8 setscrew
(both ends)

OR



Chambers can be
taped to this simpler
support.

$\sqcup$ $\phi .213 \nabla .30$
 ∇ $\phi .250$
 tap 1/4-28 UNF-2B $\nabla .25$
 bottom flat to .002
 $\phi .070$ thru

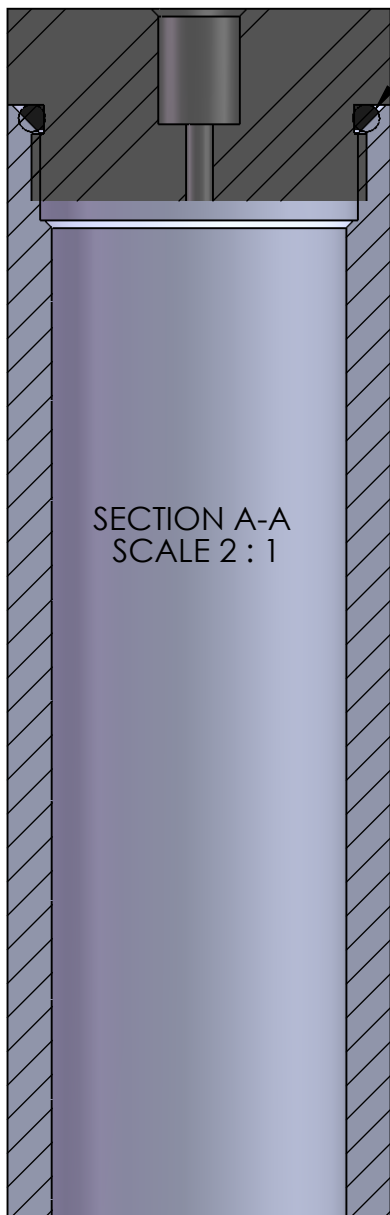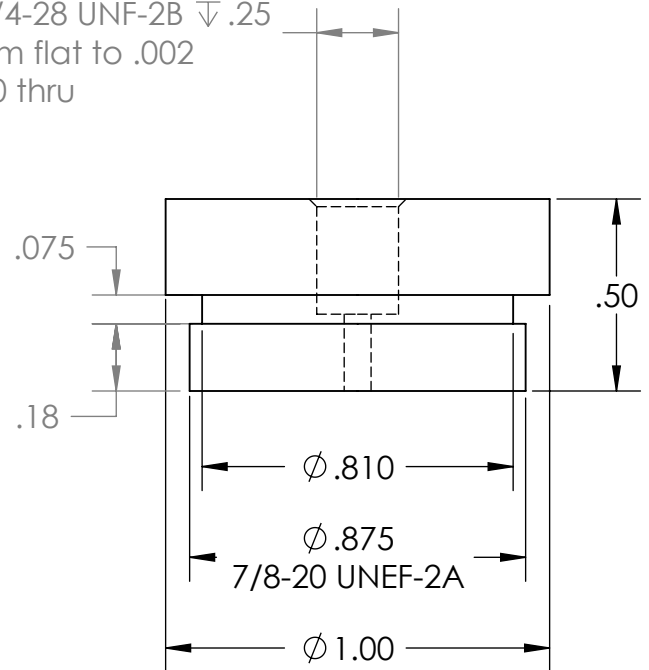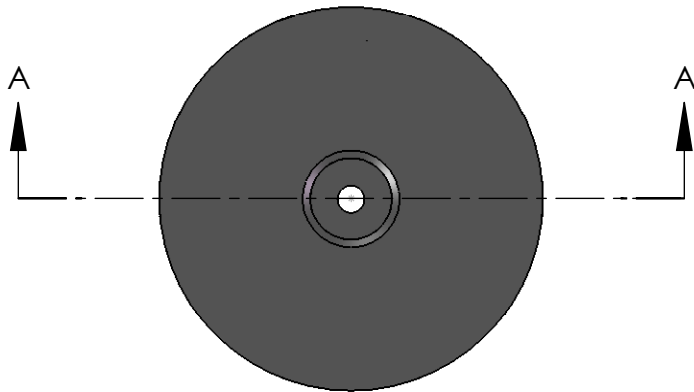

-019 O-ring

