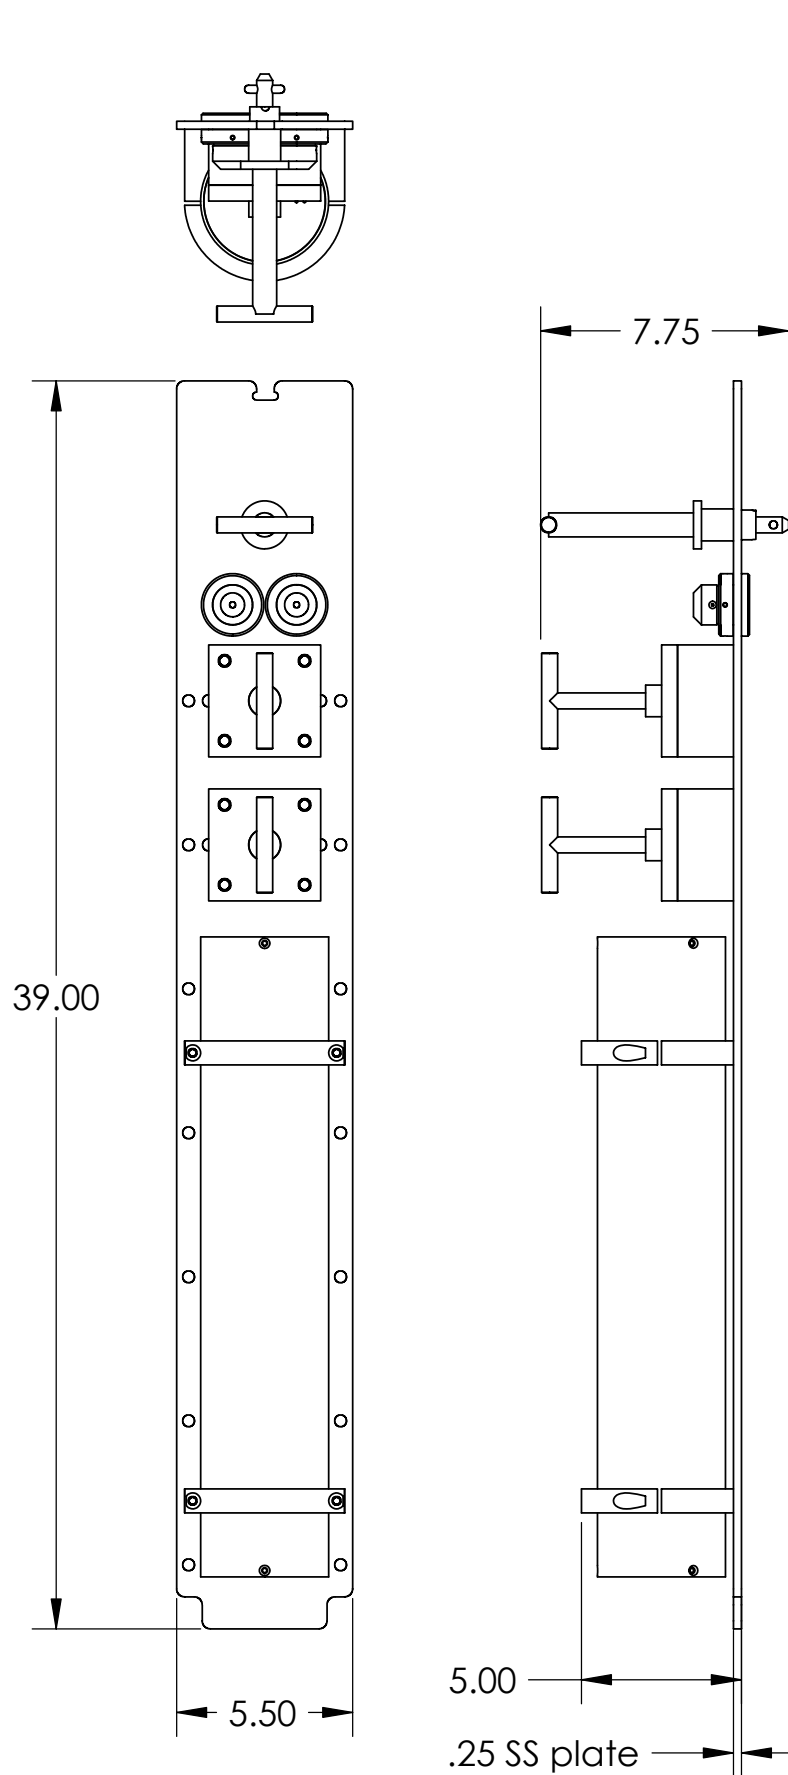


Seafloor OsmoSamplers
 Juan de Fuca Boreholes
 July/Aug 2004 deployment

Hans Jannasch
 MBARI; 8/11/04

Dimensions in inches

Main T-handle turns 360°
 Vertical = to install/remove
 Horizontal = locked.

Valve T-handles turn 90°
 Vertical (CCW) = open
 Horizontal (CW) = closed

Close valves (90° CW) before
 recovering.