


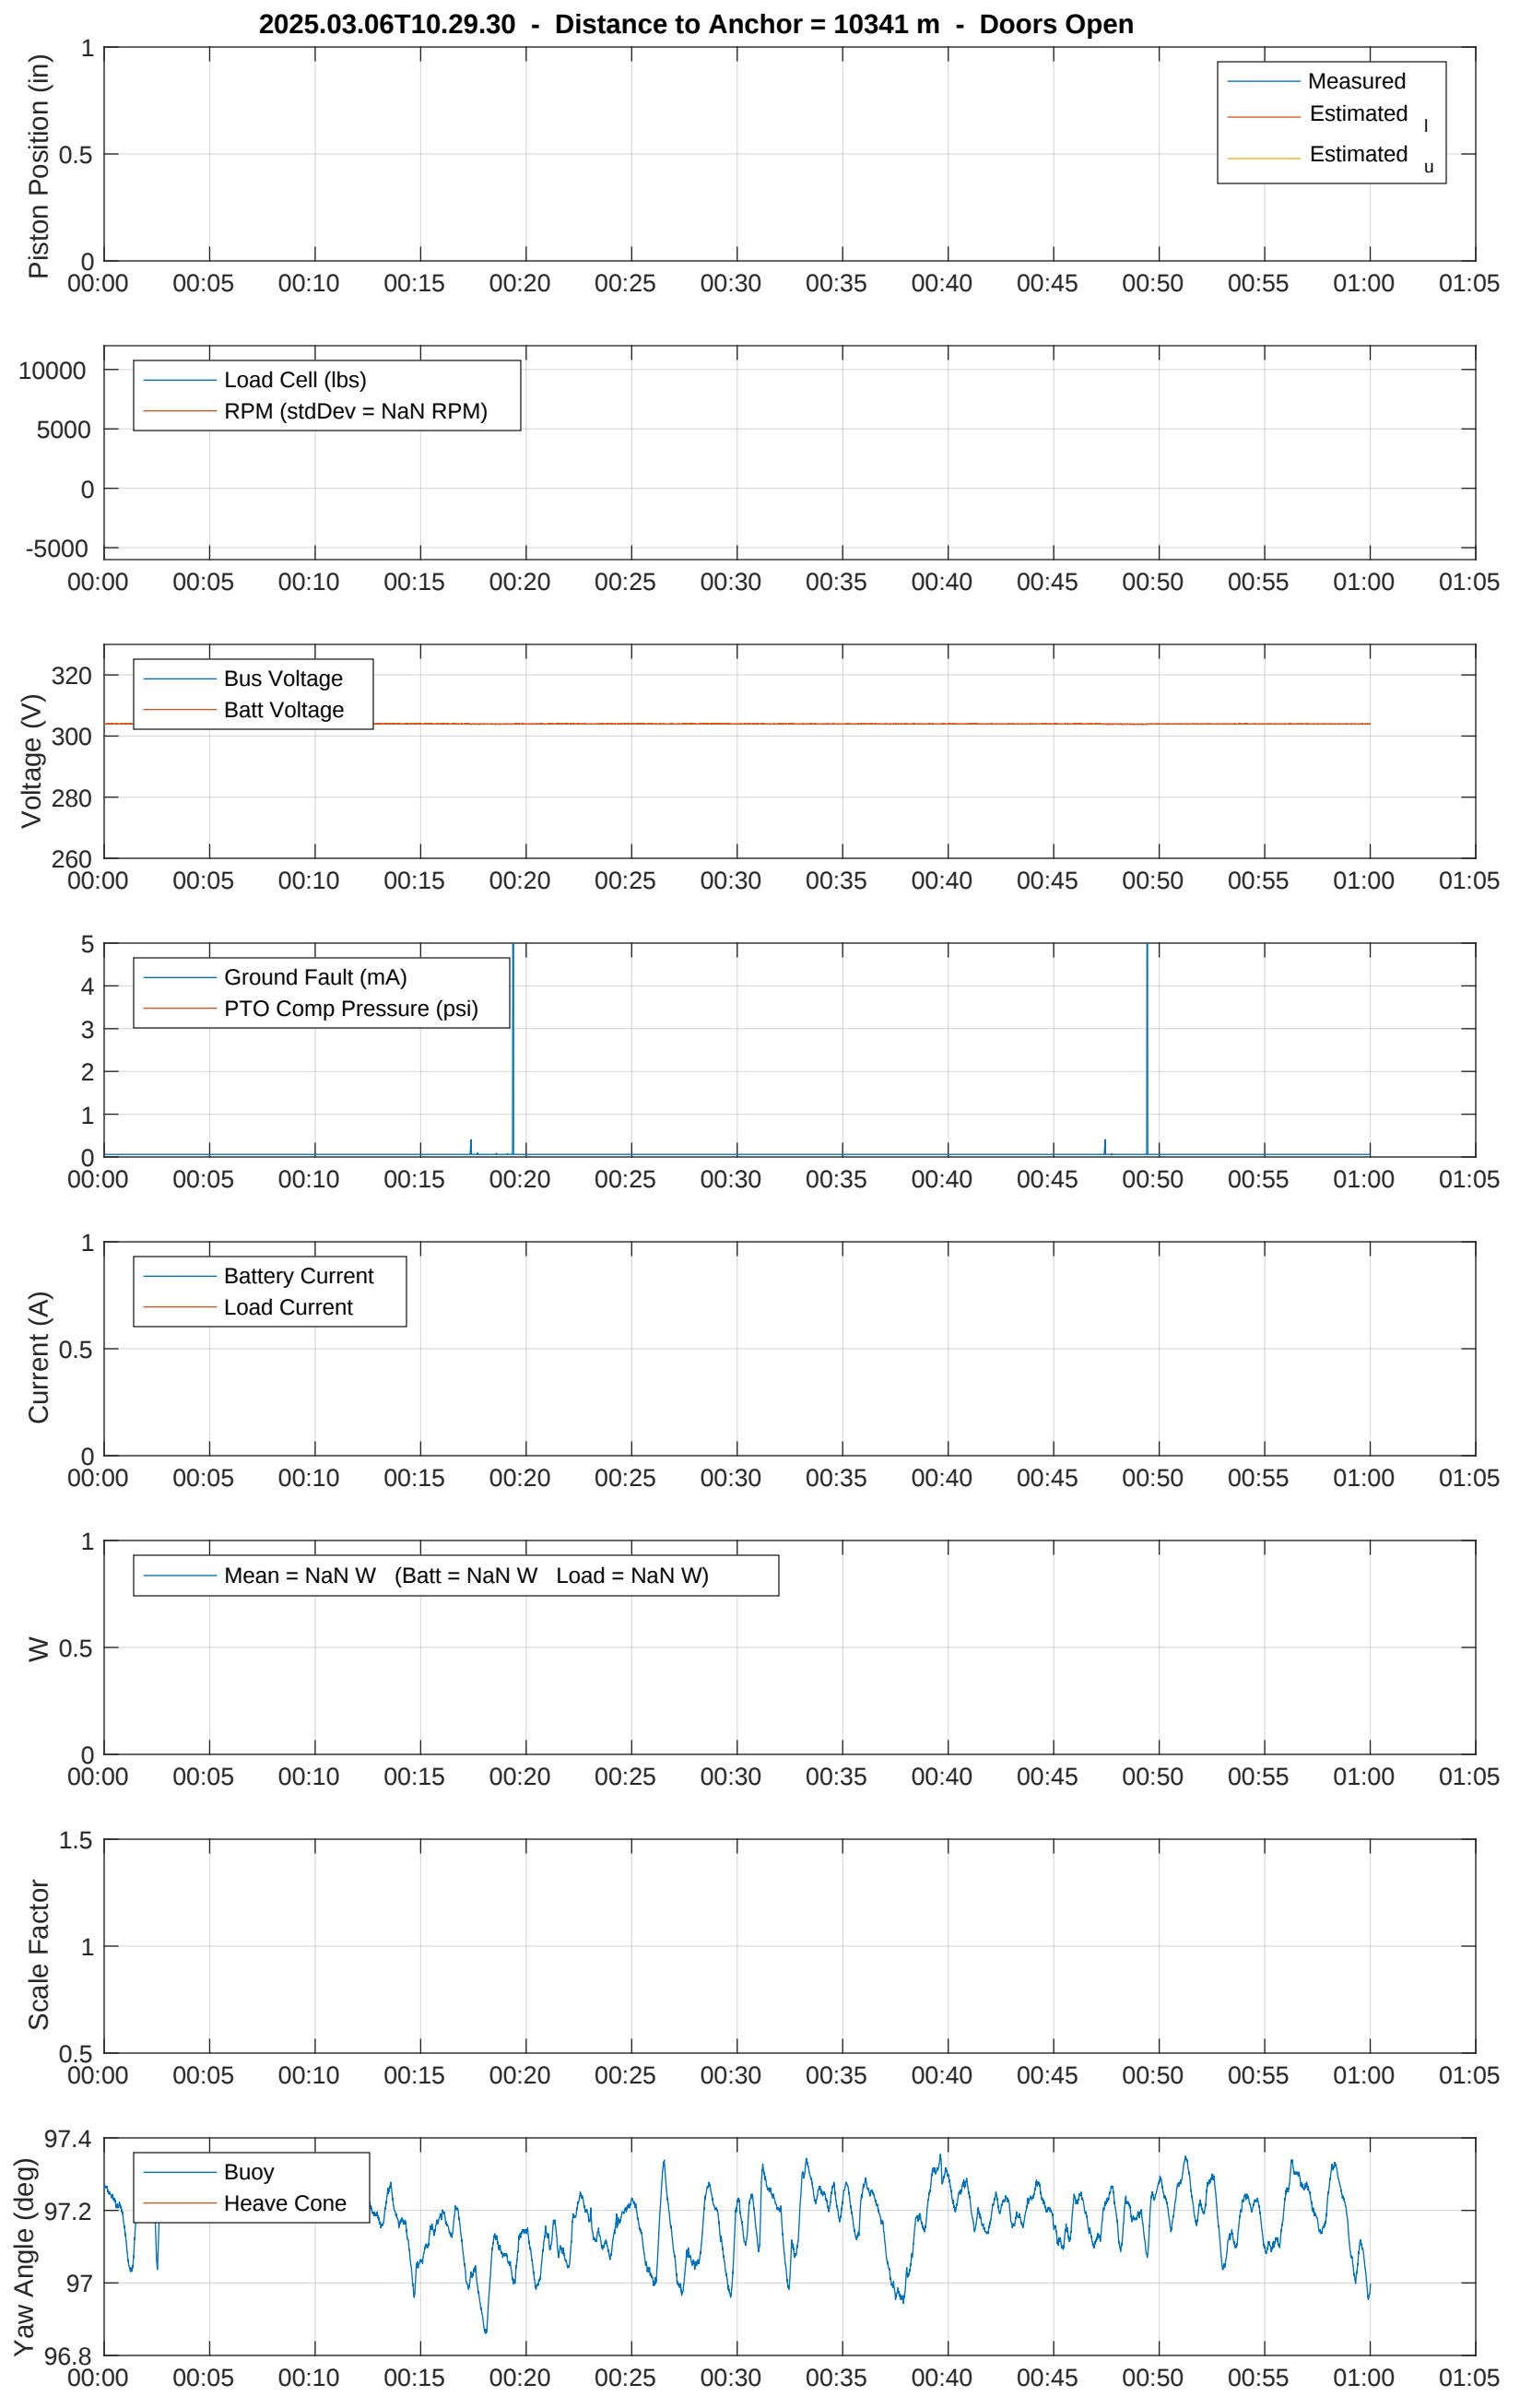

320

300

280

260

00:00

00:05

00:10

00:15

00:20

00:25

00:30

00:35

00:40

00:45

00:50

00:55

01:00

01:05

Bus Voltage

Batt Voltage

5

4

3

2

1

0

00:00

00:05

00:10

00:15

00:20

00:25

00:30

00:35

00:40

00:45

00:50

00:55

01:00

01:05

Ground Fault (mA)

PTO Comp Pressure (psi)

1

0.5

0

00:00

00:05

00:10

00:15

00:20

00:25

00:30

00:35

00:40

00:45

00:50

00:55

01:00

01:05

Battery Current

Load Current

1

0.5

0

00:00

00:05

00:10

00:15

00:20

00:25

00:30

00:35

00:40

00:45

00:50

00:55

01:00

01:05

Mean = NaN W (Batt = NaN W Load = NaN W)

1.5

1

0.5

00:00

00:05

00:10

00:15

00:20

00:25

00:30

00:35

00:40

00:45

00:50

00:55

01:00

01:05

Scale Factor

97.4

97.2

97

96.8

00:00

00:05

00:10

00:15

00:20

00:25

00:30

00:35

00:40

00:45

00:50

00:55

01:00

01:05

Buoy

Heave Cone