


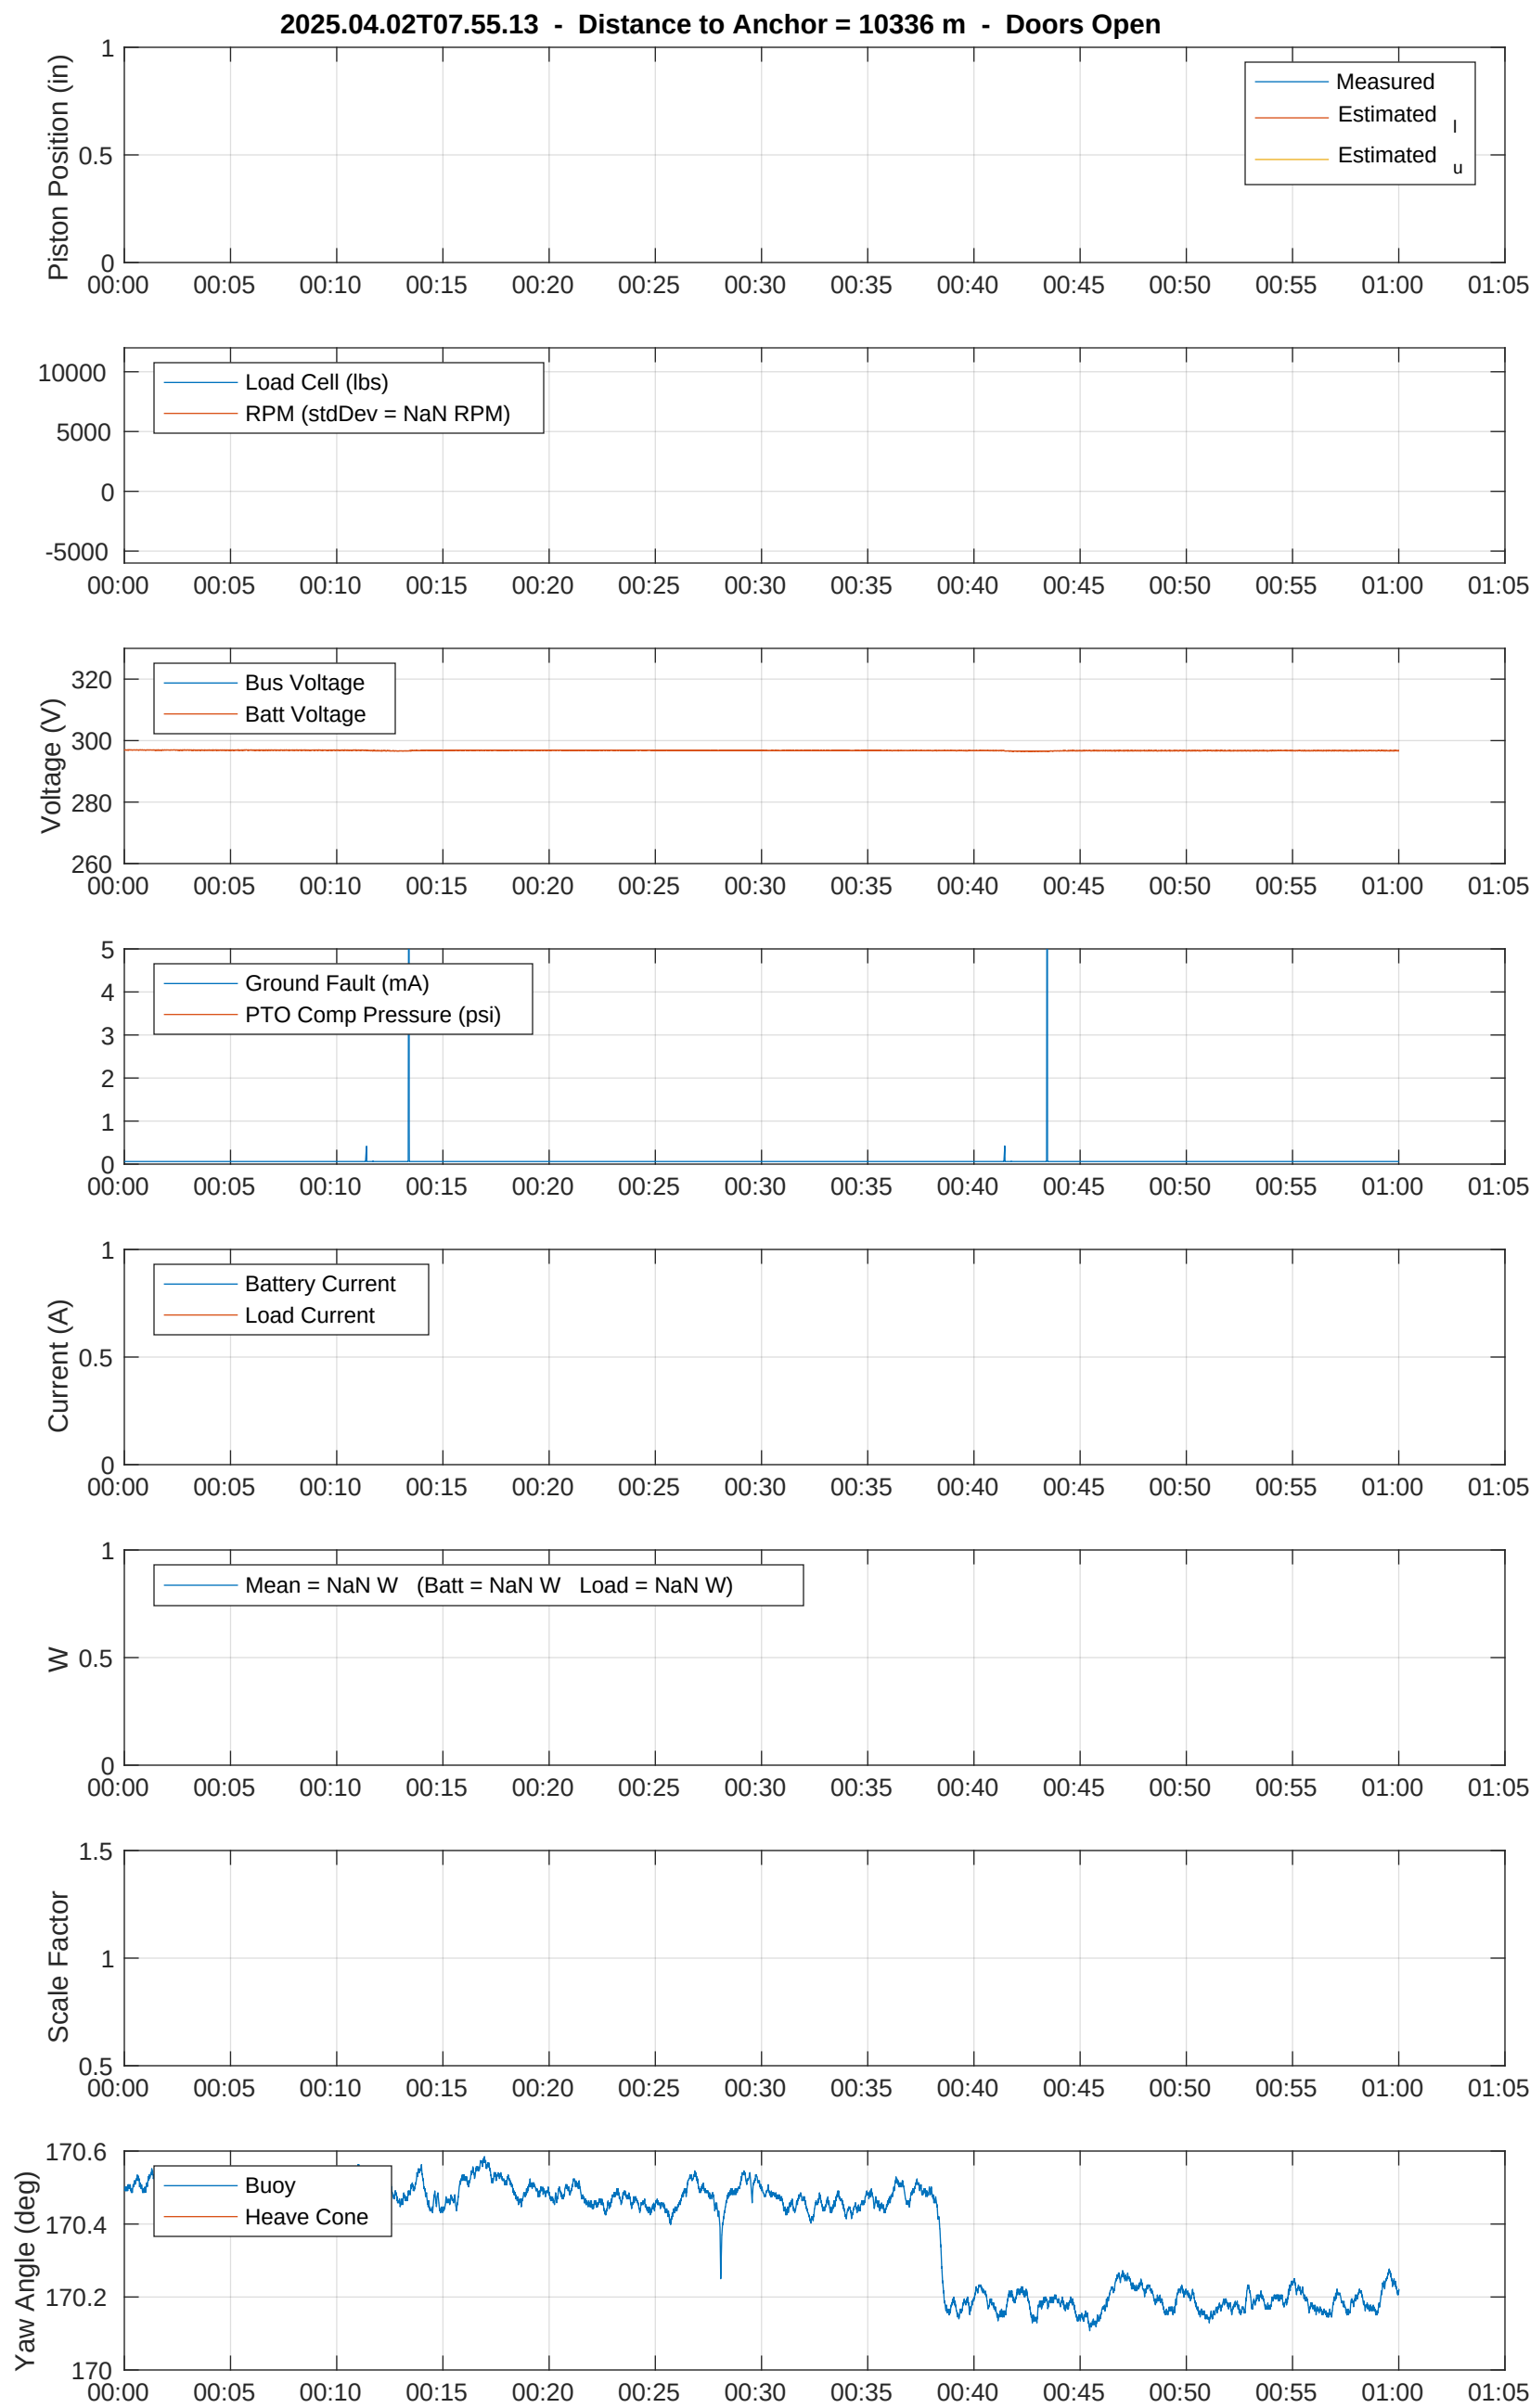

320

300

280

260

Bus Voltage

Batt Voltage

00:00

00:05

00:10

00:15

00:20

00:25

00:30

00:35

00:40

00:45

00:50

00:55

01:00

01:05

5

4

3

2

1

0

Ground Fault (mA)

PTO Comp Pressure (psi)

00:00

00:05

00:10

00:15

00:20

00:25

00:30

00:35

00:40

00:45

00:50

00:55

01:00

01:05

1

0.5

0

Battery Current

Load Current

00:00

00:05

00:10

00:15

00:20

00:25

00:30

00:35

00:40

00:45

00:50

00:55

01:00

01:05

1

0.5

0

Mean = NaN W (Batt = NaN W Load = NaN W)

00:00

00:05

00:10

00:15

00:20

00:25

00:30

00:35

00:40

00:45

00:50

00:55

01:00

01:05

1.5

1

0.5

Scale Factor

00:00

00:05

00:10

00:15

00:20

00:25

00:30

00:35

00:40

00:45

00:50

00:55

01:00

01:05

170.6

170.4

170.2

170

Buoy

Heave Cone

00:00

00:05

00:10

00:15

00:20

00:25

00:30

00:35

00:40

00:45

00:50

00:55

01:00

01:05