


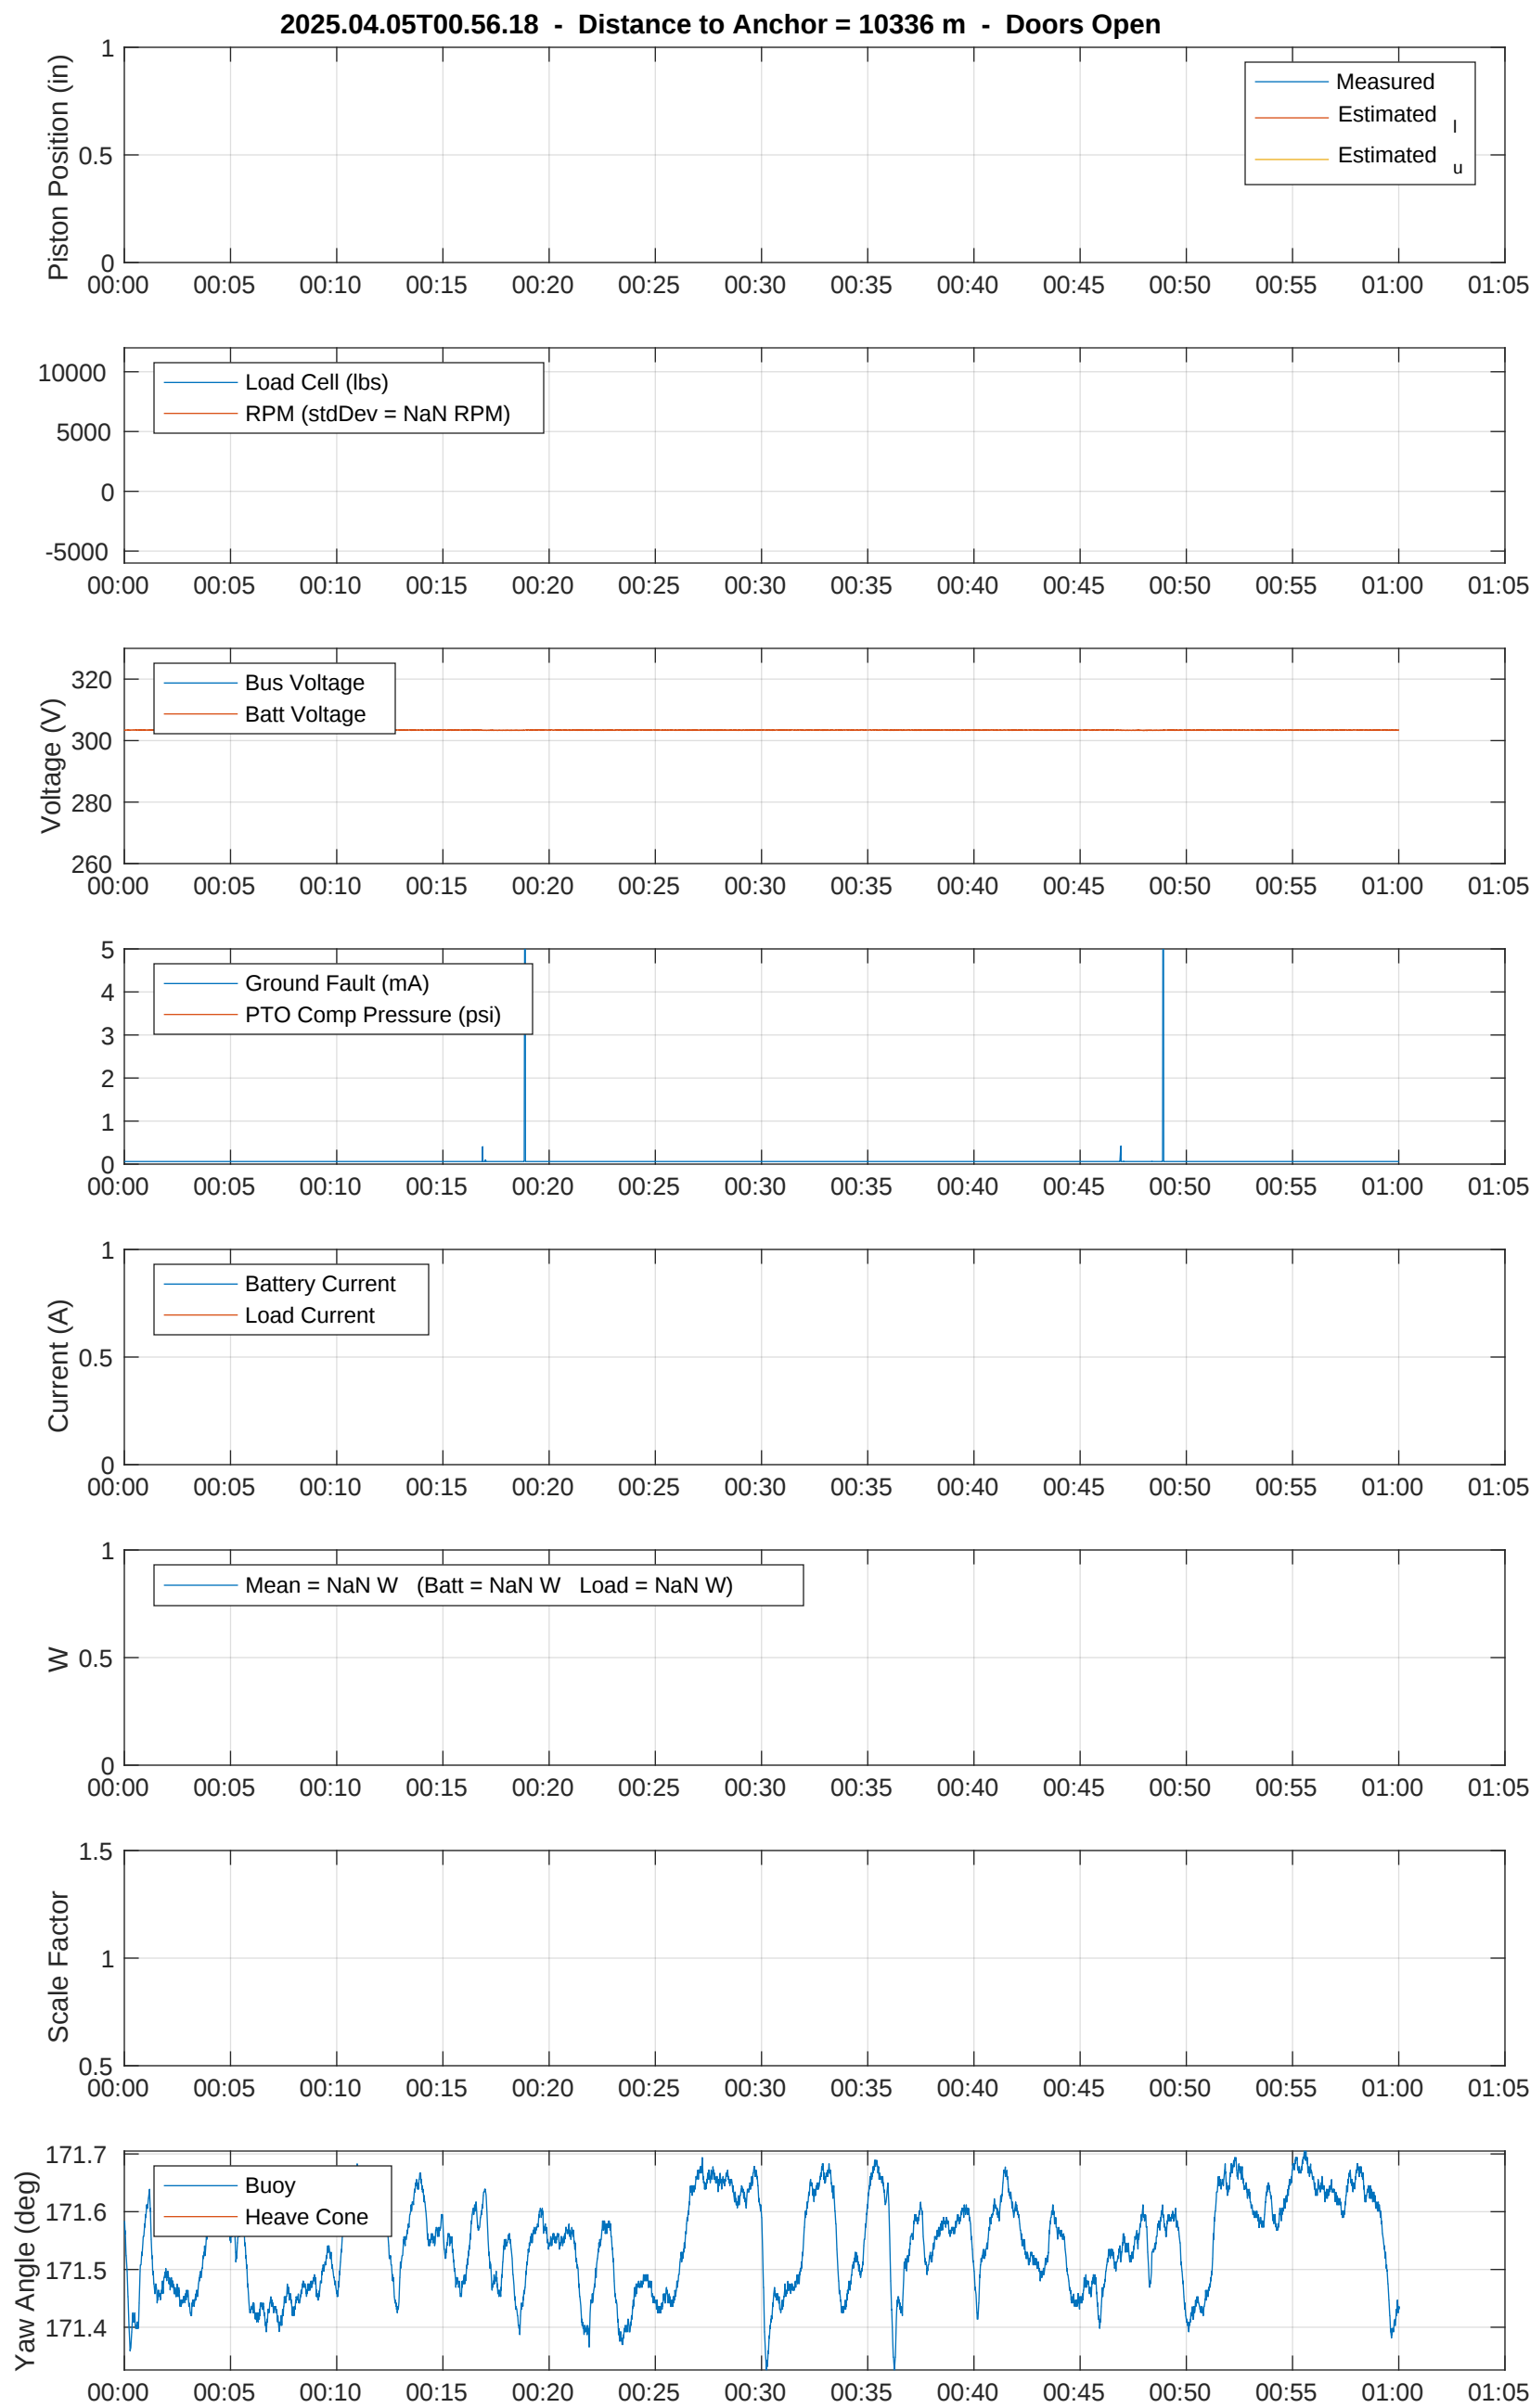

Bus Voltage

Batt Voltage

320

300

280

260

00:00

00:05

00:10

00:15

00:20

00:25

00:30

00:35

00:40

00:45

00:50

00:55

01:00

01:05

Ground Fault (mA)

PTO Comp Pressure (psi)

5

4

3

2

1

0

00:00

00:05

00:10

00:15

00:20

00:25

00:30

00:35

00:40

00:45

00:50

00:55

01:00

01:05

Battery Current

Load Current

1

0.5

0

00:00

00:05

00:10

00:15

00:20

00:25

00:30

00:35

00:40

00:45

00:50

00:55

01:00

01:05

Mean = NaN W (Batt = NaN W Load = NaN W)

1

0.5

0

00:00

00:05

00:10

00:15

00:20

00:25

00:30

00:35

00:40

00:45

00:50

00:55

01:00

01:05

Scale Factor

1.5

1

0.5

00:00

00:05

00:10

00:15

00:20

00:25

00:30

00:35

00:40

00:45

00:50

00:55

01:00

01:05

Yaw Angle (deg)

171.7

171.6

171.5

171.4

00:00

00:05

00:10

00:15

00:20

00:25

00:30

00:35

00:40

00:45

00:50

00:55

01:00

01:05

Buoy

Heave Cone